

# NOKIA 6560




## User Guide



**NOKIA**  
CONNECTING PEOPLE

# Nokia 6560 phone at a glance

See "Learn the keys" on page 18.

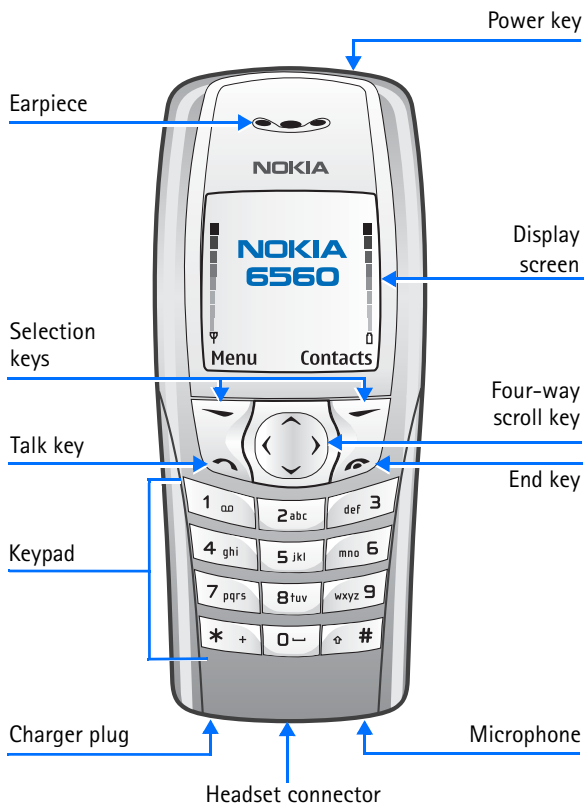

The wireless phone described in this guide is approved for use in TDMA and AMPS networks.

## LEGAL INFORMATION

Part No. 9355907, Issue No. 1

Copyright ©2003 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Nokia 6560, Triple Pop, Bounce, Backgammon, Chess Puzzle and the Nokia Original Enhancements logos are trademarks or registered trademarks of Nokia Corporation. Other company and product names mentioned herein may be trademarks or trade names of their respective owners.

Printed in Canada 09/2003

US Patent Nos 5818437; 5953541; 6011554 and other pending patents associated with this product's hardware and software T9 text input software Copyright ©1999-2002. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

The information in this user guide was written for the Nokia 6560 product. Nokia operates a policy of ongoing development. Nokia reserves the right to make changes to any of the products described in this document without prior notice.

UNDER NO CIRCUMSTANCES SHALL NOKIA BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, AND CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED. THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY AND RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

## EXPORT CONTROLS

This device contains commodities, technology, or software exported from the United States in accordance with the Export Administration regulations. Diversion contrary to U.S. or Canadian law is prohibited.

## FCC/INDUSTRY CANADA NOTICE

Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

# Contents

<b>1</b>	<b>For your safety</b> .....	<b>1</b>
	About your device .....	2
	Network Services .....	2
	Shared Memory .....	3
	Patent numbers .....	3
<b>2</b>	<b>Welcome</b> .....	<b>4</b>
	Get the most out of this guide .....	4
	Quick guide to functions .....	5
	Menu .....	6
	Contacts (Phone book) .....	6
	Contact Nokia .....	7
	Contact your service provider .....	8
<b>3</b>	<b>Review the basics</b> .....	<b>9</b>
	The antenna .....	9
	The battery .....	9
	Important battery information .....	11
	Xpress-on™ covers .....	12
	Remove the back cover .....	12
	Remove the front cover .....	12
	The keypad .....	13
	Replace the front cover .....	13
	Replace the back cover .....	13
	Switch on your phone .....	14
	The start screen .....	14
<b>4</b>	<b>Phone setup</b> .....	<b>16</b>
	Volume .....	16
	Headset .....	16
	Display contrast .....	17
	Equalizer .....	17
	Learn the keys .....	18

	Make and answer calls .....	18
	The speaker phone .....	19
	Phone symbols .....	19
	The selection keys .....	21
	In-phone help .....	21
	Phone menus .....	21
<b>5</b>	<b>Text entry .....</b>	<b>24</b>
	Entering letters and numbers .....	24
	ABC and 123 methods .....	25
	Predictive text .....	28
<b>6</b>	<b>The phone book .....</b>	<b>32</b>
	View contacts .....	32
	Save names and numbers .....	32
	Save a text entry with a name .....	33
	Retrieve information .....	33
	Menus .....	34
	Change contacts view .....	35
	Edit a name or number .....	35
	Erase stored names and numbers .....	35
	Delete the entire phone book .....	36
	Add a second number	
	to a name .....	36
	Create caller groups .....	38
	Check memory status .....	38
<b>7</b>	<b>Call history .....</b>	<b>39</b>
	Check missed, received, or dialed calls .....	39
	Clear call lists .....	40
	Call timers .....	41
	Turn on a current call timer .....	42
	Clear call timers .....	42

<b>8</b>	<b>Advanced calling features</b>	<b>43</b>
	Set in-call options	43
	Call waiting	44
	Make a conference call	44
	Call forwarding	45
	Automatic redial	47
	Calling card	47
	Voice tags	48
	Voice recorder	50
	Voice commands	52
	Caller ID	53
	Select a phone number	54
	Set touch tones	55
<b>9</b>	<b>Voice mail</b>	<b>57</b>
	Check messages	57
	Set up mailbox	57
	Set greetings	57
	Listen to messages	58
<b>10</b>	<b>Personalize rings and tones</b>	<b>59</b>
	Profiles	59
	Select a different profile	59
	Customize a profile	60
	Set a timed profile	63
<b>11</b>	<b>Personalize phone settings</b>	<b>64</b>
	Set the language	64
	Set and display the clock	64
	Network updated clock	66
	Welcome note	66
	Start-up tone	66
	1-touch dialing	67
	Right selection key settings	68
	Display settings	69

Tone settings .....	70
Enhancement settings .....	70
Restore the factory settings .....	71
Accessibility solutions .....	71
<b>12 Phone security .....</b>	<b>74</b>
Keyguard (Lock keypad) .....	74
Change your security code .....	75
Phone lock .....	76
Restrict calls .....	78
<b>13 Personal digital assistant .....</b>	<b>81</b>
Calendar .....	81
To-do list .....	82
The calculator .....	83
Convert currency .....	84
Business cards .....	85
Stopwatch .....	85
<b>14 Prepaid services .....</b>	<b>88</b>
Manage prepaid service .....	88
Save your access numbers .....	88
Add money to your account .....	89
Check your prepaid balance .....	89
<b>15 Network services .....</b>	<b>90</b>
Search for a network .....	90
Roaming .....	91
<b>16 Text messages .....</b>	<b>92</b>
Folders .....	92
Write and send a message .....	93
Options .....	93
Resend a message .....	94
Receive a message .....	94
Read a message .....	95

Save a message . . . . .	.95
Customize settings . . . . .	.96
Memory full . . . . .	.96
Delete messages . . . . .	.96
Reply to a message . . . . .	.97
Forward a message . . . . .	.97
E-mail messages . . . . .	.97
Templates . . . . .	.99
Picture messages . . . . .	100
Chat . . . . .	101
<b>17 Special features . . . . .</b>	<b>103</b>
Gallery . . . . .	103
Applications . . . . .	104
Ringing tones . . . . .	106
Alarm clock . . . . .	107
<b>18 Connectivity . . . . .</b>	<b>109</b>
Infrared . . . . .	109
<b>19 Internet service . . . . .</b>	<b>111</b>
Set up for browsing . . . . .	112
Sign on to the Internet . . . . .	112
Browsing methods . . . . .	112
Browser options (Services Menu) . . . . .	112
Edit a data entry field . . . . .	114
Bookmarks . . . . .	114
Examples of wireless Internet sites . . . . .	115
<b>20 Games . . . . .</b>	<b>116</b>
<b>21 Enhancements . . . . .</b>	<b>117</b>



<b>22</b>	<b>Reference Information</b> . . . . .	<b>118</b>
	Battery information . . . . .	118
	Care and Maintenance . . . . .	119
	Additional safety information . . . . .	120
	Battery . . . . .	125
	Technical Information . . . . .	126
<b>23</b>	<b>Nokia One-Year Limited Warranty</b> . . . . .	<b>127</b>
	<b>Appendix A</b> . . . . .	<b>133</b>
	<b>Appendix B</b> . . . . .	<b>137</b>
	<b>Index</b> . . . . .	<b>143</b>

# 1 For your safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.



## SWITCH ON SAFELY

Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



## ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



## INTERFERENCE

All wireless phones may be susceptible to interference, which could affect performance.



## SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the phone off near medical equipment.



## SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.



## SWITCH OFF WHEN REFUELING

Don't use the phone at a refueling point. Don't use near fuel or chemicals.



## SWITCH OFF NEAR BLASTING

Follow any restrictions. Don't use the phone where blasting is in progress.



## USE SENSIBLY

Use only in the normal position as explained in the product documentation. Don't touch the antenna unnecessarily.



## QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



## ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.



## WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.



## BACK-UP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.



## CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



## EMERGENCY CALLS

Ensure the phone is switched on and in service. Press the **End** key as many times as needed to clear the display and return to the start screen. Enter the emergency number, then press the **Talk** key. Give your location. Do not end the call until given permission to do so.

## • ABOUT YOUR DEVICE

The wireless device described in this guide is approved for use on the TDMA and AMPS networks. Contact your service provider for more information about networks. When using the features in this device, obey all laws and respect privacy and legitimate rights of others.



**Warning:** To use any features in this device, other than the alarm clock, the phone must be switched on. Do not switch the device on when wireless phone use may cause interference or danger.

## • NETWORK SERVICES

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These Network Services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize Network Services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use Network Services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Contact your service provider for more information.

- **SHARED MEMORY**

The following features in this device may share memory: Contacts, calendar, to-do list, gallery, games, and Java™ applications. Use of one or more of these features may reduce the memory available for the remaining features sharing memory. For example, saving many Java™ applications may use all of the available memory. Your phone may display a message that the memory is full when you try to use a shared memory feature. In this case, delete some of the information or entries stored in the shared memory features before continuing. Some of the features, such as contacts, calendar, and to-do list may have a certain amount of memory specially allotted to them in addition to the memory shared with other features.

- **PATENT NUMBERS**

Nokia products may be covered by the following U.S. Patents:


5241583	5479476	5692032	5794142
5835858	5842141	5845219	5870683
5892475	5920826	6026161	6043760
6049796	6094587	6115617	6151507
6185295	6188909	6292668	6347218
6487397	6594472		

## 2 Welcome

Congratulations on your purchase of the Nokia 6560 mobile phone.

Nokia recommends that you read this chapter before you use your new phone. You will find useful information about:

- How to use this guide
- How to understand Network Services
- How to contact Nokia

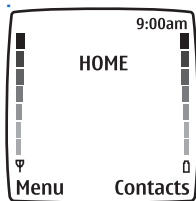

### • GET THE MOST OUT OF THIS GUIDE

The tips that follow can help you use this guide efficiently as you learn to use your phone.

#### Understand the terms

- **Press** means to briefly press then release a key. For example, **Press 0** means press the zero key.
- **Press Menu** means to press the key that is below the word **Menu** on the phone screen.
- **Press and hold** means to press and hold a key for 2–3 seconds (depending on the feature you are using), and release the key.
- Use the **Left selection** and **Right selection** keys to choose an option in a menu.
- **Highlighted** means that an option you see on the screen is enclosed in a dark bar. Choices you make with the two selection keys act on the highlighted option.

## • QUICK GUIDE TO FUNCTIONS

Make a call	Enter the phone number, press the <b>Talk</b> key.
Answer a call	Press the <b>Talk</b> key or <b>Answer</b> .
Answer with call waiting	Press the <b>Talk</b> key.
End a call	Press the <b>End</b> key.
Ignore a call	Press the <b>End</b> key or <b>Silence</b> .
Redial	Press the <b>Talk</b> key twice.
Adjust call volume	During a call, scroll right or left to adjust call volume.
Use the in-call menu	In a call, select <b>Options</b> .
Use 1-touch dialing	Press and hold one of keys 2–9.
Save a name and number	Enter a number, select <b>Options &gt; Save</b> , enter a name, and press <b>OK</b> .
Retrieve a name/number	Select <b>Contacts &gt; Find</b> .
Retrieve a name/number during a call	Select <b>Options &gt; Contacts &gt; Find</b> , and enter the first letter of the name.
Check voice mail	Press and hold <b>1</b> or call your voice mailbox number.
Send a text message	Press and hold the left arrow on the <b>Scroll</b> key. Write the message, select <b>Options &gt; Send</b> , enter the recipient's number, and press <b>OK</b> .
Send an E-mail message	Select <b>Menu &gt; Messages &gt; Create SMS e-mail</b> . Enter the recipient's address, press <b>OK</b> , enter the subject, press <b>OK</b> , write the message, press <b>Options</b> , select <b>Send e-mail</b> , enter the <b>Gateway number</b> (if needed), and press <b>OK</b> .
Read new message	Press <b>Show</b> .
Reply to a message	Select <b>Options &gt; Reply &gt; Via text message</b> , choose a reply option, write the reply, and select <b>Options &gt; Send &gt; OK</b> .
Reply to an E-mail message	Select <b>Options &gt; Reply &gt; Via e-mail</b> , choose a reply option, and follow instructions for sending an e-mail message.
Send a business card	Retrieve a name from the phone book, select <b>Details &gt; Options &gt; Send bus. card &gt; Via text message</b> or <b>Via infrared</b> , enter the recipient's number, and press <b>OK</b> .

## • MENU

### 1 MESSAGES

- Create message
- Create SMS e-mail
- Chat
- Inbox
- Sent items
- Archive
- Templates
- Delete messages
- Voice messages
- Message settings

### 2 CALL LOG

- Missed calls
- Received calls
- Dialed numbers
- Delete recent call lists
- Call timers

### 3 PROFILES

- Normal
- Silent
- Meeting
- Outdoor
- Pager

### 4 SETTINGS

- Right selection key settings
- Tone settings
- Time and date settings

- Call settings
- Phone settings
- Display settings
- Enhancement settings
- Network services
- Security settings
- Restore factory settings

### 5 ALARM CLOCK

### 6 VOICE

- Voice recorder
- Voice tags
- Voice commands

### 7 GALLERY

### 8 ORGANIZER

- Calendar
- To-do list

### 9 GAMES

### 10 APPLICATIONS

### 11 EXTRAS

- Calculator
- Stopwatch

### 12 INFRARED

### 13 SERVICES

### 14 PREPAID

## • CONTACTS (PHONE BOOK)

- 1 Find
- 2 Add contact
- 3 Edit name
- 4 Delete
- 5 Add number
- 6 Settings
- 7 1-touch dialing
- 8 Voice tags
- 9 Caller groups



## Look for updates

Nokia updates this user guide to reflect changes or corrections. The latest version may be available at the Nokia site on the World Wide Web:

[www.nokia.com/us](http://www.nokia.com/us)

Also, an interactive user guide is available at:

[www.nokiahowto.com](http://www.nokiahowto.com)

## Sign up with a service provider

Before you can take advantage of any of the network services, you must sign up with a wireless service provider. Your service provider will make available descriptions of its services and instructions for using them.

## Note differences among service providers

Wireless service providers may differ in their support of features. Some may not support all languages available in your phone. Before you sign up, make sure a wireless provider supports the features that you need.

## • CONTACT NOKIA

When you need help, the Nokia Customer Care department can provide information about Nokia products. However, you may wish to check through your user guide before calling the customer care center, as it is a comprehensive guide to using your phone.

Whether you are calling about your phone or an enhancement, have the equipment with you when you call. For example, if you are calling about a headset, please have it nearby.

## Have the right information available

We recommend that you have the following information available before you contact the Nokia Customer Care department:

- The phone model number
- Electronic serial number (ESN), located on the phone label.
- Your ZIP code



Nokia Customer Care Center, USA	Customer Care Centre, Canada
<p>Nokia Mobile Phones 7725 Woodland Center Blvd., Suite #150 Tampa, Florida 33614</p> <p>Tel: 1-888-NOKIA-2U (1-888-665-4228)</p> <p>Fax: 1-813-249-9619</p> <p>TTY/TDD users only: 1-800-24-NOKIA (1-800-246-6542)</p>	<p>Nokia Products Ltd. 601 Westney Rd. South Ajax Ontario L1S 4N7</p> <p>Tel: 1-888-22-NOKIA (1-888-226-6542)</p> <p>Fax: 1-905-427-1070</p>

## The phone label

The label is on the back of your phone (under the battery). It contains important information about your phone, including the model and serial numbers.

Please do not remove or deface the label.

## • CONTACT YOUR SERVICE PROVIDER

Some service providers program a one-key customer support number into the phone. This number can be useful if you are having trouble dialing a number, especially when you are traveling outside your home area.

This one-key feature might not be available on your system. Contact your service provider for availability.

## 3 Review the basics

### • THE ANTENNA

Your device has an internal antenna. As with any other radio transmitting device, do not touch the antenna unnecessarily when the device is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed. Avoiding contact with the antenna area when operating the phone optimizes the antenna performance and the battery life.



Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.




**Warning:** If the phone becomes too hot during a call, the call is automatically terminated. You will not be able to make or receive calls until the phone cools.

### • THE BATTERY

#### Installing

If your dealer has already installed the battery, please see "Charging" on page 10.

- 1 Place the battery in the compartment with the label side facing up and the golden contact area aligned with the contact pins.
- 2 Press the top end of the battery into place.

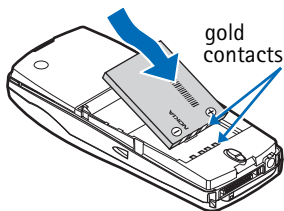

To learn how to remove and replace the covers, see "Xpress-on™ covers" on page 12.

## Charging

Follow these guidelines to optimize battery performance.

- 1 With your phone turned off, connect the charger plug to the bottom of the phone. Connect the charger to an ac wall outlet.


The battery indicator bar appears on the right-hand side of the screen and starts to scroll from bottom to top. It will remain constant when the phone is fully charged.

- 2 Disconnect the charger from the phone and ac outlet when the battery is fully charged.

After the indicator bar stops scrolling, you can leave the charger connected and the battery will accept a "trickle charge" to maintain a fully charged battery. See "Reference Information" on page 118 for more information on batteries.



**Note:** Charge the new battery for three hours before using. Use the battery until it is fully discharged. You should do this for a total of three charging cycles. After the first charge, you can make and receive calls during the charging cycle, but the calls interrupt the charge. When a call ends, the charge will resume. The charging time depends on the charger you use.

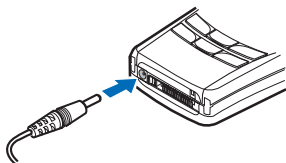


## Removing

Before removing the battery, make sure the phone has been turned off for at least 10 seconds.

- 1 Place your index finger in the groove at the top of the battery, and lift out of phone.
- 2 Take out the battery.

To learn how to remove and replace the covers, see Xpress-on covers on page 12.

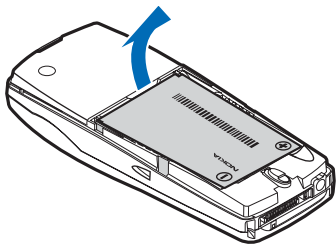

**Warning:** Use only your hands to remove the battery. Do not puncture, burn, or use any objects that may damage the phone or the battery. Please recycle the battery or dispose of properly according to local regulations.

## • IMPORTANT BATTERY INFORMATION

- Recharge your battery only with a charger approved by Nokia.
- You can switch the phone on and use it for calls while the battery is charging.
- If the battery is totally empty, it may take a few seconds for the battery indicator to appear on the screen.
- If you are still connected to the charger and you switch the phone on when charging is complete, the screen momentarily shows **Battery full**.
- After fully charging and discharging your new battery three times, you no longer need to fully discharge the BLD-3 battery before recharging.
- Charging time depends on the charger used. See "Battery" on page 125 for charging, talk, and standby times.
- If the battery is completely empty, you may need to recharge it for a few minutes before you can make or receive calls.


## • XPRESS-ON™ COVERS

Xpress-on™ covers are available in several fashion colors. Extra covers may be purchased from your authorized Nokia dealer.

- Always store and use the device with the covers attached.
- Before removing the cover, always switch off the power and disconnect the charger and any other device. Avoid touching electronic components while changing the covers.


## • REMOVE THE BACK COVER

- 1 Hold the phone upside down with the back cover facing you.
- 2 Push the release button down.
- 3 Pull the back cover away from the phone.

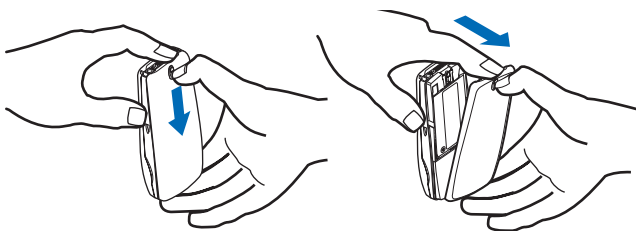


## • REMOVE THE FRONT COVER

- 1 Remove the back cover.
- 2 Once the back cover has been removed, firmly hold the phone with one hand and grasp the top corners of the front cover with the other hand.
- 3 Lift the front cover off the phone starting with the top.

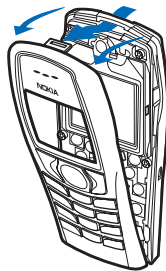


## • THE KEYPAD

Remove the keypad from the old front cover and place it into the new front cover as shown.

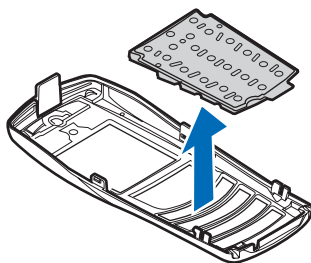


## • REPLACE THE FRONT COVER

- 1 Hold the phone face down.
- 2 Insert the tabs at the bottom of the front cover into the matching holes at the bottom of the phone.
- 3 Gently push the tabs at the middle of the front cover into the matching holes in the middle of the phone.
- 4 Slowly push the tab at the top of the front cover through the slot at the top of the phone.

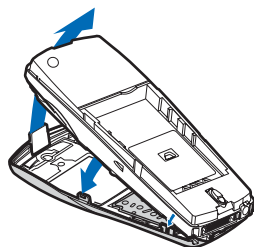

## • REPLACE THE BACK COVER

- 1 Insert the tab at the top of the back cover into the slot at the top of the phone.
- 2 Lower the cover onto the back of the phone until the bottom locks into place.

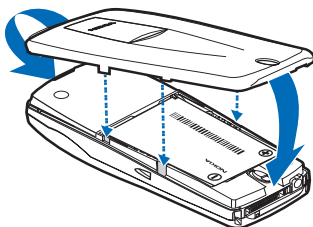

## • SWITCH ON YOUR PHONE

Once the battery is charged, you can switch on your phone.

Press and hold the gray power key (located on the top of the phone) for two seconds.




**Warning:** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.



## • THE START SCREEN

When you switch on your phone, a welcome note appears, and then you see the start screen. In this guide, most instructions will begin with how to access a feature from **Menu** or **Contacts**, which are located on the start screen.

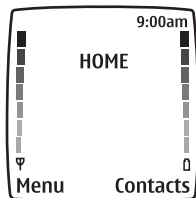You can easily return to the start screen from any activity by pressing the **End** key. The phone erases any text or information you may have entered, and returns to its home screen when you press the **End** key. However, if you were writing a new text message, the message remains available.



## ABOUT THE START SCREEN

<b>HOME</b>	Your service provider's name may appear here.
	Signal strength. A higher bar on the left side of the start screen indicates a stronger signal. If you do not see any bars, you are out of the range of service.
	Shows the battery charge level. The higher the bar, the higher the power level in the battery.
<b>Menu</b>	The top level of menu choices on your phone. Press the <b>Left selection</b> key to enter the menus.
<b>Contacts</b>	The entry point for the phone book. Press the right selection key to enter the <b>Contacts</b> feature.
<b>D</b>	Indicates that you are connected to a digital network. This graphic is located in the top left corner of the start screen.




## 4 Phone setup

### • VOLUME

During a call, you can change the volume level on your phone, making incoming voice sounds louder or softer. The volume keys are the same as the left and right scroll keys. Press the right arrow to increase volume or the left arrow to decrease volume. A bar chart appears on the phone screen, showing the current volume level.

You can adjust the volume when you are in a call at the start screen, or when you are listening to tones. If you are in a call, and have activated other phone menus or functions, you have to return to the start screen to adjust the volume.

Volume keys

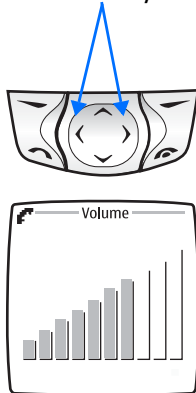


### • HEADSET

A headset may be purchased with your phone or separately as an enhancement. Using a headset provides convenient handsfree communications.

To connect the headset, plug the headset jack into the Pop-Port™ connector on the bottom of your phone.


With the headset connected, you can make, answer, and end calls as usual. To view available Nokia headsets for your phone, visit [www.nokia.com/us](http://www.nokia.com/us).

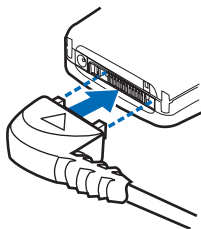

## • DISPLAY CONTRAST

You can change the contrast on your display, making it brighter or darker.

- 1 Press **Menu**, then select **Settings > Display settings > Display brightness**.
- 2 Press the right arrow to increase the contrast, or the left arrow to decrease it.
- 3 Select **OK** to confirm your changes.

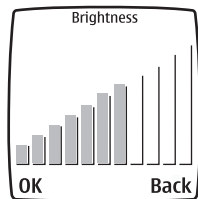

## • EQUALIZER


Like a stereo, you can customize the audio properties of your phone using the equalizer. Choose from a list of presets or create a custom set of your own.


- 1 Press **Menu**, then select **Settings > Call settings > Equalizer**.
- 2 Choose one of the following options from the **Equalizer** menu:
  - Normal**—Selects the default setting for the equalizer.
  - Bright**—Emphasizes high frequencies.
  - Dark**—Emphasizes low frequencies.
  - Loudness**—Emphasizes both high and low frequencies, but not middle frequencies.
  - Set**—Allows you to define three different sets of sound settings that you can activate, deactivate, edit, or rename.

## • LEARN THE KEYS

The following is a list of keys and their functions. Refer to the diagram at the front of the book for the location of the keys.

**Power** button—Press and hold to switch the phone on or off. Press briefly to access the list of profiles.

**Talk** key—Press  to make a call to the name or number shown on the screen or to answer a call. Press the **Talk** key once at the start screen to view a list of numbers you have recently dialed. Scroll to review the list and press the **Talk** key to call a number shown in the list. The **Talk** key is green.

**End** key—Press  to end a call or to silence the ring from an incoming call. Also, press to return to the start screen. The **End** key is red.

**Number** keys—Use keys **2–9** to enter numbers and letters. Use the **0** key if you want to insert a blank space while entering text.

**1** key—At the start screen, press and hold **1** key to call your voice mailbox. This feature requires one-time setup in your phone.

**\*** key—When writing a message, press **\*** to enter special characters, such as punctuation marks.

**Selection** keys—Press to choose the option shown by the word above the key (for example, **Menu**).

**Four-way Scroll** key—Press the up, down, right, and left arrows to scroll through a menu list of options, change the volume during a call, move the cursor when entering text, and to move when playing games.

## • MAKE AND ANSWER CALLS

Use this quick guide to make and answer calls.

**Switch the phone on (or off)**—Press and hold the Power key for 2 seconds.

**Make a call**—Enter a phone number, including **1** plus the area code if needed, and press the **Talk** key.

**Answer a call**—When your phone rings, press the **Talk** key.

**End a call**—Press **End**.

**Avoid unintentional calls**—Press **Menu > \***. Activates the Keyguard feature. You cannot accidentally make a call.

**Turn Keyguard off**—Press **Unlock > \***.

## • THE SPEAKER PHONE

Your phone has a speaker phone that you can use during a call. Do not hold the phone to your ear while the speaker phone is activated.






- To activate the speaker phone, press the **Right selection** key.
- To deactivate the speaker phone during a call, press **Handset**.
- The speaker phone is deactivated automatically when a call (or a call attempt) ends or when certain enhancements are connected.














**Note:** When you select the **New call** option from the in-call menu, the speaker phone does not automatically deactivate.

## • PHONE SYMBOLS

The following is a collection of the various symbols you may see on your phone.

Symbol	What it means
	You have an active call.
	The phone is waiting for you to enter numbers or text.
	You have turned off call alert tones and text message alert tones, and set your ringing tone to <b>Silent</b> .
	You have activated Keyguard to help prevent any accidental key presses.
	You have one or more voice messages waiting.

Symbol	What it means
	You have one or more unread text messages waiting.
	You have attempted to send the message.
<b>D</b>	Digital service is available.
	Letters you enter will be uppercase (capital letters). Press <b>#</b> to switch to lowercase.
	Letters you enter will be lowercase. Press <b>#</b> to switch to uppercase.
	Letters you enter will be in sentence case.
	Characters you enter will be numbers.
	You are using predictive text. Available when entering information into your calendar, to-do list, or writing text messages.
	You are using predictive text. Characters you enter will be uppercase letters.
	You are using predictive text. Characters you enter will be lowercase letters (c, e, m, etc.).
	You can enter only symbols, such as punctuation marks. Appears when you press and hold <b>*</b> while entering or editing text.
	The alarm clock is set.

## • THE SELECTION KEYS

Note the two selection keys beneath the screen. The function of each key is determined by the word shown above them on the screen.



For example, press the **Left selection** key when the word **Menu** appears above it to show the first of many menus. Scroll through the menus with the scroll keys.

Press the **Right selection** key when **Contacts** appears above it to open the phone book menu. The **Right selection** key can be personalized. See "Right selection key settings" on page 68 for more information.

## • IN-PHONE HELP

Your phone provides brief descriptions of all menu options in an in-phone help system. To activate the help text, select **Menu > Settings > Phone settings > Help text activation**.

- 1 Scroll to a menu or submenu option.
- 2 Wait about 15 seconds and a short message appears, describing the option and what it does.
- 3 Scroll up and down to read the longer descriptions.

## • PHONE MENUS

Phone features are grouped according to function and are accessed through the main menus of your phone. Each main menu contains submenus and lists from which you can select or view items and customize phone features. You can access these menus and submenus by using the scroll method or by using a shortcut.




**Note:** Some features may not be available, depending on your network. For more information, contact your service provider.

## Scroll method


- 1 At the start screen, select **Menu**.
- 2 Scroll through the main menus one at a time using the up and down arrows on the four-way **Scroll** key.

As you scroll through the menus, the menu number appears in the upper right corner of the display. In addition, the name of the menu appears at the top of the display.

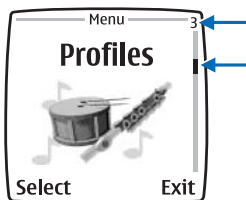

- 3 When the desired menu is highlighted, press the **Left** selection key.
- 4 If the menu contains submenus, use the scroll keys to highlight the desired menu, and press the **Left** selection key.

Select **Back** (press the **Right** selection key) to return to the previous menu or submenu.

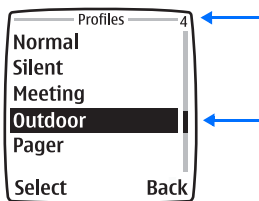

Press the **End** key to return to the start screen from any main menu.

## Navigate the menu

The convention for locating features in your phone is illustrated in the following sentence:

From the menu, select **Settings > Call settings > Automatic redial**.

To locate Automatic redial you will first enter the menu from the start screen by pressing the left selection key. You will then scroll to **Settings** and press **Select**. You will continue to scroll and select each subsequent word listed in bold text.

## Shortcuts

You can go directly to almost any menu or submenu, as well as activate most features by using a shortcut.

Select **Menu**, and within a few seconds, press the key or keys associated with the menu function you would like to view or activate. The shortcut numbers are located on the display in the upper right corner of each menu.

For example, to select the **Meeting** profile, select **Menu 3-3-1 (Menu > Profiles > Meeting > Select)** from the start screen. After a brief pause, the **Meeting** profile is activated.








## 5 Text entry

This section gives detailed instructions for entering names, numbers, messages, and other information into your phone.

- "The phone book" on page 32 tells you how to use and manage names and numbers.
- "Text messages" on page 92 tells you how to send, receive, and manage mobile messages.

### • ENTERING LETTERS AND NUMBERS

Depending on the kind of information you are entering (names, numbers, or text), you can enter information into your phone in three ways:

Method	Icon	Description	Function
ABC		All uppercase letters	Entering text. You can switch the case by pressing the # key.
		All lowercase letters	
		Sentence style letters (first letter capitalized—default)	
123		Numbers	Entering numbers. You can switch to number mode if you press and hold the # key.
Predictive text		Predicts text as you write	Writing messages and notes.

## • ABC AND 123 METHODS

You can enter any combination of numbers and letters into phone book entries, Web addresses, and more using the ABC and 123 methods. When writing messages and notes, predictive text is available. See "Predictive text" on page 28 for more information.

The phone shows the current method with an icon in the upper left corner of the screen.

Icon  
→  
showing  
current  
entry  
method



### Letters

When you are in a name box in the phone book, use the phone keypad to enter letters:

- 1 Find the key with the letter you want to enter.
- 2 Press the key repeatedly until the letter appears on the screen.  
For example, press **2** three times to enter the letter C.
- 3 Wait for the blinking cursor to reappear before you enter another letter, unless the letter is on a different key.

Example: To enter the name Albert:

Press		Displayed text
<b>2</b>	for A	<b>A</b>
<b>5 5 5</b>	for l	<b>Al</b>
<b>2 2</b>	for b	<b>Alb</b>
<b>3 3</b>	for e	<b>Albe</b>
<b>7 7 7</b>	for r	<b>Alber</b>
<b>8</b>	for t	<b>Albert</b>



**Note:** The default case in **Abc** is sentence case. Only the first letter of each sentence is capitalized.

## Numbers

When you are entering text, press and hold **#** until you see the **123** icon on the screen. To enter numbers, simply press the numbers you want.

## Punctuation and other characters

Depending on the language selected for your phone, the following characters may be available:

Key	Characters	Key	Characters
1	Punctuation and 1	7	P Q R S 7
2	A B C 2	8	T U V 8
3	D E F 3	9	W X Y Z 9
4	G H I 4	0	Space, 0
5	J K L 5	*	Press and hold for punctuation and symbols.
6	M N O 6	#	Changes letter case.



**Note:** Some networks may not support all language-dependent characters and/or services.

### SPACES AND PUNCTUATION

- Press **0** to enter a space between words.
- Press **1** briefly while in **abc** to enter a period.
- Press **\*** to show special characters. A screen appears with the available special characters.

Use the scroll keys to select a character, and press **Insert**.

## ERASE MISTAKES

If you make a mistake:

- Press **Clear** to erase one character to the left.
- To erase all text, select **Options > Clear text**, or press and hold **Clear**.

## CHANGE LETTER CASE

- To change cases (upper, lower, predictive, sentence), press **#**.  
The **ABC** icon switches to **abc**, to indicate lowercase letters.
- Press and hold a key until the number of that key appears on the screen, or press and hold **#** to switch to numbers.

## Special characters

Your phone has special characters, symbols, and punctuation that are available when writing text. Here is a sample:

.	?	!	@	'	-	_	(
)	,	:	;	&	/	~	←
\	%	*	#	+	<	=	>
"	£	\$	¥	☒	§	i	¿


## IN ABC

- 1 Press and hold the **\*** key to access available symbols.
- 2 Use the arrow keys to move to the character you want, and select **Insert**.

## IN 123

The **\*** key inserts special characters when you are prompted to enter a phone number.


- \* This character sends command strings to the network. Contact your service provider for details.

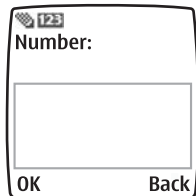

- p This character creates a pause that occurs when the phone dials a number. Numbers entered to the right of this special character are automatically sent as touch tones after a 2.5-second pause.
- w This character causes the phone to wait for you to press **Send**.

## • PREDICTIVE TEXT

When you are writing text messages on your phone, you can use the predictive text method of entering information. With predictive text, you need to press each number key only once for each letter. The phone predicts, or guesses, what you are writing. For example: To write "Nokia" with the English dictionary selected:

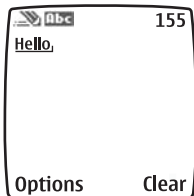

Press	Displayed text
6	o
6	on
5	onl
4	onli
2	Nokia


The maximum number of characters available is 160. The character counter appears in the top right corner of the screen and counts down for each character you add.

## Keys for predictive text

Key	Purpose
2-9	Use for text entry. Press each key only once for each letter.
*	Press to view the next matching word if the underlined word is not the word you intended. Press and hold this key for a list of symbols.
Spell	If the dictionary sees a word it does not recognize, you see <b>Spell</b> above the <b>Left selection</b> key. Select <b>Spell</b> , enter the word, and press <b>Save</b> .
0	Press once to accept a word and add a space.
#	Press and hold to enter a number. You see the <b>123</b> icon on the screen. Press and hold <b>#</b> again to write text letters. Press once quickly to switch the character case. <b>ABC</b> indicates all uppercase, <b>abc</b> indicates lowercase, and <b>Abc</b> indicates sentence case.
Clear	Press once to delete the character to the left of the cursor.

## Turn on text input

- 1 Select **Menu > Messages > Create message**.
- 2 Select **Options > Predictive text**.
- 3 Scroll to the dictionary you want (for example, **English**).
- 4 Press **Select**.

**T9 prediction on** appears. (T9 is the technical name for predictive text input.) This means you can use the predictive text method to enter text. When writing a text message, the predictive text icon  appears. Predictive text can be turned on and off when you press the **#** key. You may need to press the **#** key more than once.



**Note:** When you turn on predictive text, it is also active when adding notes to the calendar and to-do list.

## Turn off text input

- 1 Select **Menu** > **Messages** > **Create message**.
- 2 Select **Options** > **Predictive text**.
- 3 Scroll to **Prediction off** and press **Select**.

## Tips for text

### CHECK A WORD

When you have finished writing, make sure the underlined word is the word you intended to write.

If the word is correct:

- Insert a punctuation mark, if needed.
- Press **0** to confirm the change and enter a space.
- Start writing the next word.

If the word is not correct:

- Press **\*** repeatedly until the word you want appears, and then press **0** to confirm it.

OR

- Select **Options** > **Matches**. Scroll to the correct word and press **Use**.
- Start writing the next word.

When you enter a period to end a sentence, the phone switches to **Abc** so that the first letter in the next word will be uppercase (a capital letter).

### ADD A WORD TO THE DICTIONARY

If **Options** changes to **Spell**, the word you intended to write is not in the dictionary. You can add the word to the dictionary.

- 1 Select **Spell** and enter the word using standard text entry.
- 2 Select **Save** to save the word.

## INSERT NUMBERS

- 1 To add a number to the message, press and hold **#** until **123** appears on the screen.
- 2 Enter the numbers you want, and then press and hold **#** to return to the **abc** method.

You can also press and hold any number key while writing a message.

## INSERT SYMBOLS

- 1 To put a symbol in the message, select **Options > Insert symbol**, or press **\*** and scroll to the symbol you want.
- 2 Select the symbol you want and press **Insert**.

## WRITE COMPOUND WORDS


- 1 Write the first word and scroll right to accept it.
- 2 Write the second word.




## 6 The phone book

Your phone includes a phone book that can store up to 500 contact names with up to five phone numbers per contact. The phone book can also store up to four text entries per contact, such as notes or addresses.

- An entry in the phone book can consist of a number only or a name and a number.
- You cannot enter the same name twice. If you try to save a name that is already in the phone book, the phone asks if you want to add the number to an existing contact.

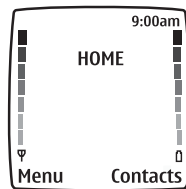

Phone book 

### • VIEW CONTACTS

There are several ways to view the contacts in your phone book:

- At the start screen, use the up and down arrows on the **Scroll** key to view your contacts.
- Select **Contacts > Find**, and enter the first letter of the name. If more than one name appears, scroll to the name you want.

### • SAVE NAMES AND NUMBERS

You have several options for saving names and numbers.

#### Quickly save a number

- 1 Enter the phone number using the keypad.
- 2 Press and hold **Options**.

## Quickly save a name and number

- 1 Enter the phone number using the keypad.
- 2 Select **Options** > **Save**.
- 3 Enter a name and press **OK**.
- 4 Press **Done** to return to the start screen.

## Save an entry using the Contacts menu

- 1 Select **Contacts** > **Add contact**.
- 2 Enter a name and press **OK**.
- 3 Enter a number and press **OK** > **Done** to return to the start screen.

### • SAVE A TEXT ENTRY WITH A NAME

Once you have added a contact to your phone book, you can add up to four text entries, such as an e-mail address, a mailing address, or a note to that contact.



**Note:** Text entries can only be added to existing contacts. For instance, you cannot enter an e-mail address until you have selected a name to add the address to.

- 1 Find the name or number to which you want to add text.
- 2 Select **Details** > **Options** > **Add detail** > **E-mail address**, **Street address**, or **Note**.
- 3 Add your text, and press **OK**.
- 4 Press the **End** key to return to the start screen.

### • RETRIEVE INFORMATION

You can retrieve numbers from the phone book several different ways.

#### Retrieve numbers

- 1 At the start screen, select **Contacts** > **Find**.
- 2 Enter the desired name.
- 3 When the name appears, press the **Talk** key to call the number.

## Retrieve information with shortcuts

You may want to use some of these shortcuts or alternate methods for retrieving a contact.

- Press **Contacts**, enter the first letter of the name, scroll to the name, and press **Details**.
- At the start screen, press the up or down **Scroll** key to immediately enter your list of names, scroll to the name you want, and press **Details**.
- Press the **Talk** key to access a list of your last dialed calls, scroll to the one you want to dial, and press the **Talk** key again.

## • MENUS

The phone book has several options from which you can choose. These options appear when you press **Contacts**. Use the scroll keys to move to the menu you want to use.

**Find**—Search for a specific entry.

**Add contact**—Add a new contact to your phone book.

**Edit name**—Edit an existing contact.

**Delete**—Delete names and numbers one by one or all at once.

**Add number**—Add a number to an existing contact.

**Settings**—Check the phone book memory status and change the scrolling view.

**1-touch dialing**—Assign up to eight keys for speed dialing.

**Voice tags**—Allows you to playback, change, or delete your voice tags.

**Caller groups**—The caller groups feature enables you to identify callers by the ringing tone or graphic that you have assigned to their group. A group can be as small as one person or as large as your entire phone book. You can define the ringing tone and graphic for up to five predefined groups in your phone book.

## • CHANGE CONTACTS VIEW

You can view your phone book in two different ways:

**Name list**—Shows all the names that are stored in your phone book. Four names appear on the screen at a time.

**Name and number**—Shows individual names and numbers. Only one name and its corresponding phone number appears on the screen at a time.

In all views, you can use the **Scroll** key to move up and down through the list of names.

To change contacts view:

- 1 Select **Contacts > Settings > Contacts view**.
- 2 Scroll to the view you want and press **Select**.

## • EDIT A NAME OR NUMBER

You can edit a name, a number, or both.

- 1 Retrieve the name or number you wish to edit.
- 2 Select **Details > Options > Edit number** or **Edit name**.
- 3 Edit the name or number and press **OK**.

## • ERASE STORED NAMES AND NUMBERS

Erasing stored names and numbers removes them from your phone. Once you delete an item, you can restore it only by reentering it.

### Delete a number from a contact

- 1 Retrieve the contact you want to edit.
- 2 Select **Details > Options > Delete number**.
- 3 When the message **Delete?** appears, press **OK**.

## Delete the contact

- 1 Select **Contacts > Delete > One by one**.
- 2 Scroll to the entry you want to erase and press **Delete**.
- 3 When the message **Delete all details?** appears, press **OK**.


## • DELETE THE ENTIRE PHONE BOOK

These steps delete all contacts in your phone book.

- 1 Select **Contacts > Delete > Select > Delete all**.
- 2 When you see the message **Are you sure?**, press **OK**.
- 3 Enter your security code, and press **OK**.

## • ADD A SECOND NUMBER TO A NAME

There are several ways to add a number to an existing name in the phone book. Once you choose to add a number, you can select one of the following number type locations in which to store the second number: **General**, **Mobile**, **Home**, **Work**, or **Fax**.

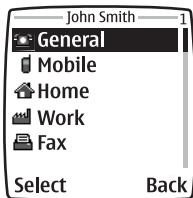

## From the phone book

- 1 Select **Contacts > Add number**.
- 2 Scroll to the name to which you want to add the number, and press **Add**.
- 3 Select **General**, **Mobile**, **Home**, **Work**, or **Fax**.
- 4 Enter the number and press **OK**.

## From the start screen

- 1 Enter the phone number using the keypad.
- 2 Select **Options > Add to contact**.

- 3 Scroll to the name to which you want to add the number and press **Add**.
- 4 Scroll to the desired number type and press **Select**.

## By retrieving the name

- 1 Retrieve the name to which you would like to add a second number.
- 2 Select **Details > Options > Add number**.
- 3 Scroll to the desired number type, and press **Select**.
- 4 Enter the number, and press **OK**.

## Change the number type

Once you have saved a name with two numbers, you can change the number type for either of the phone numbers. (For example, you can change the type if you saved a number as General and you want to change it to Home.)

- 1 Retrieve the name from the phone book.
- 2 Press **Details**, and scroll to the number you want to change.
- 3 Select **Options > Change type**.
- 4 Scroll to the number type you would like and press **Select**.

## Specify a primary number

If any contacts in your phone book have multiple numbers, specify the number that you dial most often (for that name) as the primary number. By assigning the most-used number as primary, you are telling the phone to dial *that* number when you select the name for dialing—a great time saver when you dial names with two numbers.

- 1 Retrieve the name for which you want to select a primary number.
- 2 Press **Details**, and scroll to the number you want to set as the primary number.
- 3 Select **Options > As primary number**.

**Primary number set** appears on the screen.

## • CREATE CALLER GROUPS

Your phone allows you to create caller groups for listings with similar attributes in your phone book. The five available default caller groups are **Family**, **VIP**, **Friends**, **Business**, and **Other**. Each group has attributes that can be defined by the user: **Group name**, **Group tone**, and **Group logo**.

### ADD A NAME AND PHONE NUMBER

- 1 Once you have retrieved the desired name and number from the phone book, select **Details > Options > Caller groups**.
- 2 Scroll to the desired caller group (for example, **Family**), and press **Select**.

### SET A RINGING TONE AND GRAPHIC

- 1 Select **Contacts > Caller groups**.
- 2 Scroll to one of the caller groups and press **Select**.
- 3 Scroll to one of the following functions and press **Select**.

**Rename group**—Enter the new name for the caller group and press **OK**.

**Group ringing tone**—Scroll to the desired tone and press **OK**. **Default** is the tone selected for the currently selected profile.

**Group logo**—Scroll to **On**, **Off**, or **View**, and press **Select**.

**Group members**—Press **Select** to view group members. To add or remove a member, select **Options > Add name** or **Remove name**.

## • CHECK MEMORY STATUS

You can learn what percentage of phone memory is free and what percentage has been used.

Select **Contacts > Settings > Memory status**.

## 7 Call history



Your phone provides a call log that registers information about calls you make and receive. The call log keeps track of:

- Missed calls
  - Received calls
  - Dialed numbers
  - Time spent on calls
- **CHECK MISSED, RECEIVED, OR DIALED CALLS**

1 From the start screen, select **Menu > Call log**.

2 Scroll up or down to select **Missed calls, Received calls, Dialed numbers, Delete recent call lists, or Call timers**.

For missed, received, and dialed numbers, a phone number (or the name associated with a number in the phone book) appears.

3 Scroll up or down to the number or name you want, and press **Options**.

4 For missed, received, and dialed names or numbers, select from the options in the following list:

**Call time**—Shows the date and time when the call was connected, if you have set the phone clock.

**Send message**—Allows you to write and send a text message to numbers listed in the call log.

**View number**—Shows a number when the contact name appears in the call list.

**Edit number**—Allows you to edit the number shown on the screen and select from a list of options, which includes adding the number to a contact.



**Save**—Saves the number in your phone book.

**Add to contact**—Allows you to add the number to an existing contact.

**Delete**—Removes the number from the call log.

**Call**—Allows you to call the number that just called your phone.

To dial any number that appears on the phone screen, press the **Talk** key.

## MISSED CALLS

Your phone stores the numbers of calls you have missed. When you miss a call, **missed call(s)** appears, along with the number of calls missed.

You are notified of missed calls only if your phone was turned on in the original service area of your service provider.



**Note:** If you chose the **Forward if not answered** option in **Call Forwarding**, your phone treats these forwarded calls as missed calls. See "Call forwarding" on page 45.

## DIALED CALLS, RECEIVED CALLS

Your phone stores the numbers of the last several calls you have dialed or received.

## • CLEAR CALL LISTS

Your phone uses call lists to track numbers for incoming, outgoing, and missed calls. You can delete some or all of the numbers that appear in the call log. You can delete dialed numbers, received call numbers, or missed call numbers.

- 1 From the menu, select **Call log > Delete recent call lists**.
- 2 Scroll to the option you would like to clear and press **Select**.



**Warning:** You cannot undo this operation.

## • CALL TIMERS

Your phone uses call timers to track the amount of time you spend on each call. You can review phone use by checking the call timers.

- 1 From the menu, select **Call log > Call timers**.
- 2 Scroll up or down through the options described in the following list:

**Duration of last call**—Shows the time used for the last call made.

**Duration of dialed calls**—Shows the time used for all outgoing calls since you reset the timers.

**Duration of received calls**—Shows the time used for all received calls since you reset the timers.

**Duration of all calls**—Shows the time used for all calls that have been made and received since you reset the timers.

**Clear timers**—Clears (erases) all call timers for the currently selected phone number. Your phone includes separate timers for each number used, with the exception of the life timer.



**Warning:** This action cannot be undone. If you use this feature to log the amount of time spent on calls, you may want to record the information in the call timers before you clear them.



**Note:** The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes, and so forth.



**Note:** Some timers may be reset during service or software upgrades.

- **TURN ON A CURRENT CALL TIMER**

You can set your phone to show the elapsed time during a call.

- 1 From the menu, select **Settings > Call settings > Show call time on display > On**.

Now the timer is active during each call you make or receive. The time appears on the phone screen.

- 2 After a call has ended, press any key on your phone to clear the current call time from the screen.

- **CLEAR CALL TIMERS**

- 1 From the menu, select **Call log > Call timers > Clear timers**.
- 2 Enter your security code and press **OK**.

## 8 Advanced calling features

This chapter describes advanced calling features such as conference calling, using call waiting, and using credit cards for calls. Not all the features described here are available in all wireless network systems.

### • SET IN-CALL OPTIONS

Your phone allows you to use a number of features during a call. These features are known as in-call options. To access an option during a call, press **Options**, and choose one of the following options:



**Note:** Many in-call options are network service features. To use these options, you may need to contact your service provider.

**Loudspeaker**—Activates the speaker phone.

**Lock keypad**—Activates Keyguard.

**Record**—Record sounds with your phone and listen to them later.

**Equalizer**—Customizes the audio properties of your phone.

**New call**—Creates a new call while in a call.

**Touch tones**—Manually enter a touch tone string (series of tones) or search for a string in your phone.

**End all calls**—Ends all active calls.

**Contacts**—Use the phone book. Once you open the phone book, pressing the **End** key will not close the phone book, but it will end the current call.

**Menu**—Takes you to the main menus.

**Mute**—Mutes the phone microphone. If the microphone has already been muted, **Unmute** appears instead of **Mute**. Press **OK** to choose either of these options.



**Note:** The above options can affect the microphones of any enhancements connected to the phone.

## • CALL WAITING

If you have call waiting, your phone beeps during a call to let you know that someone else is calling you. Depending on your caller ID setup, the phone might also show the number of the incoming call. Once call waiting has been activated, **Call waiting** appears as a menu option.



**Note:** Call waiting is a network dependent feature. In some networks the call waiting code must be activated manually. Contact your service provider for availability and full details.

### Store the feature code

- 1 From the menu, select **Settings > Network services > Network feature setting**.
- 2 Enter the feature code your service provider gave you and press **OK**.
- 3 Select **Call waiting > Activate**.

### Activate

Select **Settings > Network services > Call waiting > Activate**.

### Manage calls

Call waiting works with both local and long distance calls.

- To answer an incoming call, press the **Talk** key.
- To switch from one call to another, press the **Talk** key.
- To end both calls, press the **End** key.

## • MAKE A CONFERENCE CALL

While in a call, you can call another number and add a third party to the call.



**Note:** Conference calling is a network dependent feature. Contact your service provider for availability and details.

## Add a third party

- 1 While in a call, select **Options > New call**, enter the phone number, and press **Call**.
- 2 When the third party answers, press the **Talk** key to connect all calls.

## Disconnect third party

While all three parties are connected, press the **Talk** key to disconnect the third caller while keeping the second party's call active.

## Disconnect second party

To disconnect the second party and remain connected to the third party, have the second party terminate the call on his/her end.

## End a conference call

To end all calls, press the **End** key.

## Number look-up during a call

If you do not remember a number that you need to call while in another call, and you know that this number is in your phone book, you can retrieve the number without having to end the current call.

- 1 During the call, select **Options > Contacts > Find**.
- 2 Enter a name and press **Find**, or scroll through the phone book.
- 3 Press **Details**.

## • CALL FORWARDING

With call forwarding, you can send incoming calls to another phone number. Before you can use call forwarding, you must first store the feature codes. Once call forwarding has been activated, **Call forwarding** appears as a menu option.



**Note:** Call forwarding is a network dependent feature. Some networks require that call forwarding be activated manually. Contact your service provider for availability and full details.

## Call forwarding feature codes

Your network requires separate codes for activating and cancelling the various types of call forwarding. You must contact your service provider to obtain the necessary feature codes for these network services.

Once you store these feature codes in your phone, they are sent automatically to the network when you select one of the call forwarding options.

Your phone can store the following types of feature codes:

**Forward all calls**—Forward all incoming calls to the number you specify.

**Forward if busy**—Forward incoming calls when you are in a call.

**Forward if not answered**—Forward incoming calls when you are unable to answer.

**Forward if out of reach**—Forward incoming calls when the phone is out of the network or switched off.

**Cancel all call forwarding**—Cancel all active call forwarding options.

## Store the feature code

- 1 From the menu, select **Settings > Network services > Network feature setting**.
- 2 Enter the feature code and press **OK > Call forwarding**.
- 3 Select the call forwarding option you want, then select **Activate**.

## Activate or cancel

- 1 From the menu, select **Settings > Network services > Call forwarding**.
- 2 Select the desired call forwarding option.
- 3 Select **Activate**.
- 4 If you are activating call forwarding, enter the number to which you want your calls forwarded (or press **Find** to recall a number from the phone book); then select **OK**.

## • AUTOMATIC REDIAL

When the wireless network is busy or unavailable, **Automatic redial** instructs your phone to retry the call. However, this feature does not automatically retry a number when the number you are calling is busy.

From the menus, select **Settings > Call settings > Automatic redial > On**.

If the network is busy, your phone makes three additional call attempts. If you want to stop the automatic redial process before the last attempt, press the **End** key.

## • CALLING CARD

You can use a calling card when you dial long distance. First you must store your calling card information in the phone. Your phone can store information for a maximum of four calling cards.

### Save calling card information

#### PART 1

- 1 Select **Settings > Call settings > Calling card**.

Enter your security code at the prompt.

- 2 Scroll to card **A, B, C, or D** and select **Options > Edit > OK > Dialing sequence**.
- 3 Scroll through the list of dialing sequences until you find the one that matches your calling card, and press **Select**.

#### PART 2

The order of the following steps may vary, depending on which dialing sequence your card uses.

- 4 When prompted for the calling card access number, enter the number and press **OK**. This number is usually the 1-800 number that is listed on the calling card.
- 5 At the prompt, enter the calling card number (and PIN number if required), and press **OK**.



- 6 Press **OK** again when the **Save changes?** message appears.
- 7 Select **Card name** and enter the card name using your phone keypad.
- 8 Press **OK**.

## Choose a calling card

If you have more than one calling card, you must choose one before making a call.

- 1 From the menu, select **Settings > Call settings > Calling card**.  
Enter your security code at the prompt.
- 2 Scroll to the desired card and select **Options > Select > OK**.  
The message **Card ready for use** appears.

## Make a call

- 1 Enter the phone number, including any prefix (such as 0 or 1) that your calling card might require when you make a calling card call.  
See your calling card for instructions.
- 2 Press and hold the **Talk** key until your phone displays **Card call** and **Wait for tone; then press OK**.
- 3 When you hear the tone from your calling card service, press **OK**.  
After the tone, your phone displays **Again, press OK after tone**.
- 4 Press **OK**.



**Note:** This procedure might not apply to all the calling card options that are programmed into your phone. Check your calling card for more information, or contact your local or long distance company.

## • VOICE TAGS

You can dial up to 10 of your stored phone book numbers using the voice dialing feature. Before you can place a call using voice dialing, you must first assign a voice tag to the number.

## Assign a voice tag to a phone number

- 1 At the start screen, scroll to the name to which you want to give a voice tag.
- 2 Select **Details > Options > Add voice tag > Start**.  
You hear several beeps, and **Please speak now** appears.
- 3 Speak clearly into the microphone, or press **Quit** to cancel the recording. The phone automatically stops recording and then saves and replays the voice tag.

### VOICE TAG ERRORS

If recording is not successful, you may see an error message. Press **OK** to try again.

Before using voice tags, note that:

- Voice tags are not language-dependent. They are dependent on the speaker's voice.
- You must say the name exactly as you said it when you recorded it.
- Voice tags are sensitive to background noise. Record voice tags and use them in a quiet environment.
- Very short names are not accepted. Use long names and avoid similar names for different numbers.



**Note:** Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances.

### DIAL A NUMBER USING VOICE DIALING

- 1 Press and hold **Contacts**.

When you hear several beeps and **Please speak now** appears, release the button.

If you have the optional headset attached, press and hold the headset button; when the phone beeps and **Please speak now** appears, release the button.

- 2 Pronounce the voice tag clearly into the microphone.

When the phone finds the voice tag, the phone automatically dials the number.

If the phone does not locate a number, you hear an error tone and **No match found** appears. To start voice dialing again, press and hold **Contacts** (or the headset button) immediately after the error tone.

## Play back a voice tag

- 1 Select **Contacts > Voice tags**.
- 2 Scroll to the name with the voice tag you want to hear.
- 3 Select **Options > Playback**.

## Change a voice tag

- 1 Select **Contacts > Voice tags**.
- 2 Scroll to the name with the voice tag you want to change.
- 3 Select **Options > Change > Start**.

The phone repeats your voice tag, and **Voice tag changed** appears.

## Erase a voice tag

- 1 Select **Contacts > Voice tags**.
- 2 Scroll to the name with the voice tag you want to delete.
- 3 Select **Options > Delete > OK**.

## • VOICE RECORDER

This feature allows you to record speech or sounds with your phone. You can record information such as phone numbers and personal memos, but the voice recorder can also record an active phone conversation. The total available time is 180 seconds if no memos have been stored. The maximum length of a recording depends on how much memory remains available. The length of time remaining for a current recording will be displayed on the phone screen.

## Record speech or sound

- 1 From the menu, select **Voice > Voice recorder > Record**.  
After the *recorder start tone* is heard, the phone begins recording.
- 2 When you finish recording, select **Stop**.
- 3 Enter the title you wish to assign to the recording and press **OK**.

## Record while in a call

- 1 While in a call, select **Options > Record**.  
After the *recorder start tone* is heard, the recorder begins recording the phone conversation. Also, the *recorder recording tone* will play every 5 seconds to remind the other person on the call that the conversation is being recorded.
- 2 When recording is done, select **Stop**.  
**Recording saved** appears, and the recording is saved in the Recordings list.

## View recording list and play recordings

- 1 View your saved recordings by selecting **Voice > Voice recorder > Recordings list**.
- 2 Scroll to the recording you would like to play, and select **Options > Playback**.
- 3 End the playback by selecting **Stop**.

## Delete a recording

From the **Recording list** menu, select the recording you would like to delete, and select **Options > Delete**.

## Edit a recording title

- 1 Go to the **Recordings list**, and scroll to a recording.
- 2 Select **Options > Edit title**.
- 3 Edit the title as needed and press **OK**.

## Set the voice memo alarm

- 1 Go to the **Recordings list**, and scroll to a recording.
- 2 Select **Options > Add alarm**.
- 3 Enter the alarm date and time, and press **OK**.

When the alarm sounds, select **Stop > Options > Play** or **Play via IHF** to hear the recording.



**Note:** The recorder cannot be used when a data call or GPRS connection is active.

## • VOICE COMMANDS

The voice command feature allows hands-free operation of certain phone features. You can add a voice command to select a profile, or activate a feature. Voice commands work similar to voice dialing. Before using voice commands, you must first associate a voice tag to the phone function. You can set as many as five voice commands.

### View available functions

From the menu, select **Voice > Voice commands** to scroll through the list of profiles and features:

**Profiles**—**Normal, Silent, Meeting, Outdoor, Pager**

**Voice mailbox**—Check your voice messages.

**Infrared**—Activates the IR port.

**Voice recorder**—Record personal memos or active calls.


**Call log**—Set up a voice command to take you to your call log.

### Add a voice tag for the command

- 1 Select **Voice > Voice commands**.
- 2 Scroll to the phone function you wish to tag, and press **Select**.

### 3 Select **Options > Add command > Start**.

Speak the voice tag clearly into the microphone, or press **Quit** to cancel the recording.

The phone replays then saves the recorded tag. The  icon appears next to commands which have voice tags assigned.

## Activate a voice command

After you have associated a voice tag with a phone function, you can issue a command by speaking the voice tag. There are two ways to activate a voice command:

- 1 If you have the optional headset attached, press and hold the headset button.  
*OR*  
Press and hold **Contacts**.
- 2 When **Please speak now** appears, pronounce the voice tag clearly into the microphone.  
  
When the phone finds the tag, **Found** appears, and the command is issued.

## Voice command tag options

After you have associated a voice tag to a command, you can choose one of the following options:

- Listen to the tag (playback)
- Change the tag
- Delete the tag

## • CALLER ID

With each call you place, you can determine whether your telephone number appears to the person you are calling.

In most service areas, when you call others, your name is presented to their caller ID (if they subscribe). With **Send my caller identity**, you can block the display of your number when you make a call.



**Note:** This feature is available only when supported by the wireless network and may not function if you are roaming. This feature works on a call-by-call basis. You must enable this feature each time you want to block the sending of your own number to the recipient's caller ID.

## Store the feature code

Before you can use **Send my caller identity**, you must store the feature code for activating this feature. Once the code is stored in your phone, it is sent automatically to the network when you select this option from your phone menu.

- 1 From the menu, select **Settings > Network services > Network feature setting**.
- 2 Enter the feature code from your service provider and select **OK**.
- 3 Select **Send my caller identity > Yes**.

## Show or hide your number

From the menu, select **Settings > Network services > Send my caller identity > Yes or No**.

## • SELECT A PHONE NUMBER

Your service provider programs your phone number and system information into your phone memory when your phone is first activated. Your phone can hold up to three numbers. This means that your phone can be activated in three different service areas. Each service area would assign a different phone number or account to your phone.

You must select a phone number for your home system. Only one phone number can be active at a time. If you travel outside your home system, you can choose another number. One phone number is usually enough if your service provider has service or roaming agreements for each area in which you wish to use your phone. Contact your service provider for details.

You need at least one active number to make calls. You cannot change from one phone number to another during a call.



**Note:** Phone number selection is a network dependent feature. Some networks may not support more than one number. Contact your service provider for availability and full details.

## Select the phone number

- 1 From the menu, select **Menu > Settings > Network services > Own number selection**.
- 2 Scroll to the phone number you want to use and press **Select**.

## • SET TOUCH TONES

Touch tones (or DTMF tones) are sounds that are produced when you press the keys on your phone keypad. You can use touch tones for many automated over-the-phone services such as checking bank balances and airline schedules and using your voice mailbox. Touch tones can be sent only when a call is active.



**Warning:** If you send touch tones while in the analog mode, be careful not to send confidential information.

## Set manual touch tones

- 1 From the menu, select **Settings > Phone settings > Touch tones > Manual touch tones**.
- 2 Select one of the following options, and then press **Select**:
  - Continuous**—The tone sounds as long as you press and hold the key.
  - Fixed**—Sets the length of touch tones to **Short**.
  - Off**—Turns off the tones. No tones are sent when you press a key.

## Set length

You can set the length of each touch tone when you are in analog mode.

From the menu, select **Settings > Phone settings > Touch tones > Touch tone length > Short or Long**.



## Store strings

You can store touch tone strings the same way that you store names and numbers in your phone book. You can store an entire sequence of digits and send it as touch tones for frequently used strings of numbers.

### WITH PHONE NUMBERS

- 1 Enter the phone number that you want associated with a touch tone.
- 2 Press **\*** as many times as needed to enter a **w** or **p**.  
**w** (wait): When you dial this phone number, your phone first dials the number, and then waits (because of the w character) for you to press **Send**. When you press **Send**, the phone sends your touch tone.  
**p** (pause): If you include a p character instead of a w, your phone pauses for 2.5 seconds and then automatically sends the touch tone.
- 3 Enter the touch tone string.
- 4 Store the number as you normally would.

### SEND A STRING


- 1 From the menu, select **Settings > Phone settings > Touch tones > Manual touch tones**.
- 2 Make sure that the setting is not set to **Off**; if it is set to off, scroll to one of the other options and press **Select**.
- 3 During your call, select **Options > Touch tones**.
- 4 Enter the touch tone string or retrieve the string from the phone book, and press **Tones**.

## 9 Voice mail

Voice mail provides a way for callers who miss you to leave a message that you can retrieve later. To use voice mail, you must sign up for the feature with your wireless service provider.



### • CHECK MESSAGES

Your phone notifies you when you receive a voice message (see "Set the message alert tone" on page 62). The message **New voice message** appears on the phone screen, along with the  icon.

If you have received more than one voice mail message, depending on your wireless network, your phone may show the number of messages that you have received.



**Note:** To use voice mail, you need to learn the various greetings, passwords, and prompts of the voice mail system. Your service provider can provide instructions.

### • SET UP MAILBOX

As part of your network's voice mail feature, your service provider gives you a voice mailbox phone number. Save this number in your phone to make retrieving your voice messages quick and convenient.

- 1 From the menu, select **Messages > Voice messages > Voice mailbox number**.
- 2 Enter your voice mailbox phone number, and press **OK**.

Your voice mailbox number can be up to 32 digits long and is used until changed. Therefore, if your phone number changes, you may need to change your voice mailbox number along with it.

### • SET GREETINGS

Voice greetings may vary in different wireless systems. If you need information about how to record your greeting, contact your service provider.

- **LISTEN TO MESSAGES**

The method for listening to your voice messages varies, depending on your service provider. Call your service provider if you have any questions.

- When your phone alerts you to new voice messages, press **Listen** and follow the instructions given on the phone.

To listen later, press **Exit**.

- To listen to your voice messages at any time, press and hold the **1** key.

OR

From the menu, select **Messages > Voice messages > Listen to voice messages**.

Follow the prompts to review your messages.

# 10 Personalize rings and tones

## • PROFILES

A profile is a group of settings you can use to customize the way your phone works. You can set your own preferences for these items:

- Ringing options
- Ringing tone
- Ringing volume
- Vibrating alert
- Message alert tone
- Keypad tones
- Warning tones
- Alert for
- Profile name (except for Normal)



Your phone comes with five profiles, and each can be customized:

- Normal (default setting)
- Silent
- Meeting
- Outdoor
- Pager

## • SELECT A DIFFERENT PROFILE

- 1 Quickly tap the power key or select **Menu > Profiles**.
- 2 Select the profile you want to use.  
Profile names are highlighted as you scroll through them.

## • CUSTOMIZE A PROFILE

- 1 Select **Menu > Profiles**.
- 2 Select the desired profile in the list:

**Select**—Activates the currently highlighted profile.

**Customize**—Enables you to customize a profile by changing the current settings. Press **Select** to view a list of options.

**Timed**—Allows you to set a time length for the expiration of a profile setting.



**Note:** When you change a setting in the current profile, it affects only that profile. Normal settings do not change.

### Set ring options

You can choose the type of ring your phone uses to notify you of an incoming call. This setting does not affect any incoming text message alert tones.

- 1 Select **Menu > Profiles**.
- 2 Select the desired profile for which you want to set the ringing options.
- 3 Select **Customize > Ringing options**.
- 4 Select one of the ringing options:

**Ring**—The phone rings normally.

**Ascending**—Ringing volume increases (gets louder) if the phone is not answered.

**Ring once**—The phone rings once to indicate an incoming call.

**Beep once**—The phone beeps once to indicate an incoming call.

**Silent**—The phone makes no sound.

## Set the ringing tone

The ringing tone is the sound your phone makes when you receive a call. You can set the ringing tone to a specific sound or tune to personalize the rings.



**Note:** If you have already chosen a ringing option of either **Silent** or **Beep once**, the ringing tones are already turned off.

- 1 Select **Menu > Profiles**.
- 2 Select the profile for which you want to set the ringing tones.
- 3 Select **Customize > Ringing tone**.
- 4 Scroll through the options; when you hear the tone you want, press **Select**.

## Set the ring volume

You can set the default ringing volume for incoming voice calls and message alert tones.

- 1 Select **Menu > Profiles**.
- 2 Select the profile for which you want to set the ringing volume.
- 3 Select **Customize > Ringing volume**.
- 4 Scroll through the options; when you hear the volume level you want, press **Select**.



**Note:** As you scroll through the ringing options, pause to hear a sample of the tone. Although the ringing sample for level 4 and level 5 are the same, ringing level 5 will produce very loud ringing.

## Set a vibrating alert

You can have your phone vibrate to indicate an incoming call.

- 1 Select **Menu > Profiles**.
- 2 Select the profile for which you want to set the vibrating alert, and press **Select**.
- 3 Select **Customize > Vibrating alert > On**.

The phone does not vibrate when connected to any charging device.

## Set the message alert tone

You can set your phone to use a certain tone to indicate an incoming text message.

- 1 Select **Menu > Profiles**.
- 2 Select the profile for which you want to set the message alert tone.
- 3 Select **Customize > Message alert tone**.
- 4 Scroll through your choices, and select the tone you want.

The phone plays samples of each choice as you scroll to it.

## Set keypad tones

**Keypad tones** set the volume of the tone you hear when you press your phone keys.

- 1 Select **Menu > Profiles**.
- 2 Select the profile for which you want to set the keypad tones.
- 3 Select **Customize > Keypad tones**.
- 4 Scroll to one of the levels and press **Select**.

If you choose **Off**, no keypad tones are heard.

If you chose the **Silent profile**, the keypad tones are turned off.

## Set warning tones

You can set warning tones and the tones used for the games in your phone.

**Warning tones** include the sounds your phone makes during error conditions, during confirmations, when a battery is low, and when you need to recharge the battery.

- 1 Select **Menu > Profiles**.
- 2 Select the profile for which you want to set the warning tones.
- 3 Select **Customize > Warning tones > On**.

If you do not want to use warning tones, you can select **Off**.



**Note:** Game sounds can only be set under the Games menu.

## AUDIBLE ALERT

You can choose to have your phone sound an audible alert only when a member of a selected caller group is calling. For more details, see "Create caller groups" on page 38.

## RENAME A PROFILE

You can rename any of the profiles except **Normal**. You may want to use your own name for one of the profiles. If you do this, and whenever that profile is selected, your name appears on the start screen.

- 1 Select **Menu > Profiles**.
- 2 Select the desired profile.
- 3 Select **Customize > Profile name**.
- 4 Enter the new name and press **OK**.


## • SET A TIMED PROFILE

Timed profiles can be used to prevent missed calls. For example, suppose you attend an event that requires your phone be set to **Silent** before the event starts, but you forget to return it to **Normal** until long after the event. During this time, you may have missed several calls because the ringing tone was silent. A timed profile can prevent this by automatically returning your phone to the default profile at a time you specify.



**Note:** Timed profiles can be set up to 24 hours.

- 1 At the start screen, select **Menu > Profiles**.
- 2 Select the profile you wish to activate and set for timed expiration.
- 3 Select **Timed**.
- 4 Enter the time (*hh:mm*) and press **OK**.
- 5 Select **am** or **pm**.

The profile you have set for expiration is now active and appears in the start screen along with the  icon.



# 11 Personalize phone settings

You can change certain settings so that your phone suits your own needs and lifestyle. Changes you can make include changing the language on the screen, showing or hiding the clock, and setting up 1-touch dialing.

## • SET THE LANGUAGE

You can set your phone to use a certain language.

Your possible choices are English, Spanish, Canadian French, Brazilian Portuguese, Russian, Hebrew, and traditional Chinese. These choices vary in different regions. All these languages may not be available in your phone.

- 1 From the menu, select **Settings > Phone settings > Phone language**.
- 2 Select the language you want to use.

## • SET AND DISPLAY THE CLOCK


Your phone has an internal clock that you can set to appear on the phone screen. The clock is connected to an alarm clock. See "Alarm clock" on page 107 for details.

### Set the clock

- 1 From the menu, select **Settings > Time and date settings > Clock > Set the time**.
- 2 Enter the time (*hh:mm*) and press **OK**.

For example, to set your clock to 9:30 a.m., enter 09:30. If you set the time format for 24-hour time, enter the number the same way: 09:30 for 9:30 a.m., or 21:30 for 9:30 p.m.

- If you set the time format to **am/pm**, select **am** or **pm**.
- If you set the time format to **24-hour**, the time is set as soon as you press **OK** after adjusting the time.

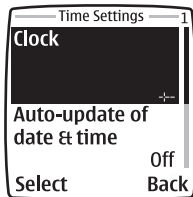

## Show or hide the clock

- 1 From the menu, select **Settings > Time and date settings > Clock > Show clock**.
- 2 Select **Hide clock** if you do not want to display it.

## Select the am/pm or 24-hour format

You can change the way your clock shows the time, whether in am/pm (12-hour) or 24-hour format.

From the menu, select **Settings > Time and date settings > Clock > Time format > 24-hour** or **12-hour**.

## Set the date

- 1 At the start screen, select **Menu > Settings > Time and date settings > Date > Set the date**.
- 2 Enter the date and press **OK**.

## Show or hide the date

You have the option of displaying (or not displaying) the date on the start screen.

At the start screen, select **Menu > Settings > Time and date settings > Date > Show date** or **Hide date**.

You will only see one of these options, depending on which one is currently selected.

## Change the date format

- 1 At the start screen, select **Menu > Settings > Time and date settings > Date > Date format** or **Date separator**.
- 2 Select the format of your choice.

A message appears in the display confirming your selection.

- **NETWORK UPDATED CLOCK**

You can set the phone clock to be updated by the network, if supported by your network service.

### **Turn on update**

From the menu, select **Settings > Time and date settings > Auto-update of date & time > On** or **Confirm first**.

If you choose **Confirm first**, you will receive a confirmation message before the clock is updated. Select **OK** to accept the update, or **Exit** to reject it.

### **Turn off update**

From the menu, select **Settings > Time and date settings > Auto-update of date & time > Off**.

- **WELCOME NOTE**

You can set your phone to show a brief welcome note each time you switch on your phone. The maximum length of this note is 44 characters.

- 1 From the menu, select **Settings > Phone settings > Welcome note**.
- 2 Enter the text of the welcome note.
- 3 Select **Options > Save**.

If you ever want to delete the welcome note, select **Delete** in this step.

- **START-UP TONE**

You can set your phone to play a brief start-up tone when you switch it on. From the menu, select **Settings > Phone settings > Start-up tone > On** or **Off**.

## • 1-TOUCH DIALING

You must store names and numbers in your phone book before you can use speed dialing (1-touch dialing).

To set up speed dialing, assign a name from the phone book to a 1-touch dial location, using keys **2-9**. When you press and hold the key, the phone automatically dials the associated number.

The **1** key is used exclusively to dial your voice mailbox. See "Voice mail" on page 57 for more information.

The **2** key may be used as a customer support number to dial your service provider. See "Contact your service provider" on page 8 for details. You can overwrite this feature and assign a 1-touch dial location to the **2** key.

### Set up

- 1 Select **Contacts > 1-touch dialing**.
- 2 Scroll to the first number that includes the message **(empty)** and press **Assign**.
- 3 Press **Find** or scroll to the name and number to which you want to assign this key and press **Select**.

### Speed dialing

To call a number using speed dialing, press and hold the appropriate key for a few seconds.

The phone dials the number.

### Edit numbers

After you have assigned a speed dialing number to a key, you can change key and number associations at any time.

- 1 Select **Contacts > 1-touch dialing**.
- 2 Scroll to the key you want to change and select **Options > Change**.
- 3 Enter the new number or retrieve a number from the phone book.

- 4 When you have entered the number, press **OK**.

OR

If you have found a number in the phone book, press **Select**.

If the name you selected has more than one number, scroll to the number you want and press **Select**.



**Note:** When 1-touch dialing is activated, calls may still be possible to the official emergency number programmed into your phone.

## Delete numbers

You can delete speed dialing key assignments at any time.

- 1 Select **Contacts > 1-touch dialing**.
- 2 Scroll to the key with the number you want to delete.
- 3 Select **Options > Delete > OK**.

## • RIGHT SELECTION KEY SETTINGS

You can change the function of the **Right selection** key so that your most frequently used functions can be quickly accessed from the start screen. This list of functions is called the **Go to** menu.

### Choose functions

- 1 From the menu, select **Settings > Right selection key settings > Select options**.
- 2 Highlight the desired functions from the list of available functions, and press **Mark** (**Unmark** to remove a marked function from the list).  
A mark appears in the box next to the selected function indicating that you have selected the function.
- 3 Continue to **Mark** (select) or **Unmark** (remove) as many functions as you wish.
- 4 Select **Done** when you have finished creating your quick list of functions.
- 5 When **Save changes?** appears in the display, select **Yes**.

On the start screen, **Go to** is now the **Right selection** key option. Select **Go to** to display a list of the functions you selected.

## Organize functions

- 1 From the menus, select **Settings > Right selection key settings > Organize**.
- 2 Highlight the function you wish to rearrange, and select **Move**.
- 3 Select **Move up, Move down, Move to top, or Move to bottom** from the list of choices.

The list of **Right selection** key functions is displayed in the new order.

- 4 Select **Done > Yes** to save the changes.

## • DISPLAY SETTINGS

### Wallpaper

You can set your phone to display a background picture (wallpaper) on the start screen. Some preselected pictures are saved in the **Gallery** menu.

You can also download pictures from xHTML pages, or transfer them and save them in the **gallery**. Your phone supports JPEG, GIF, BMP, PNG, and WBMP formats.

#### SELECT WALLPAPER

- 1 From the menu, select **Settings > Display settings > Wallpaper > Select wallpaper**.
- 2 Highlight **Graphics** and press **Open**.
- 3 Scroll through the image gallery.
- 4 When you arrive at the image of your choice, select **Options > Set as wallpaper**.

#### ACTIVATE OR DEACTIVATE

From the menu, select **Settings > Display settings > Wallpaper > On or Off**.

## Color schemes

You can change the color of some display components in your phone, such as indicators and signal bars.

- 1 From the menu, press **Settings > Display settings > Color Schemes**.
- 2 Scroll to the color scheme of your choice and press **Select**.

## Screen saver

The screen saver is activated when no function of the phone is used after a preset period of time. Press any key to deactivate the screen saver. The screen saver is also deactivated when the phone is out of the network coverage area.

You can set your phone to display a screen saver after a preset time or after a custom time (up to 60 minutes) of your choosing.

- 1 From the menu, select **Settings > Display settings > Screen saver timeout > 2 minutes** or **5 minutes**.
- 2 If you want to set a custom time (up to 60 minutes), select **Other**, enter the custom time, and press **OK**.

## Display brightness

You can change the brightness of your phone display. See "Display contrast" on page 17 for more information.

## • TONE SETTINGS

You can adjust the ringing volume, keypad tones, and more for the currently active profile. From the menu, select **Menu > Settings > Tone settings**. The options are described in detail under "Customize a profile" on page 60.

## • ENHANCEMENT SETTINGS

The **Enhancement settings** menu and submenus are shown only if the phone is or has been connected to a compatible enhancement, such as the headset, car kit, mobile inductive Loopset, or TTY/TDD device.

- 1 At the start screen, select **Menu > Settings > Enhancement settings > Headset, Handsfree, Loopset, or TTY/TDD**.

- 2 Scroll to the option of your choice and press **Select** to enter the option submenu and modify its settings. The following options are available:

**Default profile**—Choose the profile you wish to be automatically activated. See “Profiles” on page 59 for more information.

**Automatic answer**—Calls are answered automatically after one ring. Select **On** or **Off**.

**Lights**—Choose to keep the phone lights always on, or to shut off automatically after several seconds. Select **On** or **Automatic**.



**Note:** Lights are only available with **Handsfree**.

## • RESTORE THE FACTORY SETTINGS

You can change the default (factory) settings for your phone. You can return them to the original settings when needed.



**Note:** The phone does not reset the memory, timers, call log, language selection, and security code. However, any profiles you have modified are reset when you restore your settings.

- 1 From the menu, select **Settings > Restore factory settings**.
- 2 Enter your security code and press **OK**.

See “Phone security” on page 74 for more details about the security code.

## • ACCESSIBILITY SOLUTIONS

Nokia is committed to making mobile phones easy to use for all individuals, including those with disabilities. Nokia maintains a site on the World Wide Web that is dedicated to accessibility solutions. For more information about phone features, enhancements, and other Nokia products designed with your needs in mind, visit [www.nokiaaccessibility.com](http://www.nokiaaccessibility.com)



## LPS-4 Mobile Inductive Loopset

The LPS-4 Loopset is a Nokia enhancement designed to make the phone more accessible to hearing-aid users.

The Nokia Loopset gives hearing-impaired wireless customers clear access to digital telephony for the first time. With the Loopset, people who use a T-coil equipped hearing aid can make and receive calls without noise interference.

The LPS-4 Loopset uses inductive technology to transmit sound to a hearing aid equipped with a T-coil. With inductive technology, the sound from the phone is amplified more efficiently and background noise is eliminated.

The Loopset is easy to use. You wear the Loopset around your neck, connect it to your phone, and speak directly toward the microphone.

For detailed instructions on using the Loopset, refer to the booklet that comes with the LPS-4.



**Note:** The Loopset can be purchased separately as an enhancement.

## TTY/TDD capable


This feature makes the phone more user friendly for hearing-impaired users. This is a network-dependent feature. Contact your service provider to ensure that it supports this feature.

To send and receive messages using a TTY or TDD device, you will need the following equipment (in addition to your phone):

- A TTY/TDD device that is "cellular ready" or "cellular compatible"
- A connector cable, usually supplied with the TTY/TDD device
- The Nokia HDA-10 phone adapter, which can be purchased as an enhancement.

## Connect the TTY/TDD device

- 1 Connect the cable to the TTY machine.
- 2 Connect the cable to the adapter.
- 3 Connect the adapter to the phone.

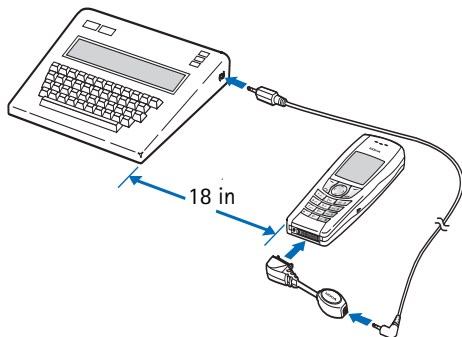

## Make a call

- 1 From the menu, select **Settings > Enhancement settings > TTY/TDD > Use TTY > Yes**.
- 2 Dial the number on the phone, and press the **Talk** key.
- 3 When the receiving party answers, you can begin typing text on the TTY/TDD.

## Receive a call

- 1 Ensure that the TTY/TDD and phone are powered on and are connected, and ensure **TTY/TDD** setting in under **Enhancement settings** is set to **Yes**.
- 2 Once contacted by the other party, type responses on the TTY/TDD.

## End a call

Press the **End** key to end your call.

## 12 Phone security

Your phone is equipped with a versatile security system that is intended to prevent unauthorized use of the phone.

You cannot activate or use certain phone features until you enter your security code.

- The default (preset) security code is 12345.
- Nokia highly recommends that you immediately change this code. Then, write down and store the new code in a safe place, away from your phone.
- When you enter the security code, an \* appears on the screen each time you press a key. The \* prevents others from seeing your code.
- If you enter the wrong security code five times in a row, your phone will not accept any entries for the next five minutes. However, if you realize that you have entered the code incorrectly before pressing **OK**, you can use **Clear** to delete the code, digit by digit, beginning with the last digit.

Your phone is equipped with helpful security features:

- Avoid making accidental calls.
  - Prevent unauthorized use of your phone.
  - Restrict outgoing or incoming calls.
  - Avoid erasing your phone book directory.
- **KEYGUARD (LOCK KEYPAD)**

Keyguard disables your keypad to prevent accidental key presses.

When the Keyguard is on, calls still may be possible to the official emergency number programmed into your phone. Enter the emergency number and press the **Talk** key. The number is displayed only after you have keyed in its last digit.

## Manual Keyguard

- To lock the keys, press **Menu > \***.
- To unlock the keys, press **Unlock > \***.

If the phone rings with Keyguard on, press the **Talk** key or **Answer** to answer the call. Keyguard reactivates once the call has ended.

To activate the lights with Keyguard on, press the **Power** key.

## Automatic Keyguard

You can set your phone to automatically lock the keys.

- 1 From the menu, select **Settings > Phone settings > Automatic keyguard > On**.

**Set delay** appears, with the time displayed in **mm:ss** format.

- 2 Enter the amount of time you want the phone to wait before turning Keyguard on, and press **OK**.

For example, to enter five minutes, press **0, 5, 0, 0**, and **OK**.

The shortest time you can enter is 10 seconds, and the longest time you can enter is 60 minutes.

You will still press **Menu > \*** to unlock the keys manually and use all the features of your phone. When you are finished, Keyguard automatically activates at the time you set.

## • CHANGE YOUR SECURITY CODE

Nokia highly recommends that you immediately change your security code so that others who know the default code cannot enter the correct code.

- 1 From the menu, select **Settings > Security settings > Access codes > Change security code**.
- 2 Enter the default security code (**1 2 3 4 5**) and press **OK**.
- 3 At the prompt, **Enter new security code**, enter your new security code and press **OK**.

- 4 At the prompt, **Verify new security code**, enter your new security code again and press **OK**.

**Security code changed** appears.

If you have changed your security code and do not remember the new code, contact your service provider. Once you have changed your security code, the default setting is no longer valid.

## • PHONE LOCK

This feature protects your phone from unauthorized outgoing calls or unauthorized access to information stored in the phone. When phone lock is activated, **Phone locked** is displayed in the start screen when you turn the phone on.

When you press **Menu** or **Contacts**, you are prompted to enter the lock code. Once the lock code has been accepted, the phone functions normally.

**Call not allowed** is displayed if you attempt to place a call while the phone is locked.



**Note:** When the phone is locked, calls still may be possible to the official emergency number programmed into your phone.


## Lock code

In addition to a security code, your phone also has a lock code. You will need the lock code to activate and deactivate the phone lock feature or to change your lock code.

The default lock code is 1234. If you enter an incorrect lock code five times in a row, your phone will prompt you for the security code (see "Change your security code" on page 75).

## Change your lock code

- 1 From the menu, select **Settings > Security settings > Access codes > Change lock code**.
- 2 Enter the current (or default) lock code and press **OK**.

- 3 Enter the new lock code and press **OK**.
  - 4 Reenter the new lock code for verification, and press **OK**.
-  **Note:** When you change your lock code, make sure you store it in a safe place, away from your phone. Avoid entering access codes similar to emergency numbers to prevent accidental emergency calls.

## Activate and deactivate

- 1 From the menu, select **Settings > Security settings > Access codes > Phone lock**.
- 2 Enter the lock code, and press **OK**.
- 3 Select **On power-up, On, or Off**.
- 4 If you selected **On power-up**, turn the phone off and back on to complete the phone lock activation.

## Answer a call with phone lock on

Press the **Talk** key or **Answer**.

## Allowed number when phone locked

When phone lock is on, the only outgoing calls that can be made are to the following numbers:

- The emergency number programmed into your phone (for example, 911)
- The number stored in the **Allowed no. when phone locked** location

## Store the allowed phone number

- 1 From the menu, select **Settings > Security settings > Access codes > Allowed no. when phone locked**.
- 2 Enter the lock code and press **OK**.
- 3 Press **Assign** and enter the phone number, or press **Find** and recall the number from the phone book.
- 4 Press **OK**.

## Call the allowed phone number

With the phone locked, at the start screen, press the **Scroll** key up or down to display the number, and press the **Talk** key to place the call.

### • RESTRICT CALLS

You can restrict incoming and outgoing calls. To restrict outgoing calls, you create a list of restrictions and apply the appropriate restriction.

Before you define restrictions for outgoing calls, two restriction options are available: **Select** and **Add restriction**. The maximum number of call restrictions you can define is 10.



**Note:** When calls are restricted, calls still may be possible to the official emergency number programmed into your phone. Enter the emergency number and press the **Talk** key.

## Add a number to the call restriction list

You can create a list of restrictions for both outgoing and incoming calls.

- 1 From the menu, select **Settings > Security settings > Call restrictions**.
- 2 Enter your security code, and press **OK**.
- 3 Select **Restrict outgoing calls or Restrict incoming calls > Add restriction**.
- 4 Enter the number you want to restrict, or retrieve the number from the phone book, and press **OK**.

If the name selected has more than one number assigned, scroll to the number you want and press **Select > OK**.

**Contact name** appears.

- 5 Enter a name for the restriction, if needed, and press **OK**.

If you press **OK** without entering a name, the number will be used. After you have used the **Add restriction** option to add at least one restriction, the options become available:

**Select**—Allows you to select call restrictions from the outgoing calls list.

**Add restriction**—Allows you to add a call restriction.

**Edit**—Allows you to edit an existing call restriction.

**Erase**—Erases an existing call restriction.

## Restrict outgoing calls

- 1 From the menu, select **Settings > Security settings > Call restrictions**.
- 2 When **Security code** appears, enter your security code, and press **OK**.
- 3 Select **Restrict outgoing calls > Select**.
- 4 Scroll through your list of restrictions and mark the ones you want to restrict.
- 5 Select **Done > Yes** to save the changes. When you or someone else attempts to place a call to a number you have restricted, **Call not allowed** appears, and the call is cancelled.

If you have not added any numbers for call restrictions, your only option will be **All calls**.

## Restrict incoming calls

- 1 From the menu, select **Settings > Security settings > Call restrictions**.
- 2 Enter your security code, and press **OK**.
- 3 Select **Restrict incoming calls > Add Restriction** to choose from your list of call restrictions.
- 4 Scroll through your list of restrictions and mark the ones you want to restrict.
- 5 Select **Done > Yes** to save the changes.

If you have not added any restrictions, your only option will be **All calls**.



## Turn off call restrictions

- 1 From the menu, select **Settings** > **Security settings** > **Call restrictions**.
- 2 Enter your security code, and select **OK** > **Restrict outgoing calls** or **Restrict incoming calls**.
- 3 Scroll to **Select** and press **Select** to choose from your list of call restrictions.

If you have not added any restrictions, your only option will be **All calls**.

- 4 Scroll to the number you want to *deactivate* and press **Unmark** > **Done** > **Yes**.

The restriction is turned off.

# 13 Personal digital assistant

Your phone features a personal digital assistant which includes a calendar, to-do list, a calculator, currency converter, and a stopwatch. Each of these features can help you organize your everyday life.

## • CALENDAR

The calendar keeps track of notes, calls, meetings, and birthdays. It can also sound an alarm when it is time for you to make a call, go to a meeting, or wake up.

To get to the calendar feature, select **Organizer > Calendar**, or press and hold the right arrow on the **Scroll** key when at the start screen.



**Note:** Your phone must be on to use this function. Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

## Options in day view

### VIEW DAY

This option allows you to view notes added to a specific day.

### MAKE A NOTE

You can use predictive text when writing a note. If it is not already active, choose it from the **Options** menu. For more information, see "Turn on text input" on page 29.

- 1 To make a note for a specific date, select the date and **Options > Make a note > Meeting, Call, Birthday, Memo, or Reminder**.
- 2 The maximum length of a calendar note is 256 characters.
- 3 Press **Options > Save** to save your note.
- 4 Follow the prompts for the type of note you have selected. Press **Options** and select an item from the list, or press **OK** where appropriate, to complete your note:

**Meeting**—Enter a subject, location, and start time.

**Call**—Enter the phone number, name, time, and alarm option.

**Birthday**—Enter the person's name, year of birth, and alarm option.  
The note displays the person's age.

**Memo**—Enter a subject, end date, and alarm option.

**Reminder**—Enter the reminder, and alarm option

## GO TO DATE

To go to a specific date, enter the date and press **OK**. The month appears and the date you entered is highlighted.

## SETTINGS

- The **Settings** option allows you to set the date, time, date format, date separator, time format and the week starts format for the calendar.
- The **Auto Delete** option allows you to set the phone to automatically delete old notes after a certain period of time. However, repeat notes such as birthday or anniversary notes will not be deleted.

## GO TO TO-DO LIST

This option allows you to go to the to-do list from the calendar, where you can save a task to a specified day.

## SEND NOTE

Send a note directly from your calendar to another phone.

While viewing the note, select **Options > Send note > Via infrared, Via calendar, or Via text message**.

If you select **Via infrared**, the phone begins sending the note immediately.

If you select **Via calendar** or **Via text message**, enter the phone number, and press **OK**.

## • TO-DO LIST

Use this feature to create a to-do list and prioritize to-do items.

### ADDING A TASK

- 1 From the menu, select **Organizer > To-do list > Options > Add**.

- Enter the subject of the **To-do list** and select **Options > Save**.
- Select the desired priority (**High, Medium, or Low**).  
You can change the priority later when viewing the note by selecting **Options > Edit priority**.

### VIEW TASKS

Once in the **To-do list**, scroll to an item and select **Options > View** to view its details.

From the **Options** menu, you can view, add, delete, or edit a task. You can also edit the priority of a task, save a task to your calendar, turn predictive text (**Dictionary**) on/off, or send your task as text, using SMS or infrared.

## • THE CALCULATOR

The calculator adds, subtracts, multiplies, divides, and calculates exchange rates.

- From the menu, select **Extras > Calculator**.
- Enter the first number.  
Press the **Clear** key to erase any mistakes.
- Based on the type of calculation that you need, use one of the following functions:

Function	Action
Enter a decimal	Press <b>#</b> (.)
Add	Press <b>*</b> (+)
Subtract	Press <b>*</b> twice (-)
Multiply	Press <b>*</b> three times (*)
Divide	Press <b>*</b> four times (/)
Square the number	Select <b>Options &gt; Square</b> .
Take the square root	Select <b>Options &gt; Square root</b> .
Change the sign	Select <b>Options &gt; Change sign</b> .

- 4 Enter the second number.
- 5 Repeat steps 3 and 4 as many times as necessary.
- 6 Select **Options > Equals**.



**Note:** This calculator has limited accuracy and is designed for simple calculations.

## • CONVERT CURRENCY

You can use the calculator to first set the exchange rate and then to calculate the exchange value.

### Set the exchange rate

- 1 From the menu, select **Organizer > Calculator > Options > Exchange rate > Foreign units in home units** or **Home units in foreign units**.

The exchange rate box opens, with the number 0.

- 2 Enter the appropriate number and press **OK**.

The number 1 is overwritten by the number you entered. To enter a decimal point, press **#**.

- 3 Press **OK**.

### Calculate currency using the exchange rate

- 1 From the menu, select **Organizer > Calculator**.
- 2 Enter the number of units you want to convert.
- 3 Select **Options > To home** or **To foreign > Select**.

**To home** converts foreign units of currency to home units using the exchange rate you entered.

**To foreign** converts home units of currency to foreign units using the exchange rate you entered.



**Note:** When you change base currency, you must enter the new rates because all previously set exchange rates are reset to 0.

## • BUSINESS CARDS

Your phone can send or receive electronic business cards. A business card may consist of a name, phone number, and text entry. You can save received business cards in your phone book.

### Send a business card

- 1 Find the name in your phone book.
- 2 Select **Details > Options > Send bus. card > Via text message or Via infrared.**
- 3 Enter the phone number or recall it from the phone book, and press **OK.**

### View a received card

When you receive a business card, the phone shows **Business card received.**



**Note:** If you press **Exit** at any time before you save the business card, **Discard business card?** appears. Choose **OK** or **Back.**

- 1 When your phone shows **Business card received**, press **Show.**
- 2 Scroll through the available information.

### Save a viewed card

While viewing the business card, select **Save > OK.**

### Delete a viewed card

While viewing the business card, select **Exit > OK.**

## • STOPWATCH

You can use your stopwatch feature to measure time in hours, minutes and seconds with your phone. This measured time can be saved, viewed, or erased.



**Note:** Using the stopwatch or allowing it to run in the background when using other features increases the demand on battery power and reduces the battery life.

## Measure split time

- 1 From the menu, select **Extras > Stopwatch > Split timing > Start**.
- 2 Take an intermediate time by pressing **Split**.

The clock continues to run and the split time appears below the running time. If you split the time more than once, the new measured time appears at the beginning of the list, and all times are numbered in descending order.

## Measure lap time

The lap time function allows you to measure the amount of time it takes to complete a cycle or lap.

- 1 From the menu, select **Extras > Stopwatch > Lap timing > Start**.  
The running time appears on the display.
- 2 Take a lap time by pressing **Lap**. Pressing **Lap** will stop the running time and cause it to restart from zero. Each lap time will appear below the running time.

The newest measured time will appear at the top of the list of lap times. You can scroll to review previous times.

## Save the time

- 1 While the clock is running, select **Stop > Options > Save**.
- 2 Enter a title for the measurement, and press **OK**.  
If a title is not entered, the time measurement will be used as a title.

## Other options

You can choose the following options when using the stopwatch:

**Split timing**—Allows you to record and split a time sequence

**Lap timing**—Allows you to record multiple lap times

**Continue**—Shows up when the stopwatch was interrupted without pressing **Stop**.

**Show last time**—Allows you to view the last measured time.

**View times**—Allows you to browse the saved times.

**Delete times**—Allows you to delete the saved times. You can delete the saved times one by one or all at once.

If you receive a call when using the stopwatch, the clock continues to run in the background. After ending the call, you can return to the stopwatch menu by taking the following action:

From the menu, select **Extras > Stopwatch > Continue**.



## 14 Prepaid services

With prepaid service, you buy wireless network services in advance. Your phone works the same way it did before with some additional features.

Prepaid service may not be available from your wireless service provider. Contact the service provider for details.



**Note:** When no more charging units or currency units are left, calls may only be possible to the official emergency number programmed into the phone.

### • MANAGE PREPAID SERVICE

After you sign up with your service provider for prepaid service, you need to activate the **Prepaid** menu. This menu appears on your screen only if you have activated the service.

#### ACTIVATE PREPAID

To activate prepaid services, enter the following sequence:

**\* # 7 7 6 6 #**

#### DEACTIVATE PREPAID

To deactivate prepaid services, enter the following sequence:

**\* # 7 7 6 3 3 #**

#### USE THE MENU

- 1 To use the **Prepaid** menu, select **Menu > Prepaid**.
- 2 Scroll through the prepaid options.

### • SAVE YOUR ACCESS NUMBERS

You can check your prepaid balance and add money when the balance runs low. To do that, you first need to save the correct access numbers in your phone. Contact your service provider for the access numbers.

- 1 From the menu, select **Prepaid > Save access phone numbers > Replenish phone number**.

- 2 Enter the access number from your service provider, and press **OK**.
- 3 Scroll to **Balance phone number**, enter the balance number from your service provider, and press **OK**.

**Saved** appears to confirm each entry.

## • ADD MONEY TO YOUR ACCOUNT

To add money, you must first have saved the correct access number in your phone. (See the previous section for instructions.)

- 1 From the menu, select **Prepaid > Add money to account**.
- 2 At **Card number**, enter your prepaid card number, and press **OK**.
- 3 When you see **Listen for prompt then press OK**, press **OK**.

When the addition to your account is complete, a voice message gives you the new balance.

- 4 When you see **Wait for prompt, then press End**, press the **End** key.

## • CHECK YOUR PREPAID BALANCE

You can check the balance remaining in your prepaid account, free of charge. Contact your service provider for the toll-free access number used to check the balance.

To check the balance, select **Prepaid > Check account balance**. The phone calls your service provider, and a voice message tells you your balance.

# 15 Network services

You can subscribe to various network services whose availability depends on your service provider. Your phone supports the network services listed here. These services are not available from all providers or in all areas.

- Voice privacy
- Call waiting
- Call forwarding
- Send my caller identity

**Feature code**—When you subscribe to any of these services, your service provider gives you a *feature code* that activates each service. Deactivation codes are used to deactivate each service. After you store the appropriate code, your phone sends the code to the network to verify that you are using the correct feature code.

**Menus for network features**—Menus for the services described here appear on your phone only after you have stored the appropriate feature code. You can use these menus to activate and deactivate the network services.

**Voice privacy**—The voice privacy feature does not require you to store a feature code before using it.

**More than one number?**—If your phone has more than one phone number assigned to it, stored feature codes apply only to the primary phone number.

## • SEARCH FOR A NETWORK

Your phone may not show the options described here. For information, contact your service provider.

From the menu, select **Settings > Network services > System selection**.

You can choose from the following network options:

**Automatic**—Your phone automatically searches for available networks and chooses the appropriate one. Every time you turn on your phone, it resets to **Automatic**.

**Manual**—The phone searches for networks and then shows a list of the ones that are available. If an available network is found, the word **Available** appears on the screen followed by the name of the network. To choose the network listed, press **OK**.

**New search**—Your phone begins a new search for both private and residential systems. When it finds the best system available, the phone shows the system name.

If the phone does not find another system, the question **Perform an extended search?** will appear. Press **OK** if you wish to continue searching.



**Note:** If you have two phone numbers, you can use the **Manual** and **New search** options only with your primary phone number.

## • ROAMING

Using your phone outside its home area is *roaming*. Calls made or received while you are roaming may cost more than calls made in your home area. Check with your service provider for details.

- When roaming, the phone may show the word **ROAM** on the screen, depending on how roaming works with your phone.
- When not roaming, the phone shows the word **HOME** or the name of your service provider.
- When you are roaming in some systems outside your home area, the system in which you are traveling (the host system) may not recognize your phone. You may not be able to place a call.

## 16 Text messages

You can use your phone to send and receive short text messages and e-mail if your service provider offers the message feature and if you subscribe to the service. Both services are network dependent features, so you must consult your service provider.

**Message recipients:** The phone to which you send a text message must support text messages. It may not be possible to send an SMS text message to someone's phone who has an account with a different service provider or a phone with a different protocol, but you can send and receive e-mail messages.


**Message length:** The maximum length of a text message is 160 characters. Your phone has space for several text messages, depending on the length of each message. The maximum length of a text message depends on the capabilities of the network from which the message originated.

When writing text messages, predictive text for fast text entry. For details, see "Predictive text" on page 28.

### • FOLDERS

Your phone has four folders for managing text messages.

**Inbox**—The inbox stores messages you receive. Messages remain in the inbox until you delete them or save them in the archive folder.


**Sent items**—The sent items folder stores messages you have written, sent, edited and forwarded. The sent icon appears next to the message .

**Archive**—The archive folder stores messages you want to save.

**Templates**—The templates folder stores message templates you edit and create. A template is like a form letter—a message you can use many times.

## • WRITE AND SEND A MESSAGE

- 1 From the menu, select **Messages > Create message**, or press and hold the left arrow on the **Scroll** key when at the start screen.
- 2 Enter a message of up to 160 characters.  
A counter in the upper right corner of the screen shows the number of characters remaining.
- 3 When you have finished writing, select **Options > Send**.
- 4 Enter or retrieve the recipient's phone number, and press **OK**.

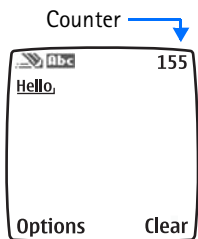

If you need to exit while writing the message, press the **End** key at any time. Later, return to the write message screen to finish writing the message. If you turn off the phone without saving the message, the message will be lost.



**Note:** When sending messages, your device may display the words **Message Sent**. This is an indication that the message has been sent by your device to the message center number programmed into your device. This is not an indication that the message has been received at the intended destination. For more details about messaging services, check with your service provider.

## • OPTIONS

**Send**—Sends the message.

**Settings**—Allows you to choose options for the message:

**Callback no.**, **Read receipt**, and **Urgent**. (Depending on your service provider, **Read receipt** may not be available.)

**Save**—Saves the message.

**Clear text**—Clears the message screen.

**Exit editor**—Takes you back to the **Write message** screen.

**Insert contact**—Lets you insert a name from the phone book.

**Insert number**—Lets you insert a number from the phone book.

**Use template**—Lets you insert a template.

**Insert picture**—Lets you attach a picture to a text message.

**Insert word**—Lets you insert a word that is not stored in the dictionary.

**Insert symbol**—Lets you insert a symbol from the symbols list.


**Predictive text**—Activates or deactivates predictive text.

## • RESEND A MESSAGE

You can resend a message from the sent items folder.

- 1 Select the message you want to resend.
- 2 Select **Options > Send**.
- 3 Enter or find the number to which you want to send the message, and press **OK**.

## • RECEIVE A MESSAGE

When you receive a text message, the phone plays a message alert tone, and the text message icon  appears, along with one of the following messages:

**Message received**—You have an unread message or page. If you have more than one message or page, the appropriate number is listed before this message.

**New emergency message**—An emergency message or page was sent by someone using the service provider. Emergency messages are sent only in situations where life or property are in immediate danger. Emergency messages are listed first and override all other messages.

**Urgent**—The message has a high priority. These messages are indicated by an exclamation point (!).

## • READ A MESSAGE

- 1 Press **Show**.

If only one message has been received, the message is displayed.  
If more than one message has been received, this action takes you to the **Inbox**, where the new message is highlighted.

- 2 Press **Select** to read the message.
- 3 Press **Options** for a list of choices:

**Delete**—Deletes the current message.

**Reply**—Provides a screen where you can write a reply.

**Chat**—Allows you to start a chat session.

**Use number**—Calls the person who sent you the text message, if their phone number is included in the message. You can also press the **Talk** key while the message is open to dial the number.

If more than one number is on the screen, the numbers appear in a list. Scroll to the phone number you want to call and press the **Talk** key.

**Forward**—Forwards the message to another person. That person must have the appropriate message service.

**Edit**—Allows you to edit the message.

**Save**—Saves the message in the archive folder.

**Rename**—Allows you to rename the message.

- 4 Press **Select** when the option you want is highlighted.

In your inbox, text messages are shown in the order in which they were received unless one is an emergency message. An emergency message overrides any other message and appears first.

## • SAVE A MESSAGE

When you send or receive a text message, you can save it in the archive folder. Messages can be saved from the inbox and the sent items folders.

- 1 Highlight the message you wish to save and press **Select**.
- 2 Select **Options > Save**.




## • CUSTOMIZE SETTINGS

From the menu, select **Messages > Message settings > Sending profile** or **Font size**.

**Sending profile**—Select **Sending profile** to view and access the features you can change in order to customize the default style of the messages you send from your phone.

**Font size**—Choose between small and large fonts to customize your view of messages which you will read or edit.

## • MEMORY FULL

When the message memory is full, one or more messages of the lowest priority are automatically deleted. If memory is still full after deleting messages, your phone shows **No space: message waiting**. The  icon blinks. Clear the notification by pressing **OK**.

You may need to manually delete messages from your folders to create space to receive new messages.

## • DELETE MESSAGES

You can delete a message individually or delete the contents of an entire folder at once. You also have the option of erasing all read messages from all folders at the same time.

### Delete a message

- 1 While reading a message, press **Options**.
- 2 Scroll to **Delete**, and press **Select**.

Your phone asks you to confirm that you want to delete the message.

- 3 Press **OK**.

### Delete messages from folders

- 1 From the menu, select **Messages > Delete messages > All read, Inbox, Sent items, or Archive**.

- 2 Enter your security code and press **OK**.

All messages in that folder will be deleted. If you choose **All read**, every message you have read will be deleted simultaneously from the inbox, sent items and archive folders.

## • REPLY TO A MESSAGE

- 1 After reading a message, select **Options > Reply > Via text message** or **Via e-mail**.
- 2 Edit your reply.
- 3 Select **Options > Send**.  
The phone shows the return number.
- 4 Edit the number if needed, and press **OK**.

## • FORWARD A MESSAGE

- 1 While reading a message in the **Inbox**, select **Options > Forward > Via text message** or **Via e-mail**.
- 2 Select **Options** or edit the message and select **Options > Send**.
- 3 Enter or retrieve the recipient's phone number, and press **OK**.



**Note:** When sending messages using SMS, your phone may display **Message Sent**. This is an indication that the message has been sent by your phone to the message center number programmed into your phone. This is not an indication that the message has been received at the intended destination. For more details about SMS services, check with your service provider.

## • E-MAIL MESSAGES

You can use your phone to send and receive e-mail messages. The e-mail feature is not available from all service providers.

## Send a message

- 1 Select **Menu** > **Messages** > **Create SMS e-mail**.
- 2 Enter the e-mail address, or press **Find**.
- 3 If you press **Find**, scroll to the name you want and press **OK**.  
The address appears in the recipient address box.
- 4 Press **OK**.
- 5 Enter a subject and press **OK**.
- 6 When the message screen appears, enter your message.  
The maximum number of characters for message length varies; check with your service provider for details.
- 7 When you have finished the message, select **Options** > **Send e-mail**.  
A status message tells you the mail is being sent.



**Note:** If your phone asks for an e-mail gateway number, contact your service provider.

## Reply to or forward a message

- 1 From the menu, select **Menu** > **Messages** > **Inbox**. Select the message you received and press **Select**.
- 2 Select **Options** > **Reply** or **Forward** > **Via e-mail**.
- 3 Choose a reply option and press **Select**.  
The **E-mail** address box appears with the sender's e-mail address.
- 4 Press **OK**.
- 5 Enter a subject and press **OK**.
- 6 When the message screen appears, enter your message.  
The maximum number of characters for message length varies; check with your service provider for details.
- 7 When you have finished the message, select **Options** > **Send e-mail**.



**Note:** A status message tells you the mail is being sent. If your phone asks for an e-mail gateway number, contact your service provider.

## Receive an e-mail message

To receive e-mail messages, you need the special e-mail address provided by your wireless service provider. You can give this address to people who need to reach you by e-mail. They can then send e-mail messages to you from their computers or other e-mail devices.

Messages sent to you by e-mail arrive as regular text messages. You can use all the options described earlier to save, reply to, or forward a message.

See your service provider to get the e-mail address for your phone and for more information on using e-mail on the service.

## • TEMPLATES

You can view and edit the preset messages, or templates, that are available for writing a message. Templates can be used when you write, reply to, or edit a message.

1 From the menu, select **Messages > Templates**.

2 Select the template you want and press **Select**.

3 Press **Options** to view the menu list:

**Send**—Sends the template as a text message.

**Edit**—Allows you to edit the template before sending.

**Rename**—Allows you to rename the template.

**Use number**—Lets you use any number included in the message.

Insert a template when writing a new message:

1 From the menu, select **Messages > Create message > Options > Use template**.

2 Scroll to the template you want and press **Select**.

3 Continue as you would when sending a new text message. If you wish to exit without using a template, either choose the clear screen option or press the **End** key.



**Note:** You can also insert a template when replying to or editing a message.

## • PICTURE MESSAGES

You can send picture messages with your phone. There are several images included in your phone and space for five additional pictures.



**Note:** This function can be used only if it is supported by your network operator or service provider. Only phones that offer picture message features can receive and display picture messages.

### Send

- 1 From the menu, select **Messages > Create message**, write your text message, and select **Options > Insert picture**.
- 2 Scroll to the picture you want to send, press **View**.
- 3 Select **Insert > Options**.

#### OR

To choose a different picture, press **Back**, scroll to another picture, and press **View**.

- 4 Select **Preview** to see the message and picture, or select **Send**.
- 5 Enter the phone number to which you want to send the picture message and press **OK**.



**Note:** The phone number you choose must be able to receive picture messages.

### Receive

- 1 When your phone displays **Message received**, press **Show**.
- 2 If the picture has a text message with it, scroll up or down to see the entire message.

### Options

**Delete**—Deletes the picture you select.

**Reply**—Lets you reply as a text message or e-mail.

**Chat**—Starts a chat session with the person who sent the message.

**Use number**—Lets you use any phone number included in the message.

**Forward**—Sends the message to a friend.

**Edit text**—Edits the message if needed.

**Save**—Saves the message to your archive.

**Rename**—Creates a new name for the message.

## • CHAT

You can have a direct conversation with another person using the chat feature. Chat has distinct advantages over text messaging, such as faster send and reply, as well as direct, uninterrupted communication with your chat partner. To use chat you must subscribe to text messaging, which is network dependent. Contact your service provider for more information.

### Start a session

- 1 From the menu, select **Messages > Chat**.
- 2 Enter the other party's phone number or retrieve it from the phone book and press **OK**.
- 3 At **My chat name**, enter a name for the chat session (up to five characters) and press **OK**.
- 4 Write your chat message, select **Options > Send**.  
The reply from the other party is shown above your original message.
- 5 Press **OK** to clear the screen and reply to the message.
- 6 To view the previous message or edit your chat name, select **Options > Chat history** or **Chat name**.



**Note:** You can start a chat session when replying to a regular text message. After reading the message, select **Options > Chat**.

### Use predictive text

When you are in a chat session, you can use the phone dictionary to help speed up text entry.

- 1 From the menu, select **Messages > Chat > Options > Predictive text**.
- 2 Select the language you want.

## Chat history

You can view messages sent and received during the active chat session.

From the message screen, select **Options > Chat history**.

## Change chat name

- 1 From the message screen, select **Options > Chat name**.
- 2 Enter a new nickname.

## End chat session

From the message screen select **Options > Quit**.



**Warning:** Once you exit your chat session, the messages are deleted automatically. There is no way to save the chat history.

# 17 Special features

This section describes several special features, including Java applications, transmission of business cards, downloading ringing tones and graphics from the Internet, and setting the alarm clock.

## • GALLERY

You can save pictures and ringing tones to folders in the gallery, or create folders of your own and save them there. You can download images and tones via WAP.



**Note:** This feature uses shared memory. Please see "Shared Memory" on page 3 for more information.

## Open the gallery

From the menu, select **Menu > Gallery**. After a brief pause, the following submenus appear in the display:

**View folders**—Explore the folders in the gallery menu. See "Folders" in the following section for more info.

**Add folder**—Add a folder of your own.

**Delete folder**—Delete a folder you have created.

**Rename folder**—Rename a folder you have created.

**Gallery downloads**—Use the graphic and tone downloads in your phone. The phone tries to connect to the Internet using your WAP browser and the currently active set of gallery downloads. If the connection fails, you may need to activate another set or change the current settings. See "Set up for browsing" on page 112.

## Folders

- 1 At the start screen, select **Gallery > View Folders**.
- 2 Scroll to a folder, such as **Graphics** or **Tones**, and press **Open**.
- 3 Scroll through the list of graphics or tones and press **Options**.



- 4 Press select to activate one of the following options or enter its submenu:

**Open**—Open the selected file.

**Rename**—Rename the selected file.

**Set as wallpaper** or **Set as ring tone**—Set the graphic as wallpaper. In the **Tones** folder, this option is **Set as ring tone**; the tone is applied to the profile in use.

**Details**—View details of the file, such as the name, time and date the file was created.

**Sort**—Sort the files according to name, date, format, or size.



**Note:** Copyright protections may prevent some images, ringing tones, and other content from being copied, modified, transferred or forwarded.

## • APPLICATIONS

With the **Applications** menu you can manage the Java applications installed on your phone. Your phone includes some Java applications specially designed for this phone. Various service providers offer other applications using WAP services. Check with your service provider for more information.

- 1 From the menu, select **Applications > Select application**.
- 2 Scroll to an application, and select **Options > Open**.  
If the selection is a single application it launches. Otherwise, a list of applications in the selected application set appears.
- 3 To launch a single application within the set, scroll to the desired application, and select **Options > Open**.

### Options

**Open**—Starts the application.

**Delete**—Delete the application or application set from your phone.

**Web access**—Provides options for restricting network access:

- **Ask first** (ask for net access)

- **Allowed** (allow net access)
- **Not allowed** (refuse net access)

**Service settings**—Choose application or default settings.

**Update version**—Check if a new version of the application is available for download.

**Details**—Shows additional information about the application.

## Downloads

You can download new Java applications in different ways.

- 1 From the menu, select **Applications > App. downloads**.
- 2 Scroll to the appropriate bookmark that contains the application you wish to download, and press **Select** to connect to the WAP page.

See “Internet service” on page 111 for information on browsing WAP pages.

OR

Select **More bookmarks** to access the list of any bookmarks saved in your **Services** menu.



**Note:** This feature is network-dependent. Contact your wireless provider for more information.

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed are stored in the cache. To empty the cache, select **Services > Clear the cache**.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions for security or content as you would with any Internet site.

The security icon does not indicate that the data transmission between the gateway and the content server (or place where the requested resource is stored) is secure. The service provider secures the data transmission between the gateway and the content server.

Only install software from sources that offer adequate protection against harmful software.

## Game downloads

- 1 From the menu, select **Games > Game downloads**.
- 2 Scroll to the appropriate bookmark that contains the application you wish to download and press **Select** to connect to the WAP page.  
See "Internet service" on page 111 for information on browsing WAP pages.

OR

Select **More bookmarks** to access the list of any bookmarks saved in your **Services** menu.



**Note:** This feature is network-dependent. Contact your wireless provider for more information.

If the connection fails, enter the **Services** menu and activate another set of service settings. See "Options available during connection" on page 113 for more information on browser settings.

## Memory

From the menu, select **Applications > Memory** to view the amount of memory available.

## • RINGING TONES

You can download additional ringing tones to the gallery. Ringing tones can be ringing sounds or short tunes. For details about this network service, contact your wireless service provider, who can also point you to Web sites that offer these tones.

### Receive a tone

If you have this service and your phone receives a downloaded ringing tone, your phone shows **Ringling tone received**.

Select **Options > Playback, Save tone, or Discard**.

It may not be possible to play the tone until the call is disconnected.

## Save a tone

- 1 From the options menu, select **Save tone**.
- 2 Enter a name for the tone, and press **OK**.
- 3 Find a folder location for the tone, and press **Select**.

## Play tones

- 1 Locate a tone from one of your folders.
- 2 Select **Options > Open**.
- 3 To end the tone, press **Stop**.

## Discard tones

You can discard a downloaded ringing tone before you save it by selecting **Back > OK**.

OR

To discard a downloaded tone from a folder, select **Options > Delete > Yes**.

## • ALARM CLOCK

The alarm clock is based on the time settings in the phone clock. You can set the alarm clock to ring at any time, even if your phone is turned off.

- The alarm clock sounds one quiet beep, and several quick, quiet beeps. These beeps continue and increase in volume until answered.
- If you have selected the **Silent** or **Beep once** ringing tone, the alarm clock quietly beeps once. The best profile to use with the alarm clock is **Normal** or **Outdoor**, unless these profiles have been modified from their original settings.



**Note:** If the alarm time is reached while the device is switched off, the device switches itself on and starts sounding the alarm tone. If you press **Stop**, the device asks whether you want to activate the device for calls. Press **No** to switch off the device or **Yes** to make and receive calls. Do not press **Yes** when wireless phone use may cause interference or danger.

## Set the alarm


1 From the menu, select **Alarm clock**.

2 Enter the time for the alarm and press **OK**.

Use the *hh:mm* format (03:40, for example). The alarm clock replaces any existing numbers with the new time.

3 Select **am** or **pm** > **OK**.

The **am** and **pm** options appear only if you have chosen the am/pm format for the clock.

**Alarm on** appears, and the alarm clock icon  appears on the start screen.

## Turn off the alarm

When the alarm clock sounds:

- Press **Stop** to turn it off.
- Press **Snooze** to set the alarm to go off again in 10 minutes. **Snoozing** appears on the screen. If you wish to cancel the snooze, press **Stop**.

If you let the alarm ring for 1 minute or more without pressing a key, it stops sounding, waits 10 minutes, and then sounds again. This continues until you press **Stop**.

## Deactivate the alarm

From the menu, select **Alarm clock** > **Off**.

# 18 Connectivity

The Infrared port on your phone allows you to use your phone to connect to other IR-equipped phones. With this feature you can transfer business cards and calendar notes.



**Note:** You can also use your phone to connect to any IR-equipped PC. For more information on connectivity, refer to the PC Connectivity Guide. The PC Connectivity Guide and all related software can be downloaded from the U.S. Mobile Phone products section of [www.nokia.com/us](http://www.nokia.com/us). Check for periodic updates on connectivity options.

## • INFRARED

You can set up the phone to receive data through its IR port. To use an IR connection, transmission and reception must be to or from an infrared compatible phone or device. You can send or receive data to or from a compatible phone or data device (such as a computer) using the IR port of your phone.




**Important:** Do not point the IR (infrared) beam at anyone's eye or allow it to interfere with other IR devices. This device is a class 1 laser product.

### SEND AND RECEIVE DATA

Ensure that the IR ports of the sending and receiving devices are pointing at each other and that there are no obstructions between the devices. The preferable distance between the two devices in an infrared connection is from 3 inches to 3 feet.



From the start screen, select **Menu > Infrared** to activate IR in your phone.

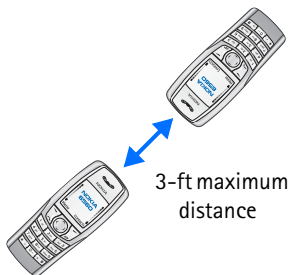Activate IR in the receiving device as well.



If data transfer is not started within two minutes after the activation of the IR port, the connection is cancelled and has to be started again.

### CONNECTION INDICATOR

- When  is shown continuously, the IR connection is activated and your phone is ready to send or receive data using its IR port.
- When  blinks, your phone is trying to connect to the other device or a connection has been lost.

## Data communication applications

For information on using a data communication application, refer to the documentation provided with the application.

Start using the data communications application on the computer.



**Note:** Making or answering phone calls during a computer connection is not recommended as it might disrupt the operation.

For better performance during data calls, place the phone on a stationary surface. Do not move the phone by holding it in your hand.

## 19 Internet service

Your phone has a built-in browser you may use to connect to selected services on the Internet. You may view weather reports, check news or flight times, view financial information, and much more.



You may also save the address of an Internet site as a bookmark, much the same way you bookmark a Web page on your personal computer.



**Note:** To use the browser, you may need to subscribe to additional services. Also, your service provider may need to configure your phone for browsing after you have subscribed. This is a network dependent feature. Contact your service provider for more information.

### Service provider's role

Because wireless Internet content is designed to be viewed from your phone, your wireless service provider now becomes your wireless Internet service provider as well.

It is likely that your service provider has created a home page and set up your browser to go to this page when you connect to the Internet. Once at your service provider's home page, you will find links to a number of other sites that offer wireless access.

The information or services you have accessed are stored in the cache of your phone. A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. To empty the cache, select **Services > Clear the cache**.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions for security or content as you would with any Internet site.





**Note:** The security icon does not indicate that the data transmission between the gateway and the content server (or place where the requested resource is stored) is secure. The service provider secures the data transmission between the gateway and the content server.

Only install software from sources that offer adequate protection against harmful software.

## • SET UP FOR BROWSING

You should not need to do anything to set up your phone for browsing. Your service provider usually modifies the appropriate settings when you subscribe to the feature. Contact your service provider if you have problems using the browser.

## • SIGN ON TO THE INTERNET

Use the **Services** menu to connect to the Internet, if you have a wireless internet service provider.

- 1 From the menu, select **Services > Home**, or press and hold the **0** key. The word **Home** may be replaced with the name of the internet setting. If an error message appears, the phone may not be set up for browsing. Contact your service provider to make sure that your phone is configured properly.
- 2 To sign off the internet, press the **End** key, or select **Options > Quit**. The connection may drop automatically after a period of inactivity.

## • BROWSING METHODS

The browser uses that same key and text functionality as other phone features. Use the four-way **Scroll** key to scroll through options and links. To quickly activate a link, press the **Talk** key.

## • BROWSER OPTIONS (SERVICES MENU)

The services menu gives you several options both before you browse and while you are browsing. Options will change depending on your activity.

## Options available without connection

Some service providers may have customized the options on the services menu. Contact your service provider for more information about the options they provide:

**Home**—Starts the browser and takes you to your service provider's home page.

**Bookmarks**—Shows a list of all saved bookmarks

**Settings**—Provides options for changing connection settings, appearance settings, and security settings.

**Go to address**—Accepts an address you enter.

**Clear the cache**—Empties the browser's temporary memory and frees up space.

## Options available during connection

While you are connected to the Internet, the phone browser may provide some of the additional options described in the following list:

**Home**—Takes you back to the service provider's home page. The word **Home** may be replaced with the name of the internet setting.

**Bookmarks**—Shows a list of all saved bookmarks.

**Open link**—Activates the link you selected.

**Back**—The previous screen appears.

**Add bookmark**—Adds a web site address for quick reference.

**Go to address**—Accepts an address you enter.

**Appearance settings**—Allows you to choose page appearance.

**Cookie settings**—Gives you the option to allow or decline cookies.

**Reload**—Refreshes the page.

**Clear the cache**—Empties the browser's temporary memory.

**Security info**—Shows security items such as owner, server, issuer, etc.

**Quit**—Exits the current session and returns to the start screen.

Developers of wireless Internet sites may add options to the browser menu that are specific to their Web sites. These options are often links to other areas within the site. As in any other menu, scroll to the link you want and press **Select**.

## • EDIT A DATA ENTRY FIELD

When you need to enter information, follow these steps:

- 1 Scroll to highlight the data entry field, select **Options > Edit**.
- 2 Use the keypad to enter the text in the data entry field (for example, **Miami**), and select **Options > OK**.
- 3 Scroll to the link you want (for example, **Get forecast?**), and select **Options > Open link**.

## • BOOKMARKS

You can save addresses for your favorite sites as bookmarks. A **bookmark** helps you find a site again, just as a slip of paper in a book helps you find a page.

- If a wireless Internet site has a title, it will appear in the bookmark list (for example, Yahoo! News, ebay on WAP, Mapquest).
- If the site has no title, the site address will appear in the list of bookmarks (for example, <http://www.yahoo.com/news.wml>).

### SAVE AN ADDRESS


- 1 Navigate to the site you want to bookmark and press **Options**.
- 2 Select **Add Bookmark**.

### ENTER A BOOKMARK MANUALLY

- 1 From the menu, select **Services > Bookmarks > Options > New bookmark**.
- 2 Enter the site address (for example, **my.yahoo.com**) and press **OK**.  
You do not need to enter **http://**. They are added automatically.
- 3 Enter a name for the new bookmark and press **OK**.

### RETURN TO A BOOKMARKED SITE

- 1 From the menu, select **Services > Bookmarks**.
- 2 Scroll to the bookmark you want, and select **Options > Go to**.  
If you are not currently browsing, the phone will connect to the Internet.

-  **Note:** Only install software from sources that offer adequate protection against viruses and other harmful software.


## • EXAMPLES OF WIRELESS INTERNET SITES

The following illustrations show elements you may find on a wireless Internet site. These are examples only.




- 1) **Header line.** Shows the current Internet site.
- 2) **Active link.** Appears as a highlighted word.
- 3) **Inactive link.** Appears as an underlined word.

Scroll up or down through the list of links.

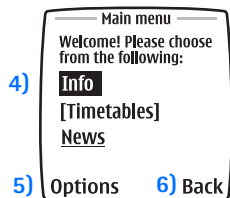

- 4) **Selection list.** Brackets [ ] appear when you have the option to enter information.
- 5) **Options.** Select **Options** to go to the site menu and/or browser page.
- 6) **Back.** Select **Back** to return to the previous page.

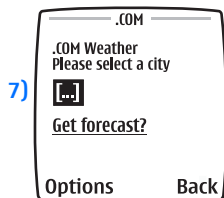

- 7) **Data entry field.** Brackets [ ] that enclose dots indicate when you need to enter information. In this example, you can enter your zip code to receive the local weather forecast.

## 20 Games

Not only can you use your phone for communication, but also for some serious fun. You can choose from any of the four games listed below.

Backgammon

Triple Pop

Bounce

Chess Puzzle

### Start a new game

- 1 Select **Games > Select game**.
- 2 Scroll to the desired game, and select **Options > Open**.

Use the option **Instructions** to learn how to play the game. With the option **Level** you can choose the difficulty level of the game.

### Settings

Go to game settings by selecting **Games > Settings**. Here you can customize a game by activating or deactivating game sounds, game lights and shakes.

### Downloads

The Nokia 6560 phone has the capability to download Java games from the Internet. This is a network dependent feature. Please check with your service provider for details.

Please visit Nokia games services on the Internet for more hints and tips:  
<http://www.nokia.com/us>

### Memory

From the menus, select **Games > Memory** to view the amount of memory available.

## 21 Enhancements



Check the model number of any charger before use with this device. This device is intended for use when supplied with power from ACP-7, ACP-8, and ACP-12.



**Warning:** Use only batteries, chargers and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous. For availability of approved enhancements, please check with your dealer.

Your device and its enhancements may contain small parts. Keep them out of reach of small children.

A few practical rules about accessories and enhancements:

- Keep all accessories and enhancements out of the reach of small children.
- When you disconnect the power cord of any accessory or enhancement, grasp and pull the plug, not the cord.
- Check regularly that enhancements installed in a vehicle are mounted and are operating properly.
- Installation of any complex car enhancements must be made by qualified personnel only.

### Power

- Standard 780-mAh Li-Ion Battery (BLD-3)
- Standard Travel Charger (ACP-7)
- Rapid Travel Charger (ACP-8)
- Travel Charger (ACP-12)
- Battery Charging Stand (DDC-1)

### Audio

- Earbud Headset (HS-5)
- Boom Headset (HDB-4)
- Retractable Headset (HS-10)
- FM Radio Headset (HS-2R)
- Accessibility Loopset (LPS-4)
- Phone Adapter (HDA-10)

### Car

- Car Kit (CK-8)
- Mobile Holder (MBC-15S)
- Mobile Charger (LCH-12)
- Headrest Handsfree (BHF-1)

### Covers and carrying

- Xpress-on Color Covers
- Carry Cases

## 22 Reference Information

### • BATTERY INFORMATION

#### Charging and discharging

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, buy a new battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger. Overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. Temperature extremes can affect the ability of your battery to charge.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

## • CARE AND MAINTENANCE

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage and enjoy your device for many years.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.



## • ADDITIONAL SAFETY INFORMATION

### Operating environment

Remember to follow any special regulations in force in any area and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. To maintain compliance with radio frequency exposure guidelines only use accessories approved by Nokia for use with this device. When the device is on and being worn on the body, always use an approved carrying case.

### Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

### PACEMAKERS

Pacemaker manufacturers recommend that a minimum separation of 6 in. (15.3 cm) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. To minimize the potential for interference, persons with pacemakers should:

- Always keep the device more than 6 in. (15.3 cm) from their pacemaker when the device is switched on
- Not carry the device in a breast pocket
- Hold the device to the ear opposite the pacemaker

If you have any reason to suspect that interference is taking place, switch off your device immediately.

## HEARING AID

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

## Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, air bag systems. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that an air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

## Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, chemical plants or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical

transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders.

FCC regulations prohibit using your wireless device while in the air. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, legal action, or both.

## EMERGENCY CALLS



**Important:** Wireless phones, including this phone, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless phone for essential communications like medical emergencies.

To make an emergency call:

- 1 If the phone is not on, switch it on. Check for adequate signal strength.
- 2 Press **End** key as many times as needed to clear the display and ready the phone for calls.
- 3 Key in the official emergency number for your present location. Emergency numbers vary by location.
- 4 Press the **Send** key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide or your service provider. When making an emergency call, give all the necessary information as accurately as possible. Your wireless phone may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

## CERTIFICATION INFORMATION (SAR)

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.\* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (for example, at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is 1.14 W/kg, and when worn on the body, as described in this user guide, is 1.02 W/kg. (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID GMLRH-25.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with a carry case, belt clip, or holder that contains no metal and that positions the handset a minimum of 5/8-inch (1.5 cm) from the body. Use of other carry cases, belt clips, or holders may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 5/8-inch (1.5 cm) from your body when the phone is switched on.

\*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at [www.nokia.com](http://www.nokia.com).

## • BATTERY

This section provides information about the phone battery. Be aware that the information in this section is subject to change. Consult your service provider for more information.



**Note:** The charging times listed in the next section are approximate.

### Charging times

The following table shows battery charging times for the specified charger:

Battery Option	ACP-7 Charger	ACP-12 Charger
BLD-3 Li-Ion 780 mAh	2 h, 45 min	1 h, 35 min

### Standby and talk times

The times shown in the following table are estimates only and represent a range for either standby or talk times (not a combination of both).



**Warning:** Battery talk and standby times are estimates only and depend on signal strength, network conditions, features used, battery age and condition (including the effect of charging habits), temperatures to which battery is exposed, use in digital mode, and many other factors. Please note that the amount of time a phone is used for calls will affect its standby time. Likewise, the amount of time that the phone is turned on and in standby mode will affect its talk time.

The following table shows talk-time and standby times in both digital and analog networks:

Battery option	Digital talk time	Analog talk-time	Standby time	
			Digital	Analog
BLD-3 Li-Ion 780 mAh	up to 4 hours	up to 115 min	up to 11 days	up to 47 hours

## • TECHNICAL INFORMATION

Weight	88.36 g (3.11 oz) with BLD-3 780-mAh Li-Ion Battery
Size	105.8 x 44 x 19.1 mm (hxwxd)
Frequency range	Lowband 824.04–848.97 MHz (TX) 869.04–893.97 MHz (RX) Highband 1850.04–1909.92 MHz (TX) 1930.08–1989.96 MHz (RX)
Transmitter output power	Up to 600 mW
Battery voltage (Nominal)	3.7 V
Operating temperature	-4°F to +104°F (-20°C to +40°C)
Number of channels	832 lowband 1997 highband
Phone numbers	3
Memory locations	Up to 500 contacts, with multiple phone numbers and text entries per contact.

## 23 Nokia One-Year Limited Warranty

Nokia Inc. ("Nokia") warrants that this cellular phone ("Product") is free from defects in material and workmanship that result in Product failure during normal usage, according to the following terms and conditions:

- 1 The limited warranty for the Product extends for ONE (1) year beginning on the date of the purchase of the Product. This one year period is extended by each whole day that the Product is out of your possession for repair under this warranty.
- 2 The limited warranty extends only to the original purchaser ("Consumer") of the Product and is not assignable or transferable to any subsequent purchaser/end-user.
- 3 The limited warranty extends only to Consumers who purchase the Product in the United States of America.
- 4 During the limited warranty period, Nokia will repair, or replace, at Nokia's sole option, any defective parts, or any parts that will not properly operate for their intended use with new or refurbished replacement items if such repair or replacement is needed because of product malfunction or failure during normal usage. No charge will be made to the Consumer for any such parts. Nokia will also pay for the labor charges incurred by Nokia in repairing or replacing the defective parts. The limited warranty does not cover defects in appearance, cosmetic, decorative or structural items, including framing, and any non-operative parts. Nokia's limit of liability under the limited warranty shall be the actual cash value of the Product at the time the Consumer returns the Product for repair, determined by the price paid by the Consumer for the Product less a reasonable amount for usage. Nokia shall not be liable for any other losses or damages. These remedies are the Consumer's exclusive remedies for breach of warranty.



- 5 Upon request from Nokia, the Consumer must prove the date of the original purchase of the Product by a dated bill of sale or dated itemized receipt.
- 6 The Consumer shall bear the cost of shipping the Product to Nokia in Melbourne, Florida. Nokia shall bear the cost of shipping the Product back to the Consumer after the completion of service under this limited warranty.
- 7 The Consumer shall have no coverage or benefits under this limited warranty if any of the following conditions are applicable:
  - a) The Product has been subjected to abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of Nokia, including damage caused by shipping.
  - b) The Product has been damaged from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake or damage from exposure to weather conditions, an Act of God, or battery leakage, theft, blown fuse, or improper use of any electrical source, damage caused by computer or internet viruses, bugs, worms, Trojan Horses, cancelbots or damage caused by the connection to other products not recommended for interconnection by Nokia.
  - c) Nokia was not advised in writing by the Consumer of the alleged defect or malfunction of the Product within fourteen (14) days after the expiration of the applicable limited warranty period.
  - d) The Product serial number plate or the accessory data code has been removed, defaced or altered.
  - e) The defect or damage was caused by the defective function of the cellular system or by inadequate signal reception by the external antenna, or viruses or other software problems introduced into the Product.

- 8** Nokia does not warrant uninterrupted or error-free operation of the Product. If a problem develops during the limited warranty period, the Consumer shall take the following step-by-step procedure:
- a)** The Consumer shall return the Product to the place of purchase for repair or replacement processing.
  - b)** If "a" is not convenient because of distance (more than 50 miles) or for other good cause, the Consumer shall ship the Product prepaid and insured to:  
Nokia Inc., Attn: Repair Department  
795 West Nasa Blvd.  
Melbourne, FL 32901
  - c)** The Consumer shall include a return address, daytime phone number and/or fax number, complete description of the problem, proof of purchase and service agreement (if applicable). Expenses related to removing the Product from an installation are not covered under this limited warranty.
  - d)** The Consumer will be billed for any parts or labor charges not covered by this limited warranty. The Consumer will be responsible for any expenses related to reinstallation of the Product.
  - e)** Nokia will repair the Product under the limited warranty within 30 days after receipt of the Product. If Nokia cannot perform repairs covered under this limited warranty within 30 days, or after a reasonable number of attempts to repair the same defect, Nokia at its option, will provide a replacement Product or refund the purchase price of the Product less a reasonable amount for usage. In some states the Consumer may have the right to a loaner if the repair of the Product takes more than ten (10) days. Please contact the Customer Service Center at Nokia at the telephone number listed at the end of this warranty if you need a loaner and the repair of the Product has taken or is estimated to take more than ten (10) days.

- f) If the Product is returned during the limited warranty period, but the problem with the Product is not covered under the terms and conditions of this limited warranty, the Consumer will be notified and given an estimate of the charges the Consumer must pay to have the Product repaired, with all shipping charges billed to the Consumer. If the estimate is refused, the Product will be returned freight collect. If the Product is returned after the expiration of the limited warranty period, Nokia's normal service policies shall apply and the Consumer will be responsible for all shipping charges.
- 9 You (the Consumer) understand that the product may consist of refurbished equipment that contains used components, some of which have been reprocessed. The used components comply with Product performance and reliability specifications.
- 10 ANY IMPLIED WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR USE, SHALL BE LIMITED TO THE DURATION OF THE FOREGOING LIMITED WRITTEN WARRANTY. OTHERWISE, THE FOREGOING LIMITED WARRANTY IS THE CONSUMER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. NOKIA SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF ANTICIPATED BENEFITS OR PROFITS, LOSS OF SAVINGS OR REVENUE, LOSS OF DATA, PUNITIVE DAMAGES, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF CAPITAL, COST OF ANY SUBSTITUTE EQUIPMENT OR FACILITIES, DOWNTIME, THE CLAIMS OF ANY THIRD PARTIES, INCLUDING CUSTOMERS, AND INJURY TO PROPERTY, RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM BREACH OF THE WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT TORT, OR ANY OTHER LEGAL OR EQUITABLE THEORY, EVEN IF NOKIA KNEW OF THE LIKELIHOOD OF SUCH DAMAGES. NOKIA SHALL NOT BE LIABLE FOR DELAY IN RENDERING SERVICE UNDER THE LIMITED WARRANTY, OR LOSS OF USE DURING THE PERIOD THAT THE PRODUCT IS BEING REPAIRED.

- 11 Some states do not allow limitation of how long an implied warranty lasts, so the one year warranty limitation may not apply to you (the Consumer). Some states do not allow the exclusion or limitation of incidental and consequential damages, so certain of the above limitations or exclusions may not apply to you (the Consumer). This limited warranty gives the Consumer specific legal rights and the Consumer may also have other rights which vary from state to state.
- 12 Nokia neither assumes nor authorizes any authorized service center or any other person or entity to assume for it any other obligation or liability beyond that which is expressly provided for in this limited warranty including the provider or seller of any extended warranty or service agreement.
- 13 This is the entire warranty between Nokia and the Consumer, and supersedes all prior and contemporaneous agreements or understandings, oral or written, relating to the Product, and no representation, promise or condition not contained herein shall modify these terms.
- 14 This limited warranty allocates the risk of failure of the Product between the Consumer and Nokia. The allocation is recognized by the Consumer and is reflected in the purchase price.
- 15 Any action or lawsuit for breach of warranty must be commenced within eighteen (18) months following purchase of the Product.
- 16 Questions concerning this limited warranty may be directed to:  
Nokia Inc.  
Attn: Customer Service  
7725 Woodland Center Blvd., Ste. 150  
Tampa, FL 33614  
Telephone: 1-888-NOKIA-2U (1-888-665-4228)  
Facsimile: (813) 287-6612  
TTY/TDD Users Only: 1-800-24-NOKIA (1-800-246-6542)
- 17 The limited warranty period for Nokia supplied attachments and accessories is specifically defined within their own warranty cards and packaging.

## NOTES

# Appendix A

## Message from the CTIA (Cellular Telecommunications & Internet Association) to all users of mobile phones.

© 2001 Cellular Telecommunications & Internet Association. All Rights Reserved.  
1250 Connecticut Avenue, NW Suite 800, Washington, DC 20036.  
Phone: (202) 785-0081

*Safety is the most important call you will ever make.*

## **A Guide to Safe and Responsible Wireless Phone Use**

Tens of millions of people in the U.S. today take advantage of the unique combination of convenience, safety and value delivered by the wireless telephone. Quite simply, the wireless phone gives people the powerful ability to communicate by voice--almost anywhere, anytime--with the boss, with a client, with the kids, with emergency personnel or even with the police. Each year, Americans make billions of calls from their wireless phones, and the numbers are rapidly growing. But an important responsibility accompanies those benefits, one that every wireless phone user must uphold. When driving a car, driving is your first responsibility. A wireless phone can be an invaluable tool, but good judgment must be exercised at all times while driving a motor vehicle--whether on the phone or not.

The basic lessons are ones we all learned as teenagers. Driving requires alertness, caution and courtesy. It requires a heavy dose of basic common sense--keep your head up, keep your eyes on the road, check your mirrors frequently and watch out for other drivers. It requires obeying all traffic signs and signals and staying within the speed limit. It means using seatbelts and requiring other passengers to do the same.

But with wireless phone use, driving safely means a little more. This brochure is a call to wireless phone users everywhere to make safety their first priority when behind the wheel of a car. Wireless telecommunications is keeping us in touch, simplifying our lives, protecting us in emergencies and providing opportunities to help others in need.

When it comes to the use of wireless phones, *safety is your most important call.*

### **Wireless Phone "Safety Tips"**

Below are safety tips to follow while driving and using a wireless phone which should be easy to remember.

- 1 Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
- 2 When available, use a hands free device. A number of hands free wireless phone enhancements are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
- 3 Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.

- 4 Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
- 5 Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to do" list while driving a car, you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip--dial only a few numbers, check the road and your mirrors, then continue.
- 7 Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix--they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
- 8 Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations--with your phone at your side, help is only three numbers away. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!
- 9 Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
- 10 Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you still can use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

Careless, distracted individuals and people driving irresponsibly represent a hazard to everyone on the road. Since 1984, the Cellular Telecommunications Industry Association and the wireless industry have conducted educational outreach to inform wireless phone users of their responsibilities as safe drivers and good citizens. As we approach a new century, more and more of us will take advantage of the benefits of wireless telephones. And, as we take to the roads, we all have a responsibility to drive safely.



*The wireless industry reminds you to use your phone safely when driving.*

For more information, please call 1-888-901-SAFE.

For updates: <http://www.wow-com.com/consumer/issues/driving/articles.cfm?ID=85>

© 2001 Cellular Telecommunications & Internet Association. All Rights Reserved.  
1250 Connecticut Avenue, NW Suite 800, Washington, DC 20036.  
Phone: (202) 785-0081

# Appendix B

## Message from the FDA (U.S. Food and Drug Administration) to all users of mobile phones.

July 18, 2001 ..... For updates: <http://www.fda.gov/cdrh/phones>

## **Consumer Update on Wireless Phones**

**U.S. Food and Drug Administration**

### **1. Do wireless phones pose a health hazard?**

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

### **2. What is FDA's role concerning the safety of wireless phones?**

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones. FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

### **3. What kinds of phones are the subject of this update?**

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called cell mobile or PCS phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called cordless phones, which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

### **4. What are the results of the research done already?**

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

### **5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?**

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large

numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

## **6. What is FDA doing to find out more about the possible health effects of wireless phone RF?**

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

## **7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?**

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects.

Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

## **8. What has FDA done to measure the radiofrequency energy coming from wireless phones?**

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques, sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

## **9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?**

If there is a risk from these products--and at this point we do not know that there is--it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

## **10. What about children using wireless phones?**

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

## 11. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a accompanied hearing aid at the same time. This standard was approved by the IEEE in 2000. FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

## 12. Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones  
<http://www.fda.gov/cdrh/phones/index.html>
- Federal Communications Commission (FCC) RF Safety Program  
<http://www.fcc.gov/oet/rfsafety>
- International Commission on Non-Ionizing Radiation Protection  
<http://www.icnirp.de>
- World Health Organization (WHO) International EMF Project  
<http://www.who.int/emf>
- National Radiological Protection Board (UK)  
<http://www.nrpb.org.uk/>

---

July 18, 2001 For updates: <http://www.fda.gov/cdrh/phones>

# Index

## A

- activate
  - alarm clock *107*
  - call forwarding *46*
- adjust the volume *16*
- alarm clock *107*
- antenna *9*
- applications *104*
- automatic redial *47*

## B

- basic operation *16*
- battery
  - charging *10, 118*
  - indicator *10*
  - installing *9*
  - removal *11*
  - voltage *126*
- bookmarks
  - entering manually *114*
  - returning to *114*
  - saving *114*
  - using *114*
- browse
  - internet *111*
  - phone menus *21*
- browser
  - options *112*
  - set up *112*
- business cards *85*

## C

- calculator *83*
- calendar *81*
- call
  - forwarding *45*
  - history *39*
  - lists *40*
  - timers *42*
  - waiting *44*
- caller
  - feature code *54*
  - groups *38*
  - ID *53*
- calling
  - card *47*
  - features *43*
- calls
  - conference *44*
  - make and answer *18*
  - restricting *78*
- channels *126*
- characters, entering *26*
- charge
  - battery *10*
  - times *125*
- chargers *117*
- chat *101*
- clock
  - network update *66*



- set the format 65
- show 65
- color schemes 70
- conference calls 44
- contact
  - Nokia 7
  - your service provider 8
- contrast, adjusting 17
- covers
  - removing 12
  - replacing 13
- currency calculations 84

## D

- data entry, internet 114
- date
  - change the format 65
  - show/hide 65
- diald calls 39
- dictionary 30
- digital talk times 125
- display brightness 70
- display settings 69
- downloads
  - applications 105
  - ringing tones 106

## E

- edit a name or number 35
- e-mail messages 97
- enhancement settings 70
- enhancements 117

- enter
  - characters 26
  - numbers 26
  - punctuation 26
  - spaces 26
- equalizer 17
- erase
  - mistakes 27
  - names and numbers 35
  - text messages 96
- ESN number 7
- exchange rate 84

## F

- factory settings 71
- folders
  - archive 92
  - delete messages 96
  - inbox 92
  - templates 92
  - text messages 92
- frequency range 126

## G

- gallery 103
- games 116

## H

- headset
  - connect 16
  - use 16
- hearing impaired solutions 72

help text 21  
home network 91

## I

information  
    adding 24  
    recalling 33  
internet, connecting to 112  
IR 109

## K

keyguard 74  
keypad  
    avoid accidental key presses 74  
    lock 74  
    tones, setting 62  
keys  
    selection 21  
keys, learning 18

## L

label 8  
language setting 64  
letter case, changing 27  
letters, entering 25  
loopset 72  
loudspeaker 19

## M

make and answer calls 18  
memory  
    checking 38  
    full 96

    locations 126  
    status 38  
menu, phone 21  
message alert tone 62  
messages  
    checking 57  
    text 92  
missed calls 39  
mistakes, erasing 27  
mobile inductive loopset 72  
model number 7

## N

names and numbers  
    add second number 36  
    delete 36  
    edit 35  
    save 32  
network  
    search 90  
    service features 90  
number  
    add to message 31  
    changing type 37  
    entering 26  
    selection 54  
    types 36

## O

options, in a call 43

## P

personalize phone settings 64

- phone
  - dimensions 126
  - help 21
  - lock 76
  - memory full 96
  - menus 21
  - numbers 126
  - security, managing 74
  - size 126
  - symbols 19
  - weight 126

- phone book
  - caller groups 38
  - menus 34
  - save an entry 33
  - save text entry 33
  - views 35

- picture messages 100

- play games 116

- power on 14

- power output 126

- predictive text 28

  - tips for 30

  - turning off 29

- prepaid 88

- primary number 37

- punctuation, entering 26

## Q

- quick save 32

## R

- received calls 39

- redial 47

- remove the battery 11

- reply to a text message 97

- restrict calls 78

- ring volume 61

- ringing tones

  - discarding 107, 107

  - downloading 106

  - options 60

  - receiving 106

  - volume 61

## S

- screen saver 70

- search for network 90

- security

  - changing 75

  - default 74

  - features 74

- selection keys 21

- sending e-mail 98

- serial number 7

- service provider 8

  - differences 7

  - signing up 7

- services menu 112

- set the ring volume and tone 61

- settings

  - personal shortcuts 68

  - personalizing 64

  - tone settings 70

- shortcuts 68

- spaces, entering 26
- speaker phone 19
- special
  - characters 27
  - features 103
- speed dial 67
- standby time 125
- start screen 14
- stopwatch 85
- switch
  - between calls 44
  - on your phone 14
- symbols displayed on your phone 19
- symbols, inserting 31

## T

- talk time 125
- technical information 126
- templates 99
- terms 4
- text entry 33
- text messages
  - as e-mail 97
  - communicating 92
  - erasing 96
  - forwarding 97
  - length 92
  - recipients 92
  - replying 97
- To-do list 82
- touch tones 55
- transmit power 126

- TTY 72
- turn on your phone 14

## U

- updates to this guide 7

## V

- vibrating alert 61
- view date 65
- voice
  - mail 57
  - messages 58
- voice commands 52
  - activate 53
  - add 52
- voice tag
  - change 50
  - erase 50
  - play back 50
- volume, adjusting 16

## W

- warning tones 62
- web address 116
- weight 126

## X

- Xpress-on covers 12

## NOTES

## NOTES

## NOTES

## NOTES



## NOTES

---

Para obtener un manual del usuario en español favor de llamar o enviar un fax al teléfono 1-888-NOKIA-2U, fax 813-249-9619.

---