## **PAMS Technical Documentation**

# NHE-6/NHK-6 DISASSEMBLY INSTRUCTIONS

**Technical Documentation** 


### AMENDMENT RECORD SHEET

Amendment Number	Date	Inserted By	Comments
Issue 2	12/97	J Rantala	Torque info added on p.3 & p.4 font case mounting added, repaginated

**Technical Documentation** 


**Disassembly Instructions** 



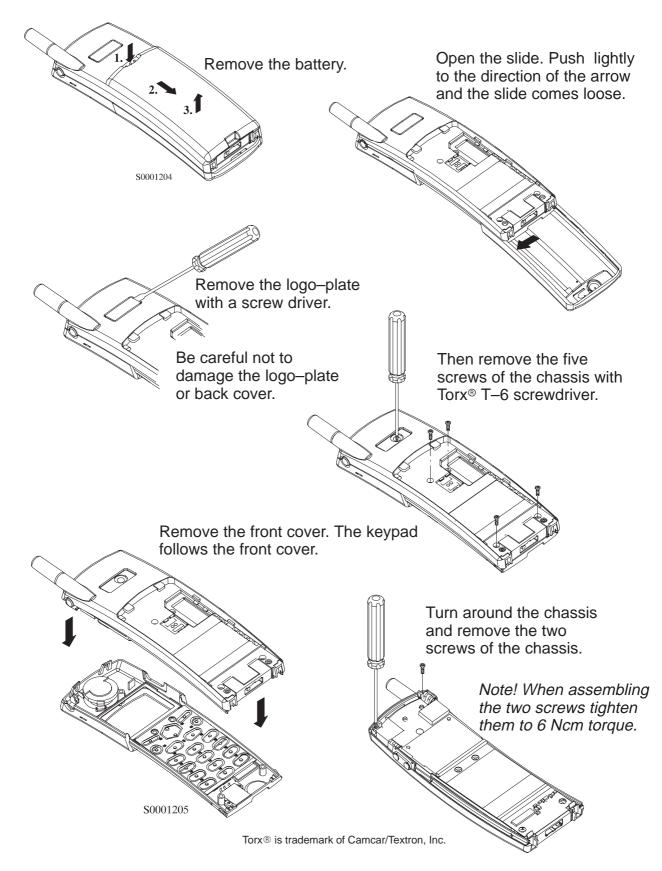

#### **Disassembly Instructions**

**Technical Documentation** 

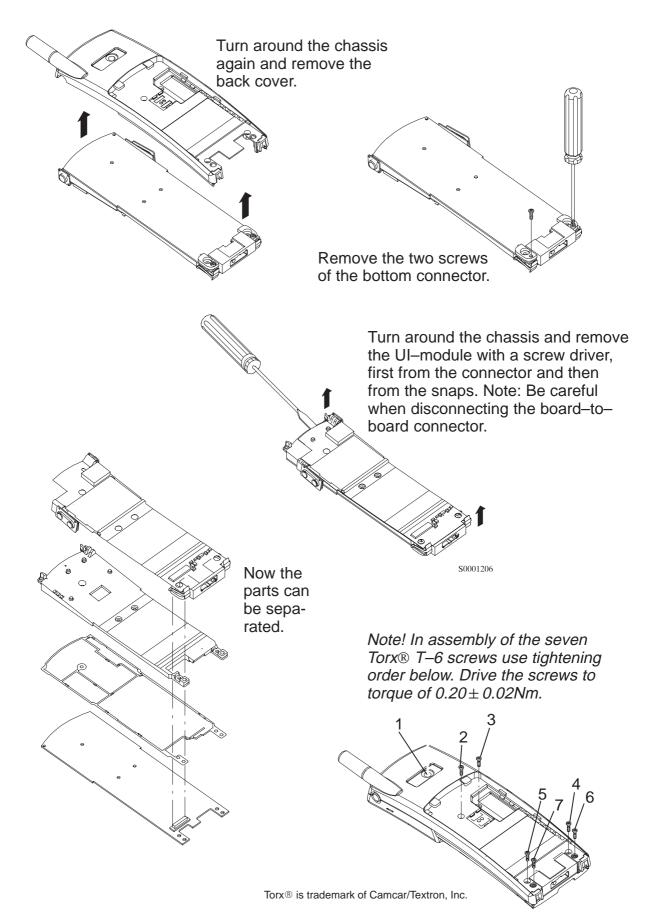

**Disassembly Instructions** 

#### **Front Cover Installation**

NOTE: If A-cover does not 1 Check that inside of the window is include the speaker, follow instruction in section: free of dust or rubbish. Speaker Installation. Place the keypad in Front Cover and then press front and back cover together. Make sure that: 1 Snaps at upper end lock to each other securely. 2 Power or volume keys are not squashed between front and back cover. 3 Buzzer sound hole isn't blocked by the buzzer gasket. Screw on five Torx® T–6 screws to torque  $0.20 \pm 0.02 Nm$ Screw them on at order shown right. If logo–plate slot at back cover has any glue residues, remove them. Install logo-plate and press it firmly onto the back cover by fingers. Use of a new logo-plate is

recommended to ensure good

adhesion to back cover.

Torx<sup>®</sup> is trademark of Camcar/Textron, Inc.

**Disassembly Instructions** 

**Technical Documentation** 

This page intentionally left blank.