CCS Technical Documentation RH-40 Series Transceivers

Assembly

Assembling the RH-40 Basic Transceiver





Step 4. Press the antenna into its place.

Note: Make sure that the antenna springs do not get damaged or touched during assembly. No fingerprints should get on the springs.





Step 5. Place one end of the battery latch into the D-cover slot.

Step 6. Bend the latch and move the other end into the D-cover slot.

The battery connector will be assembled onto the D-cover with interference fixing.



Assemble the D-cover assembly.

fingers.

antenna.

3

D-cover.

Step 1. Assemble the metal deck from the

All six tabs should snap into the slots in the

Step 2. Place the IR-window onto the

D-cover before assembling the

back cover side by pressing it with your

 
Step 7. Place connector onto D-cover with tweezers.

Step 8. Push the connector into the D-cover slot with your fingers.



Note: Make sure that the battery connector is

> below the D-cover edges after assembly. If the buzzer- or vibra-assembly is in place, make sure that the buzzer springs stay intact. The may be damaged, if touched.



Place the engine module on top of the LCD-module.



Assemble the D-cover assembly.

- Step 1. Place the assembled D-cover on top of the C-cover.
- Step 2. Press the D-cover to snap the side locks.



Assemble the key mat onto the front cover.

- Step 1. Place the keypad onto the front cover before the cover is assembled to the basic transceiver.
- Step 2. Press the keypad into its place.



Note: The use of gloves is mandatory in order to prevent fingerprints from appearing on the engine layout. Use ionized air or a vacuum, before assembling the D-cover, to remove dust and other foreign particles from the PWB assy.

Place the system connector on top of the engine module.

Note: The use of gloves is mandatory in order to prevent fingerprints from appearing on the engine layout and system connector pads (charging pads). Make sure that the system connector springs stay intact. The springs may be damaged, if touched.



Assemble the screws.

Step 1. Fasten the 6 screws. The assembly order is shown in the disassembly section. The torque is 20 – 21 Ncm 350/RPM.







Assemble the front cover onto the basic transceiver.

- Step 1. First push the basic transceiver to the front cover's IR-window.
- Step 2. Press the bottom part onto the front part, so that it snaps onto the front cover.