



RF


BASEBAND

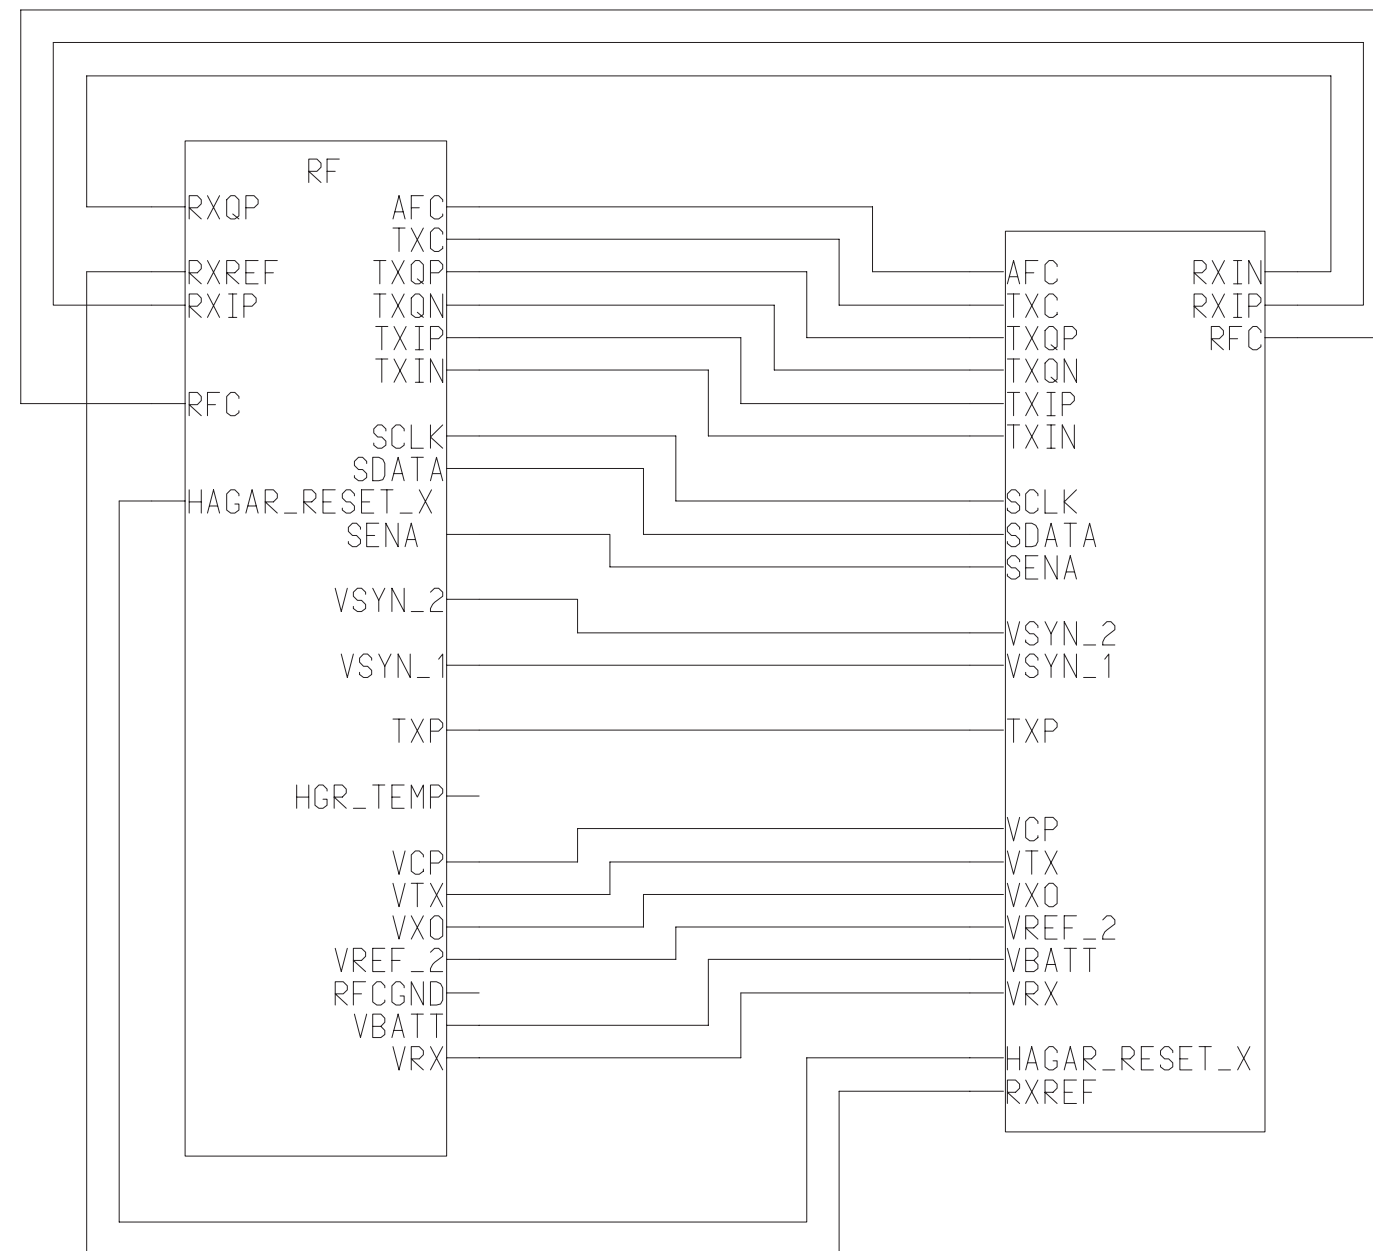


RF (Version 0600 Edit 20) for layout version 05 & 06

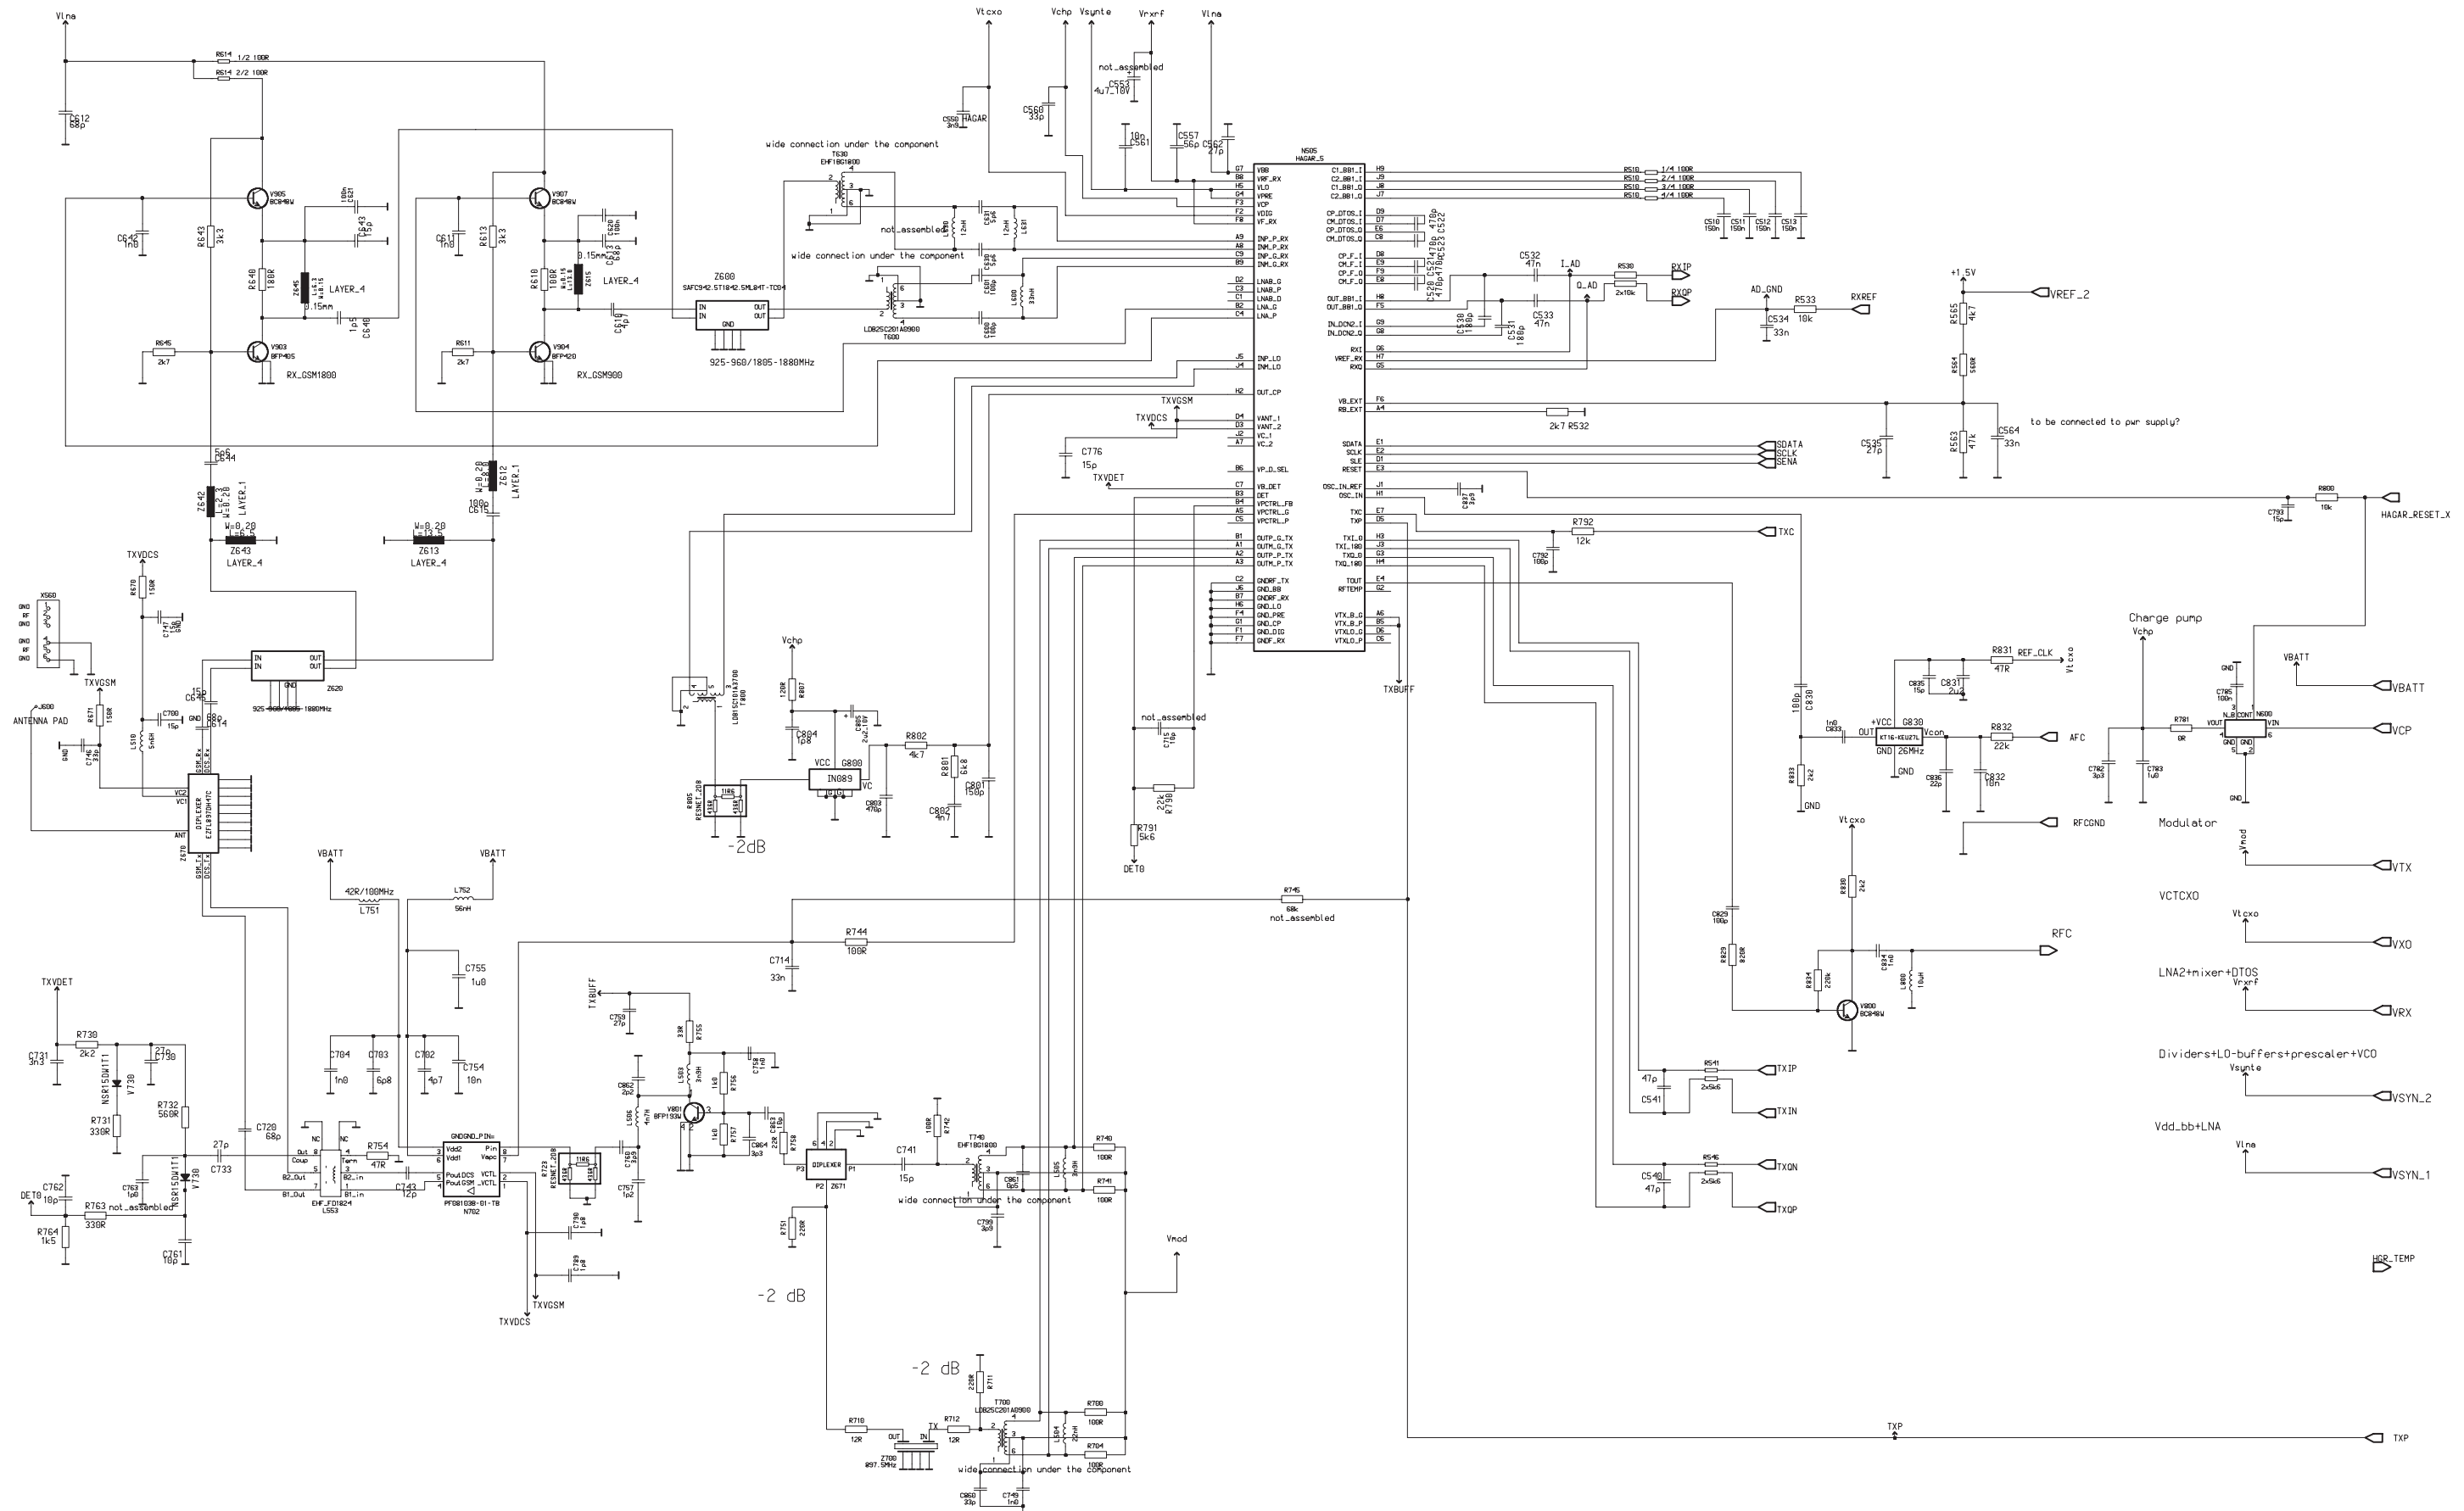


BB Block Connections (Version 0600 Edit 7) for layout version 05 & 06

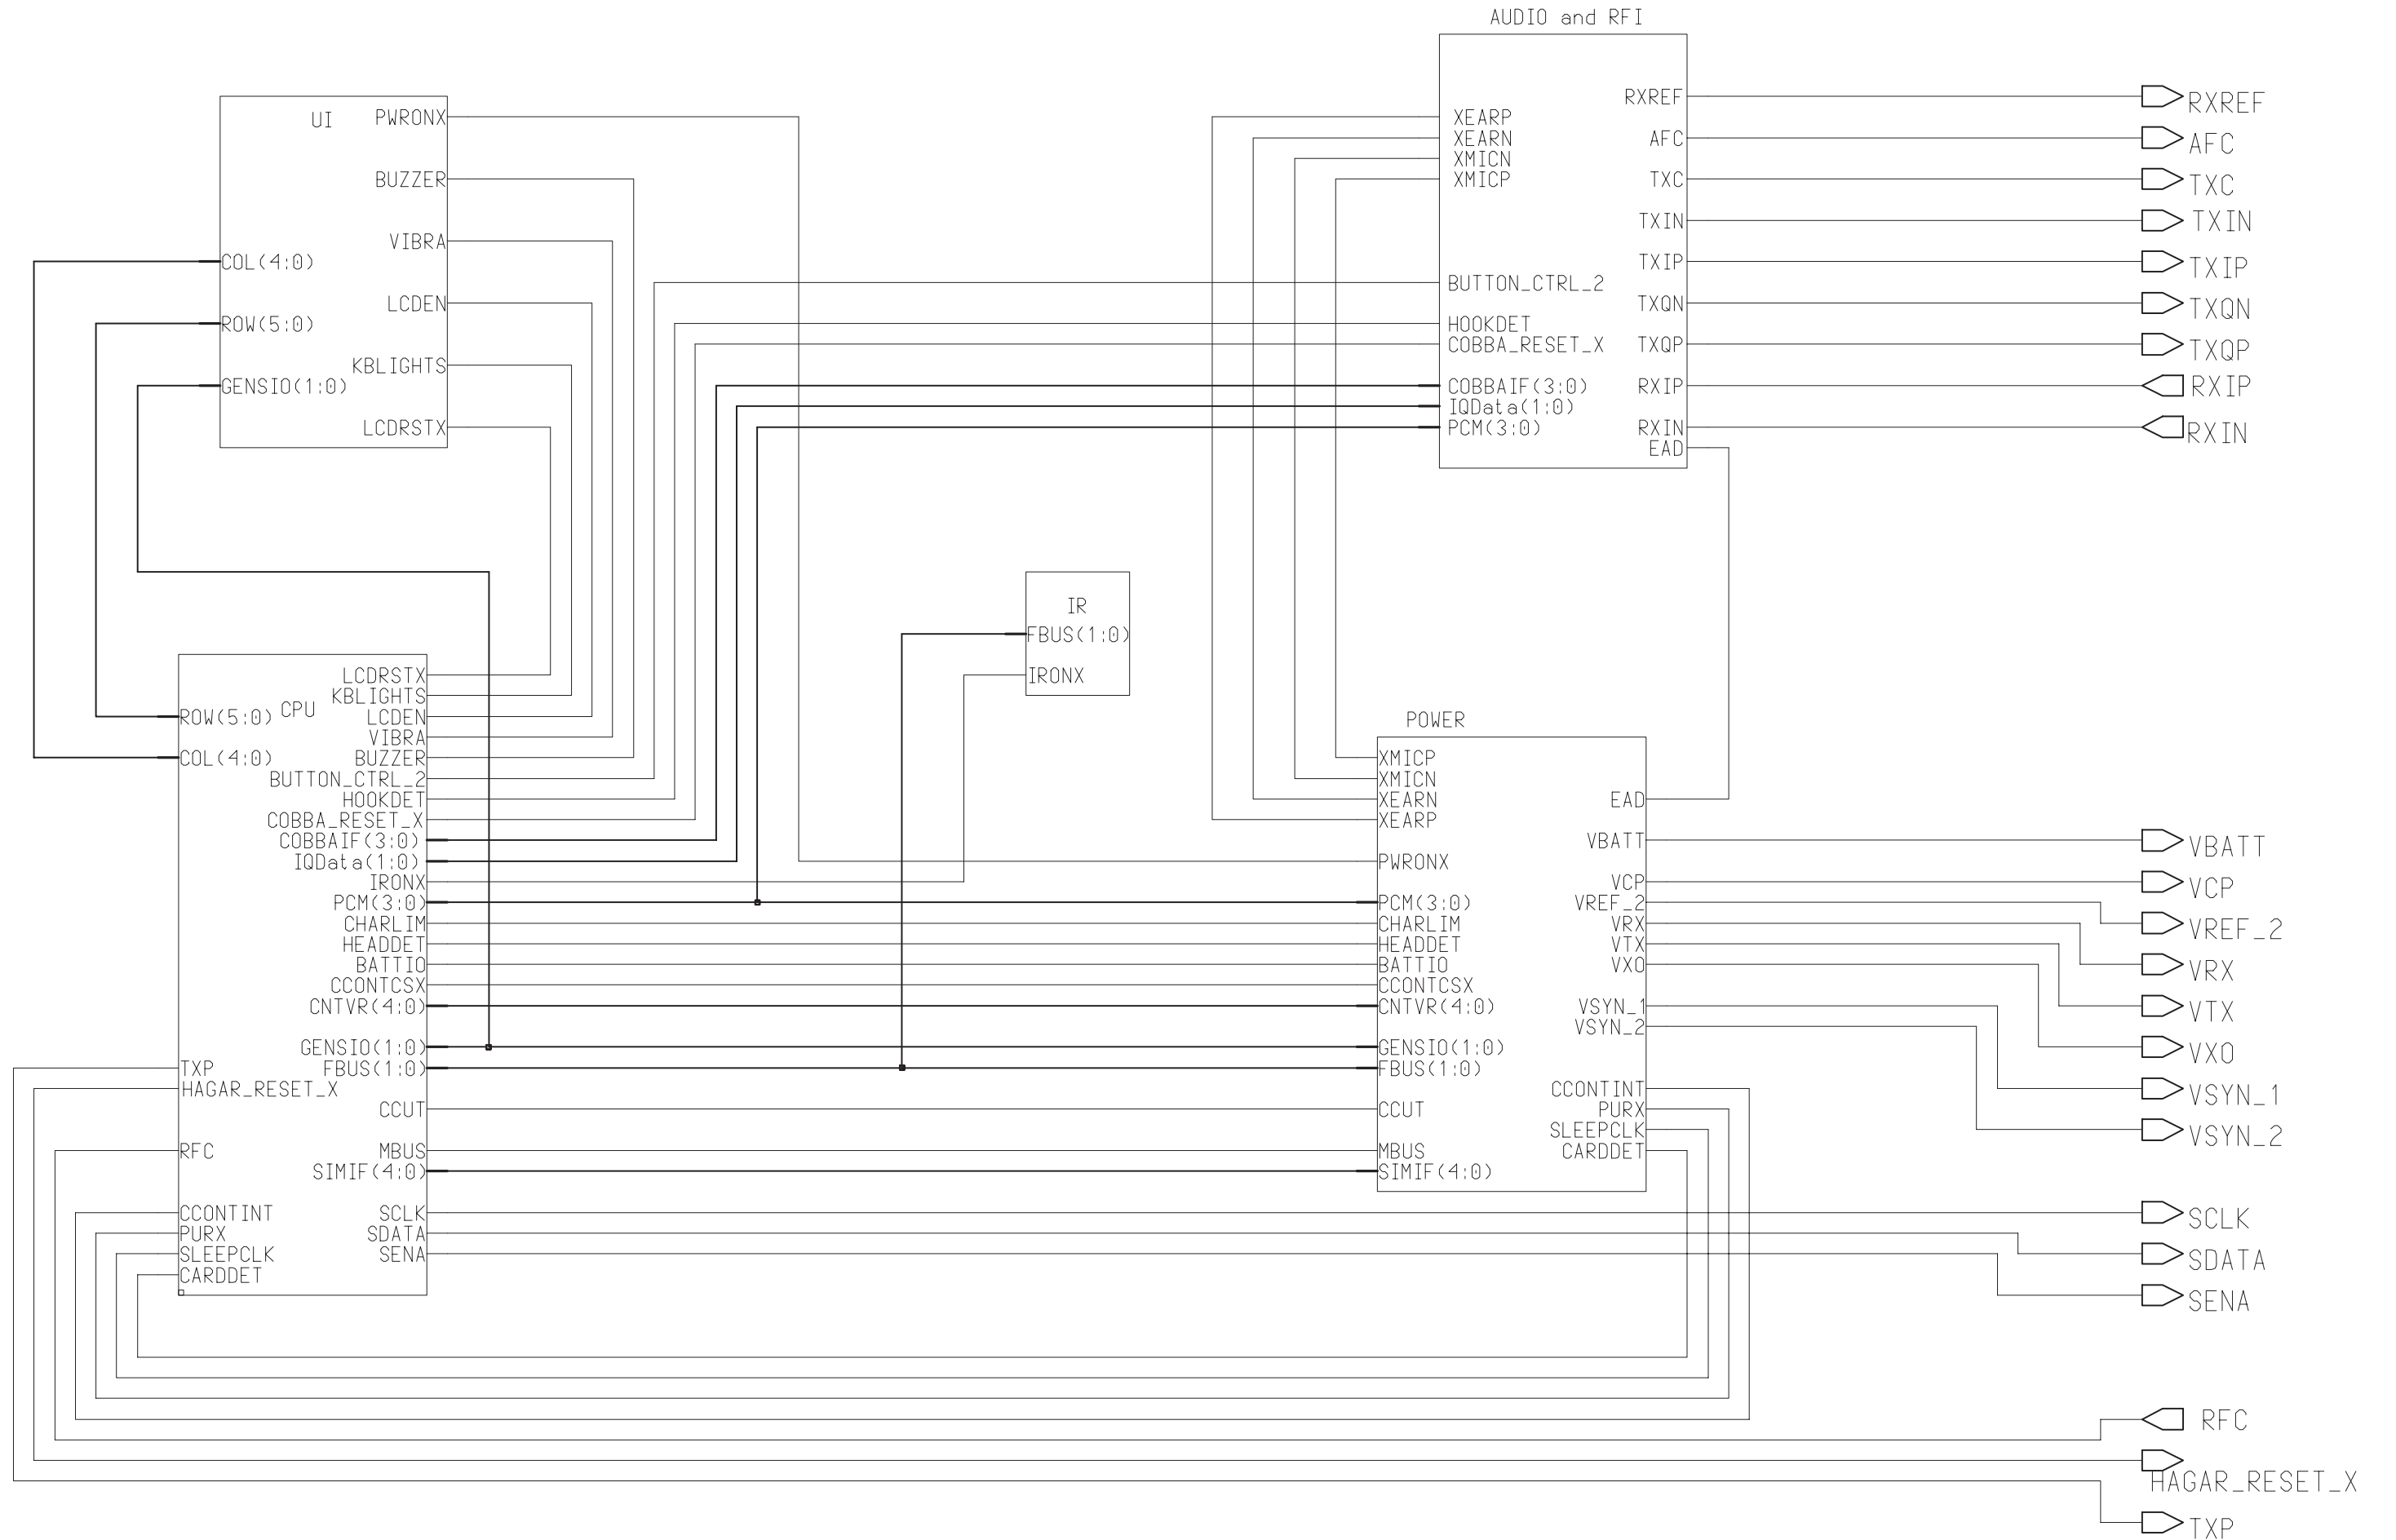


UI (Version 0600 Edit 23) for layout version 05 & 06

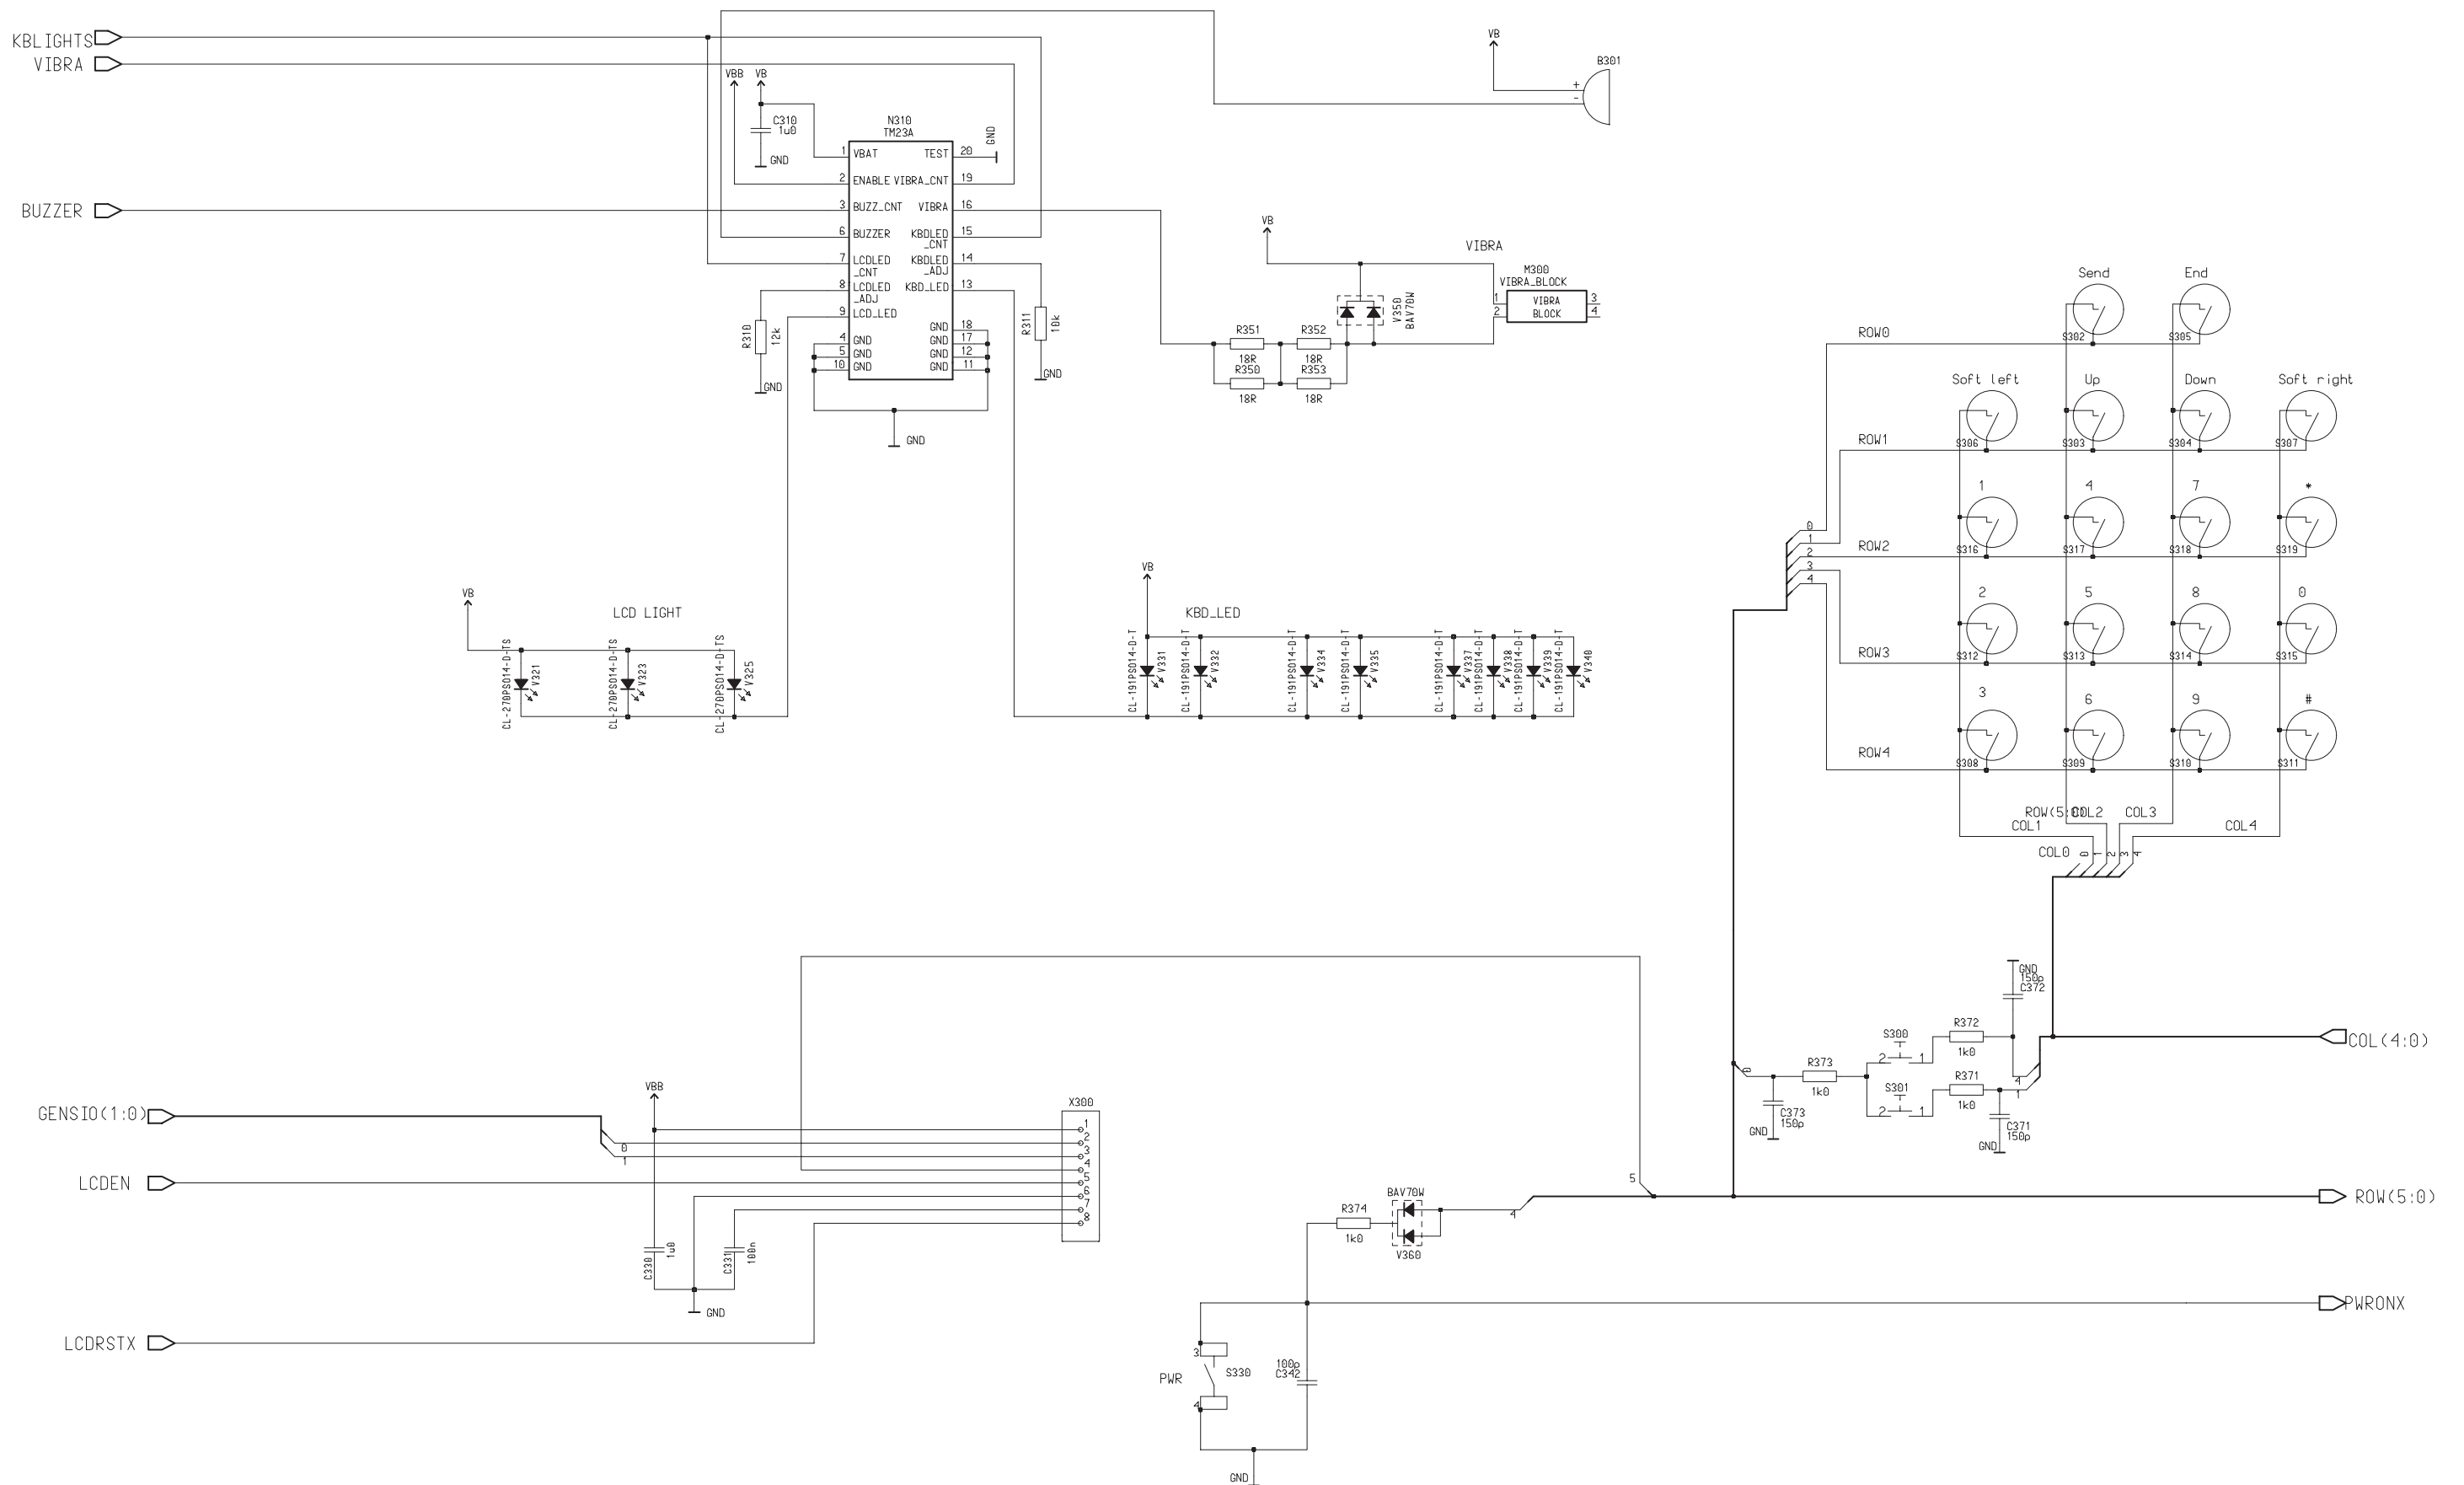


Audio and RFI (Version 0600 Edit 13) for layout version 05 & 06

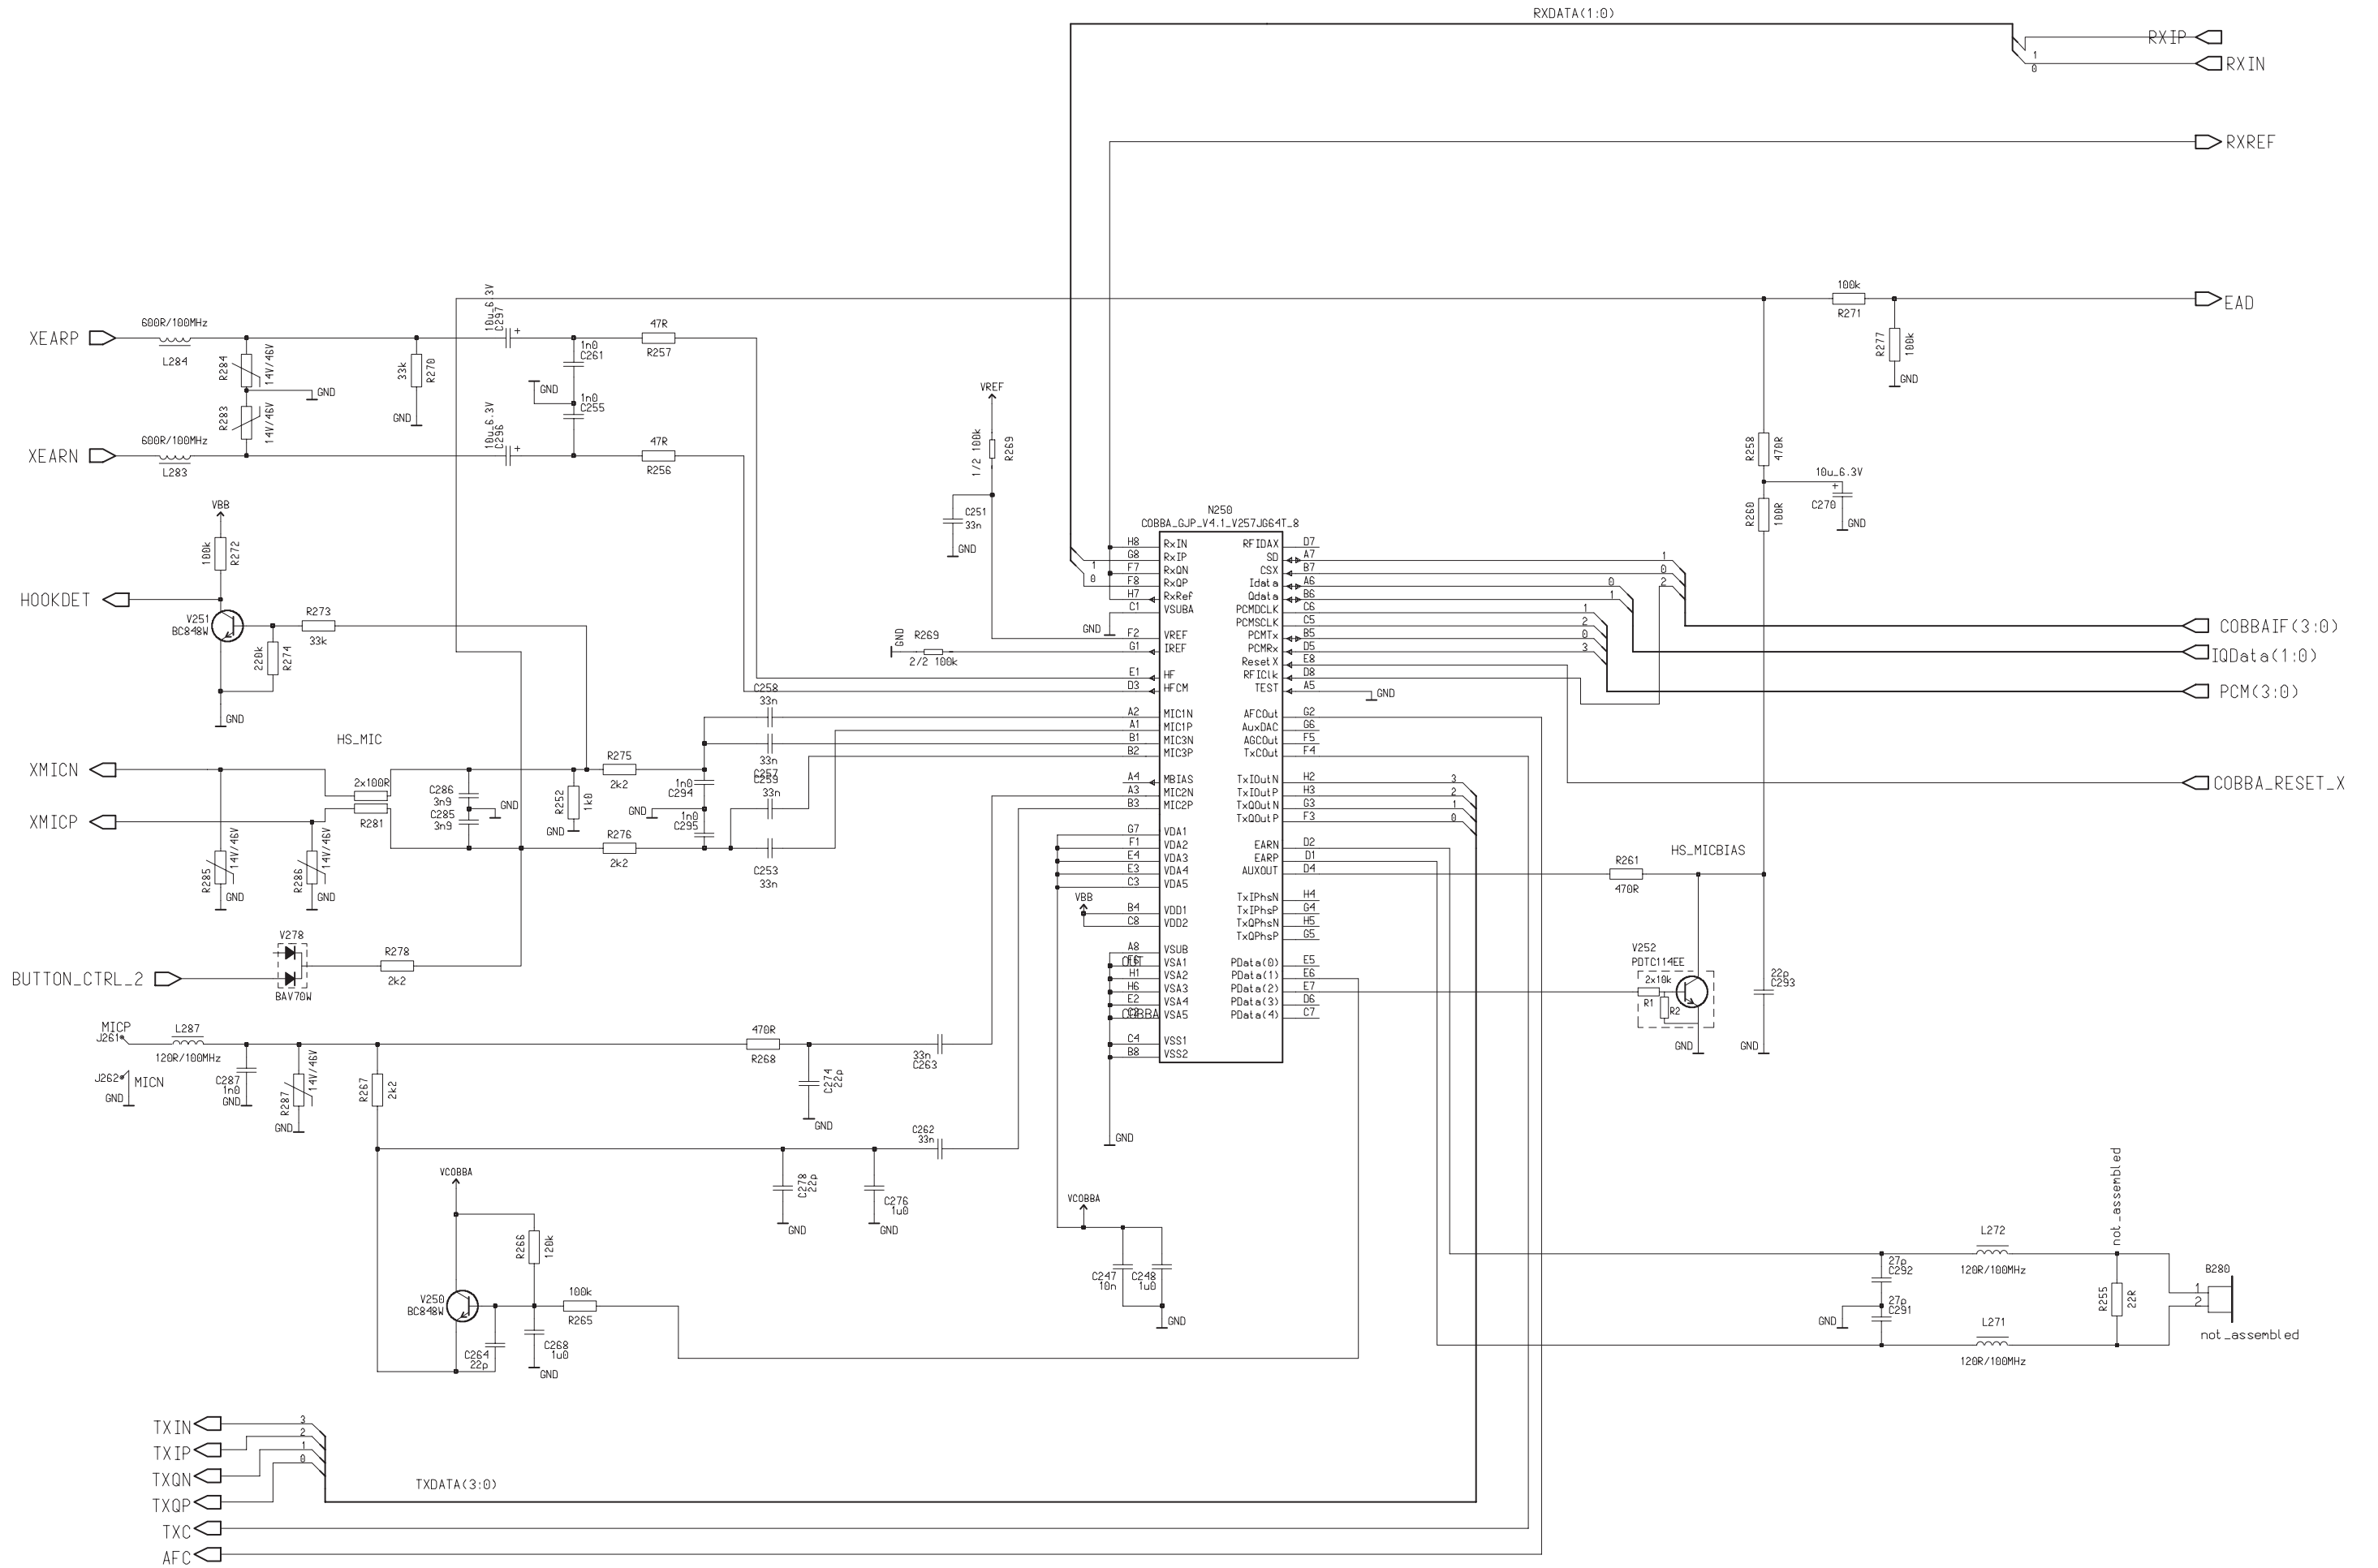


CPU (Version 0600 Edit 27) for layout version 05 & 06

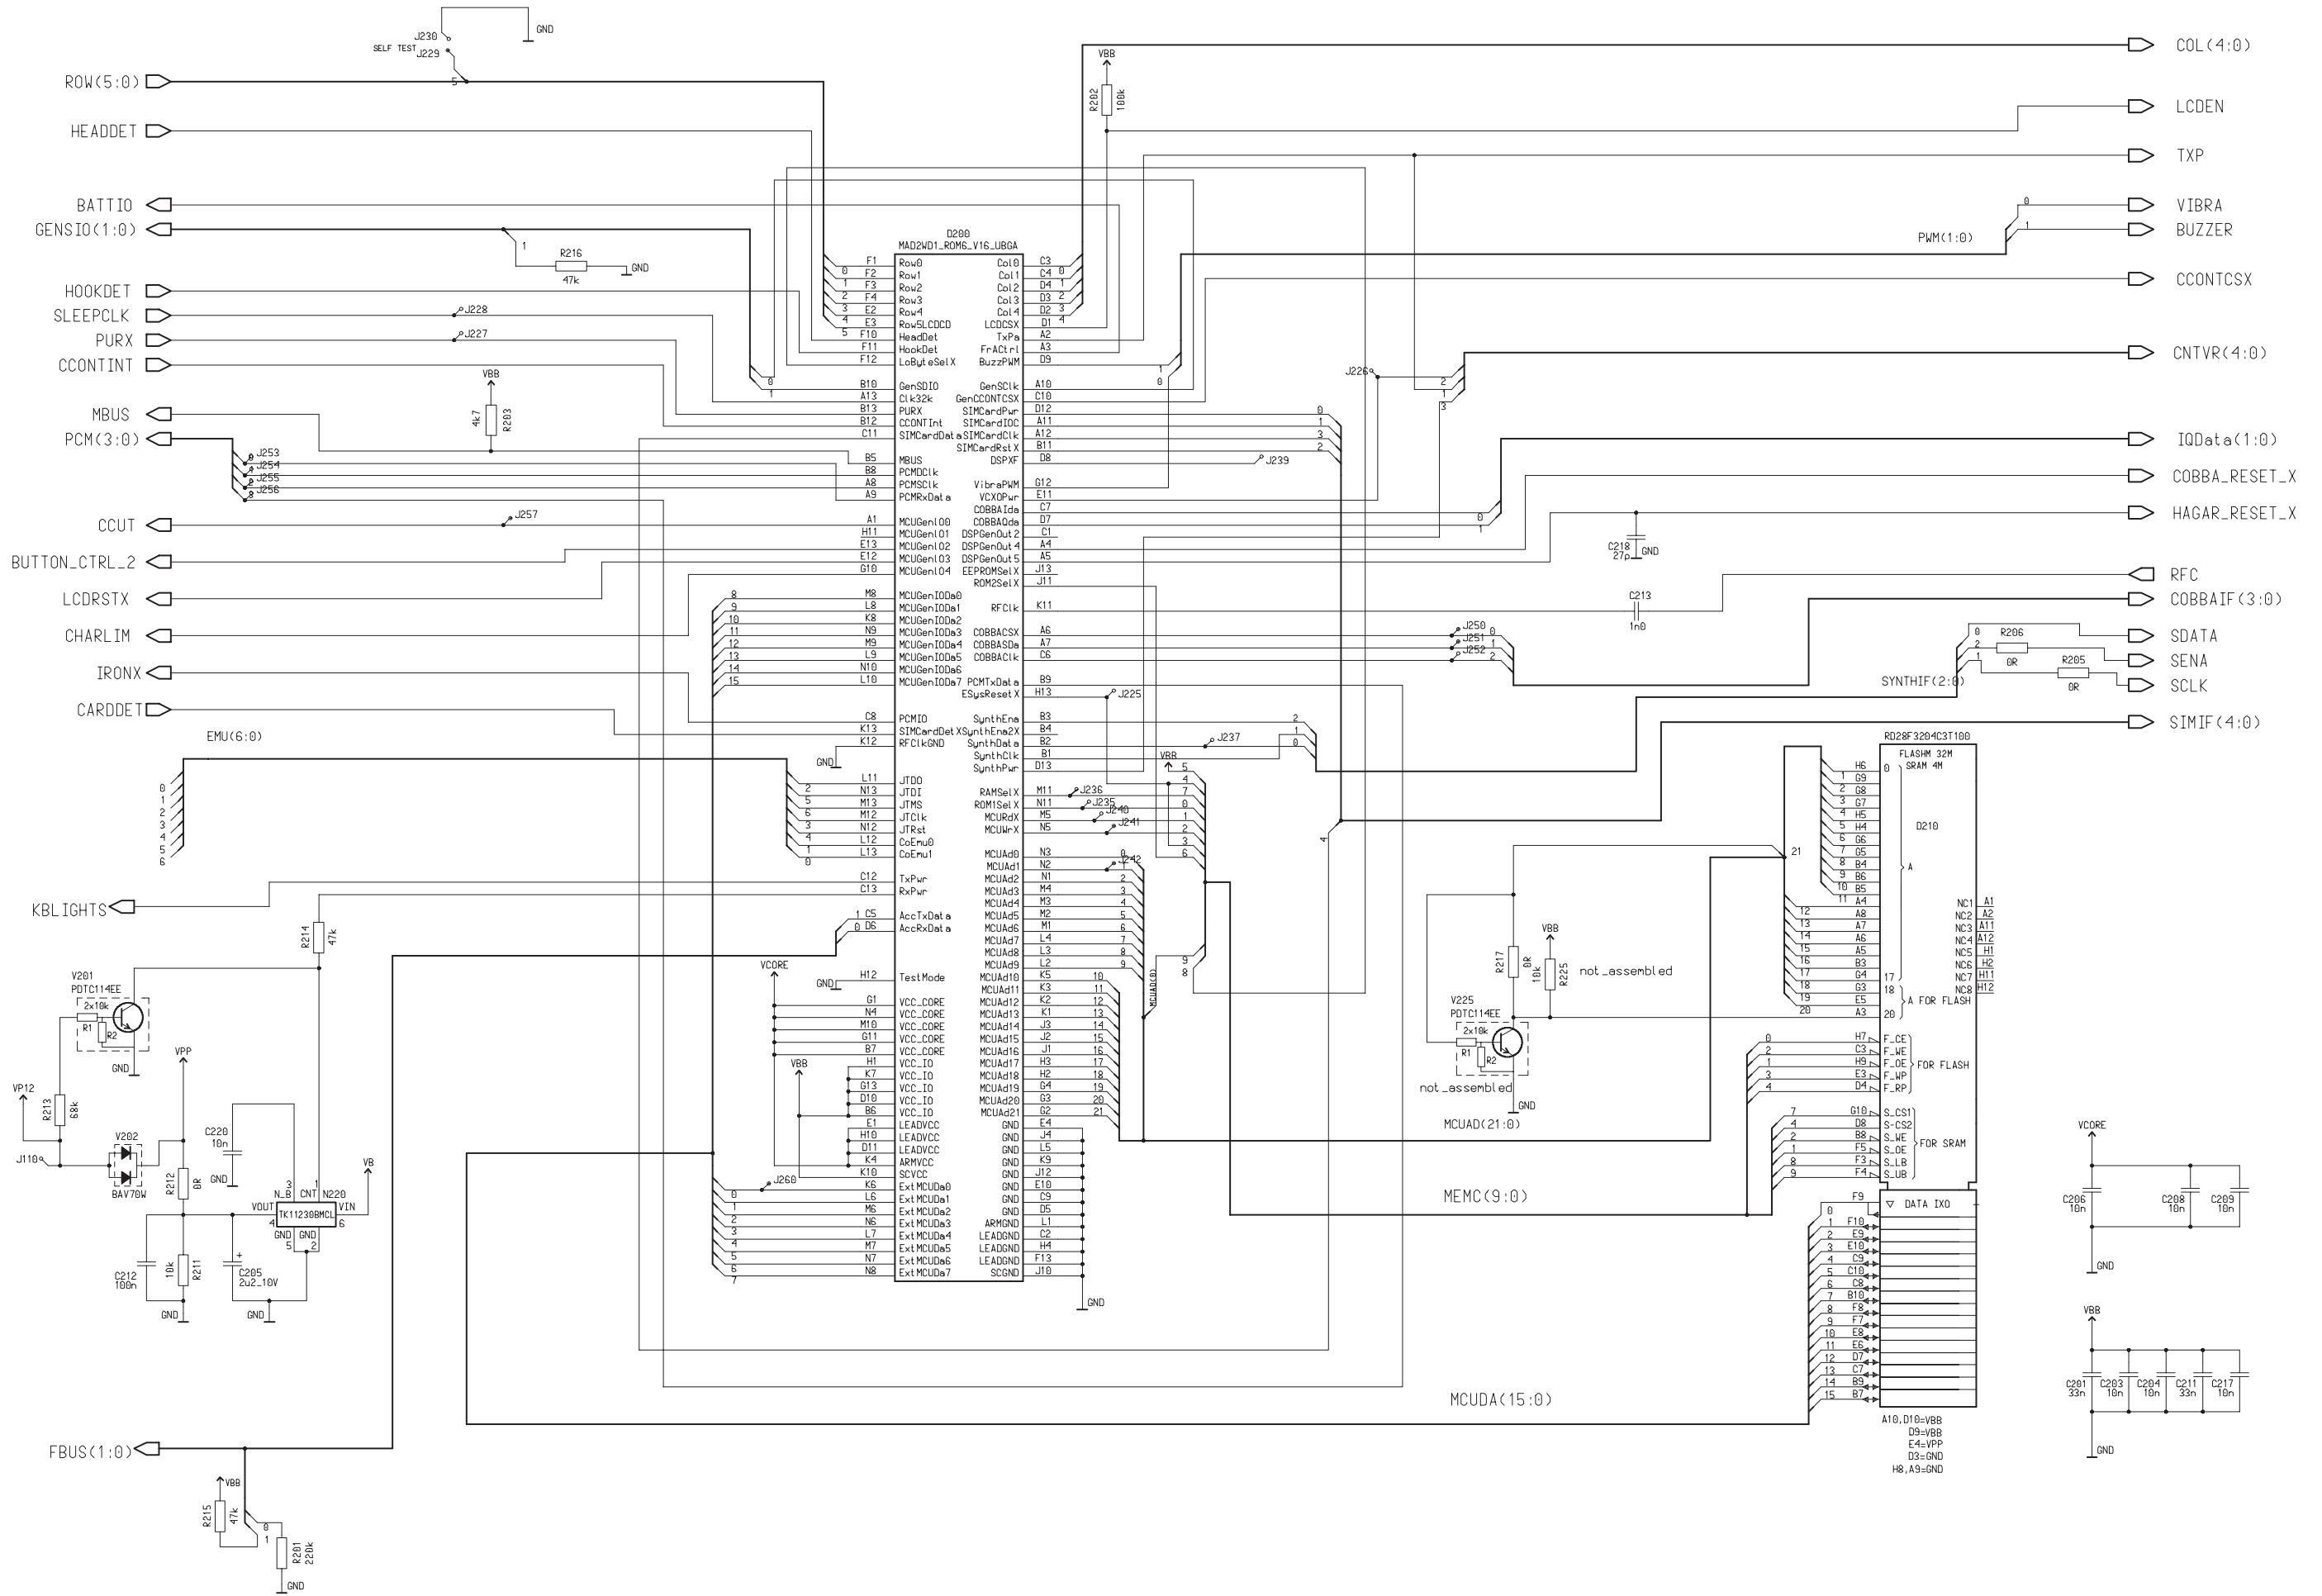


Power Supply and Charging (Version 0600 Edit 22) for layout version 05 & 06

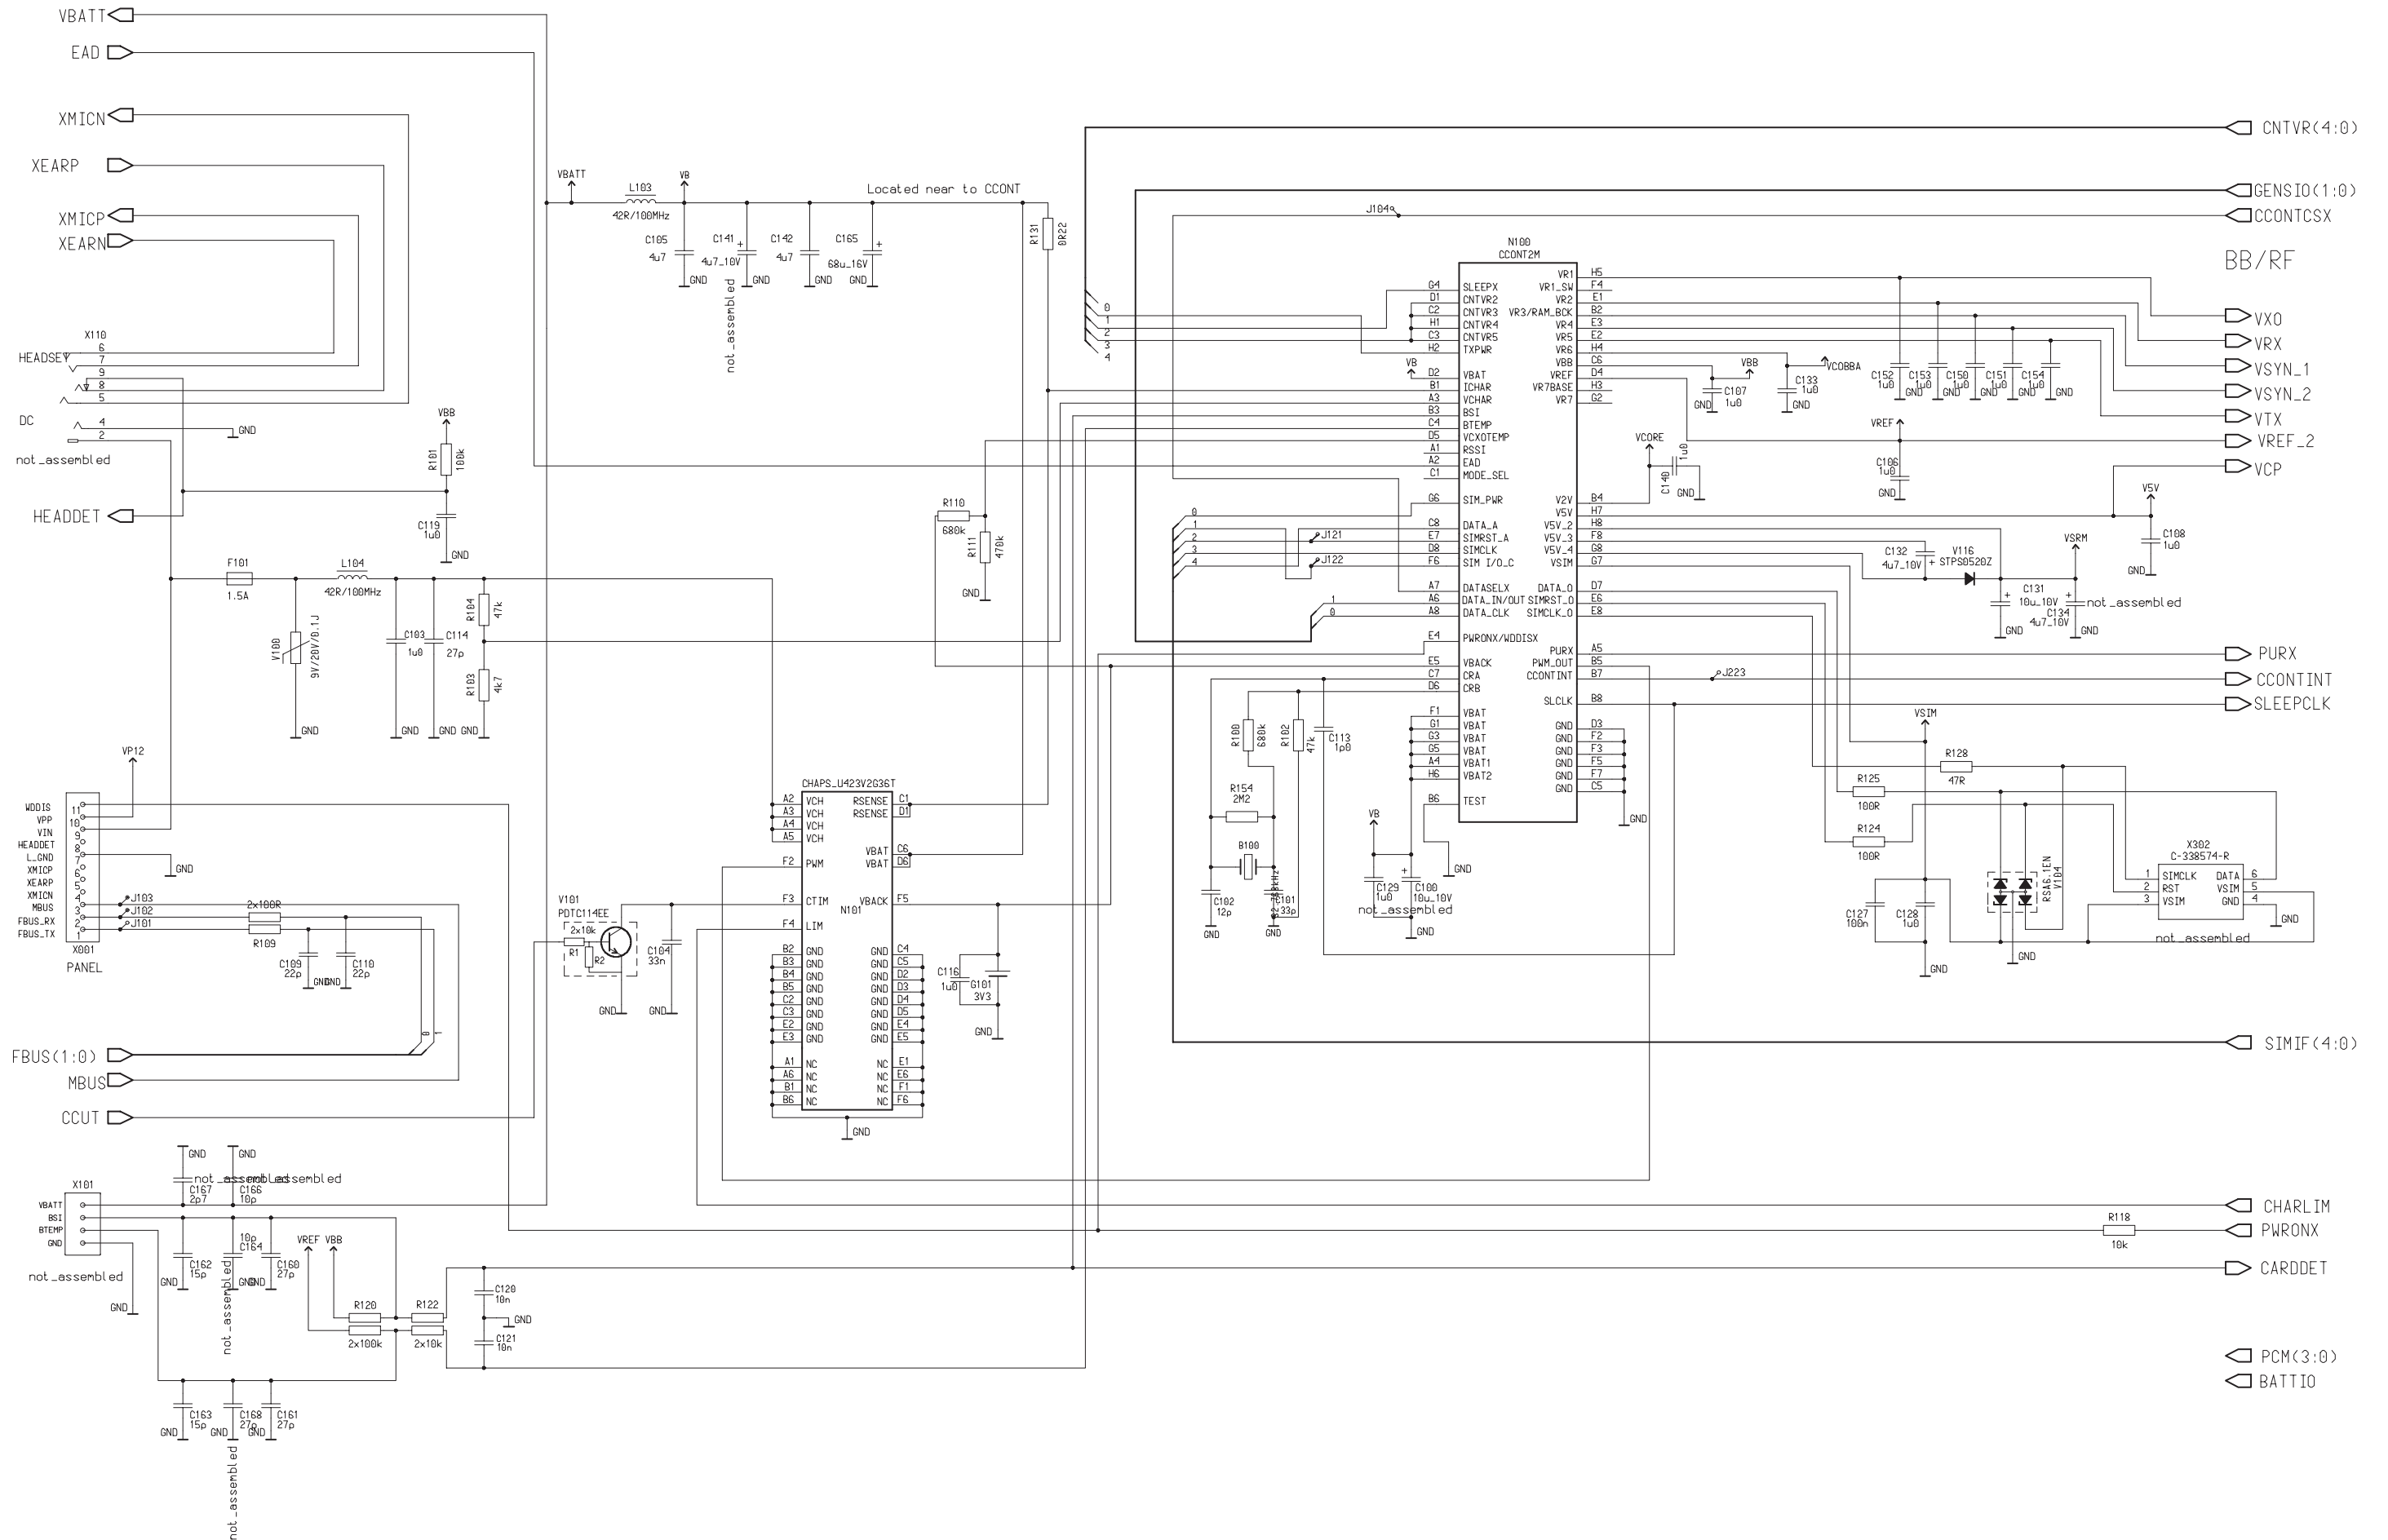


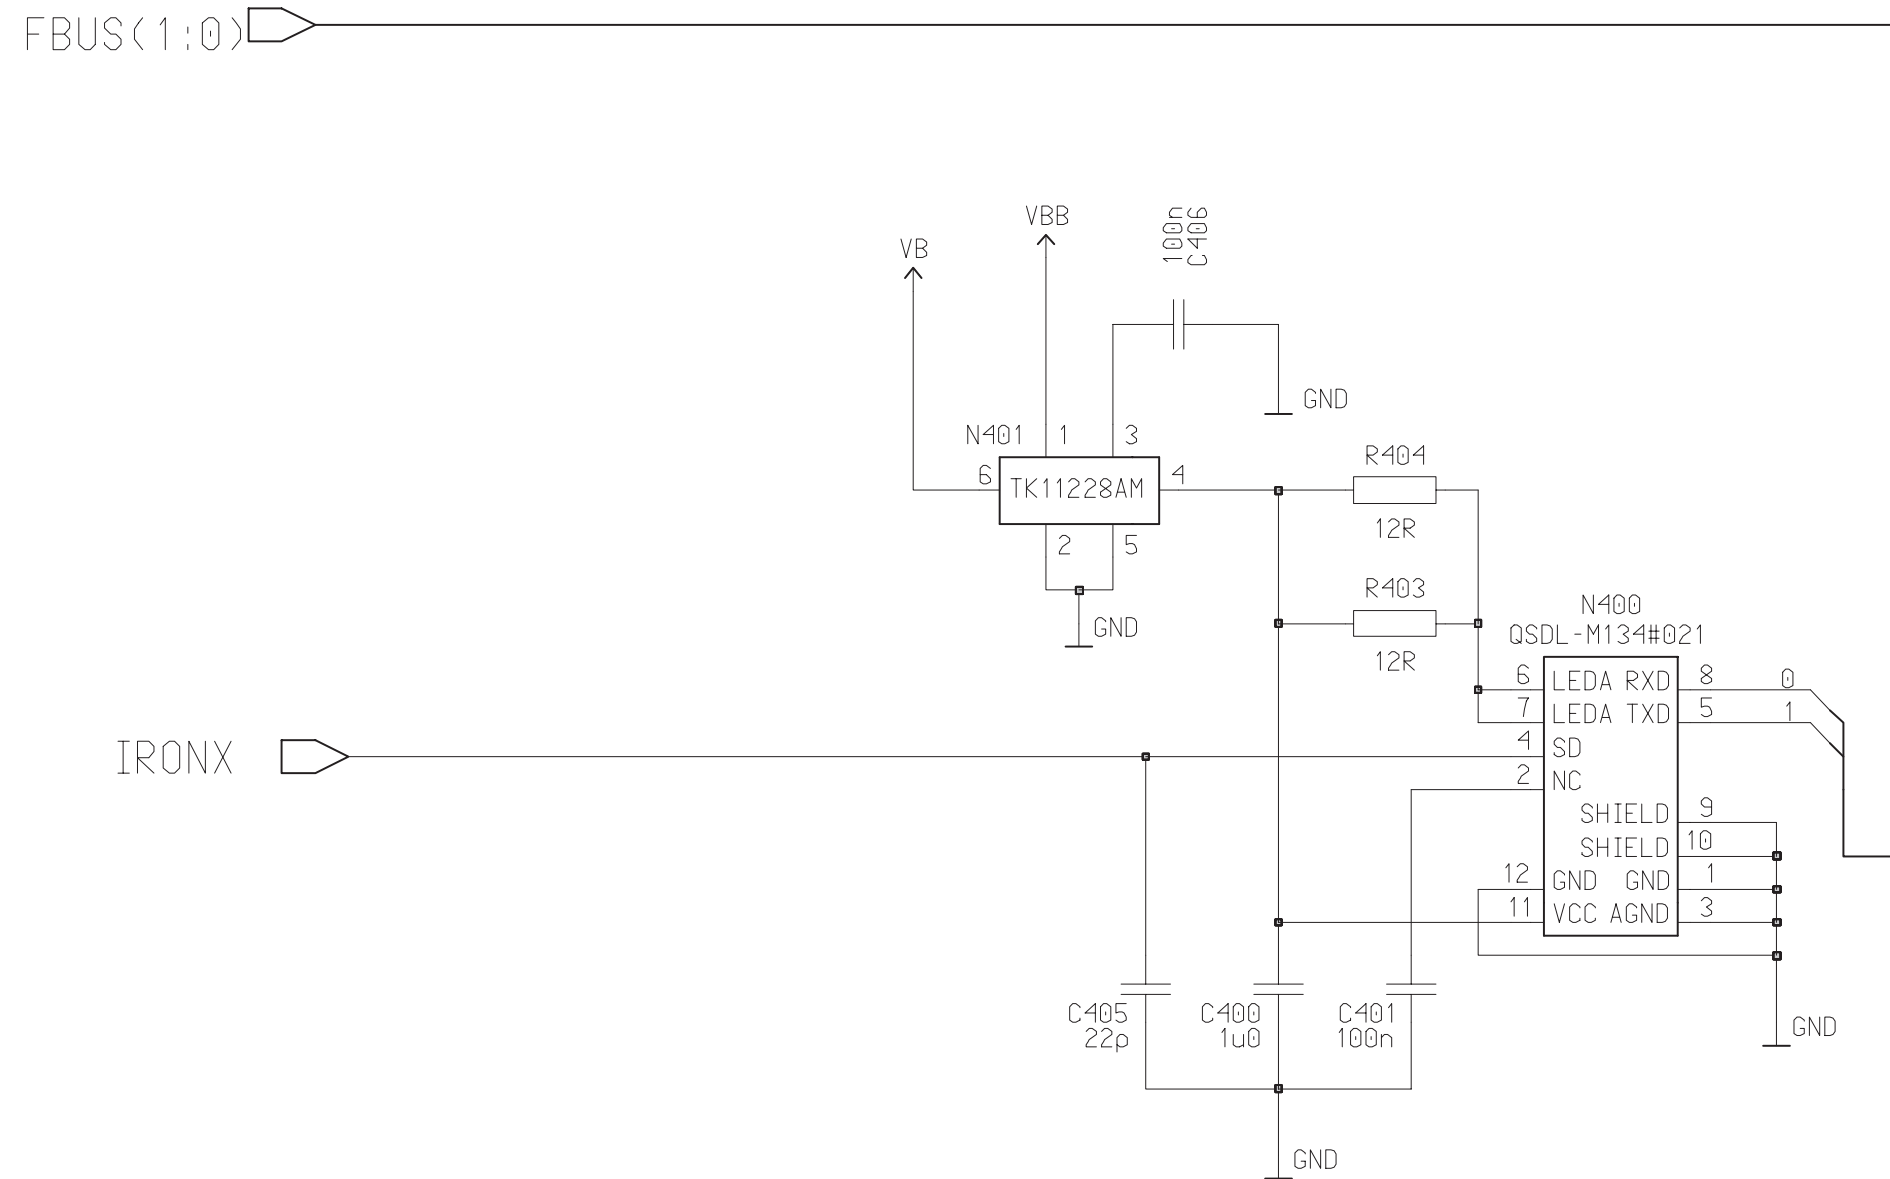


Layout Diagram of DF7 – Top (Version 05 & 06)

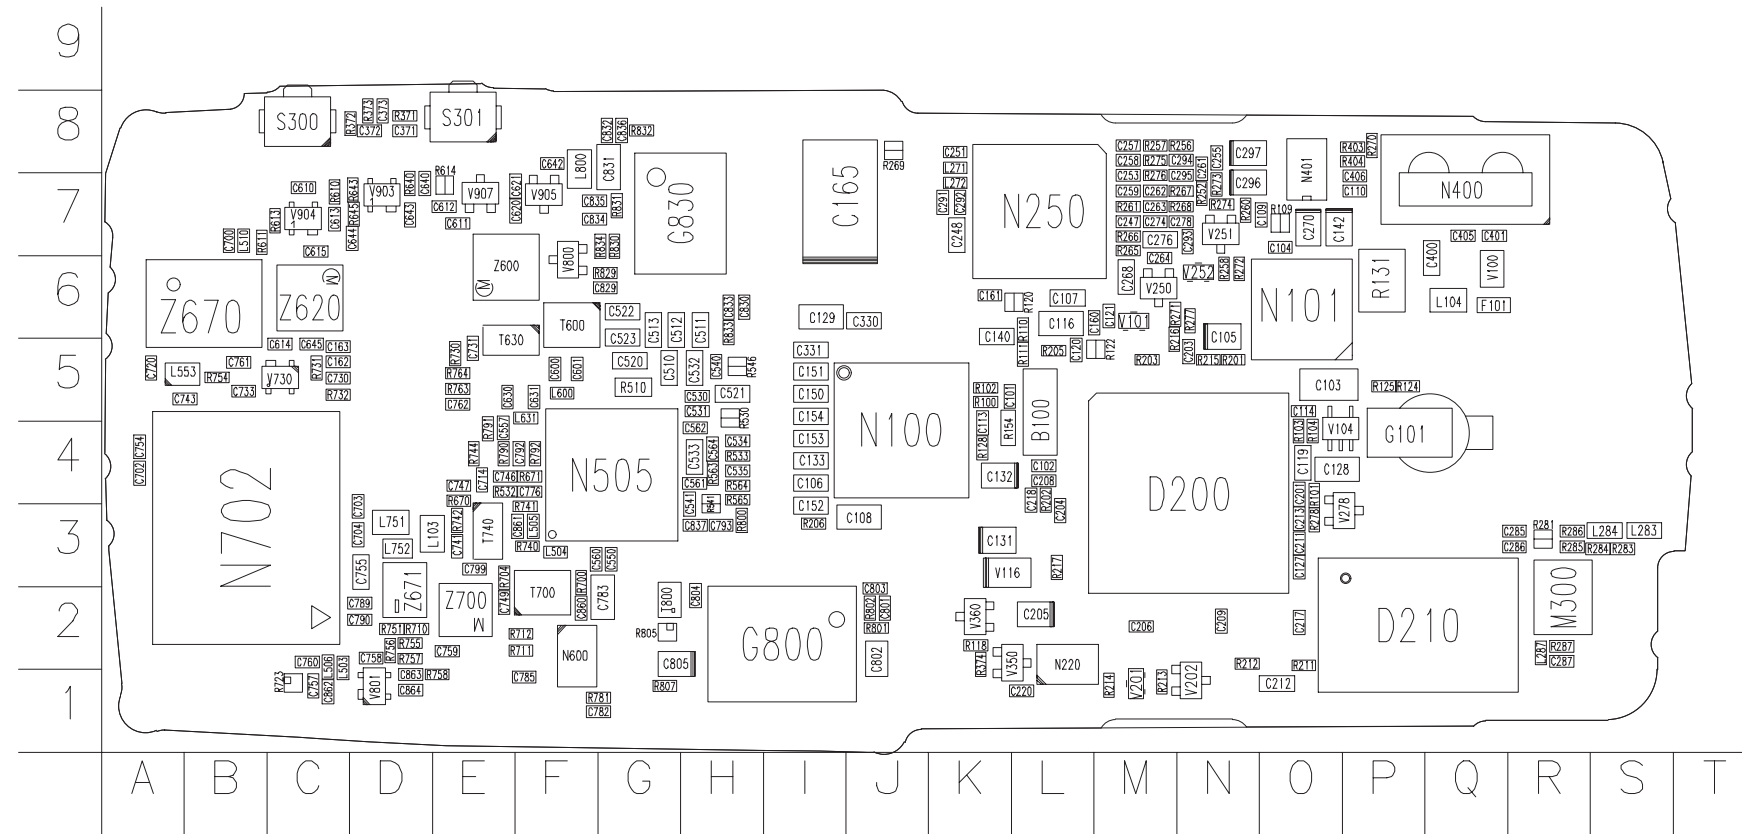

Layout Diagram of DF7 – Bottom (Version 05 & 06)

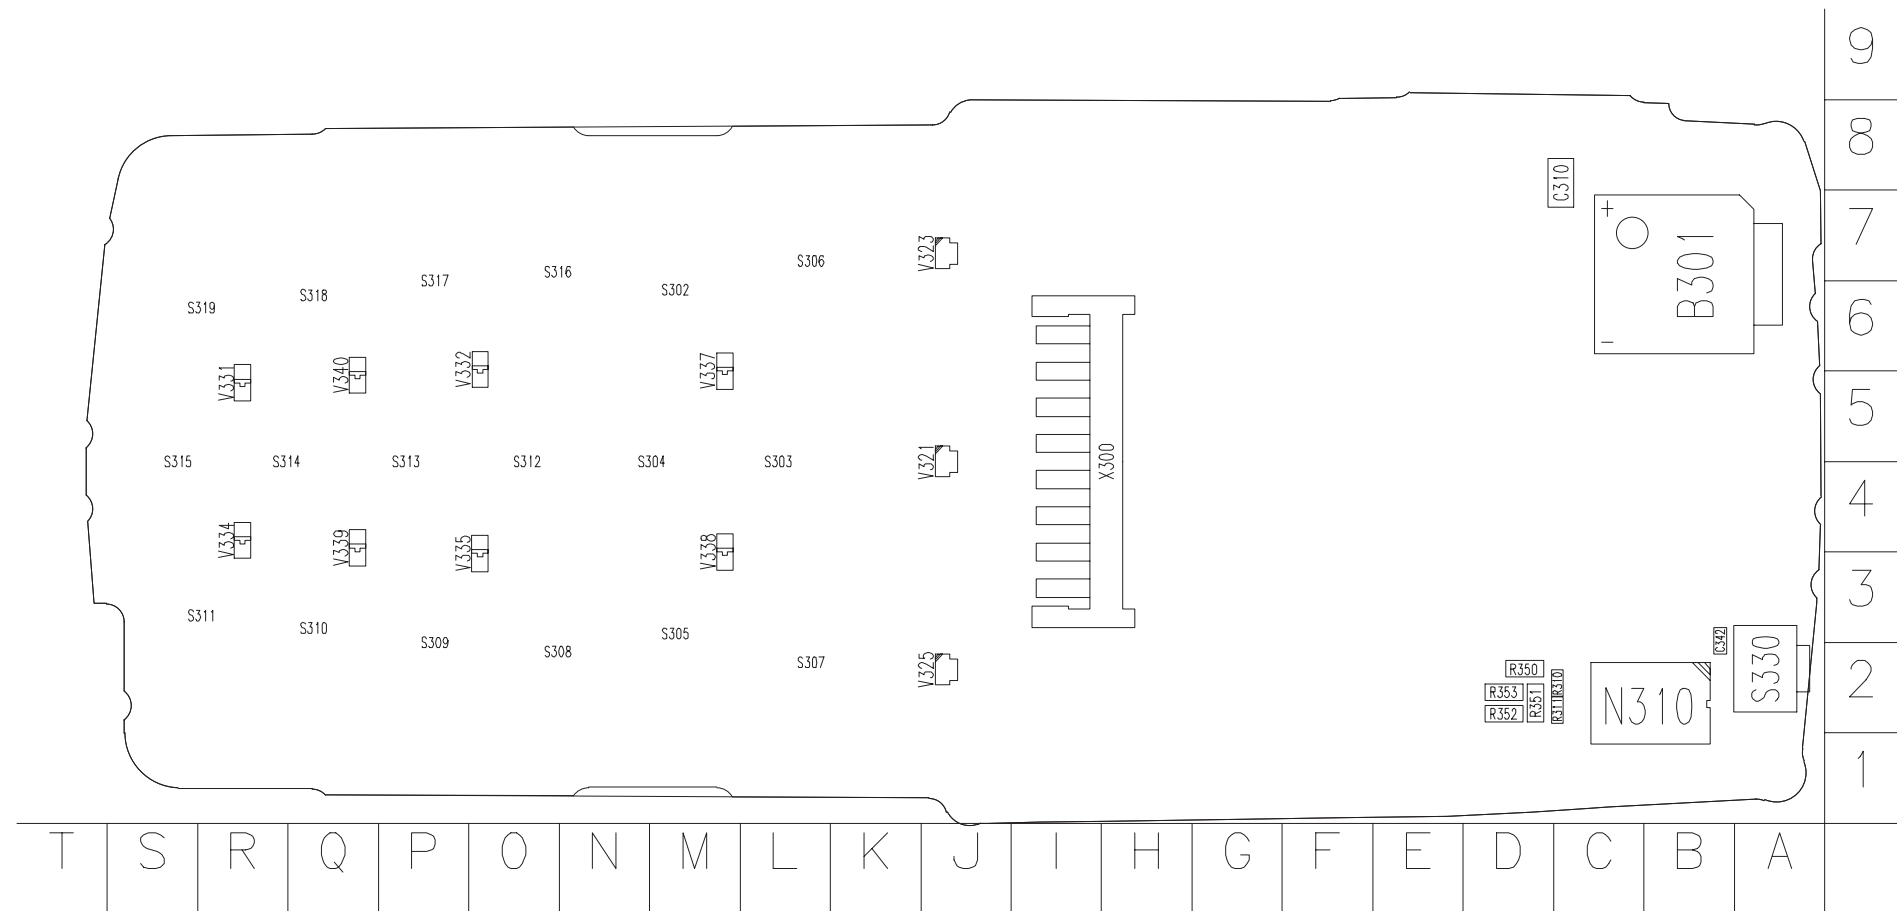

Testpoints of DF7 – Top (Version 05 & 06)

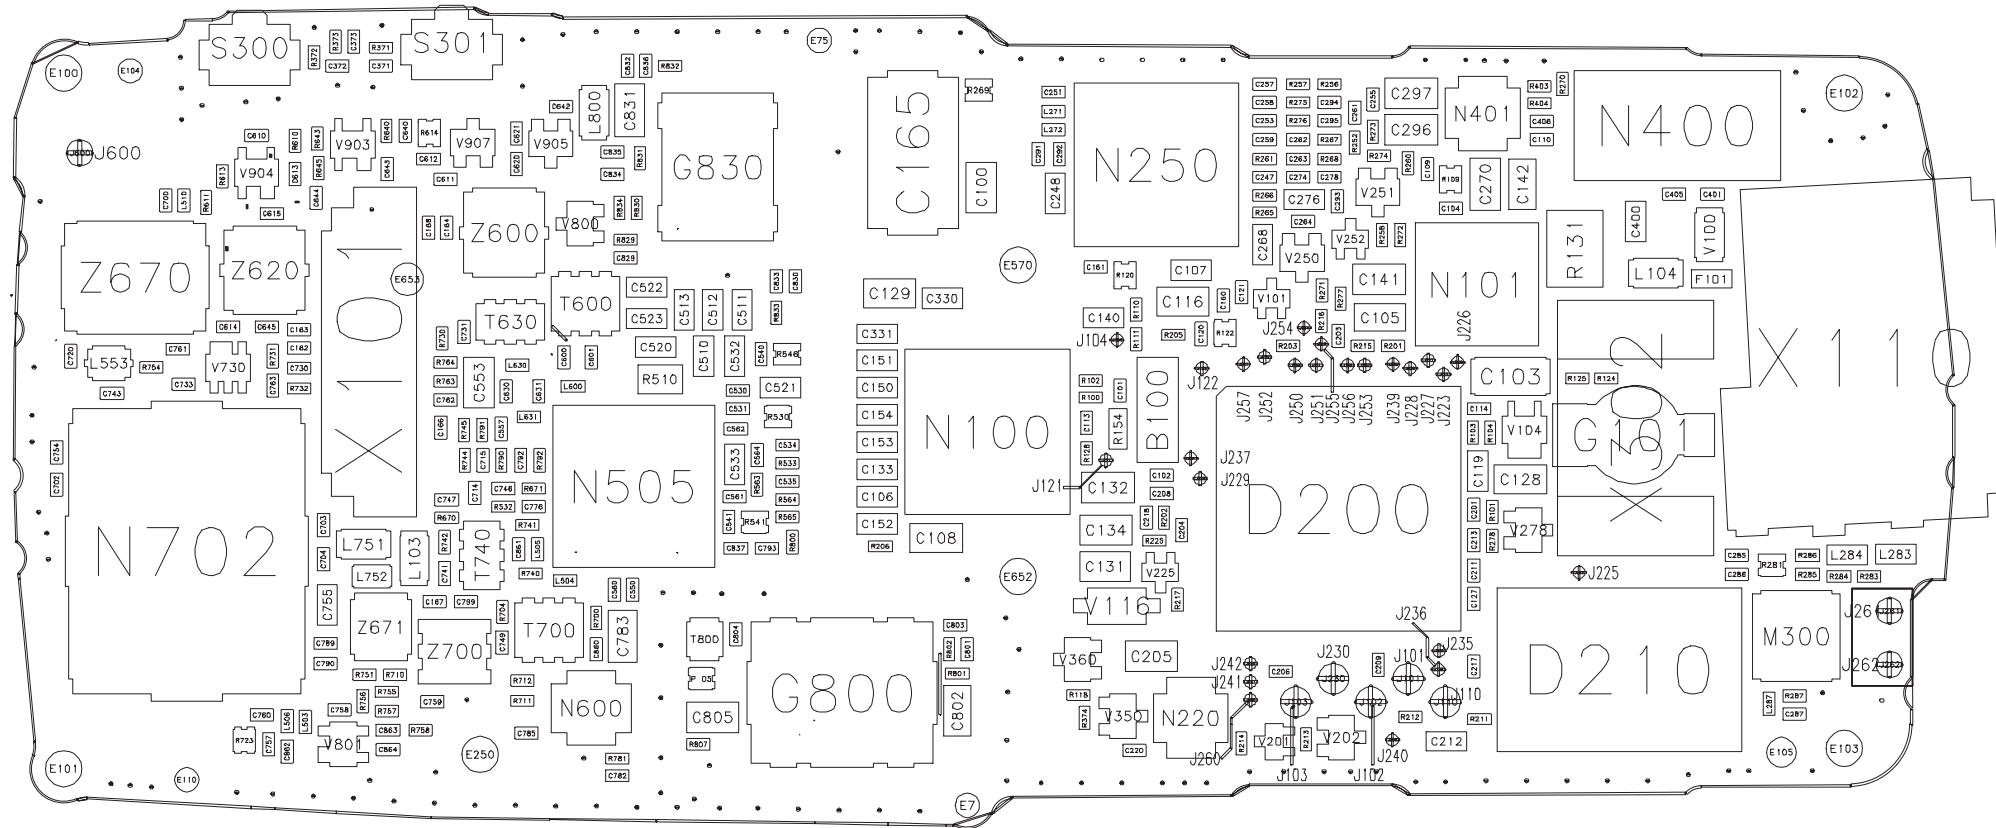

Testpoints of DF7 – Bottom (Version 00)