

Figure 130 Keyboard light

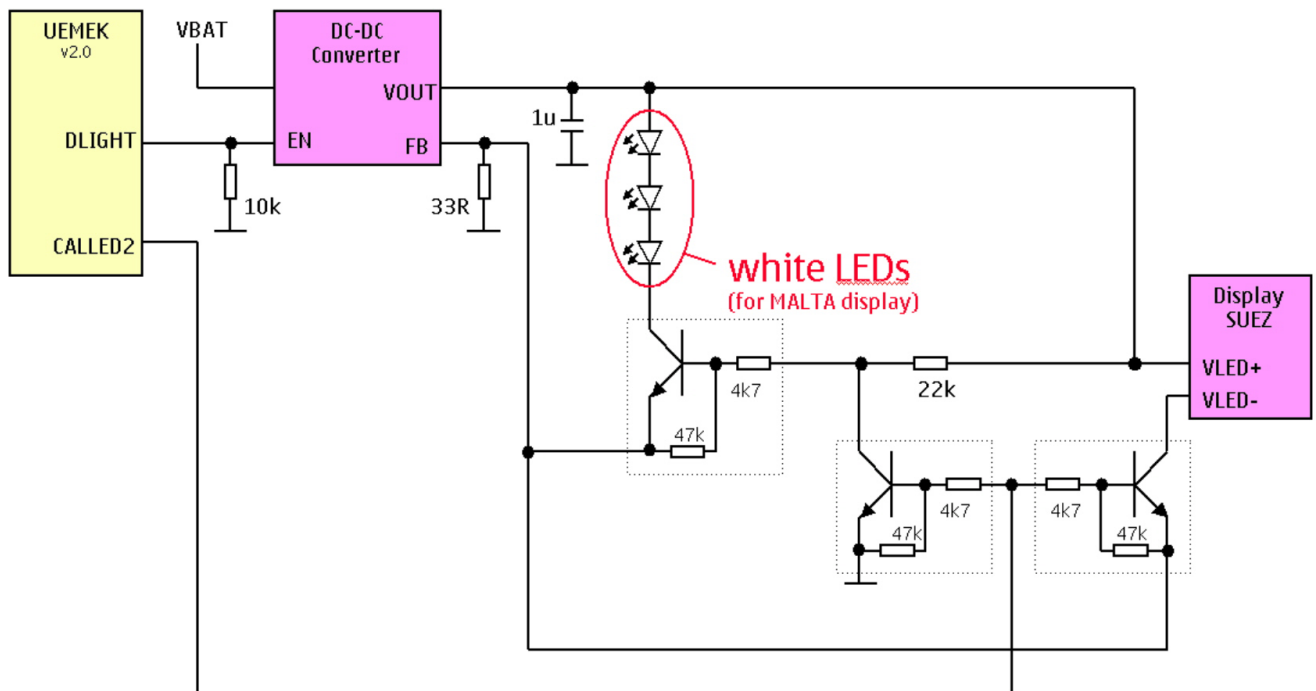


Figure 131 Display light

Test possibility

Phoenix LED test

For troubleshooting see Display faults in Baseband Troubleshooting Instructions.

SIM

The whole SIM interface locates in UPP and UEMEK.