

CCS Technical Documentation
RH-12/RH-28 Series Transceivers

5 – Disassembly Instructions




[This page left intentionally blank]

Table of Contents

| | Page No |
|-----------------------------|----------------|
| Disassembly Procedure | 5 |
| Reassembly Procedure | 7 |

[This page left intentionally blank]

Disassembly Procedure


| | |
|---|---------------------------------|
|  | <p>Remove the B-cover assy.</p> |
|  | <p>Remove the A-cover assy.</p> |
|  | |




Remove the Antenna assy.
Use the SRT-6 OPENING TOOL (Part code: 0770431)
when removing the Antenna assy.



Reassembly Procedure

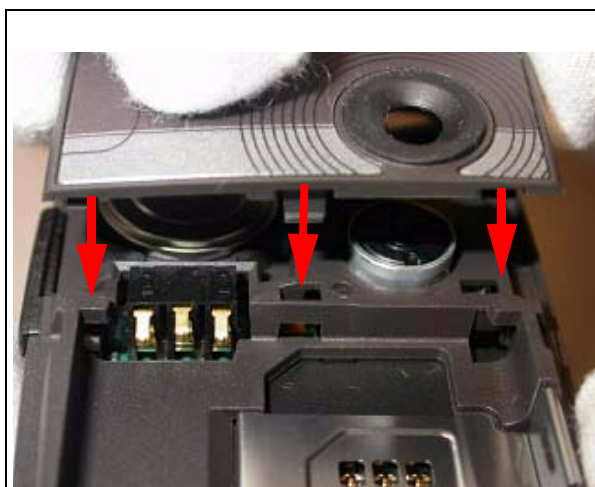

Mount the antenna assy.

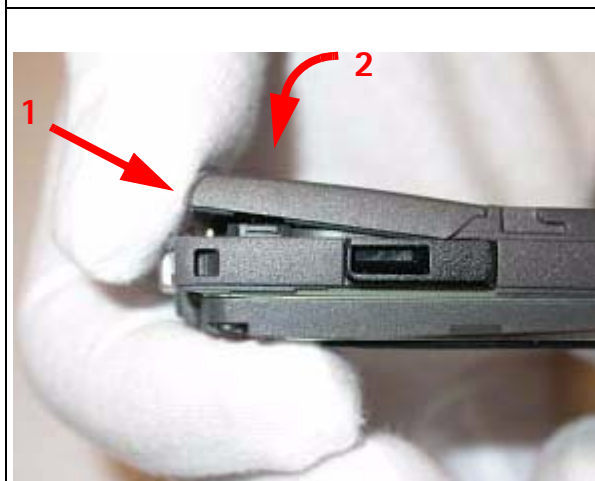

Mount the A-cover assy.



Mount the B-cover assy.



Mount the screws.
Use a flathead Torx 6IP 1.8 x 7.4 screwdriver to fasten the screws in the order shown in the diagram.
Torque 30Ncm at 650RPM.