


**Nokia Customer Care
6265/6265i/6268 (RM-66)
Mobile Terminals**

Parts Lists and Exploded View

Contents	Page
Exploded View	3
Assembly Parts List	4
Parts Lists and Component Information	7

Exploded View

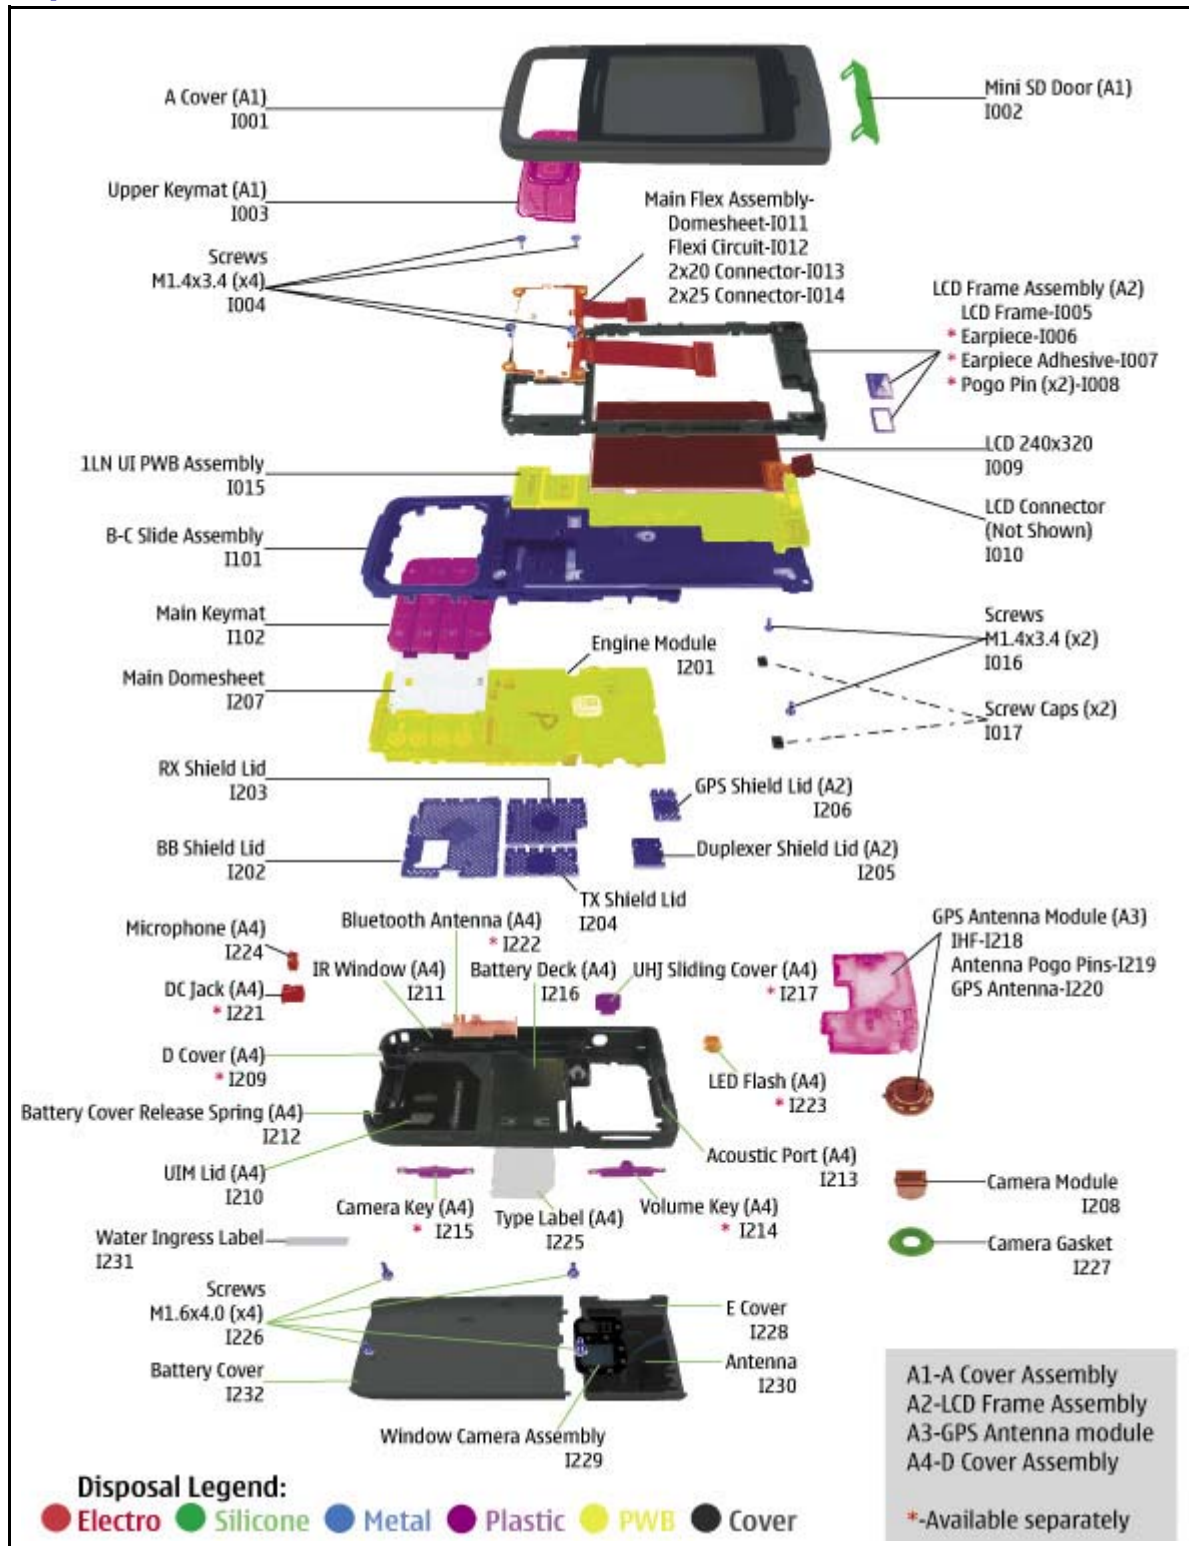

Assembly Parts List

Item/ Circuit Ref.	Qty	Description
		A-cover Assembly
I001	1	A-cover
I002	1	Mini SD door
I003	1	Upper keymat
I004	4	Screws M1.4 x 3.4 TORX PLUS
		LCD Frame Assembly
I005	1	LCD frame
I006	1	Earpiece
I007	1	Earpiece adhesive
I008	2	Pogo pin
		LCD Assembly
I009	1	LCD 240 x 320
I010	1	LCD connector (not shown)
		Main Flex Assembly
I011	1	Domesheet
I012	1	Flexi circuit
I013	1	2 x 20 connector
I014	1	2 x 25 connector
I015	1	1LN UI PWB assembly
I016	2	Screws M1.4 x 3.4 TORX PLUS
I017	2	Screw caps
I101	1	B/C slide assembly
I102	1	Main keymat
I201		Engine module
I202	1	BB shield lid
I203	1	Rx shield lid
I204	1	Tx shield lid

Item/ Circuit Ref.	Qty	Description
I205	1	Duplexer shield lid
I206	1	GPS shield lid
I207	1	Main domesheet
I208	1	Camera module
		D-cover assembly (I209 - I225)
		D-cover AMS assembly (I209 - I217)
I209	1	D-cover
I210	1	UIM lid
I211	1	IR window
I212	1	Battery cover release spring
I213	1	Acoustic port
I214	1	Volume key
I215	1	Camera key
I216	1	Battery deck
I217	1	UHJ sliding cover
		GPS Antenna Module (I218 - I220)
I218	1	IHF
I219	2	Antenna pogo pins
I220	1	GPS antenna
I221	1	DC jack
I222	1	BT antenna
I223	1	LED flash
I224	1	Microphone
I225	1	Type label
I226	4	Screws M1.6 x 4.0
I227	1	Camera gasket

Item/ Circuit Ref.	Qty	Description
		E-cover Antenna Module
I228	1	E-cover
I229	1	Window camera assembly
I230	1	Antenna
I231	1	Water ingress label
I232	1	Battery cover

Parts Lists and Component Information

Each mobile terminal is associated with two NMP codes, engine code and UI engine code. [Table 1](#) shows the different models and NMP codes associated with each model.

Table 1: Model Numbers and Corresponding NMP Engine Codes

Model Numbers	NMP Engine Codes
6265i	0202542
	0202543
6265	0202801
	0202543
6268	0202801
	0202543

Use the following links (or the bookmarks in the left pane of the PDF) to access the RF/BB module parts lists for each mobile terminal model.

- [6265i](#)
- [6265/6268](#)

Note: Mechanical Module parts listed under Assembly Parts List section on page 4 of the Parts List and Exploded View chapter.

This page intentionally left blank.