

Programmes After Market Service NPE-4 Series Cellular Phones

7 – Disassembly Instructions


Table of Contents

Description	Page No.
Disassembly instructions	3
Remove battery	3
Remove dustcap	3
Remove 4 screws	4
Remove B-cover	4
Remove antenna	5
Remove PWB	6
Remove keymat, speaker and buzzer	6
Remove the lightguide	7
Removing the microphone	7

Disassembly Instructions


1. Remove Battery

- 1 Push button.
- 2 Slide battery towards system connector and remove.

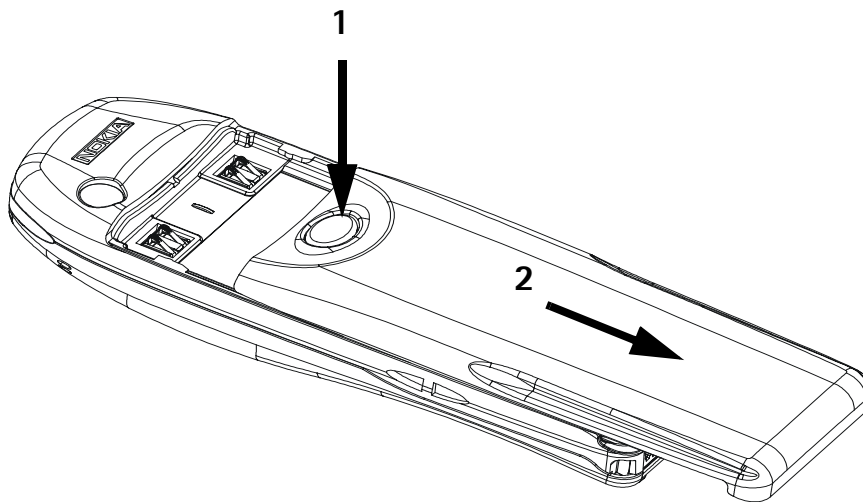


2. Remove Dustcap

- 1 Remove dustcap.

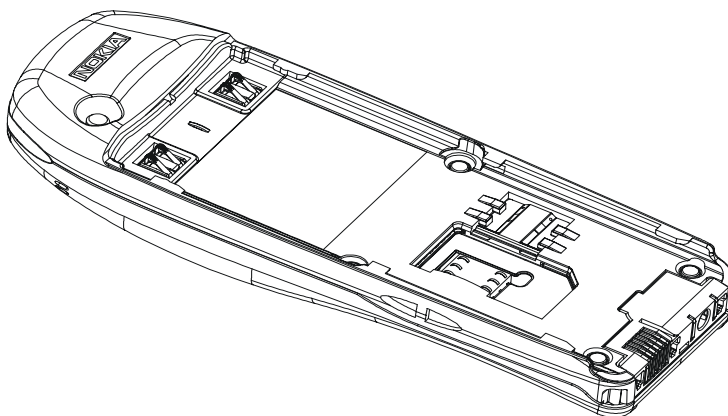


3. Remove 4 Screws

- 1 Remove 4 screws(Torx # 6)

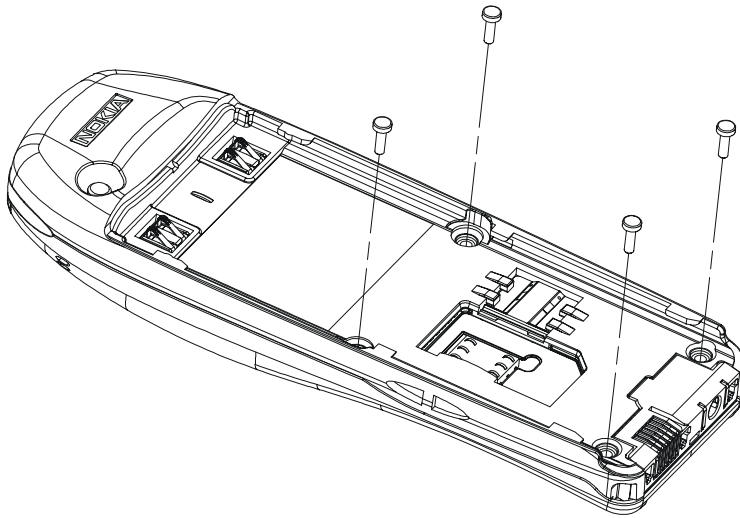


4. Remove B-cover

- 1 Lift B-cover at system connector - be aware of the tight snaps each side of the type label.
- 2 Twist the B-cover slightly both ways until it releases.
- 3 Lift B-cover until 3 top snaps disengage.

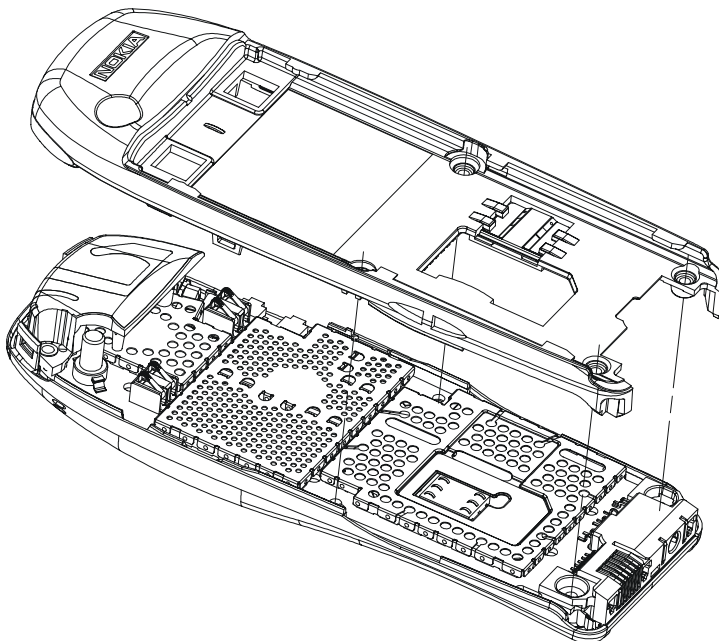


5. Remove Antenna

- 1 Remove the antenna screw (Torx # 6).

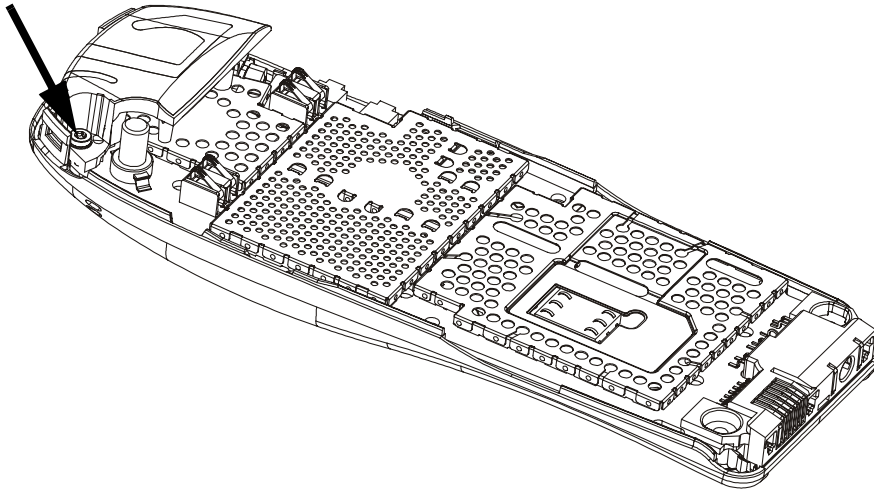


- 2 Lift up antenna from the body.

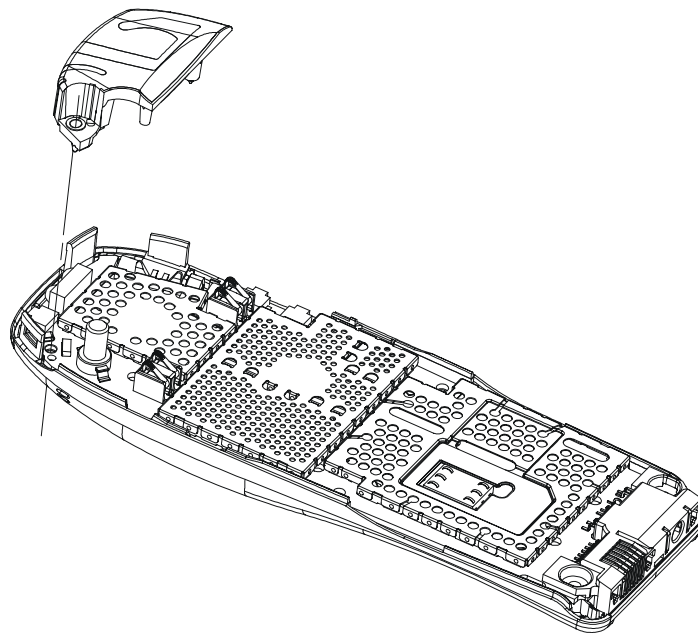

7. Remove PWB


- 1 Carefully lift up the PWB.

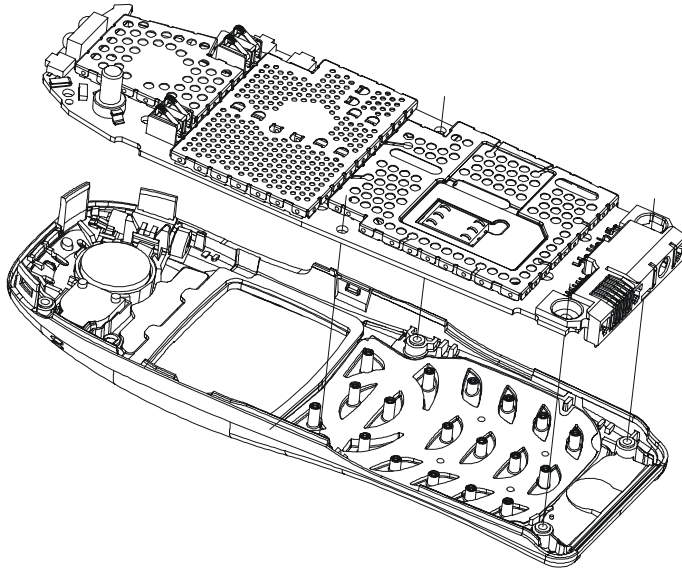

8. Remove Keymat, Speaker and Buzzer.


- 1 Carefully lift out the Keymat.
- 2 Remove the Speaker and the Buzzer using a straight bladed screwdriver.

NOTE: Avoid touching Speaker and Buzzer Springs and Speaker Membrane.

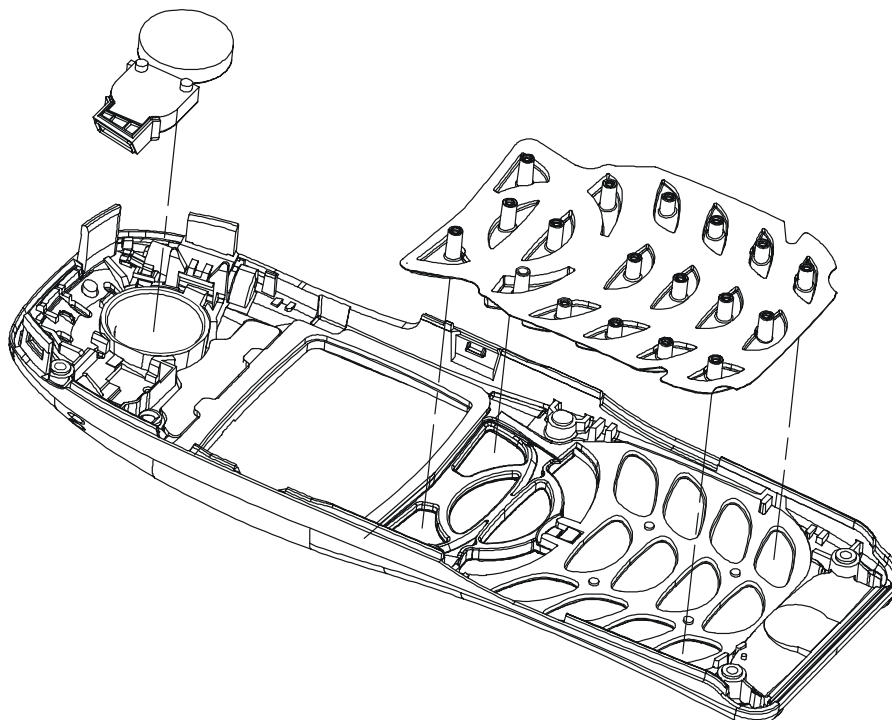


9. Remove the Lightguide

- 1 Carefully bend the two plastic bottom snaps out (1).
- 2 Bend out the two top plastic snaps (2).
- 3 Lift out the Lightguide.

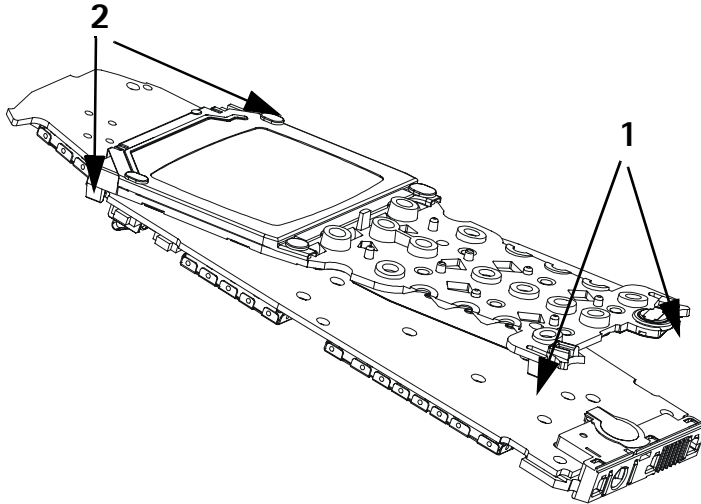

10. Removing the Microphone

- 1 Remove the Microphone by lifting the tape (1).

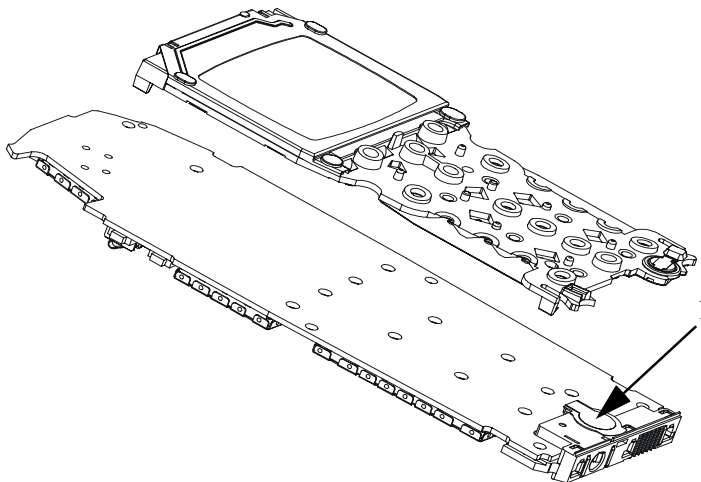

IMPORTANT NOTES

1. Never re-use removed Shield Can Lids - a new lid must be fitted in order to comply with type approval requirements.
2. When reassembling the phone, all 5 Torx screws must be tightened to 17Ncm.
3. Always use new Torx screws.

This page intentionally left blank