CCS Technical Documentation RH-34 Series Transceivers


# **Disassembly/Assembly**

## Step-by-Step Disassembly Instructions

#### Alway use ESD protection




### **Disassembly Instructions**

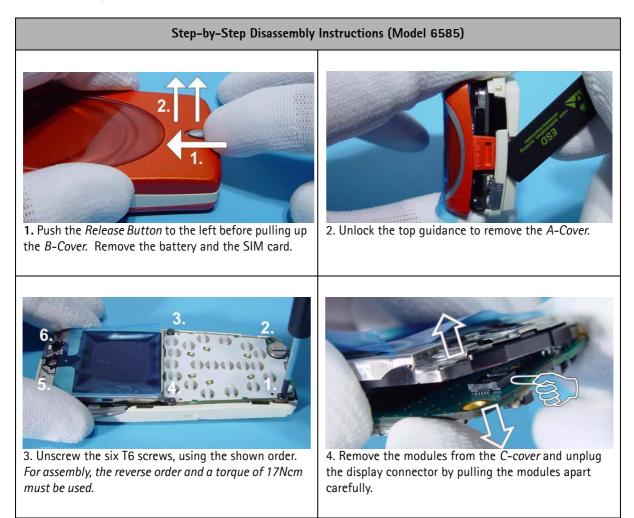

NOKIA


**CCS** Technical Documentation

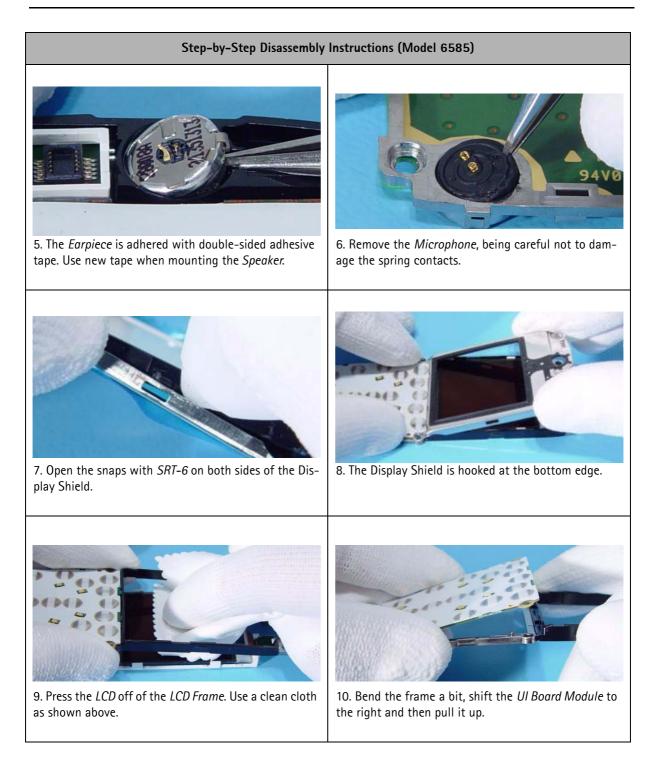


#### Step-by-Step Disassembly Instructions (Model 6585)



11. To remove the DC Jack, insert tweezers between the spring contacts and under the jack. You will need to use some force to pull the jack upward.

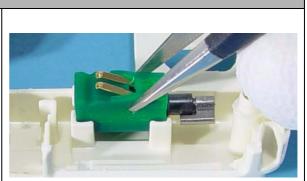

12. Grip the *Vibra Motor* as shown above and pull it off of its guidance.

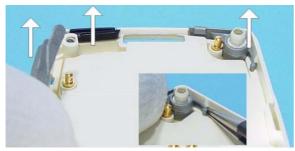

13. Use your fingers to remove the *Volume Key* and the *Infrared Window*. The *Power Key* must first be unlocked on the lower side (see inset).



14. Use the *SRT-6* tool to unlock the *Antenna* on both sides.



16. If you need to change the *Release Button*, you can use the SRT-6 to remove the button.

## **Assembly Instructions**

Use the Disassembly Instructions in the reverse order to reassemble the handset.