## **PAMS Technical Documentation**

# NHE-6/NHK-6 DISASSEMBLY INSTRUCTIONS

**Disassembly Instructions** 

**Technical Documentation** 

## **AMENDMENT RECORD SHEET**


Amendment Number	Date	Inserted By	Comments
Issue 2	12/97	J Rantala	Torque info added on p.3 & p.4
			font case mounting added,
			repaginated

Page 2 Original 08/98

**Technical Documentation** 

**Disassembly Instructions** 

## **Disassembly Instructions**

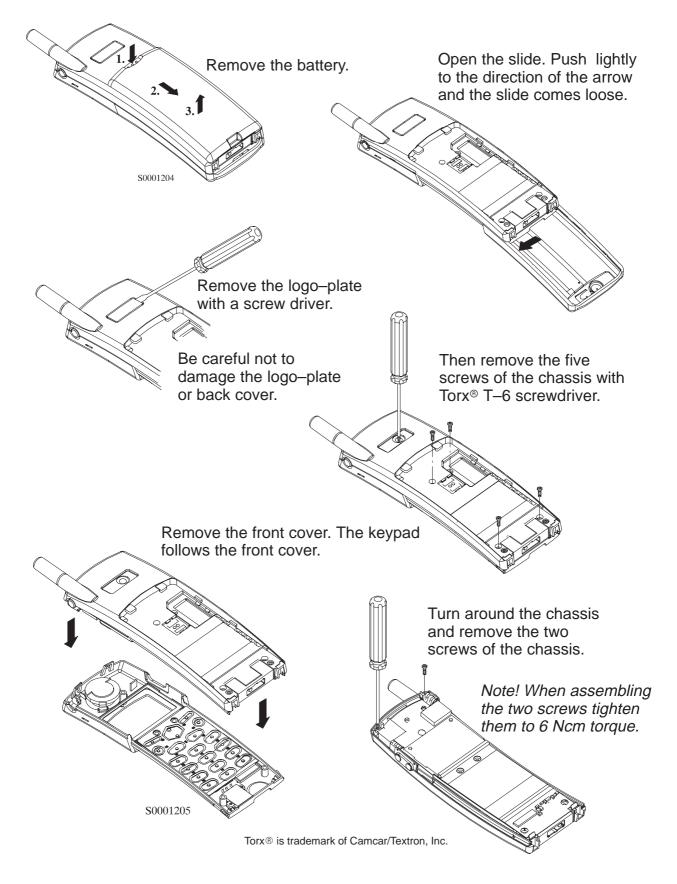


Original 08/98 Page 3

NHE-6/NHK-6 PAMS

#### **Disassembly Instructions**

#### **Technical Documentation**

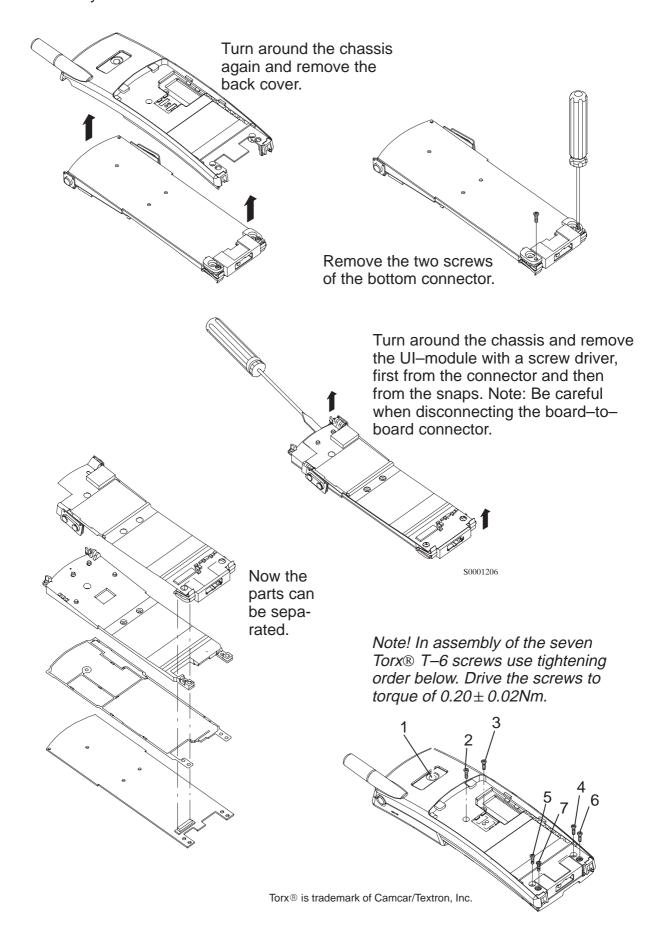

Page 4 Original 08/98

PAMS NHE-6/NHK-6

**Technical Documentation** 

**Disassembly Instructions** 

### **Front Cover Installation**

NOTE: If A-cover does not include the speaker, follow instruction in section: Speaker Installation.




Check that inside of the window is free of dust or rubbish.

Place the keypad in Front Cover and then press front and back cover together.





- 1 Snaps at upper end lock to each other securely.
- Power or volume keys are not squashed between front and back cover.
- 3 Buzzer sound hole isn't blocked by the buzzer gasket.

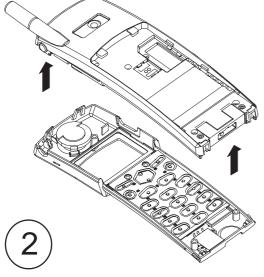

Screw on five Torx® T–6 screws to torque  $0.20 \pm 0.02$ Nm

 Screw them on at order shown right.

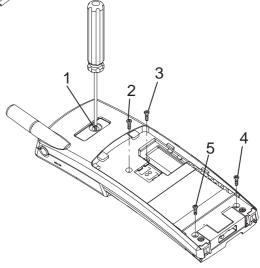



If logo-plate slot at back cover has any glue residues, remove them.

Install logo-plate and press it firmly onto the back cover by fingers.

Use of a new logo—plate is recommended to ensure good adhesion to back cover.

Torx® is trademark of Camcar/Textron, Inc.

Original 08/98 Page 5

NHE-6/NHK-6 PAMS

Disassembly Instructions

**Technical Documentation** 

This page intentionally left blank.

Page 6 Original 08/98