

Service Schematics

NOKIA N770

SU-18

Introduction

IMPORTANT:

This document is intended for use by authorized NOKIA service centers only.

“Service Schematics” was created with focus on customer care. The purpose of this document is to provide further technical repair information for NOKIA mobile phones on Level 3/4 service activities. It contains additional information such as e.g. “Component finder”, “Frequency band table” or “Antenna switch table”. The “Signal overview” page gives a good and fast overview about the most important signals and voltages on board. Saving process time and improving the repair quality is the aim of this document. It is to be used additionally to the service manual and other training or service information such as Service Bulletins.

All measurements were made using following equipment:

| | |
|---------------------------|--|
| Nokia repair SW | : Phoenix version 2005.20.7.98 |
| Oscilloscope | : Fluke PM 3380A/B |
| Spectrum Analyzer | : Advantest R3162 with an analog probe |
| RF-Generator / GSM Tester | : Rhode & Schwarz CMU 200 |
| Multimeter | : Fluke 73 Series II |

While every endeavour has been made to ensure the accuracy of this document, some errors may exist. If the reader finds any errors, NOKIA should be notified in writing.

Please send E-Mail to: training.sace@nokia.com

Copyright © NOKIA

This material, including documentation and any related computer programs is protected by copyright, controlled by NOKIA. All rights are reserved. Copying, including reproducing, modifying, storing, adapting or translating any or all of this material requires the prior written consent of NOKIA. This material also contains company confidential information, which may not be disclosed to others without the prior written consent of NOKIA.



| Table of Contents | Page |
|------------------------|------|
| Front page | 1 |
| BB connection overview | 2 |
| UI | 3 |
| USB, MMC | 4 |
| RETU | 5 |
| TAHVO | 6 |
| OMAP, Combo- memory | 7 |
| WLAN, BT | 8 |
| Audio | 9 |
| Signal overview | 10 |
| Component finder | 11 |

Exploded view and component disposal





















