

This manual is for reference and historical purposes, all rights reserved.

**This page is copyright© by M. Butkus, NJ.**

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

**If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.**

**This will allow me to continue to buy new manuals and pay their shipping costs.**

**It'll make you feel better, won't it?**

**If you use Pay Pal or wish to use your credit card,  
click on the secure site on my main page.**



E

**OLYMPUS**

**OLYMPUS  
OM-2**

**INSTRUCTIONS**

■ **AT A GLANCE**

[www.orphancameras.com](http://www.orphancameras.com)



The OM-2 will not function without battery power. If you release the shutter without batteries or with batteries that are dead, the mirror locks and the field of view through the viewfinder darkens (indicating that no batteries are loaded or that the batteries are dead). To unlock the mirror load fresh batteries and move the selector lever to the CHECK·RESET position.

# MOUNT THE LENS.

 


Remove the caps.

Aligning red dots, insert and rotate the lens until the lens release button springs up.




Press in the mount tabs on the edges of the lens cap.

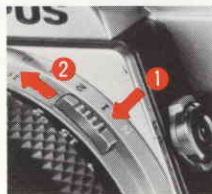


How to remove the lens.


# INSERT THE BATTERIES.

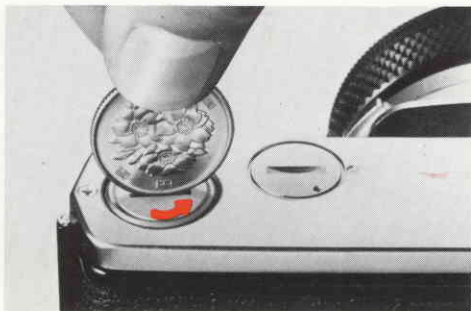 

Uncap the battery chamber.

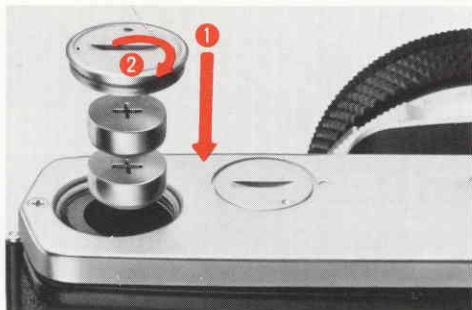 

 Insert two 1.5V silver oxide batteries SR44 (Ever-ready or UCAR EPX 76 or equivalents) correctly. (Alkaline-manganese and lithium batteries may not be used.)

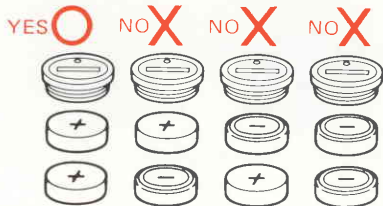

## CHECK THE BATTERIES.

TURN THE MANUAL SHUTTER SPEED RING TO ANY SETTING EXCEPT "B".

 
OLYMPUS  
OM-2



Press the selector lever to the "CHECK-RE-SET" position.



The battery check lamp lights.

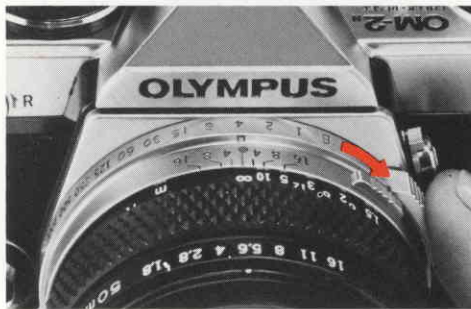


Set the manual shutter speed ring at any speed setting except "B", where the automatic exposure control system does not work.


# LOAD THE CAMERA WITH FILM. ①




 Pull the rewind knob up and the camera back opens.


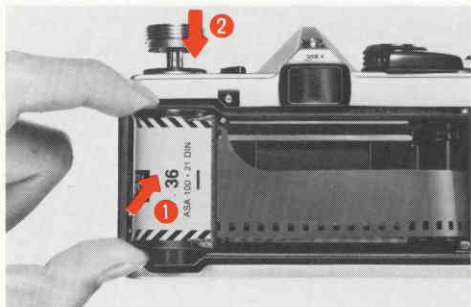


  Insert a film cartridge into the film chamber.

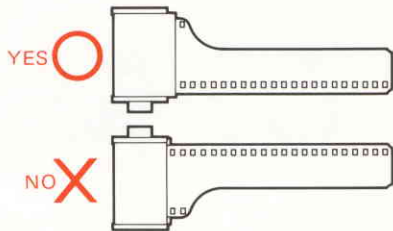


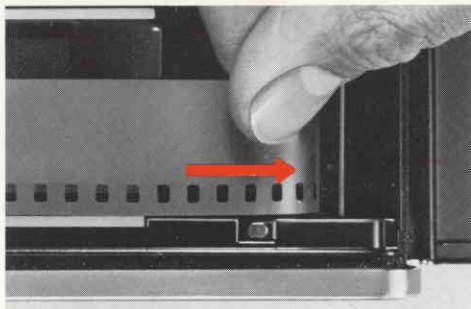

  Insert the film leader into one of the slots in the film take-up spool.

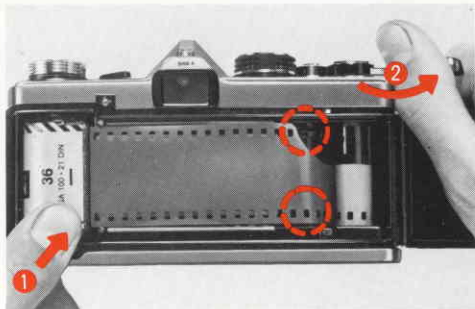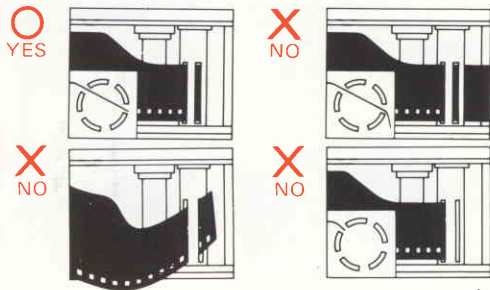


 Engage the film perforations on the sprocket teeth.






## LOAD THE CAMERA WITH FILM. ②

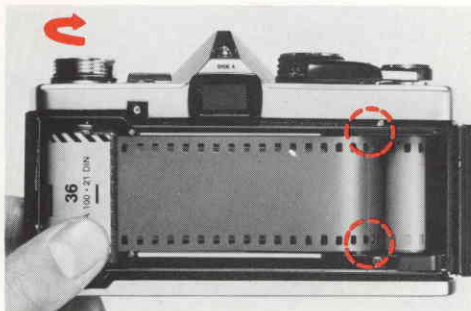 


Tighten the film and close the camera back with a click.

 
YES ○

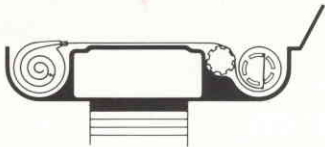

NO X

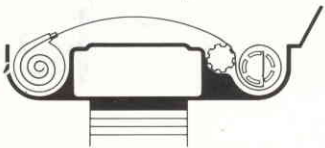 

 
With the selector lever at "OFF" position, advance the film and release the shutter. Repeat these steps alternately until the exposure counter indicates "1".



## SET THE ASA FILM SPEED DIAL.

## SET THE APERTURE RING.

 OLYMPUS  
OM-2

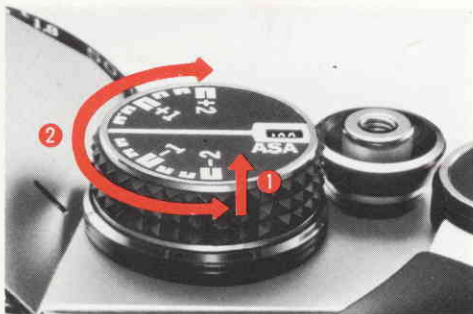


Lift the outer collar of the exposure compensation dial and rotate it until the ASA speed of the film in use appears in the dial window.

**NOTE:** Align the white line with the black index line on the pentaprism after setting ASA.



 
The aperture (F stop) of Olympus Zuiko lenses may be set at click-stop positions or in-between.

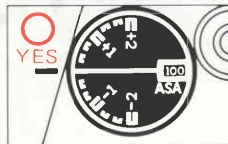


A rough guide for setting the aperture ring (with ASA 100 film).

Weather			
F stop	16	8	4

 SET THE SELECTOR LEVER TO THE "AUTO" POSITION.

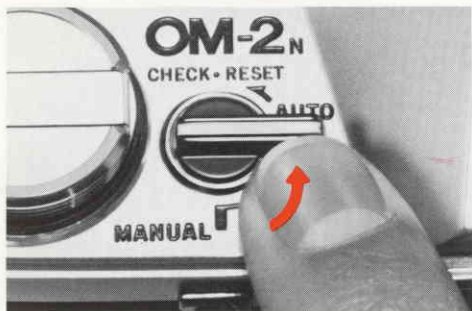

FOCUS ON THE SUBJECT.

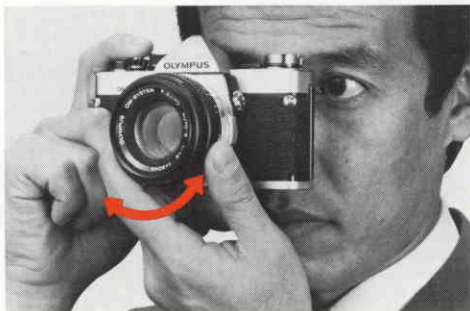 


Looking through the viewfinder, rotate the focusing ring in either direction until the split images of the subject in the central spot are aligned.

The viewfinder indication changes.

OFF





 AUTO

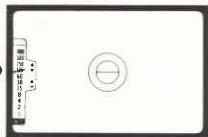

YES 

  NO 

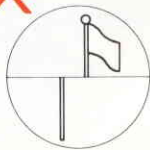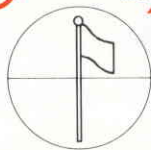


# RELEASE THE SHUTTER.

OLYMPUS  
OM-2

○  
YES



 YES ○

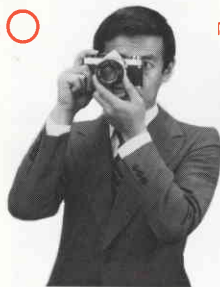

NO X

 


Hold the camera steady.

X  
NO



YES ○

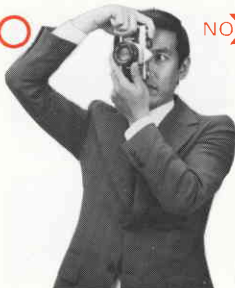

NO X




After exposure, set the selector lever to the "OFF" position.

## UNLOAD THE CAMERA.



 Turn the rewind release lever counter-clockwise by 90°.

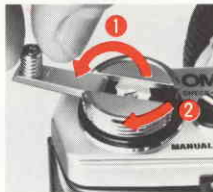

Fold out the rewind crank and wind it clockwise until the crank turns freely (in the direction of the arrow.)



Open the camera back and remove the film cartridge.




**NOTE:** Be sure that the selector lever is in the "OFF" position.

# USE OF THE SELF-TIMER.
 
# FLASH PHOTOGRAPHY WITH THE T32-T20.

OLYMPUS  
OM-2

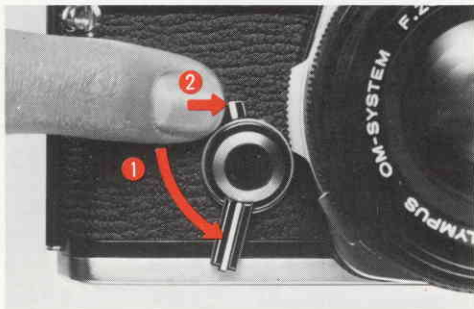

- ① Turn the longer lever counter-clockwise by approximately 180° until it stops.
- ② Turn the start (shorter) lever clockwise into the vertical position to activate the longer lever.



**NOTE:** Be sure that the film has been wound fully.




Electronic Flash T32

Electronic Flash T20



With the OM-2 on AUTO mode, the T32 (or T20) provides easy flash photography.

## MOUNT THE T32.

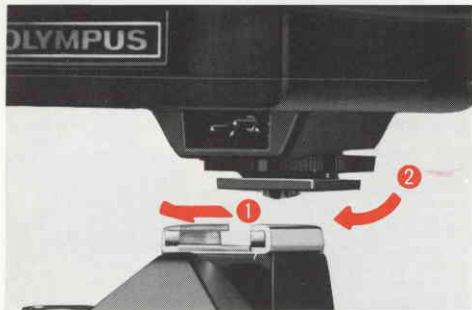 

Insert the T32 into the accessory shoe and lock.



## SWITCH THE T32 "ON".





Set the selector lever to the "AUTO" position, and switch the T32 "ON". The T32 (or T20) does not require any setting of film speed or F/stop on it.



# LOOK THROUGH THE VIEWFINDER. FOCUS AND EXPOSE.

DYNAMIC  
OM-2

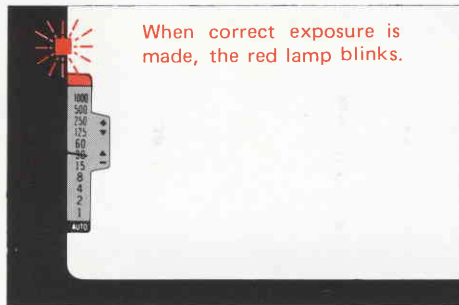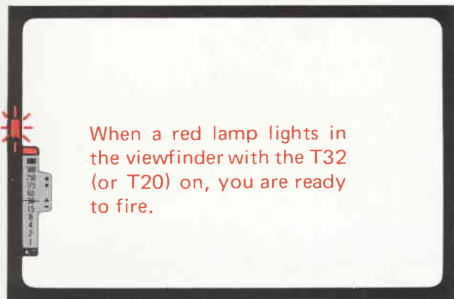

In case the T32 (or T20) does not flash ... ↓  
Correct exposure has been made requiring no flash. If exposure must intentionally be achieved with flash, turn the aperture ring to a larger F/stop until the meter indicates a shutter speed 1/30 sec. or slower.

If the red lamp does not blink ...



Move in closer to the subject.