

This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

OM10

E

OLYMPUS[®] OM10FC

INSTRUCTIONS

To an OM-10FC Owner

We appreciate very much that you have acquired an OM-10FC, a camera designed to allow you to take good pictures automatically and with the greatest ease.

The Olympus OM-10FC is a single lens reflex camera of the finest quality in which the automation of photographic functions has been made possible by employing the most advanced electronics. To its acceptability of Olympus interchangeable lenses, a special film winder, a flash,


and a host of other accessories are added to make it a complete system of photography. With the OM-10FC you can gradually widen your enjoyment of the photographic art.

We sincerely wish that it will become for you a source of unending satisfaction. To this effect, please read this instruction manual carefully before using the camera, so that you may be sure of taking correct, beautiful pictures every time you use your OM-10FC.


TABLE OF CONTENTS


● Description of Controls	3	● Long Exposures	30
● Preparations before		● Flash Photography	31
Taking Pictures	6 to 15	● Using the Winder 2	33
● Mounting and Detaching		● From General Photography	
the Lens	7	to the Use of Interchange-	
● Inserting the Batteries	9	able Lenses	35
● Checking the Batteries	10	● Making Use of the Depth of	
● Loading the Film	11	Field	37
● Setting the ASA Film Speed	15	● Manual Exposure Control	39
● The Way to Automatic		● Care and Storage of the	
Photography	16 to 25	Camera	43
● Setting the Aperture	17	● Questions and Answers	45
● Taking Picture Auto-		● Main Specifications	47
matically	19		
● The OM-10FC: Designed to			
Save Battery Consumption	22		
● Switching the Camera Off	23		
● Rewinding the Film	23		
● Unloading the Film	24		
● The Use of the Self-Timer	25		
● Photographic Techniques			
.	26 to 42		
● Controlling the Exposure	27		
● Photography with Shutter-			
Speed Priority	28		
● Exposure Compensation	29		

DESCRIPTION OF CONTROLS

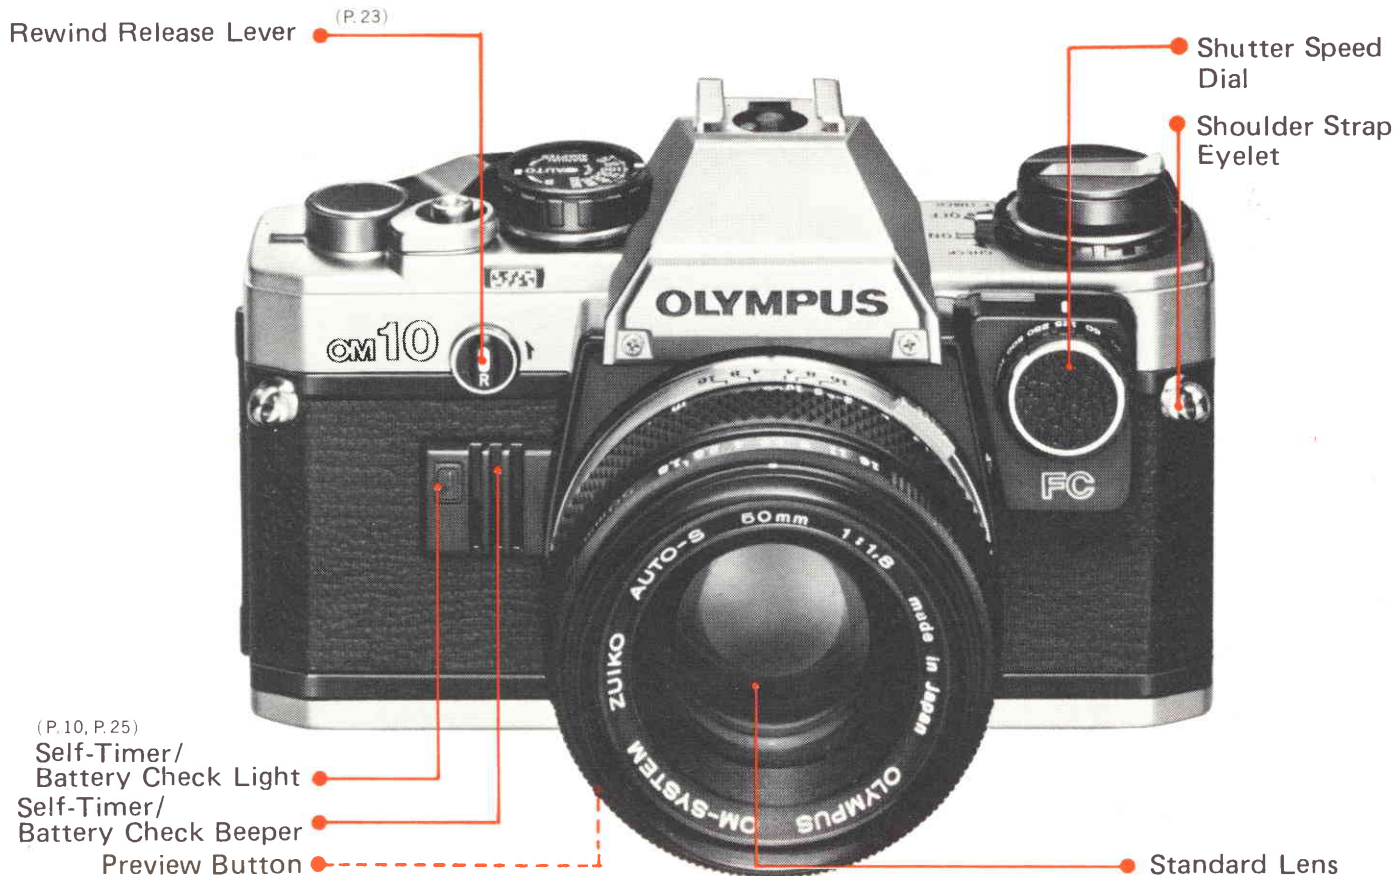

The photo indicates OM-10FC camera body with the 50mm F1.8 standard lens.

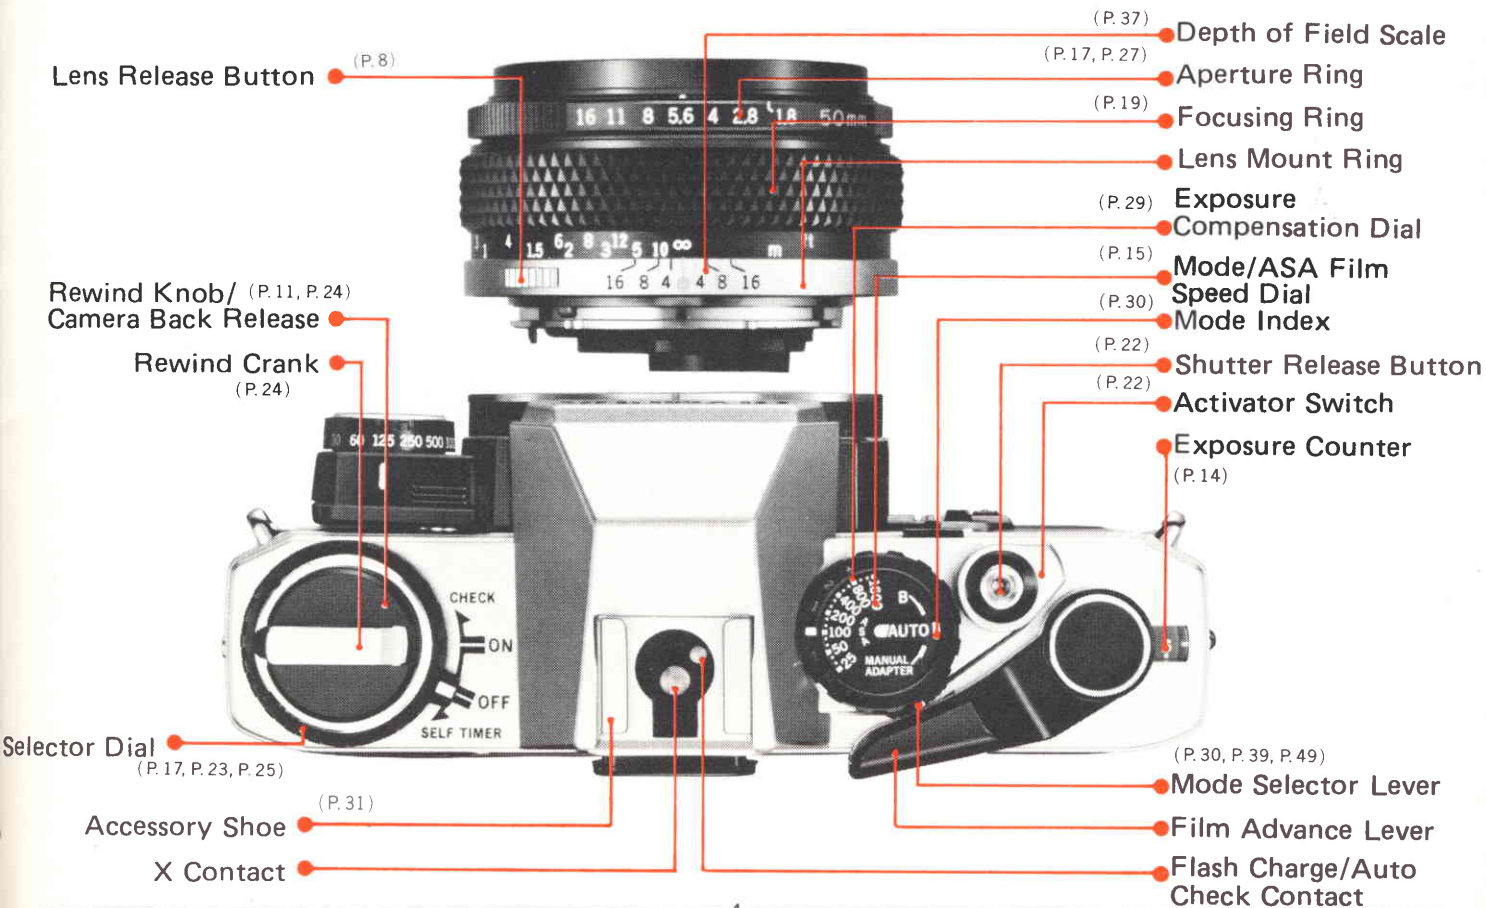

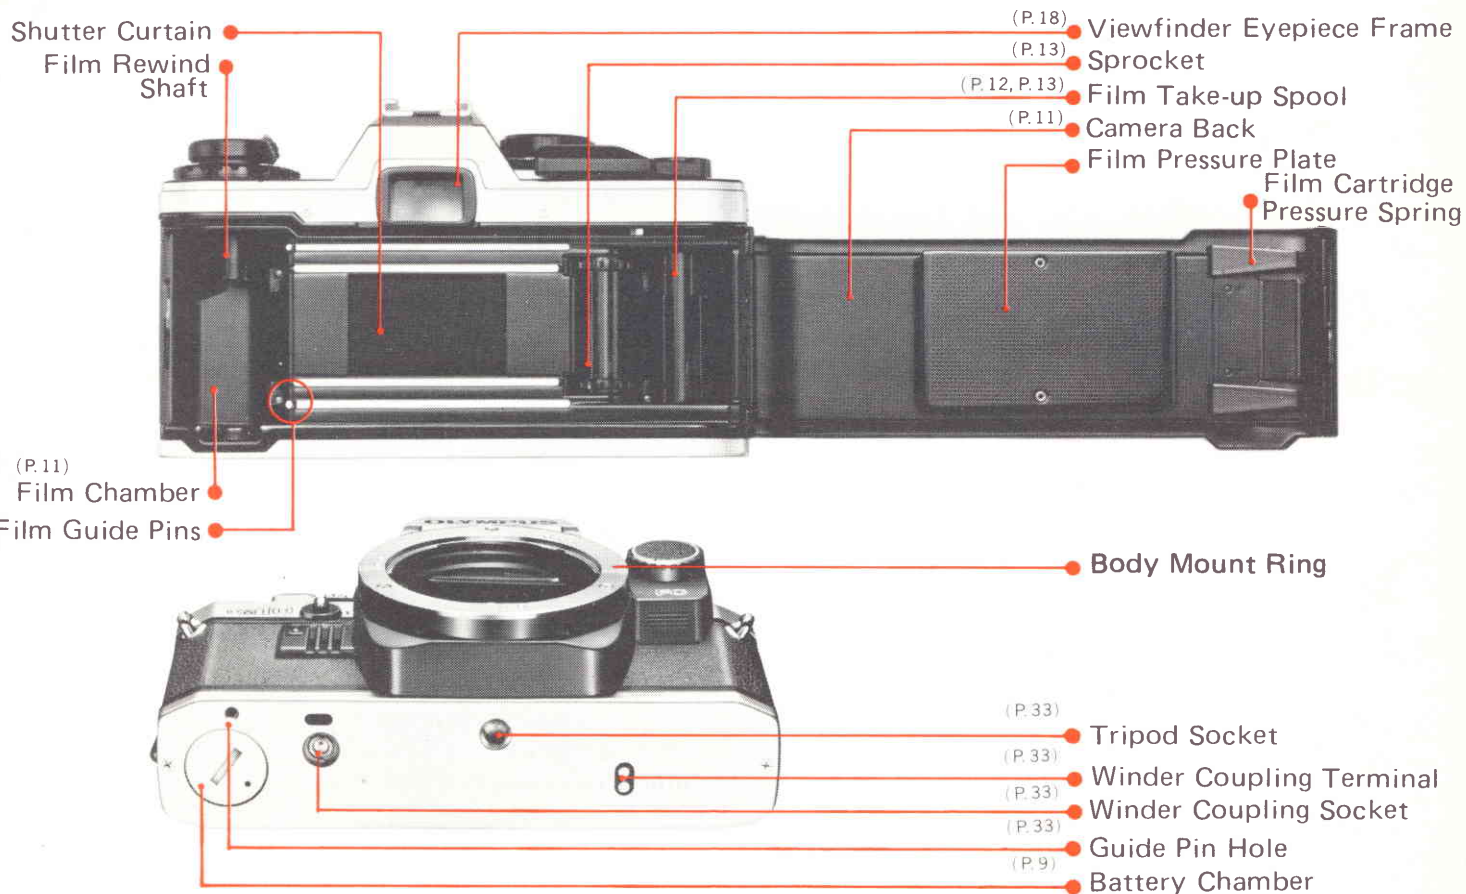

PREPARATIONS BEFORE TAKING PICTURES

The OM-10FC's circuits are powered by two 1.5V alkaline-manganese or silver oxide batteries. Without them, the shutter of this electronic single lens reflex camera will not function.

This section is devoted to explaining the preparations which you must go through before proceeding to take pictures. Please keep in mind that they are indispensable for obtaining good results.

MOUNTING AND DETACHING THE LENS



① Remove the body cap and the rear lens cap.*



② Remove the front lens cap.

* If you have purchased an OM-10FC in conjunction with a lens, the body cap and rear lens cap are not provided.




③ Mount the lens.




④ Detach the lens.


INSERTING THE BATTERIES

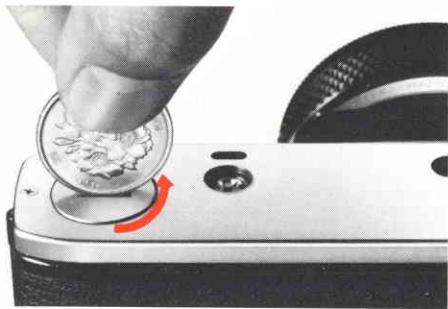

- ① Remove the cover of the battery chamber.

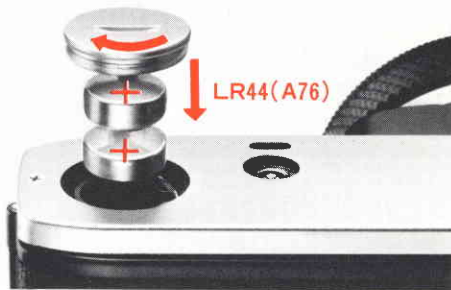


- ② Insert two 1.5V alkaline-manganese batteries LR44 (A76).
- ③ Replace the cover.

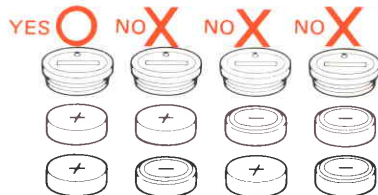

(NOTE)

Two 1.5V silver oxide batteries SR44 (Eveready EPX-76) or equivalents can be also used.

CHECKING THE BATTERIES

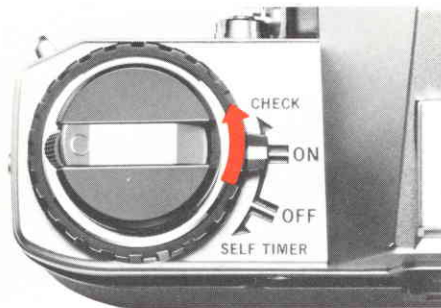

- ① Move the selector dial to "CHECK".




- ② A beeping sound is heard and the battery check light turns on.
- ③ After the check set back the dial.

(Attention)

If no sound is heard and the light does not turn on, the batteries have not been correctly inserted, or their charge is exhausted. In this case they must be replaced.

LOADING THE FILM

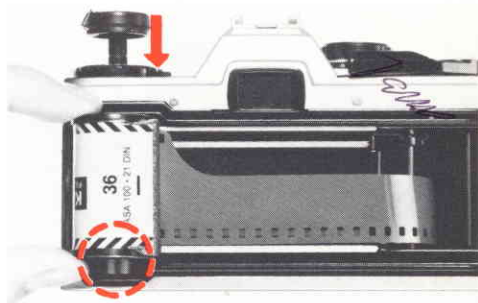


② Load the film.




① Open the camera back.
(Never load or unload
the camera in direct sun-
light.)

 YES 




NO 



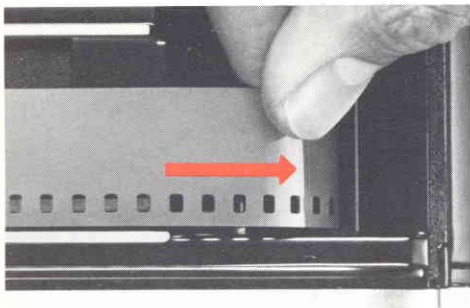


- ③ Insert the film leader in one of the slots of the take-up spool.

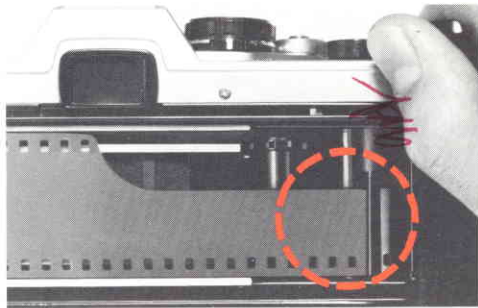


- ④ The film leader must not be excessively drawn out.


YES 

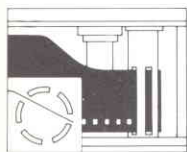


NO  (The film leader is twisted.)

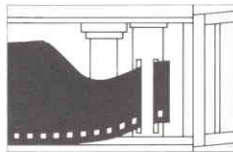


NO  (The film leader does not enter completely.)

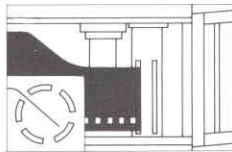


NO  (The film leader is excessively drawn out.)

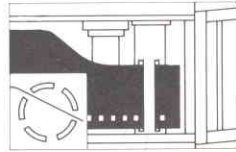


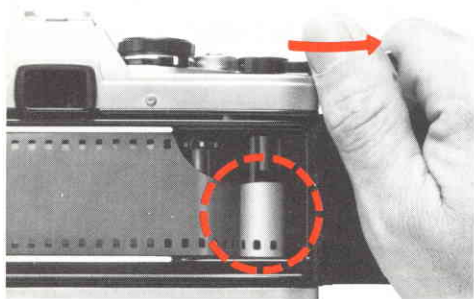


- ⑤ Wind the film once.

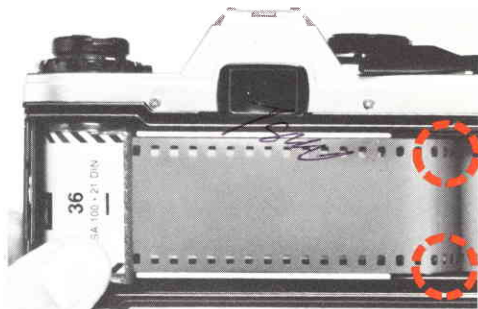


- ⑥ The perforations of the film must engage with the sprocket teeth. Make sure it is well tense, and close the back.

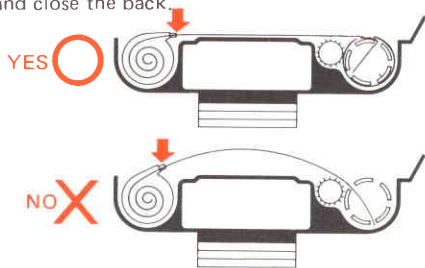


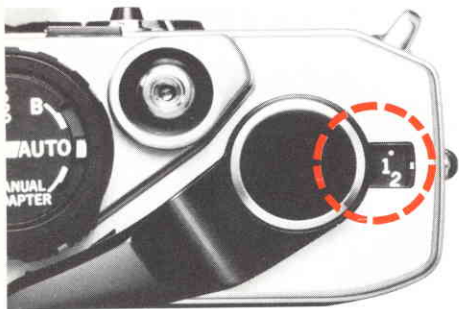

 - 7 Take blank shots until the exposure counter shows "1".




(Ways of taking blank shots)

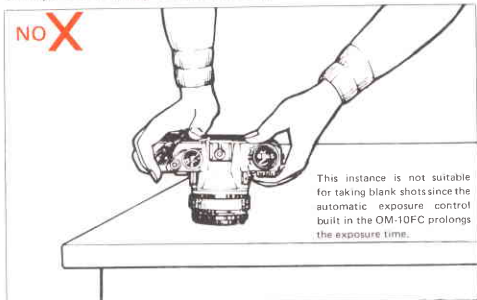


SETTING THE ASA FILM SPEED



Set the ASA film speed.

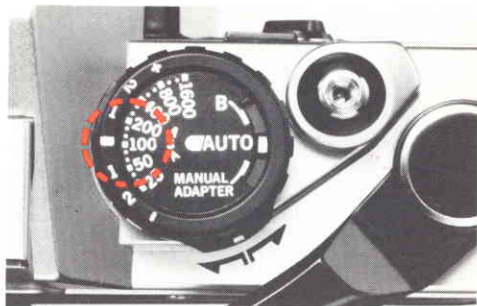

(The ASA film speed dial is set at ASA 100.)

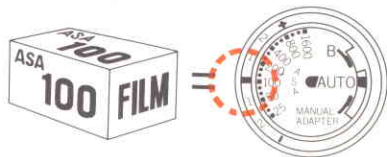


THE WAY TO AUTOMATIC PHOTOGRAPHY

All the problems
of exposure are electronically taken care
by the OM-10FC.




It is a single lens reflex camera
which can be set for automatic control of exposure,
and when set so taking correctly exposed,
beautiful pictures could not
be simpler.

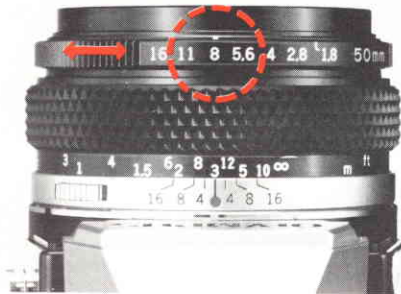SETTING THE APERTURE




- ① Set the desired aperture.


(Aperture guideline)

Weather			
F/stop	16	8	4


NOTE: To make full use of the aperture ring, read page 27.

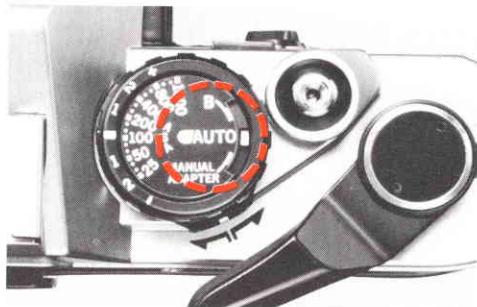

- ② Confirm that the camera is set at the "AUTO" position.

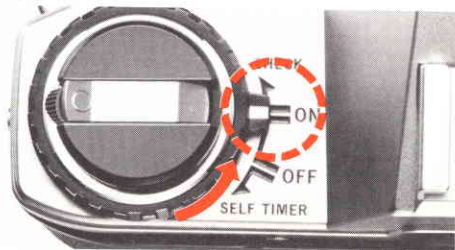

- ③ Set the selector dial at the "ON" position.

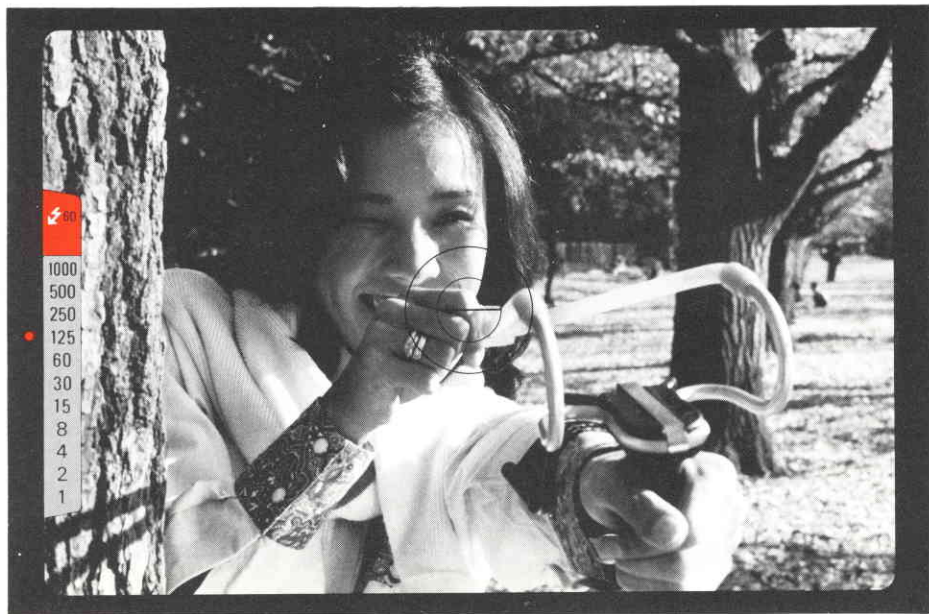

④ The proper shutter speed lights up in the viewfinder.

TAKING PICTURES AUTOMATICALLY



Focus.



Out of focus.



NO X





Correct focus.



YES O

When holding the camera horizontally, make sure to press your elbows against your body.

Have your elbow pressed against your body when holding the camera vertically, too.

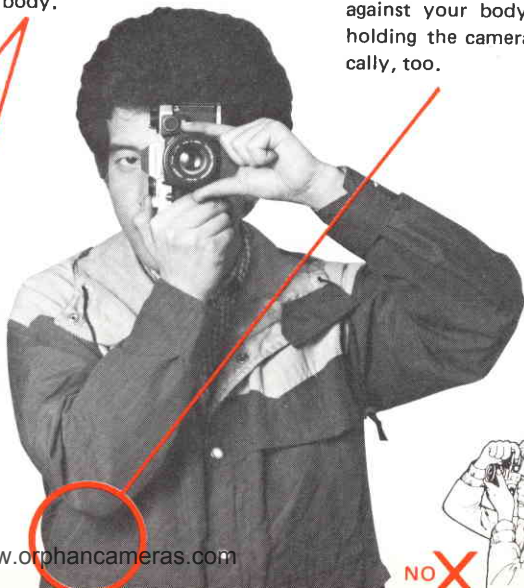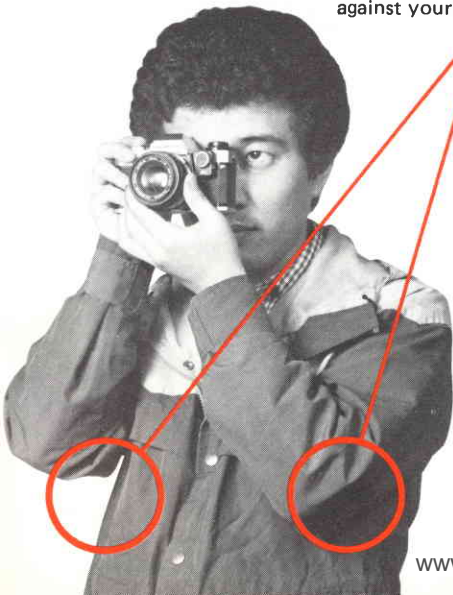

THE OM-10FC: DESIGNED TO SAVE BATTERY CONSUMPTION



Gently press the shutter release button.

< **When the selector dial is turned to the "ON" position ...** >

Energy flows from the alkaline-manganese or silver oxide batteries and a light appears by the shutter speed scale in the viewfinder. However,

this light will go off automatically after 90 seconds, to prevent unnecessary battery consumption.

< **When the activator switch is touched ...** >


With a light touch on the activator switch, energy will begin flowing again, and the light which had gone out after 90 seconds will turn on again.



< **When the selector dial is set at the "OFF" position ...** >

No energy will be supplied to the camera's circuits and the light will not turn on. However, if you forget to turn the selector dial to the "ON" position and suddenly you press the shutter release button, energy will flow only during the time the shutter is open, and properly exposed photograph can be taken. Once the picture is taken, all circuits are disconnected as a safety measure to prevent unnecessary battery consumption.

SWITCHING THE CAMERA OFF

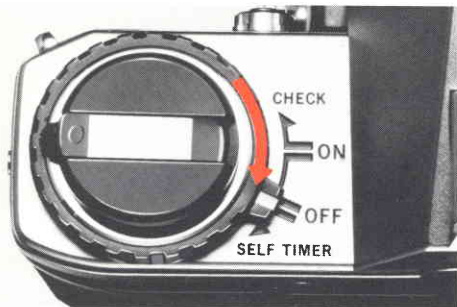


Move the selector dial to the "OFF" position when you are not going to take any more pictures.

REWINDING THE FILM




- ① Turn the rewind release lever when the film ends.

UNLOADING THE FILM

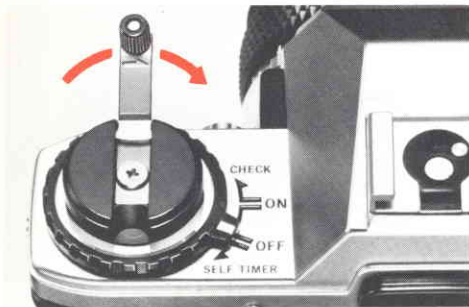


- ② Keep rewinding the film until you feel no more resistance.

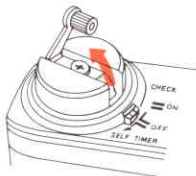

Open the back and unload the film.

THE USE OF THE SELF-TIMER

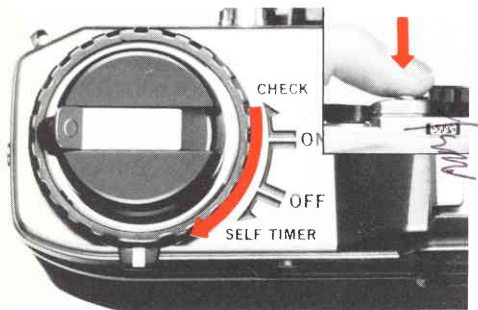

- ① Click the selector dial to the position "SELF TIMER".
- ② Press the shutter release button.



- ③ A beeping sound is heard and the self-timer light blinks. The shutter will be released after about 12 seconds.
- ④ Return the selector dial to its original position.

PHOTOGRAPHIC TECHNIQUES

The various functions of the OM-10FC and the wide variety of lenses, flash, winder, and system accessories which can be used with it allow you to fully master all the techniques which automatic photography can make possible.

We shall devote the following section to some of these photographic techniques.

CONTROLLING THE EXPOSURE



When taking pictures in a place which is either too dark or too bright, even if you follow the aperture guidelines given on page 17, there will be a tendency to result in whitish photographs (overexposure), or darkened ones (underex-




posure), or even blurred images. In these circumstances, make full use of the aperture ring in order to control exposure so as to obtain properly exposed photographs.

- ① When a red light turns on in the red zone at the top of the shutter speed scale in the viewfinder it indicates overexposure.
- ② In such a case, turn the aperture ring to the higher f-numbers (toward F16) until the light appears within the proper exposure range, and

then proceed to take the picture.

- ③ When the light appears below "30" (1/30 of a second), blur may easily occur.
- ④ In this case, use a tripod or turn the aperture ring to the lower f-numbers (toward F1.8) until the light goes higher within a range in

PHOTOGRAPHY WITH SHUTTER-SPEED PRIORITY

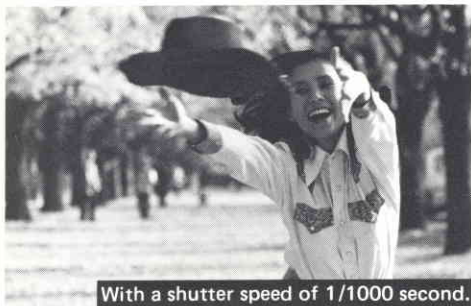

When photographing fast moving subjects, there is a marked tendency to obtain a blurred image of the subject. This can be made use of as a technique to give the impression of movement, by intentionally allowing the image to be blurred, while making use of the shutter speed priority function.

which blur is not likely to occur.

- ⑤ When the light appears at "1" (1 sec.), the shutter speed is 1 sec. or longer. In such a case it is recommended to turn the aperture ring to the lower f-numbers within the proper exposure range.



Pictures taken with this technique offer an interesting challenge. Turn the aperture ring until the light in the viewfinder appears by the shutter speed value suitable for the photographic situation, and then press the shutter release button.

EXPOSURE COMPENSATION



When shooting against the light, or if the subject is standing before a window, the face tends to appear dark on the image. In this case, use the exposure compensation dial to obtain a correctly exposed photograph.

- ① Lift the compensation dial and change the film speed set on the dial (within ± 2).

By this means, it is possible to obtain high or low key effects. (+) is for high key (overexposure) and (-) is for low key (underexposure). However it is not possible to obtain (-) compensation for ASA 1600 or the (+) compensation for ASA 25.



Before compensation




Compensated +2 full stops.



(For example, ASA 100 compensated +2 full stops.) compensation for ASA 25.

- ② When you finish taking the picture, return the exposure compensation dial to its original position.

LONG EXPOSURES

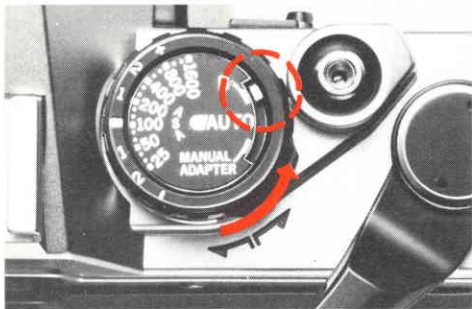

Indoors when it is dark, or when photographing at night, use the "BULB" setting and take the pictures by resorting to long exposures. Of course, blur can easily occur in long exposures so it is recommended to use a tripod and a cable release.

- ① Set the mode selector lever to B, and press the shutter release button.
- ② The shutter will remain open as long as the shutter button is being pressed.
- ③ Do not forget to reset at the "AUTO" position after you finish taking pictures.

(Continued on page 49)



FLASH PHOTOGRAPHY



Electronic
Flash T32



Electronic
Flash T20

The T32 and T20 electronic flash units specifically designed for OM cameras provide artificial illumination when you take pictures at night or

indoors.

< Characteristics of flash photography using the T32-T20 >

- ① Set the mode selector lever to "Auto" and then mount the Electronic Flash T32 (or T20) on the accessory shoe of the camera. When the ON-OFF switch of the T32 (or T20) is turned on, the normal auto flash control begins working. When turned off, it reverts to the camera's AE photography. It takes but a flick of a finger to change it from one to the other.
- ② When the ON-OFF switch of the T32 (or T20) is turned on, the shutter speed of the camera is automatically set at the flash synchronization shutter speed.
- ③ It is possible to verify when the flash is ready because a full charge signal lights in the viewfinder.
- ④ In addition to the charge signal automatically lighting at (⚡) you can refer to the shutter speed indicated by another red light in the viewfinder as required by the available light.

(Continued on page 49)



60


1000
500
250
125
60
30
15
8
4
2
1

USING THE WINDER 2



Fast moving subjects, such as in sports, car racing, and the like, make you wish to take pictures at a faster pace.

The time spent winding the film may mean that a great chance is lost. In these cases, an accurate, reliable power winder for automatic film winding can well be the perfect answer, such as the Olympus Winder 2 which can be attached on the OM-10FC very simply, and switched to the single or sequence mode photography. On single mode, it can wind film immediately after exposure, ready for next chance to release the shutter at any moment, and on sequence mode, it can make sequential filming as fast as 2.5 frames per second.

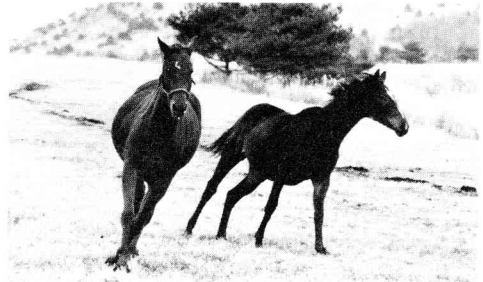




FROM GENERAL PHOTOGRAPHY TO THE USE OF INTERCHANGEABLE LENSES



The main characteristic of the single lens reflex camera is the possibility of using a plurality of different lenses on the same body. From photography with a standard lens to the feeling obtained with a telephoto lens by blurring the background or, on the other hand, by stressing the perspective, giving a special effect to the background by means of a wide angle lens, the world of images which unfolds before you with the OM-10FC becomes richer and wider. Olympus Zuiko interchangeable lenses included in the OM System are highly reputed for their sharpness and resolving power.

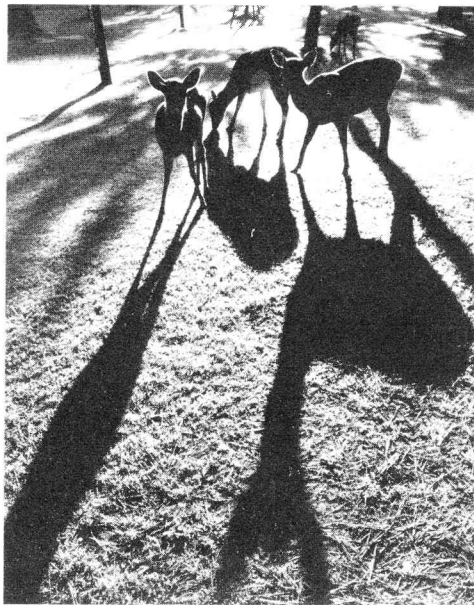


Wide angle 28mm



Telephoto 200mm



MAKING USE OF THE DEPTH OF FIELD

When you have a subject in focus, there is a range in the fore and the background which is clearly defined in the picture. This range is called depth of field. The larger the F number becomes, the wider this clearly defined range becomes, and the background becomes sharper. On the contrary, the smaller the F number becomes, this range becomes less wide, while the background loses contrast and out of focus. By using these properties of the depth of field with creativity and imagination, you will be able to take pictures which will have your own personal imprint.

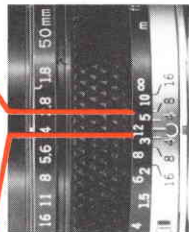

F4

< How to check the depth of field >

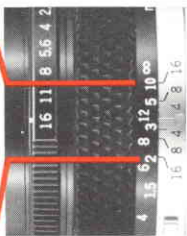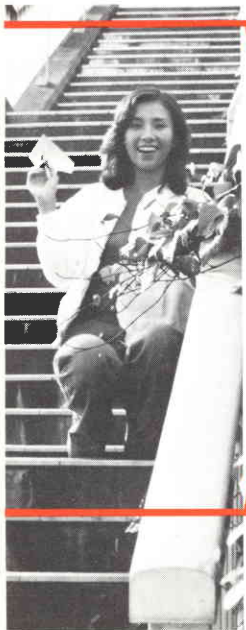

- ① The photograph is focused at a distance of about 4m (13 ft).
- ② In this case, if the aperture is set at F 4, the range which appears clearly defined will be approximately from 3m (10 ft) to about 4.5m (15 ft).
- ③ If an F16 is used, the range will be approximately between about 2m (6.6 ft) and 10m (33 ft).



- When you want to check inside the viewfinder the correct focusing range, it simply requires pressing this preview button.

F16

MANUAL EXPOSURE CONTROL

The OM-10FC's TTL Direct (OTF) Light Measuring system provides accurate automatic exposures under most circumstances. Using the camera's "+" or "-" 2 stop exposure compensation setting you can adjust for those special lighting circumstances that can sometimes mislead a light meter.

Advanced photographers at times require totally different exposure settings than those provided by an automatic exposure camera. A student at photographic workshop may be required to manually set the shutter speed and aperture. The fully automatic Olympus OM-10FC, however, can handle even the most difficult exposure situations by use of the shutter speed dial. With the dial you can set the precise aperture and shutter speed you require.

The shutter speed dial is designed to allow you full exposure control. Shutter speeds of 1 sec., 1/2 sec., 1/4 sec., 1/8 sec., 1/15 sec., 1/30 sec., 1/60 sec., 1/125 sec., 1/250 sec., 1/500 sec., 1/1000 sec., are provided.


The first step in utilizing the dial is to properly mount it on the OM-10FC. Simply plug the dial into its receptacle (on the camera's front panel) while making sure it also mounts onto the camera's chrome guide knob. It will mount with a "snap". To operate slide the mode selector lever to the "MANUAL ADAPTER" position. Align the selected shutter speed to the white line on top of the dial.


Please note: The OM-10FC will still indicate what it thinks is the proper shutter speed (through the viewfinder display) in relation to the selected aperture. This reading can be used as a guide or

completely disregarded. The dial will only function when the mode selector lever is turned to the "MANUAL ADAPTER" position. Placing the switch in either of the other two positions will turn it off.

The dial should remain attached to the OM-10FC, in order to provide manual operation whenever conditions demand.

(CAUTION) If an electronic flash other than the T32 or T20 is used with the shutter speed dial, sometimes the shutter is not released at the speed you set on the dial due to a noise in the flash.

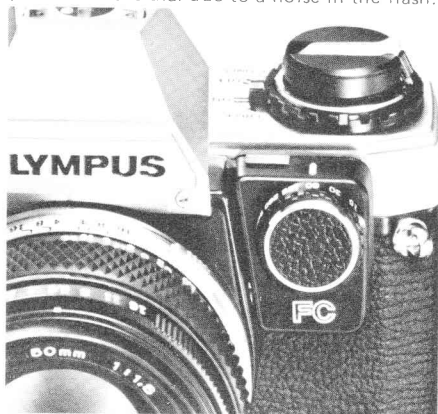

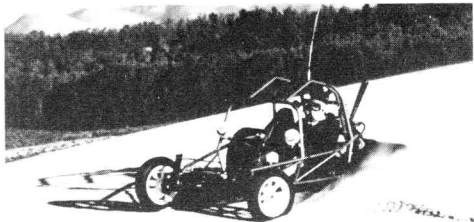

Shutter-speed priority at 1/1000 sec.

< When shutter-speed priority is advisable >

- 1 Set the necessary shutter speed on the shutter speed dial.
- 2 Turn the aperture ring while looking through the viewfinder until the light on the shutter speed scale turns on at the shutter speed which was set on the shutter speed dial. Then, press the shutter release button.



Aperture priority, high keyed

< How to apply aperture priority to your photographic needs >

- 1 Set the aperture as preferred.
- 2 Look through the viewfinder to see the shutter speed which the light indicates, and set that speed on the shutter speed dial. Then, press the shutter release button.
* By intentionally ignoring the indicated shutter speed, and setting a different one on the shutter speed dial it is possible to obtain high key or low key results as desired.

TABLE OF INTERCHANGEABLE LENSES

TYPE	INTERCHANGEABLE LENSES		ANGLE OF VIEW	OPTICAL CONSTRUCTION ELEMENT-GROUP	F-STOP RANGE	MIN. FOCUS (ft.)	WEIGHT (oz.)	LENGTH	FILTER
FISHEYE	ZUIKO FISHEYE	8mm F2.8	180°(circle)	11-7	2.8-22	0.2 m (0.7)	640g (22.6)	83mm	Built-in
	ZUIKO MC FISHEYE	16mm F3.5	180°	11-8	3.5-22	0.2 m (0.7)	180g (6.3)	31mm	Built-in
SUPER WIDE ANGLE	ZUIKO MC	18mm F3.5	100°	11-9	3.5-16	0.25m (0.8)⊙	250g (8.8)	43mm	72mm
	ZUIKO MC	21mm F2	92°	11-9	2-16	0.2 m (0.8)⊙	250g (8.8)	44mm	55mm
	ZUIKO MC	21mm F3.5	92°	7-7	3.5-16	0.2 m (0.7)	180g (6.3)	31mm	49mm
	ZUIKO MC	24mm F2	84°	10-8	2-16	0.25m (0.8)⊙	275g (9.9)	48mm	55mm
	ZUIKO MC	24mm F2.8	84°	8-7	2.8-16	0.25m (0.8)	185g (6.5)	31mm	49mm
WIDE ANGLE	ZUIKO MC	28mm F2	75°	9-8	2-16	0.3 m (1.0)⊙	245g (8.6)	43mm	49mm
	ZUIKO MC	28mm F2.8	75°	7-6	2.8-22	0.3 m (1.0)	170g (6.0)	32mm	49mm
	ZUIKO MC	35mm F2	63°	8-7	2-16	0.3 m (1.0)	240g (8.5)	43mm	55mm
	ZUIKO MC	35mm F2.8	63°	7-6	2.8-16	0.3 m (1.0)	175g (6.2)	33mm	49mm
STANDARD	ZUIKO SHIFT	35mm F2.8	63°(83° at max. shift)	8-7	2.8-22	0.3 m (1.0)	310g (10.9)	59mm	49mm
	ZUIKO	55mm F1.2	43°	7-6	1.2-16	0.45m (1.5)	310g (10.9)	48mm	55mm
	ZUIKO MC	50mm F1.4	47°	7-6	1.4-16	0.45m (1.5)	230g (8.1)	40mm	49mm
	ZUIKO MC	50mm F1.8	47°	6-4	1.8-16	0.45m (1.5)	165g (5.8)	32mm	49mm
	ZUIKO MC MACRO	50mm F3.5	47°	5-4	3.5-22	0.23m (0.8)⊙	200g (7.1)	40mm	49mm
ZOOM	S ZUIKO ZOOM	28-48mm F4	75°-49°	8-8	4-22	0.65m (2.0)	300g (10.6)	54mm	49mm
	ZUIKO MC ZOOM	35-70mm F3.6	63°-34°	10-8	3.6-22	0.8 m (2.7)	420g (14.8)	74mm	55mm
	S ZUIKO MC ZOOM	35-70mm F4	63°-34°	7-7	4-22	0.75m (2.5)	385g (13.6)	71mm	55mm
	ZUIKO ZOOM	75-150mm F4	32°-16°	15-11	4-22	1.6 m (5.2)	445g (16.1)	115mm	49mm
	S ZUIKO ZOOM	100-200mm F5	24°-12°	9-6	5-32	2.4 m (7.9)	570g (20.1)	148mm	49mm
	ZUIKO MC ZOOM	85-250mm F5	29°-10°	15-11	5-32	2 m (6.0)	905g (31.9)	196mm	55mm
TELEPHOTO	ZUIKO MC	85mm F2	29°	5-4	2-16	0.8 m (2.8)⊙	260g (9.5)	48mm	49mm
	ZUIKO MC	100mm F2.8	24°	5-5	2.8-22	1 m (3.3)	235g (8.3)	48mm	49mm
	ZUIKO MC	135mm F2.8	18°	5-5	2.8-22	1.5 m (4.9)	360g (12.7)	80mm	55mm
	ZUIKO	135mm F3.5	18°	5-4	3.5-22	1.5 m (4.9)	290g (10.2)	73mm	49mm
	ZUIKO MC	180mm F2.8	14°	5-5	2.8-32	2 m (6.0)	700g (24.7)	125mm	72mm
	ZUIKO MC	200mm F4	12°	5-4	4-32	2.5 m (8.2)	515g (18.2)	127mm	55mm
	ZUIKO MC	200mm F5	12°	6-5	5-32	2.5 m (8.2)	385g (13.6)	105mm	49mm
SUPER TELEPHOTO	ZUIKO MC	300mm F4.5	8°	6-4	4.5-32	3.5 m (11.5)	1020g (36.0)	181mm	72mm
	ZUIKO MC	400mm F6.3	6°	5-5	6.3-32	5 m (16.4)	1300g (46.0)	256mm	72mm
	* ZUIKO MC	600mm F6.5	4°	6-4	6.5-32	11 m (36.1)	2800g (98.8)	377mm	100mm
SPECIAL USE	* ZUIKO MC	1000mm F11	2.5°	5-5	11-45	30 m (98.4)	4150g (146.5)	662mm	100mm
	ZUIKO MC MACRO	20mm F3.5	9° at highest mag.	4-3	3.5-16	W/Auto Bellows & PM-MT ob	70g (2.5)	20mm	21mm Slide-on
	ZUIKO MC MACRO	38mm F3.5	9° at highest mag.	5-4	3.5-16	W/Auto Bellows & PM-MT ob	90g (3.2)	28mm	32mm Slide-on
	ZUIKO MC 1:1 MACRO	80mm F4	9° at highest mag.	6-4	4-32	W/65-116 or Auto Bellows	170g (6.0)	31mm	49mm
	ZUIKO MC MACRO	135mm F4.5	18°	5-4	4.5-45	W/65-116 or Auto Bellows	320g (11.3)	47mm	55mm Slide-on

TELECONVERTER 2X A ● APPLICABLE LENSES: 100mm F2.8, 135mm F2.8, 135mm F3.5, 200mm F4, 200mm F5 ● OPTICAL CONSTRUCTION: 6.6 ● WEIGHT: 215g (7.6oz) ● LENGTH: 48mm (1.9")

● MC stands for multicoating. (Specifications subject to change without notice.)

* Picture image may be cut off slightly when OM-10FC is used with the 600mm and 1000mm lenses.

⊙ Automatic correction design against close distance aberrations.

• Make it a point to use the Zuiko MC Macro 135mm F4.5 with the hood provided.



CARE AND STORAGE OF THE CAMERA

General

- Dust and moisture are primary harmful agents affecting your camera. When you do not use the camera, remove it from the case and store in a dry, ventilated place, making sure that the shutter is set free from tension and the selector lever at the OFF position.
- When storing the camera for a long period of time, remove the batteries. Wipe all battery surfaces with a dry cotton cloth before re-inserting them into the camera.
- Avoid dropping or hitting the camera.
- Never store the camera where temperatures exceed 50°C (122°F). When you use the camera in temperatures under -20°C (-4°F), it may sometimes fail to operate properly. To avoid this, warm the camera before use. Protect against excess moisture by using silica gel or other desiccant.
- Generally speaking, a battery voltage may be reduced when an ambient temperature lowers. As the batteries that activate the camera at normal temperature regularly, sometimes fail to in low temperature, it is recommended to use fresh

batteries in a cold district.

- Take care not to permit water to enter the camera when taking pictures in the rain or snow, especially near sea-water spray, as water drops may easily have a chance to enter the camera through small orifices.
- After use near the ocean, wipe the camera surfaces clean with a soft cloth; never leave salt on the camera. (Salt may be airborne near the ocean and collect on the camera even though it has not been in direct contact with water.)
- Avoid areas exposed to salt water, radios, TV sets, or magnets.
- Have all repairs performed by an authorized OLYMPUS Service Center. You may send it directly or through the store where you bought your camera.

Parts

- Do not press the release button at random.
- Do not touch any part that moves at high speed such as the shutter, instant return mirror, diaphragm, etc.
- Avoid touching the surfaces of the lens. Clean

only with an air brush, antistatic brush, or wipe it lightly with a camel hair brush or lens tissue. In **EXTREME** cases, use a clean, soft cotton cloth moistened with denatured alcohol. **NEVER** rub the lens surfaces with your finger, clothing or other abrasive material.

- If dust or fingerprints collect on the mirror, focusing screen, or prism, take the camera to an authorized **OLYMPUS** Service Center. It needs professional attention.
- Avoid excessive force when mounting on a tripod.

QUESTIONS AND ANSWERS

Q : I can neither release the shutter even by pressing the shutter release button, nor advance the film. Why?

A : Because no batteries are loaded. Load fresh batteries.

Q : Why is the field of view dark and the image obscure?

A : Because the batteries are exhausted. Replace them.

Q : Why can't I move the film advance lever?

A : The self-timer may be set, or the shutter release may be cocked and ready but it has not been pressed yet. If you press the shutter release button, film will advance to the next frame. Has the film reached its end?

Check the exposure counter and, if it shows that the film has ended, rewind the film. Are the alkaline-manganese or silver oxide batteries charged? Check the batteries, and if you hear the beeping sound and see the red light flashing, but cannot move the lever, take your camera to an authorized OLYMPUS Service Center.

Q : Why doesn't the rewind knob rotate when I

try to advance the film?

A : The film leader is not properly engaged on the film take-up spool. Insert the film leader again.

Q : Why won't the rewind crank turn?

A : Set the rewind release lever once more in the direction of the arrow, and the problem will be solved.

Q : Is infrared photography also possible with the OM-10FC?

A : Yes, it is if you use the shutter speed dial and set the mode selector lever to the MANUAL ADAPTER position. Then, take the following steps: ① Focus without a filter. ② Move the focusing ring to coincide with the infrared mark. Mount a filter for infrared photography, and proceed to take the picture.

Q : When should I check the batteries?

- A :** ① When new batteries are inserted.
② After the camera has been stored for a long time.
③ When you think batteries may be exhausted.

The alkaline-manganese batteries should

last for about a half year, and the silver oxide batteries for about one year.

④ When the temperature is extremely low.

Q : I pressed the shutter release button with the selector dial at the "OFF" position. Will the photograph be properly exposed?

A : Even at the "OFF" position, the camera's circuits will be activated for a proper exposure. Recommended to develop the film and see.

Q : When set at the "AUTO" position, the actual shutter speed is much slower than the one indicated in the viewfinder. Why does this happen?

A : If film is not loaded or the film surface is not properly positioned behind the shutter, the speed will be slower than that indicated in the viewfinder.

Q : What batteries should I use?

A : Use two 1.5V alkaline-manganese batteries LR44 (A76) or two silver oxide batteries SR44 (Eveready EPX-76 or equivalents). Batteries of a different type (1.3V mercury batteries) cannot be used, though they may

be of the same size.

Q : A shadow appears darkening the central area of the viewfinder. Why does this happen?

A : This is quite usual when a lens with a maximum aperture smaller than F5 is mounted on the camera, and the preview button is pressed with the diaphragm closed down beyond F5. There is nothing wrong with the microprism.

Q : If I return the selector lever to the ON position, while the self-timer in operation, what will become of the shutter?

A : The shutter will be released. After the use of the self-timer, make it a point to return the selector lever to original position.

Q : While I was operating the Winder 2, the light in the viewfinder went out ... why?

A : The light goes out in 90 sec. even the selector lever is ON, in order to save the batteries from unnecessary consumption. Touch the activator switch lightly, and the light is on again.

MAIN SPECIFICATIONS

Camera type: 35mm single lens reflex camera with electronic control automatic exposure and focal plane shutter.

Image format: 24 x 36mm.

Lens mount: Olympus OM Mount, bayonet type.

Shutter: Electronically controlled focal plane shutter.

Flash synchronization: X contact. Direct contact only.

Automatic exposure control: Aperture-priority electronically controlled shutter. TTL direct light measuring system. Light measuring range: EV-0.5 to 18 from 2 sec. to 1/1000 sec. at normal temperatures and humidity with ASA 100 and F1.2 standard lens.

Exposure compensation: $\pm 2EV$.

Automatic flash exposure: Normal auto flash (at 2 aperture settings F4 and F8 with ASA 100 film) is automatically set to X synch. (1/60 sec.) in conjunction with the electronic flash T20.

Manual exposure control: The shutter speed dial permits a full range of 11 manual shutter speeds. (1 to 1/1,000 sec.)

For non-OM Flash Units a manual shutter speed of 1/30 sec. should be set.

Film speed range: ASA 25 to 1600.

Battery checker: Battery voltage can be checked by both LED and PCV. Mirror lock to limit drainage.

Power source: Two 1.5V alkaline-manganese batteries LR44 (A76), or two 1.5V silver oxide batteries SR44 (Eveready EPX-76 or equivalents).

Viewfinder: Pentaprism type.

Focusing screen: Microprism/split image-matte type.

Finder view-field: 93% of actual picture field.

Viewfinder magnification: 0.92X with the 50mm lens at infinity.

Viewfinder information: 12-step shutter speed scale and flash charge indicated by LEDs.

Mirror: Oversize, quick return mirror.

Film advance: Lever type with 130° angle. It can be wound with one long or several short strokes. 30° pre-advance angle. Power winding is possible with the Olympus OM System Winder 2.

Self-timer: Electronic self-timer with about 12 second delay.

Accessory shoe: Built-in type, with direct contact.

Dimensions and weights: Body only: 135(W) x 84(H) x 50(D) mm (5.3'' x 3.3'' x 2'') 430gr. (15.2 oz).

With F1.8 lens: 135(W) x 84(H) x 81(D) mm (5.3'' x 3.3'' x 3.2'') 600gr. (21.2 oz).

With F1.4 lens: 135(W) x 84(H) x 86(D) mm (5.3'' x 3.3'' x 3.4'') 660gr. (23.3 oz).

(Specifications subject to change without notice.)

Long Exposure

(From page 30)

- ④ For long exposure photography within 2 sec. (with ASA 100 film) however, you can take pictures on AUTO mode.

Flash Photography

(From page 31)

- ⑤ It is possible to check a correct flash exposure in the viewfinder if the signal light blinks.

(CAUTION)

- ① If any electronic flash other than the T32 and T20 is used, set the mode selector lever to the "MANUAL ADAPTER" position and the shutter speed dial to 1/30 sec. (If the mode selector lever is set to "AUTO", the shutter speed responds to available light and may sometimes not synchronize with flash.)
- ② In this case, the viewfinder does not indicate the full flash charge and correct flash exposure.
- ③ For further information, refer to the instruction manual supplied with your electronic flash unit.

Using the Winder 2

(From page 33)

It is not possible to use a Motor Drive 1 with the OM-10FC.

The viewfinder lights may turn off when using Winder 2 with your OM-10FC. This is due to the special energy saving circuits built into the OM-10FC. Simply touch the activator switch (collar surrounding the shutter release), and the lights will turn on. See page 22 for further explanation.