



## **TJ – 80/85 Heater Replacement**


### **Operation Manual**

**P/N 5050-0521 Rev A-CB**

#### **Heater Replacement**

Replace the heater in your TJ-80 using the following procedure (refer to figure 3).

- a. Remove nozzle
- b. Remove heater-retaining nut.
- c. Pull heater from the handle and discard as required.
- d. Align the connector key on the end of the replacement heater with the keyway slot in the handle. Fully insert and seat the replacement heater onto the handle.
- e. Re-install the heater-retaining nut. Tighten firmly to secure.
- f. Re-install nozzle as required.

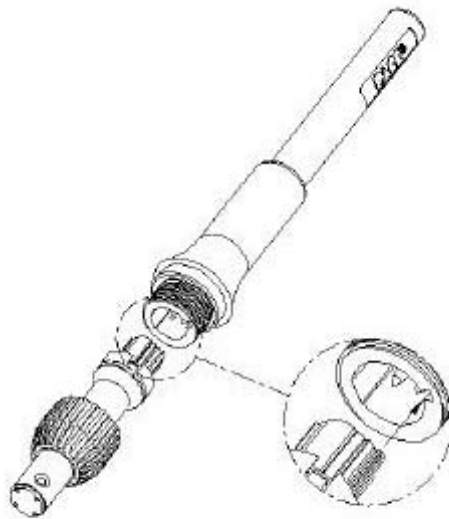

*Figure 3*