



# NF 50 & NF 100

## Nitrogen Farm



MANUAL NO. 8881-0100  
REV. A

## **TABLE OF CONTENTS**

|                                       |    |
|---------------------------------------|----|
| Introduction .....                    | 3  |
| Specification .....                   | 4  |
| Parts Identification.....             | 5  |
| Safety/features.....                  | 6  |
| Set-Up/Start-Up.....                  | 7  |
| Maintenance/Filter Replacement .....  | 8  |
| Spare Parts .....                     | 9  |
| PACE Worldwide Warranty.....          | 10 |
| Equipment Warranty Registration ..... | 11 |

### **CAUTION**

**READ THE SAFETY AND APPLICATIONS INFORMATION SECTION IN THE OPERATION AND MAINTENANCE MANUAL THOROUGHLY BEFORE INSTALLING AND USING YOUR NITROGEN FARM SYSTEM.**

## **Use of this Manual**

This manual will provide the user with the basic information to properly operate and maintain the PACE NF 50 & NF 100 Nitrogen Farm. If you encounter any difficulty operating your system or have any questions, call your local authorized PACE dealer or contact PACE Applications Engineering directly at the United Kingdom Office on: Tel. (44) 01908 277666, Fax (44) 01908 277777, or PACE Technical Support at the U.S. Office on: Tel: (301) 490-9860, Fax (301) 490-0193.

The compact, high performance single station N<sup>2</sup> generator (NF 100) will generate Nitrogen Gas at a maximum concentration level of 99.9%. This system should be used in conjunction with NF 50 N<sup>2</sup> Flow Control Unit. The NF 50 & NF 100 represents the latest technology in affordable Nitrogen Generation.

### **WARNING**

**FAILURE TO COMPLY WITH THE APPLICATION AND MAINTENANCE GUIDELINES, FILTER REPLACEMENT SCHEDULES, MONITORING RECOMMENDATIONS AND SAFETY GUIDELINES CONTAINED HEREIN AND IN OTHER RELEVANT PRODUCT SAFETY LITERATURE (I.E., MATERIALS SAFETY DATA SHEETS) PROVIDED WITH THE SUBSTANCES AND EQUIPMENT COULD RESULT IN RISK OF SERIOUS INJURY, FIRE OR EXPLOSION.**

## Introduction

Lead Free solders do not behave or look like their lead containing counterparts. As our industry changes over to Lead Free solders, individual PCB assemblers will need to address several issues relating to hand soldering & rework. These issues include:

- **Higher melting temperatures** - which mistakenly lead to operators increasing equipment operating temperatures. Higher operating temperatures do not make the process quicker; they can actually slow it down.
- **Poor wetting and spreading properties** – Additional time is required when working with Lead Free solders, they do not spread or wet like lead containing solders do. Operators must slow down.
- **Difficult to work with** – Bridging and insufficient solder defects are common, even for experienced operators, leading to operator frustration and poor quality.
- **Dull grainy finish** – makes inspection difficult.

The use of nitrogen assisted soldering equipment helps to mitigate the problems associated with using Lead Free solders. Nitrogen helps on two fronts. First, it creates an inert environment around the soldering tip, reducing the potential for the tip to oxidize. Second, it assists in the soldering process at the PCB level by purging oxygen from the immediate area which reduces or eliminates the formation of oxidation on the work site. This not only reduces the amount of flux that is required, but also helps to improve wetting, spreading and leaves a finish that is shinier and less grainy.

PACE's nitrogen assisted soldering systems pass the nitrogen through or around the heater before it is directed to the work site. This "pre-heats" the immediate area which can also help to reduce thermal shock to the component leads and to components themselves. Pre-heating also allows for the use of lower, safer and more effective soldering temperatures.

The compact high-performance Single Station N<sup>2</sup> Generator (NF 100) will generate nitrogen gas at a maximum concentration level of 99.9%. The NF 100 should be used in conjunction with the NF 50 N<sup>2</sup> Flow Control Unit.

## Environmental Specifications

|                               |  |
|-------------------------------|--|
| Ambient operating temperature | 0°C to 50° (32°F to 122°F)               |
| Storage temperature           | -40°C to 125°C (-40°F to 257°F)          |
| Ambient operating humidity    | 90% relative humidity max non-condensing |
| Storage humidity              | 90% relative humidity max non-condensing |

## Specifications


|                              | NF 50 N <sub>2</sub> Flow Control Unit | NF 100 Single Station N <sub>2</sub> Farm |
|------------------------------|--|---|
|                              | 8110-0050                              | 8110-0100                                 |
| Max N <sub>2</sub> Flow Rate | N/A                                    | *9.2 L/min                                |
| Max No of Soldering Stations | N/A                                    | 1   |
| Max Input Air Pressure       | N/A                                    | 7 bar/101.5 psi                           |
| Power Source                 | No Electrical Power Required           | No Electrical Power Required              |
| Outline Dimensions           | 100x90x150mm (4"x3.5"x6")              | 100x90x300mm (4"x3.5"x12")                |
| Weight                       | 0.5Kg (1.1 lbs)                        | 2Kg (4.4 lbs)                             |

\*This figure is based on 90% nitrogen enriched airflow at 7 bar/101.5 psi, temp 25°C


## NF 100 Performance Table

|                                      |     | N <sub>2</sub> Concentration % |      |      |      |      |      |      |      |
|--------------------------------------|-----|--------------------------------|------|------|------|------|------|------|------|
|                                      |     | 99.9                           | 99.5 | 99.0 | 98.0 | 97.0 | 96.0 | 95.0 | 90.0 |
| Input compression air pressure (MPa) | 0.3 | 0.15                           | 0.37 | 0.48 | 0.66 | 0.88 | 1.1  | 1.3  | 2.6  |
|                                      | 0.4 | 0.24                           | 0.57 | 0.77 | 1.1  | 1.4  | 1.7  | 2.0  | 4.4  |
|                                      | 0.5 | 0.35                           | 0.75 | 1.1  | 1.5  | 1.9  | 2.2  | 2.9  | 5.9  |
|                                      | 0.6 | 0.48                           | 0.97 | 1.3  | 1.8  | 2.4  | 3.1  | 3.5  | 7.5  |
|                                      | 0.7 | 0.55                           | 1.2  | 1.6  | 2.2  | 3.1  | 3.7  | 4.2  | 9.2  |

## NF 100/50 Connection method

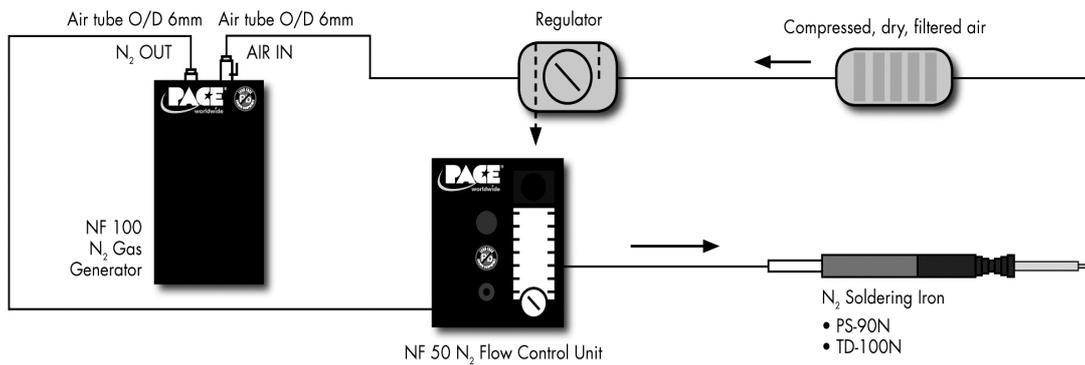

## Parts Identification

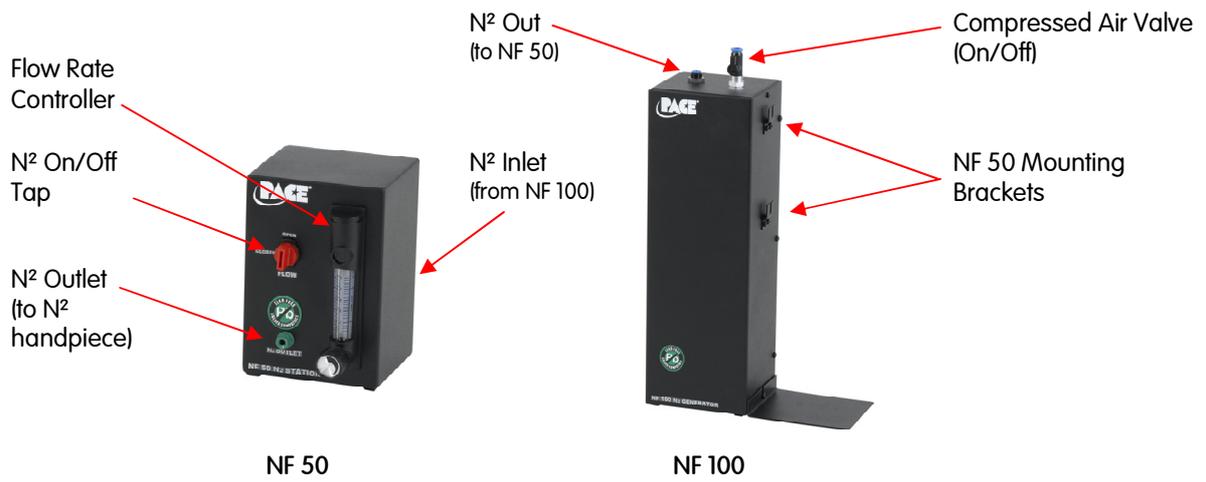

NF 50 & NF 100 shown with optional ST 70

## **Safety**

PACE Nitrogen Farms are designed to utilize the latest polyimide hollow fiber membrane technology to allow the generation of nitrogen from compressed air. The input compressed air pressure must not exceed 7 bar/101.5 psi, it is important to ensure that all compressed air hoses and fittings are maintained and in good working order.

## **Disclaimer**

PACE hereby disclaims all responsibility for any personal injury, property damage, fine, citation or penalty imposed by any government or private entity which results from any use, misuse or mis-application of this product, failure of the user to regularly maintain the product according to the recommended guidelines, or failure to adequately monitor input and/or output air and the ambient workplace environment for the presence of harmful levels of gases, fumes and particulates.

Compliance with all applicable environmental and personal safety regulations is the sole responsibility of the user and adequate self-monitoring of exhaust air released into the atmosphere or the workplace as well as monitoring of the ambient workplace air is strongly recommended.

To insure continued effective performance, the following guidelines must be followed:

The basic principle of these products are that as compressed air flows through the hollow fibers contained within the membrane body, oxygen is selectively allowed to permeate through the fiber wall to atmosphere. This results in a nitrogen rich gas being obtained at the output of the hollow fiber membrane.

There are three main factors determining the removal of oxygen from the nitrogen rich air:-

- a) Temperature - if this is maintained at close to 25°C then it can be ruled out of further calculations of oxygen.
- b) Flow rate – increasing the flow rate through the unit increases the level of oxygen present in the output.
- c) Pressure – increasing the pressure reduces the level of oxygen present in the output.

## **Features**

- The NF 100 is able to achieve Nitrogen purities of up to 99.9% on demand when set up with the NF 50 N<sup>2</sup> Flow Control Unit.
- Extremely quick set-up times. Because the system can be connected to an existing compressed airline, it can be positioned in minutes and is very portable.
- Low running costs. The NF 50 & NF 100 requires no power source other than compressed air.
- Using conventional bottled nitrogen can result in a nitrogen imbalance in the workplace. This system recycles oxygen, maintaining the correct balance of oxygen & nitrogen in the workplace.

The NF 50 & NF 100 contains no moving parts so do not give rise to noise or dust. No internal (re)calibration is required.

### WARNING

FAILURE TO COMPLY WITH THE APPLICATION AND MAINTENANCE GUIDELINES, FILTER REPLACEMENT SCHEDULES, MONITORING RECOMMENDATIONS AND SAFETY GUIDELINES CONTAINED HEREIN AND IN OTHER RELEVANT PRODUCT SAFETY LITERATURE (I.E., MATERIALS SAFETY DATA SHEETS) PROVIDED WITH THE SUBSTANCES AND EQUIPMENT COULD RESULT IN RISK OF SERIOUS INJURY, FIRE OR EXPLOSION.

### Set Up

The NF 50 & NF 100 have been designed for ease of use. The following are recommended guidelines for setting up your system. If you have any specific questions that this section does not cover, please consult your PACE Representative or call PACE directly.

Follow the connection method diagram on page 4.

Place **NF 100 Single Station N<sup>2</sup> Farm** on a workbench, as close to the work area as possible. Attach **NF 50 N<sup>2</sup> Flow Control Unit** to NF 100 via mounting brackets (if desired) as shown on page 5, Parts identification. Connect suitable N<sup>2</sup> compatible handpiece to N<sup>2</sup> outlet on NF 50. Connect 6mm Push-Fit pneumatic hose from N<sup>2</sup> outlet on NF 100 to N<sup>2</sup> inlet on NF 50.

Optional Solder Station can be placed below NF 50 as shown on page 5.

The NF 100 should be connected to a clean, dry, filtered, compressed air line at a maximum pressure of 7 bar/101.5 psi. Supply pressures should be regulated to the NF 100 at a lower value than the compressors hysteresis to ensure constant operating pressure. The air supply should have no chemical, lubricant or particulate matter added to the airline. It is however acceptable to use both dry and lubricated compressors. Connection to the airline is made via a 6mm Push-Fit valve on top of the NF 100. (see figure on page 5)

PACE recommends that you add externally to the system, a membrane dryer to be in-line with incoming compressed air supply.

### Start-Up

- Ensure the system pressure regulator is closed.
- Close Flow Rate Controller on NF 50.
- Turn-on the compressed air supply to NF 100.
- Open the system pressure regulator until gauge reads a nominal 7-bar (101.5 psi).
- Open Compressed Air Valve on NF 100.
- Turn N<sup>2</sup> Tap on NF 50 to "On" position.
- Open Flow Rate Controller on NF 50 until desired rate is achieved (3 LPM is the recommended starting pressure).
- Run for at least 20 minutes to allow system to stabilize before use.

### Shut-Down

- Turn Compressed Air Valve on NF 100 to closed position.
- Leave open Flow Rate Controller on NF 50 until nitrogen has stopped flowing from the outlet, then close Flow Rate Regulator.
- Turn N<sup>2</sup> On/Off Tap (on NF 50) to "Off" position.

Once running, both the flow rate regulator and the pressure regulator can control the level of nitrogen.

**WARNING**

ENSURE THAT THE COMPRESSED AIR RESERVOIR IS COMPLETELY DRAINED BEFORE ATTEMPTING TO REMOVE ANY PNEUMATIC AIR LINE FROM SYSTEM SET UP.

**Maintenance**

The NF 50 & NF 100 require no maintenance other than the replacement of the external (optional) compressed air filters on a once yearly basis, or sooner depending on the quality of the input compressed air. The filters are essential to maintain the integrity of the separator. The separator will also need to be replaced from time to time; this will depend on the quality of the input compressed air, product usage and purity of nitrogen required (approx separator life based on average use is 18-24 months).

**NF 100 Separator Replacement Procedure**

1. ENSURE UNIT IS DISCONNECTED FROM AIR SUPPLY!
2. Remove screws (x10) from both sides of NF 100 housing.
3. Locate N<sup>2</sup> separator module.
4. Remove retaining brackets to free N<sup>2</sup> separator.
5. Disconnect pipes & fittings from both N<sup>2</sup> separator at top & bottom. This is done by pushing in surrounding flange of fitting and pulling out pipe.
6. Remove N<sup>2</sup> separator from NF 100 housing.
7. Fit new separator by following points 2-6 in reverse. Ensure that when fitting pipes into connectors they are securely located.

**CAUTION**

THE SYSTEM MUST BE CONNECTED TO A CLEAN, DRY AND FILTERED AIR SUPPLY REGULATED TO 7.0 BAR (101.5 psi), SEE SPECIFICATIONS. CONNECTION TO A CONTAMINATED AIR SUPPLY OR ONE WITH PRESSURE IN EXCESS OF 8.5 BAR (123 psi) MAY CAUSE DAMAGE TO THIS SYSTEM.

## Parts Lists

### NF 50 Replacement Part List

| Description           | Part No.  |
|-----------------------|-----------|
| Housing               | 8115-0055 |
| Flow Control Meter    | 8115-0044 |
| Bulkhead connector    | 8115-0051 |
| Shut off valve - knob | 8115-0053 |
| 1/8 Elbow connector   | 8115-0025 |
| 6mm Pipe              | 8115-0013 |
| Grey Elbow Connector  | 8115-0058 |
| Valve knob bracket    | 8115-0057 |

### NF 100 Replacement Parts List

| Description         | Part No.  |
|---------------------|-----------|
| Nitrogen Separator  | 8115-0050 |
| Housing             | 8115-0054 |
| 3/8 Elbow connector | 8115-0020 |
| Bulkhead connector  | 8115-0051 |
| Valve connector     | 8115-0052 |
| 6mm Pipe            | 8115-0013 |
| Brackets            | 8115-0056 |
| Clamp               | 8882-0581 |

### PACE N<sup>2</sup> Compatible Handpieces

| Part Number  | Description  |
|--------------|--|
| 6993-0272-P1 | TD-100 N <sup>2</sup> Handpiece Kit (IntelliHeat)        |
| 6010-0156-P1 | TD-100 N <sup>2</sup> Handpiece only (IntelliHeat)       |
| 6993-0273-P1 | TD-100 N <sup>2</sup> Handpiece Kit (HeatWise/TempWise)  |
| 6010-0155-P1 | TD-100 N <sup>2</sup> Handpiece only (HeatWise/TempWise) |
| 6993-0274-P1 | PS-90 N <sup>2</sup> Handpiece Kit (IntelliHeat)         |
| 6010-0157-P1 | PS-90 N <sup>2</sup> Handpiece only (IntelliHeat)        |
| 6993-0275-P1 | PS-90 N <sup>2</sup> Handpiece Kit (SensaTemp)           |
| 6010-0116-P1 | PS-90 N <sup>2</sup> Handpiece only (SensaTemp)          |

## Service

Please contact PACE or your Local Authorised PACE Distributor for service & repair.

**PACE WORLDWIDE LIMITED WARRANTY**

PACE warrants to the first user that Products manufactured by it and supplied hereunder are free of defects in materials and workmanship for a period of: (1) year from the date of receipt by such user. This Warranty as applied to blowers and motor pumps is limited to a period of six (6) months. Monitors, computers and other brand equipment supplied but not manufactured by PACE are covered under their respective manufacturer's warranty in lieu of this Warranty.

This warranty does not cover wear and tear under normal use, repair or replacement required as a result of misuse, improper application, mishandling or improper storage. Consumable items such as tips, heaters, filters etc. which wear out under normal use are excluded. Failure to perform recommended routine maintenance, alterations or repairs made other than in accordance with PACE's directions, or removal or alteration of identification markings in any way will void this warranty. This warranty is available only to the first user, but the exclusions and limitations herein apply to all persons and entities.

**PACE MAKES NO OTHER WARRANTY, EXPRESS OR IMPLIED, AND MAKES NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

PACE will, at its option, repair or replace any defective products at its facility or other location approved by it at no charge to user, or provide parts without charge for installation by the user in the field at user's expense and risk. User will be responsible for all costs of shipping equipment to PACE or other location for warranty service.

**EXCEPT FOR THE REMEDY ABOVE DESCRIBED, UNLESS OTHERWISE REQUIRED BY APPLICABLE LAW, PACE WILL HAVE NO OTHER OBLIGATION WITH REGARD TO ANY BREACH OF WARRANTY OR OTHER CLAIM WITH RESPECT TO THE PRODUCTS, OR LIABILITY FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, OR INCIDENTAL LOSS OR DAMAGE CAUSED BY OR OCCURRING IN CONNECTION WITH ANY OF THE PRODUCTS.**

Warranty service may be obtained by contacting the appropriate PACE Company or local Authorised PACE distributor as set forth below to determine if return of any item is required, or if repairs can be made by the user in the field.

Defective products may not be returned to PACE without a Service Authorization ("SA") Number.

Any warranty or other claim with respect to the products must be made in writing delivered to PACE (or local Authorised PACE Distributor for Buyers outside the USA and the United Kingdom) within a reasonable time of the expiration date of this warranty with sufficient evidence of purchase and date of receipt, otherwise user's rights under this warranty shall be deemed waived.

For Customer's in the USA & Canada:

PACE USA  
9030 Junction Drive  
Annapolis Junction  
MD 20701  
USA

Tel: (301) 490-9860  
Fax: (301) 498-3252

For Customer's in Europe:

PACE Europe Limited  
13 Tanners Drive  
Blakelands  
Milton Keynes  
MK14 5BU  
United Kingdom  
(44) 01908 277666  
(44) 01908 277777

All other Customers: Local Authorized PACE Distributor

To register your purchase with PACE, fill in the form below and mail or FAX to the applicable PACE address listed above.

---

**EQUIPMENT WARRANTY REGISTRATION CARD**

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_ Date  
Of Receipt \_\_\_\_\_

Purchased from \_\_\_\_\_

Company Name \_\_\_\_\_

Mailing Address \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Telephone number with area code \_\_\_\_\_

Fax Number with area code \_\_\_\_\_

Internet Address \_\_\_\_\_

Full Name \_\_\_\_\_

Authorized Signature, Title \_\_\_\_\_



[www.paceworldwide.com](http://www.paceworldwide.com)

PACE Incorporated retains the right to make changes to specifications contained herein at any time, without notice. Contact your local PACE Authorised Distributor or PACE Incorporated to obtain the latest specifications.

The following are trademarks and/or service marks of PACE, Incorporated, MD, USA:

INSTACAL™, FUMEFLO™, HEATWISE™, PACEWORLDWIDE™, PERMAGROUND™, POWERPORT™, POWERMODULE™, TEMPWISE™, TIP-BRITE™, AUTO-OFF™ and TEKLINK™

The following are registered trademarks and/or service marks of PACE, Incorporated, Annapolis Junction, Maryland, USA:

ARM-EVAC®, FLO-D-SODR®, MINIWAVE®, PACE®, SENSATEMP®, SNAP-VAC®, SODRTEK®, SODR- X-TRACTOR®, THERMOFLO®, THERMOJET®, THERMOTWEEZ®, VISIFILTER®, THERMO-DRIVE®, TOOLNET®.

PACE products meet or exceed all applicable military and civilian EOS/ESD, temperature stability and other specifications including MIL STD 2000, ANSI/JSTD 001, IPC7711 and IPC A-610.



**PACE USA**  
9030 Junction Drive  
Annapolis Junction  
MD 20701  
USA

Tel: (301) 490-9860  
Fax: (301) 498-3252

**PACE Europe Limited**  
13 Tanners Drive  
Blakelands  
Milton Keynes  
MK14 5BU  
United Kingdom  
(44) 01908 277666  
(44) 01908 277777