

TX-28/25XD60P Operating Instruction



FRONT
PAGE

EXIT

Panasonic



TX-28XD60P

TX-25XD60P

100Hz

Quintrix



Please read these instructions completely before operating this set and retain
them for future reference.

Dear Panasonic Customer,

Welcome to the Panasonic family of customers. We hope that you have many years of enjoyment from your new colour television. This is a very advanced television, however, the Quick Start Guide will tell you how to have the TV operating quickly; you can then read the following pages to fully utilise the advanced features.



This television has a low power consumption making it very cost effective to run.
To this end, the standby power consumption is merely 1 watt.

CONTENTS


Warnings and Precautions	2	Tuning Menu – Manual tuning	18
Quick Start Guide	3	OSD language	19
Basic Controls	4	AV Select and Setup	20
Using the On Screen Display Menus	5	VCR Operation	21
Aspect Control	6	Teletext Operation	22
Still Picture Controls	7	Audio / Video (AV) Connections	24
Main Menu	8	Via the front AV3 S–Video, Audio / Video (RCA) and Headphone Sockets	24
Sound Menu	9	SCART and S–Video Terminal Information ..	24
Setup Menu	10	Via the rear AV1 / AV2(S) / 21 Pin (SCART) and RCA Audio Out terminals	25
Tuning Menu	11	Trouble–shooting	26
Tuning Menu – Programme edit	12	For your guidance	27
Tuning Menu – Auto Setup	17	Specifications	27

WARNINGS and PRECAUTIONS

- This TV set is designed to operate on A.C. 220 – 240V, 50Hz.
- To prevent damage which might result in electric shock or fire, do not expose this TV set to rain or excessive moisture.
- **WARNING : HIGH VOLTAGE !!!**
Do not remove the rear cover as live parts are accessible when it is removed. There are no user serviceable parts inside.
- Avoid exposing the TV set to direct sunlight and other sources of heat.
- Remove the mains plug from the wall socket when the TV set is not used for a prolonged period of time.
- **CABINET AND PICTURE TUBE CARE**
Remove the mains plug from the wall socket. The cabinet and picture tube can be cleaned with a soft cloth moistened with mild detergent and water. Do not use solutions containing benzol or petroleum. TV sets can produce static electricity, care must be taken whenever touching the TV screen.
- Adequate ventilation is essential to prevent failure of electrical components, we recommend that a gap of at least 5cm is left all around this television receiver even when it is placed inside a cabinet or between shelves.

QUICK START GUIDE

Check that you have the accessories and items shown

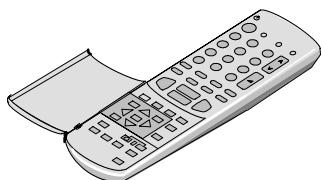


Remote Control Transmitter
(EUR51923)




Batteries for the Remote Control Transmitter.
(2 x R6 (UM3) size)



Operating Instruction book
TQB8E2407U

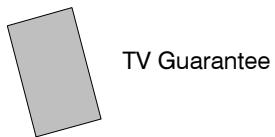


Remote control batteries

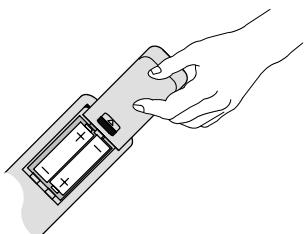


- Make sure that the batteries are fitted the correct way round.
- Do not mix old batteries with new batteries. Remove old, exhausted batteries immediately.
- Do not mix different battery types, i.e. Alkaline and Manganese or use rechargeable (Ni-Cad) batteries.


QUICK START . . .

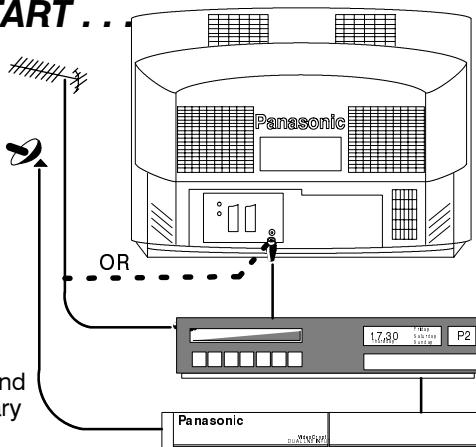

Plug in aerial and connect ancillary equipment see pages 24 and 25

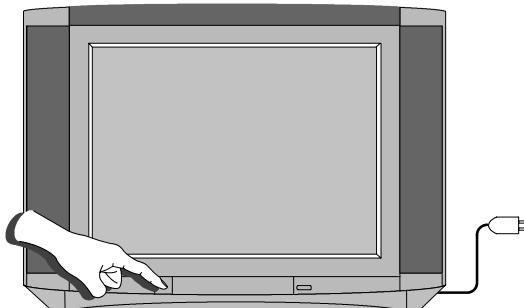


Plug in T.V. and switch on

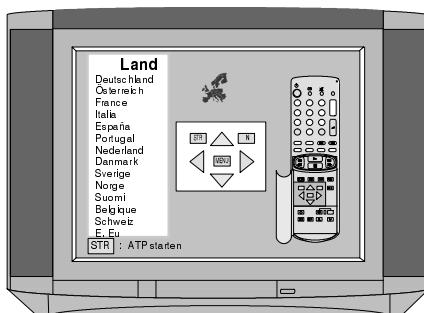


Select your country



Choose language also for Switzerland and Belgium only.

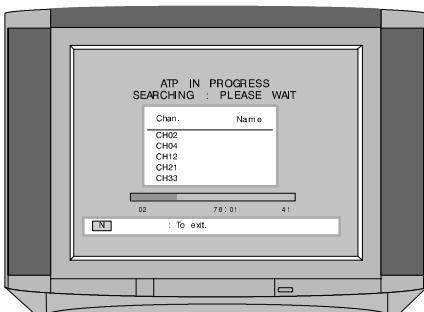

Auto setup will begin, your stations will be located and stored

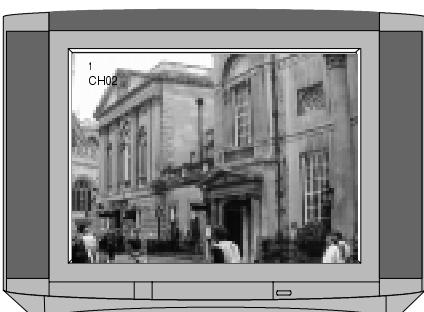



Change Channel

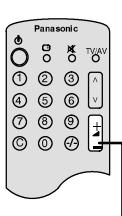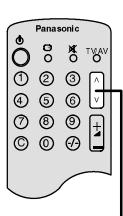

READY TO GO . . .


Adjust Volume

BASIC CONTROLS – FRONT PANEL AND REMOTE CONTROL

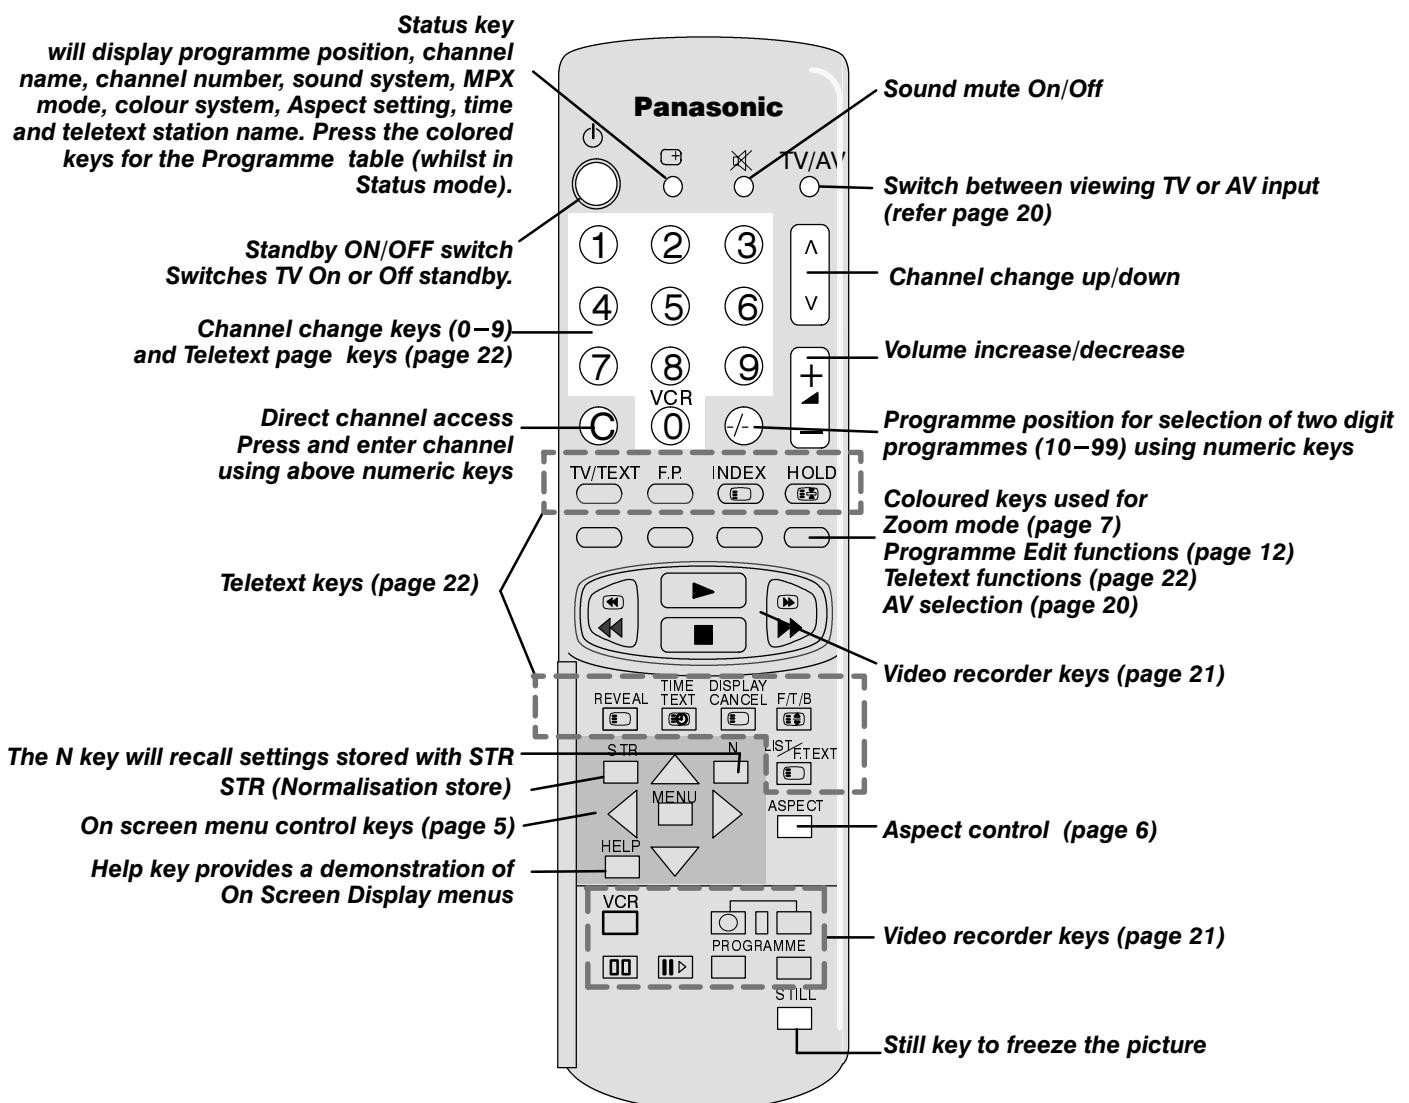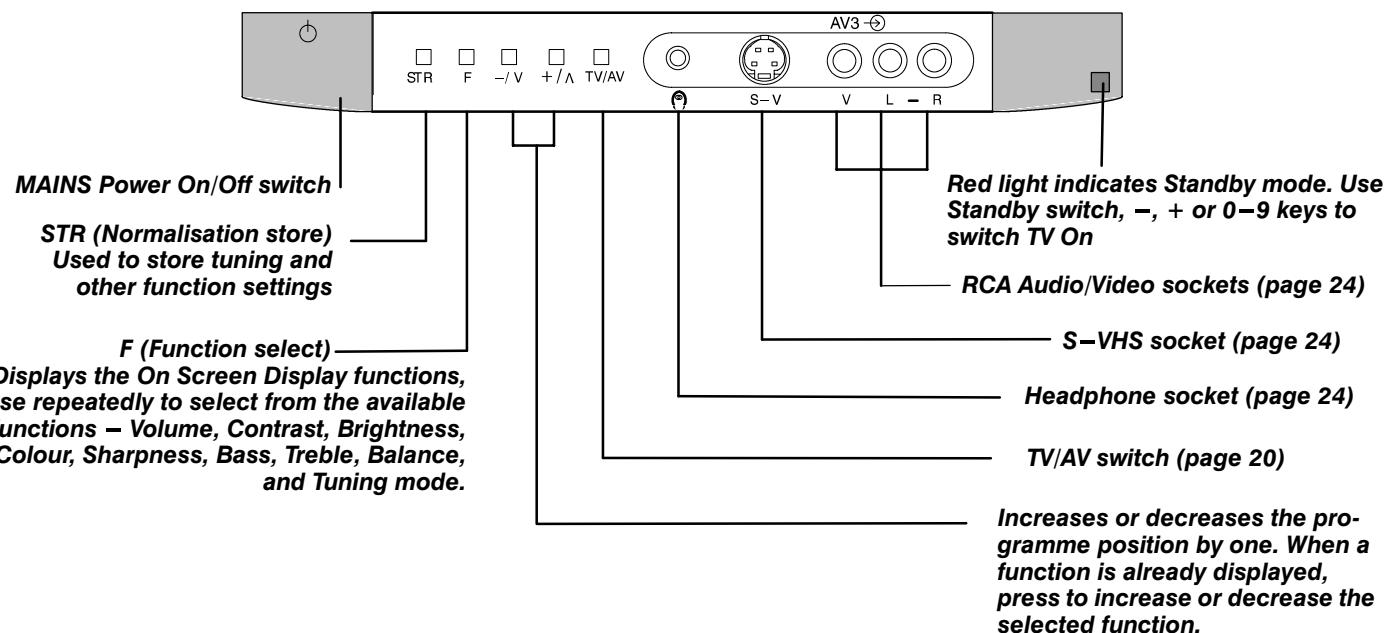

USING THE ON SCREEN MENUS

This TV has a comprehensive system of On Screen Display menus to access adjustments and options.

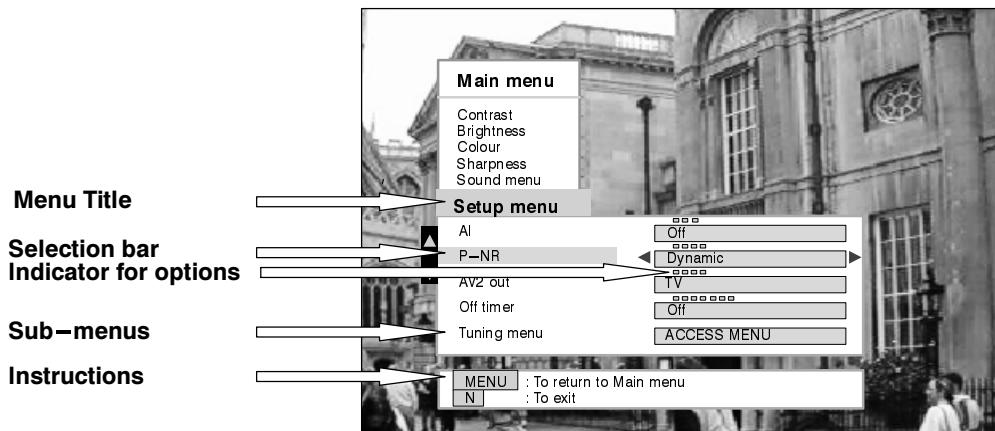


The following remote control keys are used to access and adjust settings for the On Screen Display menus.

Some selections, for example, **Contrast**, **Brightness**, **Colour** and **Sharpness** will allow you to increase or decrease their level.


Some selections, for example, **Off timer**, allow a choice to be made.

Some selections, for example **Tuning menu**, will lead to a further menu.


The '**MENU**' key is used to open the Main menu and also to return to either the Main menu or a previous menu.

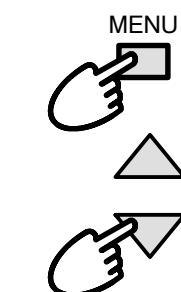


The **▲▼** keys are used to move the selector up or down the menus.

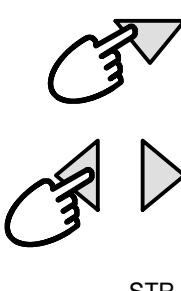

The **◀▶** keys are used to access menus, adjust levels or to select from a range of options.

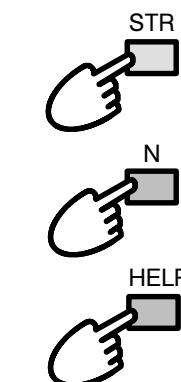


The '**STR**' key is used to store settings after your adjustment or choice has been made.

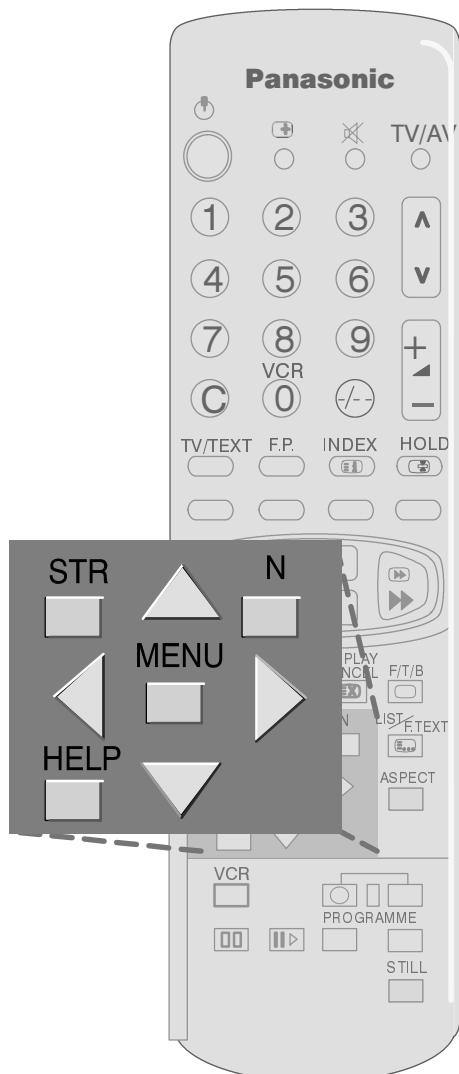


The '**N**' key is used to leave the menu system and return to the normal viewing screen.

The '**HELP**' key will run a demonstration of the menus available.


ASPECT CONTROLS

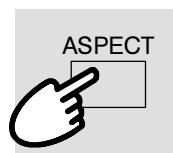

AUTO

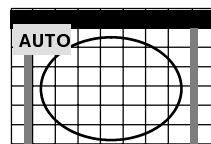


16:9

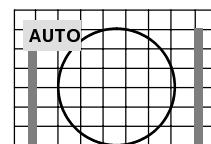

4:3


Selecting **AUTO** mode of this TV will automatically cause the TV to display any incoming picture at its correct format, i.e. 16:9 or 4:3.

4:3

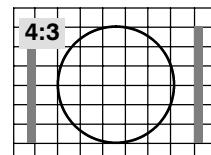

4:3 will display a 4:3 picture at its standard 4:3 size and can be selected if you wish to view in this format.

16:9

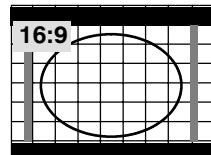

16:9 will display a 16:9 picture at its standard 16:9 size and can be selected if you wish to view in this format.

ASPECT CONTROLS



In **S-Zoom** mode the red and green keys will allow you to move the picture horizontally. The yellow and blue keys will allow you to move the picture vertically.


NOTE:

- The on screen selector keys that appear for some aspect functions will clear after a few seconds. If you subsequently wish to select an operation then press the Aspect key once more for the keys to reappear.
- A correct 16:9 picture format is only possible when a 16:9 signal is received through the 21 pin terminals. It is possible to switch a normal 4:3 signal into 16:9 mode, but this is for effect only and does not accurately represent the 16:9 picture format.

STILL PICTURE CONTROLS




The STILL key allows you to freeze the picture at any time.

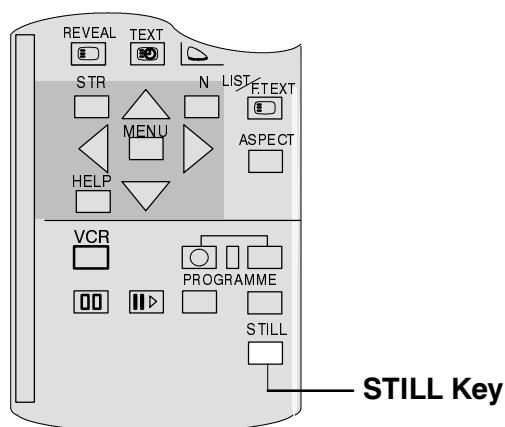

MAIN MENU

All menus start from the Main menu (except AV select and Tuning procedure (Front panel)).
You will also find the basic picture quality adjustments within this menu.


Open the Main menu

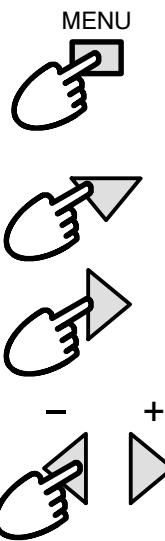

Move to your choice

Access your choice

Increase or decrease levels or
move to the Sound, Setup or OSD
languages menus.

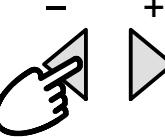

Contrast

The Contrast level of the TV can be adjusted, to suit the lighting conditions of the room, as necessary.

Brightness

The Brightness level can be adjusted to suit your viewing conditions.

Colour

The Colour level can be adjusted to your own preference.

Sharpness

The picture can be softened or sharpened to your own preference.

Tint

The Tint adjustment will only appear as a menu item if you have an NTSC signal source connected to the TV and will allow adjustment of the hue.

Sound Menu





Choosing the Sound menu will take you to that menu and allow adjustments to the sound quality.

Setup Menu

Choosing the Setup menu will lead to the Setup menu for various feature adjustments.

OSD language


The OSD language menu will allow you to change the language used for all on screen menus.

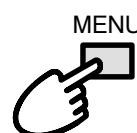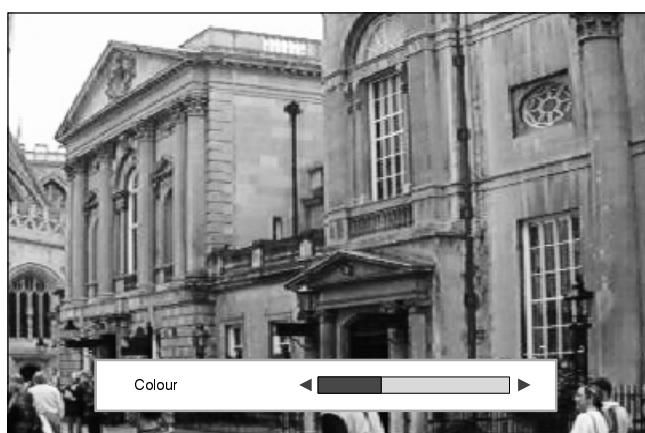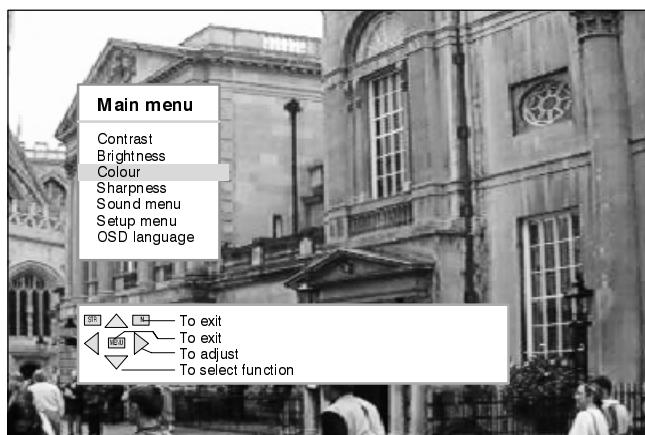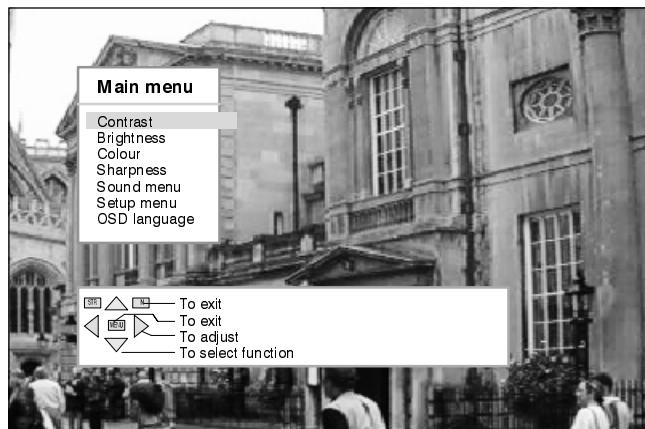


SOUND MENU

The Sound menu will allow you to set your personal preferences for all aspects of sound quality

Open the Main menu

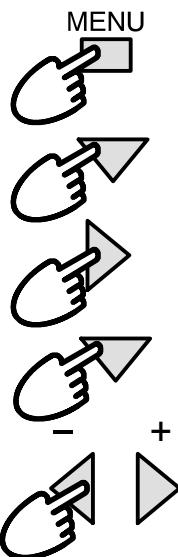


Move to Sound menu

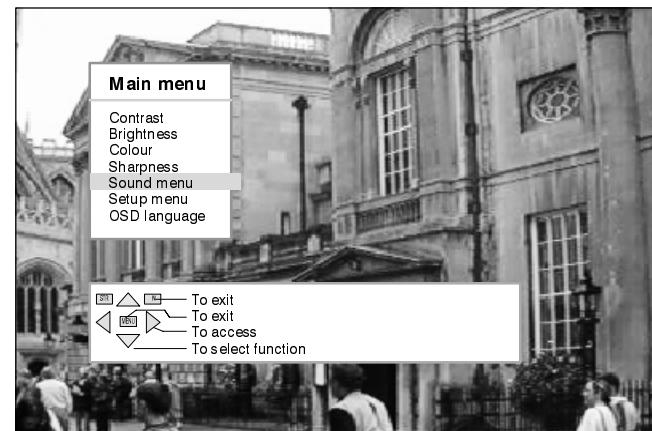

Access Sound menu

Move to your choice

Increase or decrease levels or choose from options of MPX, Mode or ambience.

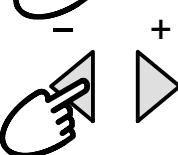

Bass

Bass adjustment will emphasise the lower, deeper frequencies and can be increased or decreased.

Treble

Treble adjustment will emphasise the sharper, higher frequencies and can be increased or decreased.

Balance

Balance affects the levels of sound between the left and right speakers. Adjustment can be made so that the level from between speakers will suit your listening position.



The headphone volume can be adjusted independently of the TV speakers so that everyone can enjoy listening at their own comfort level.

MPX



MPX will usually be set to Stereo to provide the best reproduction, however if reception deteriorates or if the service is not available then it is advisable to switch to Mono. Mono (M1) and (M2) can also be selected if signals are being transmitted.

Mode

The sound can be improved during Music or Speech mode by selecting the appropriate function.

Ambience

Ambience provides a dynamic enhancer to give a greater depth of sound, you can choose to switch On or Off.

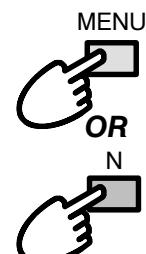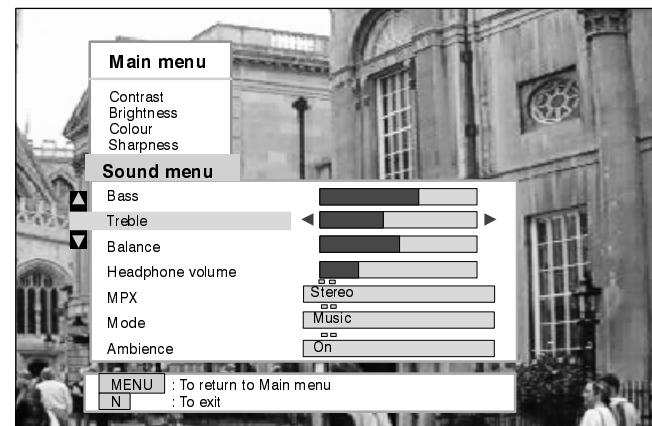



Return to Main menu

To exit menu system

SETUP MENU

The Setup menu provides access to various advanced features and also to the Tuning menu

Open the Main menu

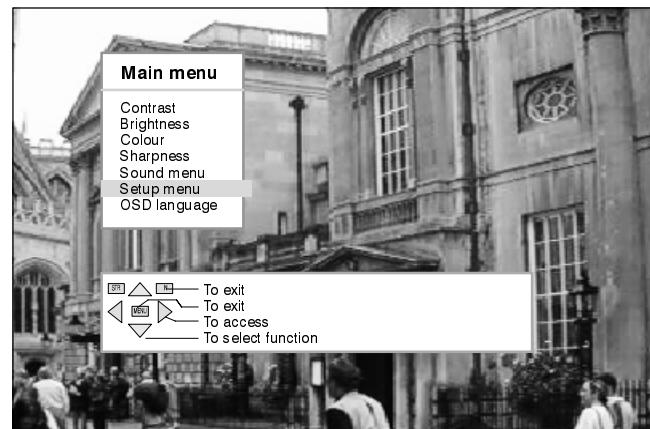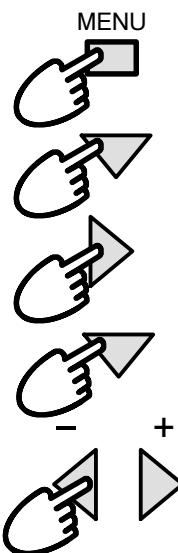

Move to Setup menu

Access Setup menu

Move to your choice

Increase or decrease levels or choose from options



AI
AI automatically analyses the incoming picture and processes it to give improved contrast, optimum field of depth and vivid colour tones. Choose either Off or from two levels of application.



P-NR
P-NR will automatically reduce unwanted picture interference. Choose either Off or one of 3 levels of application.





AV2 out
AV2 offers you a choice of signals to send to the AV2 SCART socket. You can choose from the current **TV** programme position, the signal entering **AV1/AV3** or **Monitor** – the picture displayed on screen.



Off timer
Off timer will switch the TV off within a preset time which you can choose from between 0 to 90 minutes in 15 minute intervals.

Tuning menu

The Tuning menu provides an entry to many other features including Programme edit, ATP, Fine tuning, Colour system, and Text language.

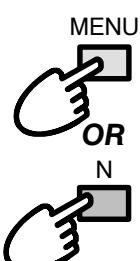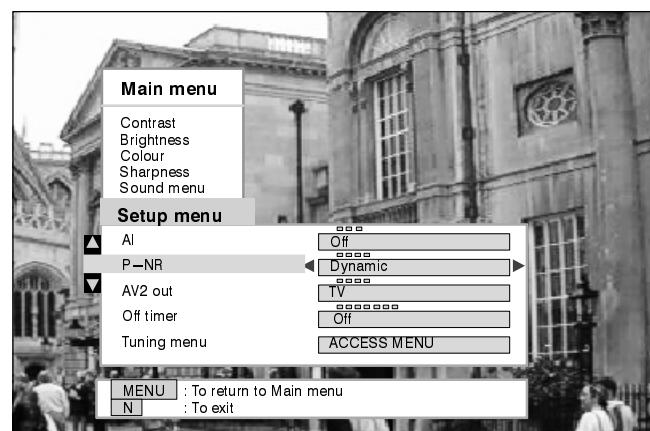


Return to Main menu

To exit menu system


TUNING MENU

The Tuning menu provides access to both manual and automatic tuning menus


Open the Main menu

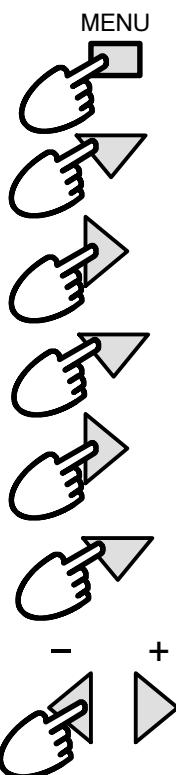


Move to Setup menu

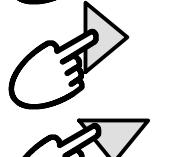

Access Setup menu

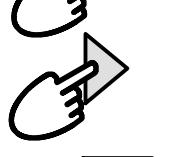

Move to Tuning menu

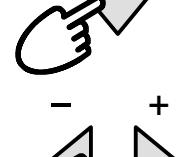

Access Tuning menu



Move to your choice

Increase or decrease levels or choose from options

Programme Edit

Accessing Programme edit menu will allow stations to be moved, added, deleted, named, locked and provides access to the TV –system. Further details on page 12.

Auto setup

The Auto setup menu allows you to automatically retune the TV. Further details on page 17.

Manual tuning

The Manual tuning menu allows individual programme positions to be tuned manually. Further details on page 18.

Fine tuning

Stations can be finely tuned using the Fine tuning adjustment.

Colour system




The Colour system menu allows you to decide the correct choice of transmission standard.

Volume correction

Volume correction allows you to adjust the volume level of individual stations.

Text language


You can choose either West Europe or East Europe to provide the most suitable characters to be used for your Teletext viewing.

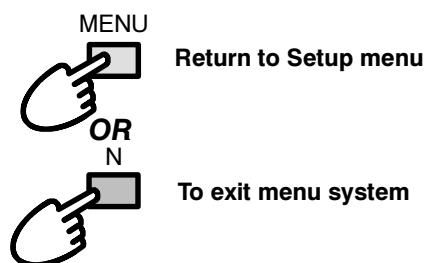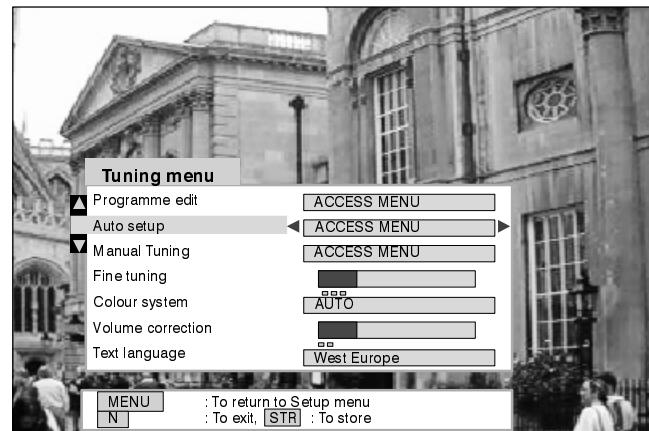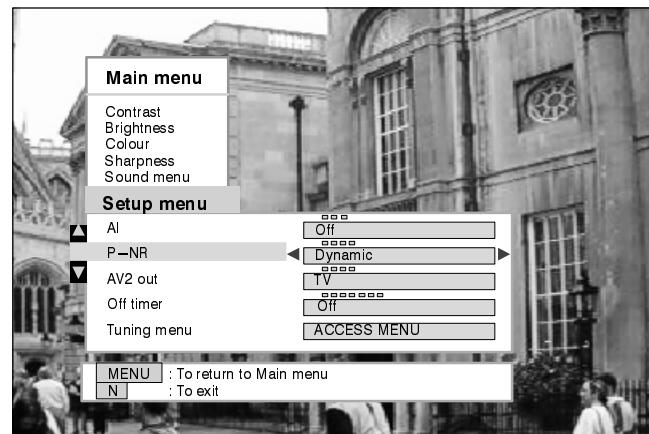


TUNING MENU – Programme edit

The Programme edit menu allows you to delete, add, move, view, tune, name and lock channels and to change the TV-system


Open the Main menu

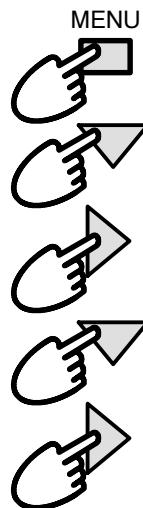


Move to Setup menu

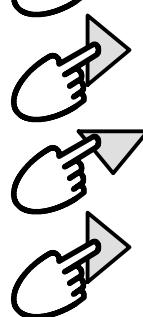


Access Setup menu

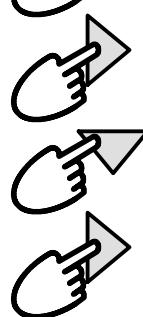


Move to Tuning menu

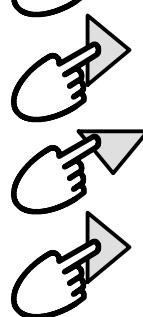

Access Tuning menu

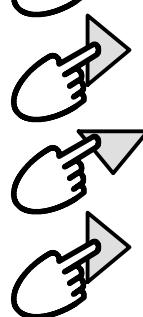

Move to Programme edit

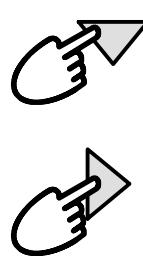

Access Programme edit

 


To delete an unwanted programme position





Choose the programme position



Press the red key on remote control



Press STR to delete

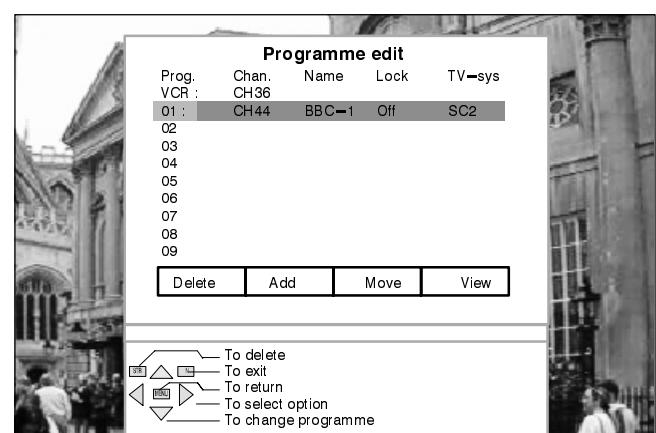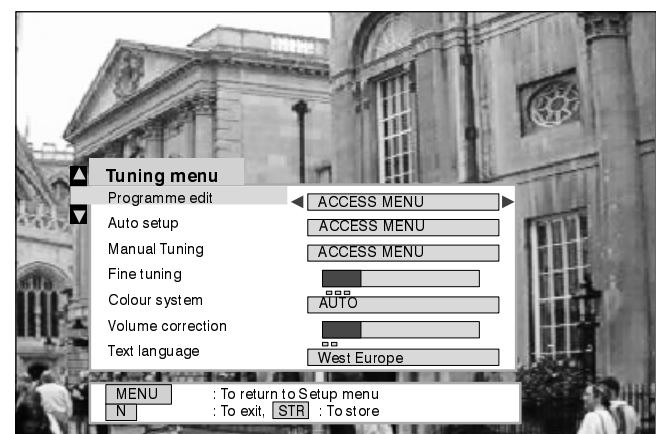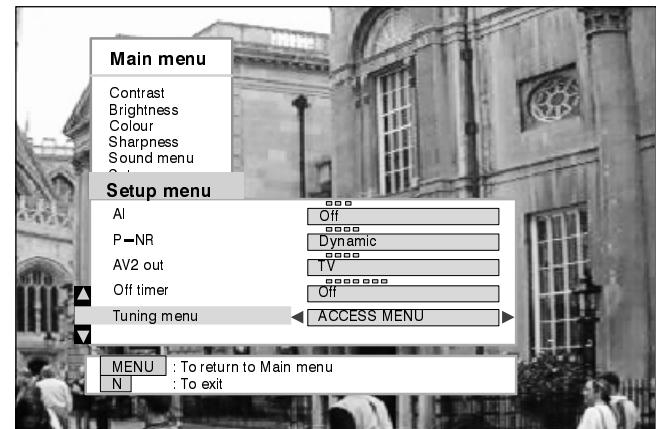 

If you have completed changes to the Programme edit menu then

MENU

Return to Tuning menu

OR

N To exit menu system

TUNING MENU – Programme edit

To add a programme position

 
Choose the programme position




Press the green key




Press STR to add



This blank programme can then be tuned, named, locked and be allocated your choice of TV-system

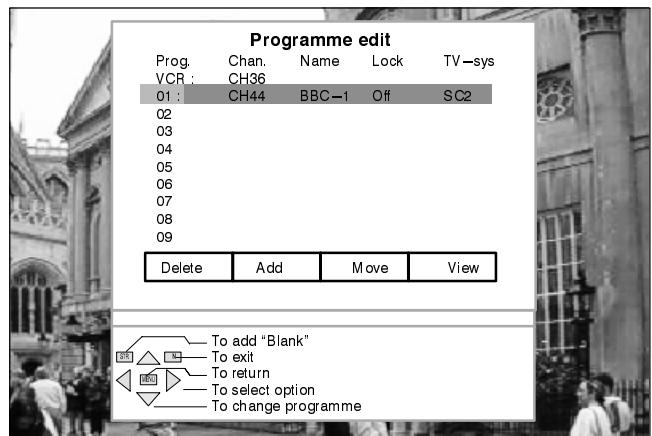

If you have completed changes to the Programme edit menu then

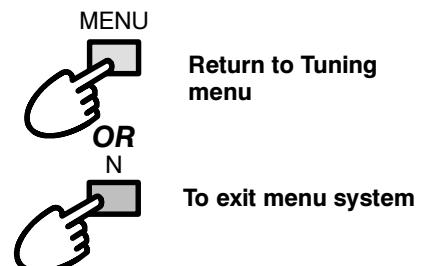

To move a programme to another position

Choose the programme position



Press the yellow key on remote control




Choose new position




To action new position



Press STR to store

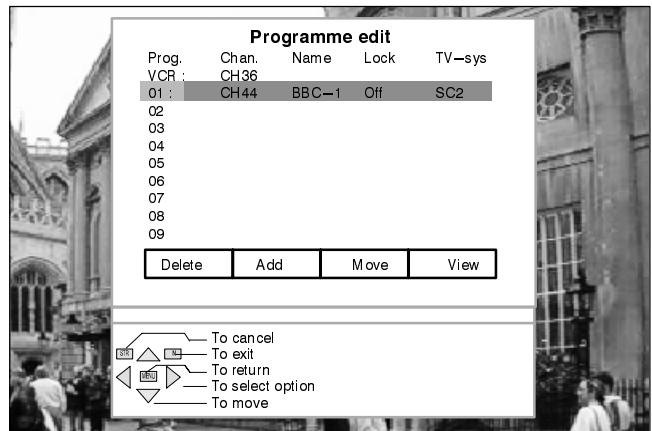

If you have completed changes to the Programme edit menu then

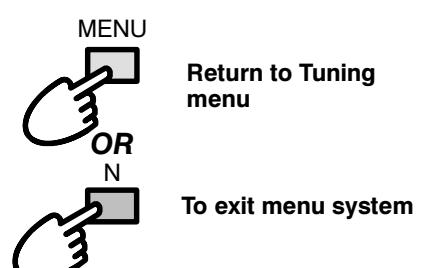



TUNING MENU – Programme edit

To view a programme position



Choose the programme position



 
Press the blue key on remote control

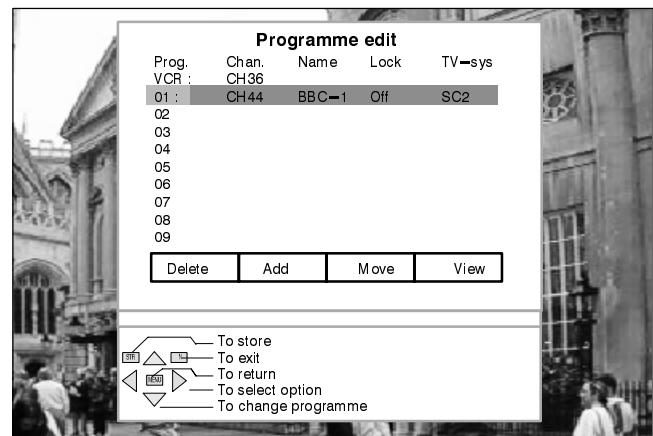

The screen will return to
Programme edit after a few
seconds

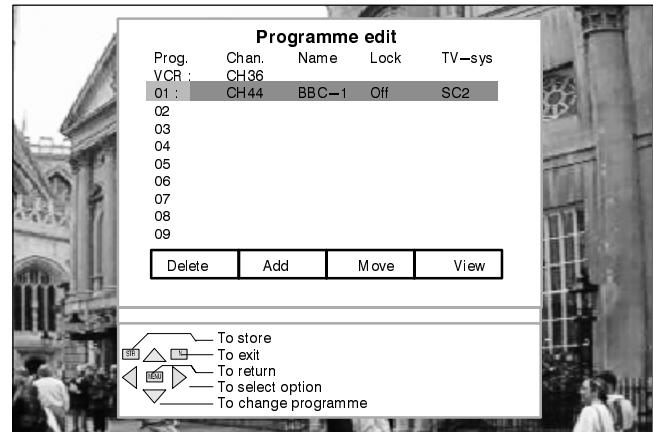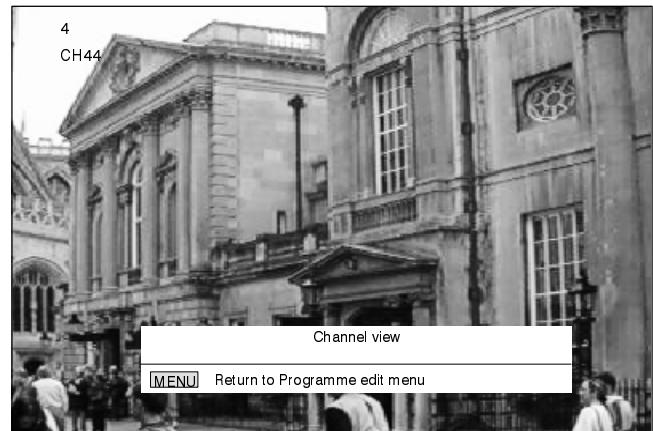

Return to Tuning
menu

 

To exit menu system


TUNING MENU – Programme edit

To tune a programme position

Choose the programme position





Move to the channel setting

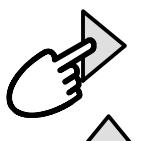

Increase or decrease channel number



 Press STR to store

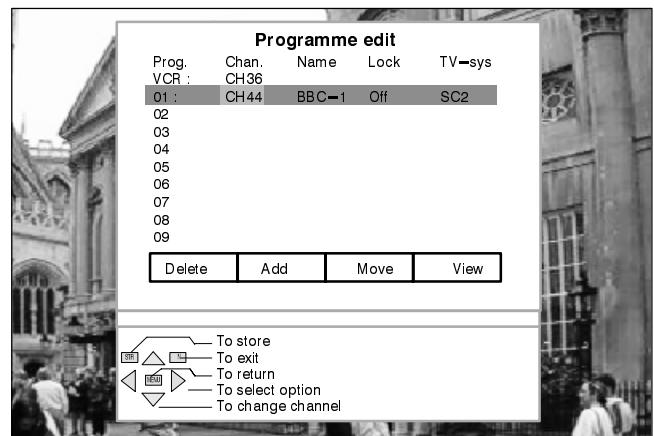

If you have completed changes to the Programme edit menu then



Return to Tuning menu




To exit menu system

To rename a programme position


Choose the programme position



Move to the Name position

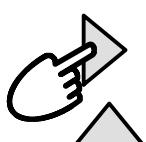


Choose the new character

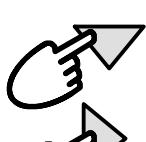


Move to the next character position



Continue until renaming is completed

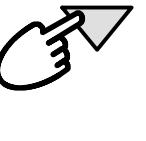


Press STR to store

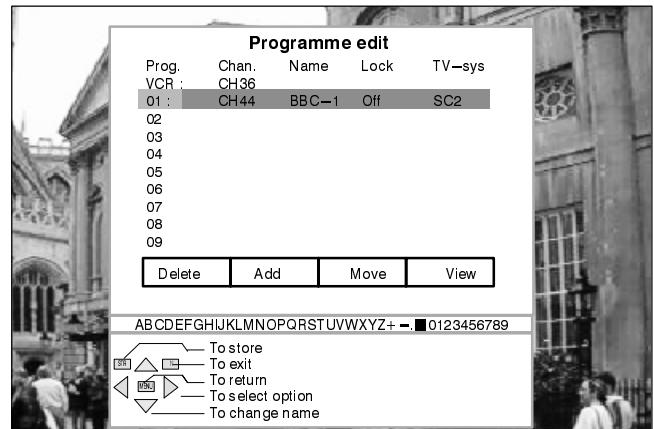

If you have completed changes to the Programme edit menu then



Return to Tuning menu

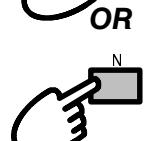

To exit menu system

TUNING MENU – Programme edit

To lock a programme position to prevent access

Choose the programme position




 
Move to the lock position



Choose between lock on or lock off



Press STR to store

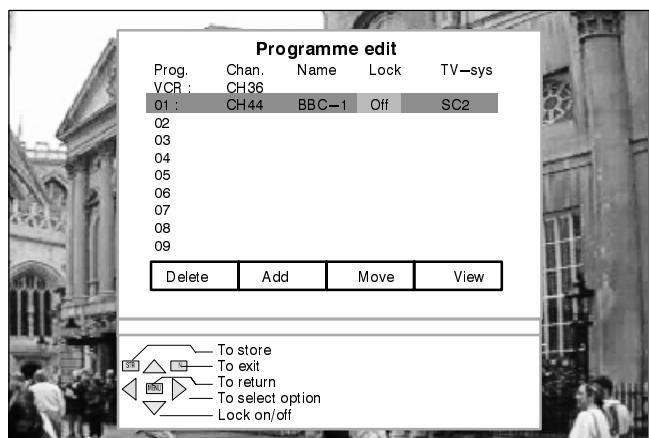

If you have completed changes to the Programme edit menu then

MENU



Return to Tuning menu

OR




To exit menu system

To change the TV-system for a programme position

Choose the programme position





Move to the TV-sys position

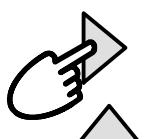

Choose the required sound system *



 Press STR to store

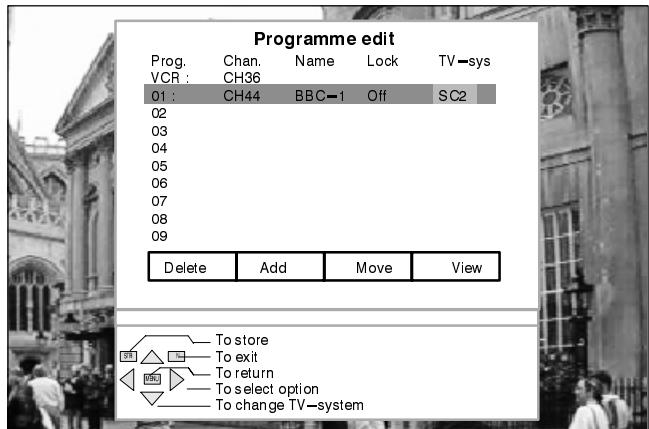

* SC1 : PAL B, G, H / SECAM B, G
 SC2 : PAL I
 SC3 : PAL D, K / SECAM D, K
 F : SECAM L / L'

If you have completed changes to the Programme edit menu then

MENU



Return to Tuning menu

OR




To exit menu system

TUNING MENU – Auto setup (ATP)

The Auto setup menu will allow you to automatically retune the TV to your local stations.
It is useful if you move to a different region.

Open the Main menu

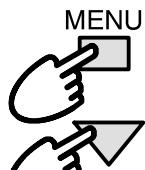

Move to Setup menu



Access Setup menu



Move to Tuning menu



Access Tuning menu



Move to Auto setup menu



Access Auto setup menu



Press to start Auto setup (ATP)



Select your country



 
Press to start Auto setup (ATP)




The TV will search for, locate and order your local stations.







Press Menu to return



Press N to exit

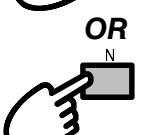

Once this operation is completed
the TV will display programme
position 1.

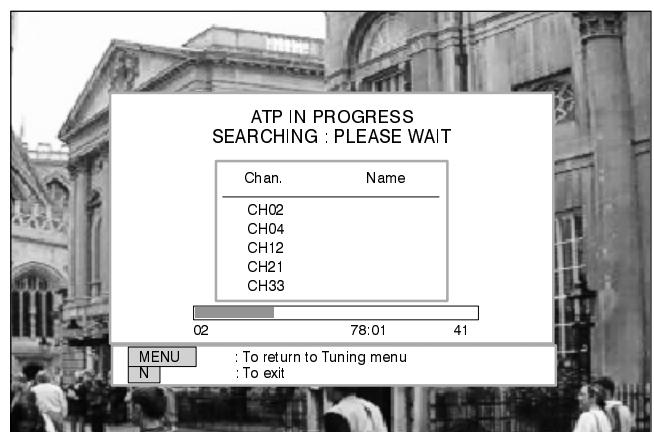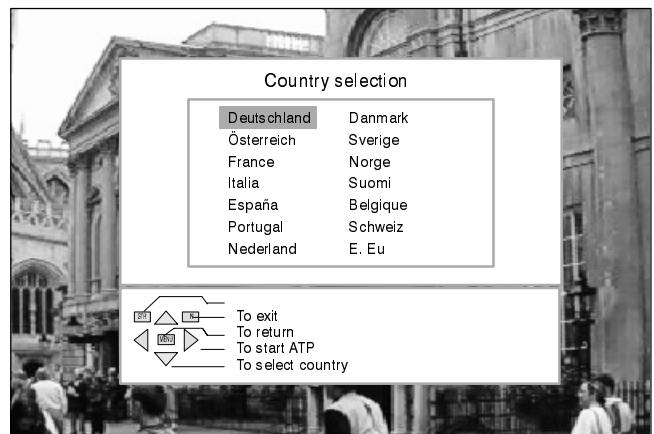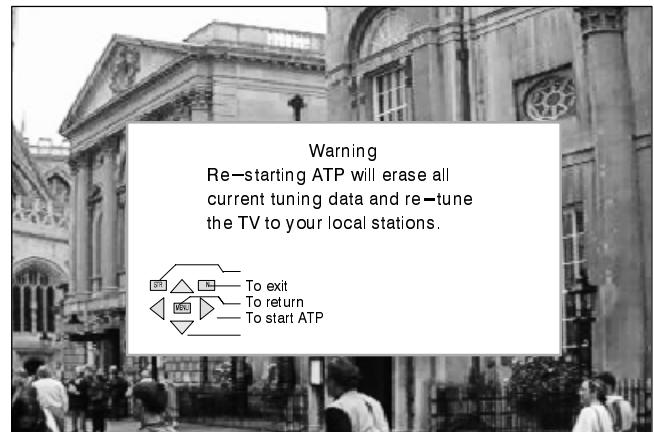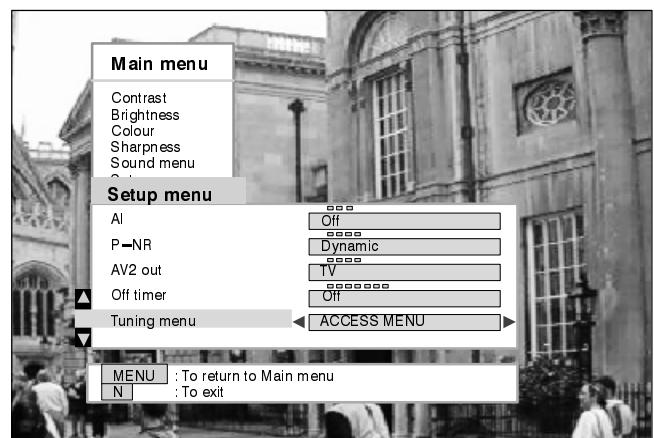


TUNING MENU – Manual tuning


Manual tuning of the Programme positions is available either from the on screen display menu or from the front panel controls

Manual tuning menu


Open the Main menu

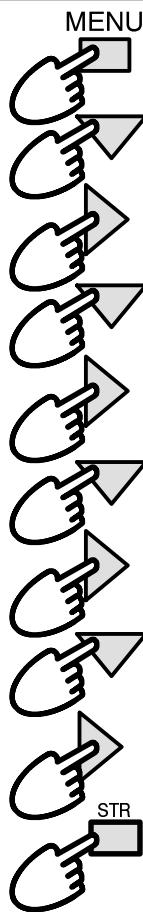


Move to Setup menu

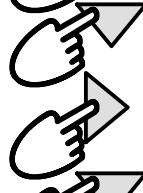


Access Setup menu

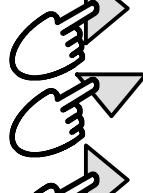

Move to Tuning menu

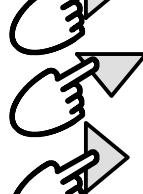

Access Tuning menu

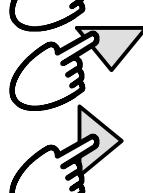

Move to Manual tuning





Access Manual tuning

Select the programme position


Start tuning

Press STR to store

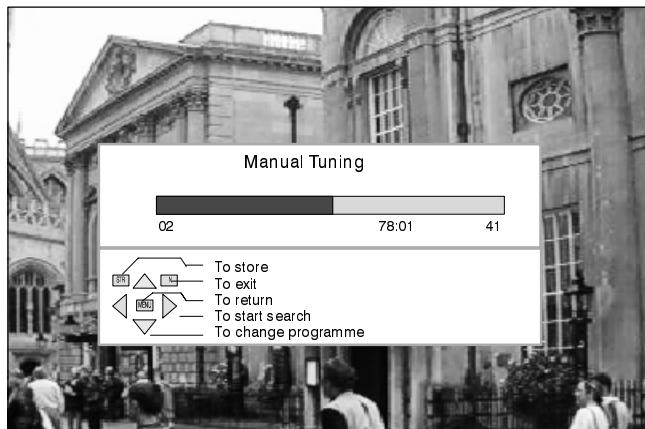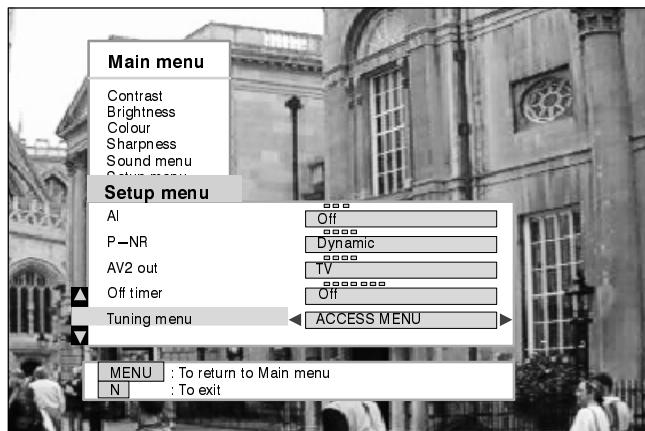


Manual tuning (Front panel)


Press the F button (Front panel) until "Tuning mode" is reached

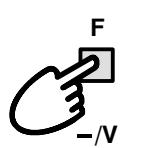

Press the – or + button to access "Tuning mode"

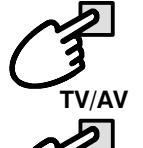

Press the TV/AV button to change to the required programme position

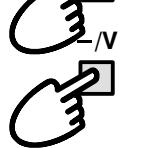



Press the – or + button to start the tuning search



Press STR to store changes





Press the F button to exit

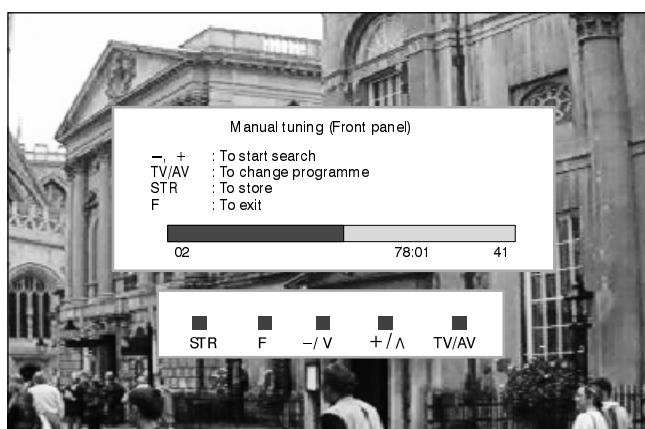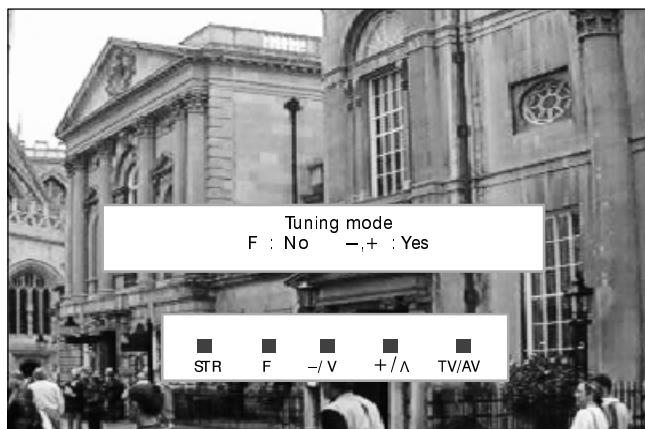


OSD LANGUAGE

When you first installed the TV the on screen display language was set according to your choice of country. If you wish to use a different language then it can be chosen from the OSD language menu.




Open the Main menu

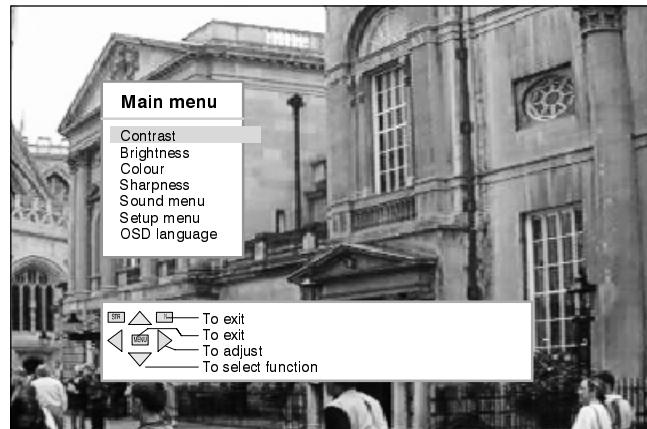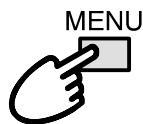

Move to the OSD language menu

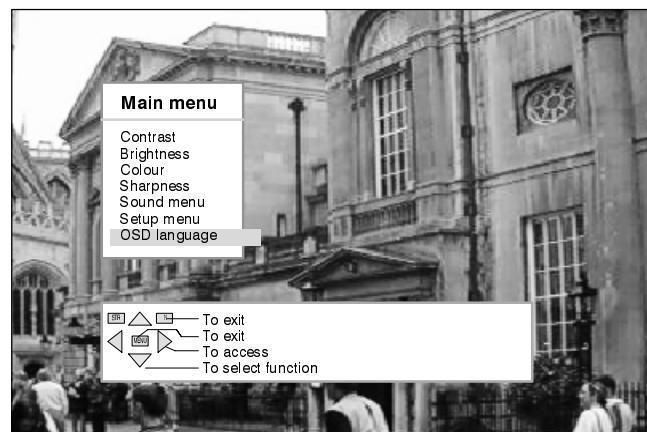

Access your choice

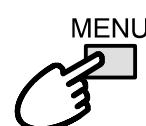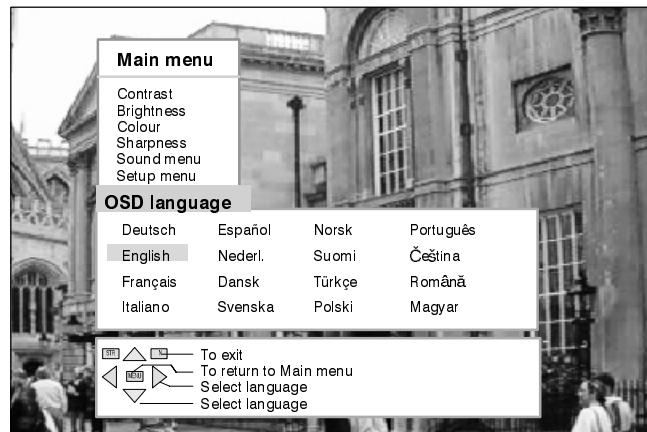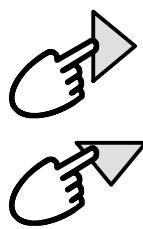

Return to Main menu




To exit menu system

AV SELECT and SETUP

The AV Select menu will allow you to choose which AV source to view.

Press the TV/AV key
(remote control or TV)

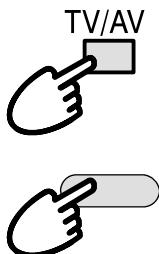


Press the appropriate coloured key of remote control (whilst the options remain on screen)

The options will disappear

You may wish to make
adjustments to the Setup or Sound
menus



Open the Main menu

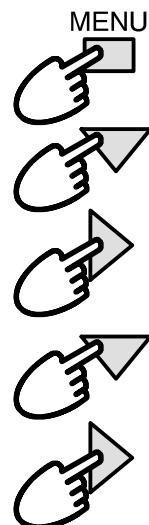


Move to Setup menu

Access Setup menu

Move to your choice

Access adjustments or options

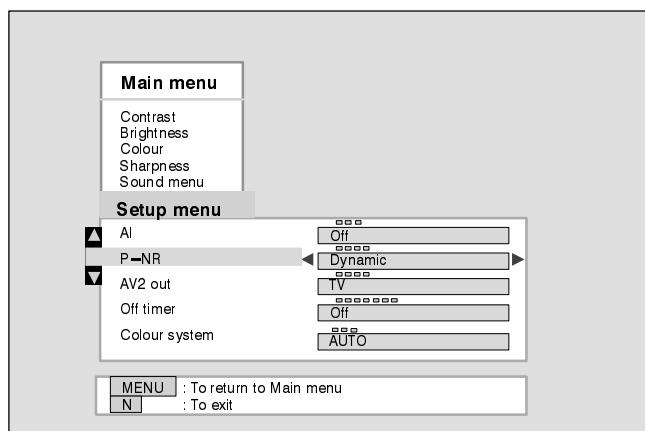

MENU : To return to Main menu


N : To exit

MENU : To return to Main menu

N : To exit

Sound menu

Open the Main menu

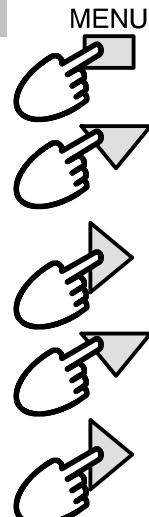


Move to Sound menu

Access Sound menu

Move to your choice

Access adjustments or options

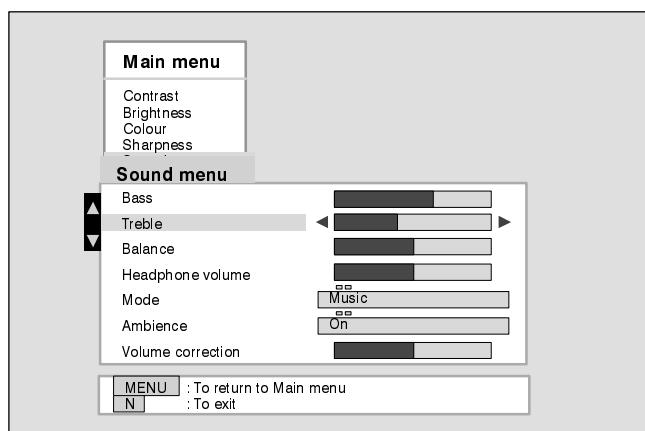

MENU : To return to Main menu


N : To exit

MENU : To return to Main menu

N : To exit

VCR CONTROL

The Remote Control is capable of operating some functions of selected Panasonic VCRs, please consult your dealer for details. Some VCR have different functions, so to ensure compatibility, please refer to the VCR's instruction book.

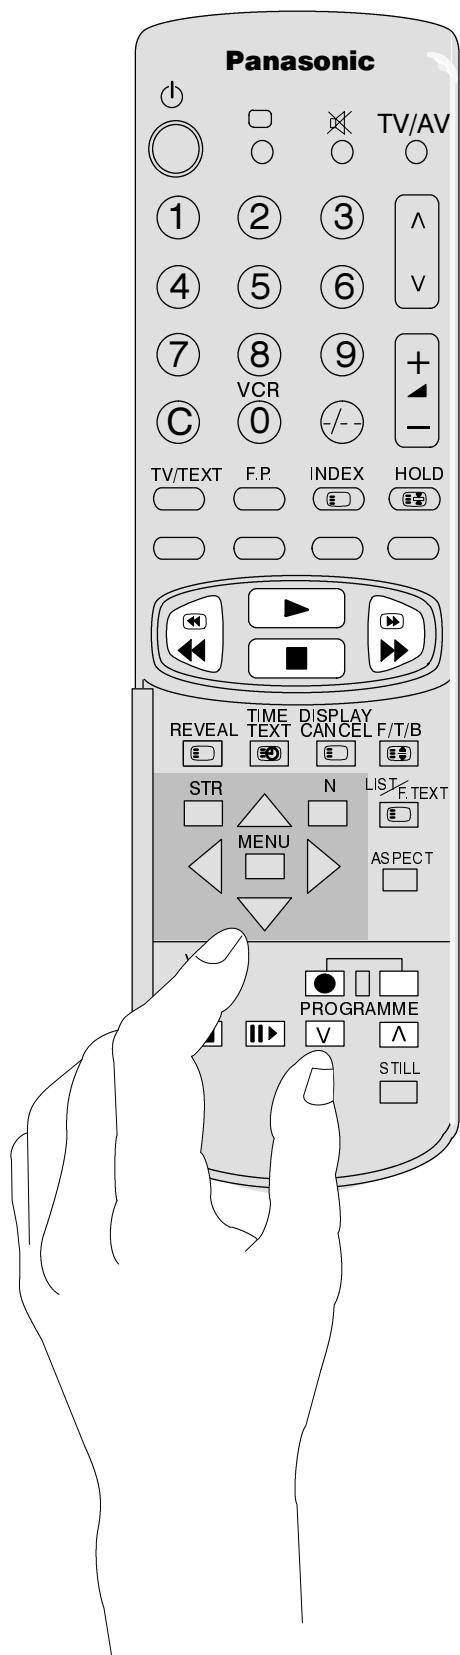

	Standby Press to switch the VCR to standby mode. Press again to switch back on.
	Play Press to playback the tape.
	Stop Press to stop the tape.
	Fast Forward / Cue Press to fast forward the tape. In Play mode, press to view the picture rapidly forward.
	Rewind / Review Press to rewind the tape. In Play mode, press to view the picture in reverse rapidly.
	Pause / Still Press in playback mode, the picture will pause.
	Still Advance While in PAUSE / STILL mode, press to advance the picture one frame at a time.
	Programme Up / Down Press to increase or decrease the VCR programme position by one.
	Record Press these together to record.
	Operating Switch If any difficulty is encountered when using this remote control with Panasonic video cassette recorders please check the operation of the video recorder with the operating switch set at position one and again with the switch set at position two.

TELETEXT OPERATION

 
- Teletext features may vary depending on the Broadcasting Companies and is only available if the channel selected is transmitting Teletext.
- Pressing the **MENU** key whilst in Teletext operation will display the contrast function with a cyan bar, press **◀ ▶** to alter the setting as required.
- When in teletext mode, the volume may still be altered to the desired listening level.

What is LIST mode?

In LIST mode, four differently coloured page numbers are situated at the bottom of the screen. Each of these numbers can be altered and stored in the TV's memory.


What is FASTEXT?

In FASTEXT mode, four differently coloured subjects are situated at the bottom of the display. To access more information about one of these subjects, press the appropriately coloured button. This facility enables fast access to information of the subjects shown.




TV / Teletext mode

Press the **TV/TEXT** key.
The screen will display the Teletext page.
Press again when you wish to return to TV. mode.

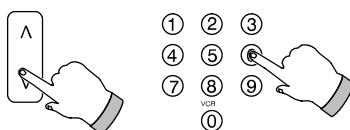

Page Selection

 Pages can be selected in two ways :
a. Press the Up / Down keys to increase or decrease the page number by one.
b. By entering the page number, using 0 – 9 on the remote control.




Full / Top / Bottom

Press to expand the TOP half of the page.
Press again to expand the BOTTOM half.
Press again to return to normal (FULL) size.




Reveal

 Press to reveal hidden words e.g. quiz page answers.
Press again to hide.



Red / Green / Yellow / Blue keys

 In FASTEXT mode these correspond to the differently coloured subjects.
In LIST mode they correspond to the differently coloured page numbers.



List Store

In LIST mode the four page numbers can be altered for channel positions 1 – 25 only.
To do this, press one of the coloured keys and enter the new page number.
Press and hold **STR**, the page numbers will change colour.

 
TELETEXT OPERATION

It is not possible to change the programme position when in News flash, Update or Sub Coded Page Access operation.

List / F.text



Press to change from FASTEXT mode to LIST mode and vice versa.
In FASTEXT mode four differently coloured subjects are displayed at the bottom of the page. Press the appropriate coloured key to access more information about one of these subjects.



Favourite Page (F.P.)

Stores a favourite page in memory for instant recall. To store such a page, the TV must be in LIST mode, and the programme position must be from 1 – 25. Press the **BLUE** key, select the page number, then press **STR**. The page number is now stored.
Press **F.P.** to recall this page.

Display Cancel

Press **DISPLAY CANCEL** to view the TV picture whilst searching for a Teletext page.
When found, the screen will display the page number at the top left.
Press **DISPLAY CANCEL** to view the page.
Press **TV / TEXT** to return to normal TV operation.



 
News Flash

When a news flash page has been selected, press **DISPLAY CANCEL** to view the TV picture, when an update is received, it will be displayed on screen.
Press **DISPLAY CANCEL** to remove updated news.
Press **TV / TEXT** to return to normal TV operation.

Update

Press **DISPLAY CANCEL** to see the update of information on certain pages.
When an update is received, the page number will be displayed at the top left of the screen.
Press **DISPLAY CANCEL** to view the page.
Press **TV / TEXT** to return to normal TV operation.

Sub Coded Page Access



When teletext information exceeds more than one page, it may take some time for the automatic changing of the sub pages to reach the sub page you require. It is possible to enter your required sub page and continue watching the normal programme until the correct sub page is found.
Select the required page number using keys 0 – 9.

Press **TIME TEXT**, **** will be displayed (top right of the screen).

Enter desired sub page number before the **** disappears.
To select page 6 enter 0, 0, 0 and 6.

If in LIST mode, a 'T' will appear in the current box at the bottom.

Press **DISPLAY CANCEL** to view a normal TV programme.

When the page is available, press **DISPLAY CANCEL** to view the page.
To clear the page perform one of the following :

- Select a new page number.
- Press **TV/TEXT** to return to normal TV operation.




Index

Press **INDEX** to return to the main index page.

AUDIO/VIDEO CONNECTIONS

Front AV3 4 Pin S-Video, RCA Audio / Video and Headphone Sockets

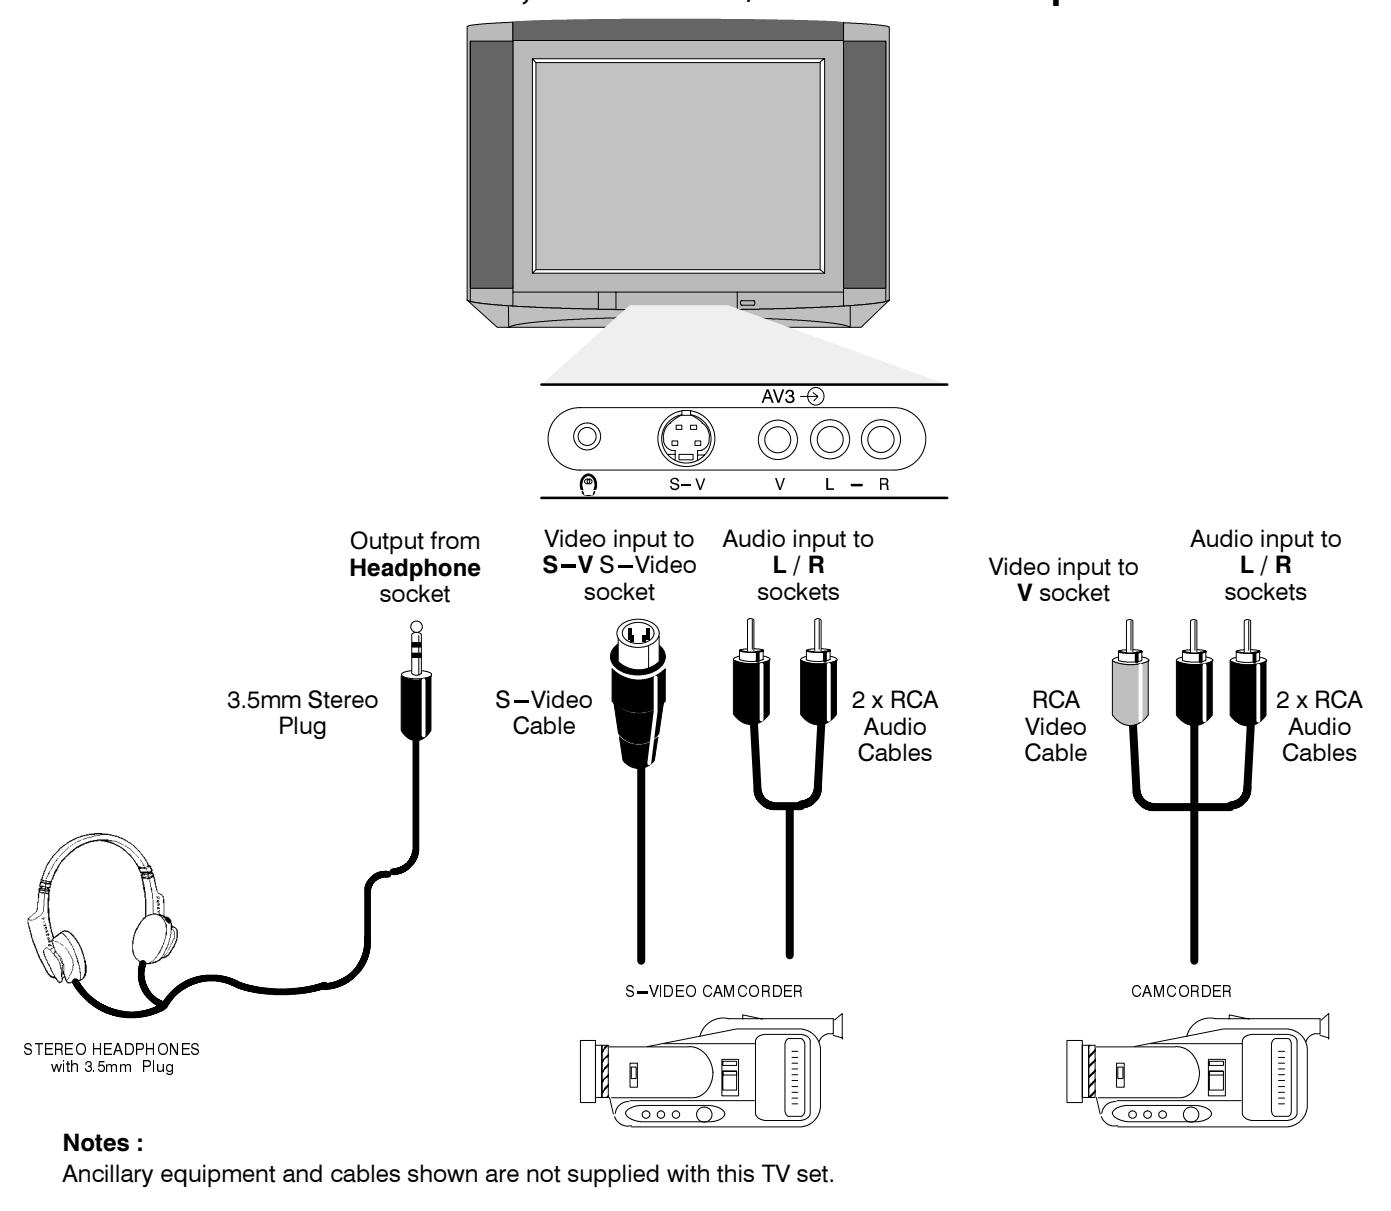

■ SCART and S-Video Terminal Information

AV1 21 pin SCART terminal

Socket Earth	21 -	- 20 CVBS in (video)
CVBS out (video)	19 -	- 18 RGB status earth
CVBS earth	17 -	- 16 Status RGB
Red in	15 -	- 14 Earth
Red earth	13 -	- -
Green in	11 -	- 10 -
Green earth	9 -	- 8 Status CVBS
Blue in	7 -	- 6 Audio in (L)
Blue earth	5 -	- 4 Audio earth
Audio out (L)	3 -	- 2 Audio in (R)
Audio out (R)	1 -	


Suitable inputs for **AV1** include RGB (Red/Green/Blue).

AV2 21 pin SCART terminal

Socket Earth	21 -	- 20 CVBS in (video)
CVBS out (video)	19 -	- 18 Earth
CVBS earth	17 -	- 16 -
S.C. - In	15 -	- 14 Earth
Earth	13 -	- -
Earth	11 -	- 10 -
Earth	9 -	- 8 Status CVBS
Earth	7 -	- 6 Audio in (L)
Earth	5 -	- 4 Audio earth
Audio out (L)	3 -	- 2 Audio in (R)
Audio out (R)	1 -	


AV2 – Pins 15 and 20 are dependent on AV2 S-VHS / VIDEO switching.

S-Video 4 pin terminal

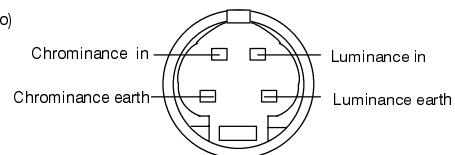

AUDIO/VIDEO CONNECTIONS

Rear AV1/AV2(S) 21 Pin SCART and RCA Audio Out Terminals

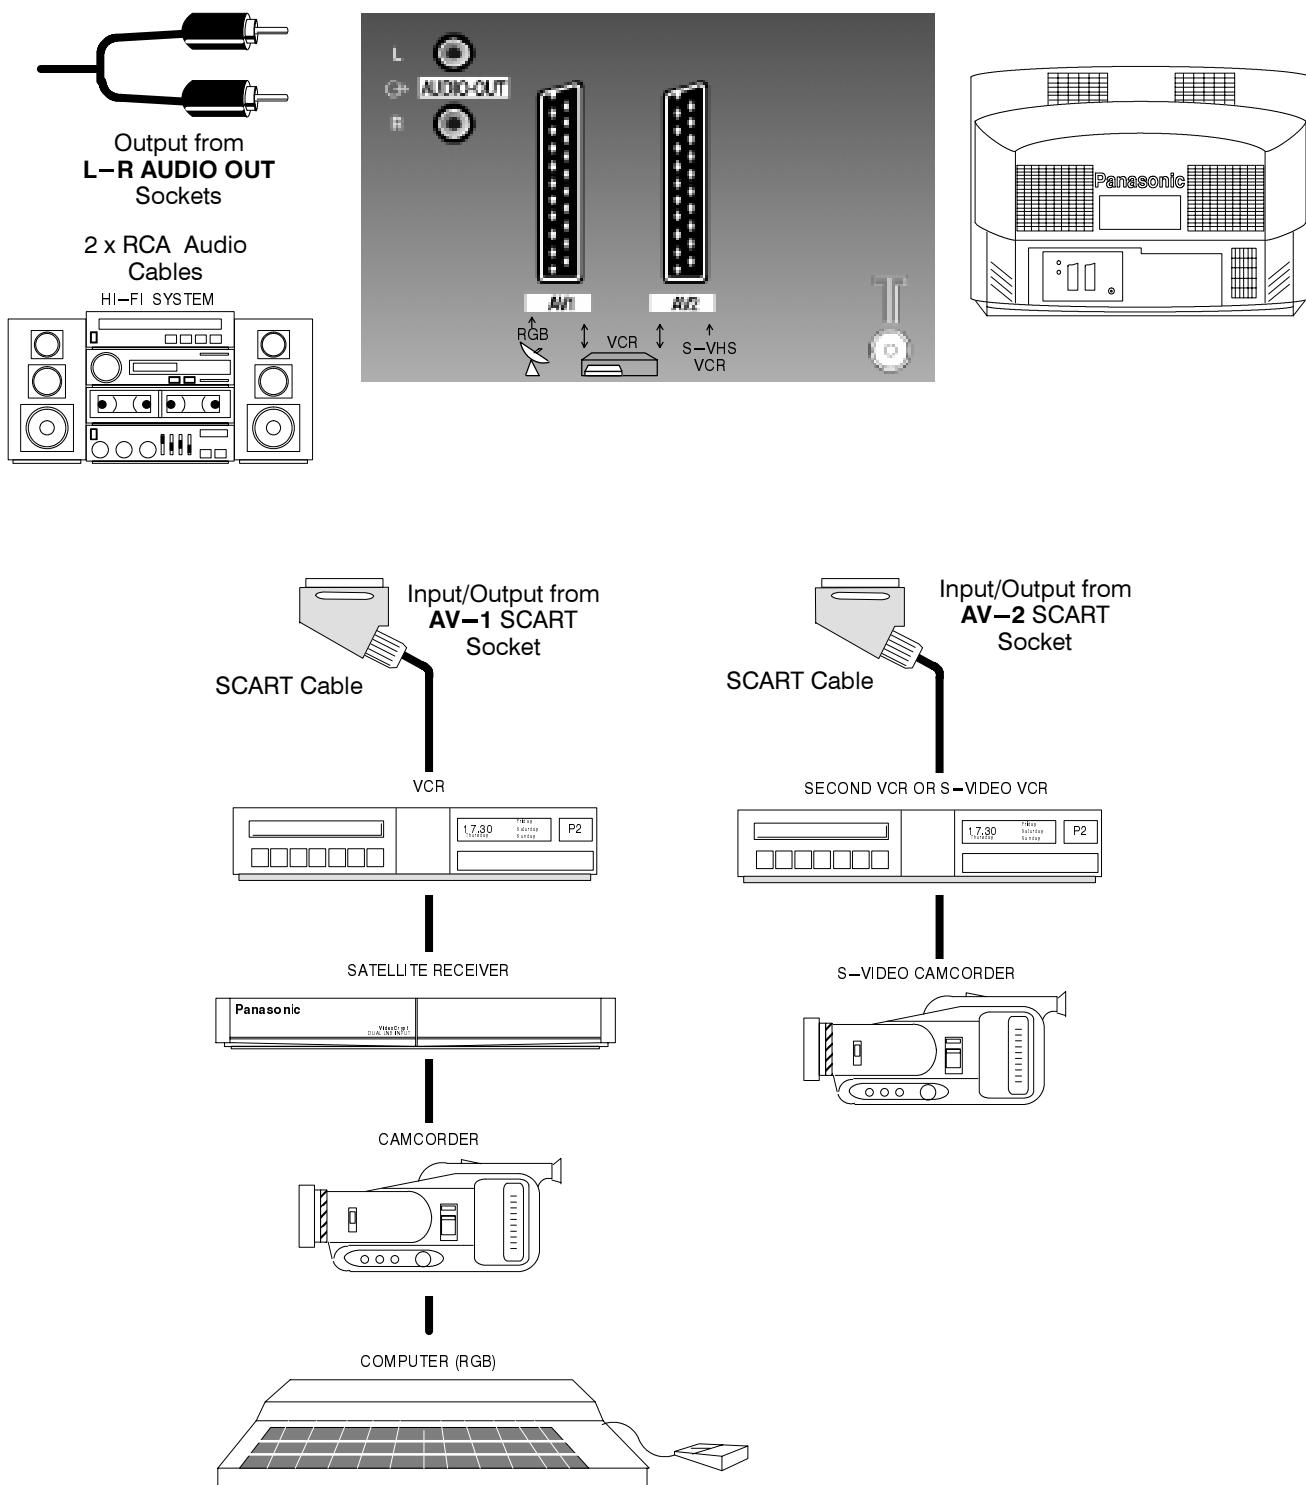














NOTES:

Ancillary equipment and cables shown are not supplied with this TV set.

Do not connect a computer with TTL output (5V) to this set.

The AV2 21 pin terminal can also be used as an Output to Audio / Video Equipment (refer to page 10 for details).

TROUBLESHOOTING

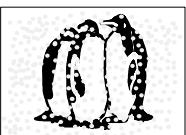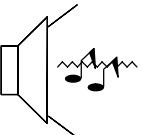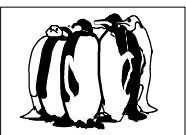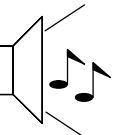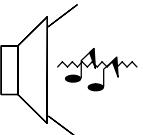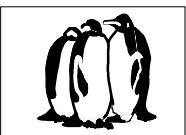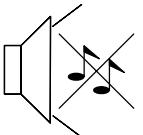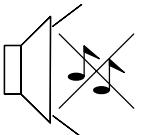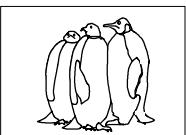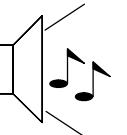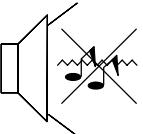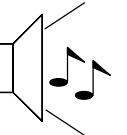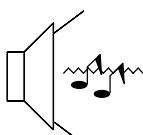Symptoms		Checks
Picture	Sound	
		Aerial location, direction or connection
Snowy Picture	Noisy Sound	
		Aerial location, direction or connection
Multiple Images	Normal Sound	
		Electrical appliances Cars / Motorcycles Fluorescent lights Switch on Noise-R in Setup menu to reduce picture noise
Interference	Noisy Sound	
		Volume level Sound mute switched on
Normal Picture	No Sound	
		TV set to AV mode Not plugged into A.C. outlet Not switched on Picture / Sound controls set at minimum levels Check if in standby mode
No Picture	No Sound	
		Colour controls set at minimum levels
No Colour	Normal Sound	
		Retune Channel(s)
Poor or Distorted Picture	Weak or No Sound	
		Magnetic Interference from unshielded equipment Receiver moved while switched ON, switch TV off for 30 minutes.
Coloured Patches	Normal Sound	
		Sound reception may have deteriorated. Switch MPX setting (Sound menu) to Mono until reception improves.
Normal Picture	Weak or distorted sound	

FOR YOUR GUIDANCE

■ Service

Before requesting service, please refer to the trouble-shooting guide on previous page to determine the symptoms. To obtain service please contact your local Panasonic dealer quoting the model number and serial number (both are located at the rear of the TV).

■ TV Games / Home Computers

Extended use of TV games or home computers with any television set can cause a permanent 'shadow' on the screen. This type of irreversible picture tube damage, can be limited by observing the following points:

- Reduce the brightness and contrast levels to a minimum viewing level.
- Do not operate the television set for a continuous period of time while using TV games or home computers.
- This type of picture tube damage, is not an operating defect, and as such is not covered by the Panasonic warranty.

■ Last Position Memory

Certain functions have a last position memory, i.e. the setting at the time of switch-off will be the setting used when the receiver is switched on again:-

Programme	Tint (M.NTSC / NTSC only)
OSD language	Mode
AV Position	Contrast
Volume	Sharpness
MPX	Aspect
Bass	Standby
Treble	Artificial Intelligence (AI)
Balance	Colour
AV2 OUT selection	Brightness
Status	Headphone volume
Ambience	P-NR
Colour system	

■ Sleep Feature

If the set is not switched off when the TV station stops transmitting, it will automatically go to standby mode after 30 minutes. This function will not operate when the TV is in AV mode.

SPECIFICATIONS

		TX-28XD60P	TX-25XD60P
Power Source		220 – 240V 50Hz A.C.	
Power Consumption		205W	205W
Standby Consumption		1W	
Picture Tube Visible Diagonal		66 cm	59 cm
Audio Output Music Power		2 x 20W, 8Ω impedance	
Dimensions	H W D	596.5 mm 778 mm 481.5 mm	550 mm 730 mm 479 mm
Weight (Kg)		35	30
Receiving Systems/ Band name		PAL B, PAL G, PAL H, PAL I, PAL-60, SECAM B, SECAM G, SECAM L/L' VHF E2 – E12 VHF A – H (ITALY) CATV (S01 – S05) CATV S11 – S20 (U1 – U10) PAL D,K, SECAM D,K VHF R1 – R2 VHF R6 – R12 M.NTSC Playback from NTSC 4.43 MHz Videorecorders (VCR) NTSC (AV input only) Playback from NTSC Videorecorders (VCR)	
Aerial – Rear		UHF / VHF	
Headphones – Front		3,5mm, 8Ω impedance	
AV – Rear		AV1 – 21 pin terminal – Audio / Video in / out, RGB in. AV2 – 21 pin terminal – Audio / Video in / out, S-Video in, Selectable Output. 2 x RCA Audio Monitor Out.	
AV – Front		AV3 – S-Video in, 2 x RCA Audio in, 1 x RCA Video in.	

Specifications are subject to change without notice. Weight and dimensions shown are approximate.

