

TX-W36D3DP/U Operating Instruction



Panasonic



TX-W36D3DP/U

(U.K. Standard)



100Hz
SUPER DIGITAL SCAN


King of Pictures
GAOO

Quintrix
WIDE

**WIDE
DIGITAL
P-L-U-S**



Please read these instructions completely before use and retain them for future reference.

Dolby, Pro Logic and the  are trademarks of Dolby Laboratories.
Manufactured under license from Dolby Laboratories Licensing Corporation

Dear Panasonic Customer,
 Welcome to the Panasonic family of customers. We hope that you have many years of enjoyment from your new colour television. This is a very advanced television, however, the Quick Start Guide will tell you how to have the TV operating quickly; you can then read the following pages to fully utilise the advanced features.



This television has a low power consumption making it very cost effective to run. To this end, the standby power consumption is merely 1 watt.

CONTENTS


 
Warnings and Precautions	3	AV Select and Setup	26
Accessories	4	Dolby Pro Logic Surround Menu	27
Fitting Remote Control Batteries	4	Pro Logic mode	28
Quick Start Guide	6	Simulated mode	29
Basic Controls	8	Speaker level setup	29
Using the On Screen Display Menus	9	Teletext Operation	30
Picture in Picture Controls	10	VCR and Satellite Receiver Installation	32
Still Picture Controls	10	VCR Operation	33
Aspect Control	11	Audio / Video (AV) Connections	34
Main Menu	13	Via the front AV3 4 pin S–Video, Audio / Video (RCA) and Headphone Sockets	34
Picture Menu	14	SCART and S–Video Terminal Information	34
Sound Menu	15	Via the rear AV1 / AV2(S) / AV4 21 Pin (SCART) and RCA Audio Out terminals	35
Setup Menu	16	Using external amplifiers and speakers	36
Tuning Menu	17	Trouble–shooting	37
Tuning Menu – Programme edit	18	For your guidance	38
Tuning Menu – Auto Setup	23	Specifications	38
Tuning Menu – Manual tuning	24		
Tuning Menu – Shipping Condition	25		

WARNINGS and PRECAUTIONS

- This TV set is designed to operate on 220 – 240V, 50Hz A.C.
- To prevent damage which might result in electric shock or fire, do not expose this TV set to rain or excessive moisture.
- **WARNING : HIGH VOLTAGE !!!**
Do not remove the rear cover as live parts are accessible when it is removed. There are no user serviceable parts inside.
- Avoid exposing the TV set to direct sunlight and other sources of heat.
- Remove the mains plug from the wall socket when the TV set is not used for a prolonged period of time.
- **CABINET AND PICTURE TUBE CARE**
Remove the mains plug from the wall socket. The cabinet and picture tube can be cleaned with a soft cloth moistened with mild detergent and water. Do not use solutions containing benzol or petroleum. TV sets can produce static electricity, care must be taken whenever touching the TV screen.
- Adequate ventilation is essential to prevent failure of electrical components, we recommend that a gap of at least 5cm is left all around this television receiver even when it is placed inside a cabinet or between shelves.

FOR YOUR SAFETY PLEASE READ THE FOLLOWING TEXT CAREFULLY

This appliance is supplied with a fitted three pin mains plug for your safety and convenience. A 5 amp fuse is fitted in this plug. If the fuse is replaced then the replacement fuse must be 5 amp rated and should be approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the fitted plug has a removable fuse cover you must ensure that it is refitted when the fuse is replaced. If you lose the fuse cover the plug must not be used until a replacement cover is obtained. Replacement fuse covers can be purchased through your local Panasonic dealer.

The plug fitted to this appliance incorporates a mains filter circuit. If this is removed or replaced with a non-filtered plug this television will no longer meet the European standards for Electromagnetic Compatibility (EMC). If the fitted plug is unsuitable for the socket outlet in your home an appropriate adapter should be used.

Nonetheless, if the fitted plug is replaced, the fuse should be taken out and the cut-off plug disposed of safely. There is danger of severe electrical shock if the cut off plug is inserted into any 13 amp. socket.

If a new plug is to be fitted please observe the wiring code as shown below.
If in any doubt please consult a qualified electrician.


How to replace the fuse (for plug type shown in example 1) :

Lift out the removable fuse compartment with a screwdriver and replace the fuse, then refit securely into the mains plug (See example 1).


How to replace the fuse (for plug type shown in example 2) :

Lift open the fuse compartment, in the mains plug, with a screwdriver, and replace the fuse, then press the fuse cover down securely. (See example 2).

Example 1.

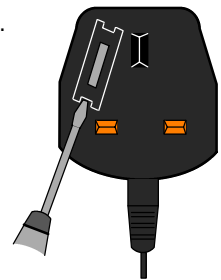

Example 2.

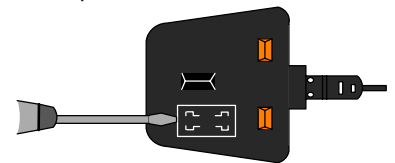


IMPORTANT :- The wires in the mains lead of this appliance are coloured in accordance with the following code :-

BLUE : NEUTRAL

BROWN : LIVE



As the colours of the wires in the mains lead of this appliance may not correspond to the markings identifying the terminals in your plug, proceed as follows :-

 1. The **BLUE** wire must be connected to the terminal marked 'N' or coloured black.
2. The **BROWN** wire must be connected to the terminal marked 'L' or coloured red.


IMPORTANT NOTE : Under no circumstances should either of these wires be connected to the Earth terminal of the three pin plug, marked with the letter 'E' or the earth symbol. 

ACCESSORIES

Check that you have the accessories and items shown

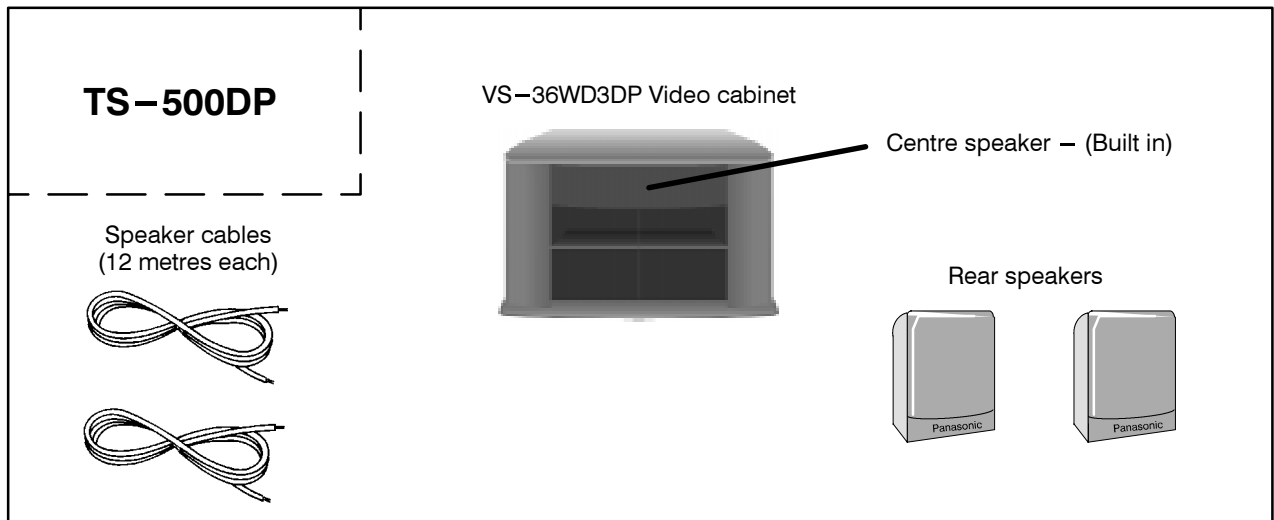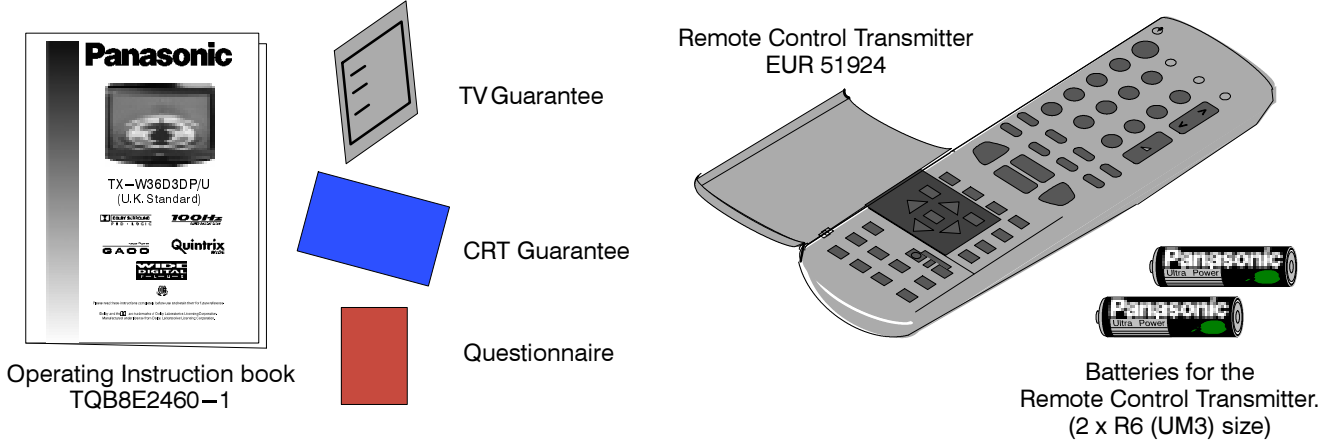


FITTING REMOTE CONTROL BATTERIES

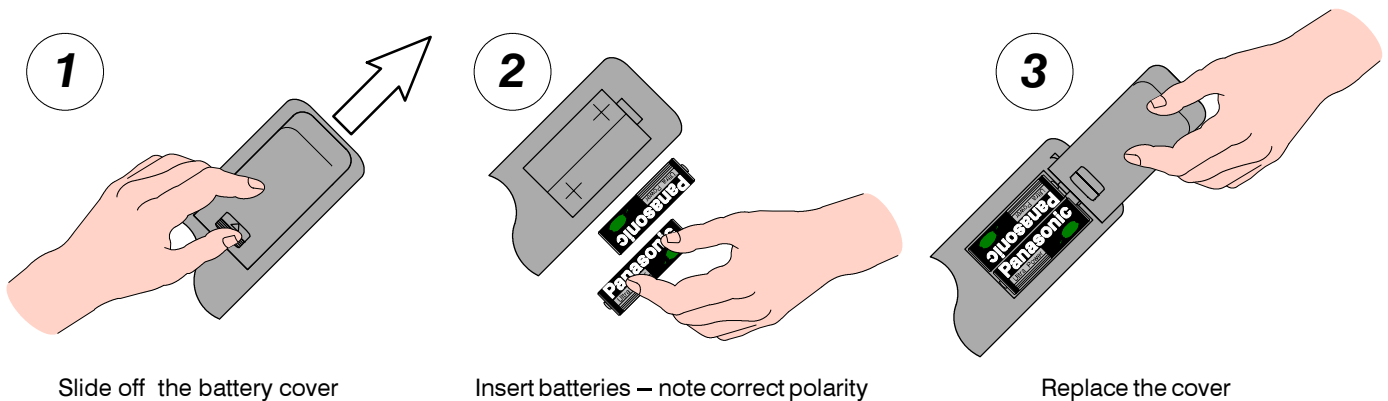

Notes:

- Make sure that the batteries are fitted the correct way round.
- Do not mix old batteries with new batteries. Remove old, exhausted batteries immediately.
- Do not mix different battery types, i.e. Alkaline and Manganese. Do not use rechargeable (Ni-Cad) batteries.

1. 2. 3.

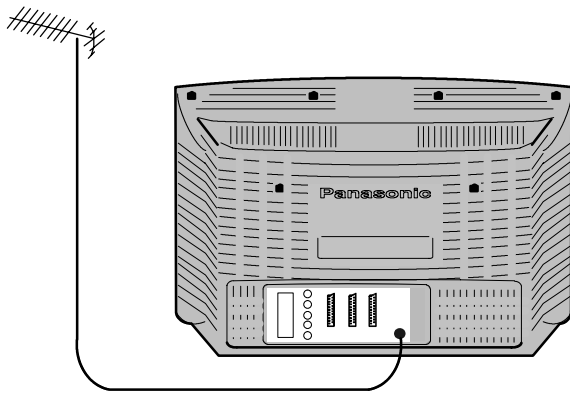

1

TV only


Connect Aerial co-axial cable direct to TV RF IN socket.

OR

USING A VCR

Connect Aerial co-axial cable to RF Input socket of VCR and a RF coaxial cable from VCR RF Out socket to TV RF IN socket.

The VCR can also be connected to the TV using a SCART to SCART lead if you are using a stereo VCR. Use the AV1 21 pin terminal for a VCR. To connect an S-Video VCR use the AV2S 21 pin terminal.

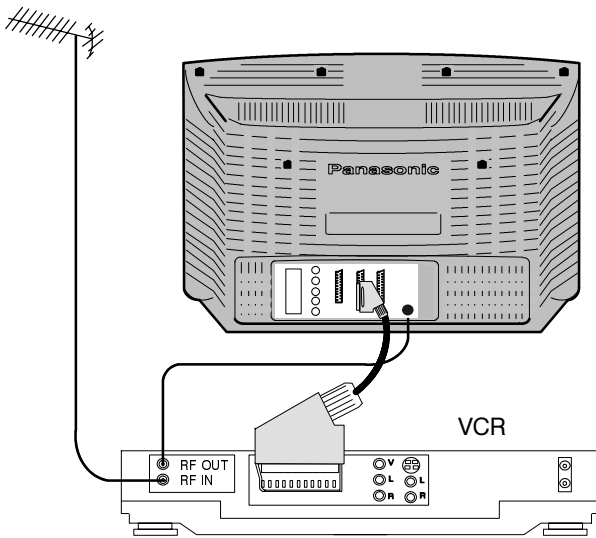

Further details of Audio/ Video connections can be found on pages 34 and 35.

OR

USING A VCR AND SATELLITE RECEIVER


Connect Aerial co-axial cable to RF Input socket of Satellite Receiver. An RF coaxial cable connects from Satellite Receiver RF Out socket to VCR RF IN socket.

A further Coaxial cable connects from the VCR RF OUT socket to the TV RF IN socket.

The Satellite Receiver, VCR and TV may also be linked by SCART to SCART leads, if you are using a Stereo VCR.

Further information for VCR and Satellite Receiver installation with this TV can be found on page 32.

Recommended setup for Stereo VCR and Satellite equipment with SCART sockets

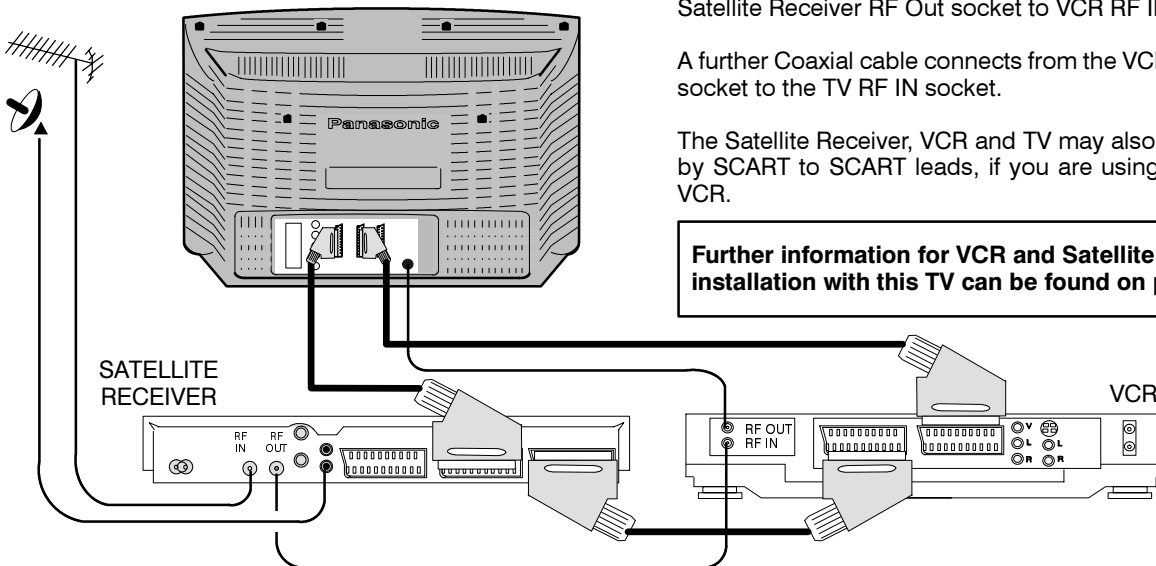


Ancillary equipment and leads are not supplied.





QUICK START GUIDE

2 Connect the speakers The TV must be switched Off.

2.1 Twist the wire ends before inserting.

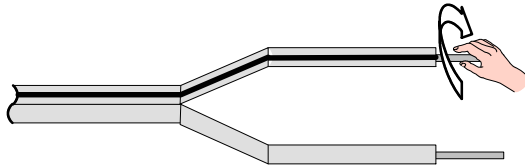


2.2 Insert into terminals.
Ensure that bare speaker wires are not touching.

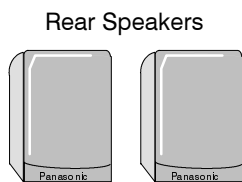
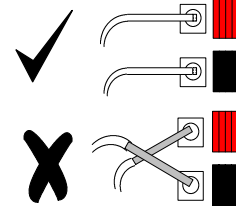
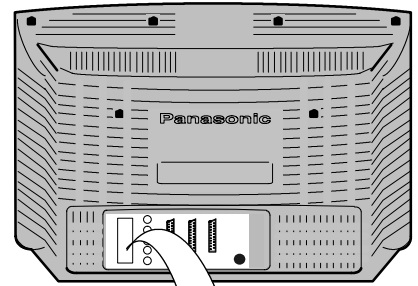
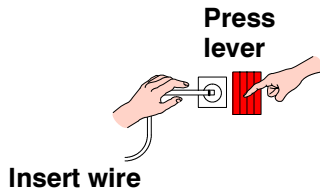


The REAR speakers can be connected in one of two ways A or B :



A With both speakers connected in the same way then the sound will be 'true' to the original sound signal.

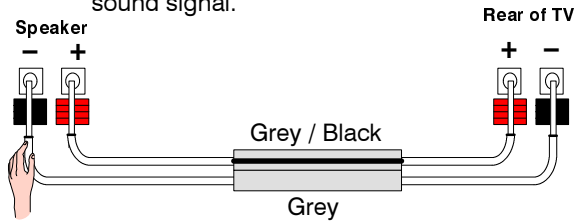

B With the wiring to one speaker 'crossed over' then an additional, artificial ambience effect will be created.

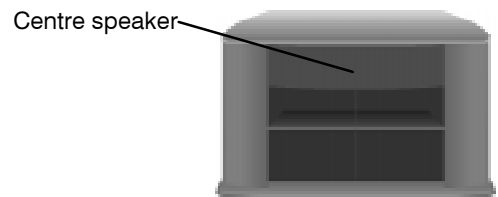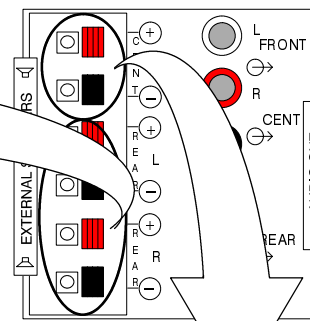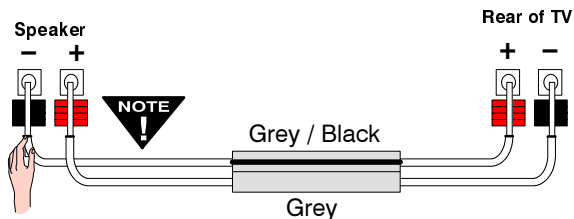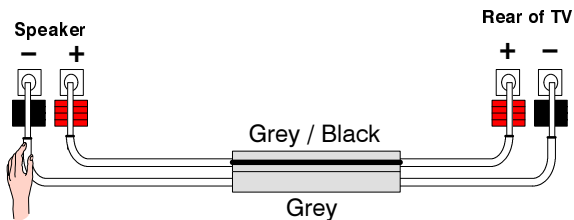


The CENTRE speaker may be supplied with either grey or black cable and should be connected to the TV as shown below :

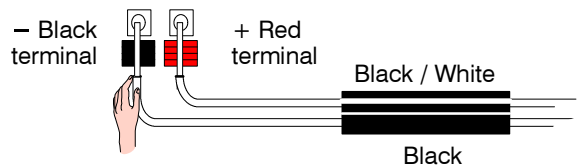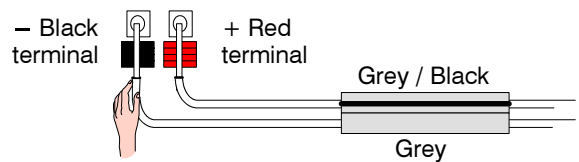


QUICK START GUIDE

3 Position the speakers

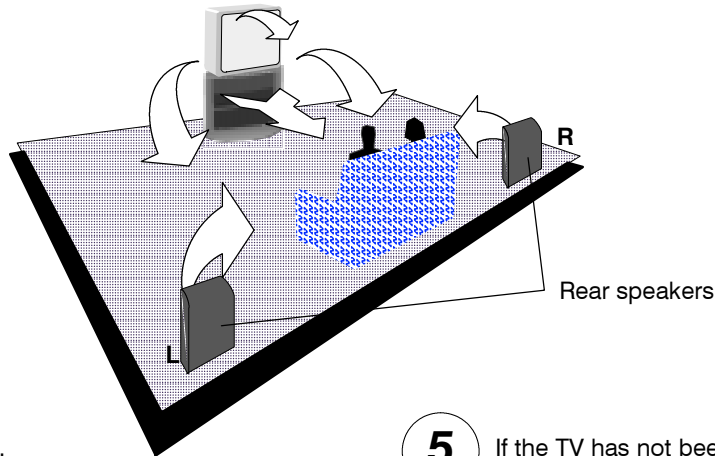


4 Switch ON your VCR *1.
Switch ON your Satellite Receiver*2.
Plug the TV into mains socket and switch on .
Programmes will appear immediately if your dealer has programmed the TV for you.

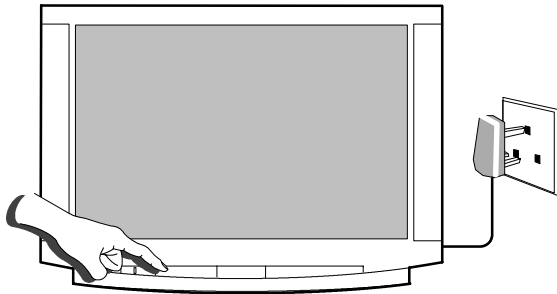


5 If the TV has not been programmed for you then **Auto setup** will begin. TV stations will be located, sorted into order and stored ready for use*3.


Switch the VCR Test Signal 'off'*4 .

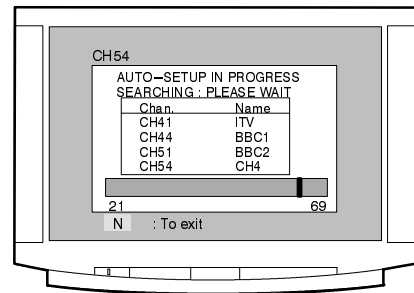

... READY TO GO!

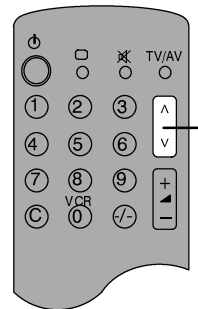

Change Channel

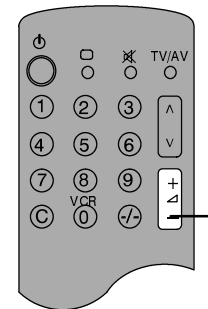

Adjust Volume

Notes :

- *1. If your VCR Test Signal appears as a programme position it can be deleted using the Programme Edit menu. We recommend that you have the VCR's test signal 'on' – refer to your VCR instruction book to locate the VCR Test Signal switch (usually on the rear of the VCR).
- *2. The Satellite Receiver must be tuned to either SKY ONE or SKY NEWS before starting Auto Setup. When Auto Setup has finished, the satellite position that has been stored will be listed as 'SAT'.
- *3. The sorting order depends upon the TV signal, the broadcasting system, and reception conditions. If the order is not to your preference it can be rearranged. Refer to the Programme Edit menu – see page 18 for details.

Prog. Position	All channels	No CH5	No CH5 / S4C	No CH4 / CH5	No S4C	No CH4 / S4C	No CH4 / S4C / CH5
1	BBC1	BBC1	BBC1	BBC1	BBC1	BBC1	BBC1
2	BBC2	BBC2	BBC2	BBC2	BBC2	BBC2	BBC2
3	ITV	ITV	ITV	ITV	ITV	ITV	ITV
4	CH4	CH4	CH4	S4C	CH4	CH5	SAT
5	S4C	S4C	SAT	SAT	CH5	SAT	●
6	CH5	SAT	●	●	SAT	●	●
7	SAT	●	●	●	●	●	●


Note :
● The next available channel will appear, if no other stations are available then the Programme position will remain unused.

*4. **IT IS IMPORTANT THAT** you use only programme position '0' for your VCR. If your VCR does not appear to operate on programme position '0' (the VCR position), refer to page 32 for guidance.


BASIC CONTROLS – FRONT PANEL AND REMOTE CONTROL

Press here and open flap to expose TV controls

Press here and open flap to expose front AV3 and headphone terminals

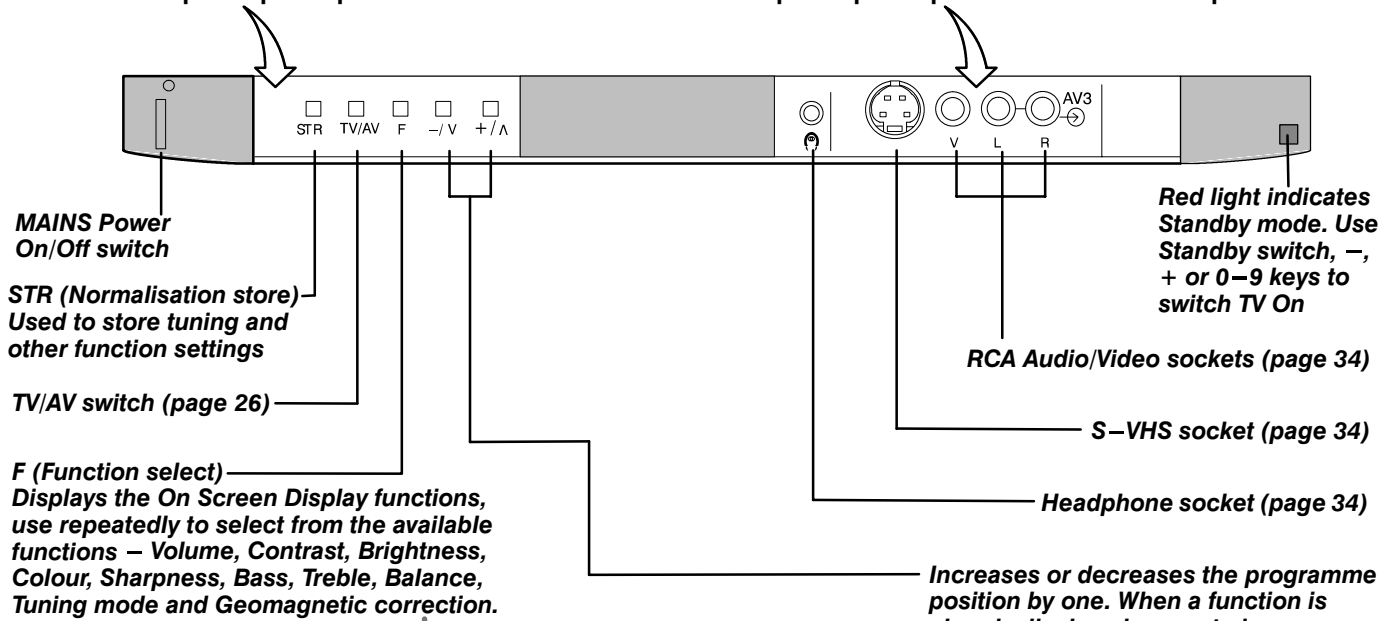


Your geographical location may cause the picture to be slightly slanted. Accessing the Geomagnetic Correction menu will allow you to correct the picture.

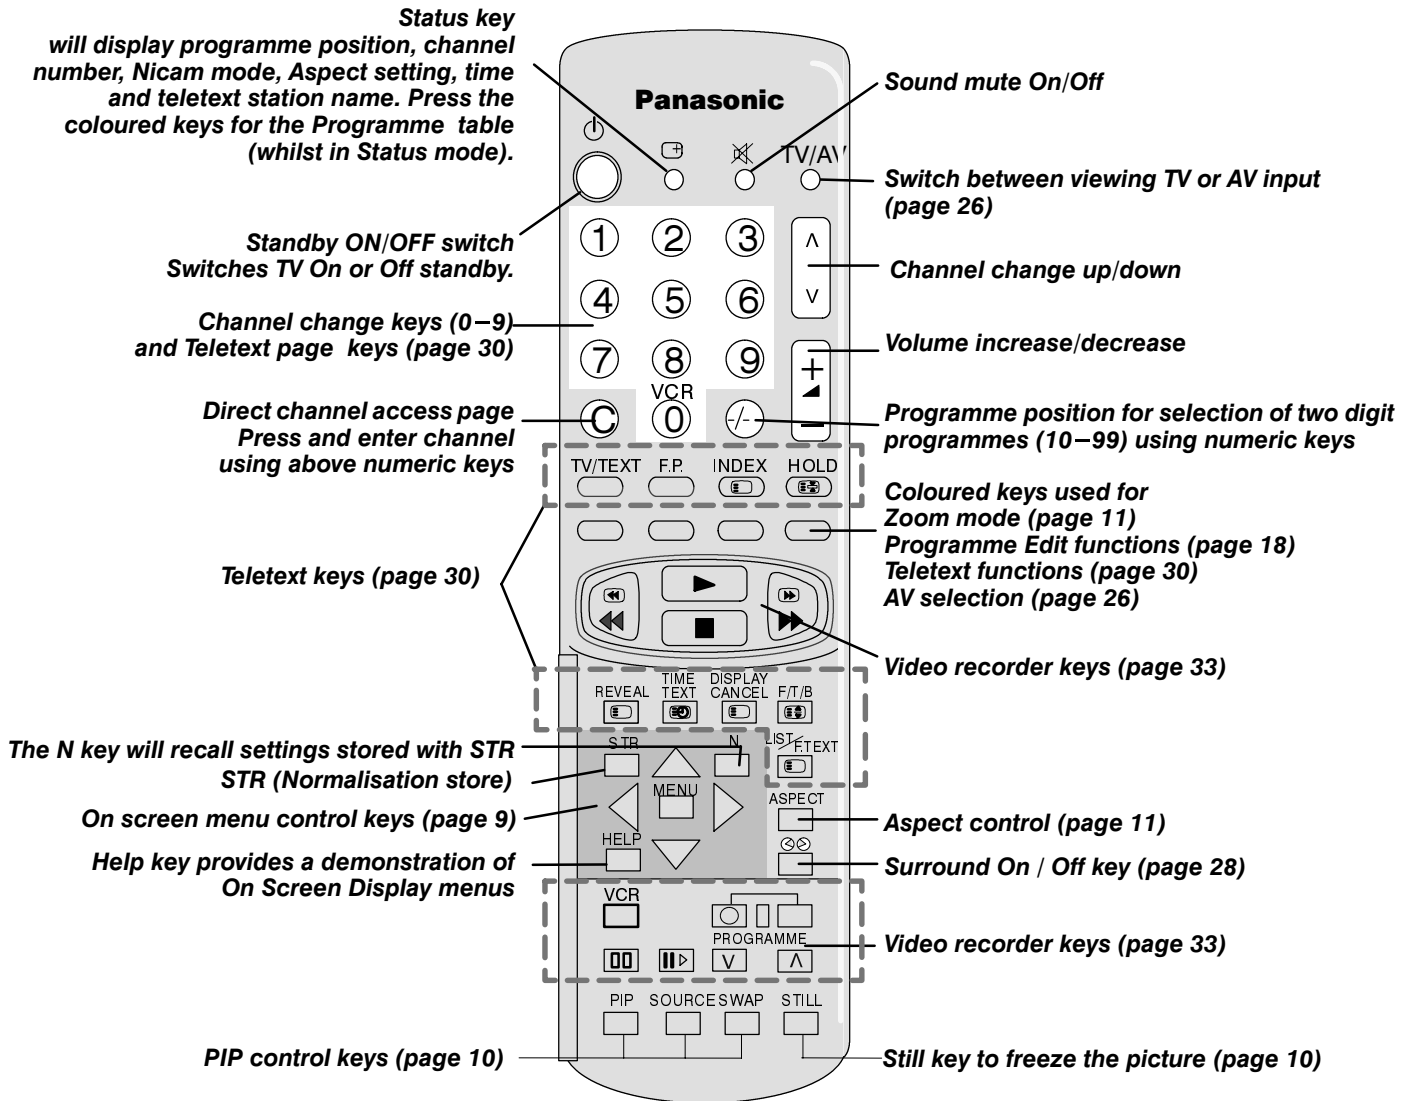

USING THE ON SCREEN MENUS

This TV has a comprehensive system of On Screen Display menus to access adjustments and options.

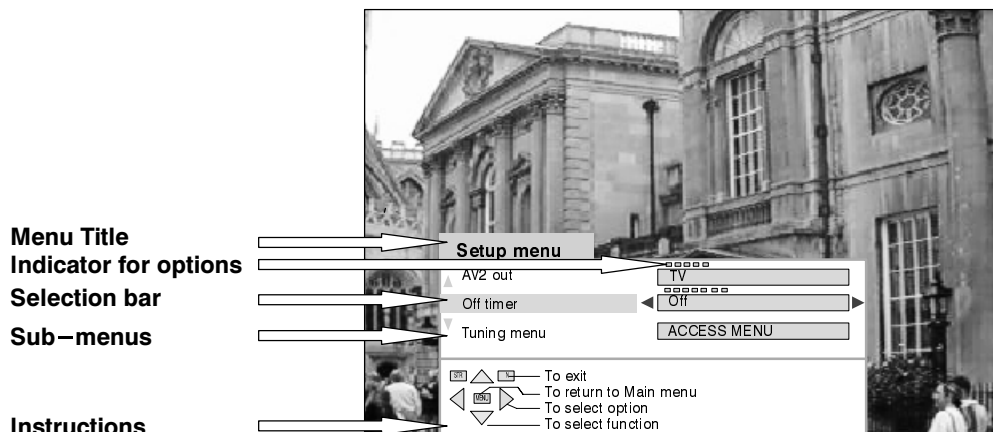


The following remote control keys are used to access and adjust settings for the On Screen Display menus.

Some selections, for example, **Contrast, Brightness, Colour** and **Sharpness** will allow you to increase or decrease their level.


Some selections, for example, **Off timer**, allow a choice to be made.

Some selections, for example **Tuning menu**, will lead to a further menu.


The **'MENU'** key is used to open the Main menu and also to return to either the Main menu or a previous menu.

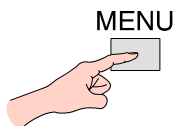


The **▲▼** keys are used to move the selector up or down the menus.

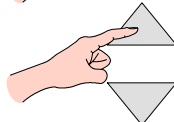

 
The **◀▶** keys are used to access menus, adjust levels or to select from a range of options.




 
The **'STR'** key is used to store settings after your adjustment or choice has been made.



 The **'N'** key is used to leave the menu system and return to the normal viewing screen.




 The **'HELP'** key will run a demonstration of the menus available.

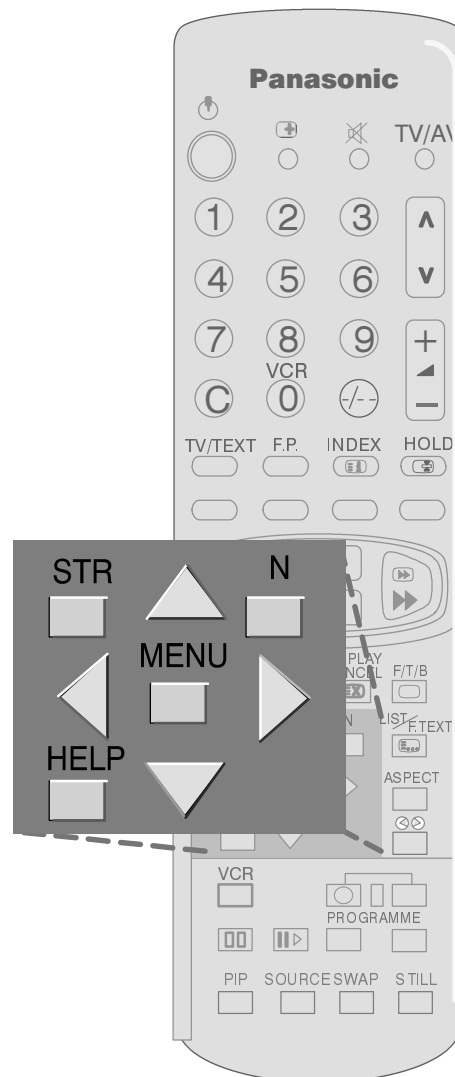


PIP CONTROLS


The remote control has keys to control the PIP (picture-in-picture) feature.

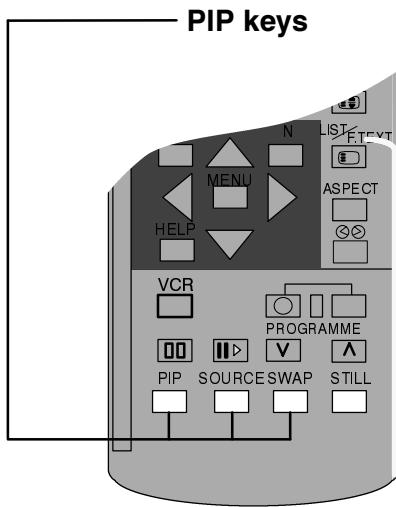


Pressing the PIP key will display the PIP picture (shown in 4:3 Normal mode)

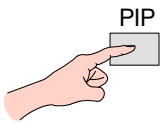

The PIP key will switch the PIP function On and Off, PIP offers two picture viewing.

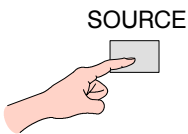


The SOURCE key will allow you to choose whether you use the current TV screen or the input to AV1, AV2, AV3 or AV4 as the PIP picture.

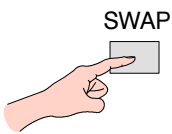

The SWAP key will allow you to swap the PIP picture with the Main picture and vice-versa.



Pressing the PIP button a second time when viewing a widescreen picture will cause the Locate and Size reminder to be displayed. Simply choose the coloured button of the remote control if you wish to move or size the picture.

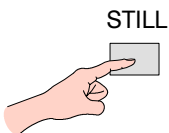

STILL Control

The STILL key allows you to freeze the picture at any time.

When using the STILL key with the PIP function press to freeze the Main picture, press again to release the Main picture and freeze the PIP picture, press again to release the PIP picture.

 


The PIP picture has been moved to an alternative position and made smaller by pressing the red key followed by the green key.

ASPECT CONTROLS

The widescreen TV will allow you to enjoy viewing the picture at its maximum size, including widescreen 'cinema format' pictures.


ASPECT




WIDE / PANASONIC AUTO

4:3



Zoom

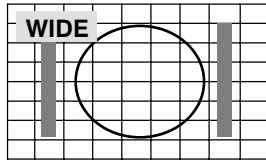

Some broadcasts are transmitted together with a wide screen identification signal (WSS). If the TV receives this signal then it will automatically switch to wide screen 16:9 mode, maximum display. The automatic widescreen switching depends upon reception conditions and the strength of the signal. If the signal is poor and therefore the WSS is weak then it is possible that the picture may not expand to full size and that the TV will display black areas around the edges.

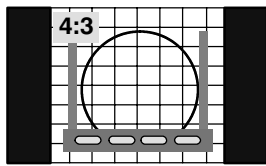


A 4:3 picture set to 4:3

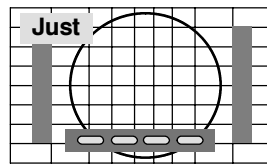 

A 4:3 picture switched to Just mode





If the original source signal was a standard 4:3 aspect ratio then you might prefer to view in its original size; the red and green keys, that appear, will allow you to choose between viewing at standard 4:3 size or expanded in **Just** mode.


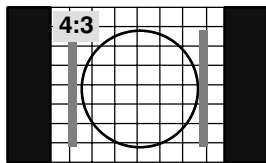


A 4:3 picture switched to its normal 4:3 viewing mode


4:3 will display a 4:3 picture at its standard 4:3 size and can be selected if you wish to view in this format.

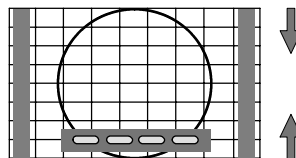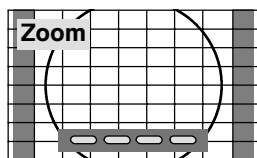

 The red key will reduce the picture size vertically

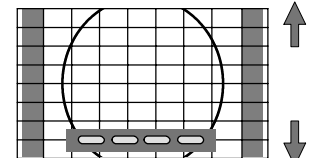


 
The green key will enlarge the picture vertically





In **Zoom** mode the size of the visible picture may vary according to the aspect ratio of the original picture. The red and green keys allow you to adjust the size.

ASPECT CONTROLS


Zoom

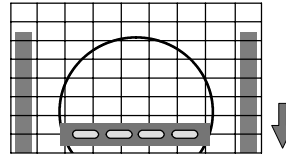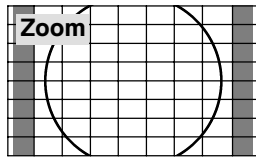

 The yellow key will move the picture vertically downwards







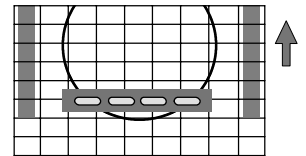



 The blue key will move the picture vertically upwards




The picture can be moved vertically using the blue and yellow keys. The former adjustment is useful for viewing any sub-titles which may appear outside the picture.

   S-Zoom

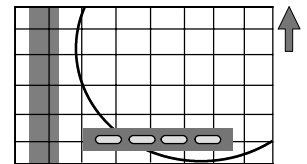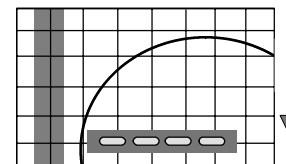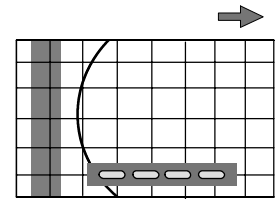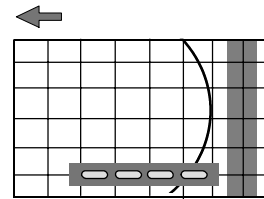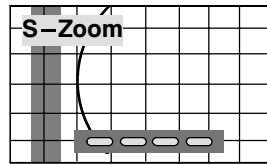


In **S-Zoom** mode the red and green keys will allow you to move the picture horizontally. The yellow and blue keys will allow you to move the picture vertically.

Full

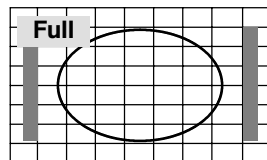

If a 4:3 broadcast is displayed In **FULL** mode, the image is stretched horizontally to fill the width of the screen.

Just

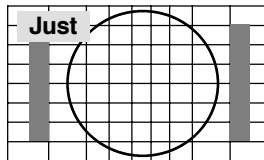

If a 4:3 broadcast is displayed in **Just** mode, the image is enlarged to completely fill the screen.


NOTES:

- The on screen selector keys that appear for some aspect functions will clear after a few seconds. If you subsequently wish to select an operation then press the Aspect key once more for the keys to reappear.
- The widescreen aspect ratios of different films and programmes can vary. If these are wider than a standard 16:9 aspect picture then a black band may be visible at the top and bottom of the screen.
- If, in WIDE mode, you experience problems with the screen display size when playing back widescreen format recordings (with WSS) from your VCR then it is possible that the tracking control of your VCR requires adjustment (your VCR instruction book will contain adjustment details).


MAIN MENU

All menus start from the Main menu (except AV select and Tuning procedure (Front panel)).
You will also find the basic picture adjustments within this menu.


Open the Main menu

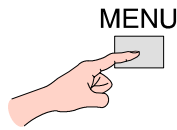





Move to your choice

 


Access your choice

 

Increase or decrease levels or move to the Picture, Sound or Setup menus.

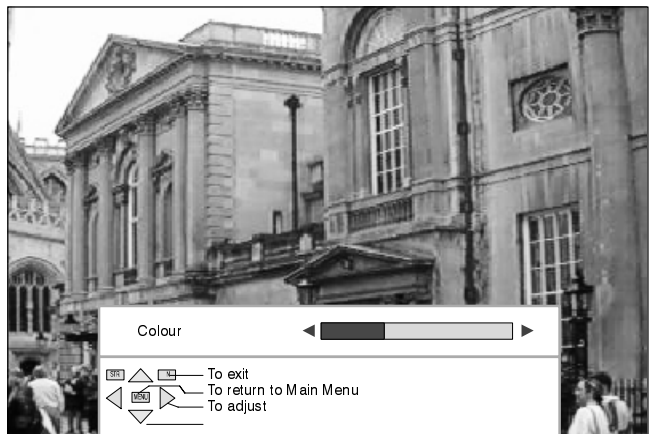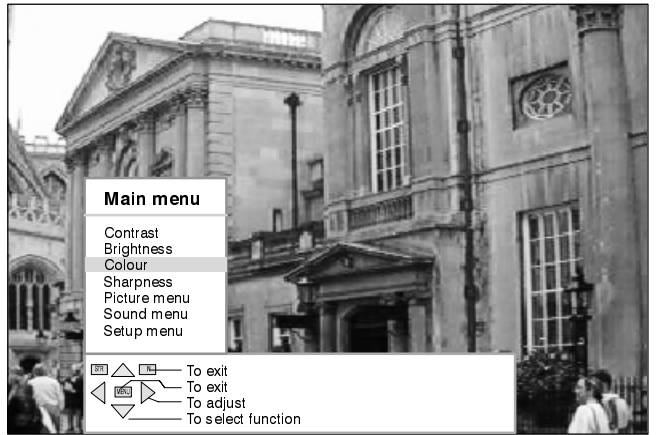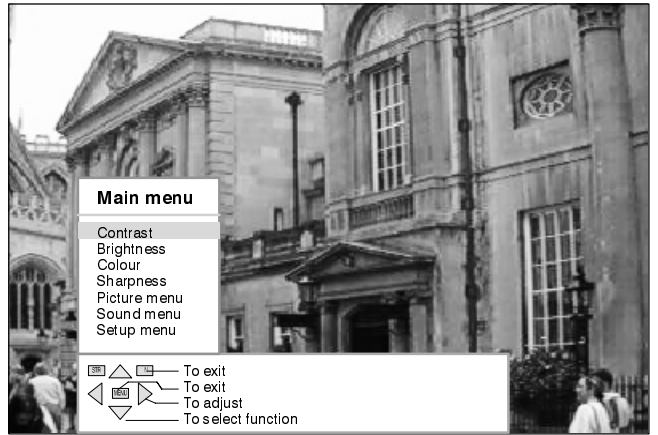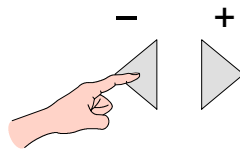

The Contrast, Brightness, Colour and Sharpness levels of the TV can be adjusted to suit your own preference.

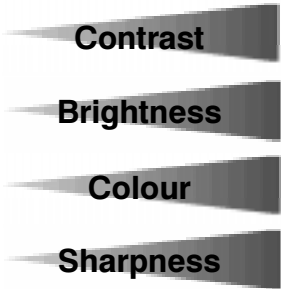

The Tint adjustment will only appear as a menu item if you have an NTSC signal source connected to the TV and will allow adjustment of the hue.




Accesses the Picture Menu.



Accesses the Sound Menu.



Accesses the Setup Menu.

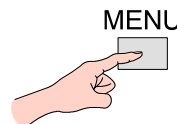


To close Main menu

OR


Return to main menu when in sub menu.

PICTURE MENU


Open the Main menu

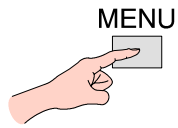


Move to Picture menu

 



Access Picture menu

 

Move to your choice

 

Choose from options

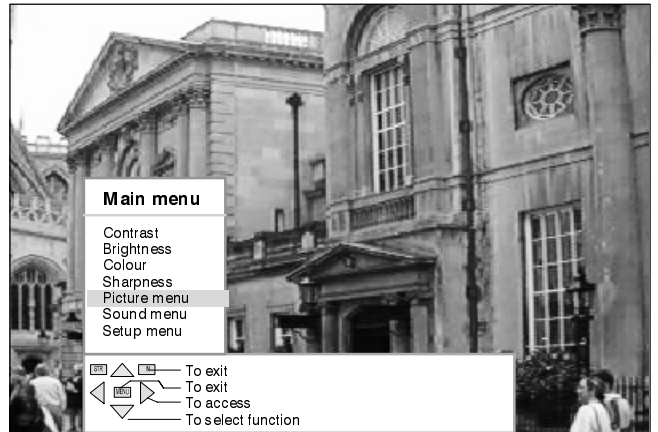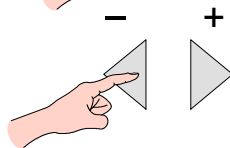

AI



AI automatically analyses the incoming picture and processes it to give improved contrast and optimum depth of field.

P-NR

P-NR will automatically reduce unwanted picture noise.


Flicker

Reduces picture flicker in the ON position. (Normally set to ON).

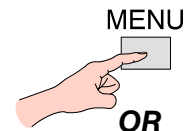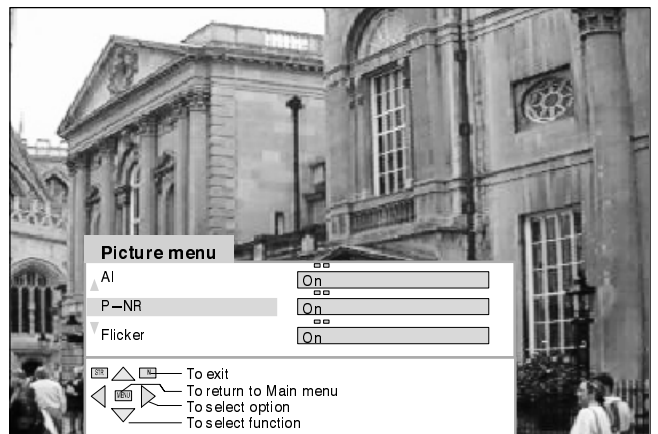

Return to Main menu

 
OR




To exit menu system

SOUND MENU


Open the Main menu

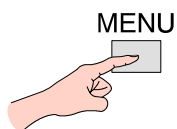

Move to Sound menu

 


Access Sound menu

 

Move to your choice



Increase or decrease levels, choose from options or access the menus

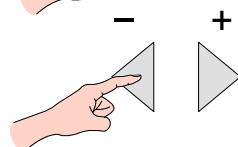

Bass

Bass adjustment will emphasise the lower, deeper frequencies and can be increased or decreased.




Treble

Treble adjustment will emphasise the sharper, higher frequencies and can be increased or decreased.




Balance

(This function will only operate with the Surround feature switched Off – See page 28). Balance affects the levels of sound between the left and right speakers. Adjustment can be made so that the level from between speakers will suit your listening position.

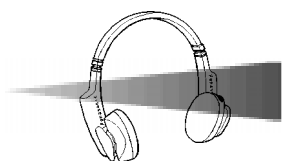

The headphone volume can be adjusted independently of the TV speakers so that everyone can enjoy listening at their own comfort level.

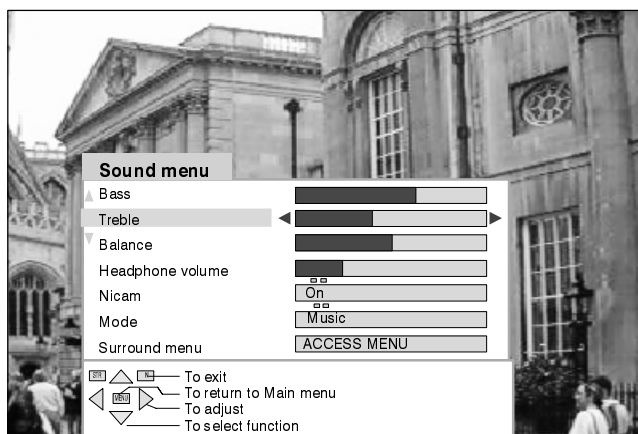

Nicam

Select On to provide stereo sound reproduction. Select Off for FM Mono sound output. If Nicam Mono is being transmitted select either FM Mono (Off), Nicam Mono I (M1) or Nicam Mono II (M2). The options depend upon the signal being transmitted. If reception deteriorates it is advisable to switch to FM Mono (Off). When Nicam transmissions are not being received the sound will be FM Mono (Off) only.



Mode

The sound can be improved during Music or Speech mode by selecting the appropriate function. When in Speech mode an additional internal centre speaker is automatically activated to enhance the sound quality.

 


Leads to the Surround menu for Dolby Pro Logic and simulated modes of operation, as described on pages 27 to 29.

Volume correction


Volume Correction (in AV mode only) allows different volume levels to be set for TV and AV signals. See page 26.

MENU



Return to Main menu

 OR




To exit menu system


SETUP MENU

The Setup menu provides access to various advanced features and also to the Tuning menu


Open the Main menu

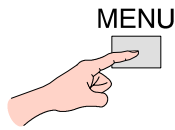

Move to Setup menu

 


Access Setup menu

 

Move to your choice



Choose from options or access the Tuning menu.

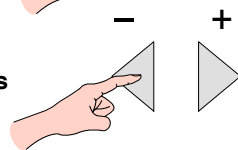


□□□□□
AV2 out

AV2 Out offers you a choice of output signals available on the AV2 SCART socket.

Choose from the current **TV** programme position, the signal entering **AV1/AV3/AV4** or **Monitor** – the picture displayed on screen.


□□□□□□□□
Off timer

Off timer will switch the TV off within a preset time which you can choose from between 0 to 90 minutes in 15 minute intervals.

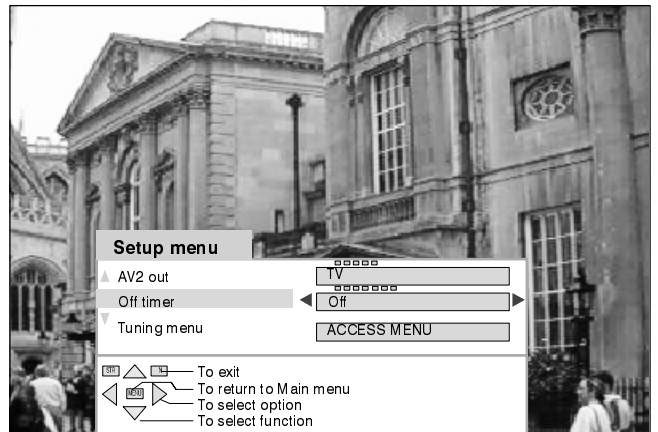



Tuning menu

The Tuning menu provides an entry to many other features including Programme edit and Auto setup.

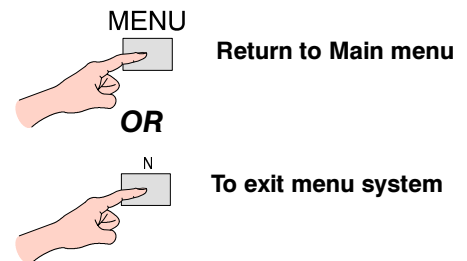

TUNING MENU – overview

The Tuning menu provides access to both manual and automatic tuning menus

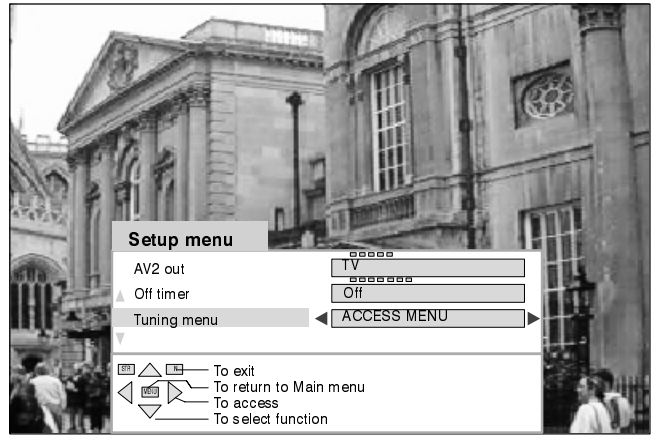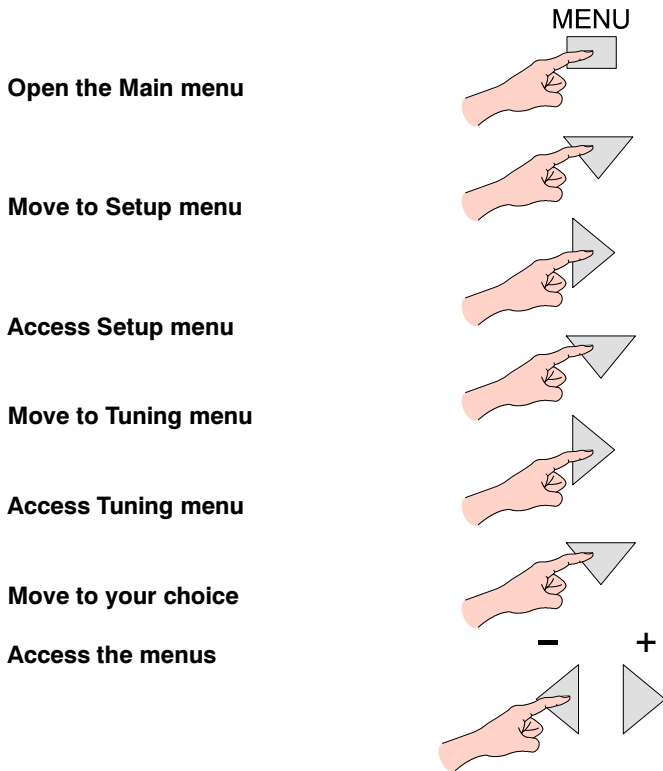

Programme edit

Accessing Programme edit menu will allow stations to be moved, added, deleted, named or locked. Further details on page 18.

Auto setup



The Auto setup menu allows you to automatically retune the TV. Further details on page 23.

Manual Tuning

The Manual tuning menu allows individual programme positions to be tuned manually. Further details on page 24.

Shipping condition


Allows you to clear all tuning information and reset all control levels back to factory settings. Further details on page 25.

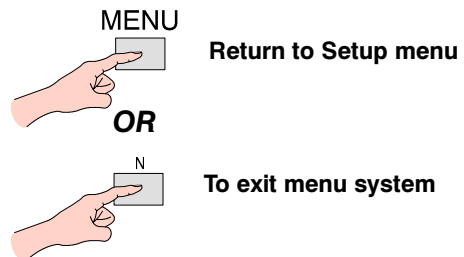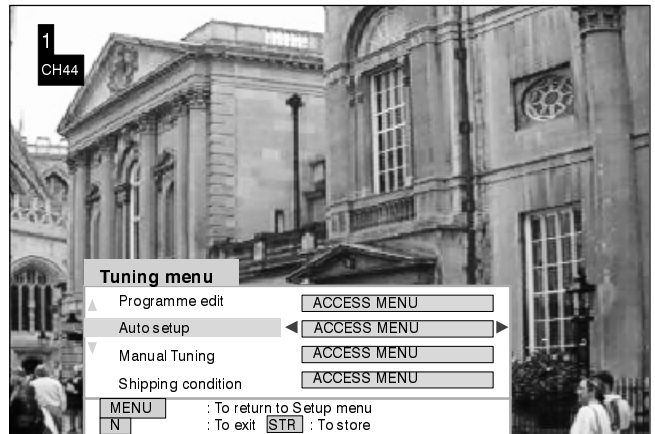


TUNING MENU – Programme edit

The Programme edit menu allows you to delete, add, move, retune, name and lock channels


Open the Main menu

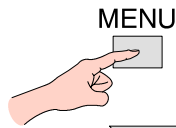


Move to Setup menu

 



Access Setup menu

 


Move to Tuning menu

 



Access Tuning menu

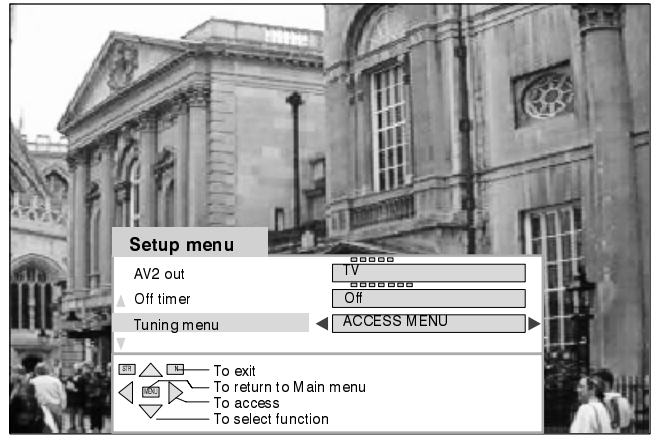 

Move to Programme edit

 


Access Programme edit

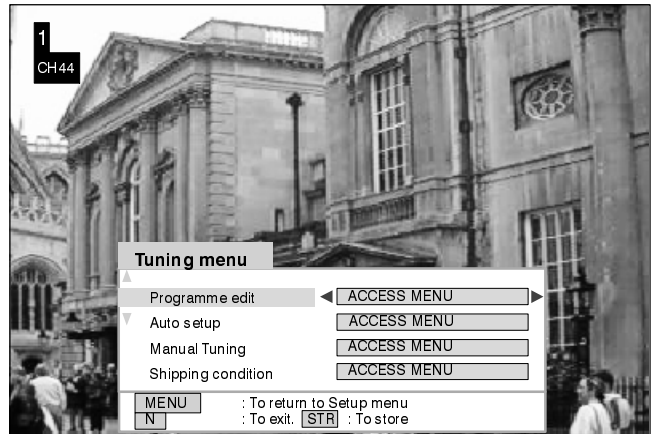 


To delete an unwanted programme position

Ensure that the cursor is in the Prog. column.


 
Choose the programme position




Press the red key on remote control

 

Press STR to delete

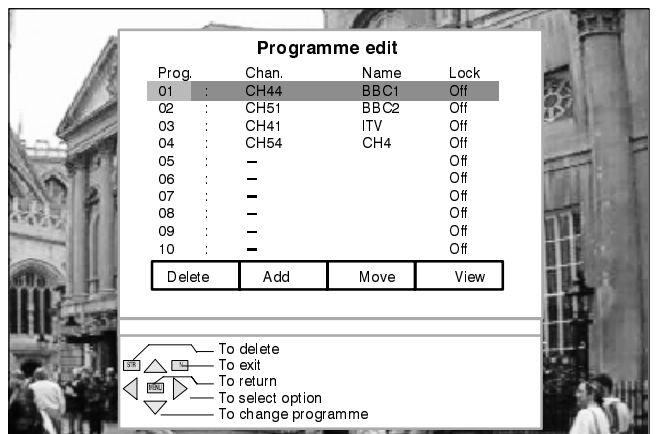 


If you have completed changes to the Programme edit menu then

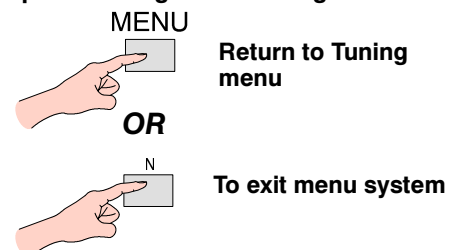


TUNING MENU – Programme edit

To add a programme position

 
Choose the programme position




Press the green key

 


Press STR to add

 

This blank programme can then be tuned, named and locked.

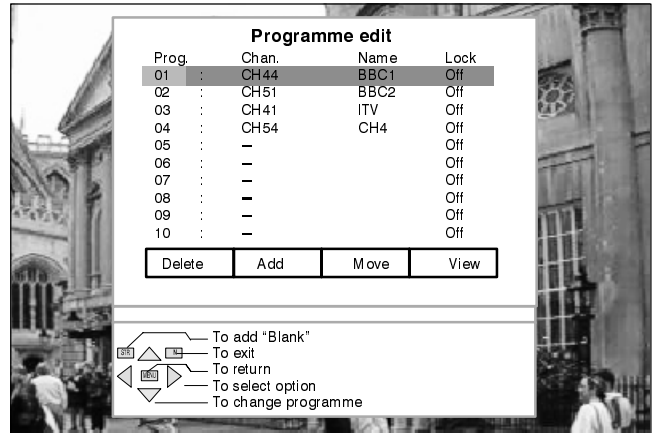


If you have completed changes to the Programme edit menu then

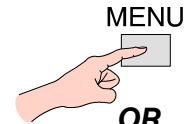

Return to Tuning menu

 
OR




To exit menu system

To move a programme to another position

 
Choose the programme position




Press the yellow key on remote control

 


Choose new position

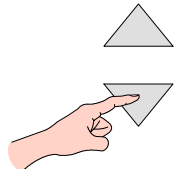


To action new position

 

Press STR to store

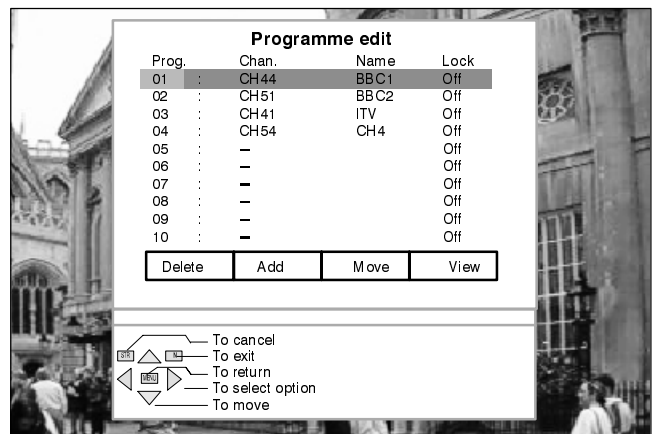


If you have completed changes to the Programme edit menu then

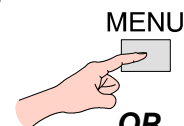

Return to Tuning menu

 OR





To exit menu system



TUNING MENU – Programme edit

To view a programme position


 
Choose the programme position

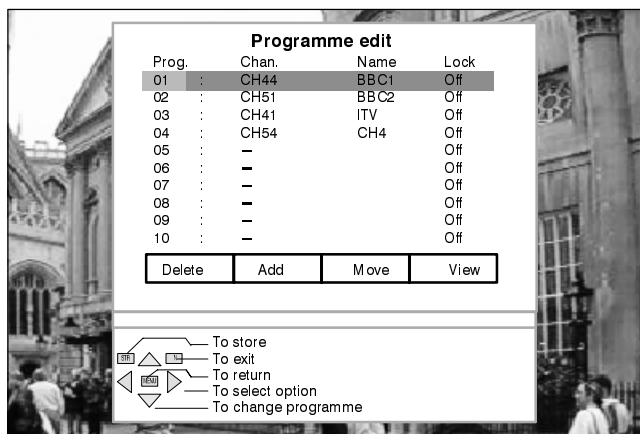

Press the blue key on remote control

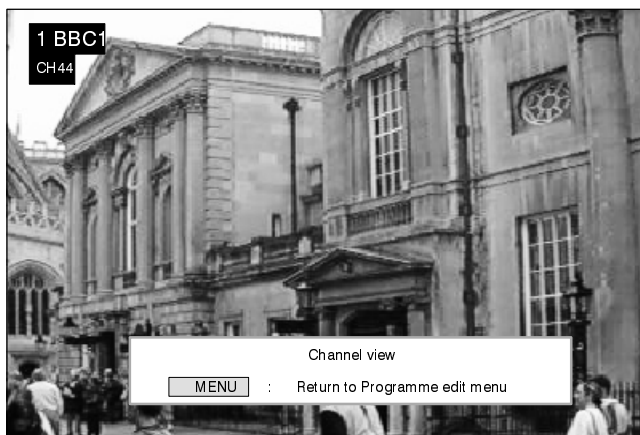 


The screen will return to Programme edit after a few seconds

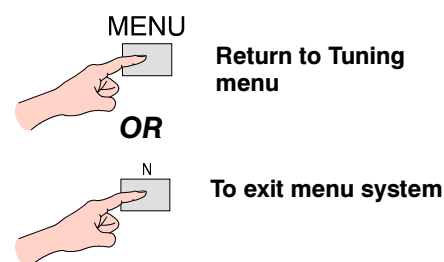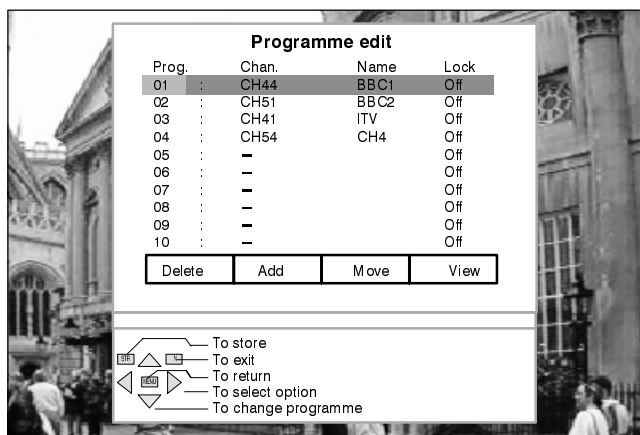


TUNING MENU – Programme edit

To tune a programme position

 
Choose the programme position





Move to the channel setting

 


Increase or decrease channel number

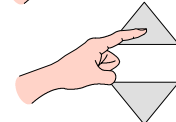

Press STR to store

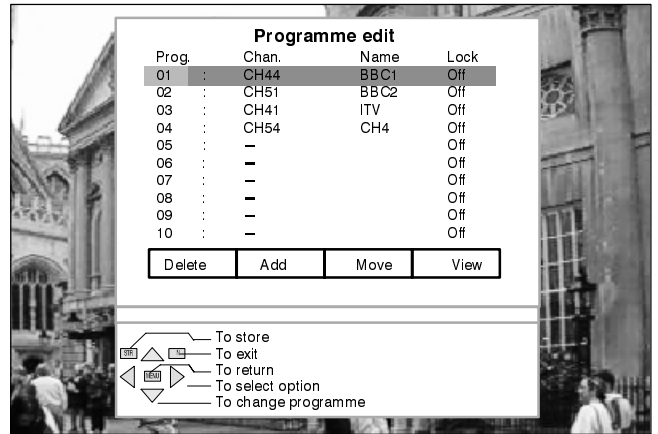 


If you have completed changes to the Programme edit menu then

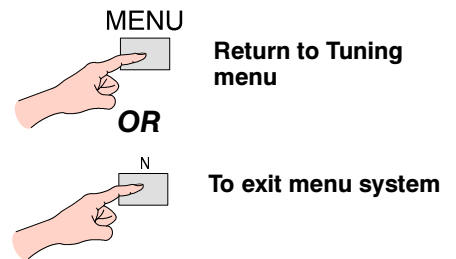


To rename a programme position

 
Choose the programme position




Move to the Name position

 


Choose the new character

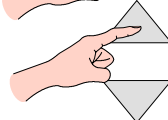



Move to the next character position

 


Continue until renaming is completed

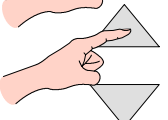

Press STR to store

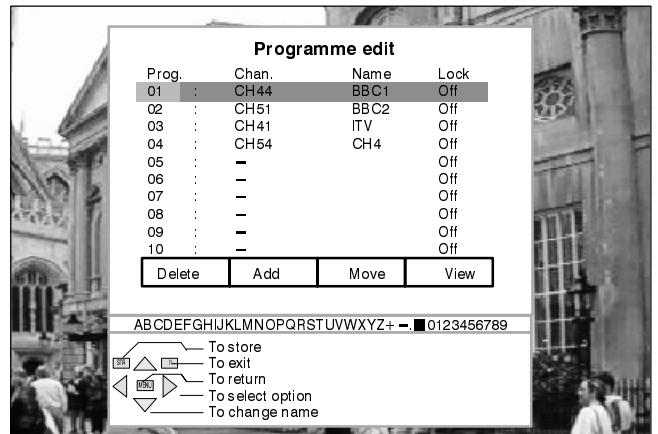 

If you have completed changes to the Programme edit menu then

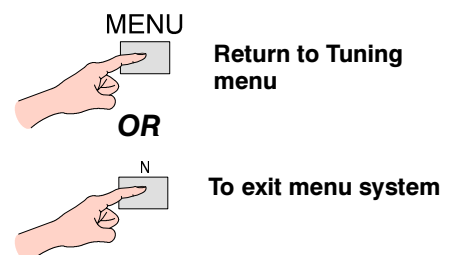


“Programme edit” will flash to confirm that the new name has been stored.


TUNING MENU – Programme edit

To lock a programme position to prevent access

 
Choose the programme position





Move to the lock position

 


Choose between lock on or lock off

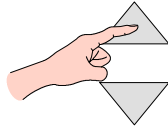

Press STR to store

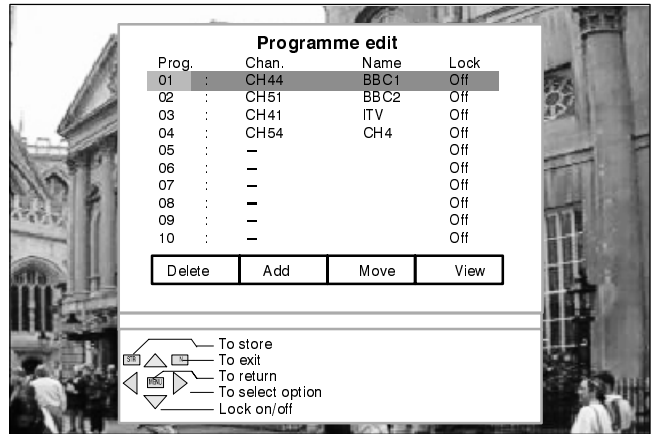 

If you have completed changes to the Programme edit menu then

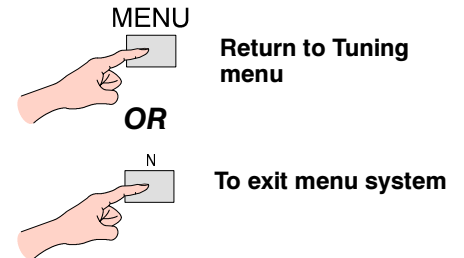

Access to the locked programme position is prevented.





When a programme position is locked, Direct Channel Access using the 'C' and numeric keys on the remote control is not available.




TUNING MENU – Auto setup (ATP)

The Auto setup menu will allow you to automatically retune the TV to your local stations. It is useful if you move to a different region.


Open the Main menu

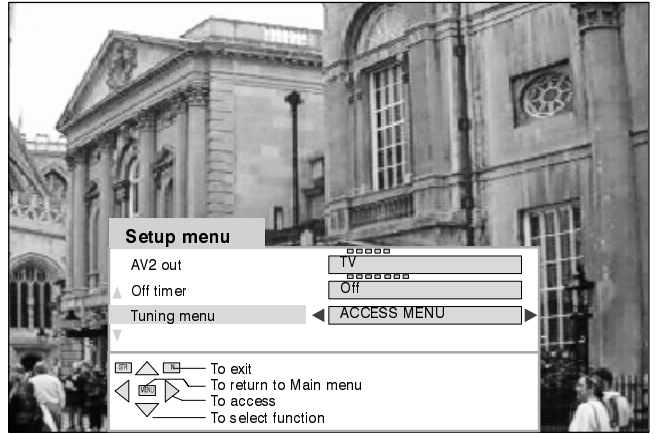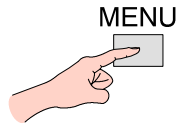



Move to Setup menu

 


Access Setup menu

 


Move to the Tuning menu

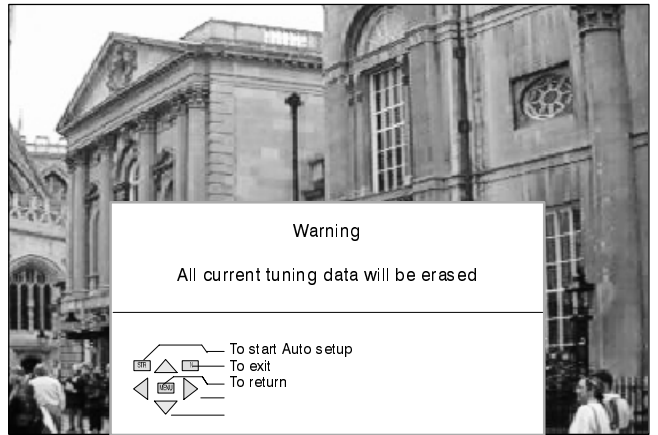 



Access Tuning menu

 


Move to Auto setup menu

 

Access Auto setup menu

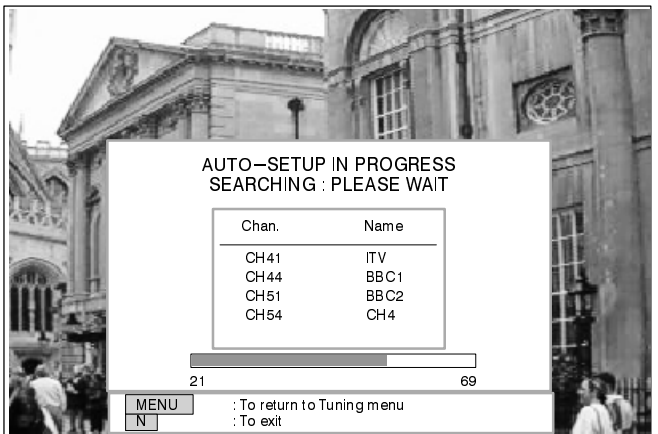 

Press STR to start Auto setup

 


The TV will search for, locate and order your local stations.


Once this operation is completed the TV will display programme position 1.

Note :

The sorting order depends upon the TV signal, the broadcasting system, and reception conditions. If the order is not to your preference it can be rearranged. Refer to the Programme Edit menu – see page 18 for details.

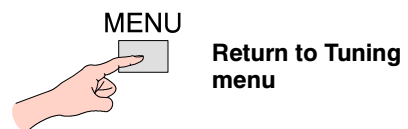

OR

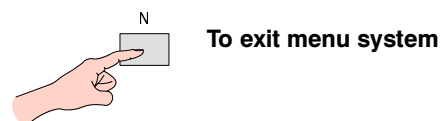


TUNING MENU – Manual tuning

Manual tuning of the Programme positions is available either from the on screen display menu or from the front panel controls


Manual tuning menu

Open the Main menu

 
MENU




Move to Setup menu

 


Access Setup menu

 


Move to Tuning menu

 


Access Tuning menu

 


Move to Manual tuning

 


Access Manual tuning

 

Select the programme position



 


Start tuning

 

Press STR to store

 
STR

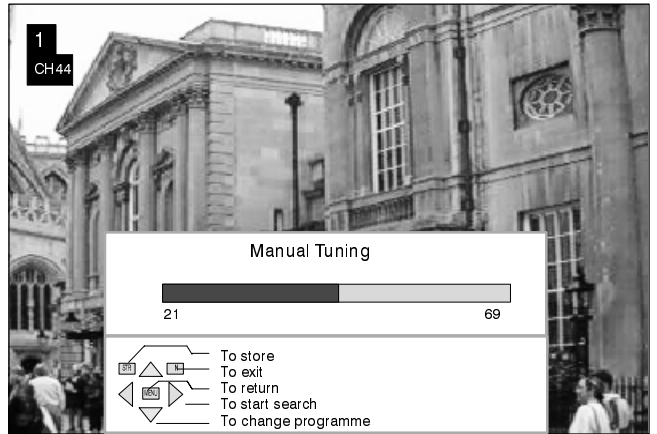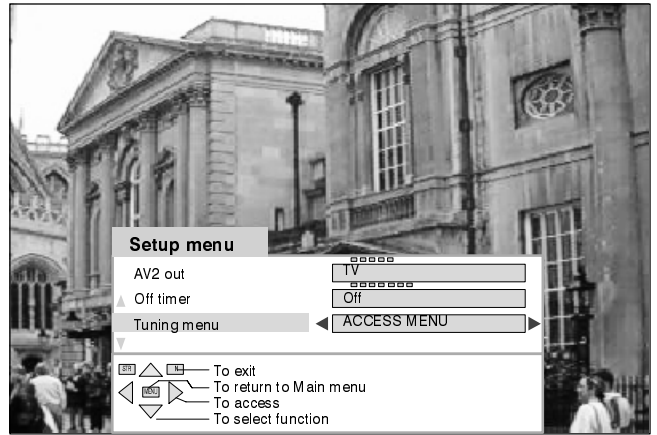

Manual Tuning (Front panel)


Press the F button (Front panel) until the Tuning menu is reached

 F



Press the – or + button to access Tuning menu

 -/V




Press the TV/AV button to change to the required programme position

TV/AV




Press the – or + button to start the tuning search

 -/V






Press STR to store changes

 STR



Press the F button to exit

 F

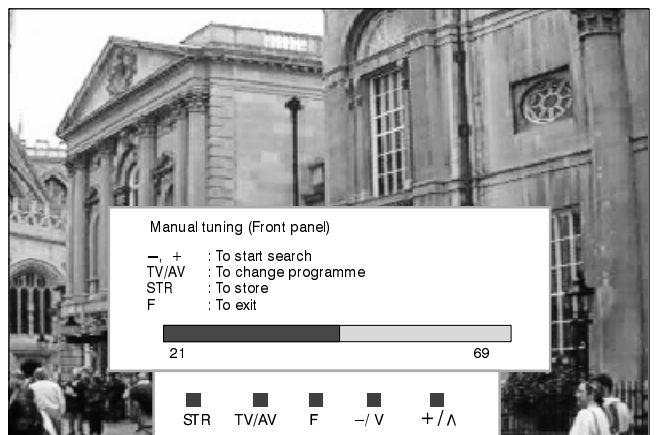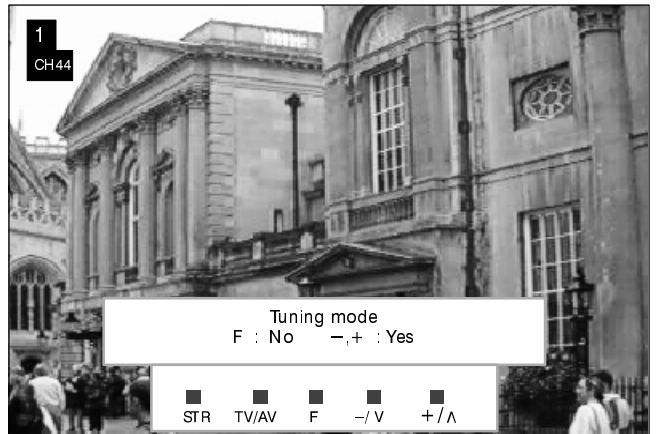

TUNING MENU – Shipping condition


Shipping condition allows you to reset the TV to its original condition, i.e. no channels tuned in

This is useful for example, if you move to a different area then you will probably want the TV to tune itself to your new local stations.


This can be done either through the **Shipping condition** menu or through the **Auto setup** menu.

The **Shipping condition** menu will reset all data, clearing all tuning information and resetting all control levels back to factory settings. You may need to adjust your VCR or programme position '0' VCR after operating the **Shipping condition** menu – refer to page 32.


Open the Main menu

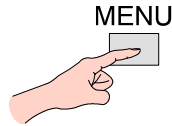


Move to Setup menu

 


Access Setup menu

 


Move to Tuning menu

 


Access Tuning menu

 


Move to Shipping condition

 



Access Shipping condition

 

Press STR to start

 



 
 
Press again, to confirm, each time that you are asked, "Are you sure?"



Switch TV off and wait for a few seconds.

Switch TV on again.

Auto setup tuning will begin, stations will be located, sorted and stored ready for use. See Page 23 for details.

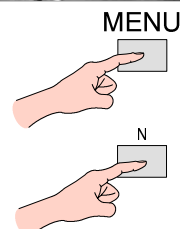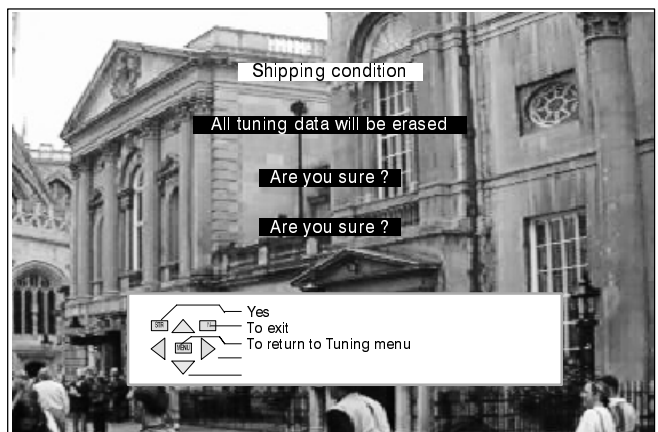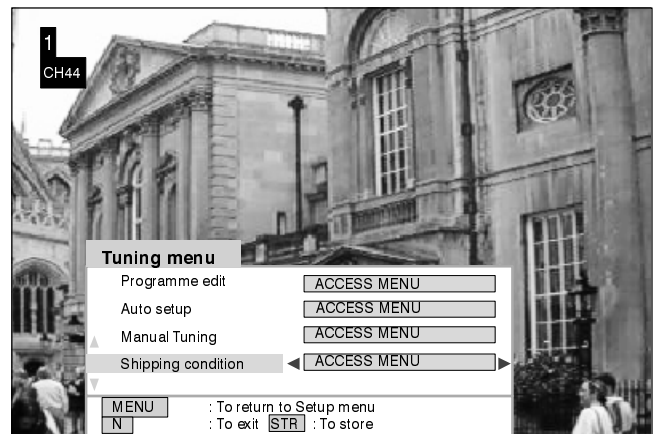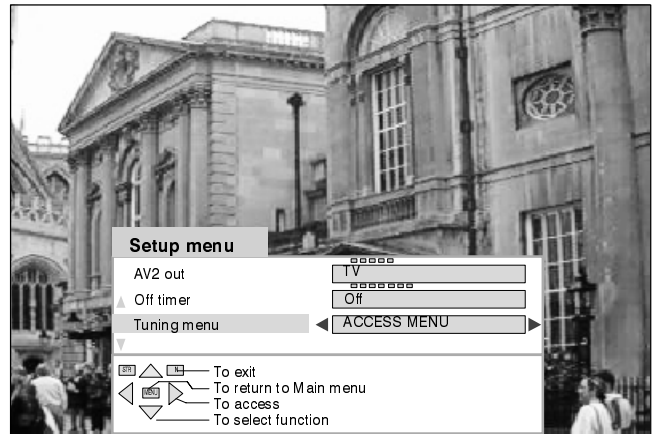

Return to Tuning menu


OR

To exit menu system


AV SELECT and SETUP

The AV Select menu will allow you to choose which AV source to view

Press the TV/AV key
(remote control or TV)

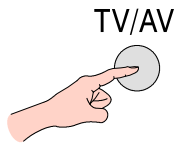


 Press the appropriate coloured
key of remote control (whilst the
options remain on screen)




Press the green or yellow keys
again to select S-Video input


You may wish to make
adjustments to the Setup or Sound
menus

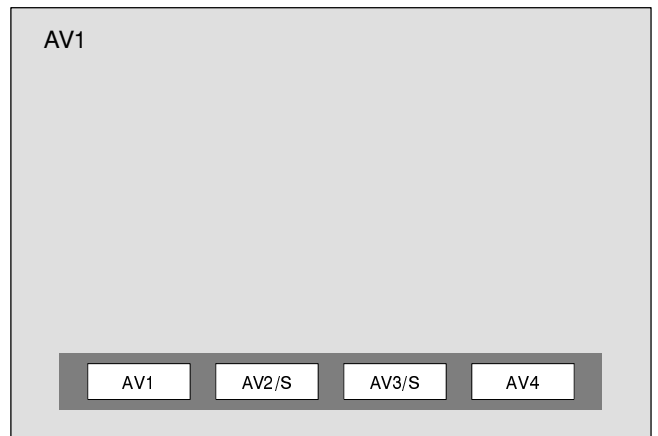


Open the Main menu

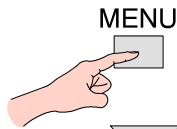


Move to Setup menu

 



Access Setup menu

 


Move to your choice

 


Access adjustments or options

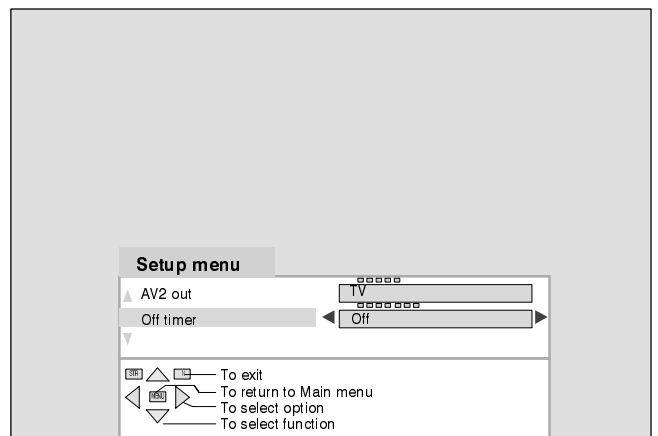 


Open the Main menu

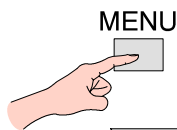


Move to Sound menu

 





Access Sound menu

 

Move to your choice

 

Access adjustments or options

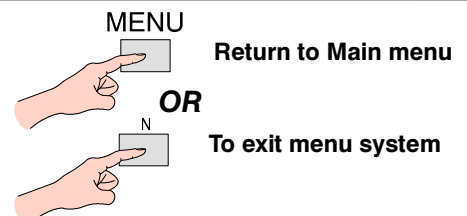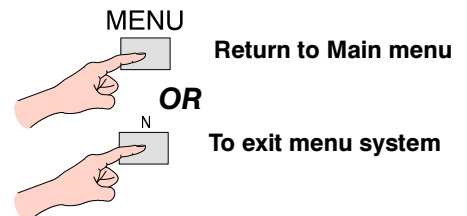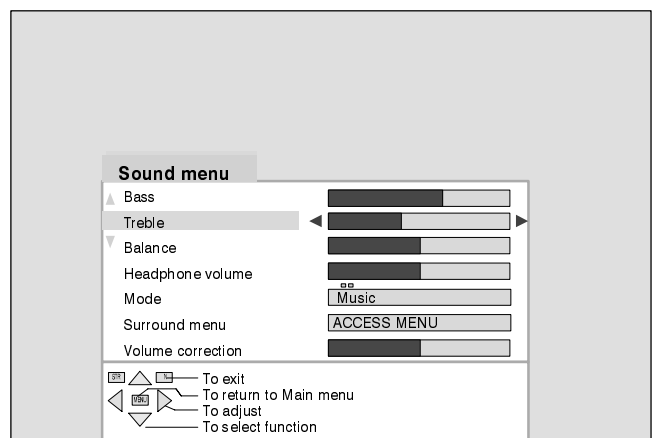 

SURROUND MENU

Normally stereo reproduction uses left and right speakers, but **Dolby Pro Logic Surround** also uses a centre channel and a rear channel. The centre channel sharpens sound perspective and dialogue clarity whilst the rear channel is used to immerse the viewer in ambience and special effects.

To use **Dolby Pro Logic Surround** when receiving television programmes that have been produced with the **Dolby Pro Logic Surround** information, you must be able to receive NICAM Stereo transmissions. If NICAM Stereo transmissions are not transmitted in your area then the **Dolby Pro Logic Surround** information will not be present and it will not be possible to use Pro Logic operation (unless you are playing back from a stereo VCR, Digital Versatile Disc etc.).

Dolby Pro Logic Surround will operate with videos, laser discs and TV programmes that bear the **Dolby Surround** logo :



Open the Main menu

Move to Sound menu

Access Sound menu

1. Move to Bass setting
Adjust to centre position





2. Move to Treble Setting
Adjust to centre position

Move to Surround menu

Access Surround menu

Move to your choice

Choose from options or access the speaker level menu.

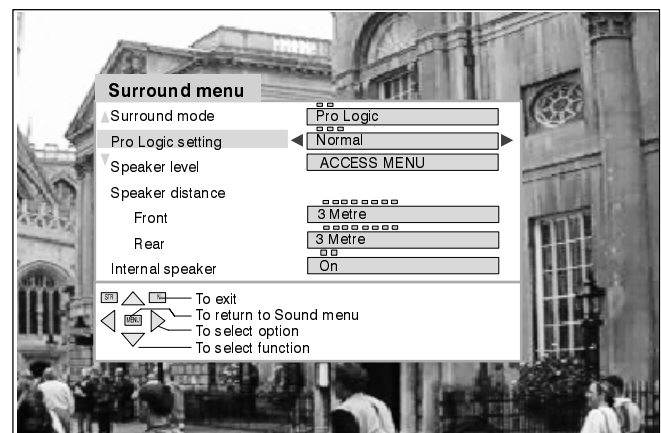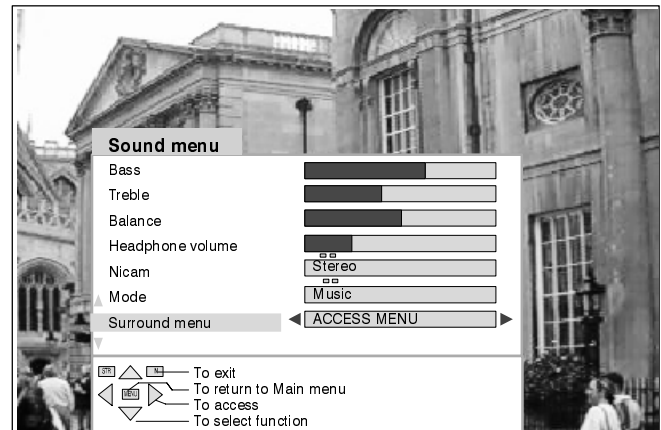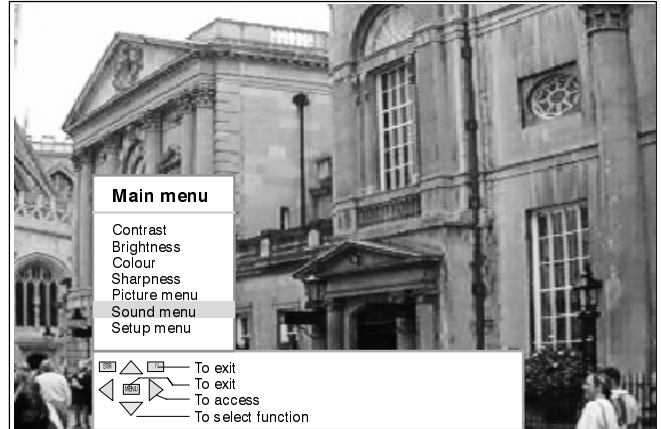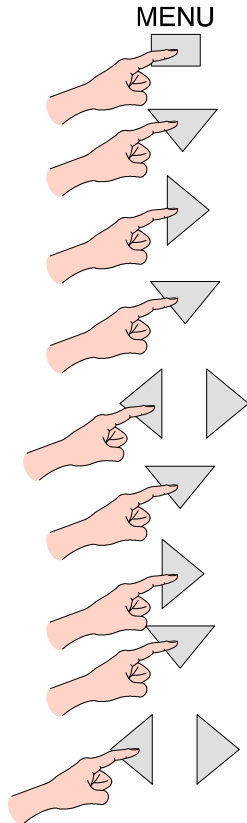

Surround mode

**Pro Logic /
Simulated setting**

Choosing Pro Logic allows selection of Normal, Phantom or 3 Stereo modes, as described on Page 28.

Choosing Simulated allows selection of Disco, Movie or Stadium modes, as described on Page 29.

Speaker level


Allows adjustment of the output levels for each channel, as described on Page 29.

**Speaker distance
Front / Rear**

Allows setting of the distance from the listening position to the front and rear speakers. If the rear surround speakers are closer to you than the centre speaker, you may hear dialogue "leakage" from the rear surround speakers. It may be necessary to reduce the output level of the rear channel to rectify this phenomenon.

Internal speaker

Normally set to **On**, but, when separate external amplified front speakers are connected, then the internal speakers can be switched **Off**. See Page 36 for connection details.

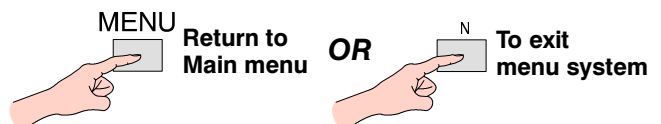


PRO LOGIC MODE

Choosing Surround Pro Logic mode allows three possible modes of operation :

Normal, Phantom or 3 Stereo.

Dolby Surround Pro Logic **Normal** mode

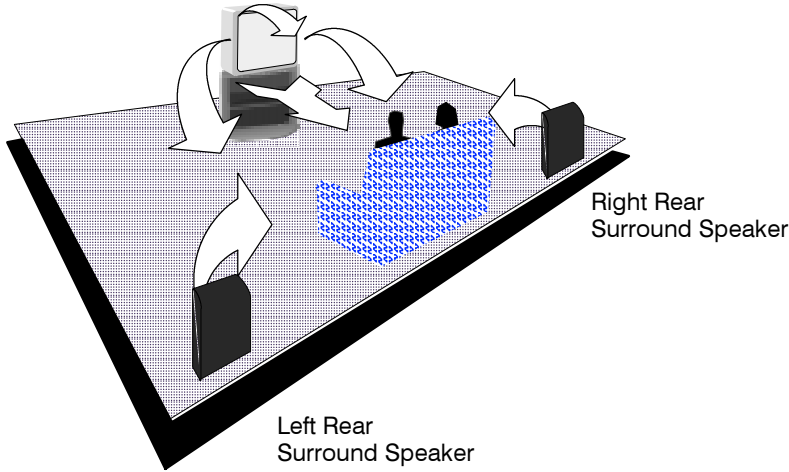


NOTE


Pressing the Surround switch will switch the surround mode into 2 channel stereo only (and vice-versa)

When the Surround function is switched to the Off position, it will allow a Balance control as an extra option in the sound menu

Dolby Surround Pro Logic **Phantom** mode

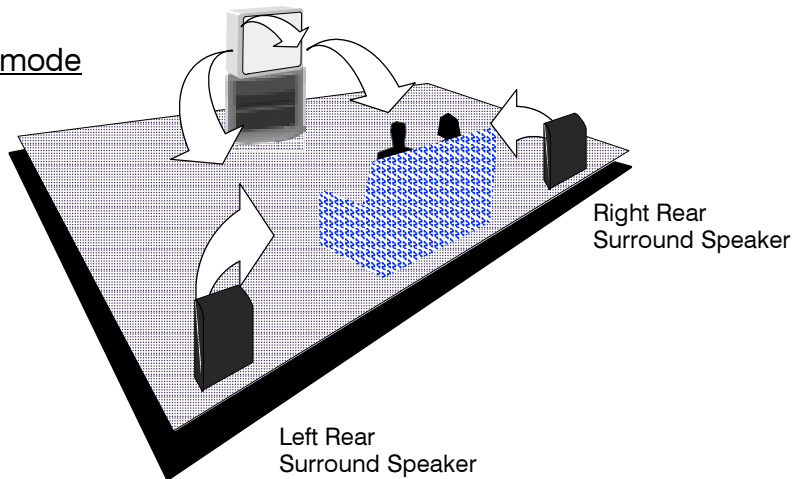

Dolby Surround Pro Logic **3 Stereo** mode

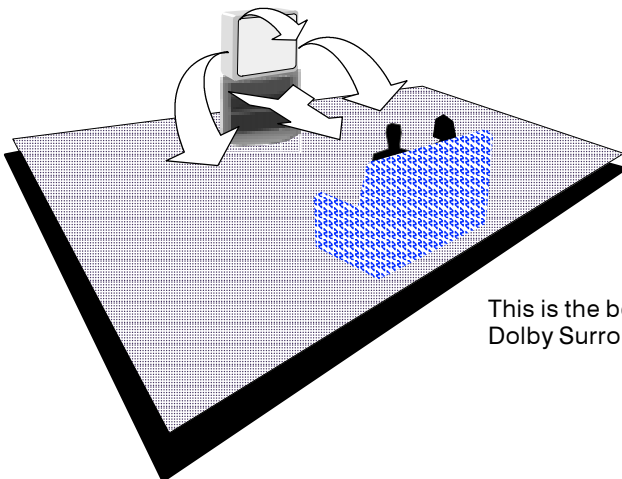

This is the best mode to use if rear speakers are not connected. It offers Dolby Surround Pro Logic effect but without the rear surround speakers.

SIMULATED MODE


Simulated surround modes allow various types of surround effects to be produced by mimicking both the direct sound, as heard by the audience, and the sound reflected back from the surrounding walls e.g. ceiling and floor space in a space such as a Disco. There are three different effects to choose from, each reflecting a different atmosphere.

Setting	Effect	Appropriate sources
Disco	A room so full of music that it seems to engulf the listener.	Disco, Dance or Jazz music.
Movie	Playback of software (films) not encoded with Dolby surround.	All movies or music software recorded without Dolby surround.
Stadium	A large sports stadium packed for a live game.	Any live sports occasion.


SPEAKER LEVEL SETUP

The speaker output levels from the different options, e.g. Left, Centre, Right and Rear should be adjusted, from your usual listening position, to obtain the best results. The level can be set using either the TV sound or the provided test signal. When using external stereo equipment, it is advisable to set the speaker levels to the midpoint position.

The adjustments available will vary according to the mode chosen.

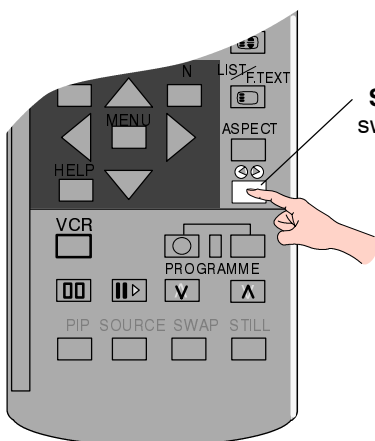

Speaker level setup shown in Pro Logic mode

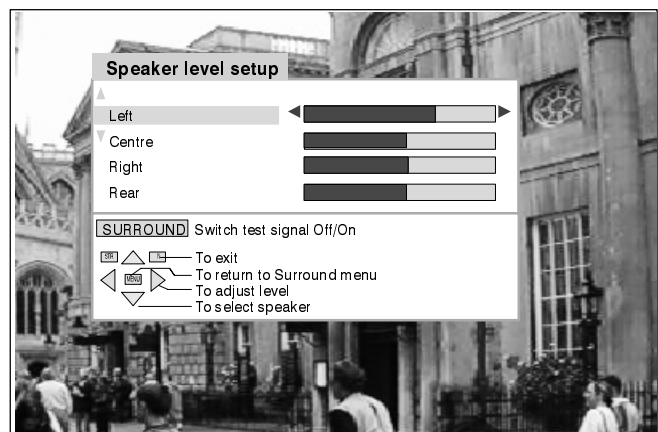

TELETEXT OPERATION


- Teletext features may vary depending on the Broadcasting Companies and is only available if the channel selected is transmitting Teletext.
- This TV set is capable of receiving German TOP Teletext transmissions, it will automatically switch to them if they are being received. This will be indicated in the display area at the bottom of the screen.
- Pressing the **MENU** key whilst in Teletext operation will display the contrast function with a cyan bar, press ◀ ▶ to alter the setting as required.
- When in teletext mode, the volume may still be altered to the desired listening level.

What is LIST mode?

In LIST mode, four differently coloured page numbers are situated at the bottom of the screen. Each of these numbers can be altered and stored in the TV's memory.


What is FASTEXT?

In FASTEXT mode, four differently coloured subjects are situated at the bottom of the display. To access more information about one of these subjects, press the appropriately coloured button. This facility enables fast access to information of the subjects shown.

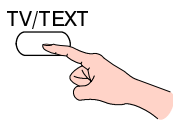


TV / Teletext mode

Press the **TV/TEXT** key.
The screen will display the Teletext page.
Press again when you wish to return to TV. mode.

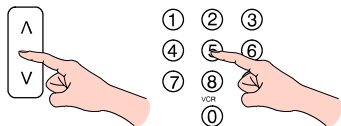

Page Selection

Pages can be selected in two ways :
a. Press the Up / Down keys to increase or decrease the page number by one.
b. By entering the page number, using 0 –9 on the remote control.

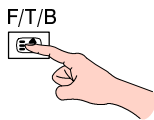


Full / Top / Bottom

Press to expand the TOP half of the page.
Press again to expand the BOTTOM half.
Press again to return to normal (FULL) size.




Reveal

 Press to reveal hidden words e.g. quiz page answers.
Press again to hide.




Red / Green / Yellow / Blue keys

 In FASTEXT mode these correspond to the differently coloured subjects.
In LIST mode they correspond to the differently coloured page numbers.



List Store

 In LIST mode the four page numbers can be altered for channel positions 1 – 25 only.
To do this, press one of the coloured keys and enter the new page number.
Press and hold **STR**, the page numbers will change colour.



Hold

To hold the Teletext page when viewing multipage information.
Press again to return to automatic page update.

TELETEXT OPERATION

 
It is not possible to change the programme position when in News flash, Update or Sub Coded Page Access operation.

List / F.text



Press to change from FASTEXT mode to LIST mode and vice versa.
In FASTEXT mode four differently coloured subjects are displayed at the bottom of the page. Press the appropriate coloured key to access more information about one of these subjects.


Favourite Page (F.P.)



Stores a favourite page in memory for instant recall. To store such a page, the TV must be in LIST mode, and the programme position must be from 1 – 25. Press the **BLUE** key, select the page number, then press **STR**. The page number is now stored. Press **F.P.** to recall this page.

Display Cancel

Press **DISPLAY CANCEL** to view the TV picture whilst searching for a Teletext page. When found, the screen will display the page number at the top left. Press **DISPLAY CANCEL** to view the page. Press **TV / TEXT** to return to normal TV operation.

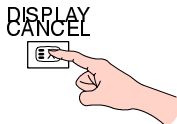


News Flash

When a news flash page has been selected, press **DISPLAY CANCEL** to view the TV picture, when an update is received, it will be displayed on screen. Press **DISPLAY CANCEL** to remove updated news. Press **TV / TEXT** to return to normal TV operation.


Update

Press **DISPLAY CANCEL** to see the update of information on certain pages. When an update is received, the page number will be displayed at the top left of the screen. Press **DISPLAY CANCEL** to view the page. Press **TV / TEXT** to return to normal TV operation.

Sub Coded Page Access

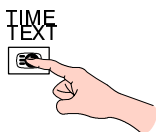

When teletext information exceeds more than one page, it may take some time for the automatic changing of the sub pages to reach the sub page you require. It is possible to enter your required sub page and continue watching the normal programme until the correct sub page is found.
Select the required page number using keys 0 – 9.

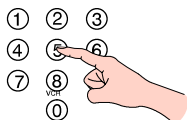


Press **TIME TEXT**, **** will be displayed (top right of the screen).

Enter desired sub page number before the **** disappears.
To select page 6 enter 0, 0, 0 and 6.

If in LIST mode, a 'T' will appear in the current box at the bottom.

Press **DISPLAY CANCEL** to view a normal TV programme.

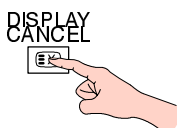


When the page is available, press **DISPLAY CANCEL** to view the page. To clear the page perform one of the following :

- Select a new page number.
- Press **TV/TEXT** to return to normal TV operation.

Index

When in FASTEXT operation

 Press **INDEX** to return to the main index page. Depending on the way information is transmitted, this may have to be pressed more than once to return to the main index page.



VCR AND SATELLITE RECEIVER INSTALLATION

Your new TV is supplied with programme position '0' set to receive an RF signal from your VCR, although a SCART connection is preferable if the VCR is so equipped.


However, if for some reason your VCR is tuned to a different RF channel then you will not receive any picture or sound from your VCR on programme position '0' of the TV. It will be necessary to either adjust the RF channel of your VCR (some VCR's are capable of adjusting their RF channel via their remote control unit) or to adjust the tuning of the TV's programme position '0' or both until it receives the RF output channel of your VCR.

It is intended that this advice is used in conjunction with the instruction books for your ancillary equipment. To connect a VHS VCR use the AV1 socket. To connect an S-Video VCR use the AV2 socket.


To tune your TV to the VCR

Switch on the VCR and insert a pre-recorded tape with known content


Open the Main menu

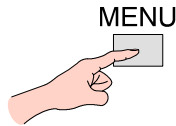

Move to Setup menu

 


Access Setup menu

 

Move to Tuning menu



 
Access Tuning menu



Move to Manual tuning



 
Access Manual tuning




Select programme position '0' VCR



 
Start tuning, searching for the VCR playback of the known content tape



 When the VCR playback is found, press STR to store






Press N to exit menu system

 

See below for installation of VCR and Satellite Receiver.

 
Notes :



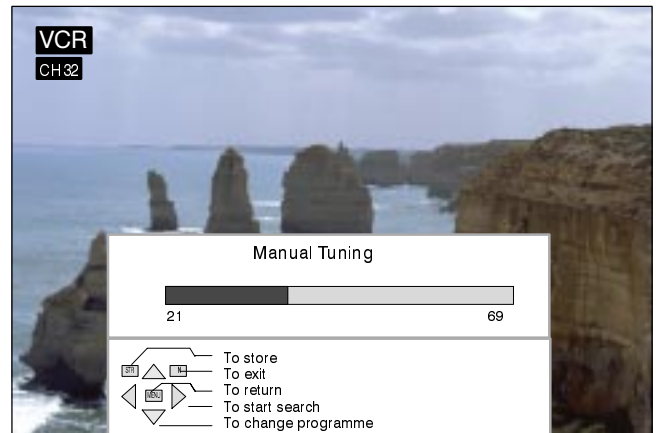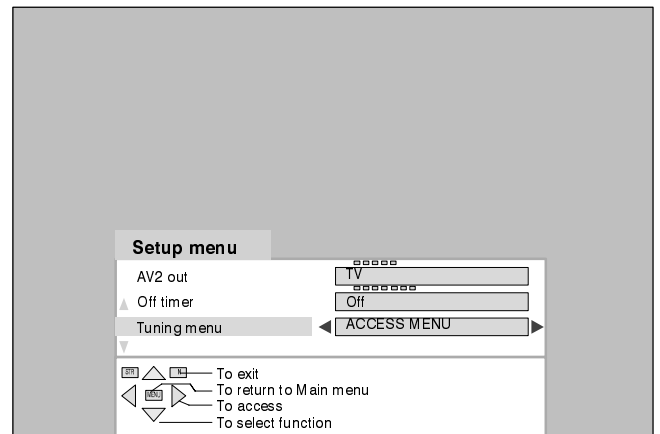




 

- If picture patterning occurs on programme position '0' it may be necessary to adjust the RF output channel of the VCR, refer to the VCR instruction book.
- If a Satellite Receiver and a VCR are going to be used **it is important**, to avoid tuning problems, that they are both tuned to output their signals on differing channels. For example, if the VCR is tuned to output channel 32, the Satellite Receiver could be set to output channel 34. Refer to the Satellite Receiver and VCR instruction books for precise tuning information.

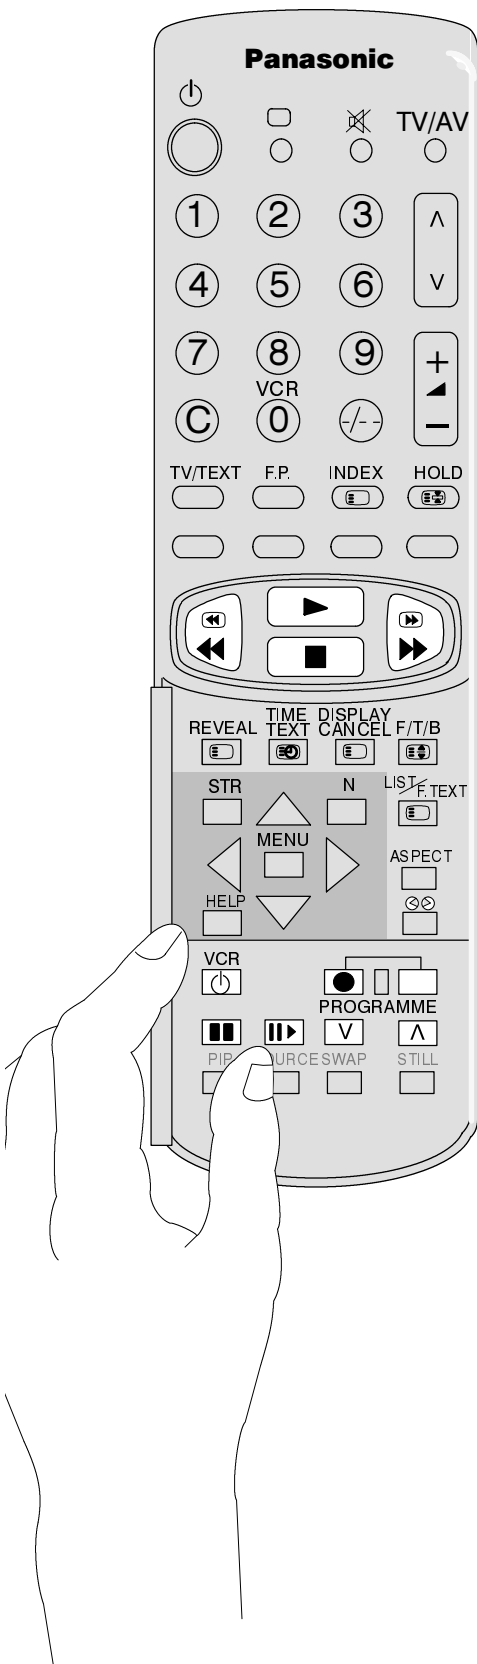

VCR CONTROL



The Remote Control is capable of operating some functions of selected Panasonic VCRs, please consult your dealer for details. Some VCR have different functions, so to ensure compatibility, please refer to the VCR's instruction book.



<p>VCR</p> 	<p>Standby Press to switch the VCR to standby mode. Press again to switch back on.</p>
	<p>Play Press to playback the tape.</p>
	<p>Stop Press to stop the tape.</p>
	<p>Fast Forward / Cue Press to fast forward the tape. In Play mode, press to view the picture rapidly forward.</p>
	<p>Rewind / Review Press to rewind the tape. In Play mode, press to view the picture in reverse rapidly.</p>
	<p>Pause / Still Press in playback mode, the picture will pause.</p>
	<p>Still Advance While in PAUSE / STILL mode, press to advance the picture one frame at a time.</p>
	<p>Programme Up / Down Press to increase or decrease the VCR programme position by one.</p>
	<p>Record Press these together to record.</p>

AUDIO/VIDEO CONNECTIONS

Front AV3 4 Pin S-Video, RCA Audio /Video and Headphone Sockets

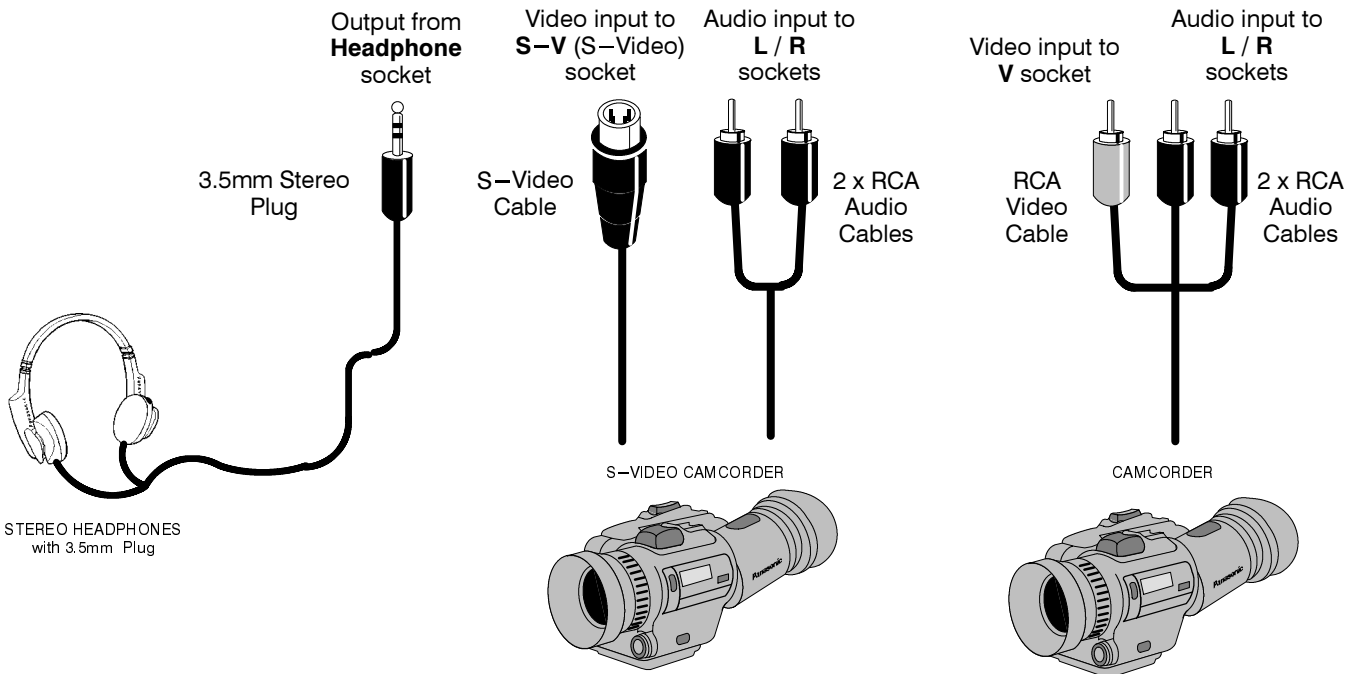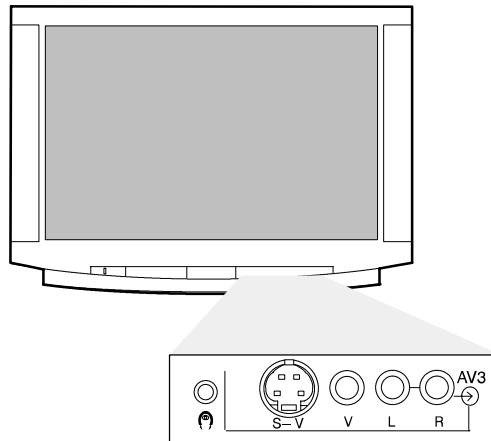

Ancillary equipment and cables shown are not supplied with this TV set.

SCART and S-Video Terminal Information


AV1 and AV4 21 pin SCART terminals

Socket Earth	21		20	CVBS in (video)
CVBS out (video)	19		18	RGB status earth
CVBS earth	17		16	Status RGB-AV1
Red in-AV1	15		14	Earth
Red earth-AV1	13		12	--
Green in-AV1	11		10	--
Green earth-AV1	9		8	Status CVBS
Blue in-AV1	7		6	Audio in (L)
Blue earth-AV1	5		4	Audio earth
Audio out (L)	3		2	Audio in (R)
Audio out (R)	1			

AV2 21 pin SCART terminal

Socket Earth	21		20	CVBS in (video)
CVBS out (video)	19		18	Earth
CVBS earth	17		16	--
S.C. - In	15		14	Earth
Earth	13		12	--
--	11		10	--
Earth	9		8	Status CVBS
--	7		6	Audio in (L)
Earth	5		4	Audio earth
Audio out (L)	3		2	Audio in (R)
Audio out (R)	1			

S-Video 4 pin terminal





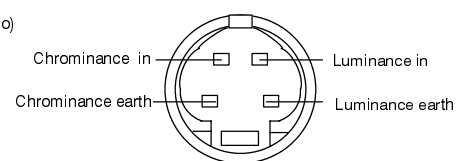


Suitable inputs for **AV1** include RGB (Red/Green/Blue).
AV4 does not have RGB input capability.

AV2 - Pins 15 and 20 are dependent on AV2 S-VHS / VIDEO switching.

AUDIO/VIDEO CONNECTIONS

Rear AV1/AV2(S)/AV4 21 Pin SCART and RCA Audio Out Terminals

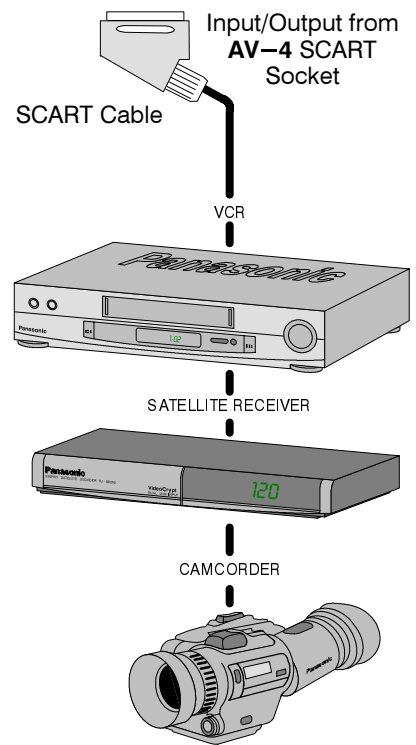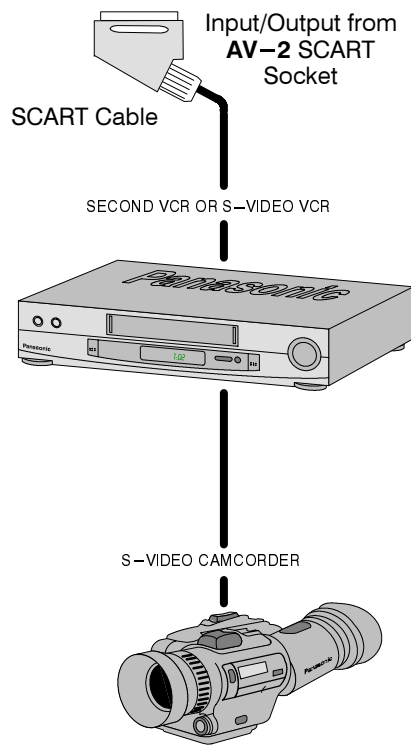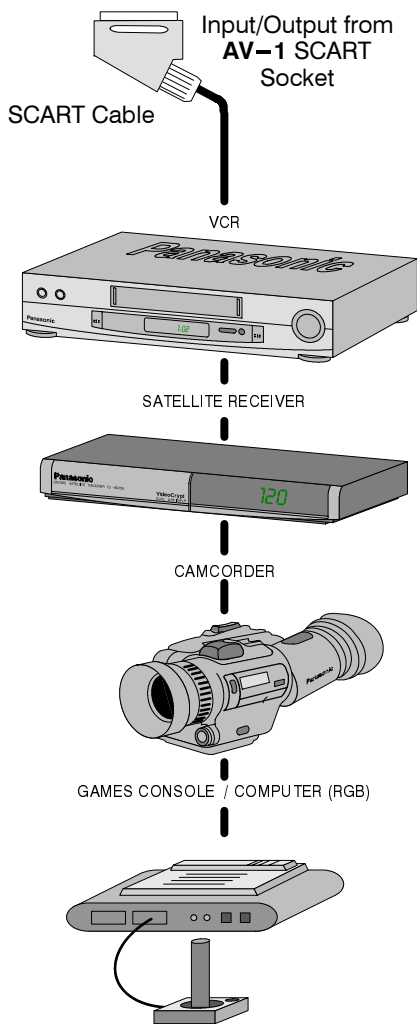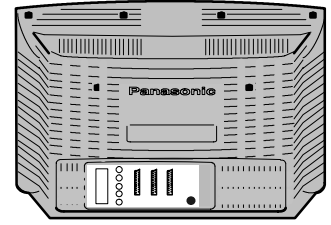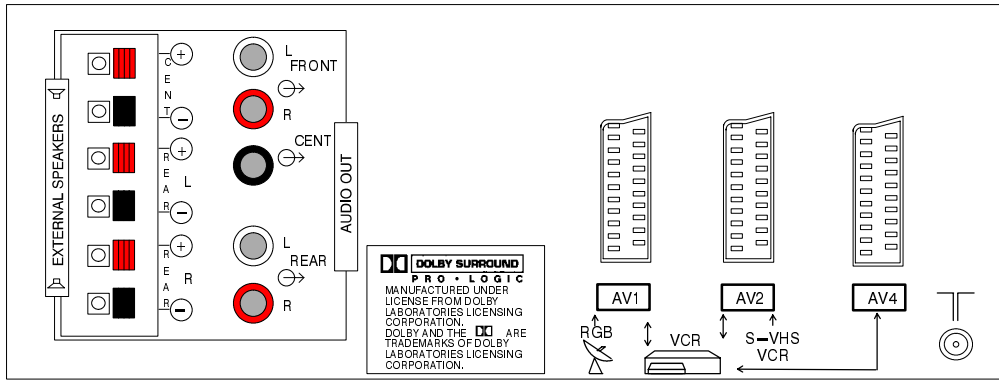

NOTES:

Ancillary equipment and cables shown are not supplied with this TV set.

Do not connect a computer with TTL output (5V) to this set.



The AV2 21 pin terminal can also be used as an Output to Audio / Video Equipment (refer to page 16 for details).

Audio out using external amplifiers and speakers




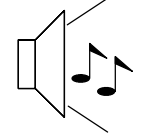
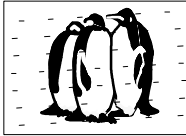
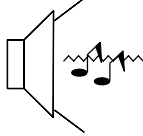

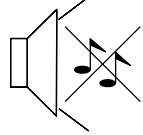

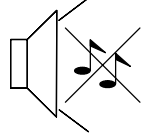
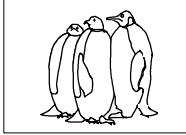
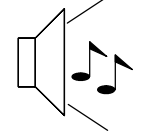
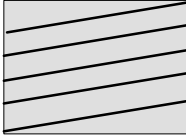
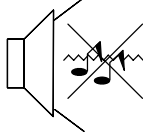

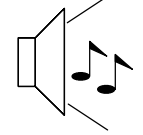
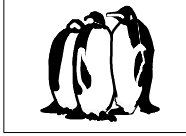
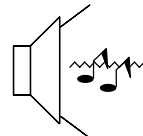
The **Audio Out** sockets on the rear of the TV allow you to create your own custom sound output system using additional external amplifiers and speakers. You may decide, for example, to use an external amplifier and speakers for the Front surround output.

Utilising an existing stereo hi-fi system comprising one amplifier, connected to the FRONT DOLBY SURROUND OUT sockets and two speakers to allow separate front left and right channels.

The internal speaker can be switched off in the Surround menu.

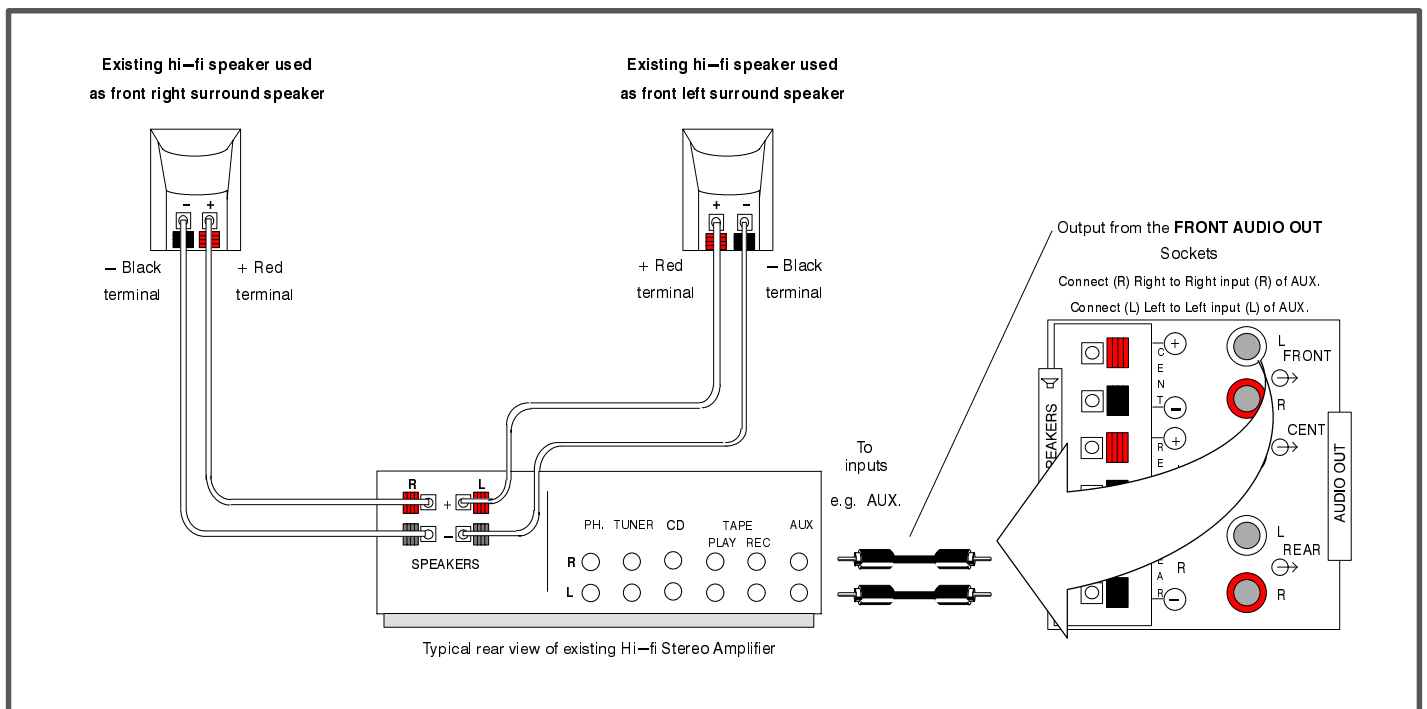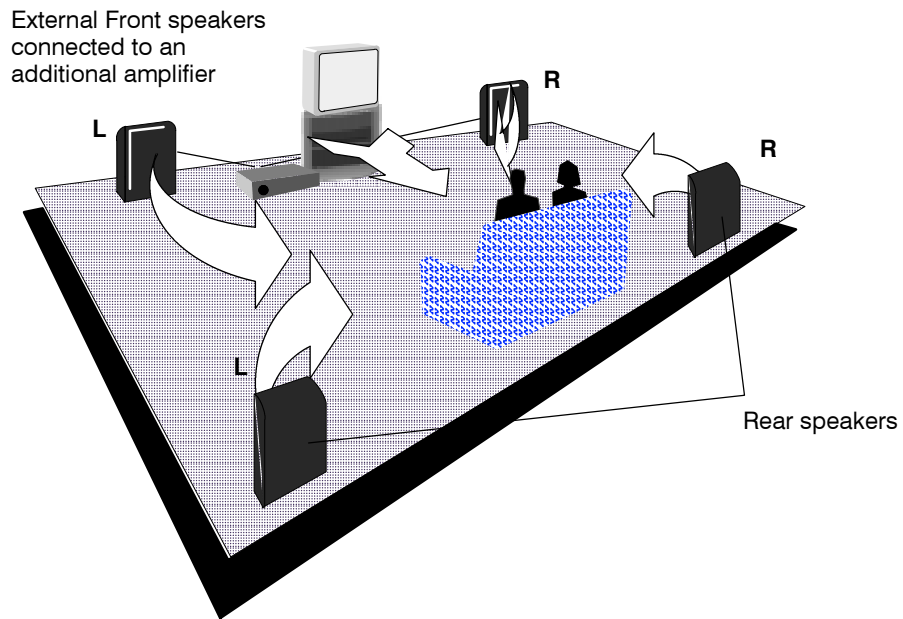

TROUBLE – SHOOTING

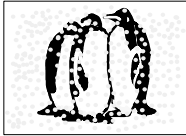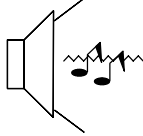Symptoms		Checks
Picture	Sound	
 <p>Snowy Picture</p>	 <p>Noisy Sound</p>	Aerial location, direction or connection
 <p>Multiple Images</p>	 <p>Normal Sound</p>	Aerial location, direction or connection
 <p>Interference</p>	 <p>Noisy Sound</p>	Electrical appliances Cars / Motorcycles Fluorescent lights
 <p>Normal Picture</p>	 <p>No Sound</p>	Volume level Sound mute switched on
 <p>No Picture</p>	 <p>No Sound</p>	TV set to AV mode Not plugged into A.C. outlet Not switched on Picture / Sound controls set at minimum levels Check if in standby mode
 <p>No Colour</p>	 <p>Normal Sound</p>	Colour controls set at minimum levels
 <p>Poor or Distorted Picture</p>	 <p>Weak or No Sound</p>	Retune Channel(s)
 <p>Coloured Patches</p>	 <p>Normal Sound</p>	Magnetic Interference from unshielded equipment Receiver moved while switched ON, switch TV off for 30 minutes.
 <p>Normal Picture</p>	 <p>Weak or distorted sound</p>	Sound reception may have deteriorated. Switch Nicam setting (Sound menu) to Off until reception improves.

FOR YOUR GUIDANCE

■ Service

Before requesting service, please refer to the trouble-shooting guide on previous page to determine the symptoms. To obtain service please contact your local Panasonic dealer quoting the model number and serial number (both are located at the rear of the TV).

■ TV Games / Home Computers

Extended use of TV games or home computers with any television set can cause a permanent 'shadow' on the screen. This type of irreversible picture tube damage, can be limited by observing the following points:

- Reduce the brightness and contrast levels to a minimum viewing level.
- Do not operate the television set for a continuous period of time while using TV games or home computers.
- This type of picture tube damage, is not an operating defect, and as such is not covered by the Panasonic warranty.

■ Sleep Feature


If the set is not switched off when the TV station stops transmitting, it will automatically go to standby mode after 30 minutes. This function will not operate when the TV is in AV mode.

■ Last Position Memory


Certain functions have a last position memory, i.e. the setting at the time of switch-off will be the setting used when the receiver is switched on again: –

Programme	Tint (M.NTSC / NTSC only)
P–NR	Contrast
AV Position	Sharpness
Volume	Aspect
Nicam	Standby
Bass	Colour
Treble	Brightness
Balance	Headphone volume
AV2 OUT selection	Mode
Status	Volume correction (in AV mode only)
Speaker level setting	Flicker reduction
Surround mode	Artificial Intelligence (AI)
Speaker Distance	

SPECIFICATIONS

		TX–W36D3DP/U
Power Source		220 – 240V 50Hz A.C.
Power consumption		239W
Standby consumption		1W
Picture Tube		86cm visible diagonal
Audio Output (Music)		Front Left / Right 20W x 2, Centre – Built in 14W, Surround 15W x 2, External Centre 20W
Dimensions	H W D	618.5 mm 894 mm 578.5 mm
Weight (Kg)		73.4
Receiving Systems/ Band name	PAL I PAL 525/60 M.NTSC NTSC (AV input only)	UHF E21 – 69 Playback of NTSC tape from PAL Video recorders (VCR) Playback from M.NTSC Videorecorders (VCR) Playback from NTSC Videorecorders (VCR)
Aerial – Rear		UHF
Headphones – Front		3,5mm, 8Ω impedance
AV – Rear		AV1 – 21 pin terminal – Audio / Video in / out, RGB in. AV2 – 21 pin terminal – Audio / Video in / out, S–Video in, Selectable output. AV4 – 21 pin terminal – Audio / Video in / out
Dolby Surround Out – Rear		5 x Dolby Surround Out RCA External Speaker connections – 2 x Rear, 1 x Centre
AV – Front		AV3 – S–Video in, 2 x RCA Audio in, 1 x RCA Video in

Specifications are subject to change without notice. Weight and dimensions shown are approximate.

Dolby, Pro Logic and the  are trademarks of Dolby Laboratories.
Manufactured under license from Dolby Laboratories Licensing Corporation.

