

# TX-W36D3DP Operating Instruction

---



# Panasonic



## TX-W36D3DP



**100Hz**  
SUPER DIGITAL SCAN

King of Pictures  
**GAOO**

**Quintrix**  
WIDE

**WIDE**  
**DIGITAL**  
P - L - U - S



**TOP**  
**TEXT**

Please read these instructions completely before use and retain them for future reference.

Dolby and the  are trademarks of Dolby Laboratories Licensing Corporation.  
Manufactured under license from Dolby Laboratories Licensing Corporation.

Dear Panasonic Customer,  
 Welcome to the Panasonic family of customers. We hope that you have many years of enjoyment from your new colour television. This is a very advanced television, however, the Quick Start Guide will tell you how to have the TV operating quickly; you can then read the following pages to fully utilise the advanced features.



This television has a low power consumption making it very cost effective to run. To this end, the standby power consumption is merely 1 watt.

## CONTENTS

<b>Warnings and Precautions</b> .....	<b>2</b>	<b>Tuning Menu – Manual tuning</b> .....	<b>22</b>
<b>Accessories</b> .....	<b>3</b>	<b>OSD language</b> .....	<b>23</b>
<b>Fitting Remote Control Batteries</b> .....	<b>3</b>	<b>AV Select and Setup</b> .....	<b>24</b>
<b>Quick Start Guide</b> .....	<b>4</b>	<b>Dolby Pro Logic Surround Menu</b> .....	<b>25</b>
<b>Basic Controls</b> .....	<b>6</b>	<b>Pro Logic mode</b> .....	<b>26</b>
<b>Using the On Screen Display Menus</b> ..	<b>7</b>	<b>Simulated mode</b> .....	<b>27</b>
<b>Picture in Picture Controls</b> .....	<b>8</b>	<b>Speaker level setup</b> .....	<b>27</b>
<b>Still Picture Controls</b> .....	<b>8</b>	<b>Teletext Operation</b> .....	<b>28</b>
<b>Aspect Control</b> .....	<b>9</b>	<b>VCR Operation</b> .....	<b>30</b>
<b>Main Menu</b> .....	<b>11</b>	<b>Audio / Video (AV) Connections</b> .....	<b>31</b>
<b>Picture Menu</b> .....	<b>12</b>	Via the front AV3 S–Video, Audio / Video (RCA) and Headphone Sockets .....	<b>31</b>
<b>Sound Menu</b> .....	<b>13</b>	SCART and S–Video Terminal Information	<b>31</b>
<b>Setup Menu</b> .....	<b>14</b>	Via the rear AV1 / AV2(S) / AV4 21 Pin (SCART) and RCA Audio Out terminals ..	<b>32</b>
<b>Tuning Menu</b> .....	<b>15</b>	Using external amplifiers and speakers ..	<b>33</b>
<b>Tuning Menu – Programme edit</b> .....	<b>16</b>	<b>Trouble–shooting</b> .....	<b>34</b>
<b>Tuning Menu – Auto Setup</b> .....	<b>21</b>	<b>For your guidance</b> .....	<b>35</b>
		<b>Specifications</b> .....	<b>35</b>

## WARNINGS and PRECAUTIONS

- This TV set is designed to operate on 220 – 240V, 50Hz A.C.
- To prevent damage which might result in electric shock or fire, do not expose this TV set to rain or excessive moisture.
- **WARNING : HIGH VOLTAGE !!!**  
Do not remove the rear cover as live parts are accessible when it is removed. There are no user serviceable parts inside.
- Avoid exposing the TV set to direct sunlight and other sources of heat.
- Remove the mains plug from the wall socket when the TV set is not used for a prolonged period of time.
- **CABINET AND PICTURE TUBE CARE**  
Remove the mains plug from the wall socket. The cabinet and picture tube can be cleaned with a soft cloth moistened with mild detergent and water. Do not use solutions containing benzol or petroleum. TV sets can produce static electricity, care must be taken whenever touching the TV screen.
- Adequate ventilation is essential to prevent failure of electrical components, we recommend that a gap of at least 5cm is left all around this television receiver even when it is placed inside a cabinet or between shelves.

# ACCESSORIES

Check that you have the accessories and items shown

 


Operating Instruction book  
TQB8E2481U



TV Guarantee


Remote Control Transmitter  
EUR 51924

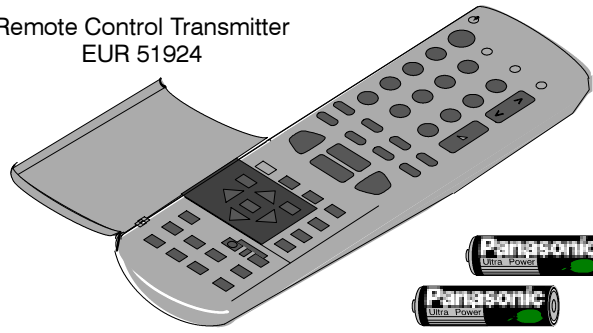


Batteries for the  
Remote Control Transmitter.  
(2 x R6 (UM3) size)




## FITTING REMOTE CONTROL BATTERIES

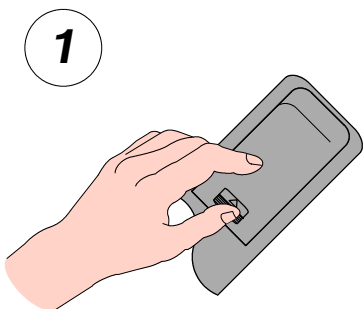 

Slide off the battery cover

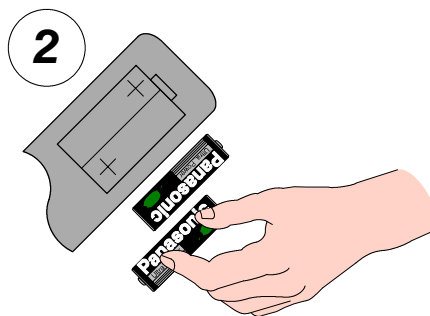 

 Insert batteries – note correct polarity

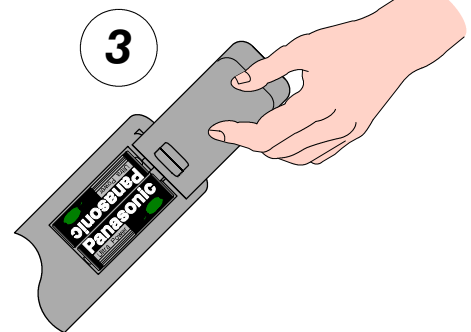


Replace the cover

### Notes:



 
- Make sure that the batteries are fitted the correct way round.
- Do not mix old batteries with new batteries. Remove old, exhausted batteries immediately.
- Do not mix different battery types, i.e. Alkaline and Manganese. Do not use rechargeable (Ni-Cad) batteries.

# QUICK START GUIDE

**1** Plug in aerial and connect ancillary equipment see pages 31 and 32

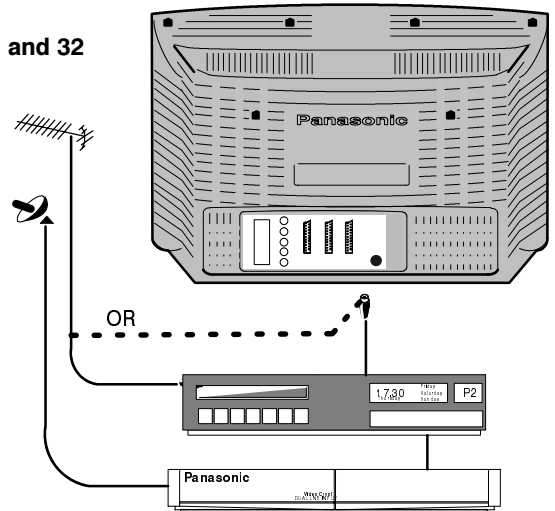


   **2** Connect the speakers with the TV switched off

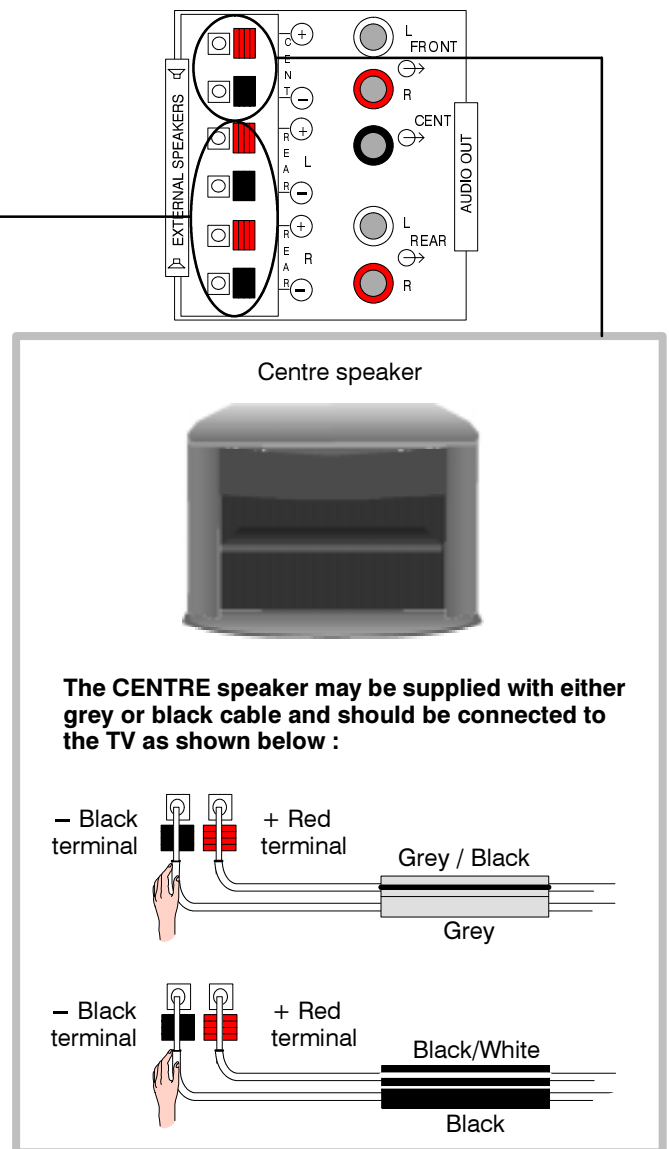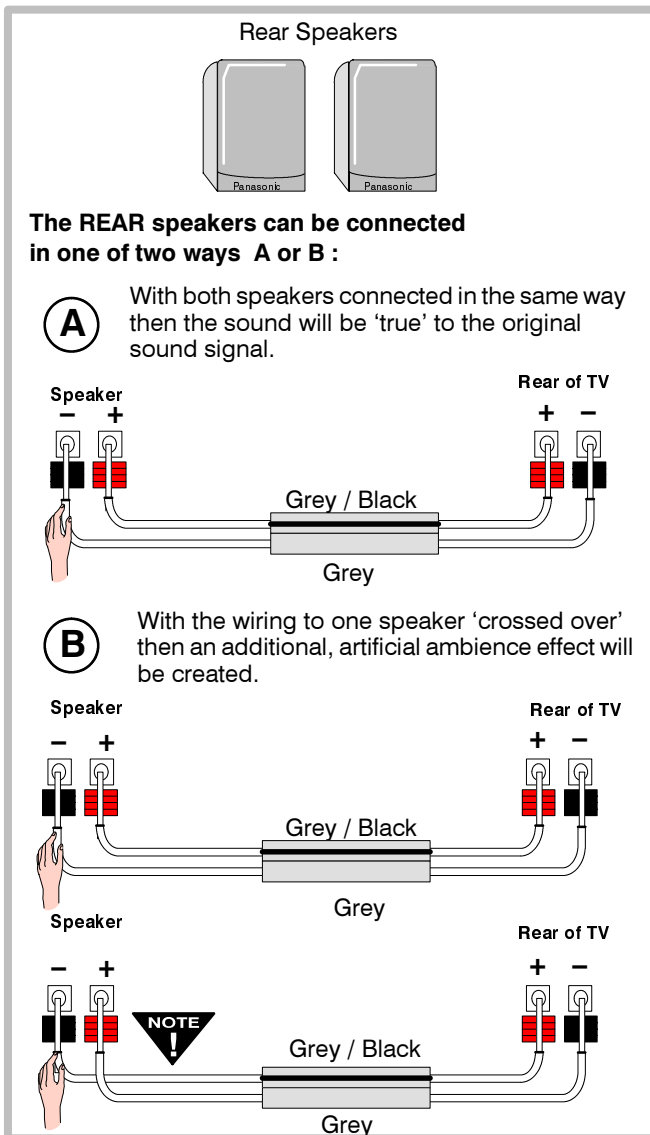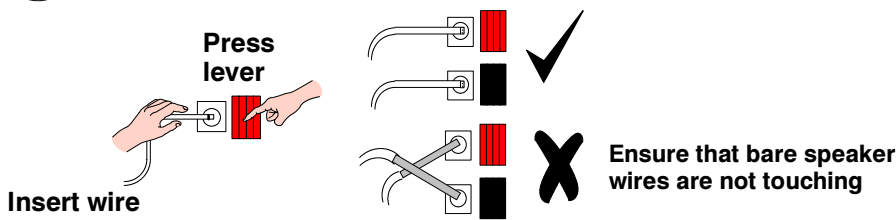


# QUICK START GUIDE

 **3** Position the speakers

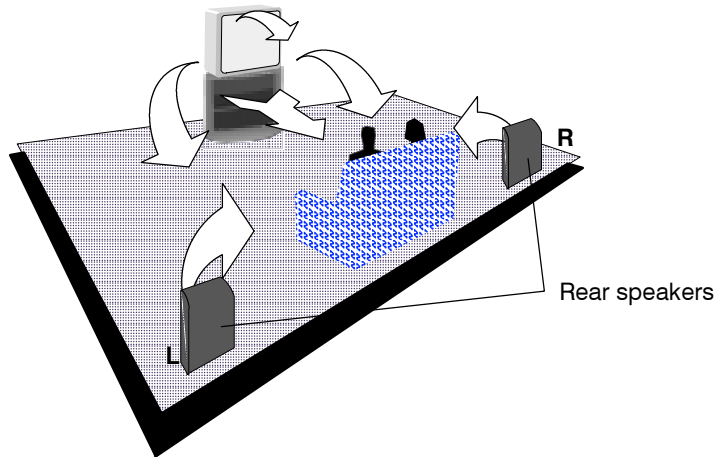


**4** Plug in T.V. and switch on

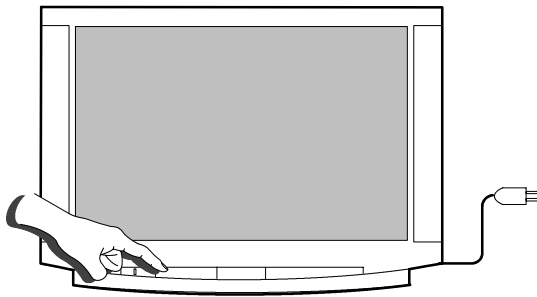 


**5** Select your country

 
Choose language also for Switzerland and Belgium only.

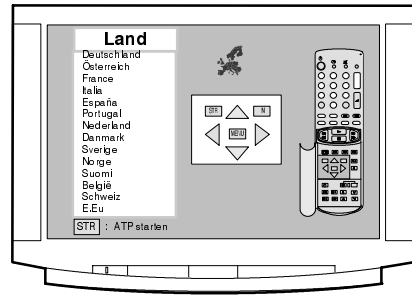

 
**6** Auto setup will begin, your stations will be located and stored

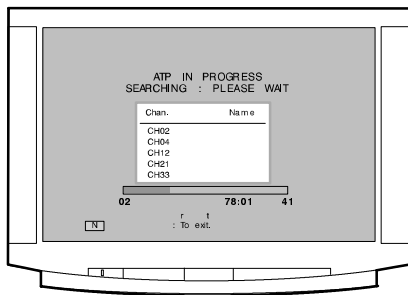



**7**

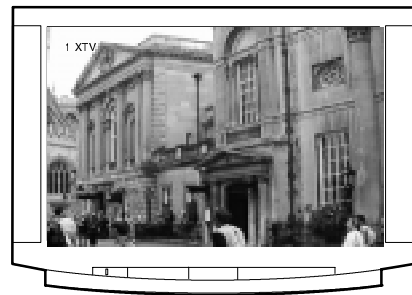 

**... READY TO GO!**

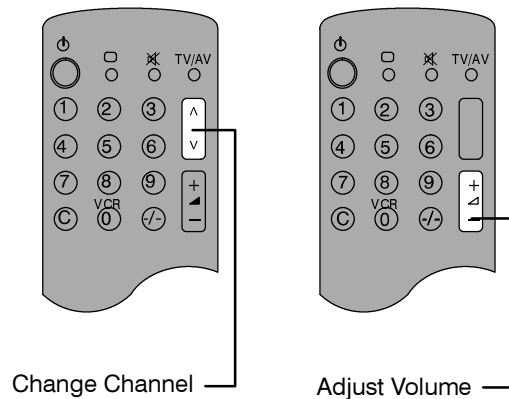 


# BASIC CONTROLS – FRONT PANEL AND REMOTE CONTROL

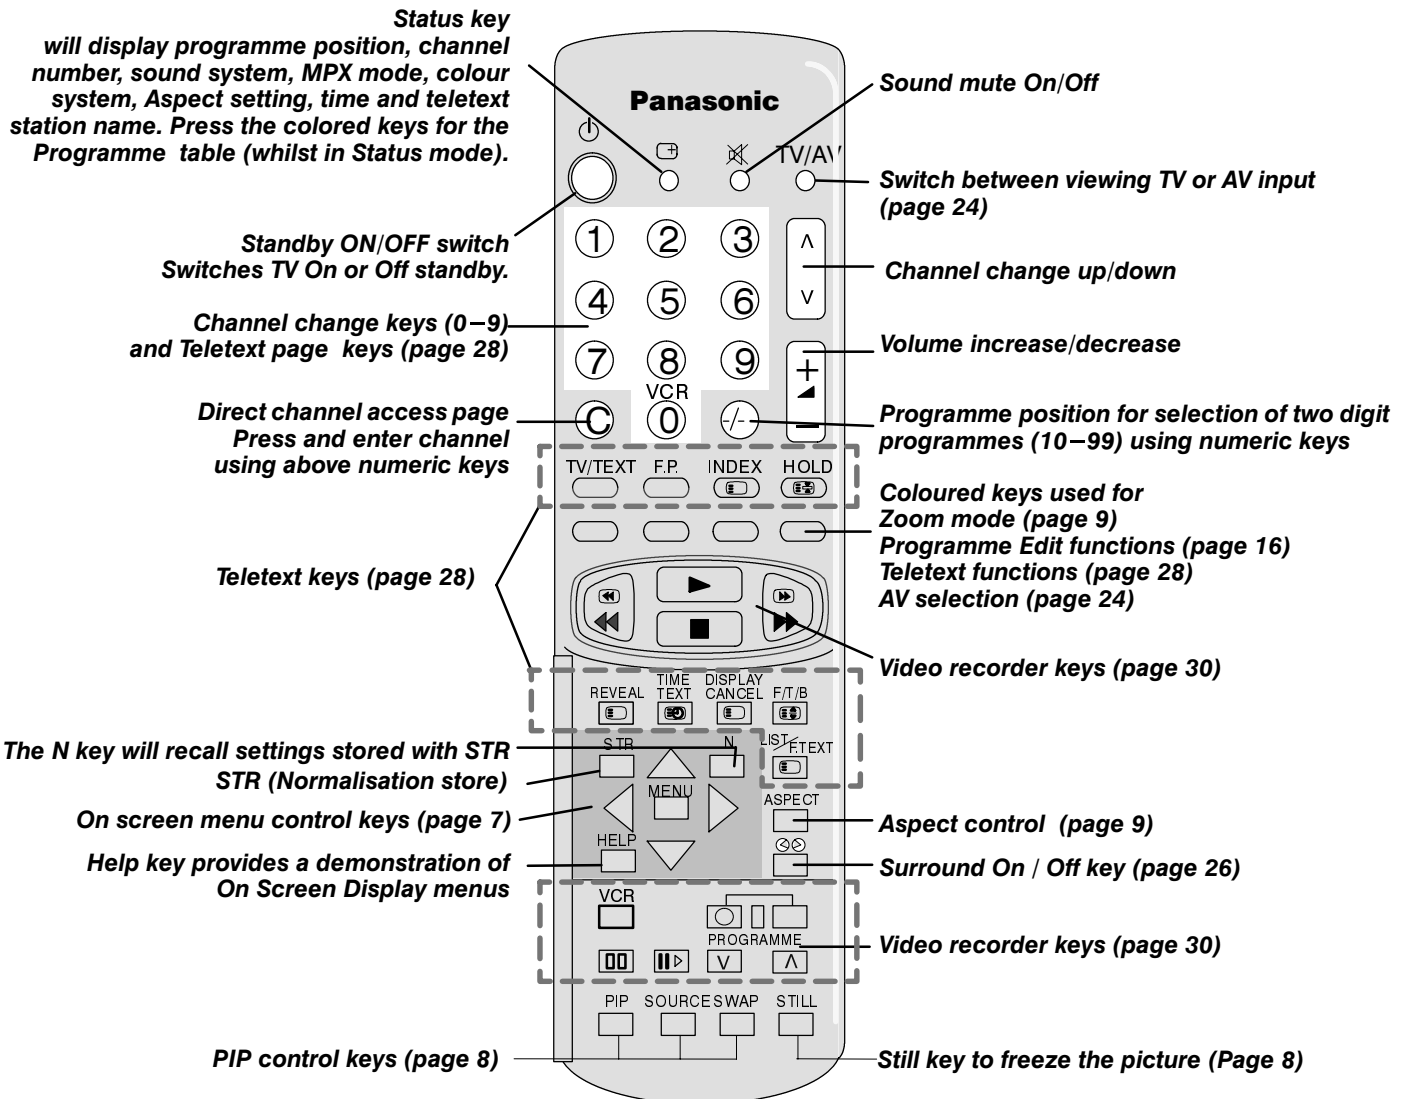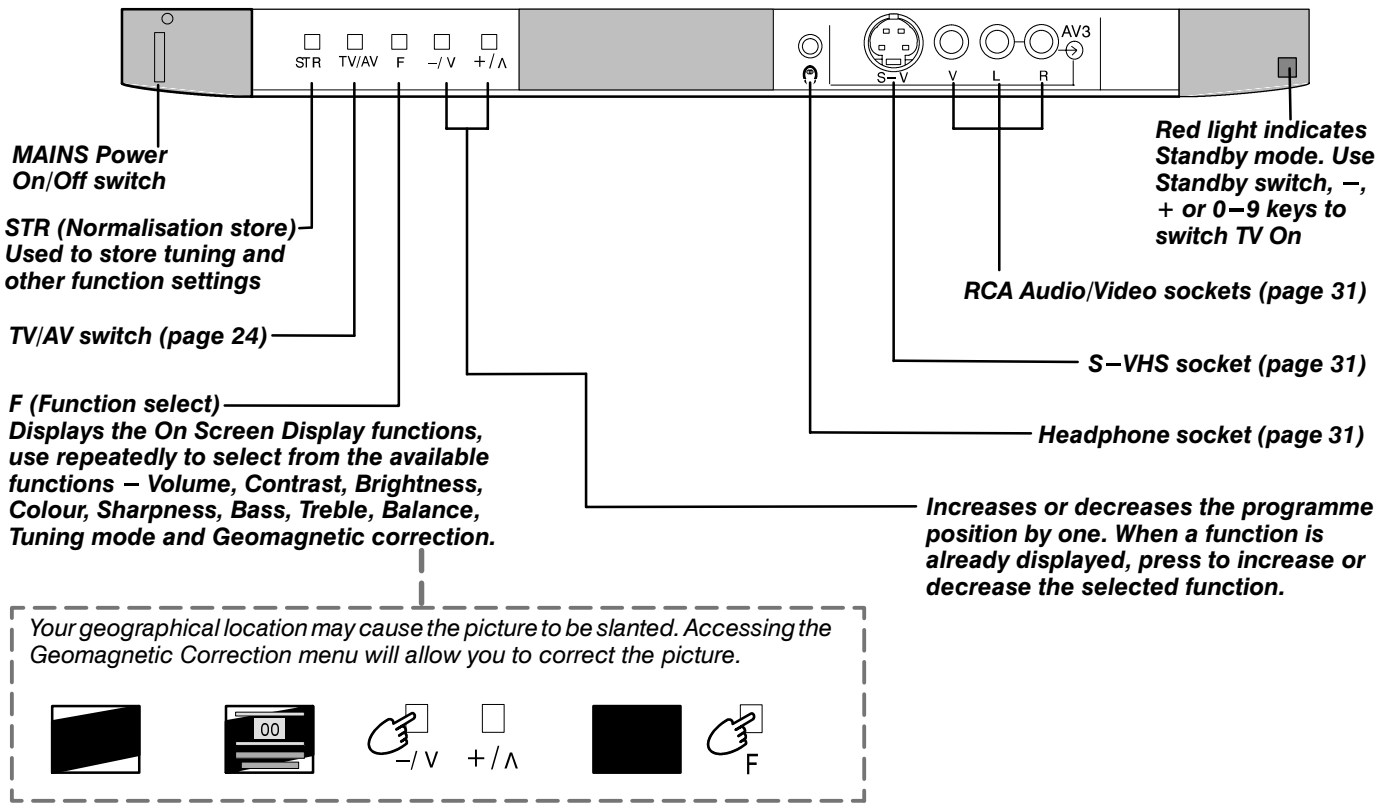  

# USING THE ON SCREEN MENUS

 This TV has a comprehensive system of On Screen Display menus to access adjustments and options.

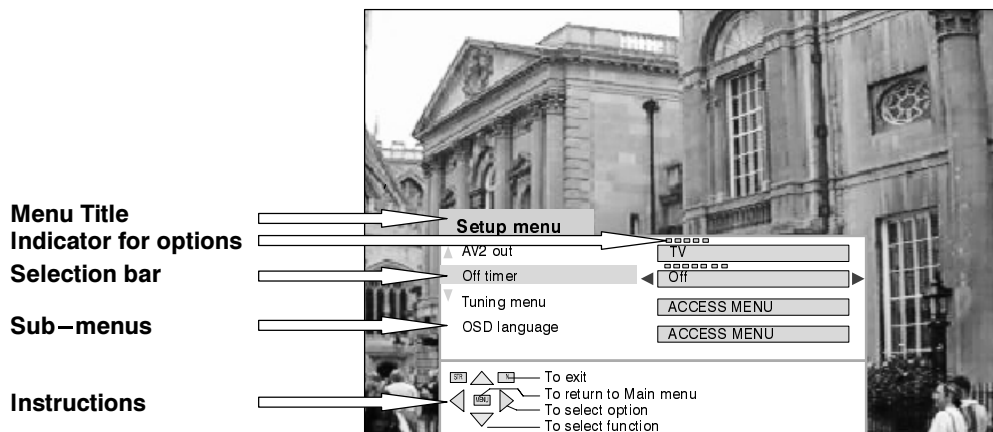


The following remote control keys are used to access and adjust settings for the On Screen Display menus.

Some selections, for example, **Contrast**, **Brightness**, **Colour** and **Sharpness** will allow you to increase or decrease their level.


Some selections, for example, **Off timer**, allow a choice to be made.

Some selections, for example **Tuning menu**, will lead to a further menu.

 The **'MENU'** key is used to open the Main menu and also to return to either the Main menu or a previous menu.

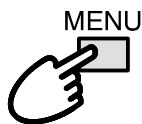

 
The **▲▼** keys are used to move the selector up or down the menus.

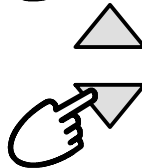


The **◀▶** keys are used to access menus, adjust levels or to select from a range of options.



 
The **'STR'** key is used to store settings after your adjustment or choice has been made.



 The **'N'** key is used to leave the menu system and return to the normal viewing screen.




 
The **'HELP'** key will run a demonstration of the menus available.

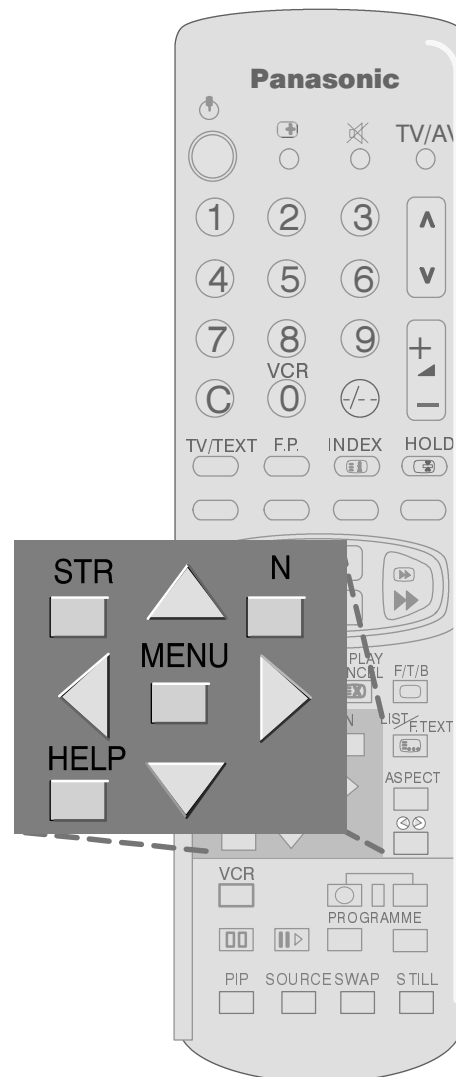




# PIP CONTROLS

  The remote control has keys to control the PIP (picture-in-picture) feature.

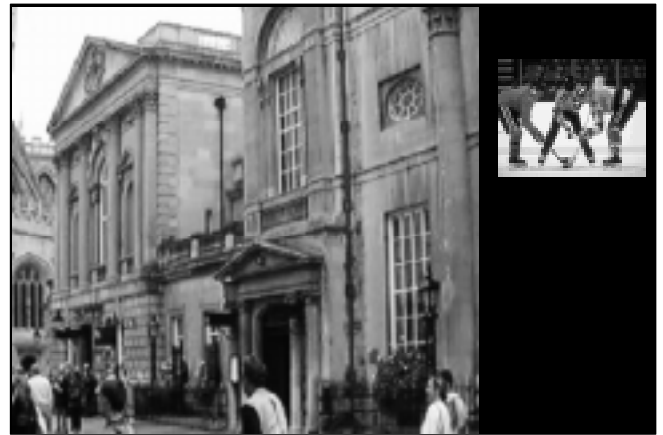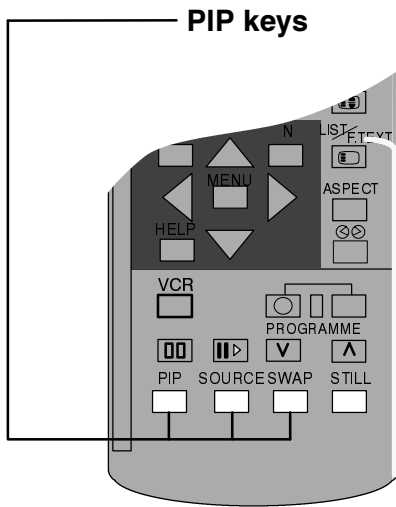


 Pressing the PIP key will display the PIP picture (shown in 4:3 Normal mode)

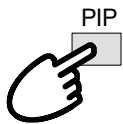


PIP

 The PIP key will switch the PIP function On and Off, PIP offers two picture viewing.

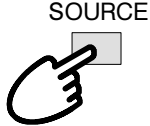

SOURCE

 The SOURCE key will allow you to choose whether you use the current TV screen or the input to AV1, AV2, AV3 or AV4 as the PIP picture.

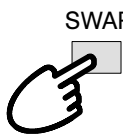

SWAP

The SWAP key will allow you to swap the PIP picture with the Main picture and vice-versa.



STILL


### STILL Control

 The STILL key allows you to freeze the picture at any time.

When using the STILL key with the PIP function press to freeze the Main picture, press again to release the Main picture and freeze the PIP picture, press again to release the PIP picture.



Pressing the PIP button a second time when viewing a widescreen picture will cause the Locate and Size reminder to be displayed. Simply choose the coloured button of the remote control if you wish to move or size the picture.

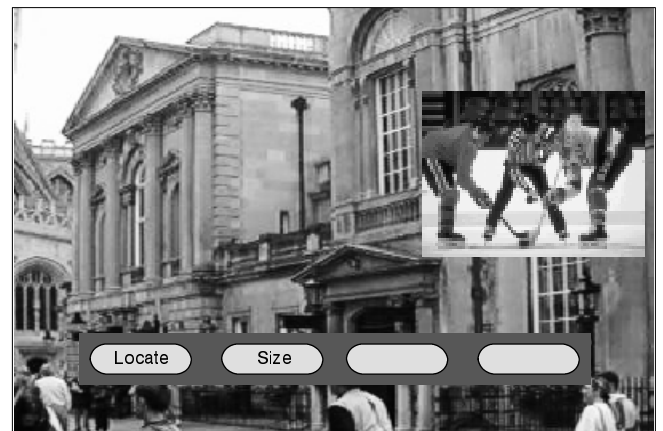


The PIP picture has been moved to an alternative position and made smaller by pressing the red key followed by the green key.

# ASPECT CONTROLS

The widescreen TV will allow you to enjoy viewing the picture at its maximum size, including widescreen 'cinema format' pictures.

ASPECT



 
WIDE / PANASONIC AUTO

---


4:3

---


Zoom

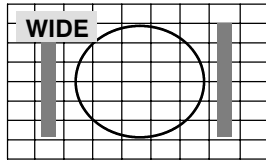


Some broadcasts are transmitted together with a wide screen identification signal (WSS). If the TV receives this signal then it will automatically switch to wide screen 16:9 mode, maximum display. The automatic widescreen switching depends upon reception conditions and the strength of the signal. If the signal is poor and therefore the WSS is weak then it is possible that the picture may not expand to full size and that the TV will display black areas around the edges.

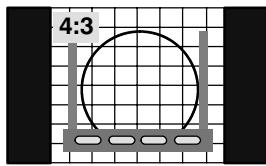 


A 4:3 picture set to 4:3

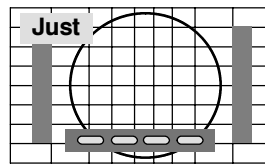 

A 4:3 picture switched to Just mode


 


 If the original source signal was a standard 4:3 aspect ratio then you might prefer to view in its original size; the red and green keys, that appear, will allow you to choose between viewing at standard 4:3 size or expanded in **Just** mode.


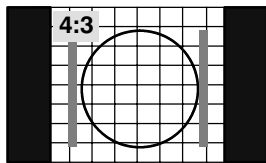


A 4:3 picture switched to its normal 4:3 viewing mode

  
**4:3** will display a 4:3 picture at its standard 4:3 size and can be selected if you wish to view in this format.

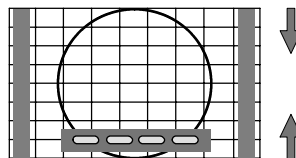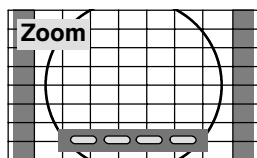

  The red key will reduce the picture size vertically

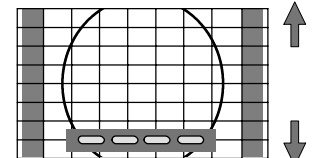


 
The green key will enlarge the picture vertically




In **Zoom** mode the size of the visible picture may vary according to the aspect ratio of the original picture. The red and green keys allow you to adjust the size.

# ASPECT CONTROLS
  
## Zoom

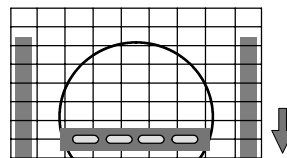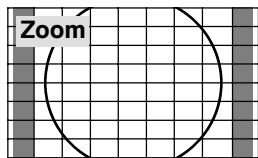





 
The yellow key will move the picture vertically downwards

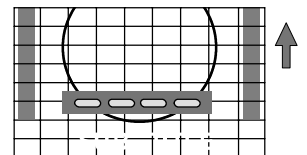

The blue key will move the picture vertically upwards


The picture can be moved vertically using the blue and yellow keys. The former adjustment is useful for viewing any sub-titles which may appear outside the picture.

## S-Zoom

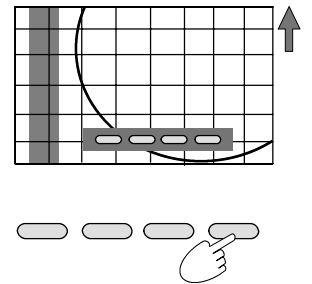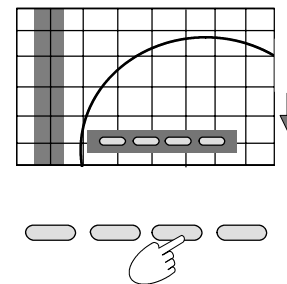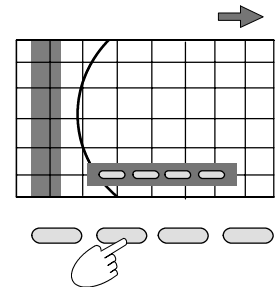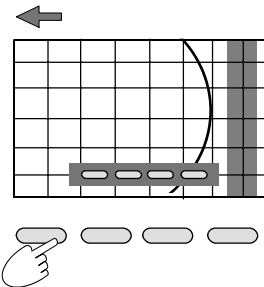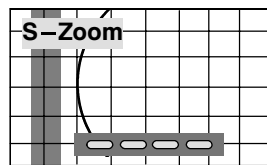     


In **S-Zoom** mode the red and green keys will allow you to move the picture horizontally. The yellow and blue keys will allow you to move the picture vertically.

## Full

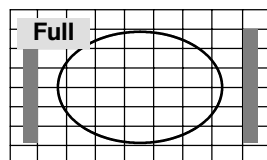 

**Full** will display the picture at its maximum size but with slight elongation.

## Just

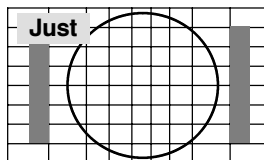 

**Just** mode will display a 4:3 picture at maximum size but with aspect correction applied to the centre of the screen so that elongation is only apparent at the left and right edges of the screen. The size of the picture will depend upon the original signal.


### NOTES:

 - The on screen selector keys that appear for some aspect functions will clear after a few seconds. If you subsequently wish to select an operation then press the Aspect key once more for the keys to reappear.
- The widescreen aspect ratios of different films and programmes can vary. If these are wider than a standard 16:9 aspect picture then a black band may be visible at the top and bottom of the screen.
- If, in WIDE mode, you experience problems with the screen display size when playing back widescreen format recordings from your VCR then it is possible that the tracking control of your VCR requires adjustment (your VCR instruction book will contain adjustment details).

# MAIN MENU

All menus start from the Main menu (except AV select and Tuning procedure (Front panel)).  
You will also find the basic picture quality adjustments within this menu.

Open the Main menu

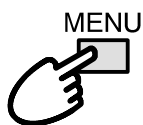





Move to your choice



Access your choice



    Increase or decrease levels or move to the Picture, Sound or Setup menus.

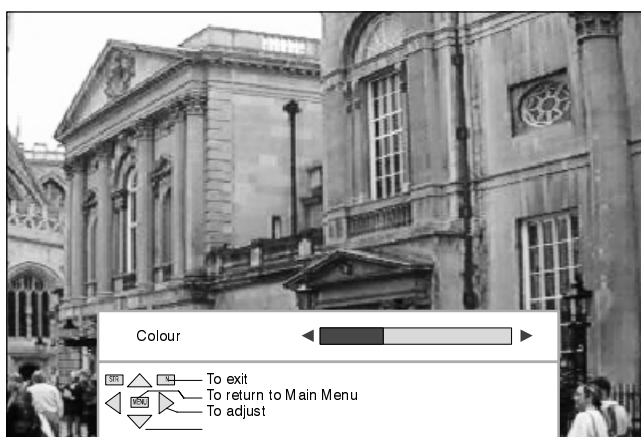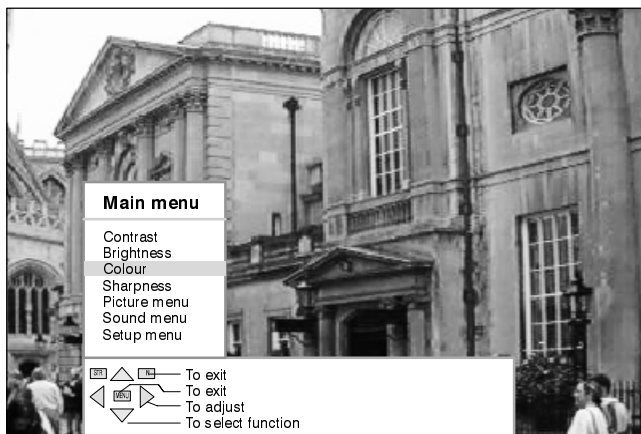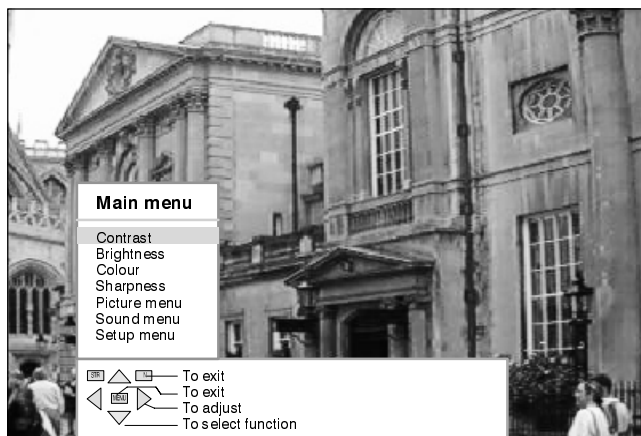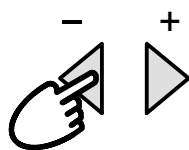

## Contrast

The Contrast level of the TV can be adjusted, to suit the lighting conditions of the room, as necessary.

## Brightness

The Brightness level can be adjusted to suit your viewing conditions.

## Colour

The Colour level can be adjusted to your own preference.

## Sharpness

The picture can be softened or sharpened to your own preference.

## Tint

The Tint adjustment will only appear as a menu item if you have an NTSC signal source connected to the TV and will allow adjustment of the hue.

## Picture Menu

 
Choosing the Picture menu will take you to that menu.

## Sound Menu

Choosing the Sound menu will take you to that menu and allow adjustments to the sound quality.

## Setup Menu

Choosing the Setup menu will lead to the Setup menu for various feature adjustments.




To close Main menu

# PICTURE MENU

 The Picture menu will allow you to set your personal preferences for all aspects of picture quality

Open the Main menu

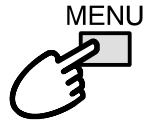

Move to Picture menu



 
 
Access Picture menu



Move to your choice



Choose from options

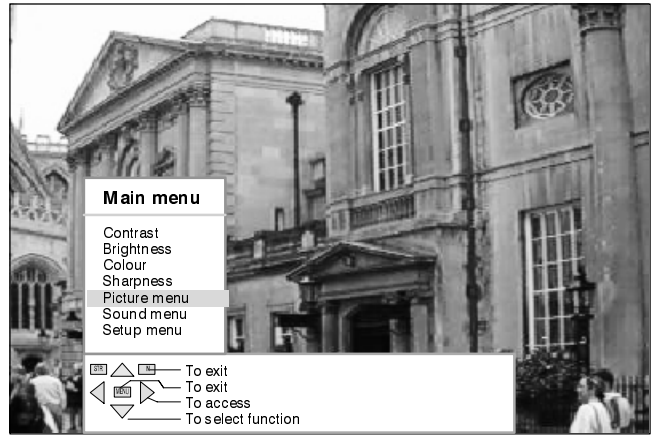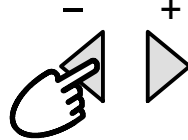



AI automatically analyses the incoming picture and processes it to give improved contrast, optimum field of depth and vivid colour tones.



P-NR will automatically reduce unwanted picture interference.



  You will normally find that Flicker is best set to ON to reduce any slight picture movement. However, it is possible that some occasional broadcasts may benefit by selecting the OFF position.

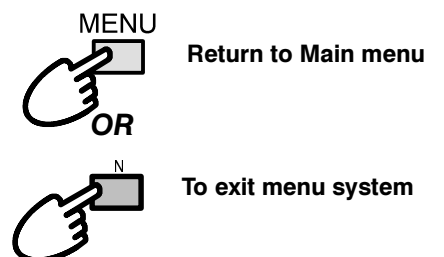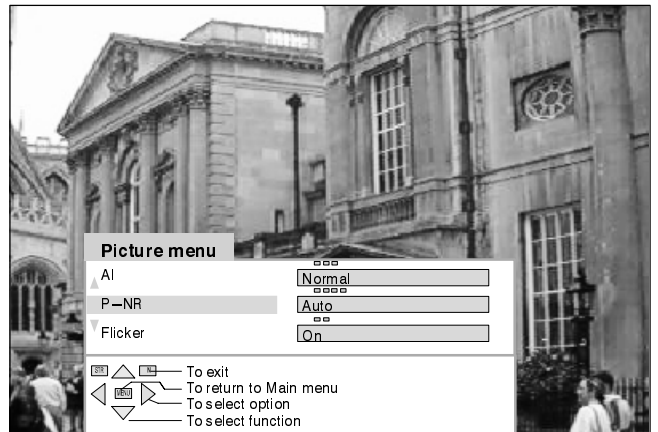

# SOUND MENU

The Sound menu will allow you to set your personal preferences for all aspects of sound quality

 
 
 
Open the Main menu

Move to Sound menu

Access Sound menu

Move to your choice

Increase or decrease levels, choose from options or access the menus

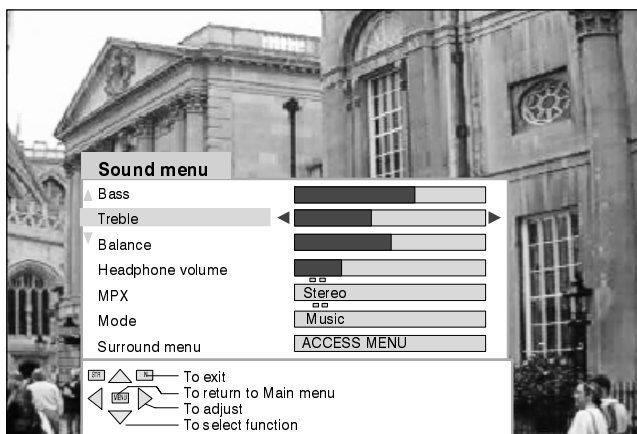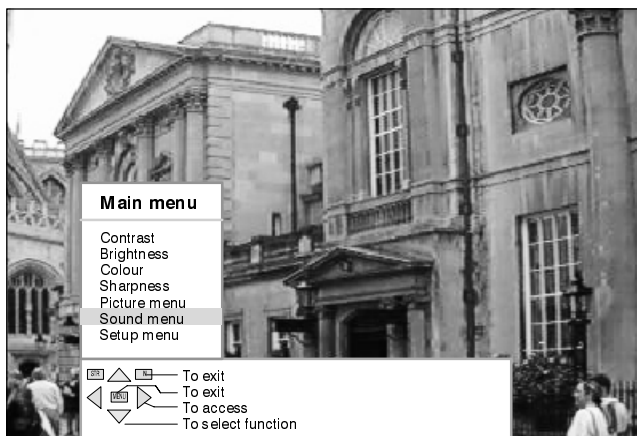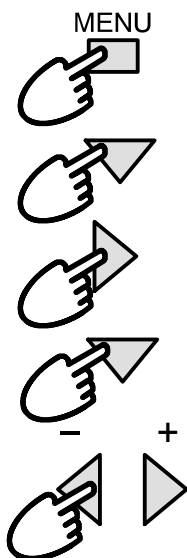


Bass adjustment will emphasise the lower, deeper frequencies and can be increased or decreased.



Treble adjustment will emphasise the sharper, higher frequencies and can be increased or decreased.



 (Only with Surround Off – see page 26). Balance affects the levels of sound between the left and right speakers. Adjustment can be made so that the level from between speakers will suit your listening position.

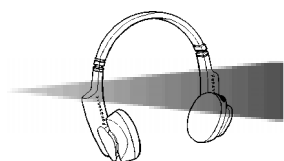

The headphone volume can be adjusted independently of the TV speakers so that everyone can enjoy listening at their own comfort level.

**MPX**

MPX will usually be set to Stereo to provide the best reproduction, however if reception deteriorates or if the service is not available then it is advisable to switch to Mono. Mono (M1) and (M2) can also be selected if signals are being transmitted.

**Mode**

 
(Only with Surround Off – see page 26). The sound can be improved during Music or Speech mode by selecting the appropriate function.

**Note :**

When in Speech mode an additional internal centre speaker is automatically activated to enhance the sound quality.

**Surround Menu**


Leads to the Surround menu for Dolby Pro Logic and simulated modes of operation, as described on Pages 25 to 27.

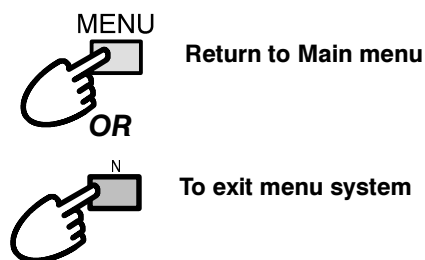

# SETUP MENU

The Setup menu provides access to various advanced features and also to the Tuning menu

 Open the Main menu

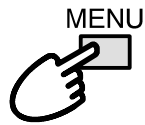

Move to Setup menu



 
 
Access Setup menu



Move to your choice



Choose from options or access the Tuning or OSD language menus.

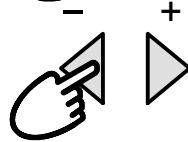


## AV2 out

AV2 offers you a choice of signals to send to the AV2 SCART socket. You can choose from the current **TV** programme position, the signal entering **AV1/AV3/AV4** or **Monitor** – the picture displayed on screen.



## Off timer

 Off timer will switch the TV off within a preset time which you can choose from between 0 to 90 minutes in 15 minute intervals.

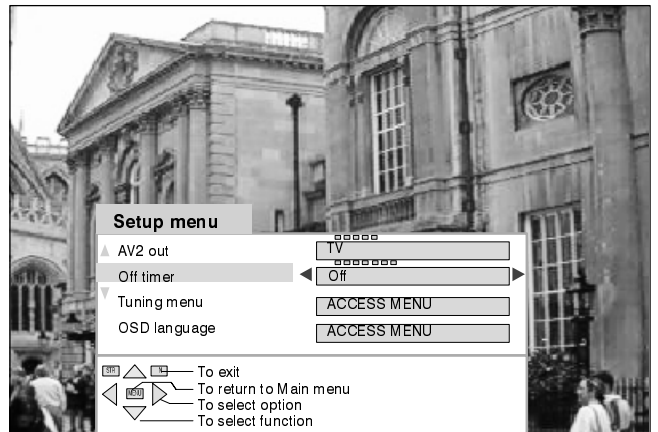


## Tuning menu

The Tuning menu provides an entry to many other features including Programme edit, ATP, Fine tuning, Colour system, and Text language.

## OSD language

 The OSD language menu will allow you to change the language used for all on screen menus.

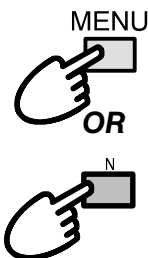


Return to Main menu

To exit menu system

# TUNING MENU

 The Tuning menu provides access to both manual and automatic tuning menus

Open the Main menu

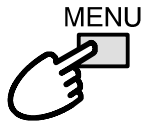

Move to Setup menu



Access Setup menu



Move to Tuning menu



 
 
Access Tuning menu



Move to your choice



Increase or decrease levels, choose from options or access the menus

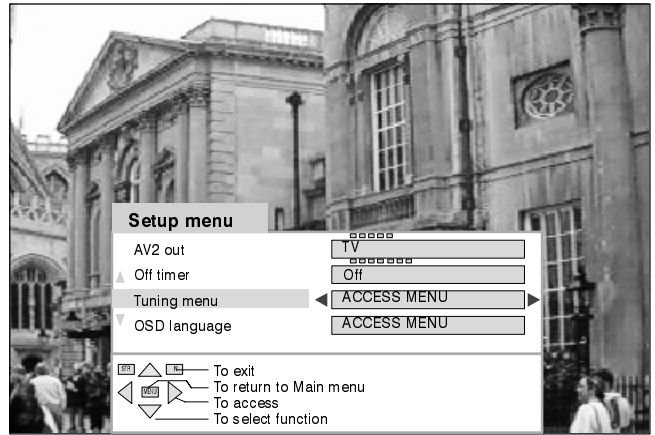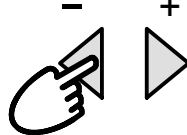

## Programme edit

 
Accessing Programme edit menu will allow stations to be moved, added, deleted, named, locked and provides access to the TV –system. Further details on page 16.

## Auto setup

The Auto setup menu allows you to automatically retune the TV. Further details on page 21.

## Manual tuning

The Manual tuning menu allows individual programme positions to be tuned manually. Further details on page 22.

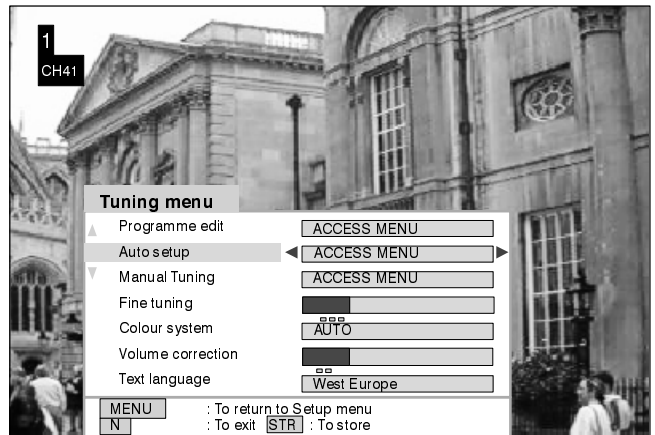

## Fine tuning

Stations can be tuned finely using the Fine tuning adjustment.

## Colour system



The Colour system menu allows you to decide the correct choice of transmission standard.

 
## Volume correction

Volume correction allows you to adjust the volume level of individual stations.

## Text language



You can choose either West Europe or East Europe to provide the most suitable characters to be used for your Teletext viewing.

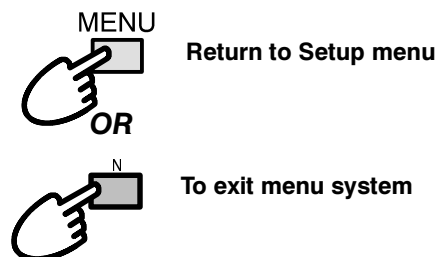




# TUNING MENU – Programme edit

The Programme edit menu allows you to delete, add, move, retune, name and lock channels and to change the TV-system

 Open the Main menu

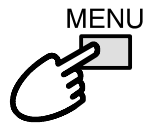

Move to Setup menu



 
Access Setup menu



Move to Tuning menu




Access Tuning menu

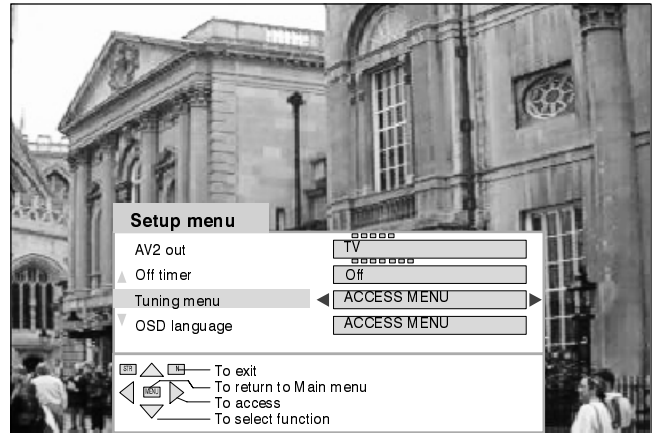

Move to Programme edit



 Access Programme edit

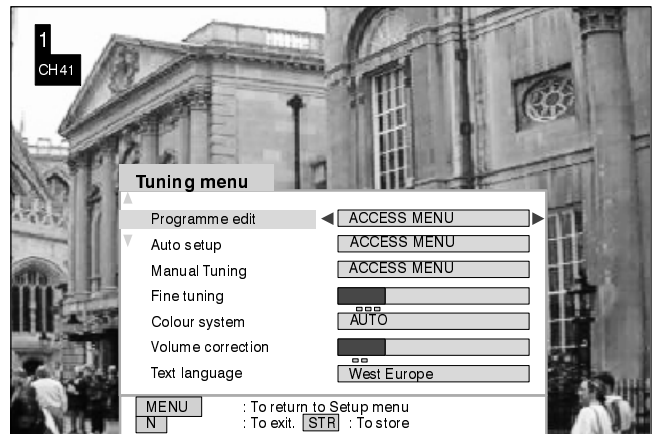

## To delete an unwanted programme position

 
Choose the programme position




Press the red key on remote control



Press STR to delete

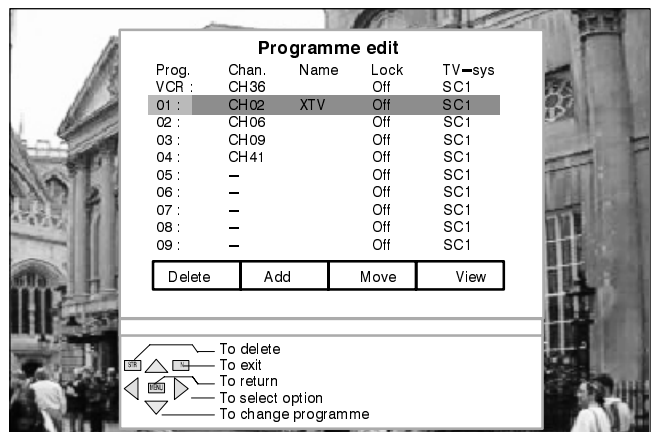

 If you have completed changes to the Programme edit menu then

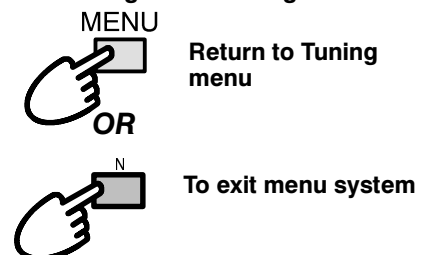

# TUNING MENU – Programme edit

## To add a programme position

 
Choose the programme position




Press the green key




Press STR to add



 This blank programme can then be tuned, named, locked and be allocated your choice of TV-system

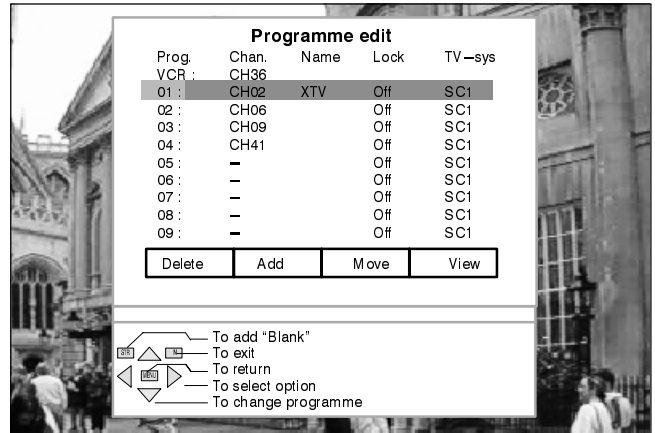


 If you have completed changes to the Programme edit menu then

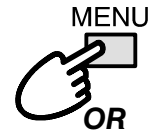

Return to Tuning menu

 OR



To exit menu system

## To move a programme to another position

 
Choose the programme position



Press the yellow key on remote control





Choose new position

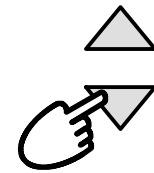


To action new position



  Press STR to store

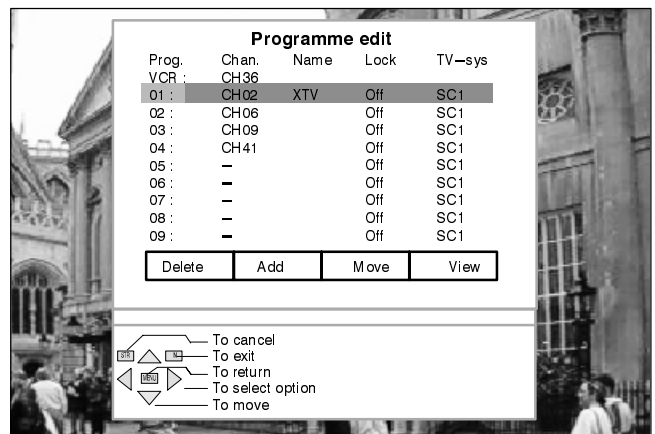


 If you have completed changes to the Programme edit menu then

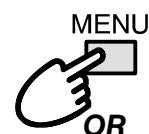

Return to Tuning menu

 OR



To exit menu system


# TUNING MENU – Programme edit
 
## To view a programme position




Choose the programme position



Press the blue key on remote control

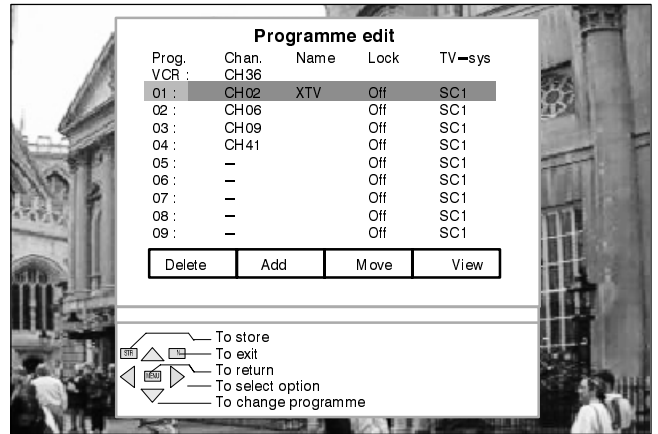

   The screen will return to Programme edit after a few seconds

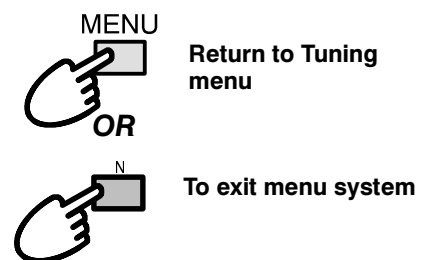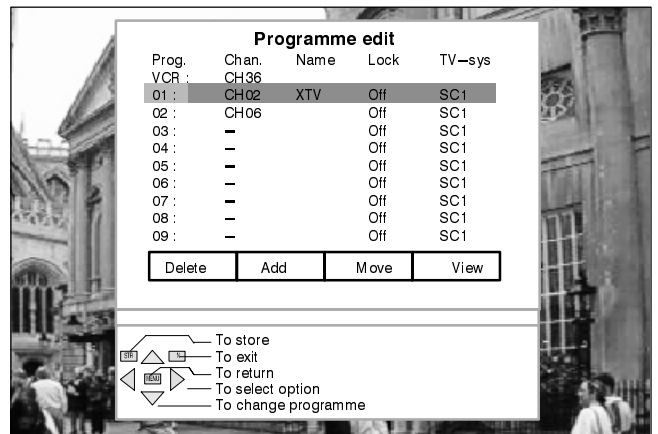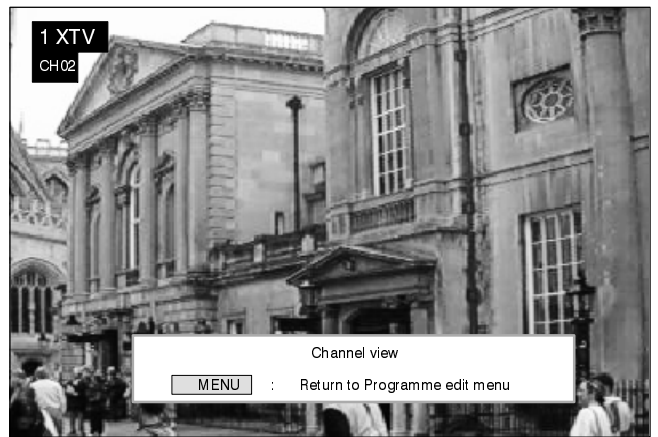


# TUNING MENU – Programme edit

## To tune a programme position

Choose the programme position




 
Move to the channel setting

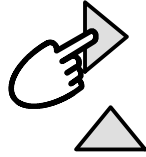


Increase or decrease channel number



  Press STR to store

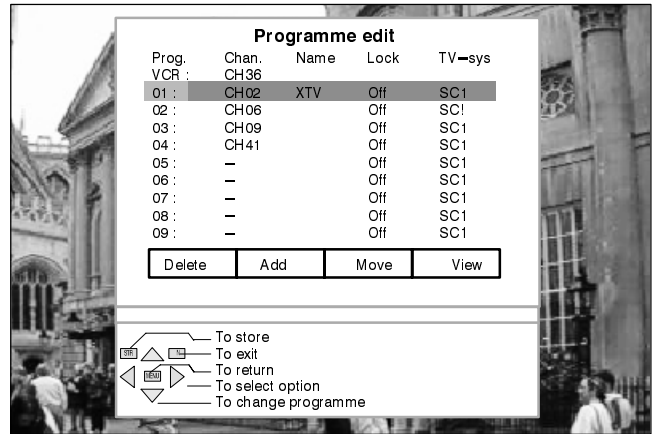


 If you have completed changes to the Programme edit menu then

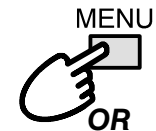

Return to Tuning menu

 OR



To exit menu system

## To rename a programme position

Choose the programme position



 
Move to the Name position



Choose the new character





Move to the next character position

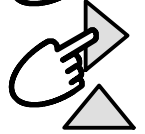


Continue until renaming is completed



  Press STR to store

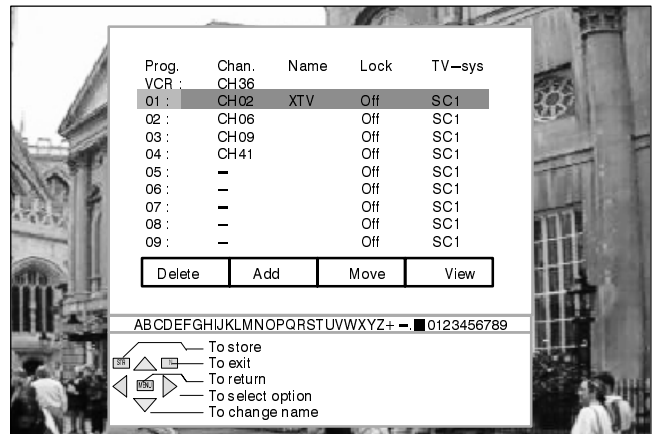


 If you have completed changes to the Programme edit menu then

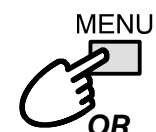

Return to Tuning menu

 OR



To exit menu system

# TUNING MENU – Programme edit

## To lock a programme position to prevent access

Choose the programme position



 
 
Move to the lock key




Choose between lock on or lock off



Press STR to store

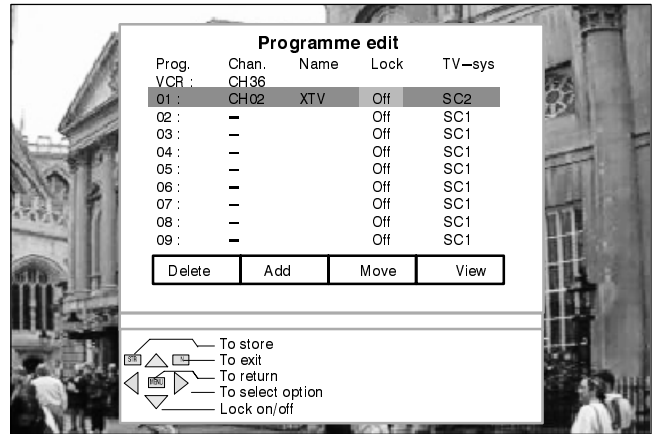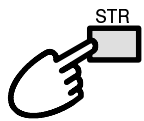

 If you have completed changes to the Programme edit menu then

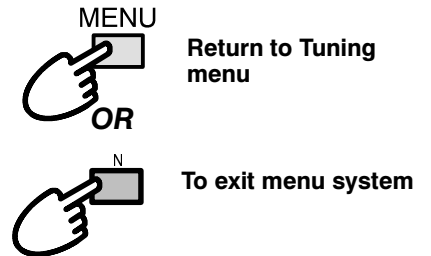


## To change the TV-system for a programme position

Choose the programme position



 
Move to the TV-sys position

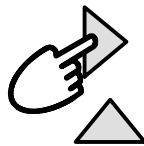


Choose the required sound system



 Press STR to store

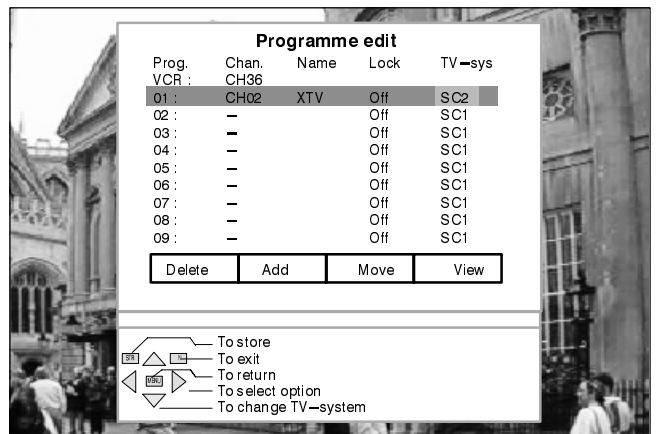

 If you have completed changes to the Programme edit menu then

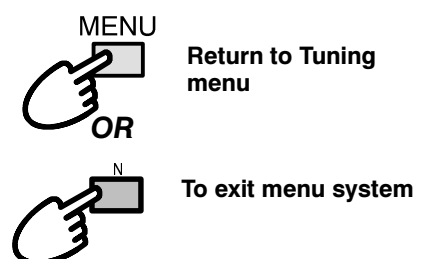


\*SC1=PAL B,G,H / SECAM B,G  
 SC2=PAL I  
 SC3=PAL D,K / SECAM D,K  
 F=SECAM L/L'

# TUNING MENU – Auto setup (ATP)

 The Auto setup menu will allow you to automatically retune the TV to your local stations.  
It is useful if you move to a different region.

Open the Main menu

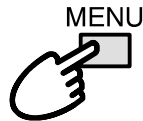

Move to Setup menu



Access Setup menu



Move to the Tuning menu



Access Tuning menu



Move to Auto setup menu



Access Auto setup menu



Press to start Auto setup (ATP)



Select your country



Press to start Auto setup (ATP)

 


The TV will search for, locate and order your local stations.





Press Menu to return



Press N to exit

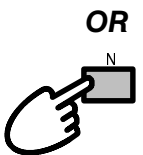

    Once this operation is completed the TV will display programme position 1.

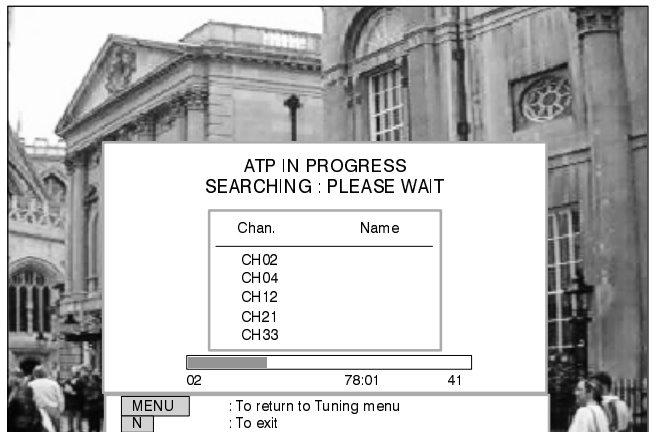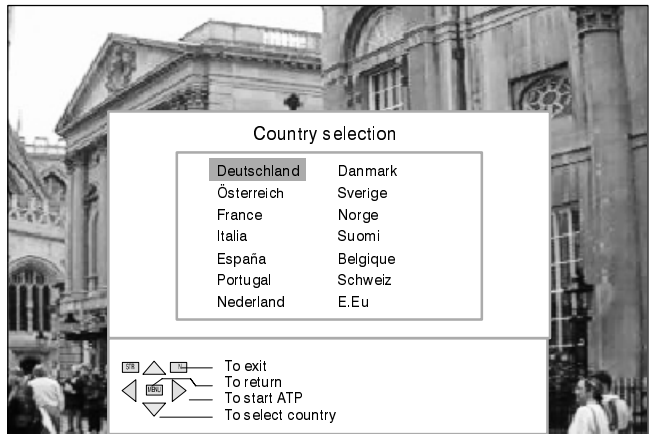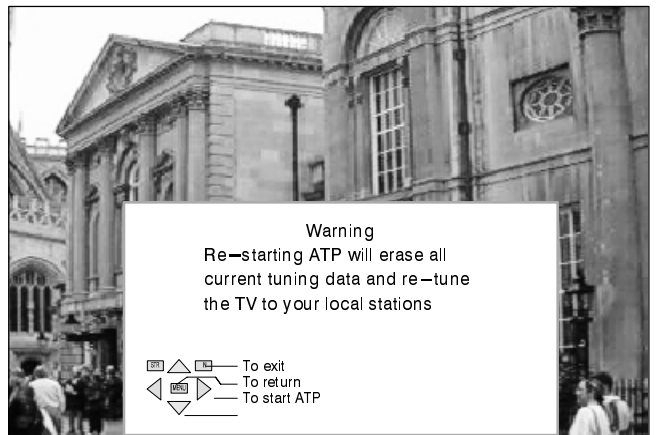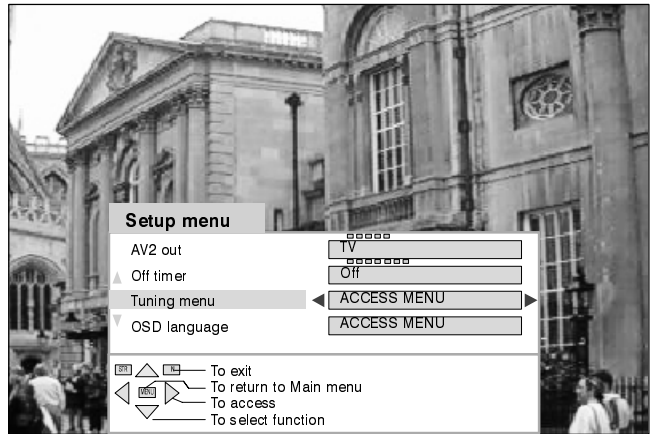

# TUNING MENU – Manual tuning

Manual tuning of the Programme positions is available either from the on screen display menu or from the front panel controls

## Manual tuning menu

Open the Main menu

Move to Setup menu

Access Setup menu

Move to Tuning menu

Access Tuning menu

 
 
 
Move to Manual tuning

Access Manual tuning

Select the programme position

Start tuning

Press STR to store

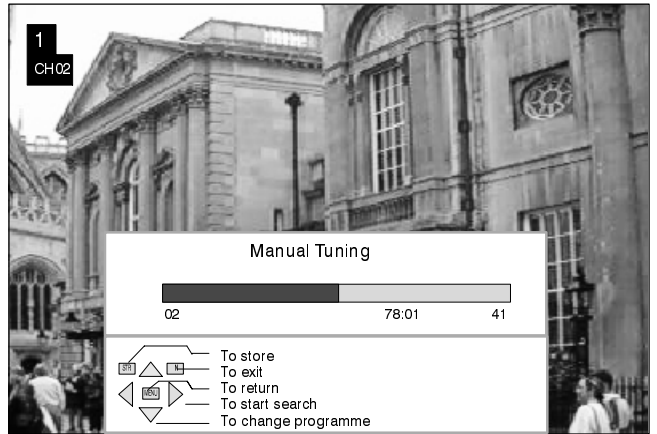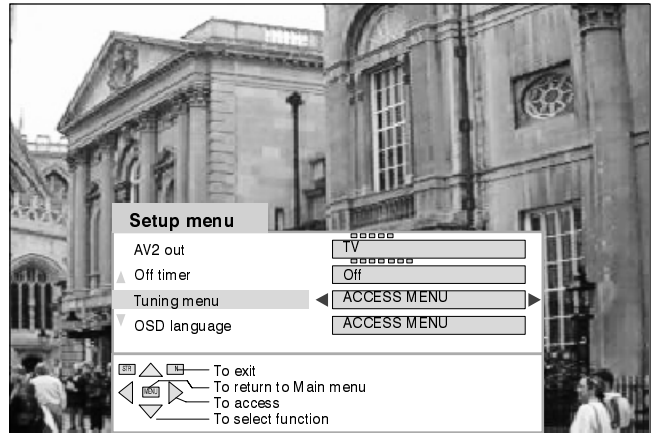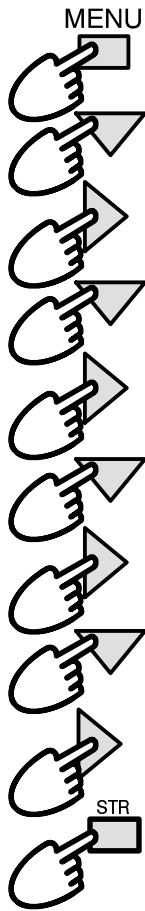

## Manual tuning (Front panel)

Press the F button (Front panel) until the Tuning menu is reached

 
 
 
Press the - or + button to access Tuning menu

Press the TV/AV button to change to the required programme position

Press the - or + button to start the tuning search

Press STR to store changes


Press the F button to exit

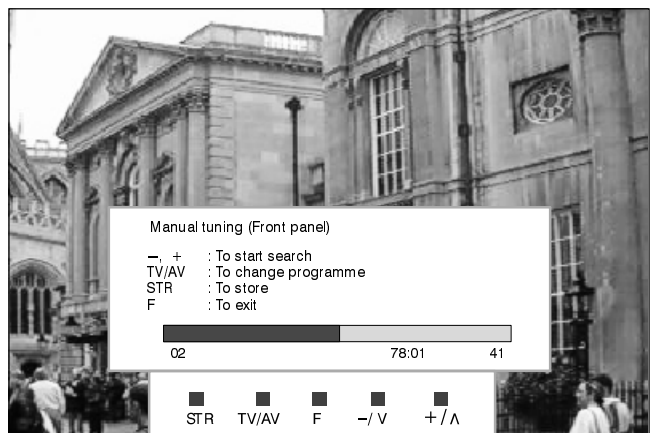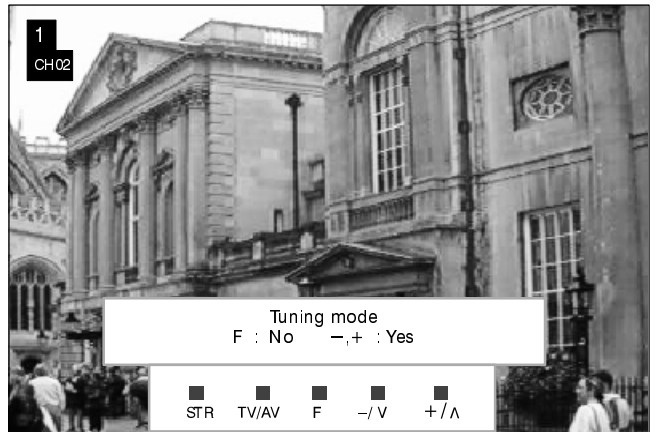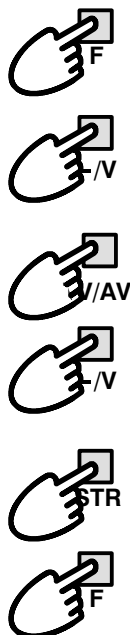

# OSD LANGUAGE

When you first installed the TV the on screen display language was set according to your choice of country. If you wish to use a different language then it can be chosen from the OSD language menu.

 Open the Main menu

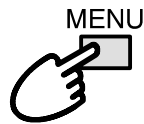


Move to the Setup menu




Access Setup menu



 Move to the OSD language menu

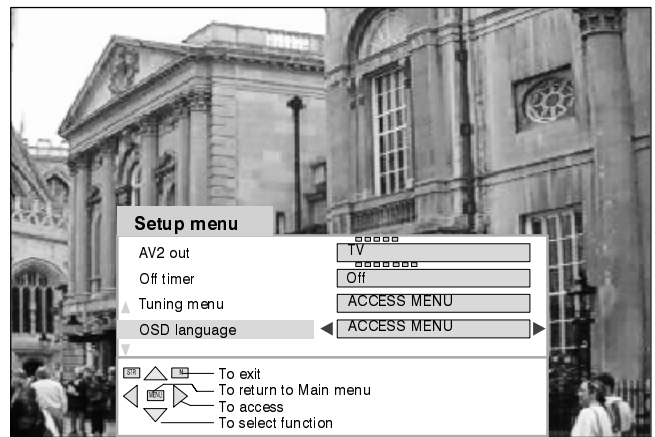


Access your choice

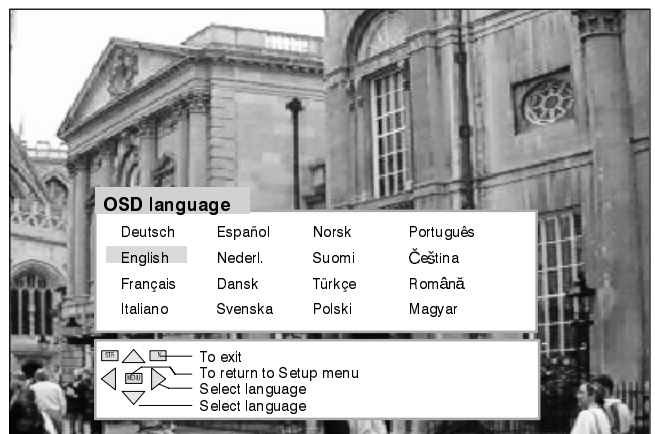 

MENU



 Return to Setup menu




To exit menu system



# AV SELECT and SETUP

 The AV Select menu will allow you to choose which AV source to view.

Press the TV/AV key  
(remote control or TV)

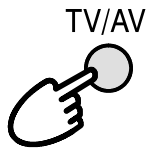


Press the appropriate coloured  
key of remote control (whilst the  
options remain on screen)




Press the green or yellow keys  
again to select S-Video input

 You may wish to make  
adjustments to the Setup or Sound  
menus

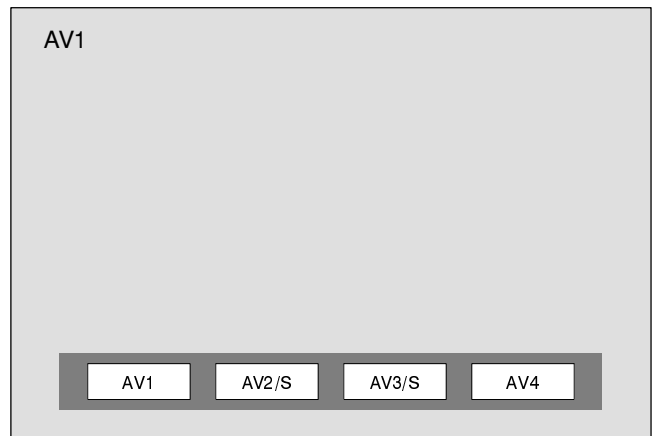

Open the Main menu

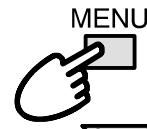 

Move to Setup menu



 
Access Setup menu




Move to your choice



Access adjustments or options

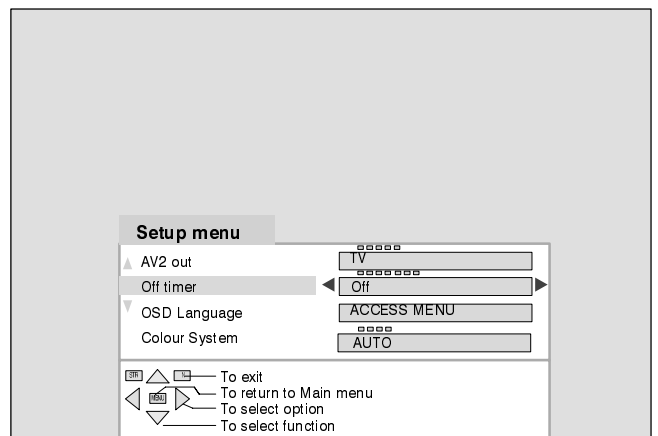

Open the Main menu

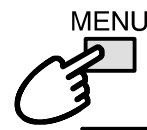 

Move to Sound menu



 
 
 
Access Sound menu



Move to your choice



Access adjustments or options

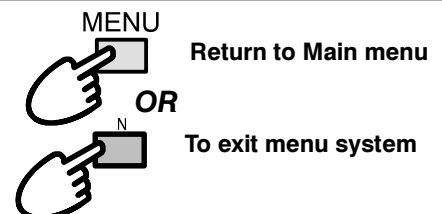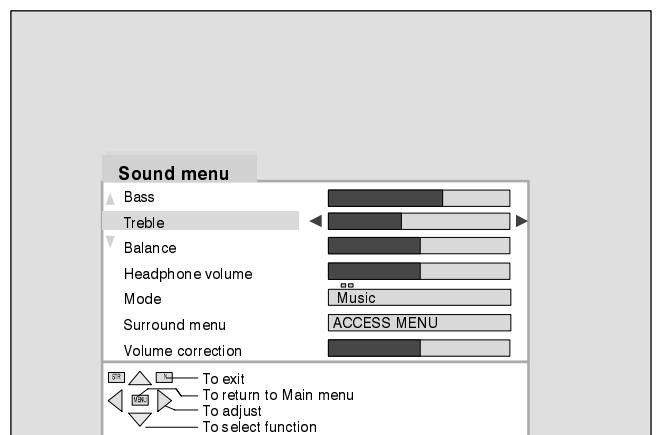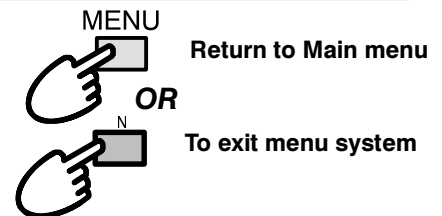

# SURROUND MENU

Normally stereo reproduction uses left and right speakers, but **Dolby Pro Logic Surround** also uses a centre channel and a rear channel. The centre channel sharpens sound perspective and dialogue clarity whilst the rear channel is used to immerse the viewer in ambience and special effects.

To use **Dolby Pro Logic Surround** when receiving television programmes that have been produced with the **Dolby Pro Logic Surround** information, you must be able to receive NICAM Stereo transmissions, if NICAM Stereo transmissions are not transmitted in your area then the **Dolby Pro Logic Surround** information will not be present and it will not be possible to use Pro Logic operation (unless you are playing back from a stereo VCR).

**Dolby Pro Logic Surround** will operate with videos, laser discs and TV programmes that bear the **Dolby Surround** logo :



MENU

Open the Main menu

Move to Sound menu

Access Sound menu

1. Move to Bass setting  
Adjust to centre position

 
 
 
 
2. Move to Treble Setting  
Adjust to centre position

Move to Surround menu

Access Surround menu

Move to your choice

Choose from options or access the speaker level menu.

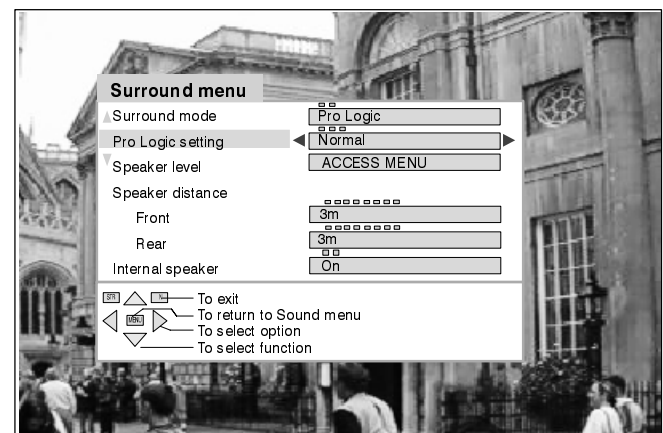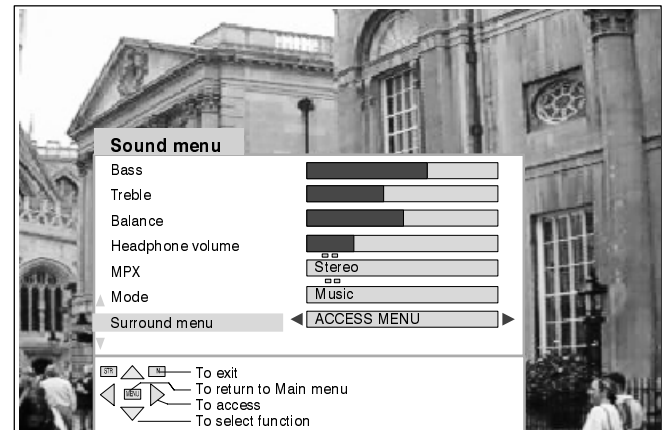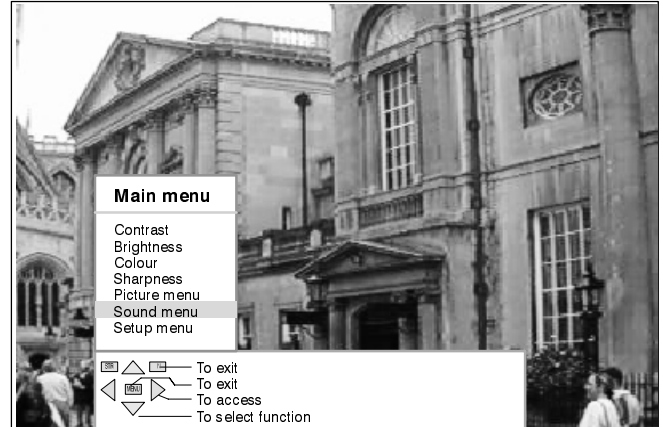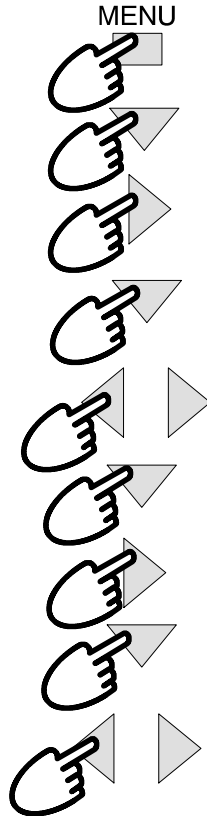

**Surround mode**



**Pro Logic /  
Simulated setting**

**Speaker  
level**

Choosing Pro Logic allows selection of Normal, Phantom or 3 Stereo modes, as described on Page 26.

Choosing Simulated allows selection of Disco, Movie or Stadium modes, as described on Page 27.

Allows adjustment of the output levels for each channel, as described on Page 27.

**Speaker distance  
Front / Rear**

 


Allows setting of the distance from the listening position to the front and rear speakers. If the rear surround speakers are closer to you than the centre speaker, you may hear dialogue "leakage" from the rear surround speakers. It may be necessary to reduce the output level of the rear channel to rectify this phenomenon.



**Internal Speaker**

Normally set to **On**, but, when separate external amplified front speakers are connected, then the internal speakers can be switched **Off**. See Page 33 for connection details.

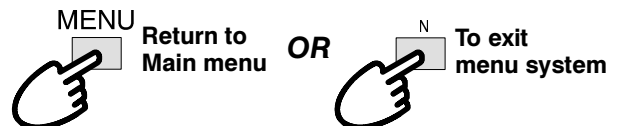


# PRO LOGIC MODE


Choosing Surround Pro Logic mode allows three possible modes of operation :

**Normal, Phantom or 3 Stereo.**
 
## Dolby Surround Pro Logic **Normal** mode

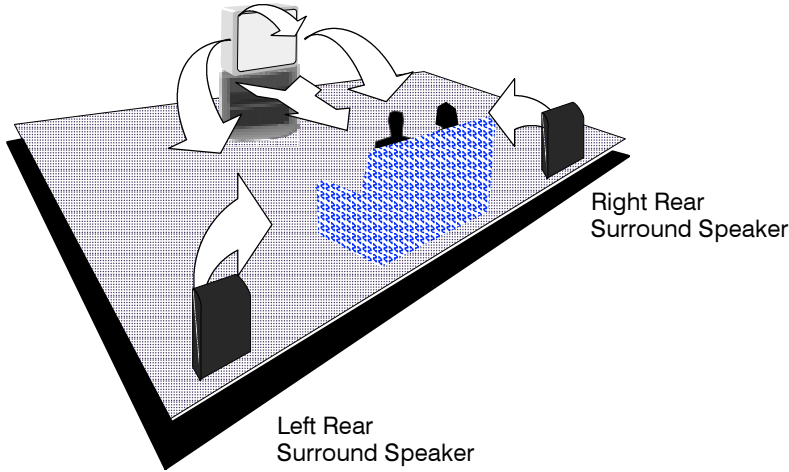


**NOTE**

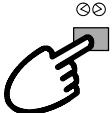


Pressing the Surround switch will switch the surround mode into 2 channel stereo only (and vice-versa)

When the Surround function is switched to the Off position, it will allow a Balance control as an extra option in the sound menu.

## Dolby Surround Pro Logic **Phantom** mode

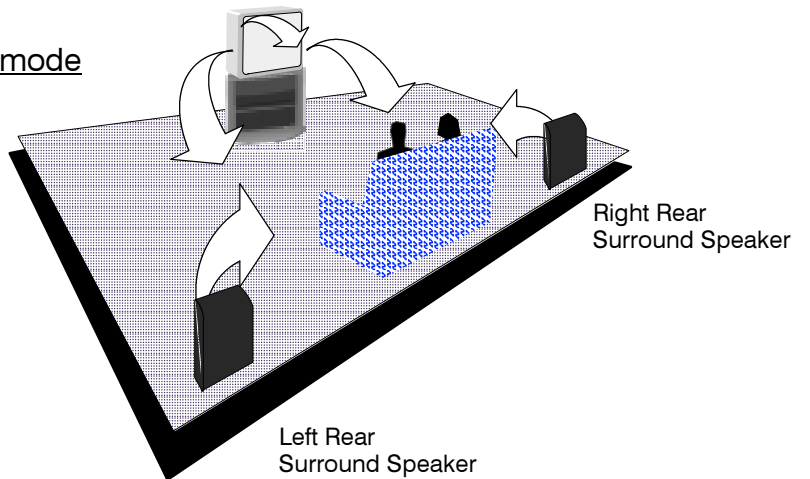 

## Dolby Surround Pro Logic **3 Stereo** mode

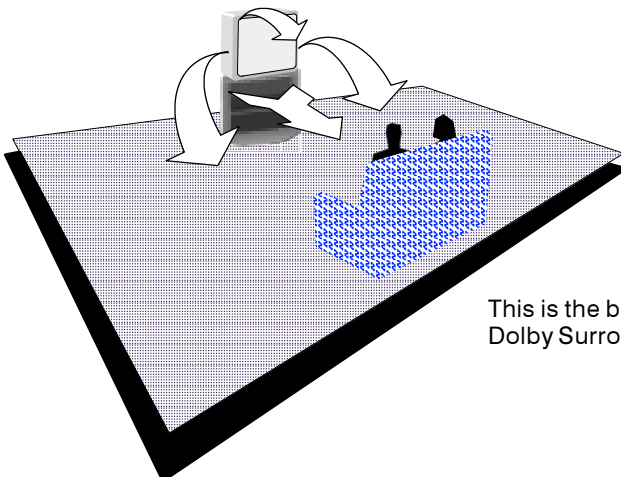 

This is the best mode to use if rear speakers are not connected. It offers Dolby Surround Pro Logic effect but without the rear surround speakers.

## SIMULATED MODE

 
Simulated surround modes allow various types of surround effects to be produced by mimicking both the direct sound, as heard by the audience, and the sound reflected back from the surrounding walls e.g. ceiling and floor space in a space such as a Disco.

Setting	Effect	Appropriate sources
Disco	A room so full of music that it seems to engulf the listener.	Disco, Dance or Jazz music.
Movie	Playback of software (films) <u>not</u> encoded with Dolby surround.	All movies or music software recorded without Dolby surround.
Stadium	A large sports stadium packed for a live game.	Any live sports occasion.

## SPEAKER LEVEL SETUP


The speaker output levels from the different options, e.g. Left, Centre, Right and Rear should be adjusted, from your usual listening position, to obtain the best results. The level can be set using either the TV sound or the provided test signal. When using external stereo equipment, it is advisable to set the speaker levels to the midpoint position.

The adjustments available will vary according to the mode chosen.

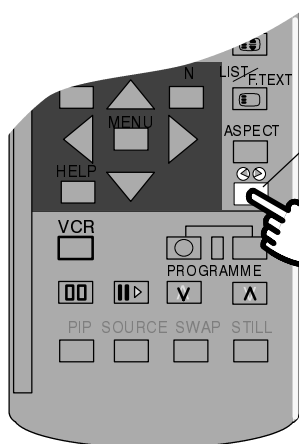

**Surround switch**  
switches test signal  
On / Off

 Speaker level setup shown in Pro Logic mode

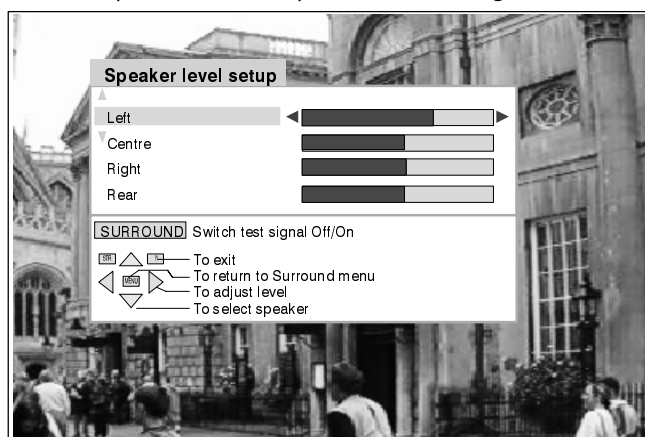

# TELETEXT OPERATION

- Teletext features may vary depending on the Broadcasting Companies and is only available if the channel selected is transmitting Teletext.
- This TV set is capable of receiving German TOP Teletext transmissions, it will automatically switch to them if they are being received. This will be indicated in the display area at the bottom of the screen.
- Pressing the **MENU** key whilst in Teletext operation will display the contrast function with a cyan bar, press ◀ ▶ to alter the setting as required.
- When in teletext mode, the volume may still be altered to the desired listening level.

## What is LIST mode?

In LIST mode, four differently coloured page numbers are situated at the bottom of the screen. Each of these numbers can be altered and stored in the TV's memory.

## What is FASTEXT?

In FASTEXT mode, four differently coloured subjects are situated at the bottom of the display. To access more information about one of these subjects, press the appropriately coloured button. This facility enables fast access to information of the subjects shown.

## What is TOP Teletext?

TOP stands for TABLE OF PAGES or 'Teletext without problems'

TOP Teletext is a new development to make the task of selecting the desired Teletext pages easier and shorter. In fact page access time is instantaneous, just press the button and the page appears.

 
## How does it work?

TOP uses the four coloured keys, Red, Green, Yellow and Blue to select the following information.

- The Red key will select the next available page DOWN.
- The Green key will select the next available page UP.
- The Yellow key selects pages within a group, each time the Yellow key is pressed the topic within the group will change, for example you could change from an Economic topic to a CULTURAL topic by using this key. With the Red and Green keys selection of the next available pages DOWN and UP is possible within the CULTURAL topic.
- A larger jump from group to block is possible by use of the Blue key, this could be a SPORT topic for example. Within this SPORT topic it is possible to select different groups such as Tennis, Football, Baseball etc, using the Red and Green keys the next available pages DOWN and UP can be selected.


## What are the advantages?

- Page selection at the touch of a single key.
- Easy to use step-by-step selection of the topical subject.
- Reduction of waiting time.
- If non-existent page number is entered, a question mark will appear at the bottom of the screen.
- Page status line at bottom of screen so you always know which key will take you to the desired information.




### TV / Teletext mode

 Press the **TV/TEXT** key.  
The screen will display the Teletext page.  
Press again when you wish to return to TV mode.

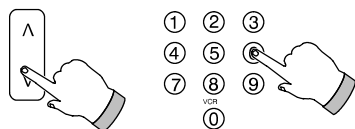

### Page Selection

 Pages can be selected in two ways :  
a. Press the Up / Down keys to increase or decrease the page number by one.  
b. By entering the page number, using 0 –9 on the remote control.




### Full / Top / Bottom

Press to expand the TOP half of the page.  
Press again to expand the BOTTOM half.  
Press again to return to normal (FULL) size.




### Reveal

 Press to reveal hidden words e.g. quiz page answers.  
Press again to hide.



### Red / Green / Yellow / Blue keys

 In TOP or FASTEXT mode these correspond to the differently coloured subjects.  
In LIST mode they correspond to the differently coloured page numbers.



### List Store

In LIST mode the four page numbers can be altered for channel positions 1 – 25 only.  
To do this, press one of the coloured keys and enter the new page number.  
Press and hold **STR**, the page numbers will change colour.

# TELETEXT OPERATION

It is not possible to change the programme position when in News flash, Update or Sub Coded Page Access operation.



## List / F.text (List / Top)

 
### When in List / Top operation

Press to change from TOP mode to LIST operation and vice versa.

### When in List / Fastext operation


Press to change from FASTEXT mode to LIST mode and vice versa.

In FASTEXT mode four differently coloured subjects are displayed at the bottom of the page. Press the appropriate coloured key to access more information about one of these subjects.



## Favourite Page (F.P.)

 Stores a favourite page in memory for instant recall. To store such a page, the TV must be in LIST mode, and the programme position must be from 1 – 25. Press the **BLUE** key, select the page number, then press **STR**. The page number is now stored. Press **F.P.** to recall this page.



## Display Cancel

Press **DISPLAY CANCEL** to view the TV picture whilst searching for a Teletext page. When found, the screen will display the page number at the top left.

Press **DISPLAY CANCEL** to view the page.

Press **TV / TEXT** to return to normal TV operation.

### News Flash

When a news flash page has been selected, press **DISPLAY CANCEL** to view the TV picture, when an update is received, it will be displayed on screen.

Press **DISPLAY CANCEL** to remove updated news.

Press **TV / TEXT** to return to normal TV operation.

 
### Update

Press **DISPLAY CANCEL** to see the update of information on certain pages.

When an update is received, the page number will be displayed at the top left of the screen.

Press **DISPLAY CANCEL** to view the page.


Press **TV / TEXT** to return to normal TV operation.

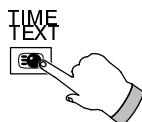

## Sub Coded Page Access

When teletext information exceeds more than one page, it may take some time for the automatic changing of the sub pages to reach the sub page you require. It is possible to enter your required sub page and continue watching the normal programme until the correct sub page is found.

 Select the required page number using keys 0 – 9.




Press **TIME TEXT**, \*\*\*\* will be displayed (top right of the screen).

Enter desired sub page number before the \*\*\*\* disappears.

To select page 6 enter 0, 0, 0 and 6.

If in LIST mode, a 'T' will appear in the current box at the bottom.

 Press **DISPLAY CANCEL** to view a normal TV programme.



When the page is available, press **DISPLAY CANCEL** to view the page.

To clear the page perform one of the following :

- Select a new page number.
- Press **TV/TEXT** to return to normal TV operation.




## Index







 
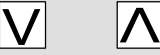

### When in LIST / TOP / FASTEXT operation

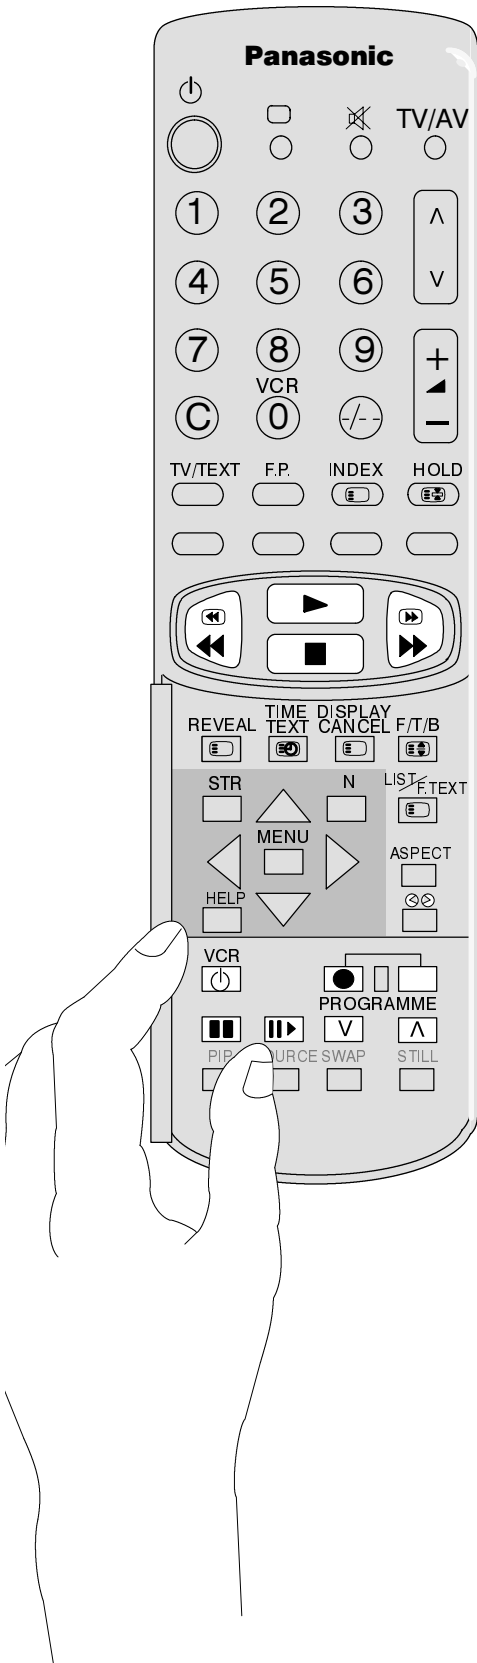Press **INDEX** to return to the main index page.

# VCR CONTROL

 
 
The Remote Control is capable of operating some functions of selected Panasonic VCRs, please consult your dealer for details. Some VCR have different functions, so to ensure compatibility, please refer to the VCR's instruction book.



<p>VCR</p> 	<p><b>Standby</b> Press to switch the VCR to standby mode. Press again to switch back on.</p>
	<p><b>Play</b> Press to playback the tape.</p>
	<p><b>Stop</b> Press to stop the tape.</p>
	<p><b>Fast Forward / Cue</b> Press to fast forward the tape. In Play mode, press to view the picture rapidly forward.</p>
	<p><b>Rewind / Review</b> Press to rewind the tape. In Play mode, press to view the picture in reverse rapidly.</p>
	<p><b>Pause / Still</b> Press in playback mode, the picture will pause.</p>
	<p><b>Still Advance</b> While in PAUSE / STILL mode, press to advance the picture one frame at a time.</p>
	<p><b>Programme Up / Down</b> Press to increase or decrease the VCR programme position by one.</p>
	<p><b>Record</b> Press these together to record.</p>

# AUDIO/VIDEO CONNECTIONS

## Front AV3 4 Pin S-Video, RCA Audio /Video and Headphone Sockets

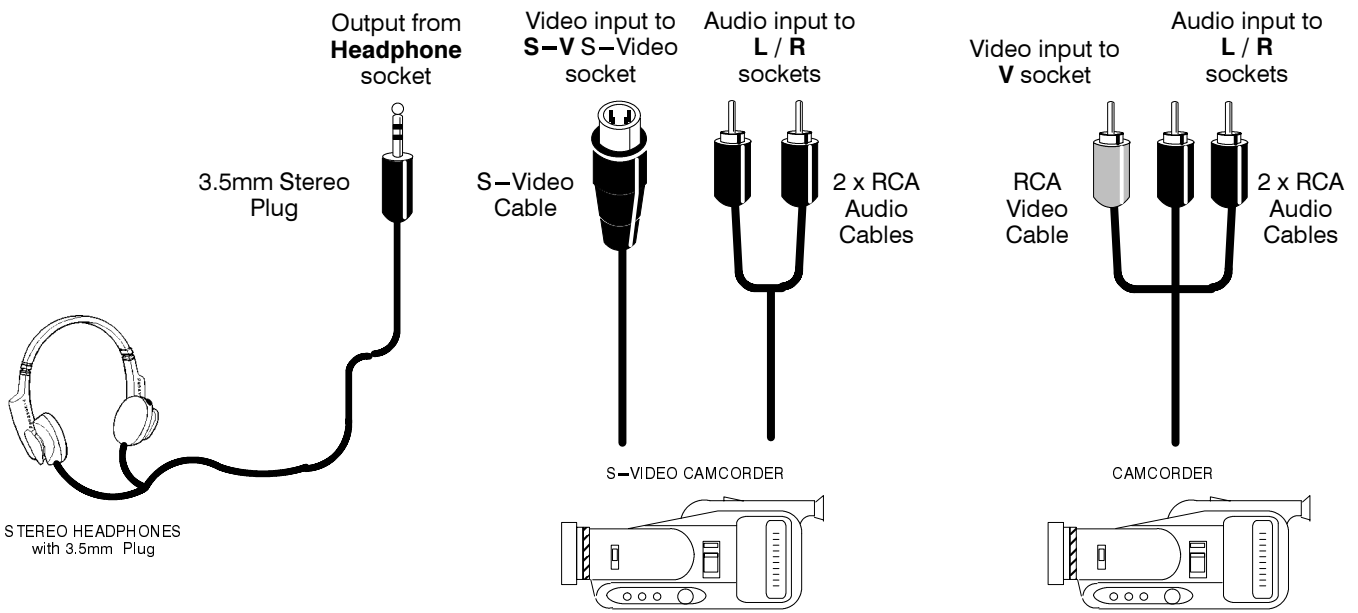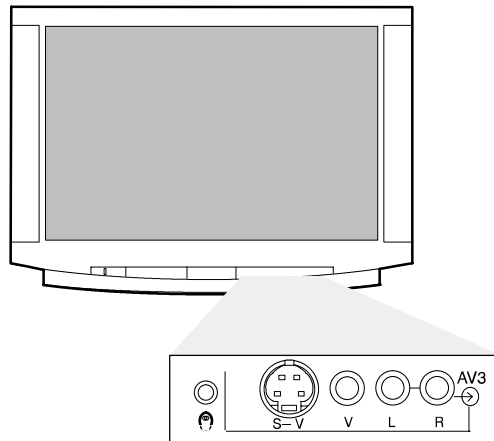


**Notes :**


Ancillary equipment and cables shown are not supplied with this TV set.

### ■ SCART and S-Video Terminal Information

 
#### AV1 and AV4 21 pin SCART terminals

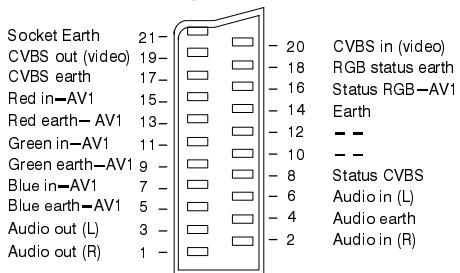

#### AV2 21 pin SCART terminal

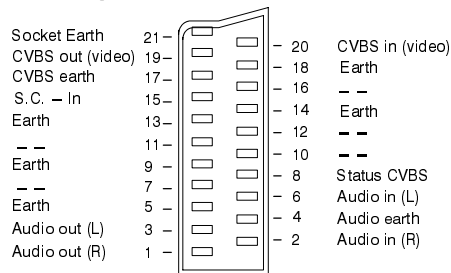 

#### S-Video 4 pin terminal

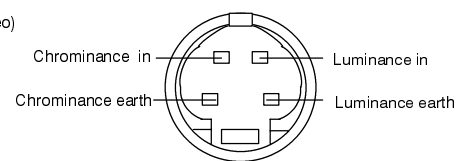 






Suitable inputs for **AV1** include RGB (Red/ Green/Blue).  
**AV4** does not have RGB input capability.

**AV2** - Pins 15 and 20 are dependent on AV2 S-VHS / VIDEO switching.



# AUDIO/VIDEO CONNECTIONS
     
## Rear AV1/AV2 (S)/AV4 21 Pin SCART and RCA Audio Out Terminals

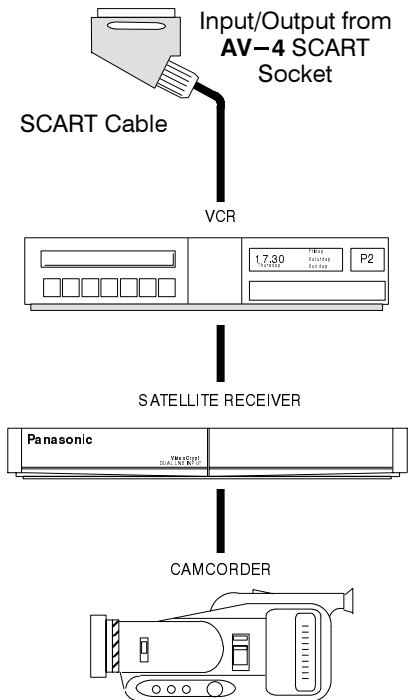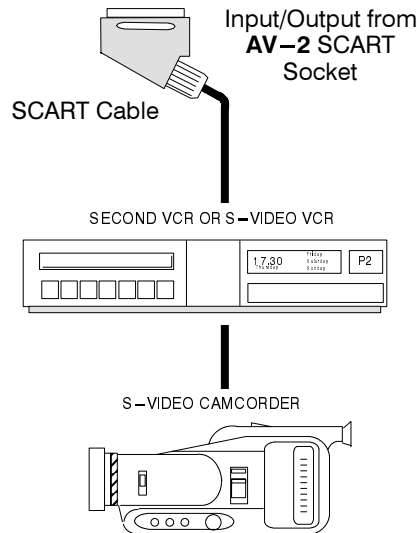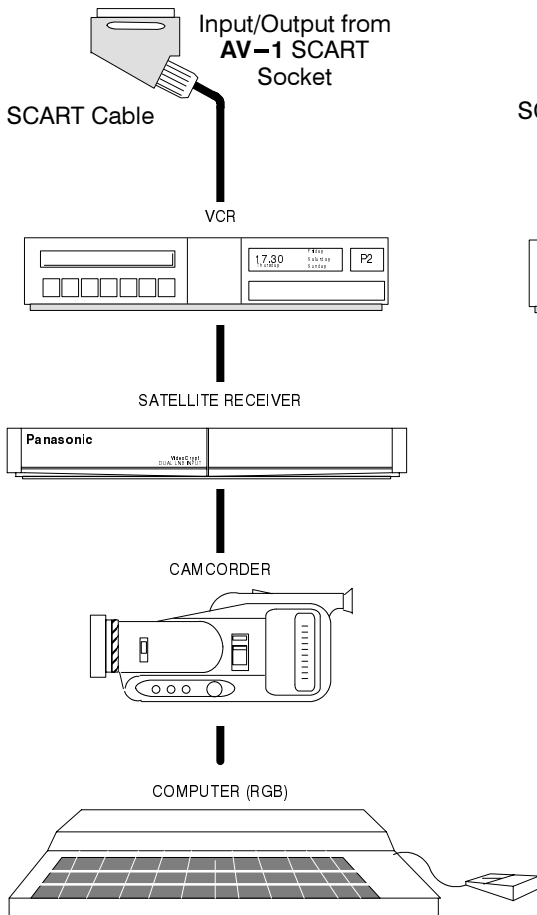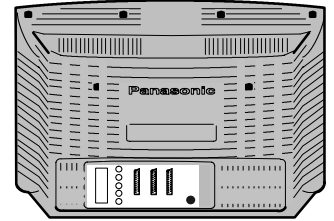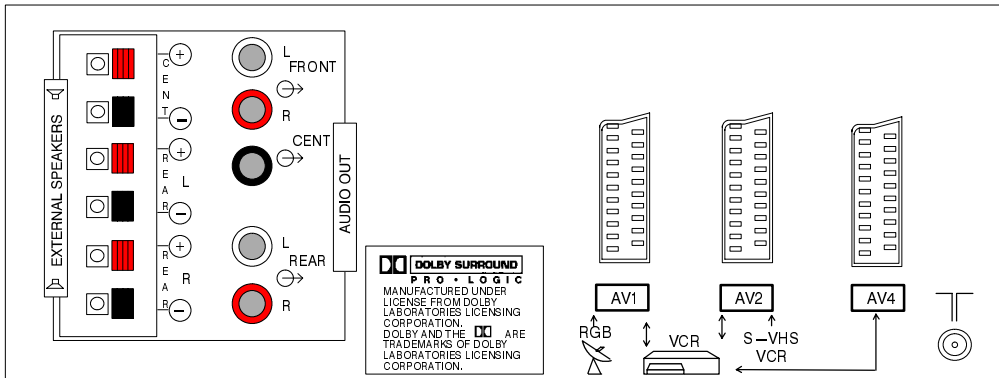

### NOTES:

Ancillary equipment and cables shown are not supplied with this TV set.

Do not connect a computer with TTL output (5V) to this set.

The AV2 21 pin terminal can also be used as an Output to Audio / Video Equipment (refer to page 14 for details).

 
 
## Audio out using external amplifiers and speakers

The **Audio Out** sockets on the rear of the TV allow you to create your own custom sound output system using additional external amplifiers and speakers. You may decide, for example, to use an external amplifier and speakers for the Front surround output.










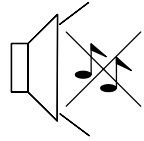
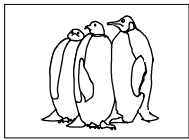
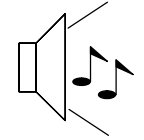
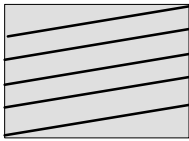
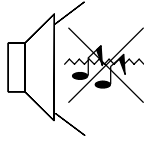

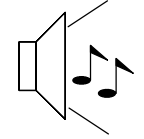
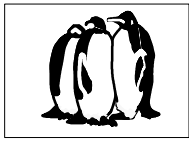
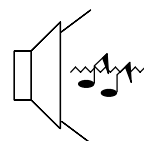
Utilising an existing stereo hi-fi system comprising one amplifier, connected to the FRONT DOLBY SURROUND OUT sockets and two speakers to allow separate front left and right channels.

The internal speaker can be switched off in the Surround menu.

External Front speakers connected to an additional amplifier

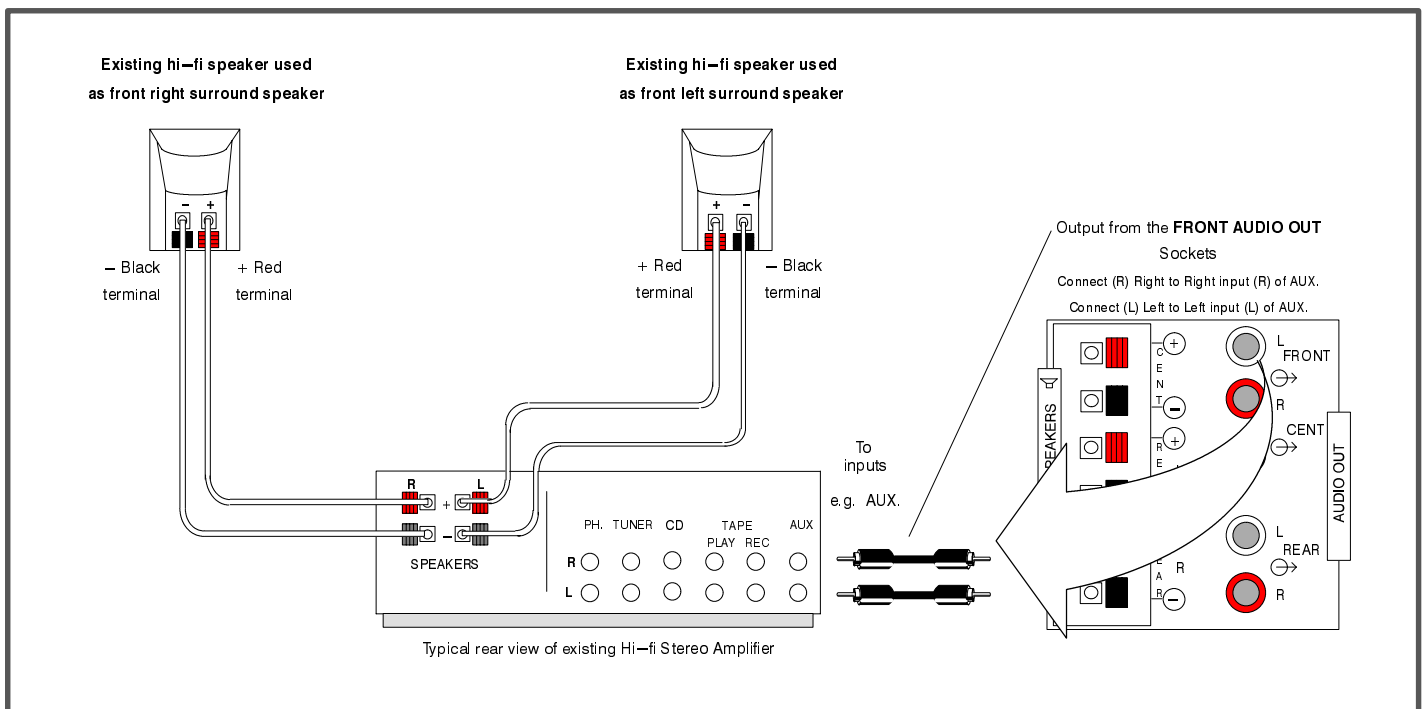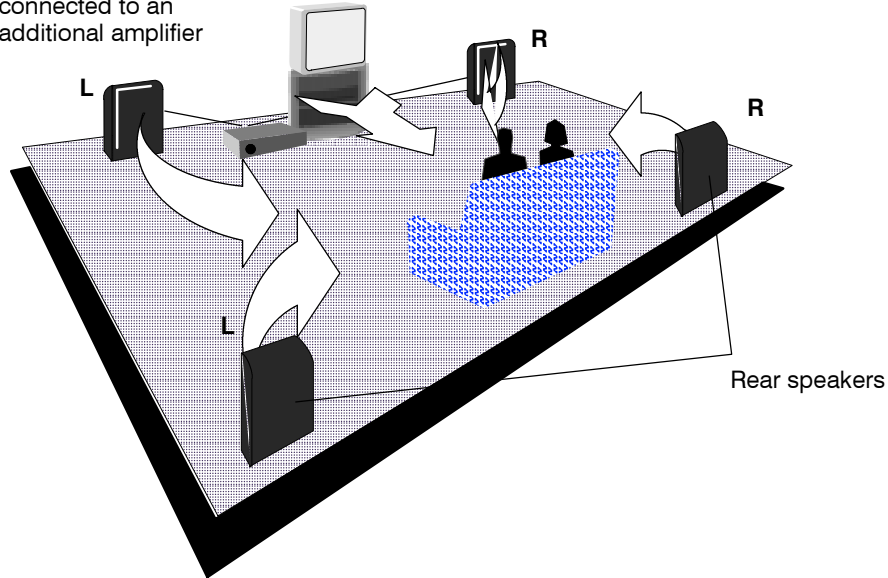

# TROUBLE-SHOOTING

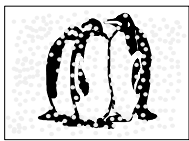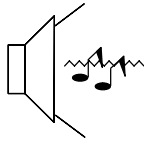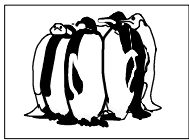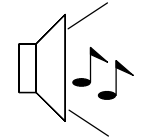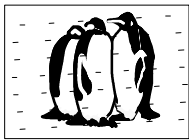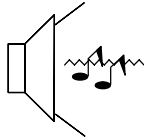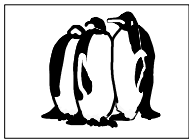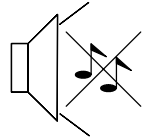Symptoms		Checks
Picture	Sound	
 <p>Snowy Picture</p>	 <p>Noisy Sound</p>	Aerial location, direction or connection
 <p>Multiple Images</p>	 <p>Normal Sound</p>	Aerial location, direction or connection
 <p>Interference</p>	 <p>Noisy Sound</p>	Electrical appliances Cars / Motorcycles Fluorescent lights
 <p>Normal Picture</p>	 <p>No Sound</p>	Volume level Sound mute switched on
 <p>No Picture</p>	 <p>No Sound</p>	TV set to AV mode Not plugged into A.C. outlet Not switched on Picture / Sound controls set at minimum levels Check if in standby mode
 <p>No Colour</p>	 <p>Normal Sound</p>	Colour controls set at minimum levels
 <p>Poor or Distorted Picture</p>	 <p>Weak or No Sound</p>	Retune Channel(s)
 <p>Coloured Patches</p>	 <p>Normal Sound</p>	Magnetic Interference from unshielded equipment Receiver moved while switched ON, switch TV off for 30 minutes.
 <p>Normal Picture</p>	 <p>Weak or distorted sound</p>	Sound reception may have deteriorated. Switch MPX setting (Sound menu) to Mono until reception improves.

## FOR YOUR GUIDANCE

### ■ Service

Before requesting service, please refer to the trouble—shooting guide on previous page to determine the symptoms. To obtain service please contact your local Panasonic dealer quoting the model number and serial number (both are located at the rear of the TV).

### ■ TV Games / Home Computers

Extended use of TV games or home computers with any television set can cause a permanent 'shadow' on the screen. This type of irreversible picture tube damage, can be limited by observing the following points:

- Reduce the brightness and contrast levels to a minimum viewing level.
- Do not operate the television set for a continuous period of time while using TV games or home computers.
- This type of picture tube damage, is not an operating defect, and as such is not covered by the Panasonic warranty.

### ■ Sleep Feature


If the set is not switched off when the TV station stops transmitting, it will automatically go to standby mode after 30 minutes. This function will not operate when the TV is in AV mode.

### ■ Last Position Memory

Certain functions have a last position memory, i.e. the setting at the time of switch—off will be the setting used when the receiver is switched on again:—

Programme	Tint (M.NTSC / NTSC only)
OSD language	Contrast
AV Position	Sharpness
Volume	Aspect
MPX	Standby
Bass	Colour
Treble	Brightness
Balance	Headphone volume
AV2 OUT selection	Colour system
Status	Mode
Speaker level setting	Flicker reduction
Surround mode	Artificial Intelligence (AI)
Speaker Distance	P—NR

## SPECIFICATIONS

		TX—W36D3DP
<b>Power Source</b>		220 — 240V 50Hz A.C.
<b>Power consumption</b>		Normal — 239W, Maximum — 320W
<b>Standby consumption</b>		1W
<b>Picture Tube</b>		86cm visible diagonal
<b>Audio Output (Music)</b>		Front Left / Right 20W x 2, Centre — Built in 14W, Surround 15W x 2, External Centre 20W
<b>Dimensions</b>	H W D	618.5 mm 894 mm 578.5 mm
<b>Weight (Kg)</b>		73.4
<b>Receiving Systems/ Band name</b>		<b>PAL B, G, H, I, PAL—60, SECAM B, G, SECAM L/L'</b> VHF E2 — E12 VHF H1 — H2 (ITALY) VHF A — H (ITALY) UHF E21 — E69 CATV (S01 — S05) CATV S1 — S10 (M1 — M10) CATV S11 — S20 (U1 — U10) CATV S21 — S41 (Hyperband) <b>PAL D,K, SECAM D,K</b> VHF R1 — R2 VHF R3 — R5 VHF R6 — R12 UHF E21 — E69 <b>M.NTSC</b> Playback from NTSC 4.43 MHz Videorecorders (VCR) <b>NTSC (AV input only)</b> Playback from NTSC Videorecorders (VCR)
<b>Aerial — Rear</b>		UHF / VHF
<b>Headphones — Front</b>		3,5mm, 8Ω impedance
<b>AV — Rear</b>		<b>AV1</b> — 21 pin terminal — Audio / Video in / out, RGB in. <b>AV2</b> — 21 pin terminal — Audio / Video in / out, S—Video in, Selectable output. <b>AV4</b> — 21 pin terminal — Audio / Video in / out
<b>Dolby Surround Out — Rear</b>		5 x Dolby Surround Out RCA External Speaker connections — 2 x Rear, 1 x Centre
<b>AV — Front</b>		<b>AV3</b> — S—Video in, 2 x RCA Audio in, 1 x RCA Video in

Specifications are subject to change without notice. Weight and dimensions shown are approximate.

Dolby and the  are trademarks of Dolby Laboratories Licensing Corporation.

Manufactured under license from Dolby Laboratories Licensing Corporation.

