

### Dear customer

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.



### Region number

The player plays DVD-Video marked with labels containing the region number "1" or "ALL".

Example:



This manual was printed with soy based ink.

### Table of contents

#### Getting started

|  |   |
|--|---|
| IMPORTANT SAFETY INSTRUCTIONS .....        | 2 |
| Accessories/Discs that can be played ..... | 3 |

|  |   |
|--|---|
| <b>STEP 1</b> The remote control .....         | 4 |
| <b>STEP 2</b> Connection to a television ..... | 4 |
| <b>STEP 3</b> QUICK SETUP .....                | 5 |

|                     |   |
|---------------------|---|
| Disc handling ..... | 5 |
|---------------------|---|

#### Operations

|   |    |
|---|----|
| Basic Play .....                              | 6  |
| Enjoying higher quality audio and video ..... | 7  |
| Changing the play sequences .....             | 7  |
| Using navigation menus .....                  | 8  |
| Convenient functions .....                    | 9  |
| Using On-Screen Menus .....                   | 10 |
| Changing the player settings .....            | 12 |

#### Reference

|   |            |
|---|------------|
| Specifications .....                      | 13         |
| Troubleshooting guide .....               | 14         |
| Maintenance .....                         | 15         |
| Limited Warranty (ONLY FOR U.S.A.) .....  | 16         |
| Product Service .....                     | 17         |
| <b>Referencia rápida en español .....</b> | <b>18</b>  |
| Main feature index .....                  | Back cover |

**CAUTION!**

**THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.**

**WARNING:**

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.**

THE FOLLOWING APPLIES ONLY IN THE U.S.A.


**CAUTION:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



**CAUTION**

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE SCREWS. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

# IMPORTANT SAFETY INSTRUCTIONS

Read these operating instructions carefully before using the unit. Follow the safety instructions on the unit and the applicable safety instructions listed below. Keep these operating instructions handy for future reference.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



# Accessories



(Only for U.S.A.) To order accessories, refer to "Accessory Purchases" on page 16.  
 (Only for Canada) To order accessories, call the dealer from whom you have made your purchase.

Use numbers when asking for replacement parts.



- 1 Remote control (EUR7631010)
- 1 AC power supply cord (K2CB2CB00016)
- 1 Audio/video cable (JAC3315N)
- 2 Remote control batteries

**Note**

The included AC power supply cord is for use with this unit only. Do not use it with other equipment.

**User memo:**

DATE OF PURCHASE \_\_\_\_\_  
 DEALER NAME \_\_\_\_\_  
 DEALER ADDRESS \_\_\_\_\_  
 TELEPHONE NUMBER \_\_\_\_\_

The model number and serial number of this product can be found on either the back or the bottom of the unit. Please note them in the space provided below and keep for future reference.

MODEL NUMBER \_\_\_\_\_ **DVD-S47** \_\_\_\_\_  
 SERIAL NUMBER \_\_\_\_\_

## Discs that can be played

| Disc          | Logo | Indication in these operating instructions                         | Remarks   |
|---------------|------|--|---|
| DVD-RAM       |      | <b>RAM</b>   | Recorded using Version 1.1 of the Video Recording Format (a unified video recording standard).<br><ul style="list-style-type: none"> <li>Recorded with DVD video recorders, DVD video cameras, personal computers, etc.</li> <li>Remove discs from their cartridges before use.</li> </ul>  |
|               |      | <b>JPEG</b>  | Recorded using the DCF (Design rule for Camera File system) standard.<br><ul style="list-style-type: none"> <li>Recorded with Panasonic DVD-Video recorders</li> <li>To play JPEG files, select "Play as Data Disc" in Other Menu (→ page 11).</li> </ul>   |
| DVD-Audio     |      | <b>DVD-A</b>   | —   |
|               |      | <b>DVD-V</b>   | Some DVD-Audio discs contain DVD-Video content.<br>To play DVD-Video content, select "Play as DVD-Video" in Other Menu (→ page 11).   |
| DVD-Video     |      | <b>DVD-V</b>   | —   |
| DVD-R         |      | <b>DVD-V</b>   | Panasonic DVD-R recorded and finalized* on a Panasonic DVD-Video recorders or DVD-Video cameras are played as DVD-Video on this unit.   |
| Video CD      |      | <b>VCD</b>   | —   |
| SVCD          |      |  | Conforming to IEC62107  |
| CD            |      | <b>CD</b>  | —   |
| CD-R<br>CD-RW | —    | <b>WMA</b><br><b>MP3</b><br><b>JPEG</b><br><b>CD</b><br><b>VCD</b> | <ul style="list-style-type: none"> <li>This unit can play CD-R/RW (audio recording disc) recorded with the formats on the left. Close the sessions or finalize* the disc after recording.</li> <li><b>HighMAT discs</b><br/>WMA, MP3 or JPEG files only.<br/>To play without using the HighMAT function, select "Play as Data Disc" in Other Menu (→ page 11).</li> </ul> |

\*A process that allows play on compatible equipment.

• It may not be possible to play the above discs in all cases due to the type of disc or condition of the recording.

**Discs that cannot be played**

DVD-ROM, CD-ROM, CDV, CD-G, DVD+R, +RW, DVD-RW, SACD, Divx Video Discs and Photo CD, DVD-RAM that cannot be removed from their cartridge, 2.6-GB and 5.2-GB DVD-RAM, and "Chaoji VCD" available on the market including CVD, DVCD and SVCD that do not conform to IEC62107.

**Audio format of DVDs**


You can play discs in stereo with these symbols.



HighMAT™ and the HighMAT logo are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

# STEP 1 The remote control

## Batteries

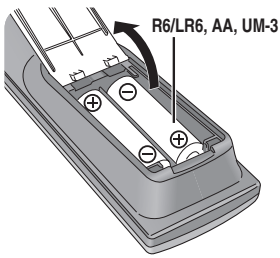

- Insert so the poles (+ and -) match those in the remote control.
  - Do not use rechargeable type batteries.
- Do not:**
- mix old and new batteries.
  - use different types at the same time.
  - heat or expose to flame.
  - take apart or short circuit.
  - attempt to recharge alkaline or manganese batteries.
  - use batteries if the covering has been peeled off.

Mishandling of batteries can cause electrolyte leakage which can damage items the fluid contacts and may cause a fire.

Remove if the remote control is not going to be used for a long period of time. Store in a cool, dark place.

## Use


Aim at the remote control sensor, avoiding obstacles, at a maximum range of 7 m (23 feet) directly in front of the unit.

# STEP 2 Connection to a television

- Do not place the unit on amplifiers or equipment that may become hot. The heat can damage the unit.
- **Do not connect through the video cassette recorder.** Due to copy guard protection, the picture may not display properly.
- Turn off all equipment before connection and read the appropriate operating instructions.
- Connect the terminals of the same color.

## Television


### WITH VIDEO IN or S VIDEO IN

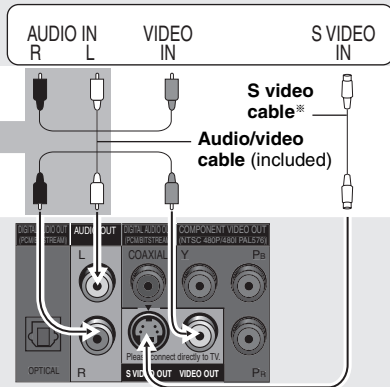

\*When using this connection, the audio cable (red and white plugs) should also be connected.

You can connect the audio cable to the 2-channel audio input terminals of an analog amplifier or system component to enjoy stereo.

### WITH COMPONENT VIDEO IN

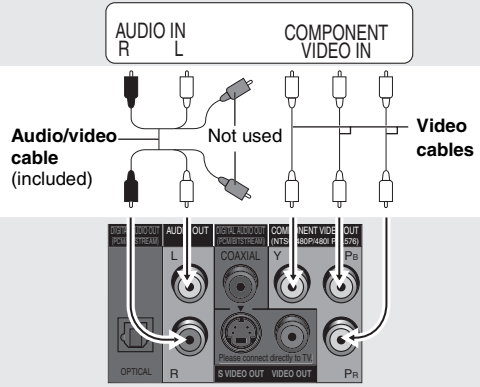

### To enjoy progressive video


Connect to a progressive output compatible television.

- ① Select "Enable" in the progressive output setting in QUICK SETUP (→page 5).
- ② Set "Video Output Mode" in Picture Menu to "480P" (→ page 11).

All Panasonic televisions with 480P input connectors are compatible. Consult the manufacturer if you have another brand of television.

## Back of the unit

### Connect the AC power supply cord last

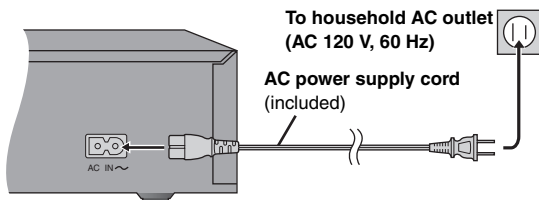


### Conserving power

This unit consumes a small amount of power, even when it is turned off (1 W). To save power when the unit is not to be used for a long time, unplug it from the household AC outlet.


### Enjoying multi-channel surround sound

Amplifier with a built-in decoder or a decoder-amplifier combination

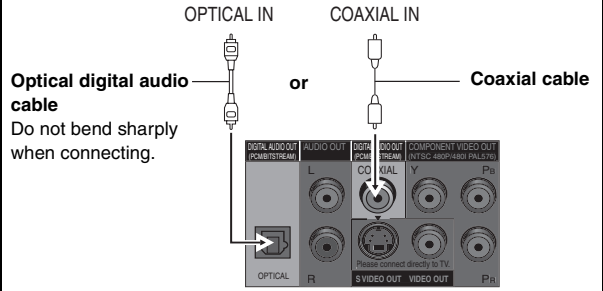


Change "PCM Digital Output", "Dolby Digital", "DTS Digital Surround" in "Audio" tab (→ page 12).

# STEP 3 QUICK SETUP

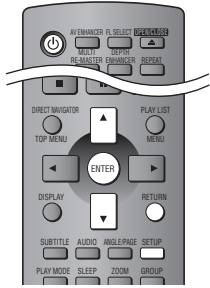

Turn on the television and select the appropriate video input on the television.

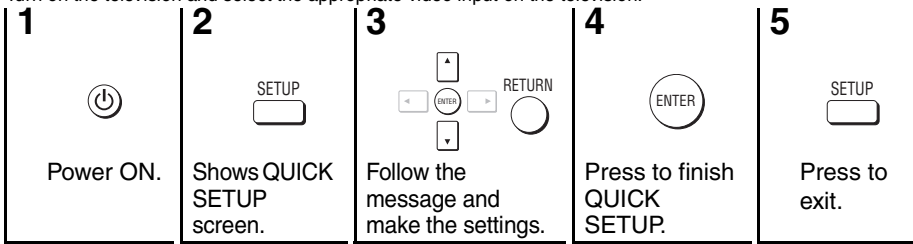

### To change these settings later

Select "QUICK SETUP" in "Others" tab (→ page 12).

## Disc handling

 
### ■ To clean discs

**DVD-A DVD-V VCD CD**

Wipe with a damp cloth and then wipe dry.

**RAM DVD-R**

- Clean with an optional DVD-RAM/PD disc cleaner (LF-K200DCA1, where available).
- Never use cloths or cleaners for CDs etc.



### ■ Handling precautions

- Do not attach labels or stickers to discs (This may cause disc warping, rendering it unusable).
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzine, thinner, static electricity prevention liquids or any other solvent.
- Do not use scratch-proof protectors or covers.
- Do not use the following discs:
  - Discs with exposed adhesive from removed stickers or labels (rented discs etc).
  - Discs that are badly warped or cracked.
  - Irregularly shaped discs, such as heart shapes.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS 2.0 + Digital Out" are trademarks of Digital Theater Systems, Inc.

Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, and 4,819,098, licensed for limited viewing uses only.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.


MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia.

Windows Media, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

WMA is a compression format developed by Microsoft Corporation. It achieves the same sound quality as MP3 with a file size that is smaller than that of MP3.



# Basic play

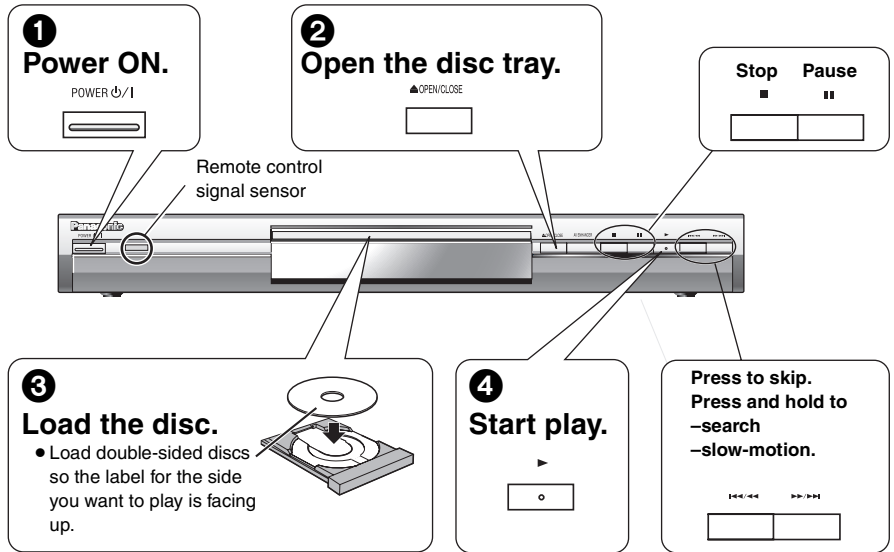

Basic play

**Stop**

STOP

The position is memorized when "▷" flashes on the display.

- Press [▶] (PLAY) to resume.
- DVD-V** To review the previous chapters (→page 9, Position memory).
- Press [■] to clear the position.

**Pause**

PAUSE

- Press [▶] (PLAY) to restart play.

**Skip**

(Group skip **WMA** **MP3** **JPEG**)

SKIP

◀ SKIP ▶

◀ ▶

**Search**  
(during play)

**Slow-motion**  
(during pause)

SLOW/SEARCH

- Up to 5 steps
- Press [▶] (PLAY) to start play.
- VCD** Slow motion, forward direction only

**Frame-by-frame**  
(during pause)

◀ ▶

- VCD** forward direction only

**On-screen item select**

Select

Register

◀ ▶

ENTER

▲ ▼

- Note**
- "D.MIX" on the display indicates that a multi-channel soundtrack can be down-mixed to two channels.
  - Discs continue to rotate while menus are displayed. Press [■] when you finish to preserve the unit's motor and your television screen.

If you are experiencing problems, refer to troubleshooting (→ page 14, 15).

**Enter number**

RAM **DVD-A** **DVD-V** **VCD** **CD**

e.g. To select 12:  
[≥10] → [1] → [2]

**VCD** with playback control

While stopped, press the numbered buttons.

**WMA** **MP3** **JPEG**

e.g. To select 123:  
[1] → [2] → [3] → [ENTER]

1 2 3  
4 5 6  
7 8 9  
0 20

**Disc menu**

**DVD-A** **DVD-V**

Shows a disc top menu

**DVD-V**

Shows a disc menu

**VCD**

Shows a disc menu

TOP MENU

MENU

RETURN

**Return to previous screen**

RETURN

**Main unit display**

FL SELECT

Number display

↑ ↓

Time display

**Information screen**

SUBTITLE

 
**WMA** **MP3** **JPEG**

Turns the information screen on/off

■ **Standby/on switch (POWER 0/I)**

Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

## Enjoying higher quality audio and video



### AV Enhancer

By pressing just one button the disc type is automatically determined and the best audio and video settings are configured.

Press [AV ENHANCER] to select "On".



When AV Enhancer is on, you cannot change the settings indicated below.

#### Audio settings:

Multi Re-master (→ below), Advanced Surround (→ page 11), Dialogue Enhancer (→ page 11)

#### Video settings:

 
Picture Mode (→ page 11)



### Depth Enhancer

Reduce the rough noise in the background to give a greater feeling of depth.

Press [DEPTH ENHANCER] several times to select from "0" through "+4".



- This does not work while using Cinema 1 or 2 (→ page 11, Picture Mode).



### Multi Re-master

**RAM DVD-V** (Discs recorded with 48 kHz only)

**DVD-A** (Discs recorded with 44.1 kHz and 48 kHz only)

 
**VCD CD**

This feature gives you a more natural sound by adding the higher frequency signals not recorded on the disc.

**WMA MP3** (Disc recording is other than 8 kHz, 16 kHz and 32 kHz)

This feature reproduces the frequencies lost during recording to give you a sound closer to the original.

Press [MULTI RE-MASTER] to select "1" "2" or "3".



| Setting | <b>DVD-A DVD-V CD</b> (LPCM/PPCM) | Other discs  |
|---------|-----------------------------------|--------------|
|         | Type of music                     | Effect level |
| 1       | High tempo (e.g., pop and rock)   | Light        |
| 2       | Various tempos (e.g., jazz)       | Medium       |
| 3       | Low tempo (e.g., classical)       | Strong       |
| Off     | Off                               | Off          |

- The actual output sampling frequency depends on "PCM Digital Output" setting in "Audio" tab (→ page 12).

The above indicated features may not work depending on the discs recording.

## Changing the play sequences



### All group/Program/Random play

**DVD-A DVD-V VCD CD WMA MP3 JPEG**

While stopped, press [PLAY MODE].

 
Each time you press the button:

All group (**DVD-A**) → Program → Random  
 ↑ Off (Normal play) ←

- Disable HighMAT disc play to use random and program play. Select "Play as Data Disc" in Other Menu (→ page 11).

#### ■ All Group play

Press [▶] (PLAY).




#### ■ Program play (up to 32 items)

1 Press the numbered buttons to select the items (**WMA MP3 JPEG**) then press [ENTER].

Repeat this step to program other items.

2 Press [▶] (PLAY).

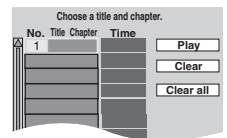

#### Selecting all the items

(on the disc or in the title or group)

Press [ENTER] and [▲ ▼] to select "ALL", then press [ENTER] again to register.

#### Changing the program

Press [▲ ▼] to select an item.

-To change an item, repeat step 1.

-To clear an item, press [CANCEL] (or select "Clear" and press [ENTER]).

• Press [ANGLE/PAGE] to skip 8 lines at a time.

#### Clearing the whole program

Select "Clear all" and press [ENTER]. The whole program is also cleared when the unit is turned off or the disc tray is opened.

 
#### ■ Random play

1 (**DVD-A DVD-V WMA MP3 JPEG**)

Press the numbered buttons to select a group (**WMA MP3 JPEG**) then press [ENTER] or a title.

2 Press [▶] (PLAY).

e.g. **DVD-V**



#### To exit the all group, program or random mode

Press [PLAY MODE] several times while stopped.

 


### Repeat play

(Only when the elapsed play time can be displayed)

**JPEG**: Works with all JPEG content.)

Press [REPEAT] several times to select an item to be repeated.



**Playing data discs** WMA MP3 JPEG CD (CD-text only)

**WMA MP3 JPEG**

You can play JPEG files on DVD-RAM or play HighMAT discs without using the HighMAT function (→ page 11, "Play as Data Disc" in Other Menu).

■ **Using playback menus** (except JPEG files on DVD-RAM)


While the menu is displayed

Press [▲ ▼] to select "All", "Audio", or "Picture" and press [ENTER].

- To display/exit the screen  
Press [TOP MENU].

■ **Using navigation menus**

- 1 Press [MENU].
- 2 Press [▲ ▼◀▶] to select the group or audio/picture content and press [ENTER].

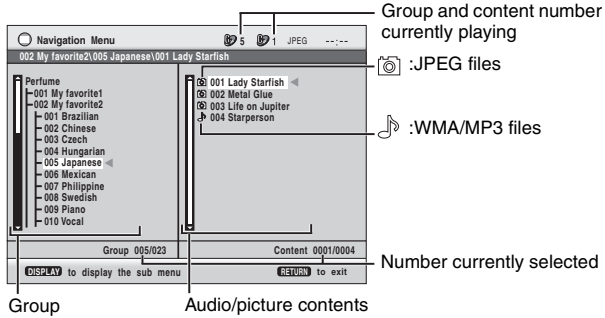


- To enjoy listening to WMA/MP3 contents while showing a JPEG image on the screen  
Select a JPEG file first, and then select audio contents. (The opposite order is not effective.)
- To exit the screen  
Press [MENU].

**To use the contents screen to find a track**  
CD (CD text only)

While the menu is displayed  
Press [▲ ▼] to move through the tracks and press [ENTER].

- Press [ANGLE/PAGE] to skip 10 lines at a time.

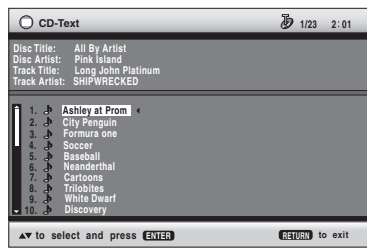

**Using the submenu** WMA MP3 JPEG

- 1 While the menu is displayed, press [DISPLAY].


|                |  |
|----------------|--|
| Multi          | Groups and content   |
| List           | Content only   |
| Tree           | Groups only  |
| Thumbnail      | Thumbnail images JPEG  |
| Next group     | To the next group WMA MP3  |
| Previous group | To the previous group WMA MP3  |
| All            | WMA/MP3 and JPEG files   |
| Audio          | WMA/MP3 files only   |
| Picture        | JPEG files only  |
| Help display   | To switch between guide messages and the elapsed play time indicator |
| Find           | To search by content or group title (→ see below)                    |

- 2 Press [▲ ▼] to select the submenu and press [ENTER].

■ **Searching by a content or group title**

WMA MP3 JPEG

Place the cursor on the group title to search a group, or place the cursor on the content title to search content.

- 1 Select "Find" (→ see above).  

- 2 Press [▲ ▼] to select a character and press [ENTER].
  - Repeat to enter another character.
  - Lower case is also searched.
  - Press [◀▶] to skip between A, E, I, O and U.
  - Press [◀] to erase a character.
  - Erase the asterisk (\*) to search for the titles starting with that character.
- 3 Press [▶] to select "Find" and press [ENTER].  
The search result screen appears.
- 4 Press [▲ ▼] to select the content or group and press [ENTER].


**Tips for making WMA/MP3 and JPEG discs (For CD-R/CD-RW)**

- Discs must conform to ISO9660 level 1 or 2 (except for extended formats).
- This unit is compatible with multi-session but if there are a lot of sessions it takes more time for play to start. Keep the number of sessions to a minimum to avoid this.

**Naming folders and files**

At the time of recording, prefix folder and file names with 3-digit numbers in the order you want to play them (this may not work at times).

Files must have the extension:  
".WMA" or ".wma"  
".MP3" or ".mp3"  
".JPG", ".jpg", ".JPEG" or ".jpeg"

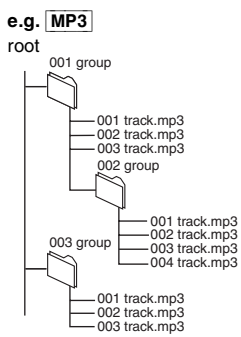

**WMA**

- You cannot play WMA files that are copy protected.

**MP3**

- This unit is not compatible with ID3 tags.
- Compatible sampling rate: 8, 11.02, 12, 16, 22.05, 24, 32, 44.1, and 48 kHz

**JPEG**

- To view JPEG files on this unit:
  - Take them on a digital camera that meets the DCF Standard (Design rule for Camera File system) Version 1.0. Some digital cameras have functions that are not supported by the DCF Standard Version 1.0 like automatic picture rotation which may render a picture un-viewable.
  - Do not alter the files in any way or save them under a different name.
- This unit cannot display moving pictures, MOTION JPEG and other such formats, still pictures other than JPEG (e.g. TIFF) or play associated sound.



## Convenient functions



While the menu is displayed  
Select the item following the on-screen instructions.




Menu: Takes you to the next menu which shows play lists or another menu  
Play list: play starts

- To change the menu background  
Press [DISPLAY].  
The background changes to the one recorded on the disc.
- To display/exit the screen  
Press [TOP MENU].

### Selecting from the list

- 1 Press [MENU].
- 2 Press [◀] then [▲ ▼] to switch among Playlist, Group and Content lists.
- 3 Press [▶] then [▲ ▼] to select an item and press [ENTER].  
• Press [ANGLE/PAGE] to skip 10 lines at a time.

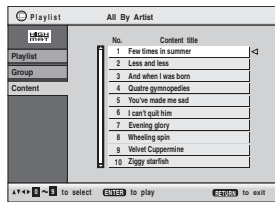

- To exit the screen  
Press [MENU].




- 1 Press [DIRECT NAVIGATOR].

- Titles appear only if you have entered them.
- You cannot change program and disc titles.

- 2 Press [▲ ▼] or the numbered buttons to select the program.

- Press [ANGLE/PAGE] to skip 5 lines at a time.

- To select a 2-digit number  
e.g. 23: [≥10] → [2] → [3]
- Press [▶] to show the contents of the program.

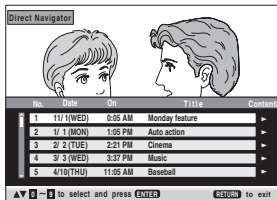



(Only when the disc contains a play list)

- 1 Press [PLAY LIST].
- 2 Press [▲ ▼] or the numbered buttons to select the play list.

- Press [ANGLE/PAGE] to skip 10 lines at a time.

- To select a 2-digit number  
e.g. 23: [≥10] → [2] → [3]

 - 3 Press [ENTER].

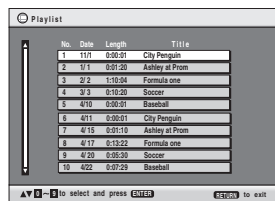

RAM DVD-V

Press [▲, PLAY SPEED] or [▼, PLAY SPEED].

DVD-VR  
×0.9 ▶

–from ×0.6 to ×1.4 (in 0.1 units)

- After you change the speed  
–Digital output switches to PCM-2ch.  
–Sampling frequency of 96 kHz is converted to 48 kHz.
- To return to normal play  
Press [▶] (PLAY).



RAM DVD-V VCD

This feature expands the letterbox picture to fit the screen.

Press [ZOOM] several times to select the preset aspect ratio or “Auto”. (Just Fit Zoom)



Fine adjustments (Manual Zoom)

Press [◀ ▶].

–from ×1.00 to ×1.60 (in 0.01 units)

–from ×1.60 to ×2.00 (in 0.02 units)



Except JPEG

(Only when the elapsed play time can be displayed)

Press [QUICK REPLAY] to skip back a few seconds.



(Only when the elapsed play time can be displayed)

JPEG: Works with all JPEG content.)

This position is memorized even after turning off the unit or changing the disc.

Press [POSITION MEMORY].



- Up to 5 discs.
- When the sixth disc is memorized, the earliest position is replaced.

When the unit is turned on or the disc is inserted, “▷” flashes on the display.

Press [▶] (PLAY) to start play from that position.

To review the previous chapters DVD-V

Press [▶] (PLAY) while the following message is displayed.



Do not press [▶] (PLAY) if you want to cancel review.

## Convenient functions

### AUDIO

**DVD-A** **DVD-V** (with multiple soundtracks) **RAM** **VCD**

Press **[AUDIO]** several times to select the soundtrack.

**RAM** **VCD**

You can use this button to select "L", "R" or "LR".

**DVD-V** (Karaoke discs)

Press **[◀▶]** to select "On" or "Off" of vocals. Read the disc's instructions for details.



### Signal type/data

LPCM/PPCM/□□ Digital/DTS/MPEG: Signal type  
kHz (Sampling frequency)/bit/ch (Number of channels)  
Example: 3/2 .1ch

- .1: Low frequency effect  
(not displayed if there is no signal)
- 0: No surround
- 1: Mono surround
- 2: Stereo surround (left/right)
- 1: Center
- 2: Front left+Front right
- 3: Front left+Front right+Center

### SUBTITLE

**DVD-V** (with multiple subtitles) **VCD** (SVCD only)

**RAM** (On/Off only)

Press **[SUBTITLE]** several times to select the subtitle language.

To clear/display the subtitles

Press **[◀▶]** to select "On" or "Off".



- **RAM** (Only discs that contain subtitle on/off information)  
Subtitle on/off information cannot be recorded using Panasonic DVD Recorders. (Panasonic DVD-R that is finalized on a Panasonic DVD Recorder is not DVD-Video, but is the same format used for RAM indicated above.)

 
### GROUP

#### Starting play from a selected group

**DVD-A** **WMA** **MP3** **JPEG**

A folder on WMA/MP3 and JPEG discs is treated as a "Group".

- 1 Press **[GROUP]**.
- 2 Press **[▲ ▼]** to select the item and press **[ENTER]**.



### ANGLE/PAGE

#### Angle select and Still picture rotation/advance

Press **[ANGLE/PAGE]** several times to select the angle or rotate/advance the still picture.

**DVD-V** (with multiple angles)–Angle select

**DVD-A** –Still picture advance

**JPEG** –Still picture rotation

### SLEEP

#### Sleep timer

Press **[SLEEP]** to select the time to turn off (60 min, 90 min, 120 min) or "Auto".




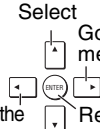
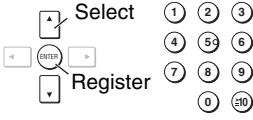

Auto:

- Turns the unit off 5 minutes after play finishes.
- Also works with DVDs that show a menu after play finishes.
- Does not work if you stop play or show a disc menu. It is activated again when you restart play.

To confirm the remaining time

Press **[SLEEP]** again.

## Using On-Screen Menus

|  |  |  |   |
|--|--|--|---|
| <p><b>1</b></p>  <p>Press once.<br/>(When pressed twice, the elapsed play time indicator appears.→ page 11)</p> | <p><b>2</b></p>  <p>Select<br/>Go to the next menu<br/>Return to the previous menu<br/>Register</p> <p>Select the menu.</p> | <p><b>3</b></p>  <p>Select<br/>Register</p> <p>Make the settings.</p> | <p><b>4</b></p>  <p>Press to exit.</p> |
|--|--|--|---|

Items shown differ depending on the type of software.

### Main menus

|                 |   |
|-----------------|---|
| <b>Program</b>  | To start from a specific item   |
| <b>Group</b>    |   |
| <b>Title</b>    |   |
| <b>Chapter</b>  |   |
| <b>Track</b>    |   |
| <b>Playlist</b> |   |
| <b>Content</b>  |   |
| <b>Time</b>     | <p>To skip incrementally or decrementally (Time Slip for play only)</p> <ol style="list-style-type: none"> <li>1. Press <b>[ENTER]</b> twice to show Time Slip indicator.</li> <li>2. Press <b>[▲ ▼]</b> to select the time and press <b>[ENTER]</b>. <ul style="list-style-type: none"> <li>• Press and hold <b>[▲ ▼]</b> to alter faster.</li> </ul> </li> </ol> <p>To start from a specific time (Time Search)</p> <p>To change remaining/elapsed time display</p> |

|                       |   |
|-----------------------|---|
| <b>Audio</b>          | (→ above)   |
|                       | To display the current bitrate or sampling frequency                  |
| <b>Still Picture</b>  | To switch still picture   |
| <b>Thumbnail</b>      | To show thumbnail images  |
| <b>Subtitle</b>       | (→ above)   |
| <b>Marker(VR)</b>     | To recall a marker recorded on DVD-Video recorders                    |
| <b>Angle</b>          | (→ above)   |
| <b>Rotate picture</b> |   |
| <b>Slideshow</b>      | To turn on/off slideshow<br>To change the slideshow timing (0–30 sec) |

Other settings

|                    |            |
|--------------------|------------|
| <b>Play Speed</b>  | (→ page 9) |
| <b>AV Enhancer</b> | (→ page 7) |

■ Play Menu

(Only when the elapsed play time can be displayed)

**JPEG**: Works with all JPEG content.)

|               |            |
|---------------|------------|
| <b>Repeat</b> | (→ page 7) |
|---------------|------------|

|  |   |
|--|---|
| Except <b>JPEG</b>                                   | <b>To repeat a specified section</b><br>Press [ENTER] at the starting and ending points. Press [ENTER] again to cancel. |
| <b>RAM</b> (still picture part)<br><b>A-B Repeat</b> |   |

|               |  |
|---------------|--|
| <b>Marker</b> | <b>To mark up to 5 positions to play again</b><br>[ENTER] (The unit is now ready to accept markers.)<br>To mark a position: [ENTER] (at the desired point)<br>To mark another position: [◀▶] → [ENTER]<br>To recall a marker: [◀▶] → [ENTER]<br>To erase a marker: [◀▶] → [CANCEL] |
|               | • This feature doesn't work during program and random play.  |

■ Picture Menu

|                           |  |
|---------------------------|--|
| <b>Picture Mode</b>       | <b>Normal</b>  |
|                           | <b>Cinema1</b> : Mellows images and enhances detail in dark scenes.                    |
|                           | <b>Cinema2</b> : Sharpens images and enhances detail in dark scenes.                   |
|                           | <b>Animation Dynamic User</b> (Press [ENTER] to select "Picture Adjustment") (→ below) |
| <b>Picture Adjustment</b> | <b>Contrast</b> <b>Brightness</b> <b>Sharpness</b> <b>Color</b>                        |
|                           | <b>Gamma</b> (Adjusts the brightness of dark parts.)                                   |
|                           | <b>Depth Enhancer</b> (→ page 7)   |

|                          |   |
|--------------------------|---|
| <b>Video Output Mode</b> | <b>480I</b> (Interlace) ↔ <b>480P</b> (Progressive) |
|--------------------------|---|

|                      |   |
|----------------------|---|
| <b>Transfer Mode</b> | If you have chosen "480P" (→ above), select the method of conversion for progressive output to suit the type of material. |
|                      | <b>Auto 1</b> (normal): For viewing film material   |
|                      | <b>Auto 2</b> : For viewing film material (the same as Auto 1, but able to convert 30-frame-per-second progressive video) |
|                      | <b>Video</b> : For video material   |

■ Audio Menu

|                          |  |
|--------------------------|--|
| <b>Advanced Surround</b> | <b>RAM</b> <b>DVD-V</b> <b>VCD</b> (2 or more channels)<br><b>SP (Speaker)</b> 1 Natural <b>SP 2</b> Enhanced<br><b>HP (Headphone)</b> 1 Natural <b>HP 2</b> Enhanced <b>Off</b> |
|--------------------------|--|

- When using discs recorded with surround sound, sound seems to come from speakers on either side of you.
- When using headphones from the connected equipment, select "HP 1" or "HP 2".
- Optimum seating position is 3 to 4 times the distance between the front left and right speakers or the width of the television if using the televisions speakers.
- Do not use in combination with surround effects on other equipment.

|                          |  |
|--------------------------|--|
| <b>Dialogue Enhancer</b> | <b>To make the dialogue in movies easier to hear</b><br><b>DVD-V</b> (Dolby Digital, DTS, MPEG, 3-channel or over, with the dialogue recorded in the center channel)<br><b>On</b> ↔ <b>Off</b> |
|--------------------------|--|

|                        |            |
|------------------------|------------|
| <b>Multi Re-master</b> | (→ page 7) |
|------------------------|------------|

|                   |   |
|-------------------|---|
| <b>Attenuator</b> | Switch on if sound is distorted. (For AUDIO OUT connection)<br><b>On</b> ↔ <b>Off</b> |
|-------------------|---|

■ Display Menu

|                    |   |
|--------------------|---|
| <b>Information</b> | <b>On</b> ↔ <b>Off</b><br>( <b>JPEG</b> : <b>Off</b> , <b>Date</b> , <b>Details</b> ) |
|--------------------|---|

|                          |                       |
|--------------------------|-----------------------|
| <b>Subtitle Position</b> | 0 to -60 (in 2 units) |
|--------------------------|-----------------------|

|                            |                       |
|----------------------------|-----------------------|
| <b>Subtitle Brightness</b> | <b>Auto</b> , 0 to -7 |
|----------------------------|-----------------------|

|                   |  |
|-------------------|--|
| <b>4:3 Aspect</b> | <b>To select how to show images made for 4:3 aspect screens on a 16:9 aspect television.</b><br><b>Normal</b> : Laterally stretches images.<br><b>Auto</b> : Expands 4:3 letterbox images to fill more of the screen. Other images appear in full in the center of the screen. |
|                   | <b>Shrink</b> : Images appear in the center of the screen.<br><b>Zoom</b> : Expands all images to fill the screen. If your television has a similar feature, use it instead for a better effect.   |

|                      |            |
|----------------------|------------|
| <b>Just Fit Zoom</b> | (→ page 9) |
|----------------------|------------|

|                    |            |
|--------------------|------------|
| <b>Manual Zoom</b> | (→ page 9) |
|--------------------|------------|

|                        |  |
|------------------------|--|
| <b>Bitrate Display</b> | <b>RAM</b> <b>DVD-V</b> <b>VCD</b><br><b>On</b> ↔ <b>Off</b> |
|------------------------|--|

|                        |                        |
|------------------------|------------------------|
| <b>GUI See-through</b> | <b>On</b> ↔ <b>Off</b> |
|------------------------|------------------------|

|                       |          |
|-----------------------|----------|
| <b>GUI Brightness</b> | -3 to +3 |
|-----------------------|----------|


■ Other Menu

|              |             |
|--------------|-------------|
| <b>Sleep</b> | (→ page 10) |
|--------------|-------------|

|  |  |
|--|--|
| <b>Play as DVD-Video</b><br>or<br><b>Play as DVD-Audio</b> | While stopped<br>• Select "Play as DVD-Video" to play DVD-Video contents on DVD-Audio. |
|--|--|

|   |   |
|---|---|
| <b>Play as DVD-VR</b><br><b>Play as HighMAT</b><br>or<br><b>Play as Data Disc</b> | While stopped<br>• Select "Play as Data Disc" to play JPEG files on DVD-RAM or to play a HighMAT disc without using the HighMAT function. |
|---|---|

■ Elapsed play time indicator

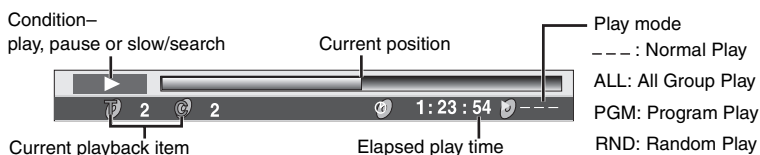

# Changing the player settings



- The settings remain intact even if you switch the unit to standby.
- Underlined items are the factory preset.
- See page 13 for operation.

The QUICK SETUP enables successive settings of the items in the shaded area.

## ■ “Disc” tab

|  |  |
|--|--|
| <b>Audio</b><br>Choose the audio language.   | <input type="radio"/> <u>English</u> <input type="radio"/> French <input type="radio"/> Spanish <input type="radio"/> Original* <sup>1</sup> <input type="radio"/> Other* <sup>2</sup>   |
| <b>Subtitle</b><br>Choose the subtitle language.   | <input type="radio"/> <u>Automatic</u> * <sup>3</sup> <input type="radio"/> English <input type="radio"/> French <input type="radio"/> Spanish <input type="radio"/> Other* <sup>2</sup>   |
| <b>Menus</b><br>Choose the language for disc menus.  | <input type="radio"/> <u>English</u> <input type="radio"/> French <input type="radio"/> Spanish <input type="radio"/> Other* <sup>2</sup><br>• Changing the menu language from QUICK SETUP also changes this setting.  |
| <b>Ratings</b><br>Set a ratings level to limit DVD-Video play.<br>• Follow the on-screen instructions. | Setting ratings (When level 8 is selected)<br><input type="radio"/> <u>8 No Limit</u> <input type="radio"/> 1 to 7 <input type="radio"/> 0 Lock All: To prevent play of discs without ratings levels.<br>Changing ratings (When level 0-7 is selected)<br><input type="radio"/> <u>Unlock Player</u> <input type="radio"/> Change Password <input type="radio"/> Change Level <input type="radio"/> Temporary Unlock |

## ■ “Video” tab

|  |   |   |
|--|---|---|
| <b>TV Aspect</b><br>Choose the setting to suit your television and preference.   | <input type="radio"/> <u>4:3 Pan&amp;Scan</u> : Regular aspect television (4:3)<br>The sides of the widescreen picture are cut off so it fills the screen (unless prohibited by the disc).<br><input type="radio"/> 4:3 Letterbox: Regular aspect television (4:3)<br>Widescreen picture is shown in the letterbox style. |   |
|  | <input type="radio"/> 16:9: Widescreen television (16:9)  |   |
| <b>Progressive Out (Component)</b>   | <input type="radio"/> <u>Disable</u> : Interlace output<br><input type="radio"/> Enable: Progressive output   |   |
| <b>TV Type</b><br>Select to suit the type of television.   | <input type="radio"/> <u>Standard(Direct View TV)</u> <input type="radio"/> CRT Projector <input type="radio"/> LCD TV/Projector <input type="radio"/> Projection TV<br><input type="radio"/> Plasma TV   |   |
| <b>Time Delay</b><br>When connected with an AV amplifier and Plasma display, adjust if you notice the audio is out of sync with the video.   | <input type="radio"/> <u>0ms</u> <input type="radio"/> 20ms <input type="radio"/> 40ms <input type="radio"/> 60ms <input type="radio"/> 80ms <input type="radio"/> 100ms  |   |
| <b>Still Mode</b><br>Specify the type of picture shown when paused.  | <input type="radio"/> <u>Automatic</u> <input type="radio"/> Field: The picture is not blurred, but picture quality is lower.<br><input type="radio"/> Frame: Overall quality is high, but the picture may appear blurred.  |   |
| <b>Black Level Control</b><br>Change the black level of the picture if you connected a television through the COMPONENT VIDEO OUT terminals. | <input type="radio"/> <u>Lighter</u> : When connected through VIDEO OUT or S VIDEO OUT.<br><input type="radio"/> Darker: When connected through COMPONENT VIDEO OUT.  |   |

## ■ “Audio” tab

|  |   |  |
|--|---|--|
| <b>PCM Digital Output</b><br>Check the digital input limitations of the equipment you connect using COAXIAL or OPTICAL terminal and select the maximum sampling frequency of PCM digital output. | <b>Off</b> : When not connected digitally<br><b>Up to 48 kHz</b> : When connected to equipment compatible with 44.1 or 48 kHz<br><b>Up to 96 kHz</b> : When connected to equipment compatible with 88.2 or 96 kHz<br><b>Up to 192 kHz</b> : When connected to equipment compatible with 176.4 or 192 kHz<br>• Signals that exceed the set maximum frequency and signals from copy-protected discs are converted to 48 or 44.1 kHz.<br>• Some equipment cannot handle sampling frequencies of 88.2 kHz, even if they can handle 96 kHz.<br>Read your equipment's operating instructions for details. |  |
| <b>Dolby Digital</b>   | <input type="radio"/> <u>Bitstream</u> <input type="radio"/> PCM  | Select “ <b>Bitstream</b> ” when the equipment can decode the bitstream (digital form of multi-channel data). Otherwise, select “ <b>PCM</b> ”.<br>• If the bitstream is output to the equipment without a decoder, high levels of noise can be output and may damage your speakers and hearing. |
| <b>DTS Digital Surround</b>  | <input type="radio"/> <u>PCM</u> <input type="radio"/> Bitstream  |  |
| <b>Dynamic Range Compression</b>   | <input type="radio"/> <u>Off</u><br><input type="radio"/> On: Adjusts for clarity even when the volume is low through compressing the range of the lowest sound level and the highest sound level. Convenient for late night viewing. (Only works with Dolby Digital)   |  |
| <b>Audio during Search</b>   | <input type="radio"/> <u>On</u> <input type="radio"/> Off   |  |

## ■ “Display” tab

|                           |   |
|---------------------------|---|
| <b>Menu Language</b>      | <input type="radio"/> <u>English</u> <input type="radio"/> Français <input type="radio"/> Español |
| <b>On-Screen Messages</b> | <input type="radio"/> <u>On</u> <input type="radio"/> Off   |


## ■ “Others” tab

|   |   |
|---|---|
| <b>FL Dimmer</b><br>Changes the brightness of the unit's display.                                   | <input type="radio"/> <u>Bright</u> <input type="radio"/> Dim<br><input type="radio"/> Auto: The display is dimmed during play, but brightens when you perform some operations .  |
| <b>Auto Power Off</b>   | <input type="radio"/> <u>On</u> : The unit switches to standby mode after about 30 minutes in the stop mode, irrespective of the SLEEP setting.<br><input type="radio"/> Off  |
| <b>HighMAT</b>  | <input type="radio"/> <u>Enable</u> <input type="radio"/> Disable (Unable to use the HighMAT function.)   |
| <b>QUICK SETUP</b>  | <input type="radio"/> <u>Yes</u> <input type="radio"/> No   |
| <b>Re-initialize Setting</b><br>This returns all values in the Setup menus to the default settings. | <input type="radio"/> <u>Yes</u> : The password screen is shown if “Ratings” (above) are set. Please enter the same password. After “INIT” on the display disappears, turn the unit off and on again.<br><input type="radio"/> No |

\*<sup>1</sup> The original language designed on the disc is selected.

\*<sup>2</sup> Input a code number referring to the table on page 13.

\*<sup>3</sup> If the language selected for “Audio” is not available, subtitle appear in that language (if available on the disc).

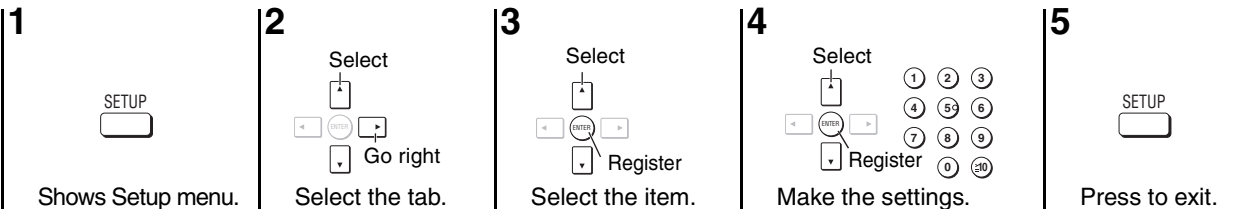

### Language code list

|                       |                   |                        |                      |                      |                  |
|-----------------------|-------------------|------------------------|----------------------|----------------------|------------------|
| Abkhazian: 6566       | Chinese: 9072     | Hausa: 7265            | Lithuanian: 7684     | Romanian: 8279       | Telugu: 8469     |
| Afar: 6565            | Corsican: 6779    | Hebrew: 7387           | Macedonian: 7775     | Russian: 8285        | Thai: 8472       |
| Afrikaans: 6570       | Croatian: 7282    | Hindi: 7273            | Malagasy: 7771       | Samoa: 8377          | Tibetan: 6679    |
| Albanian: 8381        | Czech: 6783       | Hungarian: 7285        | Malay: 7783          | Sanskrit: 8365       | Tigrinya: 8473   |
| Ameharic: 6577        | Danish: 6865      | Icelandic: 7383        | Malayalam: 7776      | Scots Gaelic: 7168   | Tonga: 8479      |
| Arabic: 6582          | Dutch: 7876       | Indonesian: 7378       | Maltese: 7784        | Serbian: 8382        | Turkish: 8482    |
| Armenian: 7289        | English: 6978     | Interlingua: 7365      | Maori: 7773          | Serbo-Croatian: 8372 | Turkmen: 8475    |
| Assamese: 6583        | Esperanto: 6979   | Irish: 7165            | Marathi: 7782        | Shona: 8378          | Twi: 8487        |
| Aymara: 6588          | Estonian: 6984    | Italian: 7384          | Moldavian: 7779      | Sindhi: 8368         | Ukrainian: 8575  |
| Azerbaijani: 6590     | Faroese: 7079     | Japanese: 7465         | Mongolian: 7778      | Singhalese: 8373     | Urdu: 8582       |
| Bashkir: 6665         | Fiji: 7074        | Javanese: 7487         | Nauru: 7865          | Slovak: 8375         | Uzbek: 8590      |
| Basque: 6985          | Finnish: 7073     | Kannada: 7578          | Nepali: 7869         | Slovenian: 8376      | Vietnamese: 8673 |
| Bengali; Bangla: 6678 | French: 7082      | Kashmiri: 7583         | Norwegian: 7879      | Somali: 8379         | Volapük: 8679    |
| Bhutani: 6890         | Frisian: 7089     | Kazakh: 7575           | Oriya: 7982          | Spanish: 6983        | Welsh: 6789      |
| Bihari: 6672          | Galician: 7176    | Kirghiz: 7589          | Pashto, Pushto: 8083 | Sundanese: 8385      | Wolof: 8779      |
| Breton: 6682          | Georgian: 7565    | Korean: 7579           | Persian: 7065        | Swahili: 8387        | Xhosa: 8872      |
| Bulgarian: 6671       | German: 6869      | Kurdish: 7585          | Polish: 8076         | Swedish: 8386        | Yiddish: 7473    |
| Burmese: 7789         | Greek: 6976       | Laotian: 7679          | Portuguese: 8084     | Tagalog: 8476        | Yoruba: 8979     |
| Byelorussian: 6669    | Greenlandic: 7576 | Latin: 7665            | Punjabi: 8065        | Tajik: 8471          | Zulu: 9085       |
| Cambodian: 7577       | Guarani: 7178     | Latvian, Lettish: 7686 | Quechua: 8185        | Tamil: 8465          |                  |
| Catalan: 6765         | Gujarati: 7185    | Lingala: 7678          | Rhaeto-Romance: 8277 | Tatar: 8484          |                  |

## Specifications

### Signal system:

NTSC

### Operating temperature range:

+5 to +35 °C (+41 to +95 °F)

### Operating humidity range:

5 to 90 % RH (no condensation)

### Discs played [8 cm (3 ") or 12 cm (5 ")]:

- (1) DVD-RAM (DVD-VR compatible, JPEG formatted discs)
- (2) DVD-Audio (3) DVD-Video
- (4) DVD-R (DVD-Video compatible) (5) CD-Audio (CD-DA)
- (6) Video CD
- (7) SVCD (Conforming to IEC62107)
- (8) CD-R/CD-RW (CD-DA, Video-CD, SVCD, MP3, WMA, JPEG formatted discs)
- (9) MP3/WMA\*
  - Compatible compression rate:
    - MP3: between 32 kbps and 320 kbps
    - WMA: between 48 kbps and 320 kbps
- (10) JPEG\*
  - Exif Ver 2.1 JPEG Baseline files
  - Picture resolution: between 320×240 and 6144×4096 pixels (sub sampling is 4:2:2 or 4:2:0)
- (11) HighMAT Level 2 (Audio and Image)

### Video output:

Output level: 1 Vp-p (75 Ω)  
Output connector: Pin jack (1 system)

### S-video output:

Y output level: 1 Vp-p (75 Ω)  
C output level: 0.286 Vp-p (75 Ω)  
Output connector: S terminal (1 system)

### Component video output:

Y output level: 1 Vp-p (75 Ω)  
P<sub>B</sub> output level: 0.7 Vp-p (75 Ω)  
P<sub>R</sub> output level: 0.7 Vp-p (75 Ω)  
Output connector: Pin jack (Y: green, P<sub>B</sub>: blue, P<sub>R</sub>: red)  
Number of connectors: 1 system

### Audio output:

Output level: 2 Vrms (1 kHz, 0 dB)  
Output connector: Pin jack  
Number of connectors: 2 channel: 1 system

### Audio performance:

- (1) Frequency response:
  - DVD (linear audio): 4 Hz–22 kHz (48 kHz sampling)  
4 Hz–44 kHz (96 kHz sampling)
  - DVD-Audio: 4 Hz–88 kHz (192 kHz sampling)  
4 Hz–20 kHz
  - CD Audio: 115 dB
- (2) S/N ratio:
  - DVD (linear audio): 100 dB
  - CD Audio: 98 dB
- (3) Dynamic range:
  - DVD (linear audio): 100 dB
  - CD Audio: 98 dB
- (4) Total harmonic distortion:
  - CD Audio: 0.0025 %

### Digital audio output:

Optical digital output: Optical terminal  
Coaxial digital output: Pin jack

### Pickup:

Wave length: 662 nm/785 nm  
Laser power: **U.S.A** CLASS IIa/CLASS I  
**Canada** CLASS 2/CLASS 3A

### Power supply:

AC 120 V, 60 Hz

### Power consumption:

10 W

### Power consumption in standby mode:

1 W

### Dimensions:

430 (W)×249 (D)×52 (H) mm  
[16 1/16" (W)×9 13/16" (D)×2 1/16" (H)]

### Mass:

2.4 kg (5.3 lb.)

### Note

Specifications are subject to change without notice. Mass and dimensions are approximate.

\* The total combined maximum number of recognizable audio and picture contents and groups: 4000 audio and picture contents and 400 groups.

# Troubleshooting guide

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, refer to the "Customer Services Directory" on page 16 if you reside in the U.S.A., or refer to the "Product information" on page 17 if you reside in Canada.

| Power   |   | Page |
|---|---|------|
| No power.   | • Insert the AC power supply cord securely into the household AC outlet.  | 4    |
| The unit is automatically switched to the standby mode. | • When "Auto Power Off" is set to "On", the unit automatically switches to standby after approximately 30 minutes in the stop mode. | 12   |
|   | • The Sleep timer functioned.   | 10   |

| No operation   |   |   |
|--|---|---|
| No response when any buttons pressed.  | • This unit cannot play discs other than the ones listed in these operating instructions.   | 3 |
|  | • The unit may not be operating properly due to lightning, static electricity or some other external factor. Turn the unit off and then back to ON. Alternatively, turn the unit off, disconnect the AC power supply cord, and then reconnect it. | – |
|  | • Condensation has formed: Wait 1 to 2 hours for it to evaporate.   | – |
| No response when remote control buttons pressed.                                       | • Check that the batteries are installed correctly.   | 4 |
|  | • The batteries are depleted: Replace them with new ones.   | 4 |
|  | • Point the remote control at the remote control sensor and operate.  | 6 |
| No picture or sound.   | • Check the video or audio connection.  | 4 |
|  | • Check the power or input setting of the connected equipment.  | – |
|  | • Check that the DVD-RAM has something recorded on it.  | – |
| You have forgotten your ratings password.<br>Reset all the settings to Factory Preset. | • While stopped, press and hold [◀◀/▶▶] and [■] on the unit and then also press and hold [▲] on the unit until "Initialized" disappears from the television. Turn the unit off and on again. All settings will return to the default values.      | – |

| Specific operation impossible or incorrect  |   |   |
|---|---|---|
| It takes time before play starts.<br>MP3  | • Play may take time to begin when an MP3 track has still picture data. Even after the track starts, the correct play time will not be displayed, however this is normal. | – |
| Programmed items are not played. DVD-V  | • Some items cannot be played even if you have programmed them.   | – |
| A menu screen appears during skip or search. VCD  | • This is normal for Video CDs.   | – |
| The on-screen menu shows "2" as a soundtrack option when [AUDIO] is pressed, but the audio does not change. DVD-A | • Even if a second soundtrack isn't recorded, two numbers will normally be shown.   | – |
| Play restarts from the beginning of the track when soundtrack is changed. DVD-A                                   | • This is normal on DVD-Audio.  | – |

| Subtitle   |  |    |
|--|--|----|
| Subtitle position is wrong.                              | • Adjust the position. ("Subtitle Position" in Display Menu) | 11 |
| No subtitles.  | • Display the subtitles.                                     | 10 |
| The subtitles overlap closed captions recorded on discs. | • Clear the subtitles.                                       | 10 |

| A-B repeat                            |  |   |
|---------------------------------------|--|---|
| Point B is automatically set.         | • The end of an item becomes point B when it is reached. | – |
| A-B repeat is automatically canceled. | • A-B repeat is canceled when you press [QUICK REPLAY].  | – |

| Picture incorrect  |   |    |
|--|---|----|
| Picture distorted.   | • Ensure that the unit is connected directly to the television, and is not connected through a video cassette recorder.   | 4  |
| Picture size doesn't fit the screen.                           | • Change "TV Aspect" in "Video" tab.  | 12 |
|  | • Use the television to change the aspect. If your television does not have that function, change "4:3 Aspect" in Display Menu.   | 11 |
|  | • Change the Zoom setting.  | 9  |
| The television may display incorrectly or colors appear faded. | • The system used on the disc doesn't match your television.<br>–PAL discs cannot be played. (You can play DVD-Audio, however still pictures may not be displayed correctly.) | –  |
| Menu not displayed correctly.                                  | • Restore the zoom ratio to × 1.00.   | 9  |
|  | • Set "Subtitle Position" in Display Menu to "0".   | 11 |
|  | • Set "4:3 Aspect" in Display Menu to "Normal".   | 11 |
| Auto zoom function does not work well.                         | • Turn off TV's zoom function.  | –  |
|  | • Use the other preset aspect ratios or manual adjustment.  | 9  |
|  | • Zoom function may not work well, especially in dark scenes and may not work depending on the type of disc.  | –  |

## Progressive video

Page

|  |  |             |
|--|--|-------------|
| There is ghosting when progressive output is on. | <ul style="list-style-type: none"> <li>Change "Video Output Mode" in Picture Menu to "480i". This problem is caused by the editing method or material used on DVD-Video, but should be corrected if you use interlace output.</li> </ul>   | 11          |
| Pictures not in progressive output.              | <ul style="list-style-type: none"> <li>If the unit is connected to the television through VIDEO OUT or S VIDEO OUT, output will be interlace.</li> <li>Select "Enable" in "Progressive Out (Component)" in "Video" tab. Then, select "480P" in "Video Output Mode" in Picture Menu.</li> </ul> | –<br>12, 11 |
| Closed captions not displayed.                   | <ul style="list-style-type: none"> <li>When progressive output is on, closed captions will not be displayed.</li> </ul>  | –           |

## Sound incorrect

|   |   |    |
|---|---|----|
| Sound distorted.                        | <ul style="list-style-type: none"> <li>Select "Off" in "Advanced Surround" in Audio Menu.</li> </ul>  | 11 |
|   | <ul style="list-style-type: none"> <li>Select "On" in "Attenuator" in Audio Menu if it causes distortion with AUDIO OUT connections.</li> </ul>   | 11 |
|   | <ul style="list-style-type: none"> <li>Noise may occur when playing WMA files.</li> </ul>   | –  |
|   | <ul style="list-style-type: none"> <li>If the "D.MIX" indicator on the display goes out while playing a multi-channel DVD-Audio disc, sound will only be output from speakers specified by the disc. Read the disc's instructions for details.</li> </ul> | –  |
| Piercing noise comes from the speakers. | <ul style="list-style-type: none"> <li>If you have connected a digital amplifier which does not include decoder, be sure to select "PCM" in "Dolby Digital" or "DTS Digital Surround" in "Audio" tab.</li> </ul>  | 12 |
| Effects do not work.                    | <ul style="list-style-type: none"> <li>None of the audio effects work when the unit is outputting bitstream signals from the DIGITAL AUDIO OUT terminal. In this case, connect with the AUDIO OUT terminal.</li> </ul>                                    | 4  |
|   | <ul style="list-style-type: none"> <li>Some audio effects do not work or have less effect with some discs.</li> </ul>   | –  |
|   | <ul style="list-style-type: none"> <li>Multi Re-master and Advanced surround do not work if you have changed the play speed.</li> </ul>   | –  |

## Recording

|   |   |                      |     |                       |              |                                       |     |
|---|---|----------------------|-----|-----------------------|--------------|---------------------------------------|-----|
| Cannot record to digital recording equipment. (Incorrect sound recorded.) | <ul style="list-style-type: none"> <li>You cannot record WMA/MP3.</li> </ul>  | –                    |     |                       |              |                                       |     |
|   | <ul style="list-style-type: none"> <li>You cannot record DVDs that have protection preventing digital recording.</li> </ul>   | –                    |     |                       |              |                                       |     |
|   | <ul style="list-style-type: none"> <li>You cannot record DVDs if the recording equipment cannot handle signals with a sampling frequency of 48 kHz.</li> </ul>  | –                    |     |                       |              |                                       |     |
|   | <ul style="list-style-type: none"> <li>Make the following settings:                             <table border="0" style="margin-left: 20px;"> <tr> <td>– Advanced Surround:</td> <td>Off</td> </tr> <tr> <td>– PCM Digital Output:</td> <td>Up to 48 kHz</td> </tr> <tr> <td>– Dolby Digital/DTS Digital Surround:</td> <td>PCM</td> </tr> </table> </li> </ul> | – Advanced Surround: | Off | – PCM Digital Output: | Up to 48 kHz | – Dolby Digital/DTS Digital Surround: | PCM |
| – Advanced Surround:  | Off   |                      |     |                       |              |                                       |     |
| – PCM Digital Output:   | Up to 48 kHz  |                      |     |                       |              |                                       |     |
| – Dolby Digital/DTS Digital Surround:                                     | PCM   |                      |     |                       |              |                                       |     |

## Unit displays

|                                  |   |   |
|----------------------------------|---|---|
| "NOPLAY"                         | <ul style="list-style-type: none"> <li>You inserted a disc the unit cannot play; insert one it can.</li> </ul>  | 3 |
|                                  | <ul style="list-style-type: none"> <li>You inserted a blank disc.</li> </ul>  | – |
| "U11"                            | <ul style="list-style-type: none"> <li>Disc is dirty: Wipe it clean.</li> </ul>   | 5 |
| "U15"                            | <ul style="list-style-type: none"> <li>You inserted a DVD-R that has not been finalized.</li> </ul>   | 3 |
| "H□□"<br>□□ stands for a number. | <ul style="list-style-type: none"> <li>Trouble may have occurred. The number following "H" depends on the status of the unit. Turn the unit off and then back to ON. Alternatively, turn the unit off, disconnect the AC power supply cord, and then reconnect it.</li> </ul> | – |
|                                  | <ul style="list-style-type: none"> <li>If the service numbers fail to clear, note the service number and contact a qualified service person.</li> </ul>   | – |
| "NODISC"                         | <ul style="list-style-type: none"> <li>You haven't inserted a disc: Insert one.</li> </ul>  | – |
|                                  | <ul style="list-style-type: none"> <li>You haven't inserted the disc correctly: Insert it correctly.</li> </ul>   | 6 |

## Television displays

|  |   |       |
|--|---|-------|
| "⊘"  | <ul style="list-style-type: none"> <li>The operation is prohibited by the unit or disc.</li> </ul>  | –     |
| "Cannot display group xx, content xx"        | <ul style="list-style-type: none"> <li>You are trying to display incompatible contents.</li> </ul>  | 8     |
| "The progressive out is set to "Disable""    | <ul style="list-style-type: none"> <li>Select "Enable" in "Progressive Out (Component)" in "Video" tab.</li> </ul>  | 12    |
| "This disc may not be played in your region" | <ul style="list-style-type: none"> <li>You can only play DVD-Video if their region number is "1", "ALL" or multiple region number including "1".</li> </ul> | Cover |
| No on-screen display.                        | <ul style="list-style-type: none"> <li>Select "On" in "On-Screen Messages" in "Display" tab.</li> </ul>   | 12    |

## Maintenance

### Clean this unit with a soft, dry cloth.

- Never use alcohol, paint thinner or benzene to clean this unit.
- Before using chemically treated cloth, read the instructions that came with the cloth carefully.

# Limited Warranty (ONLY FOR U.S.A.)

Panasonic Consumer Electronics Company,  
Division of Matsushita Electric Corporation of America  
One Panasonic Way Secaucus, New Jersey 07094

Panasonic Sales Company, Division of Matsushita Electric  
of Puerto Rico, Inc.,  
Ave. 65 de Infantería, Km. 9.5  
San Gabriel Industrial Park, Carolina, Puerto Rico 00985

## Panasonic DVD Player Limited Warranty

### Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("Limited Warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

| Product or Part Name                                       | Parts         | Labor            |
|--|---------------|------------------|
| DVD Player   | One (1) Year  | Ninety (90) Days |
| Rechargeable Batteries<br>(in exchange for defective item) | Ten (10) Days | Not Applicable   |

During the "Labor" Limited Warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must mail-in your product during the warranty period. If non-rechargeable batteries are included, they are not warranted. This Limited Warranty only applies to products purchased and serviced in the United States or Puerto Rico. This Limited Warranty is extended only to the original purchaser and only covers product purchased as new. A purchase receipt or other proof of original purchase date is required for Limited Warranty service.

### Mail-In Service

For assistance in the continental U.S.A. in obtaining repairs please ship the product to:

**Panasonic Services Company  
Customer Servicercenter  
Suite B  
4900 George McVay Drive  
McAllen, TX 78503**

For assistance in Puerto Rico call Panasonic Sales Company (787)-750-4300 or fax (787)-768-2910.

When shipping the unit carefully pack and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone and/or email address where you can be reached.

**IF REPAIR IS NEEDED DURING THE LIMITED WARRANTY PERIOD THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.**

### Limited Warranty Limits And Exclusions

This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as hotel, office, restaurant, or other business), rental use of the product, or service by anyone other than a Factory Servicercenter or other Authorized Servicer, or damage that is attributable to acts of God.

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.** (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, travel to and from the servicer, loss of or damage to media or images, data or other recorded content. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied Limited Warranty lasts, so the exclusions may not apply to you.

This Limited Warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the Limited Warranty period, you may contact your dealer or Servicercenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

**PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.**

## Customer Services Directory

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Servicercenter; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/support>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at:

1-800-211-PANA (7262),  
Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

For hearing or speech impaired TTY users, TTY: 1-877-833-8855

## Accessory Purchases

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

<http://www.pasc.panasonic.com>

or, send your request by E-mail to:

[npcparts@panasonic.com](mailto:npcparts@panasonic.com)

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only) (Monday – Friday 9 am to 8 pm, EST.)

Panasonic Services Company

20421 84th Avenue South, Kent, WA 98032

(We Accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

For hearing or speech impaired TTY users, TTY: 1-866-605-1277

## Service in Puerto Rico

*Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company*

*Factory Servicercenter:*

*Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985*

*Phone (787)750-4300, Fax (787)768-2910*

F1003



1. **Damage requiring service**—The unit should be serviced by qualified service personnel if:
  - (a) The AC power supply cord or AC adaptor has been damaged; or
  - (b) Objects or liquids have gotten into the unit; or
  - (c) The unit has been exposed to rain; or
  - (d) The unit does not operate normally or exhibits a marked change in performance; or
  - (e) The unit has been dropped or the cabinet damaged.
2. **Servicing**—Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized servicing personnel.
3. **Replacement parts**—When parts need replacing ensure the servicer uses parts specified by the manufacturer or parts that have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electric shock, or other hazards.
4. **Safety check**—After repairs or service, ask the servicer to perform safety checks to confirm that the unit is in proper working condition.

### Product information


For product information or assistance with product operation:

In the U.S.A., refer to “Customer Services Directory” on page 16.

In Canada, contact the Panasonic Canada Inc. Customer Care Centre at 1-800-561-5505, or visit the website ([www.panasonic.ca](http://www.panasonic.ca)), or an authorized Servicentre closest to you.

## Conexiones

### ■ Conexión a un televisor

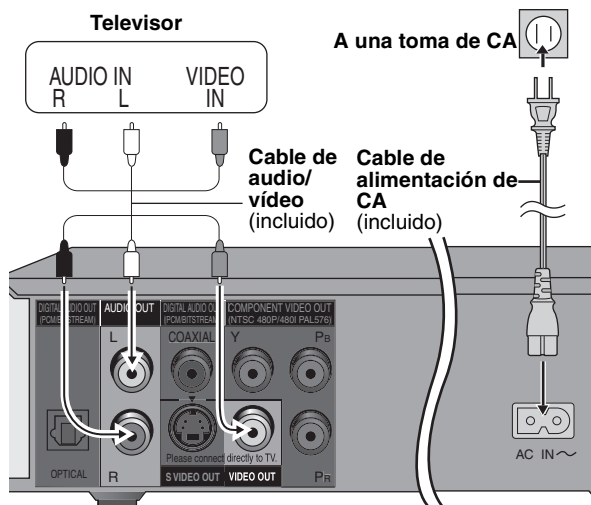

- Conecte el cable de alimentación de CA el último.

## PREPARACIÓN RÁPIDA

Encienda el televisor y seleccione la entrada de vídeo apropiada en el mismo.

- 1 [⏻] Encienda.
- 2 [SETUP] Muestra la pantalla QUICK SETUP.
- 3 [▲ ▼] Pulse [▲ ▼] para seleccionar "Español" y pulse [ENTER]. Siga el mensaje y haga los ajustes.  
[ENTER] [RETURN]
- 4 [ENTER] Pulse para terminar PREPARACIÓN RÁPIDA.
- 5 [SETUP] Pulse para salir.

## Reproducción básica

- 1 [⏻] Encienda.
- 2 [▲] Abre el cajón.
- 3 Introduzca el disco.
- 4 [▶] (PLAY) Inicie la reproducción.



**Parada [■]** La posición se memoriza cuando "▶" parpadea en el visualizador.  
• Pulse [▶] (PLAY) para proseguir.  
• Pulse [■] para borrar la posición.

**Pausa [||]** • Pulse [▶] (PLAY) para reiniciar la reproducción.

**Salto [◀▶]** (**Salto de grupo** **WMA** **MP3** **JPEG** [▲ ▼])

**Búsqueda (durante la reproducción)** [◀▶]  
• Hasta 5 pasos  
• Pulse [▶] (PLAY) para iniciar la reproducción.  
• **VCD** Cámara lenta, sentido de avance solamente

**Cámara lenta (durante la pausa)** [◀▶]

**Cuadro a cuadro (durante la pausa)** [◀▶] • **VCD** Sentido de avance solamente

**Selección de elemento en pantalla** [▲ ▼ ◀ ▶] [ENTER]

**Introduzca número** **RAM** **DVD-A** **DVD-V** **VCD** **CD**  
Botones numerados Ej.: Para seleccionar 12:  
[≥10] → [1] → [2]  
**VCD** con control de reproducción  
Durante la parada, pulse los botones numerados.  
**WMA** **MP3** **JPEG**  
Ej.: Para seleccionar 123:  
[1] → [2] → [3] → [ENTER]

**Menú de disco**  
[TOP MENU] **DVD-A** **DVD-V** Muestra un menú inicial de disco  
[MENU] **DVD-V** Muestra un menú de disco  
[RETURN] **VCD** Muestra un menú de disco

**Vuelta a la pantalla anterior** [RETURN]

**Visualizador del aparato principal** [FL SELECT] Visualización de números  
↑ ↓  
Visualización de tiempo



# Main feature index

Recalls **recommended audio/video setting** (→page 7)

Reproduces **high quality audio** (→page 7)

**Reduces noise in pictures** (→page 7)

Shows a **disc top menu** (→page 6)  
Shows a **program list** (→page 9)

Shows **On-Screen Menus** (→page 10)

Changes **subtitles** (→page 10)

Changes **soundtracks** (→page 10)

**All group/program/random play** (→page 7)

**Sleep timer** (→page 10)



Changes the **unit's display** (→page 6)

**Repeat play** (→page 7)

Changes **play speed** (→page 9)

**Memorizes the position during play** (→page 9)

**Skips back** a few seconds (→page 9)

Shows a **disc menu** (→page 6, 8)  
Shows a **play list** (→page 9)

Changes **angles** or **rotates/advances still pictures** (→page 10)

**Selects groups** to play (→page 10)

Changes the **zoom ratio** (→page 9)

|                  |   |                        |
|------------------|---|------------------------|
| <b>CAUTION</b>   | - LASER RADIATION WHEN OPEN.<br>DO NOT STARE INTO BEAM.   | FDA 21 CFR / Class II  |
| <b>CAUTION</b>   | - VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN.<br>AVOID EXPOSURE TO BEAM.                       | IEC 60825-1 / Class 3b |
| <b>ATTENTION</b> | - RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE.<br>EXPOSITION DANGEREUSE AU FAISCEAU.  |                        |
| <b>ADVARSEL</b>  | - SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING.<br>UNNGÅ UDSÆTTELSE FOR STRÅLING.                     |                        |
| <b>VARO!</b>     | - AVATTAESSA OLET ALLITTAIN NÄKYVÄÄ JA NÄKYMÄTÖN<br>LASERSÄTEILILE. ÄLÄ KATSO SÄTSEEN.              |                        |
| <b>WARNING</b>   | - SYNLIG OCH OSYNLIG LASERSTRÅLING NÄR DENNA DEL<br>ÄR ÖPPNAD. BETRÄKTA EJ STRÅLEN.                 |                        |
| <b>ADVARSEL</b>  | - SYNLIG OG USYNLIG LASERSTRÅLING NÄR DEKSEL ÅPNES.<br>UNNGÅ EKSPONERING FOR STRÅLEN.               |                        |
| <b>VORSICHT</b>  | - SICHTBARE UND UNSICHTBARE LASERSTRÄHLUNG, WENN ABDECKUNG<br>GEÖFFNET. NICHT DEM STRAHL AUSSETZEN. |                        |
| <b>注意</b>        | - 打开时有可见及不可见激光辐射 避免激光束照射。   |                        |
| <b>注意</b>        | - ここを開くと可視及び不可視レーザー光が出ます。<br>ビームを見たり、触れたりしないでください。  | ROLCA0141              |

(Inside of product)



As an ENERGY STAR® Partner,® Panasonic has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

\*For Canada only: The word "Participant" is used in place of the word "Partner".

**Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America**  
One Panasonic Way Secaucus,  
New Jersey 07094  
<http://www.panasonic.com>

**Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc. ("PSC")**  
Ave. 65 de Infantería, Km. 9.5  
San Gabriel Industrial Park, Carolina,  
Puerto Rico 00985

**Panasonic Canada Inc.**  
5770 Ambler Drive  
Mississauga, Ontario  
L4W 2T3  
[www.panasonic.ca](http://www.panasonic.ca)

