 
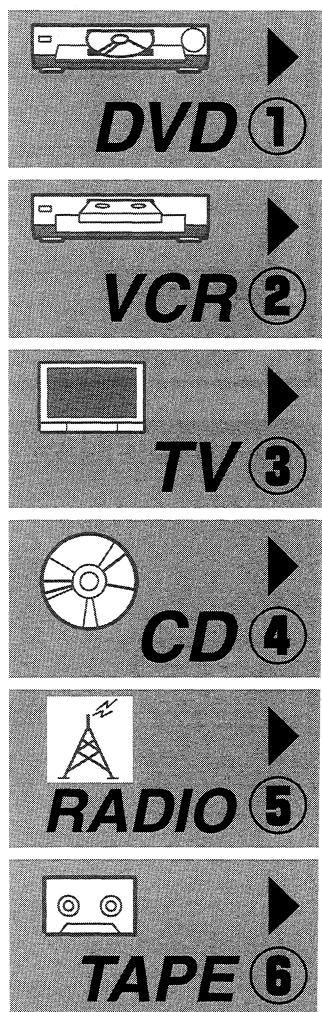 


Panasonic

Remote Control Operation Guide

Model No. **EUR7702KE0**

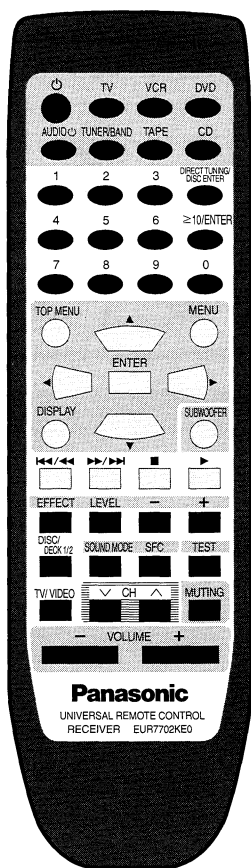

 
This remote control is the key to your home theater experience.

Actual operations depend on your equipment and software.
Be sure to read the instructions for the receiver and your other components.
You may need to enter a code to operate some equipment.
See over for details.

1 DVD

Watching DVDs

Switch on



Switch on the receiver

 


Switch on the television and select input



Switch on the player and start play


Switch off

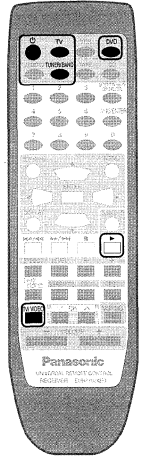

Operating the DVD player


TOP MENU

 Show disc menus



MENU

 Show disc menus



Select and enter menu items

DISPLAY

 
Show player menus



DISC

SELECT


Specify a disc (5-disc changer)




Start play from a selected item



 
Select channels



Skip items during play

 


Stop play

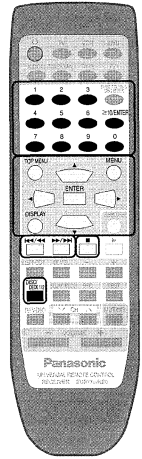 


2 VCR

Watching videotapes



 
Switch on



Switch off

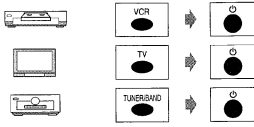 


Operating the video deck

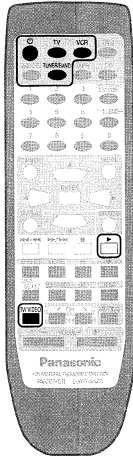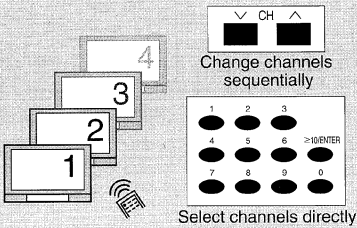   


3 TV

Watching TV



 
Switch on



Switch off

 


Operating the TV

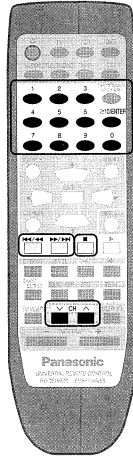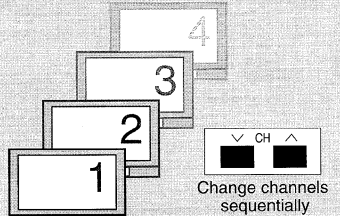   


4 CD

Listening to CDs


 
Switch on




Switch off

 



Operating the CD player

  

 [MEGA CD changer] (holds more than 50 discs)
Start play from a specified disc



Start play from a selected track

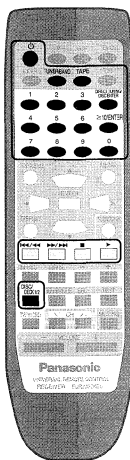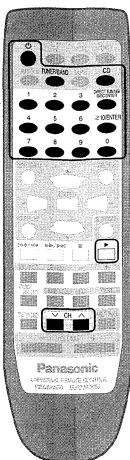  

5 RADIO

Listening to the radio

Switch on



Switch off



 
Operating the radio

Change preset channels sequentially




Select preset channels directly

e.g. Select 4 : [4]
Select 21 : [≥10] [ENTER] → [2] → [1]



Select radio stations by frequency

 e.g. Select 107.9 MHz,
[1] → [0] → [7] → [9]



6 TAPE

Listening to tapes

Switch on



Switch off



 
Operating the tape deck



Stop play


7 SOUND

STEREO MODE



Select STEREO

 SURROUND MODE

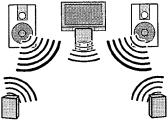

Select SURROUND



Start a test signal



Select the speaker channel and adjust its output level



Stop the test signal

 
When you select Dolby Pro Logic II MUSIC or PANORAMA

SA-HE100 only
When you select DTS NEO:6 MUSIC



Change the sound effect

SFC MODE

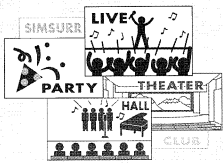


Select HALL, CLUB, LIVE, THEATER, SIM SURR or PARTY



Select the speaker channel and adjust its output level



 Change the delay time

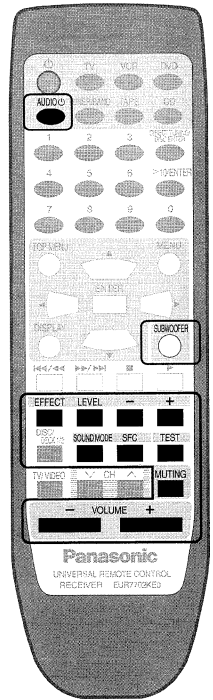

Other functions



MUTING

Mute the volume



SUBWOOFER

Adjust subwoofer output level



Adjust the volume



 
Switch off the receiver and other components

8 CODES


Some remote controls can operate Panasonic and Technics audiovisual equipment that have remote control sensors. You may need to change the remote control code.

It can also operate some other brands of televisions, video cassette recorders, and DVD players. Check the table for the brand and enter the code as follows.


Changing the codes



 Press and hold the button corresponding to the equipment

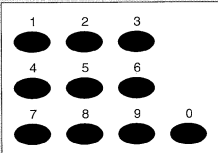


Enter the first digit

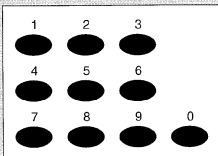 

Enter the second digit

 The remote control outputs the on/off signal. If the code is correct, the equipment turns on or off. If it doesn't, try entering another code.

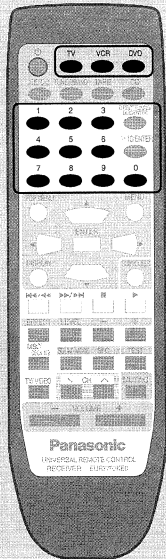


Code table

	TV	VCR	DVD
Panasonic	01,02,26	01,02,09,33	01
Denon	—	—	01,17
Ferguson	—	—	02
Fisher	14	13,14,15 18,34	—
Funai	—	08,30	—
G.E.	02,03,07,09	02,03,11	—
GoldStar	07,15	27	—
Hitachi	05,07	09,10,11	11
JVC	12	19,25,31 38,39,40	09
Kenwood	—	—	15
LXI	03,06,07 10,14,15	10,13,14 15,18,27,30	—
Magnavox	06,07,11 15,22	02,09,12	—
Mitsubishi	07,15,16,21	21,22,28,29	06
NEC	07,15	19,25,31,38	—
Nordmende	—	—	02
Philco	06,07	02,09,12,30	—
Philips	06	02,09,12	04,16
Pioneer	02,10,19	09	03
Quasar	02	01,02,09,33	—
Raite	—	—	13
RCA	03,07,09 13,23,24,25	02,03,04 09,10,11 12,23,24,26	02
Saba	—	—	02
Sampo	—	—	14
Samsung	—	—	10
Sanyo	14	14,18,34	—
Sharp	08,21	16,17	08
Shintom	—	32	—
Sony	04	05,06,07 35,36,37	05
Sylvania	06,07,15	02,09,12,30	—
Symphonic	17	30	—
Thomson	—	—	02
Toshiba	10,21	23,24	04
Yamaha	—	—	01
Zenith	18,20	20	07,12

- Note that this remote control cannot operate some equipment and that it may not be able to perform some operations.
- Reenter the codes after you change the batteries.

 Remote Control Operation Guide

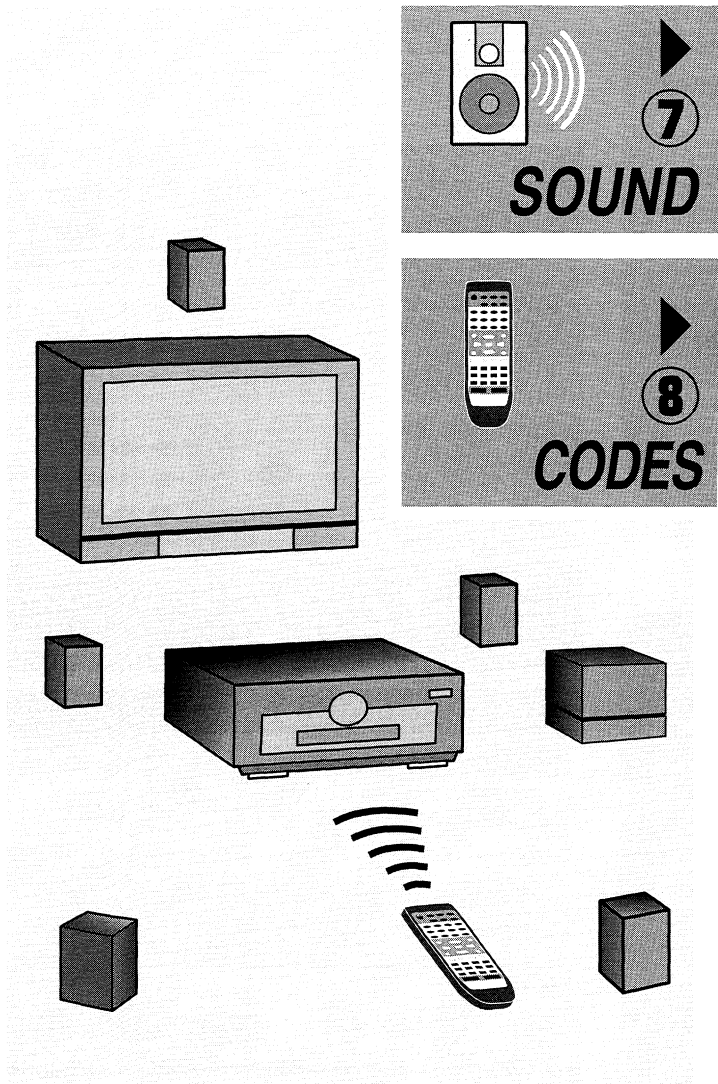

Panasonic[®]
Printed in USA

RQT6201-1P
H1101HM1121