

This document is a text description of the control panel layout for the product listed below.

"PDF" files of the complete operating instructions are available from the Customer Support section of www.Panasonic.com.

If you need the operating instructions in an alternate format, please request it from Customer Support.

High Speed Laser Fax with Answering System

Model Number KX-FL521

Finding the Controls

The control panel of the unit is divided into three equal parts: left, middle, and right.

Left part:

This part contains the telephone keypad laid out in the conventional telephone arrangement with a "nib" on the 5 button. Below the keypad are four circular buttons in a horizontal row: from left to right, REDIAL, MUTE, FLASH and DIGITAL SPEAKER-PHONE. The REDIAL button is also the PAUSE button.

Middle part:

At the top middle part of the panel is a smooth surface. This is the display. Just to the right of the display, the square button is the IQ-FAX button. Immediately below the display is the ONE-TOUCH LABEL CARD, which has three rectangular buttons each, in vertical rows at both ends. Below this card are three circular buttons in a horizontal row: from left to right, HELP, DIRECTORY PROGRAM and MENU. Below these buttons are two circular buttons: On the left is the CALLER ID PRINT button and on the right is the CALLER ID SEARCH button. Below these buttons are three more circular buttons in a horizontal row: from left to right, RECORD, ERASE and PLAY MESSAGES. To the right of these buttons is the JOG DIAL, a large circular dial that clicks as it rotates. Each click indicates one jog step.

Right part:

Just to the right of the IQ-FAX button, the half-moon shaped button is the AUTO ANSWER button. To the right of this button is the COPY ZOOM button, this can be pressed in up and down positions which are PLUS and MINUS keys respectively. These are also the VOLUME control increase and decrease keys.

Below this button are three small buttons in a horizontal row: from left to right, COLLATE, RESOLUTION and QUICK SCAN START. Immediately below these buttons is a button marked with an indented page icon. This is the COPY START button. Below this is a button marked with an indented triangle. This is the STOP button. To the below right of the COPY START button, there is a button with a “nib”, marked with an indented diamond. This is the FAX START button, which is also the SET button.

PFQW1626ZA

June 13, 2001

September 18, 2002 Revised