

This document is a text description of the control panel layout for the product listed below.

"PDF" files of the complete operating instructions are available from the Customer Support section of [www.Panasonic.com](http://www.Panasonic.com).

If you need the operating instructions in an alternate format, please request it from Customer Support.

## Compact Plain Paper Fax with Answering System

Model Number KX-FP155

### Finding the Controls

The control panel of the unit is divided into three equal parts: left, middle, and right.

#### Left part:

This part contains the telephone keypad laid out in the conventional telephone arrangement with a "nib" on the 5 button. Below the keypad are three buttons in a horizontal row: the left one is the FLASH button, the middle one is the REDIAL, and the right one is the MUTE button. The REDIAL button is also the PAUSE button.

#### Middle part:

At the top of the middle part of the panel is a smooth surface. This is the display. Immediately below the display are four buttons in a horizontal row from left to right, RECORD, ERASE, PLAY MESSAGES and AUTO ANSWER. Below and on the left-hand side of this are two more buttons: The oval one on the left is the MENU button and the circular one on the right is the HELP button. Below the MENU button is a long rectangular button. This is the DIGITAL SPEAKER-PHONE button. To the right of these buttons is the NAVIGATOR, which is a large cross key with four active areas. The active areas are the 12 o'clock, 3 o'clock, 6 o'clock, and 9 o'clock positions. The 12 and 6 o'clock positions are PLUS and MINUS keys respectively. These are also the VOLUME control increase and decrease keys. The 3 and 9 o'clock positions are the RIGHT and LEFT arrow keys.

#### Right part:

This part is a vertical row of controls. At the top is the CALLER ID button. Below this are oval buttons. The top one marked with an indented triangle is the STOP button. The one below, marked with an

indented page icon is the COPY button. Below these buttons is a large button with a “nib”, marked with an indented diamond. This is the FAX START button, which is also the SET button. To the lower right of this button is an indentation. This is the microphone.

PFQW1621ZA Apr. 26, 2001

September 19, 2002 Revised