

# Panasonic®

## Operating Instructions

### Network Camera

Model No. **KX-HCM110A**



**Please read this manual before using and save this manual for future reference.**  
**Panasonic Network Camera Website: <http://www.panasonic.com/netcam>**  
for customers in the USA or Puerto Rico

# Main Features

## IPv6<sup>\*1</sup> Network Camera

Your Panasonic Network Camera supports IPv6 (Internet Protocol Version 6), IPv6 was created to address the additional IP addresses that will be needed as the Internet continues to expand. Since the camera also supports IPv4 that's currently used, it is "dual stack" design will seamlessly operate while IPv6 is phased in. For more information in IPv6 you wish to visit <http://www.ipv6.org/>. See page 15 for more information.

## Audio 2-way Communication<sup>\*2</sup> (Walkie-talkie Type)

Your Panasonic Network Camera now provides 2-way audio, between the camera and your PC. You will be able to hear the person on camera and respond using a microphone connected to your PC's sound card (customer-provided.) They will hear your response through the amplified speaker (customer-provided) connected to the camera.

For example, the camera can be used in the following various locations:

- In the baby's room, to hear if the baby is crying.
- At the front door, to see and hear who is at the door.
- In the children's play room, to see and hear if they are safe.

### **Note**

PLEASE NOTE that under certain circumstances, audio/video recording may be PROHIBITED by law. This device should be used only in compliance with all applicable federal, state and local statutes.

## Digital zoom feature<sup>\*3</sup>

Camera has a 10x digital zoom feature.

This feature allows you to increase or decrease the size of the object on the Single Camera screen, the Multi Camera screen, and the Buffered Image screen.

Therefore, it will be easy to view the object that located to a distant place.<sup>\*4</sup> A mouse wheel operation and clicking the right mouse button increase or decrease the size of the object on the Single Camera screen.

---

<sup>\*1</sup> To connect in IPv6, subscribe to the ISP's "IPv4/IPv6 Dual-Stack" or "IPv6 over IPv4 Tunneling" service. The camera does not work in IPv6-only network.

<sup>\*2</sup> Audio feature does not work on cell phones. Talk button and Listen button cannot be used simultaneously. In consequence of traffic and network environments, the audio may be delayed or may break up.

<sup>\*3</sup> This feature is not available when viewing on a cell phone.

<sup>\*4</sup> As the magnification increases, the image quality decreases.

## Various Camera Control Features

The camera pans or tilts fast in maximum 80 ° per second. You can control the camera at high speed from your PC or cell phone. Alarm position feature also allows the camera to automatically turn the lens to the alarm position. Additionally, the following control features are available to easily and quickly monitor the camera.

- Click to Center** ..... When you click a certain point on the camera image, the point is centered on the image.
- Preset Position** ..... You can register 8 preset positions. When you click each button, the image switches to its position.
- Output Control** ..... You can control the external devices (Open or Short to GND) (E.g., turning the light on or ringing a buzzer).

## Multi-Camera Support

Multi-Camera page displays up to 4 cameras while supporting each audio 2-way communication. The previous model displays only 4 cameras, but this camera can switch 3 sets of 4 cameras. Additionally, the camera can displays maximum 12 cameras on a page in a static image.

## DynamicDNS Service Support

DynamicDNS service allows you to access the camera over the Internet with your favorite domain name (e.g. bob.viewnetcam.com) instead of a global IP address.

## Multi-Language Display

Top page, Single Camera and Multi-Camera page can be displayed in English, French, German, Italian, Spanish, Russian, Simplified Chinese or Japanese. The Setup, Maintenance and Support pages are displayed only in English or Japanese.

## Motion Detection feature

Camera has a Motion Detection feature that detects movement, such as people, based on the preset threshold and sensitivity of Camera.

You can buffer the camera images, transfer to an FTP server or send E-mails using the Motion Detection function as a trigger.

## How to Use This Documentation

The camera includes the following 4 manual types.

- **Installation**  
Installation provides explanations for items included with the camera.
- **Getting Started**  
Getting Started provides explanations for the initial configuration and the ways of camera mount. The Getting Started helps you to easily configure the camera.
- **Operating Instructions (This manual)**  
Operating Instructions explains about operations, settings, features and the cleaning method when using the camera.
- **Troubleshooting**  
Troubleshooting provides explanations for troubleshooting tips.

## Trademarks

- Adobe, Acrobat and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- Microsoft, Windows, Hotmail and ActiveX are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Pentium is a trademark or registered trademark of Intel Corporation or its subsidiaries in the United States and other countries.
- Screen shots reprinted with permission from Microsoft Corporation.
- All other trademarks identified herein are the property of their respective owners.
- This software is based in part on the work of the Independent JPEG Group.

## Abbreviations

- UPnP is the abbreviation for "Universal Plug and Play".
- "Network Camera" is called "Camera" in this Operating Instructions.

## System Requirements for your PC

Your PC (Personal Computer) and network must meet the following technical specifications for the camera to work properly.

### For IPv4 Connection

Item	Description
<b>Operating System</b>	Microsoft® Windows® XP, Microsoft® Windows® 2000 Microsoft® Windows® Me, Microsoft® Windows® 98SE
<b>CPU</b>	<ul style="list-style-type: none"> <li>• <b>For viewing single camera</b> Pentium® III (800 MHz or greater is recommended.)</li> <li>• <b>For viewing multiple cameras</b> Pentium 4 (1.8 GHz or greater is recommended.)</li> </ul>
<b>Protocol</b>	TCP/IP protocol (HTTP, TCP, UDP, IP, DNS, ARP, ICMP)
<b>Interface</b>	10/100 Mbps network card installed
<b>Web Browser</b>	Internet Explorer 6.0 or later (Not included on the Setup CD-ROM)
<b>Audio</b>	Audio input/output feature (Microphone or speaker)

## For IPv6 Connection


Item	Description
<b>Operating System</b>	Microsoft® Windows® XP Service Pack 1 or later
<b>CPU</b>	<ul style="list-style-type: none"> <li>• <b>For viewing single camera</b> Pentium III (800 MHz or greater is recommended.)</li> <li>• <b>For viewing multiple cameras</b> Pentium 4 (1.8 GHz or greater is recommended.)</li> </ul>
<b>Protocol</b>	TCP/IP protocol (HTTP, TCP, UDP, IP, DNS, ICMPv6, NDP)
<b>Interface</b>	10/100 Mbps network card installed
<b>Web Browser</b>	Internet Explorer 6.0 or later (Not included on the Setup CD-ROM)
<b>Audio</b>	Audio input/output feature (Microphone or speaker)

### **Note**

See Panasonic Network Camera support website at <http://panasonic.co.jp/pcc/products/en/netwcam/> for the latest information about web browser.

# Camera Feature Locations

## Front View

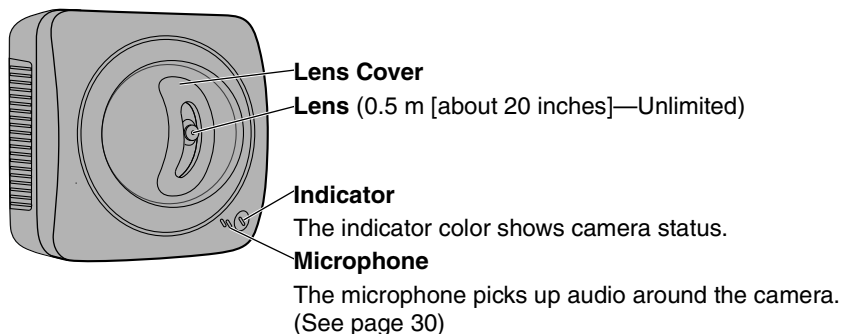

## Indicator Display


Power on	Not on the LAN	Orange blinking
	On the LAN	Orange blinking → Green blinking → Green
Normal Operation* <sup>1</sup>		Green
Automatic Setup	Setting	Green blinking
	Finished setting	Green blinking → Green
Using DHCP	Getting IP address* <sup>2</sup>	Green blinking
	Got IP address	Green
Updating Firmware		Orange blinking
Pressing FACTORY DEFAULT RESET button		Orange blinking → Turning off (The camera restarts after that.)
UPnP™ Failure		Orange blinking (About a 2-second interval)
Internal Failure		Red blinking* <sup>3</sup>

\*<sup>1</sup> The indicator turns orange if the camera is not connected to the LAN.

\*<sup>2</sup> The indicator blinks orange if the camera is not connected to the LAN.


\*<sup>3</sup> See page 4 of the Troubleshooting on the Setup CD-ROM.

## Side View

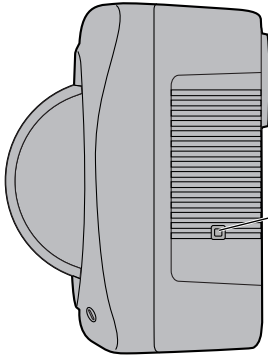

**FACTORY DEFAULT RESET Button**  
Resets settings to default (see page 147).


## Bottom View

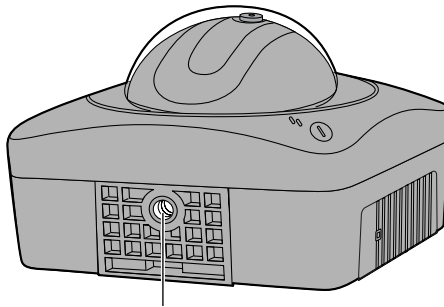

**Stand/Tripod Mounting Hole** (See the Getting Started.)



## Rear View

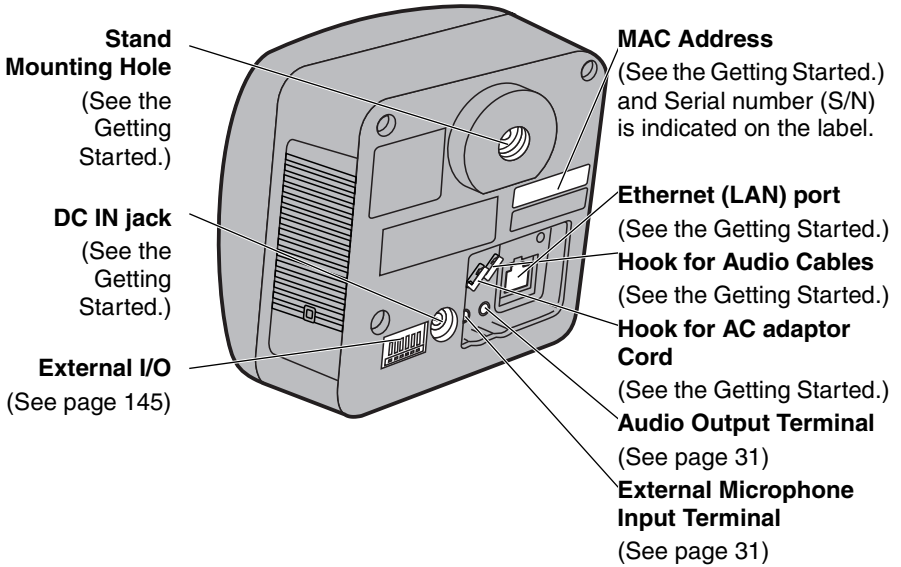

# Table of Contents

<b>1</b>	<b>Camera Monitoring</b>	<b>13</b>
1.1	Accessing the Camera	13
1.1.1	To Access the Camera in IPv6	15
1.2	Viewing Single Camera page	17
1.2.1	Auto Centering the Image (Click to Center)	21
1.2.2	Capturing a Still Image	22
1.2.3	Using Operation Bar	23
1.2.4	Zooming In and Out	25
1.2.5	Setting Home Position/Alarm Position/Preset Button	26
1.3	Listening to Camera Audio—Talking to the Camera	30
1.4	Viewing Multi-Camera page	33
1.5	Viewing Buffered Image page	35
1.5.1	Deleting Buffered Images	37
1.6	Viewing Still Images on Your Cell Phone	38
<b>2</b>	<b>Various Camera Features</b>	<b>40</b>
2.1	Using Camera Features	40
2.2	Connecting the Camera to Your IPv4 Network	43
2.3	Connecting the Camera to Your IPv6 Network	48
2.4	What is IPsec?	52
2.5	Encrypt the Camera Image in Transport Mode	55
2.6	Encrypt the Camera Image in Tunnel Mode	58
2.7	Using UPnP™ (Universal Plug and Play)	62
2.7.1	Connecting the Camera to a Router Supporting UPnP™ (IPv4 Only)	63
2.7.2	Connecting the Camera to a Router Not Supporting UPnP™ (IPv4 Only)	64
2.8	Registering with the DynamicDNS service	65
2.8.1	DynamicDNS Service (IPv4/IPv6)	68
2.9	Setting Date and Time	70
2.10	Changing Camera Settings	73
2.11	Adjusting Audio	78
2.12	Changing Authentication Setting and Administrator User Name and Password	80
2.13	Logging in to the Camera	83
2.14	Creating, Modifying or Deleting General Users	84

2.15	Buffering or Transferring Images by Timer .....	87
2.16	Buffering or Transferring Images by Alarm Signal.....	96
2.17	Buffering or Transferring Images by Motion Detection Signal ....	107
2.18	Transfer the Camera Image in Transport Mode.....	118
2.19	Transfer the Camera Image in Tunnel Mode .....	119
2.20	Setting the Motion Detection .....	120
2.21	Notifying Setup of an Alarm Log .....	123
2.22	Changing Initial Settings on the Single Camera page or the Multi-Camera page .....	125
2.23	Configuring Multiple Cameras.....	128
2.24	Specifying Operation Time.....	130
2.25	Controlling External Output Terminal .....	132
2.26	Changing Indicator Display .....	133
<b>3</b>	<b>Camera Maintenance .....</b>	<b>134</b>
3.1	Maintenance page .....	134
3.1.1	Confirming the Status.....	135
3.1.2	Confirming Session Status .....	135
3.1.3	Displaying Alarm Logs.....	136
3.1.4	Restarting the Camera .....	136
3.1.5	Updating the Camera Firmware .....	137
3.1.6	Creating Configuration File.....	140
3.1.7	Loading Settings from a Configuration File .....	141
3.1.8	Resetting the Camera to Factory Default .....	142
3.2	Support page .....	143
3.2.1	Seeing Help page.....	143
3.2.2	Seeing Product Information.....	143
3.2.3	Seeing Support Information.....	144
3.3	External I/O .....	145
3.4	FACTORY DEFAULT RESET Button.....	147
3.5	Default Setting List.....	148
3.6	Cleaning .....	158
3.6.1	Cleaning the Main Unit .....	158
3.7	Setting an IP Address on Your PC .....	159
3.8	Using Setup Program.....	160

3.9	Setting Your PC.....	164
3.9.1	Setting the Proxy Server Settings on Web Browser .....	164
3.9.2	Setting UPnP™ to Display Camera Shortcut in My Network Places.....	167
3.9.3	Setting the Internet Temporary File Setting on Web Browser.....	167
3.10	ASCII Character Table .....	168
3.11	File Size and Number of Buffered Images .....	169
3.12	Specifications.....	170
	<b>Index.....</b>	<b>173</b>

# 1 Camera Monitoring

## 1.1 Accessing the Camera

1. Start up the web browser on your PC.
2. Enter "**http://IPv4 Address (or URL):Port Number**" on the address bar, and press [Enter] on the keyboard.
  - When port number is 80 (default), you do not need to enter port number. See page 45 for details about port number.
  - For IPv6 connection, see page 15 and page 16, and prepare the requirements. Enter the "**http://(IPv6-registered URL):Port Number**" on the address bar.
  - If the camera image is not displayed, see page 7, page 8 and page 9 of the Troubleshooting on the Setup CD-ROM.


E.g. `http://192.168.0.253:50000` (in IPv4)  
`http://XXXXXX.viewnetcam.com:50000` (in IPv6)

3. The Enter Network Password window is displayed, and enter the user name and password that were set, and click [OK].

### **Note**

When [Permit access from guest users] is set on the Security: Administrator page, authentication window will not be displayed.

4. Click the following tabs to display each page.

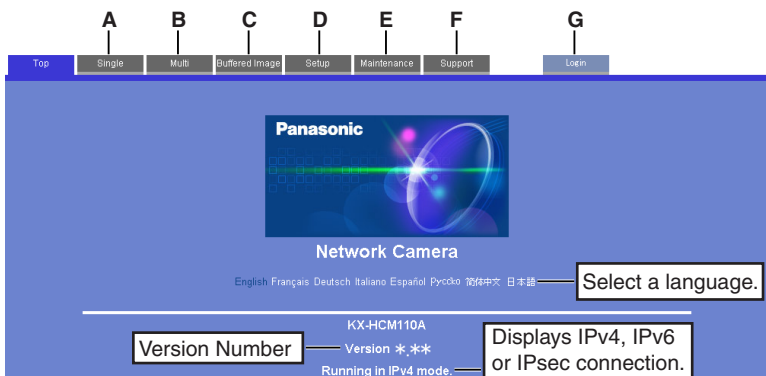

**A** To Single Camera page (page 17)

**B** To Multi-Camera page (page 33)

**C** To Buffered Image page (page 35)

**D** To Setup page (page 40)

**E** To Maintenance page (page 134)

**F** To Support page (page 143)

**G** To log in to the camera (page 83)

**Note**

- When users other than an administrator are accessing the camera, [Setup] and [Maintenance] tab will not be displayed. Additionally, When [Do not permit access from guest users] is set on the Security: Administrator page, [Login] tab will not be displayed.
- If [View Multi-Camera page] or [View Buffered Image page] is not permitted on the General User page, [Multi-Camera] or [Buffered Image] tab will not be displayed.

## 1.1.1 To Access the Camera in IPv6

You need to prepare the followings to access the camera in IPv6.

- **PC Requirements**

**Operating System:** Windows XP Service Pack 1 or later

**Web Browser:** Internet Explorer 6.0 or later

- **An IPv6 Router**

- **An IPv6 Connection Service**

To connect in IPv6, subscribe to the ISP's "IPv4/IPv6 Dual-Stack" or "IPv6 over IPv4 Tunneling" service. The camera does not work in IPv6-only network.

### IPv6 Domain Name Service

In Windows XP, you cannot access the camera entering IP address on the web browser. You need to enter IPv6 URL registered in the domain name service. We recommend Viewnetcam.com service (see page 65) as a domain name service. Ask your ISP about other IPv6 domain name service.

### What is IPv6?

- IPv6 is short for "Internet Protocol Version 6".
- IPv6 was created to address the additional IP addresses that will be needed as the Internet continues to expand.
- IPv6 is expected to gradually replace IPv4, with the 2 coexisting for a number of years during a transition period.
- Though most ISPs (Internet Service Providers) do not yet support IPv6, many local networks already use it. When your ISP supports IPv6, your Panasonic Network Camera will be ready!
- For more information you wish to visit <http://www.ipv6.org/>.

## Setting up the IPv6 Router, your PC, and the Camera

### Setting up the IPv6 Router

Set up the router as you subscribe to the IPv6 service. If the access from WAN side is disabled on the router, enable the TCP packets from WAN side in the packet filtering. See the Panasonic Network Camera support website at <http://panasonic.co.jp/pcc/products/en/netwcam/> for information about the recommended routers.

### Setting up your PC

1. Click [Start] → [All Programs] → [Accessories] → [Command Prompt].
  - Command Prompt window is displayed.
2. Enter "ipv6 install".
  - "Succeeded" is displayed.

#### **Note**

- If Windows XP Service Pack 1 or later is not installed, "Succeeded" will not be displayed. Install it on your PC.
  - When you use Windows XP Service Pack 2, click [Start] → [Control Panel] → [Security Center] → [Windows Firewall] → [Advanced] tab → [Settings] button of ICMP in the Windows Firewall window, then check [Allow incoming router request] check box in the ICMP Settings window.
3. Enter "ipconfig".
    - If the IPv6 address is properly assigned to your PC, IPv6 address will be displayed on the window.

### Setting up the Camera

Usually, IPv6 address is automatically assigned. If you assign a static IPv6 address, see page 48. To access the camera in IPv6, you need to subscribe to the domain name service such as Viewnetcam.com, and register the URL.


### Confirming that You Can Access the Camera

Confirm that the image is properly displayed (see page 13).



## 1.2 Viewing Single Camera page

1. Access the camera (see page 13).
  - The Top page is displayed.
2. Click the [Single] tab at the top of the page.
  - When Security Warning window is displayed, click [Yes] (see page 18).
  - See page 19 for Security Warning window when using Microsoft Windows XP Service Pack 2.

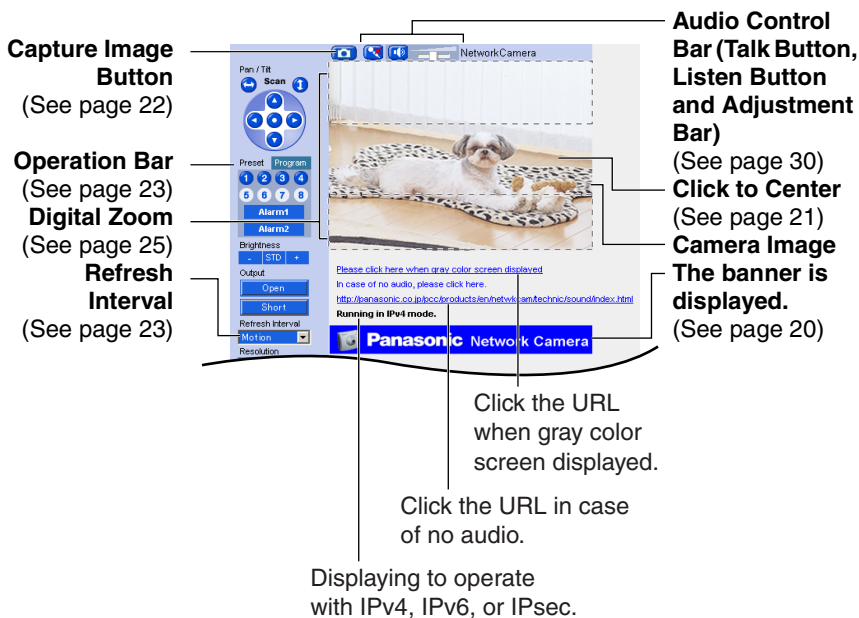

3. Close the web browser.


### Note

- Refresh interval is [Motion] by default. You can change it on the operation bar (see page 23).
- Refresh interval may change depending on the network condition, PC performance and what object you view. Using IPsec or enabling Motion Detection will also slow refresh interval.
- When displaying video (Motion JPEG), the camera allows up to 30 simultaneous accesses. When trying more than 30 accesses, the 31st user will see a gray screen. (Maximum 30 accesses for a Buffered Image page too.)

- When the pan/tilt reaches the end, a shadow may be displayed partially. This is not a problem.
- To reduce the data traffic, the video can be automatically changed to refreshing still images on the General User page (see page 84).
- To display the Single Camera page directly, add it to the [Favorites] on the web browser.
- When you view a dark image, enable the color night view mode on the Camera Setup page (see page 73). The image will be brighter, but the refresh interval may slow down and image quality may decrease in a dark place.

## Security Warning window

To view a video (Motion JPEG) or to use audio feature, ActiveX® Controls must be installed. When trying to display a video for the first time, Security Warning window will be displayed. When using Windows XP or Windows 2000, log in as an administrator to install it.

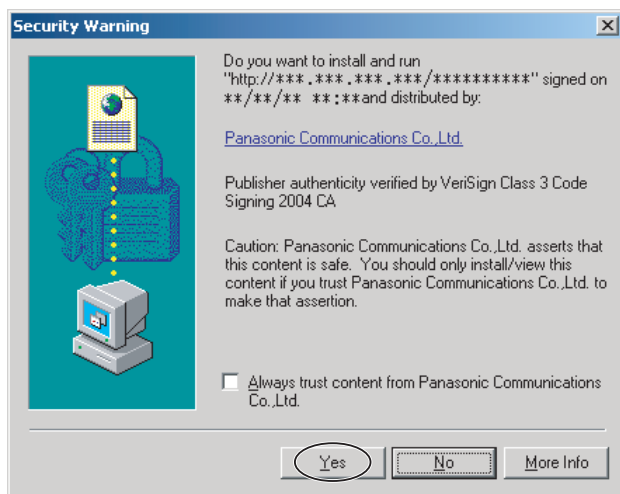

## If you cannot install ActiveX Controls or you cannot see the video in the Internet Explorer

- Click [Tools]→[Internet Options]→[Security] tab and click [Custom level] on the web browser.
  - (1) Check "Prompt" in "Download signed ActiveX Controls".
  - (2) Check "Enable" in "Run ActiveX Controls and plug-ins".
- ActiveX Controls can be installed from the file on the Setup CD-ROM.
  - (1) Restart the PC.
  - (2) Confirm that Internet Explorer is closed.
  - (3) Double-click "ocx\ActiveXInst.exe" on the Setup CD-ROM.

## Note


- When the IP address was changed for the camera, enter it on the address bar.
- Video may not be displayed quickly or audio may not be listened immediately. Wait for a while.
- If you use a proxy server, set the web browser not to access the proxy server (see page 164).
- In some corporate network environments a firewall may be used for security purposes. It is possible that this may prevent motion video from being displayed. In this situation we suggest:
  - Contact your network administrator.
  - Try using regularly refreshed images.

## Security Warning window on Microsoft Windows XP Service Pack 2


To view a video (Motion JPEG) or to use audio feature, ActiveX Controls must be installed.

Follow the steps shown below to install ActiveX Controls.

1. Click the warning displayed above the tabs, and click [Install ActiveX Control...].

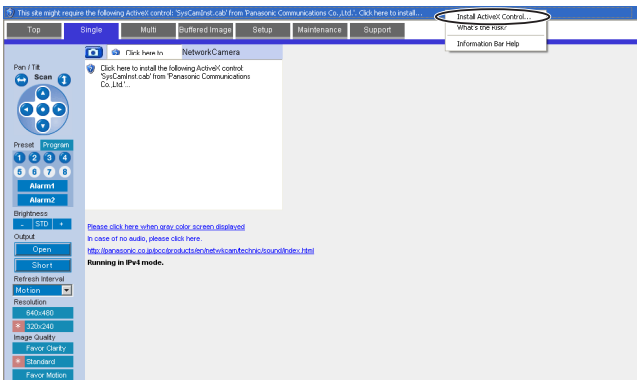

2. Click [Install].

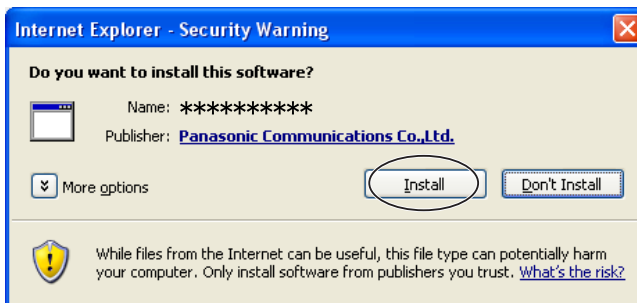

[For assistance, please call: 1-800-272-7033]

## The Banner

When the camera accesses the Internet, the banner displays product information about cameras or announcements about the latest firmware, etc. from Panasonic. Whether or not to display the banner can be set at Banner Display (see page 125).

### **Note**

- The banner is displayed when [Yes] is checked for Allow Access from the Internet on the Automatic Setup page, or when [Enable] is checked for Auto Port Forwarding on the UPnP page for the Connection Mode of Static or DHCP.
- Even if [Yes] is checked for Allow Access from the Internet on the Automatic Setup page, or [Enable] is checked for Auto Port Forwarding on the UPnP page for the Connection Mode of Static or DHCP, when the camera is not connected to the Internet, ☒ is displayed.

## 1.2.1 Auto Centering the Image (Click to Center)

Using your mouse, click any portion of the camera image. As long as it is within the pan/tilt range of the camera, the image will automatically move to place the selected point in the center of the screen.

1. Move the cursor to the desired point.



2. Click it.

- The clicked point is centered.
- See page 24 for the pan/tilt operation.




### **Note**

- When using the digital zoom feature, the Click to Center feature is available.
- When End Display appears on the operation bar, Click to Center does not work beyond the pan/tilt end (see page 23).
- The clicked position may slightly miss the center depending on the lens direction.
- If Click to Center is not permitted on the General User page (see page 84), Click to Center does not work.


## 1.2.2 Capturing a Still Image

A still image can be saved on your PC.

1. Operate pan/tilt and select a resolution to display an image.
2. Click the capture image button.

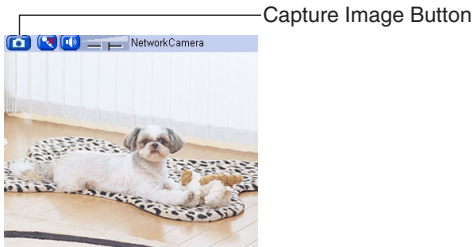


- The camera image opens in another window.
3. Right-click the image, and select [Save Picture As...].

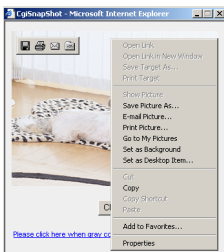

- Save as dialog box is displayed.
4. Specify a folder, and click [Save].
    - Camera image is saved in the folder.
  5. Click [Close].

## 1.2.3 Using Operation Bar

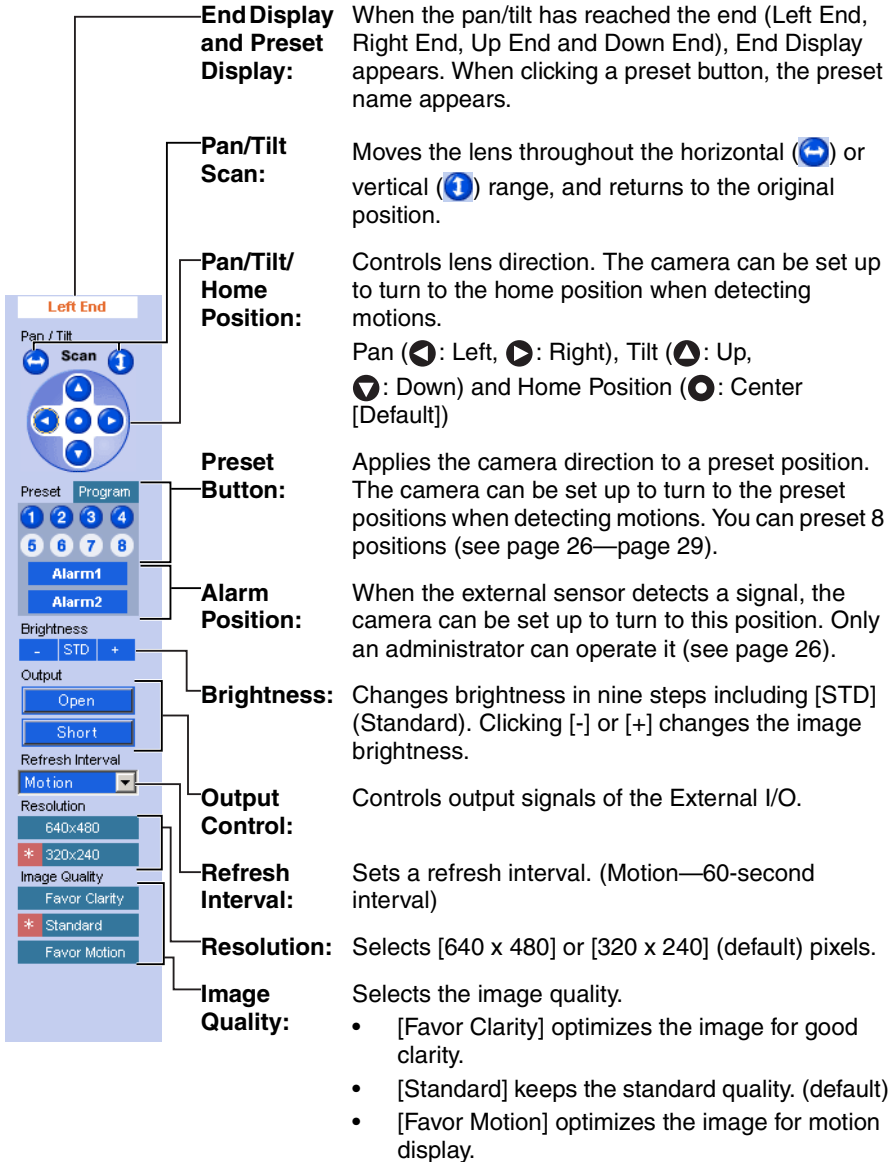


**Note**


When the camera image is not displayed correctly, click [Refresh] at the tool bar on the web browser. The image will be refreshed.

**Pan/Tilt Operation**

Pan/tilt scan buttons automatically move the lens horizontally from  $-60^{\circ}$  to  $+60^{\circ}$  and vertically from  $-45^{\circ}$  to  $+20^{\circ}$  and return the lens to the original position. Each pan/tilt arrow moves the lens Up, Down, Right or Left, and the home position button moves it to the home position.

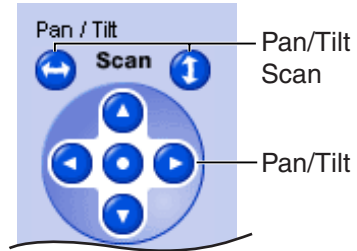

**Pan/Tilt Range**

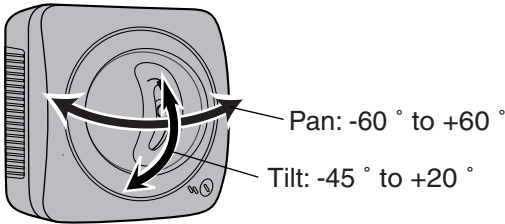

**Note**

When the pan/tilt reaches the end, a shadow may be displayed partially. This is not a problem.



## 1.2.4 Zooming In and Out

Camera has a 10x digital zoom feature.

There are two methods of increasing/decreasing the size of the object on the Single Camera screen, the Multi Camera screen, and the Buffered Image screen (only while playing video):


1. Rotating the mouse wheel  
Rotating the mouse wheel away from you zooms in, and rotating it towards you zooms out.
2. Clicking the right mouse button  
Clicking the right mouse button on the upper third of the Single Camera screen zooms in, and clicking on the lower third of the Single Camera screen zooms out.

### Note

- The Click to Center feature is available even while zooming in or out.
- This feature is not available when viewing on a cell phone.
- As the magnification increases, the image quality decreases.

### Rotating the mouse wheel

On a screen, rotating the mouse wheel away from you zooms in, and rotating it towards you zooms out.

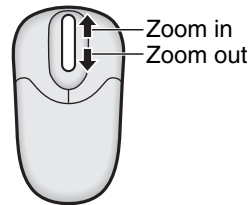


### Note

The performance of the mouse varies according to your OS.

### Clicking the right mouse button

Clicking the right mouse button on the upper third zooms in, and clicking on the lower third zooms out. Zooming in and out is also available by moving the mouse up with pressing the right mouse button, or moving the mouse down with pressing the right mouse button.

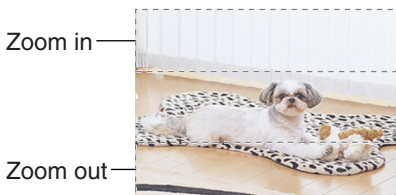


## 1.2.5 Setting Home Position/Alarm Position/Preset Button

### Registering Home Position/Alarm Position

A home position or 2 alarm positions can be registered. When restarted, the camera takes a home position. The alarm position is one that the camera turn to when detecting alarms or motions. If the Lens Position When Triggered setting is set (see page 98 or page 108), the camera takes an alarm position after the External I/O detects a signal or the camera detects motions. See page 145 for the External I/O.

1. Click [Program].
  - [Program] switches to [Cancel].  
Click [Cancel] to quit without saving changes.
2. Pan and tilt the camera to a desired position.
3. Click the home position button or the alarm position button.
4. Click [Save] to register, or click [Back] and [Cancel] to cancel.
  - If "Success!" is displayed, click [Back].

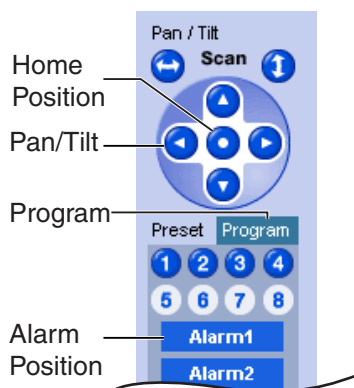

#### **Note**

The digital zoom value will not be saved.

## Registering a Preset Button




8 camera positions can be registered as presets. By default, the preset buttons (1—4) are registered 1: Upper Left, 2: Upper Right, 3: Lower Left and 4: Lower Right. These buttons can be changed (see page 29). The camera can be set up to turn to the preset positions when detecting motions.

- Registered buttons are shown in blue.
- Unregistered buttons are shown in white.

1. Click [Program].
  - [Program] switches to [Cancel].  
Click [Cancel] to quit without saving changes.
2. Pan and tilt the camera to a desired position.
3. Click a preset button (1—8) to register.  
E.g.:  
Setting "Middle" for the preset 5.
4. Enter the preset name.
  - Maximum 15 characters.
  - Enter ASCII characters (see page 168) or characters in each language. But [Space], [", ['], [&], [<] and [>] are not available.
5. Click [Save] to register, or click [Back] and [Cancel] to cancel.
  - If "Success!" is displayed, click [Back].

### Note

- When registering preset buttons, the camera also saves brightness and white balance settings.
- Only an administrator can register preset buttons.
- The digital zoom value will not be saved.

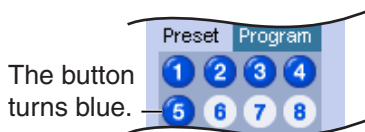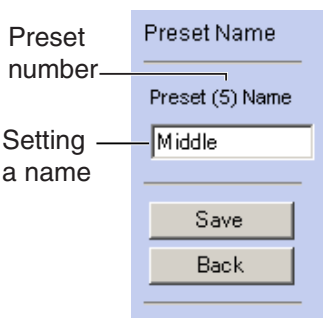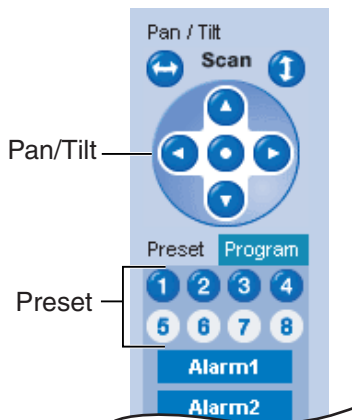


## Viewing the Image

1. Click the home position, alarm position or registered preset button.
  - The camera takes each position, and the image is displayed.

The preset name will be displayed when the lens reaches an end.

Putting the cursor displays the preset name.

Alarm Position



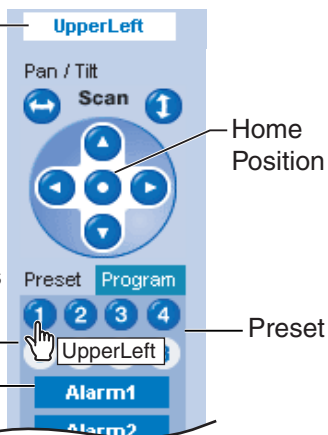


## Changing or Deleting the Settings

1. Click [Program].
  - [Program] switches to [Cancel]. Click [Cancel] to quit without saving changes.
2. Pan and tilt the camera to a desired position.
  - When deleting, this step is not necessary.
3. Click the home position, alarm position or a preset button (1—8).
4. Click [Save] after setting the preset name or click [Delete].
  - If you quit to change or delete settings, click [Back], and then [Cancel].
  - If "Success!" is displayed, click [Back].

### Note

The home position or the alarm position cannot be deleted, and these position names cannot be changed either.

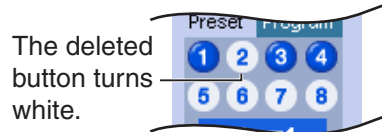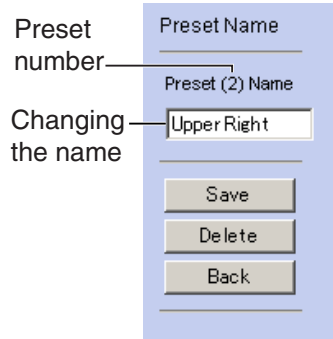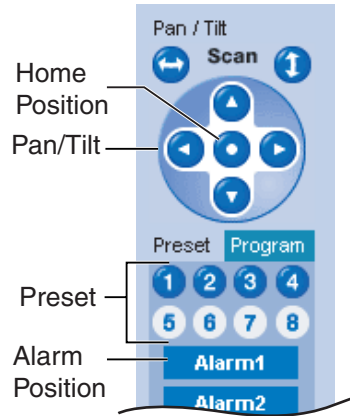

## 1.3 Listening to Camera Audio—Talking to the Camera

1. Access the camera (see page 13).
  - The Top page is displayed.
2. Click the [Single] tab at the top of the page.
3. The Audio Control Bar (Talk Button, Listen Button and Adjustment Bar) is displayed at the top of the screen. Listening or Talking is selected using the 2 icons. For general users, the feature must be enabled, otherwise it will not be displayed.

### Audio Feature

#### Listen Button

#### Talk Button



: You can talk from the camera using the PC's microphone. Clicking the button temporarily stops sending audio.




: The audio is stopped. Clicking the button again starts the Talk feature.



: You can listen to the audio around the camera. Clicking the button temporarily stops the audio.



: The audio is stopped.

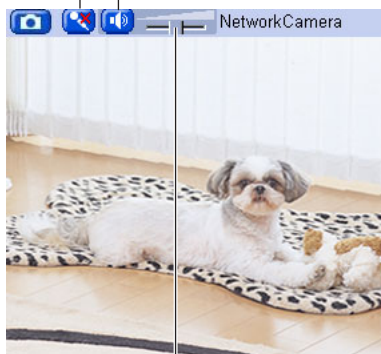

#### Adjustment Bar

(Volume adjustment only for listening)




This slider adjusts the volume. To the right side, the volume is larger. To the left side, the volume is smaller.


#### Note

- Talk button and Listen button cannot be used simultaneously. Talk feature is stopped during listening. Talk feature can be used only for a user. Listen feature can be used for maximum 10 users. If the audio is interrupted, reduce the max. bandwidth (see page 43 and page 48). In this case, the number of users for listening are reduced.

- Audio features such as camera microphone sensitivity and mute during pan/tilt can be set up on the Audio page (see page 78).
- If you are running other applications or opening multiple windows, the audio may be interrupted or delayed.
- When the image is refreshed during any operation such as preset registration or a web browser refresh, the volume is reset to the default (midrange) position. Audio that was muted is enabled.
- The audio may be interrupted due to your PC's performance or network environment. Reduce the max. bandwidth (see page 43 and page 48).
- If the camera is accessed while the PC user visits other websites, the active microphone may pick up audio from the PC's speakers. Be careful with it.
- Talk feature cannot be used from a PC when the camera is accessed via a proxy server.
- If you cannot listen to the audio or talk from your PC, see page 14 of the Troubleshooting on the Setup CD-ROM.
- If you use external microphone, excessive length or poor quality microphone cable can cause a degradation in audio quality.
- The cables for the external microphone must be less than 7 m (about 23 feet) long.
- To talk to the camera from your PC, an external amplified speaker such as the Panasonic RP-SPT70 or equivalent (customer-provided) must be connected to the camera. The speaker connects to the camera with a stereo audio cable similar to that used by your PC. Though the connector is stereo, the audio is not.

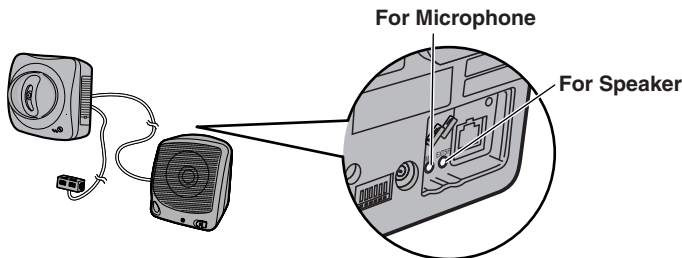

- The external microphone input terminal does not correspond to a line level. Audio may be distorted when the line level is input. Audio distortion will be solved if you insert the following circuits. Under no circumstance should high level audio, such as from a speaker, be connected to this input terminal. Doing so is likely to damage the camera.

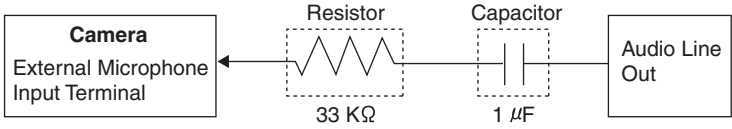



## 1.4 Viewing Multi-Camera page

To view multiple cameras on the Multi-Camera page, you need to configure each camera on the Multi-Camera Setup page (see page 128).

1. Access the camera (see page 13).
  - The Top page is displayed.
2. Click the [Multi] tab at the top of the page.



- Multi-Camera page can display up to 12 camera images.

### Capture Image Button (See page 22)

Switches cameras to display. If you select [All] at the View Type, video (Motion JPEG) or audio buttons cannot be displayed.

Selects [320 x 240] (default) or [160 x 120] pixels resolution.

Selects a refresh interval (Motion—60-second interval).

When clicking the camera name, the Single Camera page is displayed on another window.

### Audio Control Bar (Talk button, Listen button and Adjustment Bar) (See page 30)

3. Close the web browser.

### **Note**

- When selecting [All] at the View Type, all images are displayed in 160 x 120 pixels resolution, and the Audio Control Bar is not displayed.
- 640 x 480 pixels image cannot be displayed on the Multi-Camera page.
- When viewing video (Motion JPEG), we recommend using an Ethernet switching hub instead of the repeater hub to prevent degradation in video display.
- Due to the network congestion or the number of accesses, the refresh interval may slow down.
- When the refresh interval is slow, restrict the bandwidth on the Network page (see page 46 and page 51). The refresh interval may be improved.
- To reduce the data traffic, the video can be automatically changed to refreshing still images on the General User page (see page 84).
- When viewing 4 cameras on the Multi-Camera page, you may need 3 to 4 Mbps bandwidth. If the bandwidth is not enough, the refresh interval may slow down.
- The digital zoom can be used. (only for video)
- Click to Center feature can be used while using the digital zoom.

### **When the image is not displayed on the Multi-Camera page**

- Confirm that the Internet IP address is specified for each camera and that each camera is connected to the Internet. For Internet access, local IP addresses (192.168.xxx.xxx) cannot be used.
- Confirm the settings on the Multi-Camera Setup page (see page 128).
- Confirm that the web browser is not accessing the proxy server (see page 164).

### **When setting [Do not permit access from guest users] on the Security: Administrator page**

- An authentication window is displayed in camera access. Enter the administrator's or the general user's user name and password.
- When you view the images on the Multi-Camera page, all authentication windows of the configured cameras are displayed. Enter the administrator's or the general user's user name and password registered for each camera.

## 1.5 Viewing Buffered Image page

To buffer the images on the internal memory, you need to set up image transfer settings (see page 87, page 96 or page 107). You can view buffered images on this Buffered Image page.

### Note


Sound cannot be buffered on the Buffered Image page.

1. Access the camera (see page 13).
  - The Top page is displayed.
2. Click the [Buffered Image] tab at the top of the page.



3. Click the trigger number.

The trigger number is displayed (see page 87, page 96 or page 107).

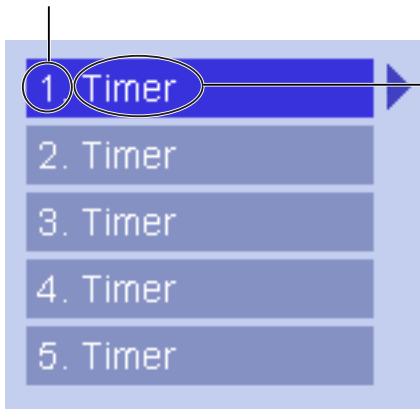

The trigger is displayed (see page 87, page 96 or page 107).

#### 4. Display images clicking buttons below.



Date and time of the day when the images were buffered are displayed.

Date, time and frame number are displayed.

#### **[Play]:**

The buffered images are displayed continuously.

#### **[<Prev] or [Next>]:**

The previous or next image is displayed.

#### **[First], [<100], [<10] or [10>], [100>], [Last]:**

First, 10th, 100th, image before or last, 10th, 100th image after of the displayed image appears.

#### **Note**

- Date, Time and frame number are not displayed in play mode.
- A still image can be saved on the Buffered Image page, if you are not playing images on it. Put the cursor on the image, and right-click it. Then select [Save Picture As...].
- Maximum number of buffered images change depending on resolution, image quality and what object the camera buffers. At the 320 x 240 pixels resolution and the standard quality, the camera buffers about 125 frames. (If 3 triggers are enabled [maximum 5 triggers], the internal memory capacity is divided into 3 sections. In this case, each trigger can buffer about 40 images.) See page 169 for the internal memory capacity.
- The buffered images are displayed chronologically.
- The digital zoom can be used while viewing buffered images (only while playing video).
- Click to Center feature can be used while using the digital zoom.

## 1.5.1 Deleting Buffered Images

If you intend to delete images for each transfer condition, click [Delete Buffered Images] on the Trigger page (see page 87, page 96 or page 107).

### **Note**

- If you are buffering images on the internal memory, the following operations also delete all buffered images.
  - Turning off the camera.
  - Saving the Date and Time page.
  - Restarting, updating firmware or resetting the camera to factory default.
  - Changing the setting for [Enable Image Buffer/Transfer]. (See page 87, page 96 or page 107)

## 1.6 Viewing Still Images on Your Cell Phone

You can view still images over the Internet from a compatible cell phone.

Enter "**http://IP address (or URL):Port Number/mobile**" on a cell phone and press [OK].

- When the port number is set to 80 (default), it is not required.  
E.g. `http://202.208.167.XXX:50000/mobile`  
(or `XXXXX.viewnetcam.com:50000/mobile`)
- The camera must be allowed the Internet access for cell phone access.
- When an authentication window is displayed, enter the administrator's or the general user's user name and password.
- A still image is displayed. (Video [Motion JPEG] cannot be displayed.)



(4)L(2)U(8)D(6)R

(5)Refresh

(0)Resolution

Home Position

(1)"UpperLeft"

(3)"UpperRight"

(7)"LowerLeft"

(9)"LowerRight"

"Preset 5"

"Preset 6"

"Preset 7"

"Preset 8"

Alarm Log

Alarm Log Info.

Displays Up to 50  
Logs in order of  
time.

Control Page

New Logs:3

3/22 19:52 A1 R

3/22 19:51 A2 F

3/22 19:51 MD

Control Page

Pressing 2, 4, 6 or 8 on the cell phones allows you to pan or tilt the camera in four directions: Left, Up, Down or Right.

Pressing 5 will refresh the image.

160 x 120 resolution is displayed at the first access. Pressing 0 switches the resolution to 320 x 240.

Executing [Home Position] moves the lens to the home position.

Pressing 1, 3, 7 or 9 on the keypad allows you to use the first four registered preset buttons.

Registered presets 5—8 are available by activating the link on the cell phone page.

Displays up to 50 Logs in order of time, and only when logging in as an administrator.

Go to the control page when clicking.

Displays the number of new logs.

Displays the date and time, the kind of signal and sensor.

Go to the control page when clicking.

**Note**

- Audio feature does not work on cell phones.
- If the features are not permitted on the General User page, the buttons related with the features are not displayed. (See page 84)
- If the image is not displayed properly, try the following 2 URLs.
  1. **http:// IP address(or URL):Port Number/MobileH** for HTML.  
(or XXXXX.viewnetcam.com:50000/MobileH)
  2. **http:// IP address(or URL):Port Number/MobileX** for XHTML.  
(or XXXXX.viewnetcam.com:50000/MobileX)
- When pan/tilt reaches the end, the keypad number and character disappear.  
E.g.: The pan reaches the left end.

(4)L(2)U(8)D(6)R      "(4)L" disappears.      (2)U(8)D(6)R

- Some cell phones are not compatible with Panasonic Network Cameras. Some phones may allow viewing only on port 80, and some may not support password authentication. See the Panasonic Network Camera support website at <http://panasonic.co.jp/pcc/products/en/netwkcam/> for a cell phone model list, and the compatibility level which has been verified with the Panasonic Network Camera.
- Some cell phones display images not at the specified resolution but at a decreased size.

## 2 Various Camera Features

### 2.1 Using Camera Features

1. Access the camera (see page 13).
  - The Top page is displayed.

#### Note

- When [Permit access from guest users] is set on the Security: Administrator page, click [Login] tab and log in as an administrator.
  - When users other than an administrator are accessing the camera, the [Setup] and [Maintenance] tabs are not displayed.
  - If [View Multi-Camera page] or [View Buffered Image page] is not permitted on the General User page, [Multi-Camera] or [Buffered Image] tab will not be displayed.
2. Click [Setup] tab at the top of the page.

Top Single Multi Buffered Image Setup Maintenance Support

Basic

(1) Network(IPv4) **Network(IPv4)**

(2) Network(IPv6)

(3) IPsec

(4) UPnP

(5) DynamicDNS

(6) Date and Time

(7) Camera

(8) Audio

Account

(9) Administrator

(10) General User

Buffer/Transfer

(11) Trigger

(12) Motion Detection

(13) Alarm Log

Advanced

(14) Image Display

(15) Multi-Camera

(16) Operation Time

(17) External Output

(18) Indicator Control

Set up network configuration.  
Select "Automatic Setup" if you connect the camera to the router and wish to set it up automatically.  
Select "Static" if you wish to assign a static IP address to the camera.  
Select "DHCP" if you are using the DHCP function of your router or ISP.

Connection Mode		
Connection Mode	Current Setting	
<a href="#">Automatic Setup</a>	X	Configure network settings automatically
<a href="#">Static</a>		Assign static IP address to the camera.
<a href="#">DHCP</a>		Get IP address from DHCP server



---

**Basic**

- (1) **Network (IPv4)** Configures the IPv4 network settings to connect the camera to the network (see page 43).
  - (2) **Network (IPv6)** Configures the IPv6 network settings to connect the camera to the network (see page 48).
  - (3) **IPsec** Enables IPsec (Transport or Tunnel mode) (see page 52).
  - (4) **UPnP** Enables automatic port forwarding or shortcut to the camera (see page 62).
  - (5) **DynamicDNS** Registers with the DynamicDNS service (see page 65).
  - (6) **Date and Time** Sets the date and time, automatic time adjustment and adjust clock for daylight saving time settings (see page 70).
  - (7) **Camera** Sets camera name, white balance, pan/tilt range, return to specified position and color night view settings (see page 73).
  - (8) **Audio** Sets output, volume, PC audio input timeout, input, camera microphone sensitivity and mute during pan/tilt settings (see page 78).
- 

**Account**

- (9) **Administrator<sup>1</sup>** Sets authentication setting and administrator security (user name and password) (see page 80).
  - (10) **General User<sup>1</sup>** Sets general user security (user name and password) and general user's access level (see page 84).
- 

**Buffer/Transfer**

- (11) **Trigger** Sets image buffer or transfer by timer or alarm or motion detection. (See page 87, page 96 or page 107)
  - (12) **Motion Detection** Sets the threshold and the sensitivity (see page 120).
  - (13) **Alarm Log** Sets the information to notify the log by e-mail (see page 123).
-

## Advanced

- |                                       |   |
|---------------------------------------|---|
| <b>(14) Image Display</b>             | Sets resolution, image quality and refresh interval of Single Camera and Multi-Camera page, time stamp setting, language and banner (see page 125). |
| <b>(15) Multi-Camera<sup>*1</sup></b> | Sets the camera IP address or host name, camera name on the Multi-Camera page (maximum 12 cameras) (see page 128).                                  |
| <b>(16) Operation Time</b>            | Sets time period to display camera images (see page 130).   |
| <b>(17) External Output</b>           | Sets the digital output terminal of the External I/O (see page 132).  |
| <b>(18) Indicator Control</b>         | Sets indicator display (see page 133).  |

---

<sup>\*1</sup> If you change [Administrator], [General User], or [Multi-Camera Setup page] settings, changes will not be applied to the video (Motion JPEG) viewers. Restart the camera to make changes applied to all video viewers.

## 2.2 Connecting the Camera to Your IPv4 Network

The Network page offers three options to configure the camera in IPv4.

- [Automatic Setup] automatically assigns an unused IP address to the camera, and uses UPnP™ (Universal Plug and Play) to configure your router.
  - [Static] allows the user to use a specific IP address.
  - [DHCP] is offered for ISPs who require this option.
1. Click [Network (IPv4)] on the Setup page.
  2. Click a connection mode.

Connection Mode	
Connection Mode	Current Setting
<a href="#">Automatic Setup</a>	Normally sets Automatic Setup.
<a href="#">Static</a>	Uses a static IP address.
<a href="#">DHCP</a>	Uses ISP DHCP server function.

- Each page is displayed (see page 43—page 44).
3. Enter each parameter in the proper data field.

### Automatic Setup

The camera automatically obtains the network settings (subnet mask, default gateway and DNS server address) utilizing a DHCP feature on the router. The camera also automatically searches the unused IP address on your network. If you select [Yes] at the Allow Access from the Internet, the camera automatically enables port forwarding by using UPnP™. In this case, the camera automatically searches the unused port number on your network in the order from 50000 to 50050.

<b>Allow Access from the Internet</b>	
<input checked="" type="radio"/> Yes	
<input type="radio"/> No	
<b>Max. Bandwidth Usage</b>	
Unlimited	
<b>Connection Type</b>	
Auto Negotiation	
<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

- Clicking [Cancel] takes you back to the previous page without saving changes.

## DHCP Setup

Network Configuration from Setup Program	
<input checked="" type="checkbox"/> Enable	
Internet Connection	
Port No.	<input type="text" value="80"/>
Host Name	<input type="text"/>
Default Gateway	
Default Gateway	<input type="text"/>
DNS	
DNS Server 1	<input type="text"/>
DNS Server 2	<input type="text"/>
Max. Bandwidth Usage	
<input type="text" value="Unlimited"/>	
Connection Type	
<input type="text" value="Auto Negotiation"/>	
<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

## Static Setup

Network Configuration from Setup Program	
<input checked="" type="checkbox"/> Enable	
Internet Connection	
Port No.	<input type="text" value="80"/>
IP Address	<input type="text" value="192.168.0.253"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
Default Gateway	
Default Gateway	<input type="text"/>
DNS	
DNS Server 1	<input type="text"/>
DNS Server 2	<input type="text"/>
Max. Bandwidth Usage	
<input type="text" value="Unlimited"/>	
Connection Type	
<input type="text" value="Auto Negotiation"/>	
<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

- Clicking [Cancel] takes you back to the previous page without saving changes.

#### 4. Click [Save] when finished.

- New settings are saved.
- When finished, the following page is displayed.

**New settings are saved.**

New settings are saved. Please restart the camera.

Note.(1)All the buffered images will be erased when restarted.  
 (2)Please use Setup Program to find out the camera on your network when you select "Automatic Setup" or "DHCP".

## Note

The current network settings are shown on the Status page in the Maintenance section (see page 135).

#### 5. Click [Restart].

- The camera restarts, and the Top page is displayed.
- If the camera is restarted, all buffered images on the internal memory are deleted.
- Checking [Yes] for [Allow Access from the Internet] on [Automatic Setup] may not display the Top page, because the port number may change. Use the Setup Program to access the camera.

**Note**

When you do not know the camera IP address while setting [Automatic Setup] or [DHCP Setup], you can search it by using the Setup Program (see page 160).

Setting	Description
Allow Access from the Internet (Automatic Setup Only)	<ul style="list-style-type: none"> <li>Allow Access from the Internet setting automatically configures the router's Port Forwarding setting (some routers call it "Address Translation", "Static IP Masquerade", "Virtual Server" or "Port Mapping"). To enable Internet access to the camera, check [Yes]. In this case, the camera automatically searches the unused port number on your network in the order from 50000 to 50050. To disable Internet access to the camera, check [No].</li> </ul>
Network Configuration from Setup Program (Static/DHCP Only)	<ul style="list-style-type: none"> <li>If you prohibit the Setup Program from changing the network settings, clear the check box.</li> </ul>
Port Number (Static/DHCP Only)	<ul style="list-style-type: none"> <li>The port number is 80 by default. When you use multiple cameras with a router on your network, each camera must be assigned its own port number (see page 64 "2.7.2 Connecting the Camera to a Router Not Supporting UPnP™ (IPv4 Only)").</li> <li>Do not set the following port numbers. E.g., FTP: 20 and 21, Telnet: 23, SMTP: 25, DNS: 53, POP3: 110, HTTPS: 443, ICQ: 4000 and IRC: 6661—6667.</li> <li>Enter only the number (1—65535).</li> <li>Some ISPs do not allow you to use port 80. Ask your ISP or network administrator about the accessible port number over the Internet.</li> </ul>
<ul style="list-style-type: none"> <li>IP address</li> <li>Subnet Mask</li> </ul> (Static Only)	<ul style="list-style-type: none"> <li>If your ISP or network administrator specifies the IP address and subnet mask, enter them in each data field.</li> <li>If you use the camera on the LAN, set the IP address in the same class as your PC (see page 159).</li> <li>Set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available.</li> </ul>

Setting	Description
Host Name (DHCP Only)	<ul style="list-style-type: none"> <li>• If your ISP uses the DHCP function which automatically assigns the IP address to the camera, enter the ISP-assigned host name. (Host name may be used as an authentication.)</li> <li>• Enter ASCII characters for the host name (see page 168). But [Space], ["], ['], [&amp;], [&lt;] and [&gt;] are not available.</li> </ul>
Default Gateway <sup>1</sup> (Static/DHCP Only)	<ul style="list-style-type: none"> <li>• If you have the assigned Default Gateway address by your ISP or network administrator, enter it in this data field.</li> <li>• Set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available.</li> </ul>
DNS Server Address <sup>1</sup> (Static/DHCP Only)	<ul style="list-style-type: none"> <li>• DNS server address is required in the following conditions. <ul style="list-style-type: none"> <li>– Transferring camera images by E-mail or FTP</li> <li>– Setting cameras by their host names on the Multi-Camera Setup page</li> <li>– Using the DynamicDNS service</li> <li>– Using the alarm log notification</li> </ul> </li> <li>• If you have the assigned DNS server addresses by your ISP or network administrator, enter them in this data field. They usually have two addresses.</li> <li>• Set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available.</li> </ul>
Max. Bandwidth Usage	<ul style="list-style-type: none"> <li>• The bandwidth can be restricted.</li> <li>• Select the maximum bandwidth usage from [Unlimited] to [0.1 Mbps].</li> <li>• This setting is valid in both IPv4/IPv6.</li> </ul> <p><b>Note</b></p> <p>Set the maximum bandwidth usage seeing the following file sizes. These are examples for a JPEG file with a standard image quality. File sizes may change depending on the image quality or how bright the object is.</p> <p>160 x 120 pixels: About 3.5 KB (28 Kbit)  320 x 240 pixels: About 10 KB (80 Kbit)  640 x 480 pixels: About 18 KB (144 Kbit)</p>

Setting	Description
Connection Type	<ul style="list-style-type: none"><li data-bbox="288 220 932 305">• Select [Auto Negotiation] normally. If you cannot access the camera, see page 7 of the Troubleshooting on the Setup CD-ROM.</li><li data-bbox="288 310 735 337">• This setting is valid in both IPv4/IPv6.</li></ul>

\*1 If you automatically obtain the IP address from the DHCP server, you do not need to set it.

## 2.3 Connecting the Camera to Your IPv6 Network

The Network page offers two options to configure the camera in IPv6.

- [Automatic Setup] automatically assigns an IPv6 address to the camera.
- [Static] allows the user to use a specific IPv6 address.

### Note

IPv6 is the expanded protocol created for future Internet expansion. Your network and your ISP must support IPv6 before you can use this feature.

1. Click [Network (IPv6)] on the Setup page.
2. Click a connection mode.

Connection Mode	
Connection Mode	Current Setting
<a href="#">Automatic Setup</a>	Normally sets Automatic Setup.
<a href="#">Static</a>	Uses a static IP address.

3. Enter each parameter in the proper data field.

### Automatic Setup

The camera is automatically assigned an IPv6 prefix from the IPv6 router, and produces the original IPv6 address from the IPv6 prefix. If you select [No] at the Allow Access from the Internet, the camera can be accessed only from the LAN that has the same IPv6 prefix as the camera.

<b>Allow Access from the Internet</b>	
<input type="radio"/> Yes	
<input checked="" type="radio"/> No	
<b>DNS</b>	
DNS Server 1	<input type="text"/>
DNS Server 2	<input type="text"/>
<b>Max. Bandwidth Usage</b>	
Unlimited ▾	
<b>Connection Type</b>	
Auto Negotiation ▾	
<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

- Clicking [Cancel] takes you back to the previous page without saving changes.



## Static Setup

You can assign a static IPv6 address to the camera. If you select [No] at the Allow Access from the Internet, the camera can be accessed only from the LAN that has an same IPv6 prefix as the camera.

- Clicking [Cancel] takes you back to the previous page without saving changes.

#### 4. Click [Save] when finished.

- New settings are saved.
- When finished, the following page is displayed.

## Note

The current network settings are shown on the Status page in the Maintenance section (see page 135).

**5.** Click [Restart].

- The camera restarts, and the Top page is displayed.

**Note**


- When you do not know the camera IP address while setting [Automatic Setup], you can search it by using the Setup Program (see page 160). Or you can search it on the Status page (see page 135) after accessing the camera in IPv4.
- If the camera is restarted, all buffered images on the internal memory are deleted.

Setting	Description
Allow Access from the Internet (Automatic Setup Only)	<ul style="list-style-type: none"> <li>• If [Yes] is selected at the Allow Access from the Internet, you can access the camera from the Internet. If [No] is selected, the camera can be accessed only from the LAN that has the same IPv6 prefix as the camera.</li> </ul>
Port Number (Static Only)	<ul style="list-style-type: none"> <li>• The port number is 80 by default. The port number must be unique for each terminal on your network.</li> <li>• Do not set the following port numbers. E.g., FTP: 20 and 21, Telnet: 23, SMTP: 25, DNS: 53, POP3: 110, HTTPS: 443, ICQ: 4000 and IRC: 6661—6667.</li> <li>• Enter only the number (1—65535).</li> <li>• Some ISPs do not allow you to use port 80. Ask your ISP or network administrator about the accessible port number over the Internet.</li> </ul>
IP address (Static Only)	<ul style="list-style-type: none"> <li>• Enter a global address. You do not need to enter prefix length.</li> <li>• IPv6 address consists of 8 hexadecimal digits divided with ":". Consecutive 0s can be abbreviated as "::". (E.g. 2001:2:3:4::5)</li> </ul>
Default Gateway (Static Only)	<ul style="list-style-type: none"> <li>• If you have the assigned Default Gateway IPv6 address by your ISP or network administrator, enter it in this data field.</li> <li>• IPv6 address consists of 8 hexadecimal digits divided with ":". Consecutive 0s can be abbreviated as "::". (E.g. 2001:2:3:4::5)</li> </ul>

Setting	Description
DNS Server Address	<ul style="list-style-type: none"> <li>• DNS server address is required in the following conditions. <ul style="list-style-type: none"> <li>– Transferring camera images by E-mail or FTP</li> <li>– Setting cameras by their host names on the Multi-Camera Setup page</li> <li>– Using the DynamicDNS service</li> <li>– Using the alarm log notification</li> </ul> </li> <li>• If you have the assigned DNS server IPv6 addresses by your ISP or network administrator, enter them in this data field. They usually have two addresses.</li> <li>• IPv6 address consists of 8 hexadecimal digits divided with ":". Consecutive 0s can be abbreviated as "::". (E.g. 2001:2:3:4::5)</li> </ul>
Max. Bandwidth Usage	<ul style="list-style-type: none"> <li>• The bandwidth can be restricted.</li> <li>• Select the maximum bandwidth usage from [Unlimited] to [0.1 Mbps].</li> <li>• This setting is valid in both IPv4/IPv6.</li> </ul> <p><b>Note</b></p> <p>Set the maximum bandwidth usage seeing the following file sizes. These are examples for a JPEG file with a standard image quality. File sizes may change depending on the image quality or how bright the object is.</p> <p>160 x 120 pixels: About 3.5 KB (28 Kbit)  320 x 240 pixels: About 10 KB (80 Kbit)  640 x 480 pixels: About 18 KB (144 Kbit)</p>
Connection Type	<ul style="list-style-type: none"> <li>• Select [Auto Negotiation] normally. If you cannot access the camera, see page 7 of the Troubleshooting on the Setup CD-ROM.</li> <li>• This setting is valid in both IPv4/IPv6.</li> </ul>

## 2.4 What is IPsec?

IPsec provides security for the transmission of sensitive information over unprotected networks such as the Internet. IPsec authenticates IP packets between participating IPsec devices.

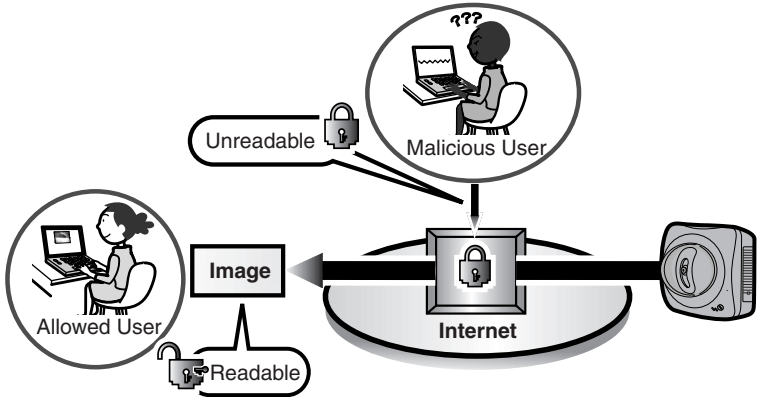

### Camera's IPsec Feature

The camera can use IPsec in both IPv4/IPv6. The camera supports the following IPsec feature.

Item	Supported Feature
IKEv1	Pre-shared Key Method Phase 1 mode : Main mode <sup>1</sup> Phase 2 mode : Quick mode Cipher Algorithm : DES-CBC, 3DES-CBC, AES-CBC (128, 192, 256 bits) Message-Digest : HMAC-MD5, HMAC-SHA-1 Algorithm
IPsec	ESP (Encapsulating Security Payload) <sup>2</sup> Transport mode, Tunnel mode Cipher Algorithm :DES-CBC, 3DES-CBC, AES-CBC (128, 192, 256 bits) Message-Digest :HMAC-MD5-96, HMAC-SHA-1-96 Algorithm

<sup>1</sup> The camera does not support aggressive mode.


<sup>2</sup> The camera does not support authentication header (AH).

## IPsec Mode Selection

Select transport mode or tunnel mode to access the camera.

### Transport Mode (IPv4 Only)

The image is encrypted in the whole way between the camera and your PC. In the environment of Windows XP Service Pack 1 or later, transport mode is available only in IPv4.

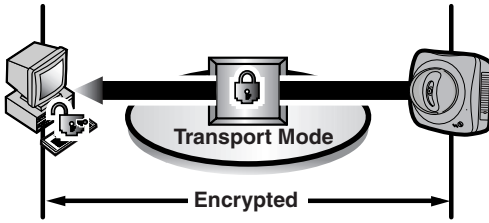

Prepare the following requirements.


Item	Supported Feature
PC	<p>Operating System : Windows XP Service Pack 1 or later                      Web Browser : Internet Explorer 6.0 or later                      ISP Service : Services for multiple global addresses (A global address must be set up on your PC.)</p> <p><b>Note</b>                      To use IPsec, you need to set up your operating system. See the Panasonic Network Camera support website at <a href="http://panasonic.co.jp/pcc/products/en/netwcam/">http://panasonic.co.jp/pcc/products/en/netwcam/</a> for the setup.</p>
Camera	<p>ISP Service : Services for multiple global addresses (A global address must be set up to the camera.)</p>

### Tunnel Mode (IPv4/IPv6)

An IPsec mode of operation where the entire IP packet including IP header is authenticated and encrypted. A new IP header is added (protecting the entire original packet). Both VPN clients and VPN gateways can use this mode.

#### Note

The camera can be accessed only from the PCs under the VPN router. Other PCs cannot access the camera.

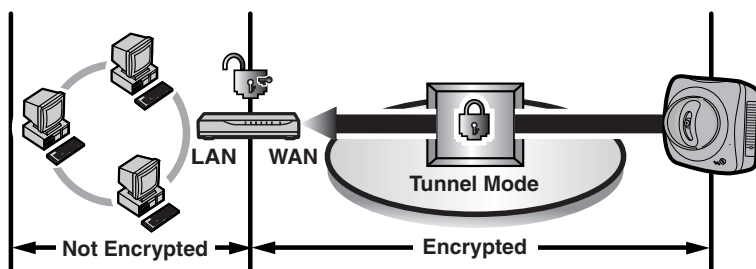

Prepare the following requirements.

Item	Supported Feature
PC	Operating System : Windows XP, Windows 2000, Windows Me, Windows 98SE (in IPv4) : Windows XP Service Pack 1 or later (in IPv6) Web Browser : Internet Explorer 6.0 or later
Router	ISP Service (in IPv4) : Static global address service (A global address must be set up to the WAN side of the router.) ISP Service (in IPv6) : "IPv4/IPv6 Dual-Stack" or "IPv6 over IPv4 Tunneling" service <b>Note</b> See the Panasonic Network Camera support website at <a href="http://panasonic.co.jp/pcc/products/en/netwkcaml/">http://panasonic.co.jp/pcc/products/en/netwkcaml/</a> for the recommended router.
Camera	ISP Service (in IPv4) : Services for multiple global addresses (A global address must be set up to the camera.) ISP Service (in IPv6) : "IPv4/IPv6 Dual-Stack" or "IPv6 over IPv4 Tunneling" service

## 2.5 Encrypt the Camera Image in Transport Mode

The camera can encrypt the image using IPsec transport mode.

### Note

If you use IPsec, refresh interval slows down.

1. Click [IPsec] on the Setup page.
2. Click **Camera** in the Transport column.
  - If you use transport mode in E-mail or FTP transfer, click **No.** in the Buffer/Transfer column.

Set to use Alarm Log. (See page 123)

The display shows that the communication is in HTTP and any people can access the camera if they have the pre-shared key.

Set up these settings to transfer images in transport mode (see page 118).

### Note


To display Alarm Log, set Alarm 1, Alarm 2 or Motion Detection for Trigger Setting and check [Enable].

3. Enter each parameter in the data field.

Transport setting	
Status	<input type="checkbox"/> ON
Pre-Shared Key (1 to 63 Characters)	<input type="text"/>
Retype Pre-Shared Key	<input type="text"/>
<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

Setting	Description
Status	<ul style="list-style-type: none"> <li>Check the box to use this encryption method.</li> </ul>
Pre-Shared Key	<ul style="list-style-type: none"> <li>It is the key to use in the authentication of communications. Enter the same pre-shared key as your PC.</li> <li>Enter ASCII characters for the host name (see page 168). But [Space], ["], ['], [&amp;], [&lt;] and [&gt;] are not available.</li> </ul> <p><b>Note</b></p> <p>If the pre-shared key leaks to a third party, it may lead to illegal access, private information leak or interference. To protect your security and privacy, pay attention to the following points.</p> <ul style="list-style-type: none"> <li>Make it known only to the specified people.</li> <li>Set it as many characters as possible.</li> <li>Change the password regularly.</li> </ul>

- Click [Save] when finished.
  - New settings are saved.
- Click [Cancel].
  - The IPsec page is displayed.
- Check [Use] in the IPsec column, check encoding strength, and click [Save].

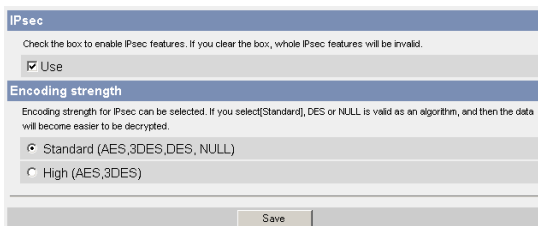

Setting	Description
IPsec	<ul style="list-style-type: none"> <li>Check the box to enable IPsec features. If you clear the box, whole IPsec features will be invalid.</li> </ul>
Encoding strength	<ul style="list-style-type: none"> <li>Encoding strength for IPsec can be selected. If you select [Standard], DES or NULL is valid as an algorithm, and then the data will become easier to be decrypted.</li> </ul>



7. Click [Restart].
8. Set up your PC as it fits to the requirements on page 53.
  - Set the FTP server or E-mail server to transfer images.
9. Access the camera (see page 13).
  - If you can access the camera, the IPsec setup is complete.

**Note**

- In IPsec communications, "IPsec" is displayed on the Top page or the Single Camera page.
- If you cannot communicate using IPsec, see page 20 of the Troubleshooting on the Setup CD-ROM.
- See the Panasonic Network Camera support website at <http://panasonic.co.jp/pcc/products/en/netwcam/> for the IPsec features.

## 2.6 Encrypt the Camera Image in Tunnel Mode

The camera can encrypt the image using IPsec tunnel mode.

### Note

- Do not set IPsec on the PCs under the VPN router. Communications may be blocked.
  - If you use IPsec, refresh interval slows down.
  - The camera can be accessed only from the PCs under the VPN router. Other PCs cannot access the camera.
1. Click [IPsec] on the Setup page.
  2. Click **Add** in the Tunnel column.


Tunnel		
When IPsec setting is added, when link of "Add".Click the number, and edit the tunnel mode.		
No.	Status	Ahead connecting
<a href="#">Add</a>		

3. Enter each parameter in the data field.

Tunnel setting	
Status	<input checked="" type="checkbox"/> ON
Pre-Shared Key (1 to 63 Characters)	<input type="text"/>
Retype Pre-Shared Key	<input type="text"/>
Network address	<input type="text"/>
Router address	<input type="text"/>
<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

Setting	Description
Status	<ul style="list-style-type: none"> <li>• Check the box to use this encryption method.</li> </ul>
Pre-Shared Key	<ul style="list-style-type: none"> <li>• It is the key to use in the authentication of communications. Enter the same pre-shared key as your VPN router.</li> <li>• Enter ASCII characters for the host name (see page 168). But [Space], ["], ['], [&amp;], [&lt;] and [&gt;] are not available.</li> </ul> <p><b>Note</b> If the pre-shared key leaks to a third party, it may lead to illegal access, private information leak or interference. To protect your security and privacy, pay attention to the following points.</p> <ul style="list-style-type: none"> <li>• Make it known only to the specified people.</li> <li>• Set it as many characters as possible.</li> <li>• Change the password regularly.</li> </ul>
Network address	<ul style="list-style-type: none"> <li>• Enter the destination network address.</li> <li>• Enter "IP address/Prefix length" in the data field.</li> </ul>
Router address	<ul style="list-style-type: none"> <li>• Enter the WAN IP address of the VPN router on a destination network.</li> </ul> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• IPv6 link-local address is not available.</li> <li>• The camera can be accessed only from the PCs under the VPN router. Other PCs cannot access the camera.</li> </ul>

4. Click [Save] when finished.
  - New settings are saved.
5. Click [Cancel].
  - The IPsec page is displayed.
6. Check [Use] in the IPsec column, check encoding strength, and click [Save].

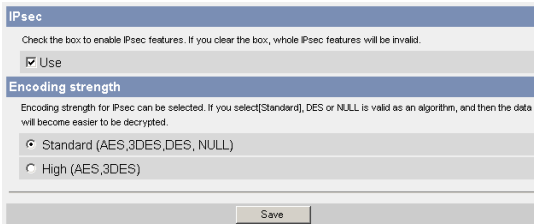

Setting	Description
IPsec	<ul style="list-style-type: none"> <li>Check the box to enable IPsec features. If you clear the box, whole IPsec features will be invalid.</li> </ul>
Encoding strength	<ul style="list-style-type: none"> <li>Encoding strength for IPsec can be selected. If you select [Standard], DES or NULL is valid as an algorithm, and then the data will become easier to be decrypted.</li> </ul>

7. Click [Restart].
8. Set up your VPN router as shown below.
  - To use tunnel mode, you need to set up your VPN router.

IKE Items		Settings
Phase 1	Authentication Method	Pre-shared Key Method
	ID	Specifies by address.
	Mode	Main mode <sup>1)</sup>
	Diffie-Hellman MODP Group	Specifies 1 or 2.
	Cipher Algorithm	Select from DES-CBC, 3DES-CBC or AES-CBC (128, 192, 256 bits). (Multiple selections are available.)
	Message-Digest Algorithm	HMAC-MD5, HMAC-SHA-1
	Lifetime	Specifies by 28800 s (Byte setting is not supported.)

IKE Items		Settings
Phase 2	Mode	Quick mode
	PFS	Specifies either of Off, D-H Group 1 or D-H Group 2.
	Cipher Algorithm	Select from DES-CBC, 3DES-CBC, AES-CBC (128, 192, 256 bits) or NULL. (Multiple selections are available.)
	Message-Digest Algorithm	HMAC-MD5-96, HMAC-SHA-1-96
	Lifetime	Specifies by 28800 s (Byte setting is not supported.)

\*1 The camera does not support aggressive mode.

- Set up the IPsec policy as below.

Items	Settings
Protocol	ANY
Source Network	Network address and subnet mask on the LAN side of the VPN router
Source IP address	A global address on the WAN side of the VPN router
Destination Network	A global address of the camera
Destination IP address	A global address of the camera

**9.** Access the camera (see page 13).

- If you can access the camera, the IPsec setup is complete.

### **Note**

- In IPsec communications, "IPsec" is displayed on the Top page or the Single Camera page.
- If you cannot communicate using IPsec, see page 20 of the Troubleshooting on the Setup CD-ROM.
- See the Panasonic Network Camera support website at <http://panasonic.co.jp/pcc/products/en/netwcam/> for the IPsec features.


## 2.7 Using UPnP™ (Universal Plug and Play)

UPnP™ can automatically configure your router to be accessed from the Internet. In order to use this feature, your router needs to support this feature and it must be enabled. Most router manufacturers disable this feature as the default setting. See <http://panasonic.co.jp/pcc/products/en/netwkcaml/> for details and see your router's manual for how to enable UPnP™. After the UPnP™ is enabled on the router, set [Enable] for auto port forwarding.

### Note

The camera's UPnP™ does not support IPv6. Use this feature in IPv4.

1. Click [UPnP] on the Setup page.
2. Set up UPnP.

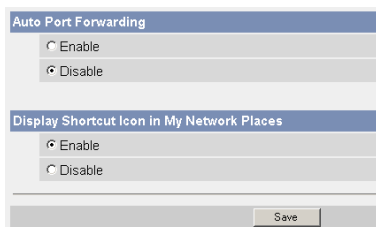

Setting	Description
Auto Port Forwarding	<ul style="list-style-type: none"> <li>• If the network setting is [Static] or [DHCP], enabling auto port forwarding allows you to access the camera from the Internet.</li> </ul> <p><b>Note</b></p> <p>If the network setting is [Automatic Setup], enable [Allow Access from the Internet] on the Network page (see page 45).</p>
Display Shortcut Icon in My Network Places	<ul style="list-style-type: none"> <li>• Enabling it displays a shortcut to the camera in the My Network Places folder.</li> </ul> <p><b>Note</b></p> <p>If you use Windows XP or Windows Me, this feature is available. Enable UPnP™ Windows component before using this feature (see page 167).</p>

3. Click [Save] when finished.
  - New settings are saved.
  - When finished, "Success!" is displayed.
4. Click [Go to UPnP page].
  - The UPnP page is displayed.

### 2.7.1 Connecting the Camera to a Router Supporting UPnP™ (IPv4 Only)

To allow access from the Internet with a router supporting UPnP™, follow the procedures shown on the Getting Started.

#### **Note**

- In some routers, the UPnP™ feature is disabled by default. Enable your router's UPnP™ feature following the router manual before you set up the camera. See the Panasonic Network Camera support website at <http://panasonic.co.jp/pcc/products/en/netwcam/> for details.
- If the maximum idle time is set in PPPoE or PPTP connection with your ISP, disable it on the router. See the router manual for details.

## 2.7.2 Connecting the Camera to a Router Not Supporting UPnP™ (IPv4 Only)


To allow access from the Internet with a router not supporting UPnP™, follow the procedures below.

1. Select [Static] on the Network (IPv4) page.
  - (1) Access the camera (see page 13).
  - (2) Click [Setup] tab at the top of the page.
  - (3) Select [Static] on the Network page.
    - The Static IP Address Configuration page is displayed. Make a note of the IP address and port number, since they are required to enable port forwarding on the router.
  - (4) Click [Save] without changing the settings.
  - (5) Click [Restart].
  
2. Enable port forwarding on the router.
 

Using the IP address and port number note written on step 1-(3), enable port forwarding on the router. See the router manual for how to enable port forwarding.
  
3. Register with the DynamicDNS service.

### Port Forwarding feature<sup>\*1</sup> (IPv4 Only)

The port forwarding feature is required to allow access from the Internet with a router not supporting UPnP™. It exchanges a local IP address to a global one. Each camera must be assigned a unique port number.

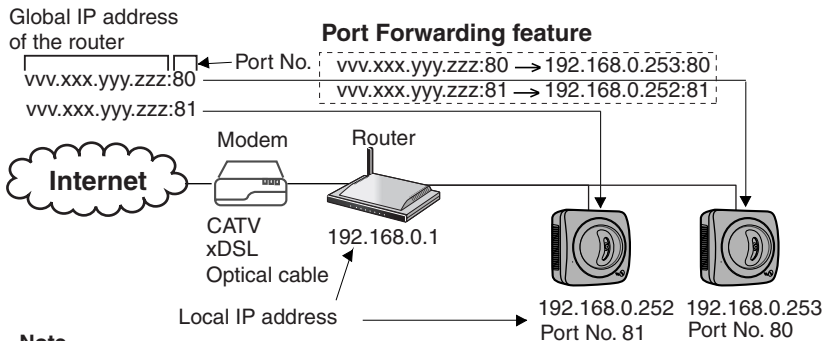

**Note**

The IP addresses shown above may differ from those offered on your home network.

<sup>\*1</sup> "Port forwarding" may be called "Address translation", "Static IP Masquerade", "Virtual server" or "Port mapping" in other products.



## 2.8 Registering with the DynamicDNS service

DynamicDNS service is a service that allows you to assign an easy-to-remember name to the camera, similar to your favorite web site. DynamicDNS service also allows you to easily access the camera, even when your ISP changes the IP address. Panasonic Communications recommends you to register with it for the Internet access to the camera. See <http://www.viewnetcam.com> for details about the Viewnetcam.com service.

Click [DynamicDNS] on the Setup page.

### When you select [Disable]

The screenshot shows a configuration window titled "DynamicDNS". It contains three radio button options: "Viewnetcam.com", "User-specified DynamicDNS", and "Disable". The "Disable" option is selected, indicated by a filled radio button. At the bottom of the window, there are three buttons: "Next", "Save", and "Cancel".

- The DynamicDNS service is disabled.
- Clicking [Cancel] cancels your settings without saving changes.

### When you select [Viewnetcam.com]

1. Click [Next].

The screenshot shows the same "DynamicDNS" configuration window. In this instance, the "Viewnetcam.com" option is selected with a filled radio button. The "Next", "Save", and "Cancel" buttons are visible at the bottom.

- Clicking [Cancel] cancels your settings without saving changes.
2. Click [Save] when finished.

The screenshot shows a configuration window titled "Viewnetcam.com configuration". It has two input fields: "Personal (Camera) URL" and "Your Account Link". At the bottom of the window, there are two buttons: "Save" and "Cancel".

- New settings are saved.

- When finished, the message dialog is displayed.
- Clicking [Cancel] cancels your settings without saving changes.

Setting	Description
Personal (Camera) URL	<ul style="list-style-type: none"> <li>• The camera's personal URL will be displayed after you register with the Viewnetcam.com service.</li> </ul>
Your Account Link	<ul style="list-style-type: none"> <li>• The URL is displayed to register with the Viewnetcam.com service. Clicking [Your Account Link] item name displays the Viewnetcam.com registration website.</li> </ul>

3. Click [Go to Viewnetcam.com page].
  - The Viewnetcam.com page is displayed.
4. Click **Your Account Link**.
  - The Viewnetcam.com registration website is displayed.

**Note**

- When the Viewnetcam.com registration website is not displayed, confirm that the URL is displayed in the right column of the Your Account Link. If the URL is not displayed, follow the procedures below.
  1. Wait for a while, and click [Refresh] on the web browser.
  2. Confirm that your network (your PC and camera) is connected to the Internet.
- Personal (Camera) URL is available after you registered with the Viewnetcam.com service.
- If port forwarding is not enabled or your network is not connected to the Internet, the Viewnetcam.com service is not available.

5. Register with the Viewnetcam.com service following the website.
  - The Viewnetcam.com page is displayed.
6. Access the camera with a registered URL from the Internet (see page 13).
  - When the Top page is displayed, the Viewnetcam.com registration is complete.

**Note**

- It may take a maximum of 30 minutes for the registered URL to work.
- If "Expired" is displayed at the Personal (Camera) URL on the Viewnetcam.com page or at the Camera URL in the DynamicDNS on the Status page, restart the camera. After that, confirm that your registered URL is displayed on their pages.

**Confirming the Internet access**

Due to the router specifications, the image may not be displayed even if you access the camera from your PC on the same LAN as the camera. In this case, access the camera in the following procedures.

- Accessing from the PC on another network (see page 13)
- Accessing from your cell phone (see page 38)

### When you select [User-specified DynamicDNS]

1. Click [Next].

**DynamicDNS**

Viewnetcam.com  
 User-specified DynamicDNS  
 Disable

Next Save Cancel

- Clicking [Cancel] cancels your settings without saving changes.

2. Set each parameter.

**User-specified DynamicDNS**

DynamicDNS Server URL (1 to 255 Characters)

Updating time 10 min

**Input User Name and Password**

User Name (0 to 63 Characters)

Password (0 to 63 Characters)

Save Cancel

- You can get DynamicDNS information from the DynamicDNS service industry company.
3. Click [Save] after finished.
    - New settings are saved.
    - When finished, "Success!" is displayed.
  4. Click [Go to DynamicDNS page].
    - The DynamicDNS page is displayed.

### **Note**

- It may take several minutes for the registered URL to connect.
- Some DynamicDNS service is not connected.

### **Confirming the Internet access**

Due to the router specifications, the image may not be displayed even if you access the camera from your PC on the same LAN as the camera. In this case, access the camera in the following procedures.

- Accessing from the PC on another network (see page 13)
- Accessing from your cell phone (see page 38)


## **2.8.1 DynamicDNS Service (IPv4/IPv6)**

DynamicDNS allows you to choose an easy-to-remember address (such as "bob.viewnetcam.com") that you can use to view images from your camera over the Internet. This service is compatible with both IPv4 and IPv6 addresses. Some DynamicDNS service is not compatible with IPv6 address.

### **What is the advantage of DynamicDNS service?**

In order to view camera images over the Internet, you need to know your camera's global IP address. However, many Internet Service Providers (ISPs) assign their customers a "dynamic" IP address that changes monthly, weekly, or each time they log on. Unless you have been assigned a static IP address (an IP address that does not change periodically) by your ISP, you may find it difficult to access your camera over the Internet because your IP address changes periodically. Viewnetcam.com service allows you to access your camera even if your assigned global IP address changes.

## How the DynamicDNS service works

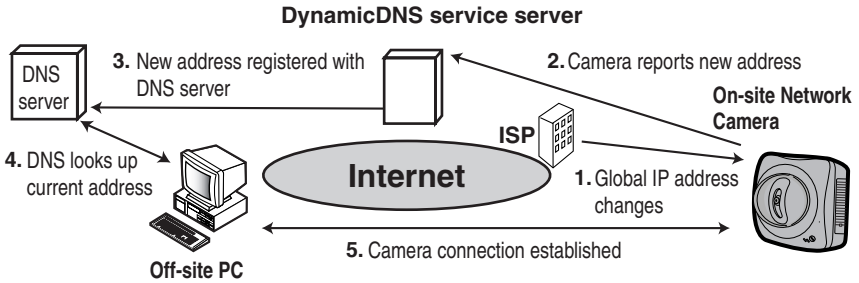

1. Your ISP assigns a global IP address to your Internet access account that changes periodically. This is the address needed to access the camera over the Internet.
2. When your ISP assigned global IP address changes, your camera automatically notifies the DynamicDNS service server of the new address in the DynamicDNS. The camera notifies the DynamicDNS service server of the new address in DynamicDNS in the following cases.
  - When starting the camera
  - Depending the time to be set at the update interval
  - When clicking the [Save] button
3. The DynamicDNS server contacts a Domain Name System (DNS) and registers your new global IP address to your chosen DynamicDNS address (such as "bob.viewnetcam.com").
4. When you enter your DynamicDNS address in your web browser while away from home or the office, the DNS server looks up the global IP address assigned to your DynamicDNS address.
5. The DNS server finds your current global IP address and allows you to connect to your camera.

### Note

- Ask your ISP about what type of IP address you are using.
- Some ISPs assign you a local IP address. In this case, you cannot use the DynamicDNS service.
- If the camera is using a port number other than 80, the port number must be specified at the end of the DynamicDNS URL. For example:  
Using port 80: [http://\(Cameraname\).viewnetcam.com](http://(Cameraname).viewnetcam.com)  
Using any other port: [http://\(Cameraname\).viewnetcam.com:Port Number](http://(Cameraname).viewnetcam.com:Port Number)

## 2.9 Setting Date and Time

The Date and Time page allows you to set date and time. Date and time are used for each images (Single, Multi and Buffered), Trigger, Alarm Log and Operation Time.

### Note

Saving the date and time settings deletes all buffered images on the internal memory.

1. Click [Date and Time] on the Setup page.
2. Set each parameter.
  - Set [Automatic Time Adjustment] to synchronize the time automatically with an NTP server.

Time Setting			
Date	Month <input type="text" value="Jun"/>	Day <input type="text" value="10"/>	Year <input type="text" value="04"/>
Format	<input type="text" value="AM/PM"/>	<input type="text" value="24H"/>	
Time	Hour <input type="text" value="7"/>	Minute <input type="text" value="35"/>	<input type="text" value="PM"/>
Automatic Time Adjustment			
<input type="checkbox"/> Enable			
NTP Server Address or Host Name	<input type="text"/>		
Time Zone	<input type="text" value="GMT-05:00 Eastern Time"/>		
Adjust Clock for Daylight Saving Time			
<input type="checkbox"/> Enable			
Start Day:	Month <input type="text" value="Apr"/>	Weekday <input type="text" value="First Sunday"/>	Hour <input type="text" value="2"/> <input type="text" value="AM"/>
End Day:	Month <input type="text" value="Oct"/>	Weekday <input type="text" value="Last Sunday"/>	Hour <input type="text" value="2"/> <input type="text" value="AM"/>
<input type="button" value="Save"/>		<input type="button" value="Cancel"/>	

- Clicking [Cancel] cancels your settings without saving changes.

Setting	Description
Time Setting	<ul style="list-style-type: none"> <li>Select date and format (AM/PM or 24 H). These settings are used for each images (Single, Multi and Buffered), Trigger, Alarm Log and Operation Time. But E-mail subject and file name by E-mail or FTP transfer uses only 24 h format.</li> </ul>
Automatic Time Adjustment	<ul style="list-style-type: none"> <li>NTP (Network Time Protocol) server synchronizes the camera's internal clock. It adjusts automatically every day. Check the box to enable it.</li> <li>Set the NTP server IP address. In IPv4, set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available. In IPv6, set 8 hexadecimal digits divided with ":". Consecutive 0s can be abbreviated as "::". Or set a host name (1—255 characters).</li> <li>Select your time zone.</li> </ul> <p><b>Note</b></p> <p>The camera will not synchronize to the NTP server if the time setting from the NTP server moves forward or backward more than 1 hour at a time. This is to protect the camera's time setting from fraudulent NTP server tampering, incorrect time information, etc.</p>
Adjust Clock for Daylight Saving Time	<ul style="list-style-type: none"> <li>During the daylight saving time, the internal clock is turned forward an hour. The clock will shift one hour forward at the set time on the Start Day, and move back one hour at the set time on the End Day. Check the box to enable it.</li> </ul> <p><b>Note</b></p> <p>An "s" is put between date and time of time stamp when enabling this feature. The time stamp will be attached to the transferred images by the Image Transfer feature.</p>

- Click [Save] when finished.
  - New settings are saved.
  - When finished, "Success!" is displayed.
- Click [Go to Date and Time page].
  - The Date and Time page is displayed.

**Note**

Date and time settings become incorrect depending on the length of power-on time or the internal temperature. Using the Automatic Time Adjustment is recommended.



## 2.10 Changing Camera Settings

The Camera page allows you to set the camera name, white balance, AC power source frequency, pan/tilt range, return to specified position and color night view settings.

1. Click [Camera] on the Setup page.
2. Set each parameter.

Camera Name		
Camera Name	<input type="text" value="NetworkCamera"/>	
White Balance		
White Balance	<input type="text" value="Auto"/>	
AC Power Source Frequency		
<input type="radio"/> 50Hz		
<input checked="" type="radio"/> 60Hz		
Pan Range		
Minimum	Home Position	Maximum
<input type="text" value="-60"/> degrees	<input type="text" value="0"/> degrees	<input type="text" value="+60"/> degrees
Tilt Range		
Minimum	Home Position	Maximum
<input type="text" value="-45"/> degrees	<input type="text" value="0"/> degrees	<input type="text" value="+20"/> degrees
Return to Specified Position		
Time	<input type="text" value="Do not move"/>	
Specified Position	<input type="text" value="Home Position"/>	
Color Night View		
<input type="radio"/> Enable		
<input checked="" type="radio"/> Disable		
		<input type="button" value="Save"/> <input type="button" value="Cancel"/>

- Clicking [Cancel] cancels your settings without saving changes.

Setting	Description
Camera Name	<ul style="list-style-type: none"> <li>• The camera name is displayed on the Single Camera page.</li> <li>• Enter ASCII characters (see page 168) or characters in each language (1—15 characters for a 1-byte character and 1—7 characters for a 2-byte character). But [Space], ["], ['], [&amp;], [&lt;], and [&gt;] are not available.</li> </ul>
White Balance	<p>Select from the following options.</p> <ul style="list-style-type: none"> <li>• Auto (default) — Automatic adjustment</li> <li>• Fixed Indoor — Electric bulb (2800 K)</li> <li>• Fixed Fluorescent (White) — White (3600 K)</li> <li>• Fixed Fluorescent (Daylight) — Daylight (4000 K)</li> <li>• Fixed Outdoor — Solar light (6000 K)</li> <li>• Hold — Setting [Hold] keeps the current white balance.</li> </ul> <p><b>Note</b></p> <p>White balance is also saved in the home position, alarm position and preset buttons.</p>
AC Power Source Frequency	<ul style="list-style-type: none"> <li>• It can select Flicker Correction by power line frequency.               <ul style="list-style-type: none"> <li>– 60 Hz (default)</li> <li>– 50 Hz</li> </ul> </li> </ul> <p>Select 60 Hz in the United States.</p>

Setting	Description
Pan Range <sup>1</sup>	<p>Select from the following options.</p> <ul style="list-style-type: none"> <li>• Minimum — Current settings, -60—+60</li> <li>• Home Position<sup>2</sup> — Current settings, -60—+60</li> <li>• Maximum — Current settings, -60—+60</li> <li>• The values must be selected as minimum <math>\leq</math> home position <math>\leq</math> maximum.</li> </ul> <p><b>Note</b></p> <p>If you wrongly set the range, your privacy may be seen. Confirm the range after the setup.</p>
Tilt Range <sup>1</sup>	<p>Select from the following options.</p> <ul style="list-style-type: none"> <li>• Minimum — Current settings, -45—+20</li> <li>• Home Position<sup>2</sup> — Current settings, -45—+20</li> <li>• Maximum — Current settings, -45—+20</li> <li>• The values must be selected as minimum <math>\leq</math> home position <math>\leq</math> maximum.</li> </ul> <p><b>Note</b></p> <p>If you wrongly set the range, your privacy may be seen. Check the range after the setup.</p>
Return to Specified Position	<ul style="list-style-type: none"> <li>• If the camera is not operated during the specified period, the camera turns to the specified position.</li> <li>• The following settings are available. <ul style="list-style-type: none"> <li>– Time - Do not move, 10 min, 30 min, 1 h</li> <li>– Specified Position - Home Position, Preset No.1—8, Alarm No.1, Alarm No.2</li> </ul> </li> </ul> <p><b>Note</b></p> <p>If you did not set any presets, the camera cannot turn to the preset position.</p>

Setting	Description
Color Night View	<ul style="list-style-type: none"> <li>• In the color night view mode, the camera image becomes brighter in a low illuminance. The camera image returns normal operation in a bright location.</li> <li>• If you enable the color night view mode, refresh interval may slow down.</li> </ul> <p><b>Note</b></p> <p>In the color night view mode, the image may have white or colored circles around the object. This is not a problem, since it is a CMOS sensor characteristic.</p>


<sup>1</sup> See page 77 for details about pan/tilt range settings.

<sup>2</sup> These home position settings are displayed as you set on page 26.

3. Click [Save] when finished.
  - New settings are saved. If the [Pan Range] or [Tilt Range] settings are changed, the camera turns to the home position.
  - When finished, "Success!" is displayed.
4. Click [Go to Camera page].
  - The Camera page is displayed.

## Specifying Pan/Tilt Range


1. Access the camera (see page 13), and click [Single] at the top of the Top page.
2. Open another web browser, and display the Camera page (see page 73).
3. Align the Single Camera page and the Camera page side to side.

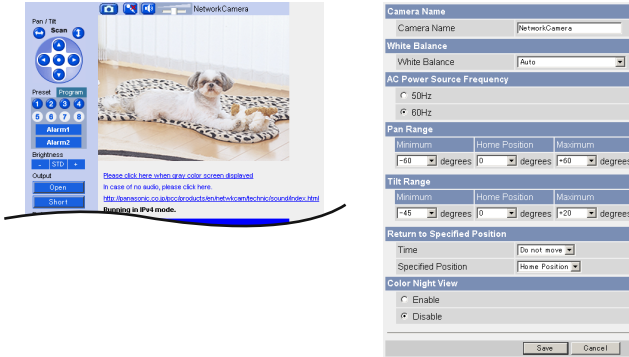

4. Set the pan/tilt range.
  - Selecting [Current Settings] displays the current angle of the camera. Select each value while adjusting the pan/tilt on the Single Camera page.

### Note

The values must be selected as minimum  $\leq$  home position  $\leq$  maximum.

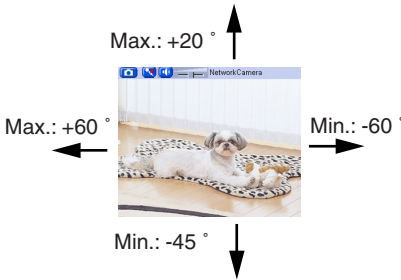

5. Click [Save] on the Camera page.
  - New settings are saved. The camera turns to the home position.

## 2.11 Adjusting Audio

The Audio page allows you to adjust the built-in microphone, the use of external speaker, microphone sensitivity and external speaker volume.

1. Click [Audio] on the Setup page.
2. Set each parameter.

The screenshot shows the Audio settings interface. It consists of several sections, each with a blue header bar:

- Output:** Contains two radio buttons: "Enable" (selected) and "Disable".
- Volume:** Contains a dropdown menu currently set to "Standard".
- PC Audio Input Timeout:** Contains a dropdown menu currently set to "1 min".
- Input:** Contains two radio buttons: "Enable" (selected) and "Disable".
- Camera Microphone Sensitivity:** Contains a dropdown menu currently set to "Standard".
- Mute during Pan/Tilt:** Contains two radio buttons: "Enable" (selected) and "Disable".

At the bottom of the form, there are two buttons: "Save" and "Cancel".

- Clicking [Cancel] cancels your settings without saving changes.

Setting	Description
Output	<ul style="list-style-type: none"> <li>It controls audio output for external speaker connected to the camera.</li> </ul>
Volume	<ul style="list-style-type: none"> <li>It controls the volume to output to external speaker.</li> <li>Minimum: Turn down the volume</li> <li>Standard: Standard setting (default)</li> <li>Maximum: Turn up the volume</li> </ul>
PC Audio Input Timeout	<ul style="list-style-type: none"> <li>You can set the time to consecutively perceive the audio from your PC.</li> <li>The following settings are available. 1 min, 2 min, 3 min, 5 min, 10 min, 20 min, 30 min, 60 min</li> </ul>
Input	<ul style="list-style-type: none"> <li>It controls audio input from the built-in microphone or external microphone.</li> </ul>
Camera Microphone Sensitivity	<ul style="list-style-type: none"> <li>You can select the built-in microphone or external microphone sensitivity. Minimum: Decreased sensitivity Standard: Standard setting (default) Maximum: Enhanced sensitivity</li> </ul>
Mute during Pan/Tilt	<ul style="list-style-type: none"> <li>You can temporarily stop listening (audio input) when the camera pans or tilts.</li> </ul>

3. Click [Save] when finished.
  - New settings are saved.
  - When finished, "Success!" is displayed.
4. Click [Go to Audio page].
  - The Audio page is displayed.

## 2.12 Changing Authentication Setting and Administrator User Name and Password

The Security: Administrator page allows you to change authentication, administrator user name and password. The authentication window is displayed, and allows the registered users to access the camera.

### Note

- If you access the camera for the first time, the window to set administrator user name and password is displayed. Make a note of the user name and password so that you will not forget them.
- The user name and password should be secured at your own responsibility. Pay attention to the following points.
  - Set the user name and password as many characters as possible.
  - Change the password regularly.


### IMPORTANT

- It is important to limit access to the camera by use of a unique User Name and a secret Password. Because the camera is accessed through the Internet it is possible that the camera could be accessed by unknown individuals, including those who are commonly known as "crackers" to whom you do not want to allow access. The use of a unique User Name and a Password known only to you will help insure that only authorized individuals are given access to the camera. You have the option of proceeding without a User Name and Password, but it is strongly recommended that you utilize these protections.
1. Click [Administrator] on the Setup page.
  2. Set each parameter.

General Authentication	
<input type="radio"/>	Permit access from guest users
<input checked="" type="radio"/>	Do not permit access from guest users
Administrator Authentication	
User Name (8 to 15 Characters)	<input type="text"/>
Password (8 to 15 Characters)	<input type="text"/>
Retype Password	<input type="text"/>
<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

- Clicking [Cancel] cancels your settings without saving changes.



Setting	Description
General Authentication	<p>Authentication has 2 phases.</p> <ul style="list-style-type: none"> <li>If you set [Permit access from guest users], the camera does not display the authentication window in camera access. All guest users can view the image without user name and password.</li> </ul> <p><b>Note</b></p> <p>If you set [Permit access from guest users], [Login] tab is displayed at the top of the page. After you log in as an administrator (see page 83), you can access the Setup page and the Maintenance page.</p>  <ul style="list-style-type: none"> <li>If you set [Do not permit access from guest users], the camera displays authentication window in camera access. Users must enter the user name and password.</li> </ul>
User Name/ Password	<ul style="list-style-type: none"> <li>User Name (6 to 15 characters): Enter the user name.</li> <li>Password (6 to 15 characters): Enter the password.</li> </ul> <p><b>Note</b></p> <p>The password must be different from the user name.</p> <ul style="list-style-type: none"> <li>Retype Password: Reenter the password.</li> <li>Enter ASCII characters (see page 168). But [Space], [", ['], [&amp;], [&lt;], [&gt;] and [:] are not available.</li> </ul>


**Note**

- When setting authentication, set the user name and password, and save them.
  - When users other than an administrator are accessing the camera, [Setup] and [Maintenance] tab will not be displayed.
  - The user name and password are case sensitive.
- 3.** Click [Save] when finished.
- New settings are saved.
  - When finished, "Success!" is displayed.

4. Click [Go to Security: Administrator page].
  - The Security: Administrator page is displayed.

**Note**

- When the user name and password have been changed, the camera displays an authentication window. Enter the user name and password, and click [OK].

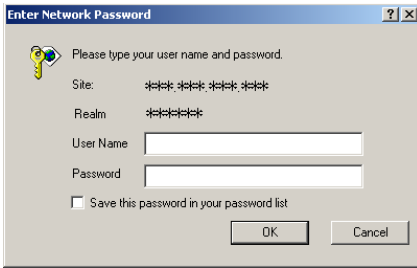

**Administrator/General Users/Guest Users**

The camera has 3 user levels (administrator, general users and guest users).

Items	Administrator	General Users	Guest Users
User Name and Password	Required	Required	Not Required
Number of Users	1	50	—
Accessible Pages	All Pages	Pages Except For Setup and Maintenance page	Pages Except For Setup and Maintenance page
Access Level	All Operations	Access level can be set for each general user (see page 84).	Access level can be set for guest users (see page 84).

**Note**

Guest users mean unregistered users. Set [Permit access from guest users] on the Security: Administrator page (see page 80).

## 2.13 Logging in to the Camera

If you set [Permit access from guest users] on the Security: Administrator page, [Login] tab is displayed at the top of the page. After you log in as an administrator, you can access the Setup page and the Maintenance page.

1. Click [Login] tab at the top of the page.



2. Check the login mode, and click [Login].

### Note

The authentication window is displayed. Enter the user name and password set for General Users or Administrator.

3. Enter a valid user name and password according to the Login mode selected in step 2, and click [OK].



## 2.14 Creating, Modifying or Deleting General Users

The General User page allows you to create, modify or delete general users. Up to 50 general users can be registered. The access level is set for each general user. If you set [Permit access from guest users] on the Security: Administrator page, the access level can be set for guest users.

### **Note**

For general users, the Setup and Maintenance tabs are not displayed.

1. Click [General User] on the Setup page.
2. If you create a general user, click [Create].
  - When setting [Do not permit access from guest users]
  - When setting [Permit access from guest users]

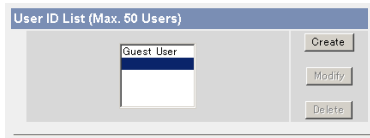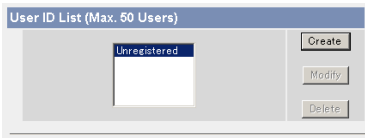

- If you change the settings of general users or guest users, select their name and click [Modify]. The modification page is displayed.
- If you delete a general user, select the name and click [Delete]. The confirmation page is displayed.

### 3. Set each parameter.

- Settings for a general user
- Settings for guest users

The screenshot shows two configuration windows. The top window, titled "Input User Name and Password", has three input fields: "User Name (6 to 15 Characters)", "Password (6 to 15 Characters)", and "Retype Password". The bottom window, titled "Access Level", has a dropdown menu for "Limit time of Continuous Motion JPEG" set to "Not permitted" and a dropdown for "Refresh Interval" set to "3 s". Below these are several checkboxes for various controls: Pan / Tilt Control, Preset Control, Click to Center Control, Brightness Control, External Output Control, Change Refresh Interval, Change Resolution, Change Quality, Capture Image Button, Listen, Talk, View Multi-Camera page, and View Buffered Image page. Both windows have "Save" and "Cancel" buttons at the bottom.

The screenshot shows the "Access Level" configuration window for guest users. It features a dropdown menu for "Limit time of Continuous Motion JPEG" set to "Not permitted" and a dropdown for "Refresh Interval" set to "3 s". Below these are several checkboxes for various controls: Pan / Tilt Control, Preset Control, Click to Center Control, Brightness Control, External Output Control, Change Refresh Interval, Change Resolution, Change Quality, Capture Image Button, Listen, Talk, View Multi-Camera page, and View Buffered Image page. The window has "Save" and "Cancel" buttons at the bottom.

- Clicking [Cancel] takes you back to the previous page without saving changes.

Setting	Description
User ID List	<ul style="list-style-type: none"> <li>• Up to 50 general users can be registered.</li> <li>• The list is used to modify or delete general user settings.</li> </ul>
User Name/ Password	<ul style="list-style-type: none"> <li>• User Name (6 to 15 characters): Enter the user name.</li> <li>• Password (6 to 15 characters): Enter the password.</li> </ul> <p><b>Note</b></p> <p>The password must be different from the user name.</p> <ul style="list-style-type: none"> <li>• Retype Password: Reenter the password.</li> <li>• Enter ASCII characters (see page 168). But [Space], [", ['], [&amp;], [&lt;], [&gt;] and [:] are not available.</li> </ul>

Setting	Description
Access Level	<p>Access level is set for each general user. Check the feature to enable.</p> <ul style="list-style-type: none"> <li>• In the limit time of continuous motion JPEG, set the time to change the video (Motion JPEG) to still images for each user. (Not permitted, Unlimited, 10 seconds—60 minutes) In the refresh interval, set the refresh interval after the video changes to still images. (3—60 seconds)</li> <li>• See each page for the following features. <ul style="list-style-type: none"> <li>Pan/Tilt Control (see page 24)</li> <li>Preset Control (see page 23)</li> <li>Click to Center Control (see page 21)</li> <li>Brightness Control (see page 23)</li> <li>External Output Control (see page 23)</li> <li>Change Refresh Interval (see page 23)</li> <li>Change Resolution (see page 23)</li> <li>Change Quality (see page 23)</li> <li>Capture Image Button (see page 22)</li> <li>Listen (see page 30)</li> <li>Talk (see page 30)</li> <li>View Multi-Camera page (see page 33)</li> <li>View Buffered Image page (see page 35)</li> </ul> </li> </ul>

4. Click [Save] when finished.
  - New settings are saved.
  - When finished, "Success!" is displayed.
5. Click [Go to General User page].

## 2.15 Buffering or Transferring Images by Timer

The Trigger page allows you to enable image buffer/transfer by E-mail or FTP.

1. Click [Trigger] on the Setup page.
2. Click **No.** to enable buffer/transfer.

Trigger												
No.	Status	Trigger	Sun	Mon	Tue	Wed	Thu	Fri	Sat	Active Time of Trigger	Transfer Method	Notify
1	OFF	Timer	X	X	X	X	X	X	X	Always	No Transfer, No Memory Overwrite	-
2	OFF	Timer	X	X	X	X	X	X	X	Always	No Transfer, No Memory Overwrite	-
3	OFF	Timer	X	X	X	X	X	X	X	Always	No Transfer, No Memory Overwrite	-
4	OFF	Timer	X	X	X	X	X	X	X	Always	No Transfer, No Memory Overwrite	-
5	OFF	Timer	X	X	X	X	X	X	X	Always	No Transfer, No Memory Overwrite	-

3. Check [Enable Image Buffer/Transfer], and select [Timer] for trigger, and click [Next>].

The screenshot shows the 'Trigger Setting' dialog box. It has a title bar 'Trigger Setting'. Inside, there is a checked checkbox for 'Enable Image Buffer/Transfer'. Below it is a dropdown menu labeled 'Trigger' with 'Timer' selected. At the bottom of the dialog, there is a button labeled 'Delete Buffered Images'. Below the dialog box, there are three buttons: 'Next >', 'Save', and 'Cancel'.

### Note

- Click [Delete Buffered Images] to delete the buffered images.
- Click [Save] to save the settings.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

Setting	Description
Enable Image Buffer/Transfer	<ul style="list-style-type: none"> <li>Check the box to enable the Trigger setting. Clear the box to disable it.</li> </ul>
Trigger	<ul style="list-style-type: none"> <li>Selecting [Timer] enables the camera to buffer/transfer the image by timer.</li> <li>Selecting [Alarm 1 or 2] enables the camera to buffer/transfer the image by alarm signal.</li> <li>Selecting [Motion Detection] enables the camera to capture/transfer the images when the motion detects something.</li> </ul>

4. Set the time, and click [Next>].

**Note**

The timer works by an internal clock. Set the date and time before using timer buffer/transfer (see page 70).

- Clicking [<Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

Setting	Description
A day of the week	<ul style="list-style-type: none"> <li>Check the box to enable the day. Clear the box to disable it.</li> </ul>
Active Time of Trigger	<ul style="list-style-type: none"> <li>Select the [Always] option when you do not specify the time period. If you specify the time period, select the time period option and set the time period.</li> </ul>


5. Set the image settings, and click [Next>].



- Clicking [<Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

Setting	Description
Image Resolution	<ul style="list-style-type: none"> <li>• Select image resolution (640 x 480, 320 x 240 (default) or 160 x 120 pixels) to buffer or transfer.</li> </ul>
Image Quality	<ul style="list-style-type: none"> <li>• Select the image quality. [Favor Clarity] optimizes for good quality. [Standard] offers standard quality. (default) [Favor Motion] optimizes for enhanced motion. [Mobile Phone] is for a transfer to a cell phone.</li> </ul> <p><b>Note</b> 640 x 480 pixels cannot be set for a transfer to a cell phone.</p>

**6.** Set the image buffer frequencies, and click [Next>].

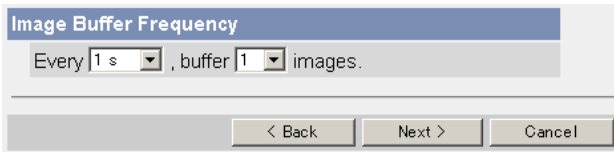


**Note**

Due to the network environment, object, number of accesses, enabling IPsec, the camera may not record the numbers of images as you set. In this case, set the image buffer frequencies longer.

- Clicking [<Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

Setting	Description
Image Buffer Frequency	<ul style="list-style-type: none"> <li>• Select the image buffer frequency to buffer or transfer the image. (1 image per hour—30 images per second)</li> </ul>

7. Select the transfer method, and click [Next>].

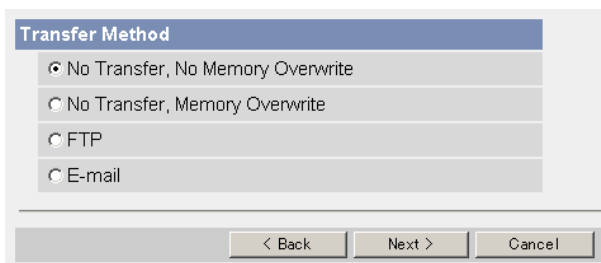

- Clicking [<Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

**Note**

If you transfer image by E-mail or FTP, confirm that the default gateway and DNS server addresses are assigned correctly (see page 43 and page 48).

Setting	Description
No Transfer, No Memory Overwrite	• If the internal memory is full, the camera stops the buffer.
No Transfer, Memory Overwrite	• If the internal memory is full, the camera deletes the old images, and continues to buffer the image.
FTP	• The camera transfers the image to an FTP server (see page 91).
E-mail	• The camera transfers the image by E-mail (see page 93).

### When you set [FTP] for Transfer Method

Select [FTP], and click [Next>]. The following page is displayed.

FTP	
Server IP Address or Host Name	<input type="text"/>
Port No. (Usually Use 21)	<input type="text" value="21"/>
Login ID (0 to 63 Characters)	<input type="text"/>
Password (0 to 63 Characters)	<input type="text"/>
Login Timing	<input type="text" value="Every Time"/>
Upload File Name (1 to 234 Characters)	<input type="text"/>
Overwrite setting	<input type="text" value="Overwrite File"/>
Data Transfer Method	<input type="text" value="Passive Mode"/>

- Clicking [**<Back**] takes you back to the previous page.
- Clicking [**Cancel**] takes you back to the Trigger page without saving changes.

Setting	Description
Server IP Address or Host Name <sup>1</sup>	<ul style="list-style-type: none"> <li>If you set the server IP address, set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available. Or set a host name (1—255 characters).</li> <li>You can set IPv6 address.</li> </ul>
Port No.	<ul style="list-style-type: none"> <li>Enter a number (1—65535). Usually set to 21.</li> </ul>
Login ID <sup>2</sup>	<ul style="list-style-type: none"> <li>If your ISP requires a login ID, set it (0—63 characters).</li> </ul>
Password <sup>2</sup>	<ul style="list-style-type: none"> <li>If your ISP requires a password, set it (0—63 characters).</li> </ul>
Login Timing	<ul style="list-style-type: none"> <li>Select the login timing to an FTP server. If you set [One Time] during 1-minute transfer, the camera logs in to the server only once, and can reduce the time to log in or log out.</li> </ul>
Upload File Name <sup>1</sup>	<ul style="list-style-type: none"> <li>Set the file name to save on an FTP server. Enter 1—234 characters. Entering "\" creates directories for a file. (E.g. NetworkCamera\image.jpg)</li> </ul>
Overwrite Setting	<ul style="list-style-type: none"> <li>Selecting [Overwrite File] saves and overwrites the image on the server. Selecting [Save as New File with Time Stamp] saves the image attaching time stamps on the file name, and the images are not overwritten. (E.g. image<u>20050101093020500</u>.jpg) Underlined numbers are "9h30min20s500ms on January 1, 2005". The letter "s" is inserted after the day when referring to a summer time zone.</li> </ul>
Data Transfer Method	<ul style="list-style-type: none"> <li>Select [Passive Mode] normally. If FTP does not work, select [Active Mode] and check the operation.</li> </ul>

<sup>1</sup> But [Space], ["], ['], [&], [<] and [>] are not available.

<sup>2</sup> But [""] is not available.

## When you set [E-mail] for Transfer Method

Select [E-mail], and click [Next>]. The following page is displayed.

E-mail Transfer	
SMTP Server IP Address or Host Name	<input type="text"/>
Port No. (Usually Use 25)	<input type="text" value="25"/>
POP3 Server IP Address or Host Name	<input type="text"/>
Port No. (Usually Use 110)	<input type="text" value="110"/>
Login ID (0 to 63 Characters)	<input type="text"/>
Password (0 to 63 Characters)	<input type="password"/>
Reply E-mail Address	<input type="text"/>
Destination E-mail Address 1	<input type="text"/>
Destination E-mail Address 2	<input type="text"/>
Destination E-mail Address 3	<input type="text"/>
Subject (Up to 44 Characters)	<input type="text"/>
Text (Up to 63 Characters)	<input type="text"/>

- Clicking [<Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

### Note

- The camera works only with an SMTP (Simple Mail Transfer Protocol) server. It does not work with mail servers like "Hotmail®" using a web browser.
- The subject name by E-mail transfer uses only 24 h format. The file name is "image.jpg".  
E.g. "image:20050101093020500".  
Underlined numbers are "9h30min20s500ms on January 1, 2005". The letter "s" is inserted after the day when referring to a summer time zone.

Setting	Description
SMTP Server IP Address or Host Name <sup>1</sup>	<ul style="list-style-type: none"> <li>If you set the server IP address, set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available. Or set a host name (1—255 characters).</li> <li>You can set IPv6 address.</li> </ul>
Port No.	<ul style="list-style-type: none"> <li>Enter a number (1—65535). Usually set to 25.</li> </ul>
POP3 Server IP Address or Host Name <sup>1</sup>	<ul style="list-style-type: none"> <li>If you set the server IP address, set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available. Or set a host name (1—255 characters).</li> <li>You can set IPv6 address.</li> </ul>
Port No.	<ul style="list-style-type: none"> <li>Enter a number (1—65535). Usually set to 110.</li> </ul>
Login ID <sup>2</sup>	<ul style="list-style-type: none"> <li>If your ISP requires a login ID to log in to a POP3 server, set it (0—63 characters).</li> </ul>
Password <sup>2</sup>	<ul style="list-style-type: none"> <li>If your ISP requires a password to log in to a POP3 server, set it (0—63 characters).</li> </ul>
Reply E-mail Address <sup>2</sup>	<ul style="list-style-type: none"> <li>Set the sender's E-mail address. We recommend you to set the administrator's E-mail address.</li> </ul>
Destination E-mail Address <sup>2</sup> 1—3	<ul style="list-style-type: none"> <li>Set the destination E-mail address (up to 3).</li> </ul>
Subject	<ul style="list-style-type: none"> <li>Enter a subject with ASCII characters (see page 168) or characters in each language (0—44 characters for a 1-byte character and 0—22 characters for a 2-byte character). But ["] is not available.</li> </ul>
Text	<ul style="list-style-type: none"> <li>Enter text with ASCII characters (see page 168) or characters in each language (0—63 characters for a 1-byte character and 0—31 characters for a 2-byte character). But ["] and [end-of-line] key are not available.</li> </ul>

<sup>1</sup> But [Space], ["], ['], [&], [ < ] and [ > ] are not available.

<sup>2</sup> But ["] is not available.

8. Confirm the settings, and click [Save].
  - New settings are saved.
  - When finished, "Success!" is displayed.
9. Click [Go to Trigger page].
  - The Trigger page is displayed.

**Note**

- If you are buffering images on the internal memory, the following operations also delete all buffered images.
  - Turning off the camera.
  - Saving the Date and Time page.
  - Restarting, updating firmware or resetting the camera to factory default.

## 2.16 Buffering or Transferring Images by Alarm Signal

The Trigger page allows you to enable image buffer/transfer by E-mail or FTP.

1. Click [Trigger] on the Setup page.
2. Click **No.** to enable buffer/transfer.

Trigger												
No.	Status	Trigger	Sun	Mon	Tue	Wed	Thu	Fri	Sat	Active Time of Trigger	Transfer Method	Notify
1	OFF	Timer	X	X	X	X	X	X	X	Always	No Transfer, No Memory Overwrite	-
2	OFF	Timer	X	X	X	X	X	X	X	Always	No Transfer, No Memory Overwrite	-
3	OFF	Timer	X	X	X	X	X	X	X	Always	No Transfer, No Memory Overwrite	-
4	OFF	Timer	X	X	X	X	X	X	X	Always	No Transfer, No Memory Overwrite	-
5	OFF	Timer	X	X	X	X	X	X	X	Always	No Transfer, No Memory Overwrite	-

3. Check [Enable Image Buffer/Transfer], select [Alarm 1 or 2] for trigger, select [Rising: GND to Open (High).] or [Falling: Open (High) to GND.] and click [Next>].

**Trigger Setting**

Enable Image Buffer/Transfer

Trigger: Alarm 1

Alarm enable condition: Rising: GND to Open (High).

---

### Note

- Click [Delete Buffered Images] to delete this buffered images.
- Click [Save] to save the settings.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.



Setting	Description
Enable Image Buffer/Transfer	<ul style="list-style-type: none"> <li>Check the box to enable the Trigger setting. Clear the box to disable it.</li> </ul>
Trigger	<ul style="list-style-type: none"> <li>Selecting [Timer] enables the camera to buffer/transfer the image by timer.</li> <li>Selecting [Alarm 1 or 2] enables the camera to buffer/transfer the image by alarm signal.</li> <li>Selecting [Motion Detection] enables the camera to capture/transfer the images when the motion detects something.</li> </ul>
Alarm enable condition	<ul style="list-style-type: none"> <li>Selecting the method of the detection for an alarm connected to the External I/O terminal.</li> <li>Select [Rising: GND to Open (High).] or [Falling: Open (High) to GND.]. [Rising: GND to Open (High).] is the state that GND pin and pin 1 or pin 2 is left open. [Falling: Open (High) to GND.] is the state that GND pin and pin 1 or pin 2 is short-circuited. (See page 145)</li> </ul>

4. Set the time, and click [Next>].


**Note**

The timer works by an internal clock. Set the date and time before using timer buffer/transfer (see page 70).

- Clicking [<Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

Setting	Description
A day of the week	<ul style="list-style-type: none"> <li>Check the box to enable the day. Clear the box to disable it.</li> </ul>
Active Time of Trigger	<ul style="list-style-type: none"> <li>Select the [Always] option when you do not specify the time period. If you specify the time period, select the time period option and set the time period.</li> </ul>

5. Set the Lens Position When Triggered setting, and click [Next>].

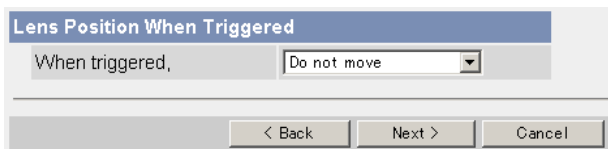


**Note**

If you enable the Lens Position When Triggered setting, buffer/transfer starts after the camera turns to the alarm position.

- Clicking [<Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

Setting	Description
Lens Position When Triggered	<ul style="list-style-type: none"> <li>• Set [Move to alarm position] to move the lens to the alarm position (see page 26) when the alarm signal is detected.</li> </ul>

6. Set the image settings, and click [Next>].

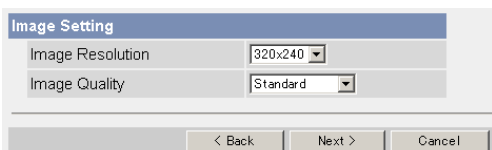

- Clicking [<Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

Setting	Description
Image Resolution	<ul style="list-style-type: none"> <li>• Select image resolution (640 x 480, 320 x 240 (default) or 160 x 120 pixels) to buffer or transfer.</li> </ul>
Image Quality	<ul style="list-style-type: none"> <li>• Select the image quality.                      [Favor Clarity] optimizes for good quality.                      [Standard] offers standard quality. (default)                      [Favor Motion] optimizes for enhanced motion.                      [Mobile Phone] is for a transfer to a cell phone.</li> </ul> <p><b>Note</b> 640 x 480 pixels cannot be set for a transfer to a cell phone.</p>

## 7. Set the image buffer frequencies, and click [Next>].


### Note

Due to the network environment, object, number of accesses, enabling IPsec, the camera may not record the numbers of images as you set. In this case, set the image buffer frequencies longer.

- Clicking [<Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

Setting	Description
Enable Pre-trigger Image Buffer	<ul style="list-style-type: none"> <li>• Check the box to enable the setting. The camera buffers or transfers the image right before the alarm signal is detected.</li> <li>• Set an interval, number of images to buffer and total number. The buffered images may not match the total number due to memory capacity, image resolution, image quality or what object you view.</li> </ul>
Enable Post-trigger Image Buffer	<ul style="list-style-type: none"> <li>• Check the box to enable the setting. The camera buffers or transfers the image right after the alarm signal is detected.</li> <li>• Set an interval, number of images to buffer and total number. The buffered images may not match the total number due to memory capacity, image resolution, image quality or what object you view.</li> </ul>

**8.** Select the transfer method, and click [Next>].

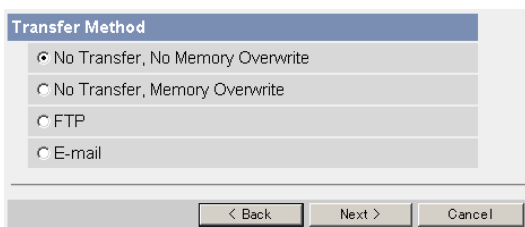

- Clicking [<Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

**Note**

If you transfer image by E-mail or FTP, confirm that the default gateway and DNS server addresses are assigned correctly (see page 43 and page 48).

Setting	Description
No Transfer, No Memory Overwrite	<ul style="list-style-type: none"> <li>• If the internal memory is full, the camera stops the buffer.</li> </ul>
No Transfer, Memory Overwrite	<ul style="list-style-type: none"> <li>• If the internal memory is full, the camera deletes the old images, and continues to buffer the image.</li> </ul>
FTP	<ul style="list-style-type: none"> <li>• The camera transfers the image to an FTP server (see page 101).</li> </ul>
E-mail	<ul style="list-style-type: none"> <li>• The camera transfers the image by E-mail (see page 103).</li> </ul>

### When you set [FTP] for Transfer Method

Select [FTP], and click [Next>]. The following page is displayed.

FTP	
Server IP Address or Host Name	<input type="text"/>
Port No. (Usually Use 21)	<input type="text" value="21"/>
Login ID (0 to 63 Characters)	<input type="text"/>
Password (0 to 63 Characters)	<input type="text"/>
Login Timing	<input type="text" value="Every Time"/>
Upload File Name (1 to 234 Characters)	<input type="text"/>
Overwrite setting	<input type="text" value="Overwrite File"/>
Data Transfer Method	<input type="text" value="Passive Mode"/>

- Clicking [**<Back**] takes you back to the previous page.
- Clicking [**Cancel**] takes you back to the Trigger page without saving changes.

Setting	Description
Server IP Address or Host Name <sup>1</sup>	<ul style="list-style-type: none"> <li>If you set the server IP address, set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available. Or set a host name (1—255 characters).</li> <li>You can set IPv6 address.</li> </ul>
Port No.	<ul style="list-style-type: none"> <li>Enter a number (1—65535). Usually set to 21.</li> </ul>
Login ID <sup>2</sup>	<ul style="list-style-type: none"> <li>If your ISP requires a login ID, set it (0—63 characters).</li> </ul>
Password <sup>2</sup>	<ul style="list-style-type: none"> <li>If your ISP requires a password, set it (0—63 characters).</li> </ul>
Login Timing	<ul style="list-style-type: none"> <li>Select the login timing to an FTP server. If you set [One Time] during 1-minute transfer, the camera logs in to the server only once, and can reduce the time to log in or log out.</li> </ul>
Upload File Name <sup>1</sup>	<ul style="list-style-type: none"> <li>Set the file name to save on an FTP server. Enter 1—234 characters. Entering "\" creates directories for a file. (E.g. NetworkCamera\image.jpg)</li> </ul>
Overwrite Setting	<ul style="list-style-type: none"> <li>Selecting [Overwrite File] saves and overwrites the image on the server. Selecting [Save as New File with Time Stamp] saves the image attaching time stamps on the file name, and the images are not overwritten. (E.g. image<u>20050101093020500</u>.jpg) Underlined numbers are "9h30min20s500ms on January 1, 2005". The letter "s" is inserted after the day when referring to a summer time zone.</li> </ul>
Data Transfer Method	<ul style="list-style-type: none"> <li>Select [Passive Mode] normally. If FTP does not work, select [Active Mode] and check the operation.</li> </ul>

<sup>1</sup> But [Space], ["], ['], [&], [<] and [>] are not available.

<sup>2</sup> But [""] is not available.

## When you set [E-mail] for Transfer Method

Select [E-mail], and click [Next>]. The following page is displayed.

E-mail Transfer	
SMTP Server IP Address or Host Name	<input type="text"/>
Port No. (Usually Use 25)	<input type="text" value="25"/>
POP3 Server IP Address or Host Name	<input type="text"/>
Port No. (Usually Use 110)	<input type="text" value="110"/>
Login ID (0 to 63 Characters)	<input type="text"/>
Password (0 to 63 Characters)	<input type="text"/>
Reply E-mail Address	<input type="text"/>
Destination E-mail Address 1	<input type="text"/>
Destination E-mail Address 2	<input type="text"/>
Destination E-mail Address 3	<input type="text"/>
Subject (Up to 44 Characters)	<input type="text"/>
Text (Up to 63 Characters)	<input type="text"/>

- Clicking [<Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

### **Note**

- The camera works only with an SMTP (Simple Mail Transfer Protocol) server. It does not work with mail servers like "Hotmail" using a web browser.
- The subject name by E-mail transfer uses only 24 h format. The file name is "image.jpg".  
E.g. "image:20050101093020500".  
Underlined numbers are "9h30min20s500ms on January 1, 2005". The letter "s" is inserted after the day when referring to a summer time zone.

Setting	Description
SMTP Server IP Address or Host Name <sup>1</sup>	<ul style="list-style-type: none"> <li>If you set the server IP address, set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available. Or set a host name (1—255 characters).</li> <li>You can set IPv6 address.</li> </ul>
Port No.	<ul style="list-style-type: none"> <li>Enter a number (1—65535). Usually set to 25.</li> </ul>
POP3 Server IP Address or Host Name <sup>1</sup>	<ul style="list-style-type: none"> <li>If you set the server IP address, set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available. Or set a host name (1—255 characters).</li> <li>You can set IPv6 address.</li> </ul>
Port No.	<ul style="list-style-type: none"> <li>Enter a number (1—65535). Usually set to 110.</li> </ul>
Login ID <sup>2</sup>	<ul style="list-style-type: none"> <li>If your ISP requires a login ID to log in to a POP3 server, set it (0—63 characters).</li> </ul>
Password <sup>2</sup>	<ul style="list-style-type: none"> <li>If your ISP requires a password to log in to a POP3 server, set it (0—63 characters).</li> </ul>
Reply E-mail Address <sup>2</sup>	<ul style="list-style-type: none"> <li>Set the sender's E-mail address. We recommend you to set the administrator's E-mail address.</li> </ul>
Destination E-mail Address <sup>2</sup> 1—3	<ul style="list-style-type: none"> <li>Set the destination E-mail address (up to 3).</li> </ul>
Subject	<ul style="list-style-type: none"> <li>Enter a subject with ASCII characters (see page 168) or characters in each language (0—44 characters for a 1-byte character and 0—22 characters for a 2-byte character). But ["] is not available.</li> </ul>
Text	<ul style="list-style-type: none"> <li>Enter text with ASCII characters (see page 168) or characters in each language (0—63 characters for a 1-byte character and 0—31 characters for a 2-byte character). But ["] and [end-of-line] key are not available.</li> </ul>

<sup>1</sup> But [Space], ["], ['], [&], [ < ] and [ > ] are not available.

<sup>2</sup> But ["] is not available.



9. After you confirm the settings and click [Next>], set E-mail notification and click [Next>].

**E-mail notification when triggered**

Disable

Enable

< Back    Next >    Cancel

- If you select [Enable], the E-mail Notification When Triggered page is displayed. Enter the settings seeing page 103 and page 104. When finished, click [Next>] and go to step 10.

Setting	Description
Disable	<ul style="list-style-type: none"> <li>• The camera does not send an E-mail notification when buffering or transferring image.</li> </ul>
Enable	<ul style="list-style-type: none"> <li>• The camera sends an E-mail notification (up to 3 destinations) when buffering or transferring image.</li> </ul>


10. Click [Save] after confirming the settings.
- New settings are saved.
  - When finished, "Success!" is displayed.

**11.** Click [Go to Trigger page].

- The Trigger page is displayed.

**Note**

- If you set a short interval to transfer image to a cell phone, many E-mails may be sent to it leading to a large phone bill. Therefore, we recommend you to set a long interval. 1 image per minute frequency is recommended.
- Alarm transfer stops its operations until the camera finishes all transfers. For example, if the camera transfers 3 images per minute and 6 images in total, the alarm detection will be in the following operation.

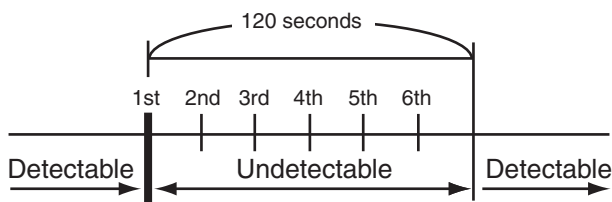

An alarm signal is detected.

- If you are buffering images on the internal memory, the following operations also delete all buffered images.
  - Turning off the camera.
  - Saving the Date and Time page.
  - Restarting, updating firmware or resetting the camera to factory default.

## 2.17 Buffering or Transferring Images by Motion Detection Signal

The Trigger page allows you to enable image buffer/transfer by E-mail or FTP.

1. Click [Trigger] on the Setup page.
2. Click [No.] to enable buffer/transfer.

Trigger												
No	Status	Trigger	Sun	Mon	Tue	Wed	Thu	Fri	Sat	Active Time of Trigger	Transfer Method	Notify
1	OFF	Timer	X	X	X	X	X	X	X	Always	No Transfer, No Memory Overwrite	-
2	OFF	Timer	X	X	X	X	X	X	X	Always	No Transfer, No Memory Overwrite	-
3	OFF	Timer	X	X	X	X	X	X	X	Always	No Transfer, No Memory Overwrite	-
4	OFF	Timer	X	X	X	X	X	X	X	Always	No Transfer, No Memory Overwrite	-
5	OFF	Timer	X	X	X	X	X	X	X	Always	No Transfer, No Memory Overwrite	-

3. Check [Enable Image Buffer/Transfer], select [Motion Detection] for trigger, and click [Next>].

**Trigger Setting**

Enable Image Buffer/Transfer

Trigger Motion Detection ▾

---

### Note

- Click [Delete Buffered Images] to delete this buffered images.
- Click [Save] to save the settings.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

Setting	Description
Enable Image Buffer/Transfer	<ul style="list-style-type: none"> <li>• Check the box to enable the Trigger setting. Clear the box to disable it.</li> </ul>

Setting	Description
Trigger	<ul style="list-style-type: none"> <li>• Selecting [Timer] enables the camera to buffer/transfer the image by timer.</li> <li>• Selecting [Alarm 1 or 2] enables the camera to buffer/transfer the image by alarm signal.</li> <li>• Selecting [Motion Detection] enables the camera to capture/transfer the images when the motion detects something.</li> </ul>

4. Set the time, and click [Next>].

The screenshot shows a 'Time' configuration window. At the top, there's a title bar 'Time'. Below it, a row of days from Sun to Sat, each with a checkbox. To the right, there's a section for 'Active Time of Trigger' with a radio button for 'Always'. Below that, there are dropdown menus for AM/PM, hours (12, 0), and minutes (11, 59). At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.

**Note**

The timer works by an internal clock. Set the date and time before using timer buffer/transfer (see page 70).

- Clicking [>Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

Setting	Description
A day of the week	<ul style="list-style-type: none"> <li>• Check the box to enable the day. Clear the box to disable it.</li> </ul>
Active Time of Trigger	<ul style="list-style-type: none"> <li>• Select the [Always] option when you do not specify the time period. If you specify the time period, select the time period option and set the time period.</li> </ul>

5. Set the image settings, and click [Next>].

The screenshot shows a 'Lens Position When Triggered' configuration window. It has a title bar with the same text. Below the title bar, there's a label 'When triggered,' followed by a dropdown menu currently set to 'Do not move'. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.


**Note**

If you enable the Lens Position When Triggered setting, buffer/transfer starts after the camera turns to the Home Position, Preset No. 1–8, or Alarm No. 1–2.

- Clicking [>Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

Setting	Description
Lens Position When Triggered	<ul style="list-style-type: none"> <li>• Set the lens position when motion detection triggered.</li> </ul>

**6.** Set the image settings, and click [Next>].

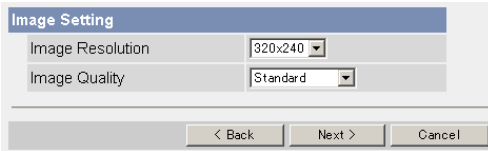

- Clicking [>Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

Setting	Description
Image Resolution	<ul style="list-style-type: none"> <li>• Select image resolution (640 × 480, 320 × 240 (default) or 160 × 120 pixels) to buffer or transfer.</li> </ul>
Image Quality	<ul style="list-style-type: none"> <li>• Select the image quality.            [Favor Clarity] optimizes for good quality.            [Standard] offers standard quality. (Default)            [Favor Motion] optimizes for enhanced motion.            [Mobile Phone] is for a transfer to a cell phone.</li> </ul> <p><b>Note</b>            640 × 480 pixels cannot be set for a transfer to a cell phone.</p>

7. Set the image buffer frequencies, and click [Next>].

**Note**

Due to the network environment, object, number of accesses, enabling IPsec, the camera may not record the numbers of images as you set. In this case, set the image buffer frequencies longer.

- Clicking [Cancel] takes you back to the Trigger page without saving changes.
- Clicking [<Back] takes you back to the previous page.

Setting	Description
Enable Pre-trigger Image Buffer	<ul style="list-style-type: none"> <li>• Check the box to enable the setting. The camera buffers or transfers the image right before the motion detection signal is detected.</li> <li>• Set an interval, number of images to buffer and total number. The buffered images may not match the total number due to memory capacity, image resolution, image quality or what object you view.</li> </ul>
Enable Post-trigger Image Buffer	<ul style="list-style-type: none"> <li>• Check the box to enable the setting. The camera buffers or transfers the image right after the motion detection signal is detected.</li> <li>• Set an interval, number of images to buffer and total number. The buffered images may not match the total number due to memory capacity, image resolution, image quality or what object you view.</li> </ul>

## 8. Select the transfer method, and click [Next>].

The screenshot shows a dialog box titled "Transfer Method". It contains four radio button options:
 

- No Transfer, No Memory Overwrite
- No Transfer, Memory Overwrite
- FTP
- E-mail

 At the bottom of the dialog, there are three buttons: "< Back", "Next >", and "Cancel".

- Clicking [<Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

### Note

If you transfer image by E-mail or FTP, confirm that the default gateway and DNS server addresses are assigned correctly (see page 43 and page 48).

Setting	Description
No Transfer, No Memory Overwrite	<ul style="list-style-type: none"> <li>• If the internal memory is full, the camera stops the buffer.</li> </ul>
No Transfer, Memory Overwrite	<ul style="list-style-type: none"> <li>• If the internal memory is full, the camera deletes the old images, and continues to buffer the image.</li> </ul>
FTP	<ul style="list-style-type: none"> <li>• The camera transfers the image to an FTP server (see page 112).</li> </ul>
E-mail	<ul style="list-style-type: none"> <li>• The camera transfers the image by E-mail (see page 114).</li> </ul>

### When you set [FTP] for Transfer Method

Select [FTP], and click [Next>]. The following page is displayed.

FTP	
Server IP Address or Host Name	<input type="text"/>
Port No. (Usually Use 21)	<input type="text" value="21"/>
Login ID (0 to 63 Characters)	<input type="text"/>
Password (0 to 63 Characters)	<input type="text"/>
Login Timing	<input type="text" value="Every Time"/>
Upload File Name (1 to 234 Characters)	<input type="text"/>
Overwrite setting	<input type="text" value="Overwrite File"/>
Data Transfer Method	<input type="text" value="Passive Mode"/>

- Clicking [<Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.



Setting	Description
Server IP Address or Host Name <sup>1</sup>	<ul style="list-style-type: none"> <li>If you set the server IP address, set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available. Or set a host name (1—255 characters).</li> <li>You can set IPv6 address.</li> </ul>
Port No.	<ul style="list-style-type: none"> <li>Enter a number (1—65535). Usually set to 21.</li> </ul>
Login ID <sup>2</sup>	<ul style="list-style-type: none"> <li>If your ISP requires a login ID, set it (0—63 characters).</li> </ul>
Password <sup>2</sup>	<ul style="list-style-type: none"> <li>If your ISP requires a password, set it (0—63 characters).</li> </ul>
Login Timing	<ul style="list-style-type: none"> <li>Select the login timing to an FTP server. If you set [One Time] during 1-minute transfer, the camera logs in to the server only once, and can reduce the time to log in or log out.</li> </ul>
Upload File Name <sup>1</sup>	<ul style="list-style-type: none"> <li>Set the file name to save on an FTP server. Enter 1—234 characters. Entering "\" creates directories for a file. (E.g. NetworkCamera\image.jpg)</li> </ul>
Overwrite Setting	<ul style="list-style-type: none"> <li>Selecting [Overwrite File] saves and overwrites the image on the server. Selecting [Save as New File with Time Stamp] saves the image attaching time stamps on the file name, and the images are not overwritten. (E.g. image<u>20050101093020500</u>.jpg) Underlined numbers are "9h30min20s500ms on January 1, 2005". The letter "s" is inserted after the day when referring to a summer time zone.</li> </ul>
Data Transfer Method	<ul style="list-style-type: none"> <li>Select [Passive Mode] normally. If FTP does not work, select [Active Mode] and check the operation.</li> </ul>

<sup>1</sup> But [Space], ["], ['], [&], [<] and [>] are not available.

<sup>2</sup> But [""] is not available.

## When you set [E-mail] for Transfer Method

Select [E-mail], and click [Next>]. The following page is displayed.

E-mail Transfer	
SMTP Server IP Address or Host Name	<input type="text"/>
Port No. (Usually Use 25)	<input type="text" value="25"/>
POP3 Server IP Address or Host Name	<input type="text"/>
Port No. (Usually Use 110)	<input type="text" value="110"/>
Login ID (0 to 63 Characters)	<input type="text"/>
Password (0 to 63 Characters)	<input type="text"/>
Reply E-mail Address	<input type="text"/>
Destination E-mail Address 1	<input type="text"/>
Destination E-mail Address 2	<input type="text"/>
Destination E-mail Address 3	<input type="text"/>
Subject (Up to 44 Characters)	<input type="text"/>
Text (Up to 63 Characters)	<input type="text"/>
<input type="button" value=" &lt; Back"/> <input type="button" value=" Next &gt; "/> <input type="button" value=" Cancel "/>	

- Clicking [<Back] takes you back to the previous page.
- Clicking [Cancel] takes you back to the Trigger page without saving changes.

### **Note**

- The camera works only with an SMTP (Simple Mail Transfer Protocol) server. It does not work with mail servers like "Hotmail" using a web browser.
- The subject name by E-mail transfer uses only 24 h format. The file name is "image.jpg".  
E.g. "image:20050101093020500".  
Underlined numbers are "9h30min20s500ms on January 1, 2005". The letter "s" is inserted after the day when referring to a summer time zone.

Setting	Description
SMTP Server IP Address or Host Name <sup>1</sup>	<ul style="list-style-type: none"> <li>If you set the server IP address, set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available. Or set a host name (1—255 characters).</li> <li>You can set IPv6 address.</li> </ul>
Port No.	<ul style="list-style-type: none"> <li>Enter a number (1—65535). Usually set to 25.</li> </ul>
POP3 Server IP Address or Host Name <sup>1</sup>	<ul style="list-style-type: none"> <li>If you set the server IP address, set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available. Or set a host name (1—255 characters).</li> <li>You can set IPv6 address.</li> </ul>
Port No.	<ul style="list-style-type: none"> <li>Enter a number (1—65535). Usually set to 110.</li> </ul>
Login ID <sup>2</sup>	<ul style="list-style-type: none"> <li>If your ISP requires a login ID to log in to a POP3 server, set it (0—63 characters).</li> </ul>
Password <sup>2</sup>	<ul style="list-style-type: none"> <li>If your ISP requires a password to log in to a POP3 server, set it (0—63 characters).</li> </ul>
Reply E-mail Address <sup>2</sup>	<ul style="list-style-type: none"> <li>Set the sender's E-mail address. We recommend you to set the administrator's E-mail address.</li> </ul>
Destination E-mail Address <sup>2</sup> 1—3	<ul style="list-style-type: none"> <li>Set the destination E-mail address (up to 3).</li> </ul>
Subject	<ul style="list-style-type: none"> <li>Enter a subject with ASCII characters (see page 168) or characters in each language (0—44 characters for a 1-byte character and 0—22 characters for a 2-byte character). But ["] is not available.</li> </ul>
Text	<ul style="list-style-type: none"> <li>Enter text with ASCII characters (see page 168) or characters in each language (0—63 characters for a 1-byte character and 0—31 characters for a 2-byte character). But ["] and [end-of-line] key are not available.</li> </ul>

<sup>1</sup> But [Space], ["], ['], [&], [<] and [>] are not available.

<sup>2</sup> But ["] is not available.

9. After you confirm the settings and click [Next>], set E-mail notification and click [Next>].

**E-mail notification when triggered**

Disable

Enable

< Back      Next >      Cancel

- If you select [Enable], the E-mail Notification When Triggered page is displayed. Enter the settings seeing page 114 and page 115.

Setting	Description
Disable	<ul style="list-style-type: none"> <li>• The camera does not send an E-mail notification when buffering or transferring image.</li> </ul>
Enable	<ul style="list-style-type: none"> <li>• The camera sends an E-mail notification (up to 3 destinations) when buffering or transferring image.</li> </ul>


10. Click [Save] after confirming the settings.
  - New settings are saved.
  - When finished, "Success!" is displayed.

**11.** Click [Go to Trigger page].

- The Trigger page is displayed.

**Note**

- If you set a short interval to transfer image to a cell phone, many E-mails may be sent to it leading to a large phone bill. Therefore, we recommend you to set a long interval. 1 image per minute frequency is recommended.
- Motion Detection transfer stops its operations until the camera finishes all transfers. For example, if the camera transfers 3 images per minute and 6 images in total, the Motion Detection will be in the following operation.

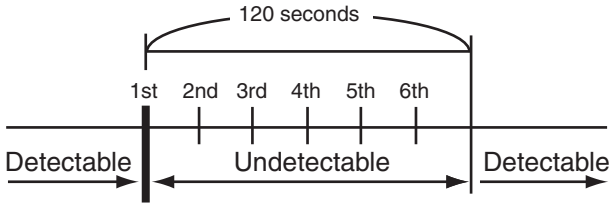

A Motion Detection signal is detected.


- If you are buffering images on the internal memory, the following operations also delete all buffered images.
  - Turning off the camera.
  - Saving the Date and Time page.
  - Restarting, updating firmware or resetting the camera to factory default.

**Note**

- A change due to light or wind may detect motions mistakenly.
- Motion detection level is changed depending on resolution, image quality, and object situation. Confirm the level by performing motion detection recording.
- Enabling Motion Detection delays the frame rate of the camera.
- Objects moving fast may not be detected.
- Motion Detection may not work in the dark.

## 2.18 Transfer the Camera Image in Transport Mode

The camera can transfer the image in transport mode by E-mail or FTP.

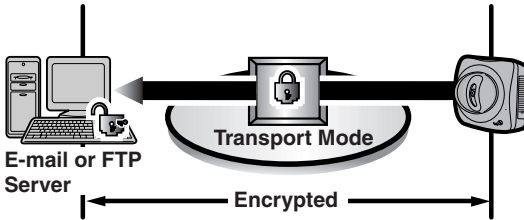


Prepare the following requirements.

Item	Supported Feature
E-mail or FTP Server	Operating System : IPsec supported ISP Service : Services for multiple static global addresses (A global address must be set up to the server.)
Camera	ISP Service : Services for multiple static global addresses (A global address must be set up to the camera.)

See page 55 and set up the E-mail or FTP server.

## 2.19 Transfer the Camera Image in Tunnel Mode

The camera can transfer the image in tunnel mode by E-mail or FTP.

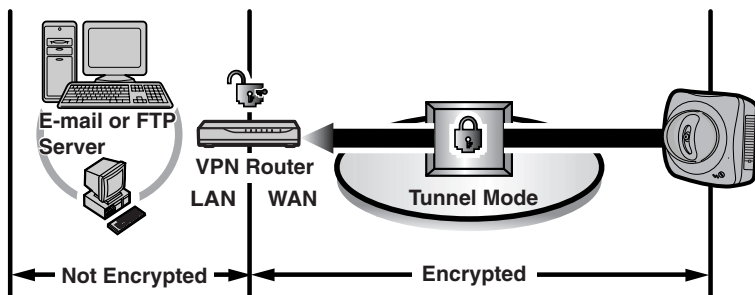

Prepare the following requirements.


Item	Supported Feature	
VPN Router	ISP Service (in IPv4)	: Services for static global addresses (A global address must be set up to the WAN side.)
	ISP Service (in IPv6)	: "IPv4/IPv6 Dual-Stack" or "IPv6 over IPv4 Tunneling" service
Camera	ISP Service (in IPv4)	: Services for multiple static global addresses (A global address must be set up to the camera.)
	ISP Service (in IPv6)	: "IPv4/IPv6 Dual-Stack" or "IPv6 over IPv4 Tunneling" service

See page 58 and set up the E-mail or FTP server.


## 2.20 Setting the Motion Detection

 The Motion Detection page allows you to adjust sensitivity of the Motion Detection. Threshold: If the threshold is set low, this function sensitively detects changes. Sensitivity: If you set sensitivity high, amplitude of motion detection bar gets jumpy.

1. Click [Motion Detection] on the Setup page.
2. Click the Motion Detection bar in Threshold to set the threshold level.



 3. Click the Motion Detection bar in Sensitivity to set the sensitivity level.



4. Click [Save] to save the settings.
  - Clicking [Cancel] cancels your settings without saving changes
5. Click [Go to Motion Detection page].
  - The Motion Detection page is displayed.

Setting	Description
Threshold	<ul style="list-style-type: none"> <li>• Adjust the threshold for Motion Detection.</li> </ul>
Sensitivity	<ul style="list-style-type: none"> <li>• If you set sensitivity high, amplitude of motion detection bar gets jumpy.</li> </ul>

### Preview


Display current threshold and detection level.

- The threshold is displayed by between green and red bar.
- The detection level is displayed by between dark and light color.

### Note

Setting Threshold and Sensitivity is enabled after saving, and reflect to preview.



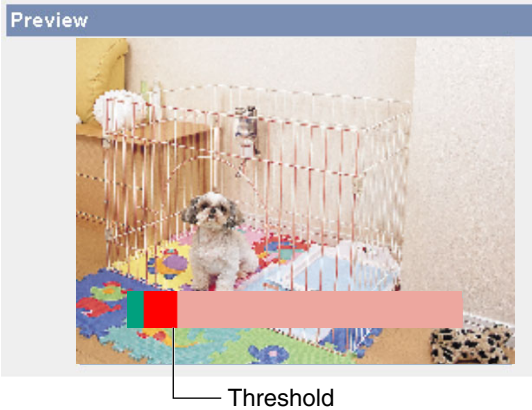


### What is the threshold?

The threshold is a value for the camera to detect motions on the image during the motion detection buffering. Setting the threshold lower allows subtler changes to be detected. Setting the threshold higher allows bigger changes that might occupy half the image to be detected.

### What is the sensitivity?

The sensitivity is the brightness change level for the camera to detect as the motion. The high sensitivity setting enables the camera to detect the slight brightness change. Lower the sensitivity to make the camera to detect only the big brightness change.


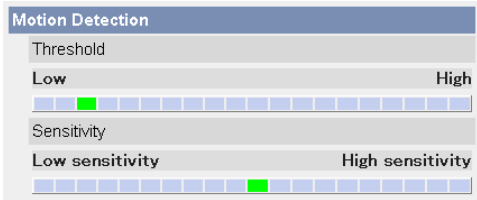


Detect motions according to the threshold.

When the level exceeds the threshold, the camera detects motions.

### Note

Lowering the threshold and heightening sensitivity enable the camera easily to detect the trivial motion on the part of the image.

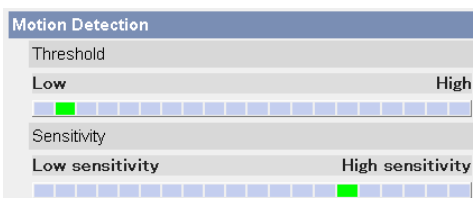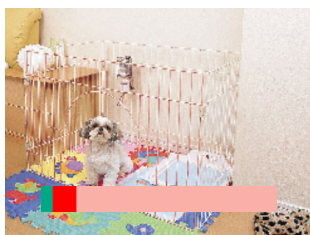

**Note**

- The motion detection is activated by object outline's changes and the brightness changes. This feature is designed to alleviate false detections by overall brightness changes due to sunlight. But in this case, the camera may falsely detect the rapid brightness changes by the artificial light such as the fluorescent light. In other cases, motion detection by the Network Camera Recorder detects whole objects and brightness changes. The way to detect motion differs between the camera and Network Camera Recorder. Additionally, if the object's color is absorbed by the background color, the camera is hard to detect the motions.
- The detecting level depends on the object, resolution, or image quality. Confirm the condition on the Preview window with following the above procedure when setting the Motion Detection.

## 2.21 Notifying Setup of an Alarm Log

Once a day, an alarm log sent at a specified time can be checked. To enable Alarm Log, set Alarm 1, Alarm 2 or Motion Detection for Trigger Setting and check [Enable].

1. Click [Alarm Log] on the Setup page.

When selecting Alarm1, Alarm2 or Motion Detection in Trigger page, the Alarm log window is displayed.

2. Set each parameter.

A setup of operation							
<input checked="" type="radio"/> Disable <input type="radio"/> Enable(When there is no new-arrival alarm log:Disable) <input type="radio"/> Enable(When there is no new-arrival alarm log:Enable)							
Active Time							
Sun	Mon	Tue	Wed	Thu	Fri	Sat	Time
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	PM 12 h 0 min
Notice setup of an alarm log							
SMTP Server IP Address or Host Name	<input type="text"/>						
Port No. (Usually Use 25)	<input type="text" value="25"/>						
POP3 Server IP Address or Host Name	<input type="text"/>						
Port No. (Usually Use 110)	<input type="text" value="110"/>						
Login ID (0 to 63 Characters)	<input type="text"/>						
Password (0 to 63 Characters)	<input type="text"/>						
Reply E-mail Address	<input type="text"/>						
Destination E-mail Address 1	<input type="text"/>						
Destination E-mail Address 2	<input type="text"/>						
Destination E-mail Address 3	<input type="text"/>						
Subject (Up to 44 Characters)	<input type="text" value="Alarm Log"/>						
<input type="button" value="Save"/> <input type="button" value="Cancel"/>							

### Note

- Click [Save] to save the settings.
- Clicking [Cancel] cancels your settings without saving changes.

Setting	Description
A setup of operation	<ul style="list-style-type: none"> <li>Alarm log operation can be set here.</li> </ul>
Time	<ul style="list-style-type: none"> <li>Set the date and time to send alarm logs via E-mail.</li> </ul>
SMTP Server IP Address or Host Name <sup>1</sup>	<ul style="list-style-type: none"> <li>If you set the server IP address, set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available. Or set a host name (1—255 characters).</li> <li>An IPv6 address can be set.</li> </ul>
Port No.	<ul style="list-style-type: none"> <li>Enter a number (1—65535). Usually set to 25.</li> </ul>
POP3 Server IP Address or Host Name <sup>1</sup>	<ul style="list-style-type: none"> <li>If you set the server IP address, set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available. Or set a host name (1—255 characters).</li> <li>An IPv6 address can be set.</li> </ul>
Port No.	<ul style="list-style-type: none"> <li>Enter a number (1—65535). Usually set to 110.</li> </ul>
Login ID <sup>2</sup>	<ul style="list-style-type: none"> <li>If your ISP requires a login ID to log in to a POP3 server, set it (0—63 characters).</li> </ul>
Password <sup>2</sup>	<ul style="list-style-type: none"> <li>If your ISP requires a password to log in to a POP3 server, set it (0—63 characters).</li> </ul>
Reply E-mail Address <sup>2</sup>	<ul style="list-style-type: none"> <li>Set the sender's E-mail address. We recommend you to set the administrator's E-mail address.</li> </ul>
Destination E-mail Address 1-3 <sup>2</sup>	<ul style="list-style-type: none"> <li>Set the destination E-mail address (up to 3).</li> </ul>
Subject	<ul style="list-style-type: none"> <li>Enter a subject with ASCII characters (see page 168) or characters in each language (0—44 characters for a 1-byte character and 0—22 characters for a 2-byte character). But [""] is not available.</li> </ul>

<sup>1</sup> But [Space], ["], ['], [&], [<] and [>] are not available.

<sup>2</sup> But [""] is not available.

## 2.22 Changing Initial Settings on the Single Camera page or the Multi-Camera page

The Image Display page allows you to change initial settings (display settings when a user accesses the camera) of image resolution, image quality and refresh interval. You can display a time stamp on the image. The initial language can be selected from eight languages. The banner can be displayed for administrator or general users or both.

1. Click [Image Display] on the Setup page.
2. Set each parameter.

<b>Single Camera</b>	
Image Resolution	320x240 ▾
Image Quality	Standard ▾
Refresh Interval	Motion ▾
<b>Multi-Camera</b>	
Image Resolution	320x240 ▾
Image Quality	Standard ▾
Refresh Interval	Motion ▾
<b>Time stamp setting</b>	
Time stamp	Disable ▾
<b>Language</b>	
Language	English ▾
<b>Banner Display</b>	
Administrator	<input checked="" type="checkbox"/> Display
General User	<input checked="" type="checkbox"/> Display
<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

- Clicking [Cancel] cancels your settings without saving changes.

Setting	Description
Image Resolution	<ul style="list-style-type: none"> <li>Select the image resolution. 640 x 480 pixels (Only for the Single Camera page) 320 x 240 pixels (default) 160 x 120 pixels (Only for the Multi-Camera page)</li> </ul>
Image Quality	<ul style="list-style-type: none"> <li>Select the image quality. [Favor Clarity] optimizes for good quality. [Standard] offers standard quality. (default) [Favor Motion] optimizes for enhanced motion.</li> </ul>
Refresh Interval	<ul style="list-style-type: none"> <li>Select a refresh interval. Motion, 3 s, 5 s, 10 s, 30 s, and 60 s</li> </ul>
Time stamp setting	<ul style="list-style-type: none"> <li>You can display a time stamp on the upper left side of the image. Select from [Enable] or [Disable].</li> </ul> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>If you enable this feature, the time is also stamped on the buffered image.</li> <li>Set AM/PM format and 24H format on the Date and Time page.</li> </ul>
Language	<ul style="list-style-type: none"> <li>Select the initial language from English, French, German, Italian, Spanish, Russian, Simplified Chinese or Japanese. The selected language is displayed as the initial language on the Top, Single Camera, Multi-Camera and Buffered Image pages. If you select English or Japanese, all pages can be changed. But if you select other language, the Setup, Maintenance and Support pages are displayed only in English.</li> </ul>
Banner Display	<ul style="list-style-type: none"> <li>When the camera accesses the Internet, the banner displays product information about cameras or announcements about the latest firmware, etc. from Panasonic. Checking [Display] for Administrator is particularly recommended.</li> <li>When checked, the banner is displayed for administrator or general users or both.</li> <li>The banner is displayed only on the Single Camera page (see page 17).</li> </ul>

- Click [Save] when finished.
  - New settings are saved.

- When finished, "Success!" is displayed.
- 4.** Click [Go to Image Display page].
- The Image Display page is displayed.

## 2.23 Configuring Multiple Cameras

The Multi-Camera Setup page allows you to configure the camera IP addresses and camera names to view multiple images on the Multi-Camera page. These configurations are required to use the Multi-Camera page. Up to 12 cameras can be configured.

1. Click [Multi-Camera] on the Setup page.
2. Click **Add**.

No.	Display	IP Address or Host Name	Port No.	Camera Name
<a href="#">Add</a>				

### Note

- If you click the camera number, the modification page is displayed. The camera setting can be modified or deleted on it.
- If you configured multiple cameras, you can change the camera number. Select the number, and click [Move].

Change Camera Order		
From No.	<input type="text" value="1"/>	To No.
	<input type="text" value="1"/>	<input type="button" value="Move"/>

3. Set each parameter.

Add Camera	
Display	<input checked="" type="checkbox"/> On
IP Address or Host Name	<input type="text"/>
Port No. (1 to 65535)	<input type="text"/>
Camera Name (1 to 15 characters)	<input type="text"/>
<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

- Clicking [Cancel] cancels your settings without saving changes.



Setting	Description
Display	<ul style="list-style-type: none"> <li>Check the box to enable the camera.</li> </ul>
IP Address <sup>1</sup> or Host Name <sup>2</sup>	<ul style="list-style-type: none"> <li>Set the IP address or the host name to enable the camera.</li> </ul>
Port No.	<ul style="list-style-type: none"> <li>Set the port number (1—65535).</li> </ul>
Camera Name <sup>3</sup>	<ul style="list-style-type: none"> <li>This camera name is displayed only on the Multi-Camera page.</li> </ul>

<sup>1</sup> In IPv4, set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available.

In IPv6, set the host name.

<sup>2</sup> Enter ASCII characters for the host name (see page 168). But [Space], ["], ['], [#], [&], [%], [=], [+], [?], [<], and [>] are not available.

Enter 1—255 characters.

<sup>3</sup> Enter ASCII characters (see page 168) or characters in each language (1—15 characters for a 1-byte character and 1—7 characters for a 2-byte character). But [Space], ["], ['], [#], [&], [%], [=], [+], [?], [:], [<], and [>] are not available.

## Note

- Set the local IP address and port number for the camera on the same LAN.
- If the cameras will be accessed from the Internet, be sure to use the global IP address. In this situation, local IP addresses such as 192.168. x.x cannot be used.

4. Click [Save] when finished.

- New settings are saved.
- The Multi-Camera Setup page is displayed.

## 2.24 Specifying Operation Time

The Operation Time page allows you to limit the operation time. The camera image turns to a gray screen outside the operation time.

### Note

- If you wrongly set the time period, your privacy may be seen. Confirm the time period after the setup.
- If you access the camera as an administrator, you can view the image outside the time period.

1. Click [Operation Time] on the Setup page.
2. Click [No.] to set the operation time.

Operation Time									
No.	Status	Sun	Mon	Tue	Wed	Thu	Fri	Sat	Operation Time
1	Disable	X	X	X	X	X	X	X	Always
2	Disable	X	X	X	X	X	X	X	Always
3	Disable	X	X	X	X	X	X	X	Always
4	Disable	X	X	X	X	X	X	X	Always
5	Disable	X	X	X	X	X	X	X	Always
6	Disable	X	X	X	X	X	X	X	Always
7	Disable	X	X	X	X	X	X	X	Always

### Note

If No. 1—7 are disabled, the camera can always be operated.

3. Check [Enable], set the time, and click [Save]

Operation Time								Operation Time	
Enable	Sun	Mon	Tue	Wed	Thu	Fri	Sat		
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="radio"/> Always	<input type="text" value="AM"/> <input type="text" value="12"/> <input type="text" value="0"/> min to <input type="text" value="AM"/> <input type="text" value="12"/> <input type="text" value="0"/> min
<input type="button" value="Save"/> <input type="button" value="Cancel"/>									

- Clicking [Cancel] takes you back to the previous page.

Setting	Description
Enable	<ul style="list-style-type: none"> <li>Check the box to enable the setting. Clear the box to disable it.</li> </ul>
A day of the week	<ul style="list-style-type: none"> <li>Check the box to enable the day. Clear the box to disable it.</li> </ul>
Operation Time	<ul style="list-style-type: none"> <li>Select the [Always] option when you do not specify the time period. If you specify the time period, select the time period option and set the time period.</li> </ul>

4. Click [Save] when finished.
- New settings are saved.
  - The Operation Time page is displayed.

## About Operation Time

In the operation time settings, the enabled settings take priority over the disabled settings. Therefore, if Monday or Tuesday is disabled in a setting but enabled in other settings, the camera can be operated on both Monday and Tuesday.

No.	Status	Sun	Mon	Tue	Wed	Thu	Fri	Sat	Operation Time
1	Enable	X	X		X	X	X	X	Always
2	Enable	X		X	X	X	X	X	Always

## 2.25 Controlling External Output Terminal

The digital output terminal allows you to control the external devices. You can change the initial status of the output signal.

### Note

Connect the external devices to the camera.

1. Click [External Output] on the Setup page.
2. Click [Save] when finished.

- Clicking [Cancel] cancels your settings without saving changes.
- New settings are saved.
- When finished, "Success!" is displayed.

Setting	Description
External Device Control Output	<ul style="list-style-type: none"> <li>• If you check [Open], the internal transistor turns off and the external output terminal gets high impedance (open collector) when the camera powers up. If you check [Short to GND], the internal transistor turns on and is electrically short-circuited to GND pin when the camera powers up. The external output terminal gets low impedance (0 V).</li> </ul>
Button name modification	<ul style="list-style-type: none"> <li>• You can change the output control button names on the operation bar. You can name the button depending on your external devices.</li> </ul>

3. Click [Go to External Output Control page].
  - The External Output Control page is displayed.

## 2.26 Changing Indicator Display

The Indicator Control page allows you to select Indicator operation. Indicator has three options.

- Always on
  - Turn the indicator on when the camera is accessed.
  - Always off
1. Click [Indicator Control] on the Setup page.
  2. Select indicator option.

The screenshot shows a dialog box titled "Indicator Control". It contains three radio button options:
 

- Turn indicator on when camera is on.
- Turn indicator on during camera access.
- Never turn indicator on.

 At the bottom right of the dialog box, there are two buttons: "Save" and "Cancel".


- Clicking [Cancel] cancels your settings without saving changes.

### **Note**

- See page 7 for indicator display.
  - Selecting [Never turn indicator on] keeps indicator always off.
3. Click [Save] when finished.
    - New settings are saved.
    - When finished, "Success!" is displayed.
  4. Click [Go to Indicator Control page].
    - The Indicator Control page is displayed.

## 3 Camera Maintenance

### 3.1 Maintenance page

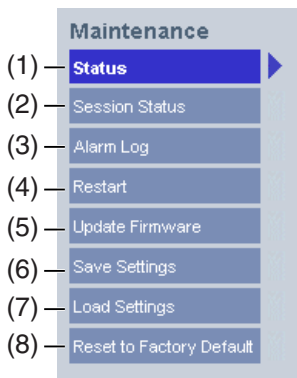


---

#### Maintenance

- |     |                                 |  |
|-----|---------------------------------|--|
| (1) | <b>Status</b>                   | Displays the camera settings and status (see page 135).      |
| (2) | <b>Session Status</b>           | Displays information on access to the camera (see page 135). |
| (3) | <b>Alarm Log</b>                | Displays alarm logs (see page 136).                          |
| (4) | <b>Restart</b>                  | Restarts the camera (see page 136).                          |
| (5) | <b>Update Firmware</b>          | Updates the camera firmware (see page 137).                  |
| (6) | <b>Save Settings</b>            | Creates a configuration file (see page 140).                 |
| (7) | <b>Load Settings</b>            | Loads settings from a configuration file (see page 141).     |
| (8) | <b>Reset to Factory Default</b> | Resets the camera to its default settings (see page 142).    |
-

### 3.1.1 Confirming the Status

The Status page allows you to check the status of the camera. The status information provides support for troubleshooting.

Clicking [Status] displays the following page.

Version	
Displays Hardware/Firmware Version.	
Model	*****
Firmware(Boot)	* **
Firmware(Application)	* **

#### Note

See Panasonic Network Camera support website at <http://panasonic.co.jp/pcc/products/en/netwcam/> for details about status information.

### 3.1.2 Confirming Session Status

Displays client information connecting to camera.

 
Clicking [Session Status] displays the following page.

Number of Sessions			
Show number of motion and audio sessions.			
Div	Max Sessions	Now Sessions	
Motion	30	**	
Audio	10	**	
List of Sessions			
Display max. 40 tables connecting now.			
Connect time	Access time	Addr/Port	User

### 3.1.3 Displaying Alarm Logs

Displays up to 50 Alarm Logs in order of time. Old logs will be overwritten by new one.

1. Click [Alarm Log] on Maintenance page.
2. Alarm Logs are displayed.



#### Note

If the camera is restarted, all alarm logs are deleted.

Item	Description
New Alarm Logs	<ul style="list-style-type: none"> <li>• Displays the number of new alarm logs.</li> </ul>
Date	<ul style="list-style-type: none"> <li>• Displays the date and time when the Alarm 1, 2, or Motion Detect were responded.</li> </ul>
Sensor Type	<ul style="list-style-type: none"> <li>• Displays the Trigger Setting (Alarm 1, 2, or Motion Detection) on the Trigger page.</li> </ul>
Signal Type	<ul style="list-style-type: none"> <li>• Displays the Alarm enable condition on the Trigger page when selected Alarm 1 or 2.</li> </ul>


### 3.1.4 Restarting the Camera

The Restart page can restart the camera. The camera restarts by disconnecting the power cord from the outlet and reconnecting it again.

#### Note

When the camera restarts, the buffered images and alarm logs will be deleted.

1. Click [Restart] on the Maintenance page.
2. Click [Restart].

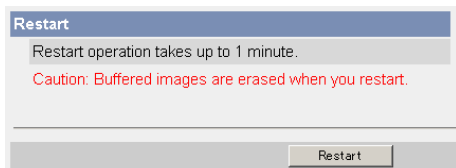

- Restarting takes about 1 minute. The Top page is displayed when finished.




### 3.1.5 Updating the Camera Firmware


The Update Firmware page allows you to update the camera firmware. If the new firmware is available, install it into the camera.

#### Note


- Do not turn off the power during firmware update.
  - All buffered images and alarm logs on the internal memory will be deleted after the firmware update.
  - The firmware version is displayed on the Top page and the Status page.
1. Download the new firmware on the Panasonic Network Camera support website at <http://panasonic.co.jp/pcc/products/en/netwkcaml/>, and save it on your PC.
  2. Click [Update Firmware] on the Maintenance page.
  3. Click [Update Firmware].

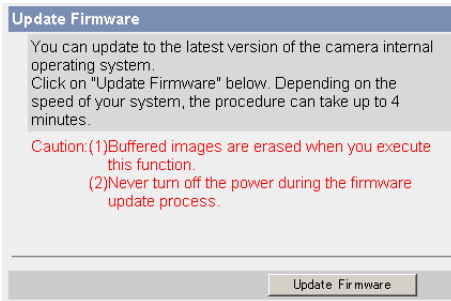

- The camera restarts.

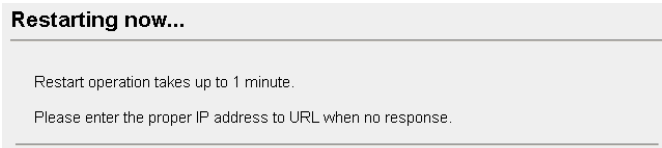

- The Update page is displayed in about 1 minute.

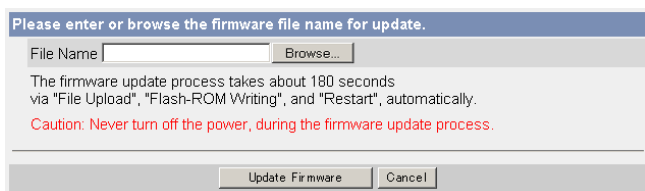

4. Click [Browse...].
  - A dialog box is displayed to select the firmware.
5. Select the firmware (including directory information) and click [Open].
  - The firmware file name is displayed.
6. Confirm the firmware file name, and click [Update Firmware].
  - Clicking [Cancel] takes you back to the Top page without firmware update.
  - The next message is displayed during update.

#### Updating firmware.

Please wait about 180 seconds.

Caution: Never turn off the power, during the firmware update process.

- The camera restarts automatically after update.


#### Restarting now...

Restart operation takes up to 1 minute.

Please enter the proper IP address to URL when no response.

- The Top page is displayed in about 1 minute.

## 7. Confirm that the version number on the Top page is updated.

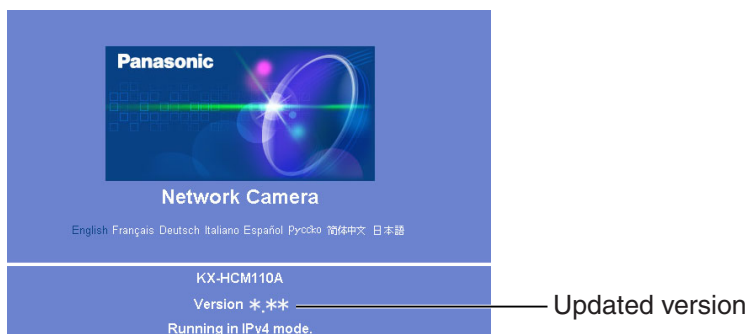

- If the version number is updated, the firmware update is complete.

### 3.1.6 Creating Configuration File

A configuration file can be saved on your PC. You can load the camera settings from the configuration file on the Load Settings page (see page 141).


**Note**

The saved image has privacy information. Prevent private information leaks.

1. Click [Save Settings] on the Maintenance page.
2. Click [Save].



3. Click [Save] on the File Download dialog box.
4. Specify the location, and click [Save] on the Save As dialog box.

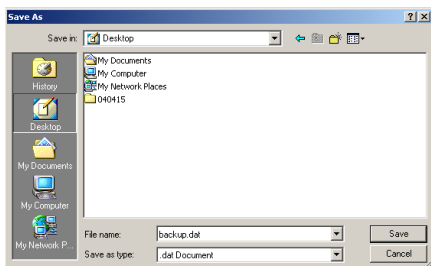

- The configuration file is saved in the location.

**Note**

- The file extension (.dat) cannot be changed. If you change it, the settings cannot be loaded.
- If you try to update the camera, create a configuration file after updating the firmware. If there is a firmware version difference between the camera that you create a configuration file from and the camera that you try to load settings to, the settings may not be loaded to the camera.


### 3.1.7 Loading Settings from a Configuration File

The settings can be loaded from a configuration file. If you reset the camera to factory default, the camera can load its settings from the configuration file.


#### Note

- The configuration file has network settings. When the settings are loaded, the network settings are also loaded as they were saved.
- If you try to update the camera, create a configuration file after updating the firmware. If there is a firmware version difference between the camera that you create a configuration file from and the camera that you try to load settings to, the settings may not be loaded to the camera.

1. Click [Load Settings] on the Maintenance page.
2. Click [Browse...].

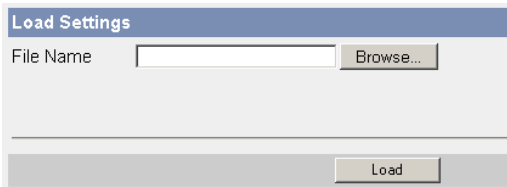

3. Select the configuration file on the Choose file dialog box, and click [Open].

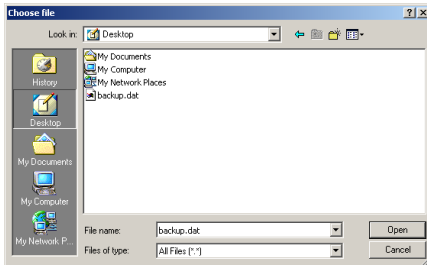


- The file name is displayed in the data field.
4. Confirm the file name, and click [Load].
  5. Click [Restart].
    - The camera restarts, and the Top page is displayed.

### 3.1.8 Resetting the Camera to Factory Default

All camera settings are reset to factory default directly after the Execute button is clicked.

1. Click [Reset to Factory Default] on the Maintenance page.
2. Click [Execute].

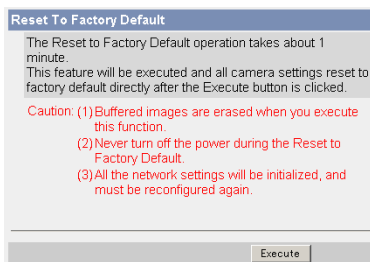

- The indicator blinks orange, and then turns off for 10 seconds.
- All camera settings (user name, password, IP address, subnet mask etc.) are reset to factory default.
- If the camera is reset to factory default, the network connection mode changes to [Automatic Setup]. Reconfigure the camera seeing the Getting Started.

#### **Note**

- The internal clock will not be reset, but the time format will return to AM/PM mode (see page 70). Set it again.
- See page 148—page 157 for default settings.
- Pressing the FACTORY DEFAULT RESET button resets the camera to the factory default (see page 147).
- All buffered images on the internal memory are deleted when resetting the camera to factory default.
- The reset operation takes about 1 minute.
- Do not turn off the camera during the reset operation.
- If the camera is restarted, all alarm logs are deleted.

## 3.2 Support page




---


### Support

- |     |                            |  |
|-----|----------------------------|--|
| (1) | <b>Help</b>                | Displays the Help page (see page 143).               |
| (2) | <b>Product Information</b> | Displays product information website (see page 143). |
| (3) | <b>Support Information</b> | Displays support information website (see page 144). |
- 

### 3.2.1 Seeing Help page

The Help page displays explanations for each feature about the following 1. to 6. items.

Clicking [Help] on the Support page displays the next page.

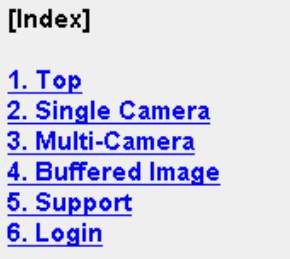

### 3.2.2 Seeing Product Information

You can see product information on the Panasonic Network Camera support website.

Clicking [Product Information] on the Support page displays the URL, click it.

#### **Note**

If the camera is not connected to the Internet, the website cannot be displayed.

### 3.2.3 Seeing Support Information

You can see support information on the Panasonic Network Camera support website.

Clicking [Support Information] on the Support page displays the URL, click it.

**Note**

If the camera is not connected to the Internet, the website cannot be displayed.



### 3.3 External I/O

If you connect the external devices such as sensors to the External I/O and image buffer/transfer by alarm signal is set, the camera image is transferred by the alarm detection.


#### Explanation of the External I/O

Pin	Features
G	GND pin
1	External Sensor Input 1 <ul style="list-style-type: none"> <li>Use it by opening or GND short-circuit.</li> </ul>
G	GND pin
2	External Sensor Input 2 <ul style="list-style-type: none"> <li>Use it by opening or GND short-circuit.</li> </ul>
3	External Device Control Output <ul style="list-style-type: none"> <li>You can control it on the External Output page (see page 132).</li> <li>It is an open collector circuit, and the maximum drawing-in current is the same as pin 4. Do not exceed the voltage of DC power output terminal (pin 4).</li> </ul>
4	DC Power Output Terminal <ul style="list-style-type: none"> <li>10.5—13.5 V DC</li> <li>Maximum of 100 mA load drive is possible.</li> </ul>

#### Note

The External I/O (Input/Output) is independent. Output terminal is controlled only by External Output Control page on page 132.

### Circuit Diagram Example

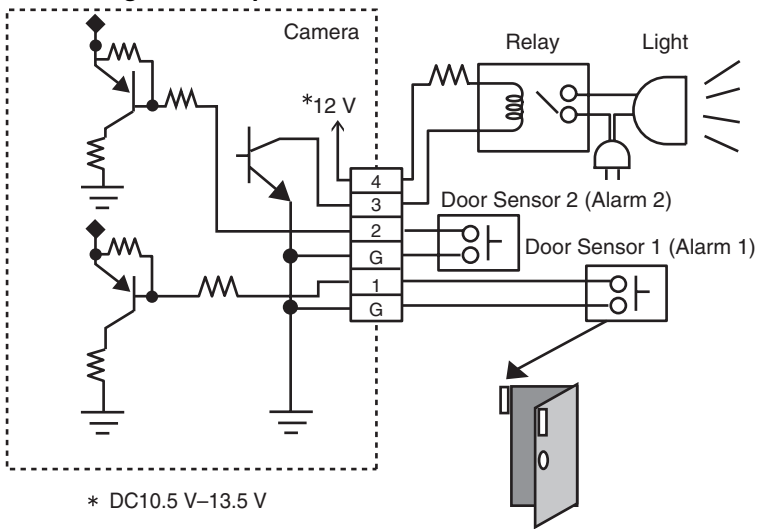


### **CAUTION**

- The external I/O is not capable of connecting directly to devices that require large amounts of current. In some case, a custom interface circuit (customer-provided) may have to be used. Serious damage to the camera may result if a device is connected to the external I/O that exceeds its electrical capability (see page 145).
- The low voltage/current circuits and high voltage/current circuits are in the camera circuit. The qualified electrician should do the wiring not by yourself. Incorrect wiring could damage the camera. You could receive the fatal electric shock.

## 3.4 FACTORY DEFAULT RESET Button

The camera has a FACTORY DEFAULT RESET button on the side.

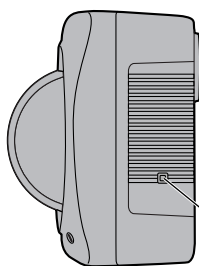

FACTORY DEFAULT RESET Button  
(Press the button with a pointed object.)

Pressing the FACTORY DEFAULT RESET button resets the camera to factory default. If you lose your user name and password, use this button to reset the camera.

- Press the FACTORY DEFAULT RESET button for 1 second when the camera is on.
- The indicator blinks orange, and then turns off for 5 seconds.
- Do not turn off the camera until the indicator lights green.

### **Note**

- The internal clock will not be reset, but the time format will return to AM/PM mode (see page 70). Set it again.
- See page 148—page 157 for default settings.
- All buffered images on the internal memory are deleted when resetting the camera to factory default.
- The reset operation takes about 1 minute.
- If the camera is restarted, all alarm logs are deleted.

## 3.5 Default Setting List

### Basic

	Items	Default	Required	Note
Network (IPv4)	Connection Mode	Automatic Setup	-	Automatic Setup/Static/DHCP
	Allow Access from the Internet (Automatic Setup only)	No	-	-
	Network Configuration from Setup Program (Static/DHCP only)	Enable	-	-
	Port No. (Static/DHCP only)	80	-	20, 21, 25 and 110 is not available.*2
	IP address (Static only)	192.168.0.253	When setting Static	*1
	Subnet Mask (Static only)	255.255.255.0	When setting Static	*1
	Host Name (DHCP only)	[Blank]	When setting DHCP (Not always required)	0—63 characters *4
	Default Gateway (Static/DHCP only)	[Blank]	When using Gateway	*1
	DNS Server 1 DNS Server 2 (Static/DHCP only)	[Blank]	When using DNS	*1
	Max. Bandwidth Usage (Mbps)	Unlimited	-	0.1, 0.2, 0.3, 0.5, 1 or Unlimited
	Connection Type	Auto Negotiation	-	-

	<b>Items</b>	<b>Default</b>	<b>Required</b>	<b>Note</b>
Network (IPv6)	Connection Mode	Automatic Setup	-	Automatic Setup/Static
	Allow Access from the Internet (Automatic Setup only)	No	-	-
	Port No. (Static only)	80	-	20, 21, 25 and 110 is not available.*2
	IP address (Static only)	[Blank]	When setting Static	*1
	Default Gateway (Static only)	[Blank]	When using Gateway	*1
	DNS Server 1 DNS Server 2	[Blank]	When using DNS	*1
	Max. Bandwidth Usage (Mbps)	Unlimited	-	0.1, 0.2, 0.3, 0.5, 1 or Unlimited
	Connection Type	Auto Negotiation	-	-
IPsec	Use	No check	-	-
	Encoding strength	Standard (AES, 3DES, DES, NULL)	-	Standard/High
	Transport	[Blank]	-	-
	Tunnel	[Blank]	-	-
UPnP	Auto Port Forwarding	Disable	-	-
	Display Shortcut Icon in My Network Places	Enable	-	-

Items		Default	Required	Note
Dynamic DNS	Viewnetcam.com	No check	When setting viewnetcam.com	Viewnetcam.com/ User-specified DynamicDNS/ Disable
	User-specified DynamicDNS	[Blank]	-	Viewnetcam.com/ User-specified DynamicDNS/ Disable
		10 min	-	At the time of starting/10, 30(min), 1, 3, 6, 12, 24(h)
Date and Time	Time Setting	AM/PM	-	-
	Automatic Time Adjustment	No check	When using NTP	-
	Time Zone	GMT -05:00	-	-
	Adjust Clock for Daylight Saving Time	No check	-	-
	Start Day	Apr, First Sunday, 2 AM	-	-
	End Day	Oct, Last Sunday, 2 AM	-	-

	<b>Items</b>	<b>Default</b>	<b>Required</b>	<b>Note</b>
Camera	Camera Name	Network Camera	Required	1—15 characters *6
	White Balance	Auto	-	Auto/Fixed Indoor/Fixed Fluorescent (White)/Fixed Fluorescent (Daylight)/Fixed Outdoor/Hold
	AC Power Source Frequency	60Hz	-	50Hz/60Hz
	Pan Range (Minimum)	-60 degrees	-	-60—+60 degrees
	(Home Position)	0 degrees	-	-60—+60 degrees
	(Maximum)	+60 degrees	-	-60—+60 degrees
	Tilt Range (Minimum)	-45 degrees	-	-45—+20 degrees
	(Home Position)	0 degrees	-	-45—+20 degrees
	(Maximum)	+20 degrees	-	-45—+20 degrees
	Return to Specified Position (Time)	Do not move	-	Do not move, 10, 30 (min), 1 h
	(Specified Position)	Home Position	-	Home Position/ Preset No. 1—8/ Alarm No. 1, 2
	Color Night View	Disable	-	-

Items		Default	Required	Note
Audio	Output	Enable	-	-
	Volume	Standard	-	Minimum/ Standard/ Maximum
	PC Audio Input Timeout	1 min	-	1, 2, 3, 5, 10, 20, 30, 60 (min)
	Input	Enable	-	-
	Camera Microphone Sensitivity	Standard	-	Minimum/ Standard/ Maximum
	Mute during Pan/Tilt	Enable	-	-

## Account

Items		Default	Required	Note
Security: Administrator	General Authentication	Do not permit access from guest users	-	-
	User Name	[Blank]	When setting administrator	6—15 characters *3
	Password	[Blank]	When setting administrator	6—15 characters *3
	Retype Password	[Blank]	When setting administrator	6—15 characters *3



Items		Default	Required	Note
General User	User ID List	[Blank]	-	-
	User Name	[Blank]	When setting general user	6—15 characters *3
	Password	[Blank]	When setting general user	6—15 characters *3
	Retype Password	[Blank]	When setting general user	6—15 characters *3
	Limit time of Continuous Motion JPEG	Not permitted	-	Not permitted, Unlimited, 10, 30 (s), 1, 5, 10, 30, 60 (min)
	Refresh Interval	3 s	-	3, 5, 10, 30, 60 (s)
	Access Level	No checks	-	-

## Buffer/Transfer

Items		Default	Required	Note
Trigger	Status	Off	-	-
	Trigger	Timer	-	-
	Active Time of Trigger	Always	-	-
	Image Setting (Image Resolution)	320 x 240	-	160 x 120, 320 x 240, 640 x 480
	Image Quality	Standard	-	Favor Clarity, Standard, Favor Motion, Mobile phone
	Image Buffer Frequency	Every 1 s, buffer 1 image.	-	1 image per hour—30 images per second
	Transfer Method	No Transfer, No Memory Overwrite	-	-
	Notify	-	-	-

Items		Default	Required	Note
Motion Detection	Threshold to start recording	Third blocks from the left	-	-
	Sensitivity	Center	-	-
Alarm Log	A setup of operation	Disable	When selecting Alarm1, Alarm2 or Motion Detection in Trigger.	Disable/ Enable(When there is no new-arrival alarm log:Disable)/ Enable(When there is no new-arrival alarm log:Enable)
	Active Time	PM 12h 0min		AM/PM, 1–12 (h), 0/10/20/30/40/50 (min)
	Time	Checked		-
	Notice setup of an alarm log	[Blank]		-
	Port No. (SMTP)	25		-
	Port No. (POP)	110		-
	Subject	Alarm Log		-

## Advanced

	Items	Default	Required	Note
Image Display	Single Camera Image Resolution	320 x 240	-	320 x 240 or 640 x 480
	Single Camera Image Quality	Standard	-	Favor Clarity, Standard or Favor Motion
	Single Camera Refresh Interval	Motion	-	3, 5, 10, 30, 60 (s) or Motion
	Multi-Camera Image Resolution	320 x 240	-	160 x 120 or 320 x 240
	Multi-Camera Image Quality	Standard	-	Favor Clarity, Standard or Favor Motion
	Multi-Camera Refresh Interval	Motion	When reducing traffic	3, 5, 10, 30, 60 (s) or Motion
	Time stamp setting	Disable	-	Disable/Enable
	Language	English	-	English/ Japanese/ French/German/ Italian/Spanish/ Simplified Chinese/Russian
	Banner Display (Administrator)	Checked	-	-
	(General User)	Checked	-	-

Items		Default	Required	Note
Multi-Camera	Multi-Camera	[Blank]	-	-
	Display	Checked	When setting Multi-Camera	-
	IP Address or Host Name	[Blank]	When setting Multi-Camera	IP address*1 Host name*5 is 1—255 characters.
	Port No.	[Blank]	When setting Multi-Camera	20, 21, 25 and 110 are not available.*2
	Camera Name	[Blank]	When setting Multi-Camera	1—15 characters *7
Operation Time	Operation Time	Always	-	-
External Output	External Device Control Output	Open	-	Open/Short to GND
	Button name modification	Open/Short	-	-
Indicator Control	Indicator Control	Turn indicator on when camera is on	-	-

## Preset Buttons

Items		Default	Required	Note
Preset Buttons	Preset 1	UpperLeft	-	-
	Preset 2	UpperRight	-	-
	Preset 3	LowerLeft	-	-
	Preset 4	LowerRight	-	-

\*1 In IPv4, set 4 digits (0—255) and 3 periods such as "192.168.0.253". But "0.0.0.0" and "255.255.255.255" are not available.

In IPv6, set 8 hexadecimal digits divided with ":". Consecutive 0s can be abbreviated as "::".

- \*2 Set the number of 1—65535.
- \*3 Enter ASCII characters (see page 168). But [Space], [", ['], [&], [<], [>] and [:] are not available.
- \*4 Enter ASCII characters for the host name (see page 168). But [Space], [", ['], [&], [<], and [>] are not available.
- \*5 Enter ASCII characters for the host name (see page 168). But [Space], [", ['], [#], [&], [%], [=], [+], [?], [<], and [>] are not available.
- \*6 Enter ASCII characters (see page 168) or characters in each language (1—15 characters for a 1-byte character and 1—7 characters for a 2-byte character). But [Space], [", ['], [&], [<], and [>] are not available.
- \*7 Enter ASCII characters (see page 168) or characters in each language (1—15 characters for a 1-byte character and 1—7 characters for a 2-byte character). But [Space], [", ['], [#], [&], [%], [=], [+], [?], [<], and [>] are not available.

## 3.6 Cleaning

After the camera is turned off by disconnecting the AC plug, clean the camera.

### 3.6.1 Cleaning the Main Unit

If the lens cover has the dust, image quality may decrease. After taking away the dust on it, wipe it with a dry cloth.



#### **Note**

- Do not use alcohol, polishing powder, cleanser, benzine, thinner, wax, petroleum products or hot water to wipe the camera. Also avoid glass cleaner, pesticide or hair spray. They may cause change in the shape or color.
- Do not directly touch the lens cover. Your fingerprints can cause the image to be out of focus.

## 3.7 Setting an IP Address on Your PC

Your PC's IP address can be assigned by the following procedures.

1. Display the TCP/IP Properties window.
  - The steps are different depending on your OS. The steps are shown below.

OS	Steps
Windows XP	[Start] (→[Settings])→[Control Panel]→[Network and Internet Connections]→[Network Connections]→[Local Area Connection] in use→[Properties]→Select Internet Protocol [TCP/IP]→[Properties]→[Use the following IP address]
Windows 2000	[Start]→[Settings]→[Control Panel]→[Network and Dial-up Connections]→[Local Area Connection] in use→[Properties]→Select Internet Protocol [TCP/IP]→[Properties]→[Use the following IP address]
Windows Me, Windows 98SE	[Start]→[Settings]→[Control Panel]→[Network]→Select [TCP/IP] with adaptor in use→[Properties]→[IP Address]→[Specify an IP address]

- When using Windows XP and Windows 2000, log in as an administrator to access the TCP/IP Properties window.
2. Enter IP address and subnet mask.
  3. Click [OK].
    - In Windows Me or Windows 98SE, the PC needs to be restarted to enable the settings.

### Local IP Address

Local IP address is the network ID that is not used on the Internet. They are classified into Class A, Class B and Class C, as shown below. Set the IP address in the range of the number specified in the class corresponding to your local network scale.

Class	Subnet Mask	Local IP Address	
Class A	255. 0. 0. 0	10. 0. 0. 1	— 10. 255. 255. 254
Class B	255. 255. 0. 0	172. 16. 0. 1	— 172. 31. 255. 254
Class C	255. 255. 255. 0	192. 168. 0. 1	— 192. 168. 0. 254


## 3.8 Using Setup Program

The Setup Program can be used for the following purposes.

- Finding the IP address and port number of the camera connected to your network.
- Setting up the camera automatically.
- Setting up the camera manually to a Static or a DHCP setting.
- Disabling IPsec.
- Displaying the Setup page.

### Finding the camera

1. Insert the Setup CD-ROM into the CD-ROM drive of your PC.
  - If the Panasonic Network Camera Setup window does not appear, click "setup.exe" on the Setup CD-ROM.
2. Click [Camera Setup].

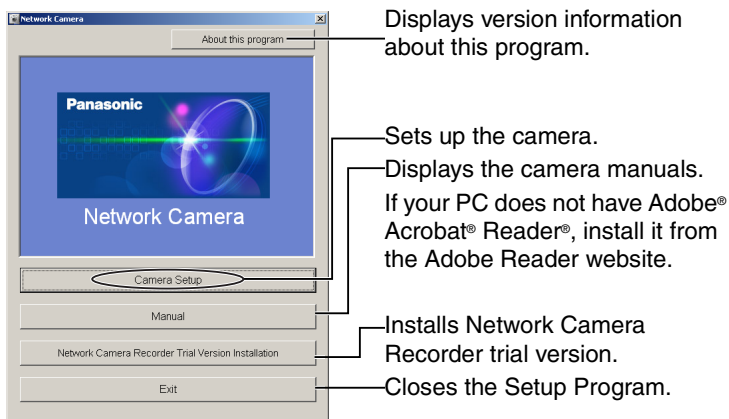




- When the following dialog box is displayed, click [Unblock].




- You can find the camera IP address and port number by looking up the MAC address of your camera.

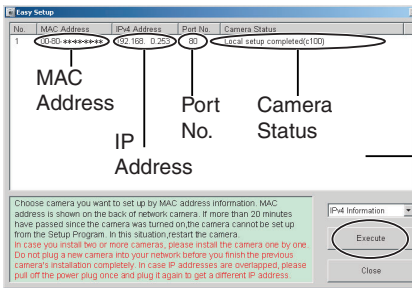

Camera List window  
Displays IPv4 or IPv6 information.

### IPv6 Information

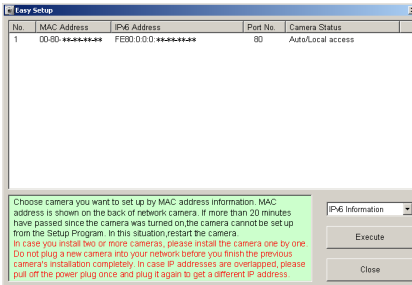


### Note

- If you try to find multiple cameras, each MAC address beside the Ethernet (LAN) port verifies which camera you are setting up.
- See the Getting Started for the setup from the MAC address.

## Automatic Setup (Local or Internet Access) or Manual Setup

1. Click [Execute] on the Camera List window shown on page 161.
2. Click each button to execute the program.

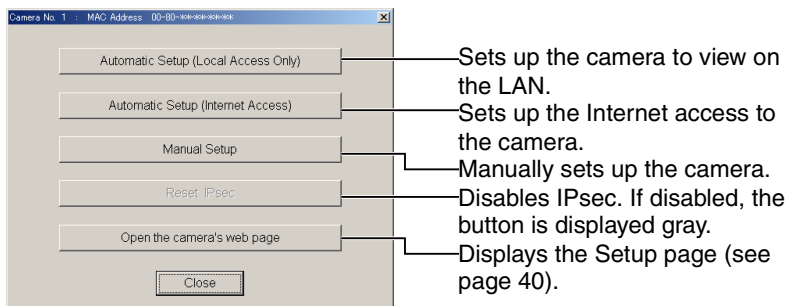

### **Note**

See the Getting Started for the local and Internet access setup.

## Manual Setup window

Set up each parameter seeing page 45—page 47.

- If more than 20 minutes have passed since the camera was turned on, the camera cannot be set up from the Setup Program. If the camera cannot be set up, restart the camera.

The screenshot shows the 'Manual Setup' window with the following fields and values:

- Camera Name: NetworkCamera
- Port Number: 80
- Static (selected):
  - IP Address: 192 . 168 . 0 . 253
  - Subnet Mask: 255 . 255 . 255 . 0
- DHCP (unselected):
  - Host Name: [empty]
  - Default Gateway: \* . \* . \* . \*
  - DNS Server1: \* . \* . \* . \*
  - DNS Server2: \* . \* . \* . \*
  - Band Width: Unlimited

A green box at the bottom contains the following text:

Set up Port forwarding(\*1) on the router to access the camera from the Internet.  
 (\*1) Port forwarding is sometimes called "Address translation", "Static IP Masquerade", "Virtual server" or "Port mapping".

Buttons: Save, Close

- If "Camera setup completed" is displayed, click [Close] to finish the Manual Setup.

### 3. Close all Setup windows.

## 3.9 Setting Your PC

### 3.9.1 Setting the Proxy Server Settings on Web Browser

If the proxy server is not used, the settings are not required. If you are using the proxy server, the following settings are required.


- To communicate with a camera installed inside a LAN, changing the web browser settings is recommended.
- A firewall of a proxy server in a corporate environment may prevent access to the camera. Consult your network administrator.

#### Note


- A proxy server is used to protect your network connected to the Internet.
- If the camera is accessed via a proxy server, problems may occur. Consult your network administrator before installing the camera.
- If the camera is accessed via a proxy server, the refresh interval may be slow.

### How to Set the Proxy Server Settings


1. Start up Internet Explorer. (The example is Internet Explorer 6.0.)
2. Click [Tools]→[Internet Options...].

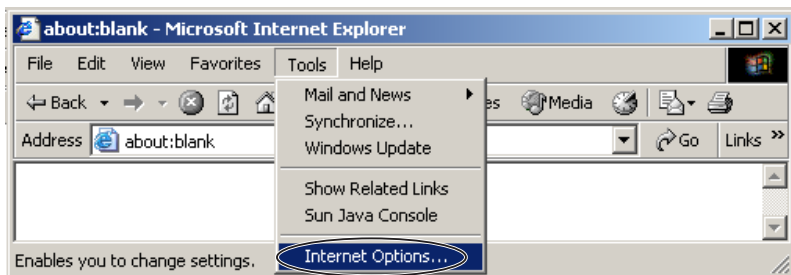

3. Click the [Connections] tab, and click [LAN Settings].

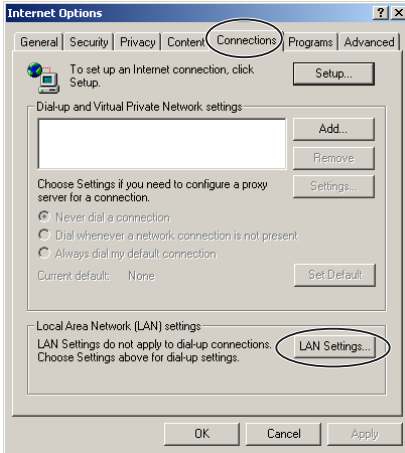


4. See if the Use a proxy server check box is checked or not. If checked, click [Advanced...].

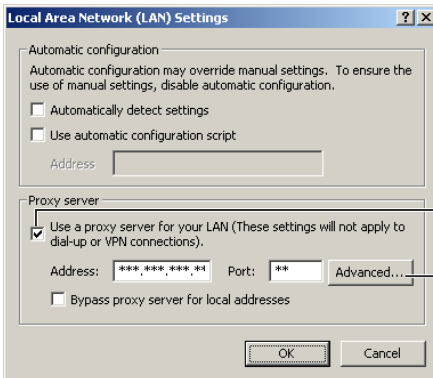

See if the check box is checked or not. If checked, click [Advanced...].

- If not checked, click [Cancel]. Proxy settings are not required.

5. Enter the camera IP address into the Do not use proxy server for addresses beginning with data field. (Example: 192.168.0.253)

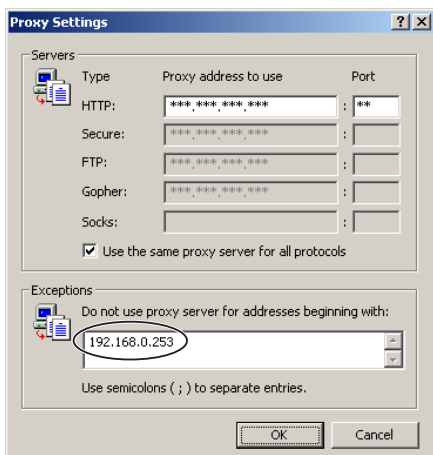

6. Click [OK].

**Note**

When accessing the camera via a proxy server, the Talk Button is displayed gray. Talk feature cannot be used.

## 3.9.2 Setting UPnP™ to Display Camera Shortcut in My Network Places

To display the camera shortcut in the My Network Places folder, Windows component should be added. Enable UPnP™ (Universal Plug and Play) following the steps below.

OS	Steps
Windows XP	[Start] (→[Settings])→[Control Panel]→[Programs]→[Windows Components]→Select [Network Service]→[Properties]→Check [UPnP]→[OK] →[Next]→Complete
Windows XP Service Pack 2	[Start] (→[Settings])→[Control Panel]→[Programs]→[Windows Components]→Select [Networking Service]→[Details]→Check [Internet Gateway Device Discovery and Control Client]→Check [UPnP User Interface]→[OK]→Complete
Windows Me	[Start]→[Settings]→[Control Panel]→[Application]→[Windows File] tab→Select [Communication]→[Detail]→Check [UPnP]→[OK]→[OK]→[Restart]→Complete

### Note

This feature is available only when Windows XP or Windows Me is being used.

## 3.9.3 Setting the Internet Temporary File Setting on Web Browser

The old image may be displayed. In this case, set the web browser following the steps below.

[Tools]→[Internet Options]→[General] tab→[Settings] in the Temporary Internet files→Check [Every visit to the page] in the Check for newer versions of stored pages→[OK]→[OK]→Complete
--

### 3.10 ASCII Character Table

ASCII Character Table					
(space)	0	@	P	`	p
!	1	A	Q	a	q
"	2	B	R	b	r
#	3	C	S	c	s
\$	4	D	T	d	t
%	5	E	U	e	u
&	6	F	V	f	v
'	7	G	W	g	w
(	8	H	X	h	x
)	9	I	Y	i	y
*	:	J	Z	j	z
+	;	K	[	k	{
,	<	L	\	l	
-	=	M	]	m	}
.	>	N	^	n	~
/	?	O	_	o	



### 3.11 File Size and Number of Buffered Images

The following table shows the relationship between the file size of the image and the maximum number of buffered images.

#### **Note**

The following file sizes were shown at the largest value.

<b>Resolution</b>	<b>Items</b>	<b>Capture</b>	<b>Favor Clarity</b>	<b>Standard</b>	<b>Favor Motion</b>	<b>Mobile phone*</b>
640 x 480 (pixels)	File Size	About 60 KB	About 50 KB	About 33 KB	About 20 KB	-
	Buffered Images	-	About 40	About 60	About 100	-
320 x 240 (pixels)	File Size	About 30 KB	About 25 KB	About 16 KB	About 8 KB	About 8 KB
	Buffered Images	-	About 80	About 125	About 250	About 250
160 x 120 (pixels)	File Size	About 10 KB	About 7 KB	About 5 KB	About 3 KB	About 3 KB
	Buffered Images	-	About 290	About 400	About 675	About 675

\* The values shown are the file sizes when transferring to a cell phone.

## 3.12 Specifications

### Network Camera

Items	Specifications
Zoom	10x digital zoom
Pan/Tilt Angle	Pan: -60 ° to +60 °, Tilt: -45 ° to +20 °
Number of Pixels	1/4-inch CMOS Sensor 320,000 pixels
Illuminance	5—10,000 lx (1—10,000 lx in color night view mode)
White Balance	Auto/Manual/Hold
Focus	Fixed 0.5 m (20 inches)—Infinity
Caliber Ratio (F No.)	F2.8
Horizontal Viewing Angle	43 °
Exposure	Auto

### Other Specifications

Items	Specifications
Video Compression	JPEG (3 Levels)
Video Resolution	640 x 480, 320 x 240 (default), 160 x 120
Buffered Image <sup>1</sup>	About 125 frames (320 x 240) with time display
Audio Communication	2-way Half Duplex
Audio Bandwidth	300 Hz—3.4 KHz
Audio Play Method	Play with ActiveX
Input Encoding Method	Encoding with ActiveX
Audio Input	Built-in Microphone or External Microphone Input Terminal
Audio Output <sup>2</sup>	Audio Line Output Terminal for External Speaker
Frame rate <sup>3</sup>	Max. 12 frames/second (640 x 480) Max. 30 frames/second (320 x 240 or 160 x 120)

## Other Specifications

Items	Specifications
Supported Protocols	IPv4/IPv6 Dual-Stack <ul style="list-style-type: none"> <li>• IPv4: TCP, UDP, IP, HTTP, FTP, SMTP, DHCP, DNS, ARP, ICMP, POP3, NTP, IPsec, UPnP™</li> <li>• IPv6: TCP, UDP, IP, HTTP, FTP, SMTP, DNS, ICMPv6, POP3, NDP, NTP, IPsec</li> </ul>
IPsec Feature	ESP Encryption, ESP Authentication Transport mode/Tunnel mode IKE (Internet Key Exchange)
IKE (Internet Key Exchange)	Pre-Shared Key
Cipher Algorithm	DES-CBC, 3DES-CBC, AES-CBC
Message-Digest Algorithm	HMAC-MD5, HMAC-SHA-1
Message Transfer Condition	Alarm, Timer or Motion Detection
Image Transfer Method	SMTP, FTP
Interface	10Base-T/100Base-TX Ethernet RJ-45 connector x 1
Indicator Display	Power/Network Communication/Camera operation/Ethernet link
External Microphone Input	ø 3.5 mm Mini Jack
Audio Output	ø 3.5 mm Stereo Mini Jack (But output is mono.)
External I/O	External Sensor Input x 2 External Sensor Output x 1
Dimension (HWD)	About 100 mm (3.94 inches) x About 100 mm (3.94 inches) x About 73.5 mm (2.89 inches)
Weight	275 g (0.61 lb.) (Only the unit)
Power Supply	AC adaptor: Input 120 V AC, 60 Hz Output 12 V DC, 750 mA Consumption: About 2.5 W (5.5 W during pan/tilt scan)

## Other Specifications

Items	Specifications
Temperature	Operation: 0 °C (+32 °F) to +40 °C (+104 °F) Storage: 0 °C (+32 °F) to +50 °C (+122 °F)
Humidity	Operation: 20 %—80 % (No Condensation) Storage: 20 %—90 % (No Condensation)

- <sup>1</sup> The maximum number of frames changes depending on the image quality and what object you buffer.
- <sup>2</sup> Connect it to an amplifier or an external speaker with a built-in amplifier.
- <sup>3</sup> Frame rate may slow down depending on the network environment, the PC performance, the image quality, enabling IPsec, or what object you view.

# Index

## A

Abbreviations 4  
ActiveX Controls 18  
Administrator/General Users/Guest Users 82  
Alarm Image Buffer/Transfer 96  
Alarm Log 123, 136  
Alarm Position 26  
ASCII Character Table 168  
Audio page 78

## B

Buffered Image page 35

## C

Camera Access 13  
Camera page 73  
Capture Image Button 22  
Cell Phone 38  
Cleaning 158  
Click to Center 21  
Clicking the right mouse button 25  
CPU 5, 6

## D

Date and Time page 70  
Default Setting List 148  
Digital zoom feature 2  
DynamicDNS 65, 68

## E

External I/O 145  
External Output page 132

## F

FACTORY DEFAULT RESET Button 147  
For IPv4 Connection 5  
For IPv6 Connection 6

## G

General User page 84

## H

Help page 143  
Home Position 26  
How to Use This Documentation 4

## I

Image Display page 125  
Indicator Control page 133  
IPsec 52  
IPv6 Domain Name Service 15

## L

Listen 30  
Load Settings page 141  
Login 83

## M

Maintenance page 134  
Motion Detection 107, 120  
Multi-Camera page 33  
Multi-Camera Setup page 128

## N

Network (IPv4) page 43  
Network (IPv6) page 48

## O

Operating System 5, 6  
Operation Bar 23  
Operation Time page 130

## P

Pan/Tilt Range 24, 77  
Preset Button 26  
Product Information page 143  
Protocol 5, 6

**R**

- Reset to Factory Default page 142
- Restart page 136
- Rotating the mouse wheel 25

**S**

- Save Settings page 140
- Security: Administrator page 80
- Session Status 135
- Setup page 40
- Setup Program 160
- Single Camera page 17
- Specifications 170
- Status page 135
- Support Information page 144
- Support page 143
- System Requirements for your PC 5

**T**

- Talk 30
- Timer Image Buffer/Transfer 87
- Top page 14
- Trademarks 4
- Transport mode 55, 118
- Tunnel mode 58, 119

**U**

- Update Firmware page 137
- UPnP page 62

**W**

- Web Browser 5, 6

### For product service

- Panasonic Servicenters are listed in the servicenter directory.
- Call 1-800-272-7033 for the location of an authorized servicenter.
- This Network Camera is designed for use in the United States of America. Sale or use of this product in other countries/areas may violate local laws.

### When you ship the product

- Carefully pack your unit, preferably in the original carton.
- Attach a letter, detailing the symptom, to the outside of the carton.

Symptom \_\_\_\_\_

- Send the unit to an authorized servicenter, prepaid and adequately insured.
- Do not send your unit to the Panasonic Consumer Electronics Company listed below or to executive or regional sales offices. These locations do not repair consumer products.

The information in this document is subject to change without notice.

#### **Panasonic Consumer Electronics Company, Division of Panasonic Corporation of North America**

One Panasonic Way, Secaucus, New Jersey 07094

#### **Panasonic Puerto Rico, Inc.**

San Gabriel Industrial Park, Ave. 65 de Infantería, Km. 9.5,  
Carolina, Puerto Rico 00985

#### **Copyright:**

This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© 2005 Panasonic Communications Co., Ltd. All Rights Reserved.