

This document is a text description of the control panel layout for the product listed below.

"PDF" files of the complete operating instructions are available from the Customer Support section of www.Panasonic.com.

If you need the operating instructions in an alternate format, please request it from Customer Support.

Model Number KX-TC1723B

900MHz Digital Cordless Phone Pulse- or -tone dialing capability Caller ID Compatible

Handset

With the handset facing you, the antenna is at the top right. Immediately below the earpiece is the display. Just at the back of the display is the speakerphone speaker. Below the display are small buttons in a row: on the left is Line 1 button; on the center Line 2 button; on the right Conference button. In the center below the display is the oval Navigator key, which can be pressed left, right, up, and down. Pressing it to the left sometimes means "Channel Selection". Pressing it to the right sometimes means "Edit".

To the left of the Navigator key is the Talk Button. Below it is the Speakerphone button. To the right of the Navigator key is the Off button. Below it is the Hold or Clear button. Below these buttons is the standard touchtone keypad. The "star" key is also the Tone button. Below the keypad on the left is the Flash, Call Wait or Voice Mail button; on the right is the Redial, Pause or Function button. Between these buttons toward the lower part is the microphone. At the very bottom of the handset are the charge contacts. The handset jack is on the left side of the handset, with a rubber cover.

Base unit

With the base unit facing you, the antenna should be straight up on the right side, toward the back of the unit.

To the right below the antenna, are three indicators: on the left In Use, Charge or Hold indicator; on the center Caller

ID indicator; on the right Voice Mail indicator.

Moving toward the lower right of the unit is the Handset Locator button.

Moving toward the left of the unit is a cradle for charging the handset facing up or down.