

This document is a text description of the control panel layout for the product listed below.

The complete operating instructions are available online in PDF format from the Customer Support section of [www.panasonic.com](http://www.panasonic.com).

If you need the operating instructions in an alternate format, please contact Customer Support.

## **Model Number KX-TG2258S/PW**

### **2.4 GHz Digital Cordless Answering System**

#### **HANDSET**

With the handset buttons facing you, you will find the antenna. It is the narrow, 2.8-inch long protrusion at the top right. To the top left of the handset is the ringer indicator. Just below the top of the front of the handset is a shallow oval concave. This is the earpiece. The smooth surface below the earpiece is the display.

Below the display are two soft keys. Each soft key is used to select the function shown on the display directly above it.

Below the soft keys, in the center of the handset, is a concave key called the Navigator key. The Navigator key also works as a volume key.

To the left of the Navigator key, is an oval button called the TALK button with a “nib”. The TALK button is also the Channel button.

To the right of the Navigator key, is an oval button called the OFF button.

The OFF button has a ridge in the center.

To the lower right of the Navigator Key, is the small oval MENU button. To the lower left of the Navigator Key, is a small oval called the Speakerphone button. The Speakerphone button is also the Channel button.

Below these buttons is the telephone keypad, which is laid out in the conventional telephone arrangement, with a “nib” on the 5 button. Immediately below the keypad are three thin buttons. The left-most button is the FLASH or the CALL WAIT button. The middle one is the REDIAL button. The right-most button is the MUTE button.

The small indentation just below the REDIAL button is the microphone.  
The two metal ridges at the bottom of the handset are the charge contacts.

Along the sides of the handset are two indentations that secure the belt clip. The belt clip snaps into place with the small ridges on the curved arms locking into each of the indentations on the side of the handset.

With the handset still facing you, you will find the headset jack on the left side of the handset, parallel to the TALK button. It has a rubber cover that can be opened by pulling down, and is not removable.

Finally on the reverse side of the handset, to the top right is the ringer indicator. The textured area in the center of the handset, is the handset speakerphone's speaker. Just below the speaker is the battery compartment with a notch. Its upper edge is parallel to the speakerphone button and the MENU button.

## **BASE UNIT**

With the base unit facing you, you will find antenna on the right side of the base unit. The antennas can be easily rotated so that they always point upward, whether the unit is placed on a desk or is wall-mounted. The handset cradle is located on the left side of the face of the base unit. The two metal ridges on the bottom in the cradle are the charge contacts.

To the top right of the base unit is a large rectangular textured area. This is the base unit speaker.

Just below the speakerphone is a smooth raised circular area. At the center in the area, is a display. Below the display is the MESSAGE button with an indicator in the center. The MESSAGE button is also the SLOW TALK button.

To the right side in the area are two rectangular buttons with four "nibs" on the surface. From up to down, are the STOP button and the SKIP button.

To the left side, from up to down, are the ANSWER ON button and the REPEAT button.

The ANSWER ON button has an indicator.

To the lower right of the MESSAGE or SLOW TALK button, two long buttons are in a horizontal row. The right one is the MEMO button. The MEMO button is also the 2WAY REC button. The left one is the ERASE button.

To the lower left of the MESSAGE or SLOW TALK button, two long buttons are in a horizontal row. The right one is the GREETING CHECK button. The left one is the GREETING REC button.

Below these buttons is the keypad laid out in the conventional telephone arrangement with a “nib” on the 5 button. To the right of the telephone keypad, are four oval buttons in a vertical column: the top one is the REDIAL button. Below is the FLASH button, which also works as the CALL WAIT button. The third one is the MUTE button. The fourth is the HOLD button.

Below these buttons, is the half-circle SP-PHONE button, which is slightly angled, with an indicator on the upper left.

To the left of the SP-PHONE button, are three oval buttons in a horizontal line. The left one is the LOCATOR button. The LOCATOR button is also the INTERCOM button. Two right buttons next to the LOCATOR button are VOLUME buttons. Between the LOCATOR button and VOLUME buttons is the IN USE or INTERCOM indicator.

The base unit microphone is located at the bottom of the base unit just below the SP-PHONE button.