

This document is a text description of the control panel layout for the product listed below.

"PDF" files of the complete operating instructions are available from the Customer Support section of www.Panasonic.com.

If you need the operating instructions in an alternate format, please request it from Customer Support.

Model Number KX-TG2267B/S 2.4GHz Digital Cordless Phone

Handset

With the handset facing you, the antenna is a narrow 2 inch long protrusion at the top right. Just below the top on the front of the handset is a shallow oval concave. This is the earpiece. The smooth surface below the earpiece is the display. Immediately below the display are three buttons: the left one is the LINE 1 button, the middle one is the LINE 2 button and the right one is the CONFERENCE button. In the center below these buttons is the NAVIGATOR control, which is a large rectangular control with four active areas. The active areas are the 12 o'clock, 3 o'clock, 6 o'clock and 9 o'clock positions. The 12 and 6 o'clock positions are the UP and DOWN keys respectively. These are also the volume control up and down keys. The 3 and 9 o'clock positions are the right and left arrow keys. These are also the EDIT and CH keys respectively.

To the upper left of the NAVIGATOR control, an oval button with a clipped edge is the TALK button. The oval button below the TALK button is the SPEAKERPHONE button. To the upper right of the NAVIGATOR control, an oval button with a clipped edge is the OFF button. The oval button below the OFF button is the HOLD button. The HOLD button is also the FUNCTION or CLEAR button.

Below these buttons is the telephone keypad laid out in the conventional telephone arrangement with a "nib" on the 5 button. On the lower left below the keypad is the FLASH button. The FLASH button is also the CALL WAIT or VOICE MAIL button. On the lower right of the keypad is the REDIAL button. The REDIAL button is also the PAUSE button.

The indentation between the FLASH and REDIAL button is the microphone.

The 2 metal ridges at the bottom of the handset are the charge contacts.

The headset jack is on the left side of the handset, at almost the same height as the top row of the buttons. It has a rubber cover that can be opened by pulling down, and is not removable.

Base unit

With the base unit facing you, the antenna should be straight up on the right side, towards the back of the unit. The handset's charging cradle is on the left of the base unit. This is an inch deep depression. For charging, the bottom of the handset gets put into the cradle with the handset buttons facing up. The unit will beep when the handset is properly placed in the cradle for charging. The handset can be placed in the cradle in an inverted position. Moving toward the center of the unit on the right of the cradle, three indicator lights are in a slightly raised smooth area. The left-most one is the LINE 1 indicator light. To the right of the LINE 1 indicator light is the LINE 2 indicator light. The right-most is the VOICE MAIL indicator light.

Moving down to the front on the right corner of the unit, there is a large oval button. It is the HANDSET LOCATOR button. To the left of this button, there is the CHARGE indicator light. The CHARGE indicator light is also the LOCATOR indicator light.