

This document is a text description of the control panel layout for the product listed below.

"PDF" files of the complete operating instructions are available from the Customer Support section of www.Panasonic.com.

If you need the operating instructions in an alternate format, please request it from Customer Support.

Model Number KX-TG2352W

2.4 GHz Cordless Phone

Handset

With the handset buttons facing you, the antenna is a narrow 2.8 inch long protrusion on the top right. On the top of the handset are two recessed rectangles that secure the handset in the cradle on the base unit when the unit is wall-mounted. Just below the top on the front of the handset is a shallow oval concave. This is the earpiece. The smooth surface below the earpiece is the display, its upper edge is defined by a small ridge in the center of the handset below the earpiece. Immediately below the display, in the center of the handset, is the NAVIGATOR KEY, which is a large round control with a cross-shaped concave and four active areas. The active areas are at the 12 o'clock, 3 o'clock, 6 o'clock and 9 o'clock positions. The 12 and 6 o'clock positions are the UP and DOWN keys and also control volume. The 3 and 9 o'clock positions are the RIGHT and LEFT arrow keys. The 3 o'clock position is often used as 'Save' key during programming.

To the upper left of the NAVIGATOR KEY, a small circle is the TALK button. An oval below the TALK button is the SPEAKERPHONE button. To the upper right of the NAVIGATOR KEY, a small circle is the OFF button. An oval below the OFF button is the HOLD button. The HOLD button is also the INTERCOM or CLEAR button.

Below these buttons is the keypad laid out in the conventional telephone arrangement with a "nib" on the 5 button. Just below the keypad are three ovals. On the left is the MUTE button. The MUTE button is also the FUNCTION button. In the center is the FLASH button. The FLASH button is also the CALL WAIT button. On the right is the PAUSE button. The PAUSE button is also the REDIAL button. The indentation just below the FLASH/CALL WAIT button is the microphone.

The Handset Speaker is the rectangular textured area on the back of the handset (behind the display). The triangular pattern of raised texture just below the Handset Speaker indicates the battery compartment. The battery door can be opened by pushing in and down on this area.

Along the left and right sides of the handset are two indentations, which are parallel to the display, that secure the belt clip. The belt clip is a T-shaped plastic piece with two curved arms and one long arm. The belt clip snaps into place with the small ridges on the curved arms locking into each of the indentations on the side of the handset. The two metal ridges at the bottom of the handset are the charge contacts. On the left side of the handset, parallel to the TALK button, is the headset jack covered with a little round rubber cap. This cap can be opened by pulling down, and is not removable.

Base unit

With the base unit facing you, the antenna is on the right side of the base unit and it should be positioned pointing upwards. The handset's charging cradle is on the left side of the base unit. This is about 1 inch deep depression. For charging, the bottom of the handset is placed in the cradle with the handset buttons facing up. The handset also can be placed in the cradle by the inverted position. The unit beeps when the handset is set properly in the cradle for charging. If the unit is wall-mounted, you should push in and turn around the hook on the top of the cradle so that the handset will be held securely.

To the lower right of the cradle, further below the top on the front are two indicator lights in a vertical column. The top is the CHARGE indicator and below is the IN USE/HOLD indicator. Immediately below the IN USE/HOLD indicator are three ovals with a clipped edge in a horizontal row. They are HANDSET LOCATOR buttons 1 to 3 from left to right. They are also INTERCOM buttons 1 to 3 from left to right. Directly below these buttons is a large rectangle with the right edge round. This is the HANDSET LOCATOR ALL button with several "nibs". This is also the INTERCOM ALL button.

The base unit microphone is located at the bottom of the base unit below this large button.

Charger Unit

On the back edge of the charger is the AC adaptor already connected. The top of the charger has a large hole in the center and slants down towards the front. The hole is the handset's charging cradle, which is about 2.2 inch wide and 1.8 inch deep. The two metal ridges at the bottom of the cradle are the charge contacts for the handset. The handset stands upright in the cradle with the buttons facing the front. The unit beeps when the handset is set properly in the cradle for charging. Just below the cradle is the CHARGE indicator light.