

This document is a text description of the control panel layout for the product listed below.

The complete operating instructions are available online in PDF format from the Customer Support section of www.panasonic.com.

If you need the operating instructions in an alternate format, please contact Customer Support.

Model Number KX-TG2770S 2.4GHz Expandable Cordless Phone System

Base unit

With the base unit facing you, you will find antennas on the left and right sides of the unit. The antennas can be easily rotated so that they always point upward, whether the unit is placed on a desk or is wall-mounted.

The handset cradle is located on the left side of the face of the unit. The handset sits in the two recessed areas located in the upper and lower left corners of the base unit's face, and is connected to the unit with a coiled cord.

The speakerphone speaker is the rectangular, textured area located on the left side of the face of the unit, between the upper and lower recessed areas that hold the handset.

To the right of the speaker, in the center of the base unit, is the telephone keypad. The keypad is laid out in the conventional telephone arrangement with a "nib" on the 5 button. Below the keypad are 3 thin buttons. The left-most is the LOCATOR button, and an indicator light is to the left. The LOCATOR button also serves as the INTERCOM or TRANSFER button. The middle button is the CONFERENCE button, and the right-most button is the HOLD button.

To the right of these buttons you will find a larger button, which is the DIGITAL SPEAKERPHONE button. It has an indicator light above it and to the left. Above the DIGITAL SPEAKERPHONE button, to the right of the keypad are four small, round buttons in a vertical row. The bottom button is the MUTE button with an indicator light to the upper left. Above it is the FLASH or CALL WAIT button. Next is the REDIAL or PAUSE button. The top button is the PRIVACY button. Above the keypad is a smooth rectangular depression. This is the display.

To the right of the display, there is a row of three thin buttons. The left-most button is the GREETING button. Immediately to the right is the similar-sized MEMO button. To the right of these buttons is a larger ANSWER ON button, with an indicator light just above it.

Below the ANSWER ON button is a row of three round buttons. From left to right, they are the MAILBOX 1, MAILBOX 2 and MAILBOX 3 buttons. Once the Answering System is activated, these three buttons control mailbox features such as recording and playing back messages.

Directly below the MAILBOX buttons is a large, round concave key called the Navigator key. This key has four active areas: the 12 o'clock, 3 o'clock, 6 o'clock and 9 o'clock positions. The 12 and 6 o'clock positions serve as the UP and DOWN keys, respectively. They are also used to control the volume during a call. The 3 and 9 o'clock positions are the right and left arrow keys, respectively. These are used to enter the directory list. The 3 o'clock position is often used as the "Yes" key during programming.

To the upper left of the Navigator key is the STOP button. To the upper right, an oval button with a clipped lower-right edge, which is the FUNCTION or EDIT button. Finally, to the lower-left of the Navigator key is the ERASE button.

Cordless handset

With the cordless handset facing you, you will find the antenna. It is the narrow, 2-inch long protrusion at the top right. Just below the top of the front of the cordless handset is a shallow oval concave. This is the earpiece. The smooth surface below the earpiece is the display; its upper edge is defined by a small ridge in the center of the cordless handset below the earpiece.

Below the display are three soft keys. Each soft key is used to select the function shown on the display directly above it. In the standby mode, "PLAY" is above the right soft key, and works as the message playback key. During a conversation, "PRIVACY" is displayed above the left soft key, which works as the privacy key.

In the center below these keys is a round, concave key called the Navigator key. This key has four active areas: the 12 o'clock, 3 o'clock, 6 o'clock and 9 o'clock positions. The 12 and 6 o'clock positions serve as the UP and DOWN keys, respectively. They are also used to control the volume during a call. The 3 and 9 o'clock positions are the right and left arrow keys, respectively. These are used to enter the directory list. The 3 o'clock position is often used as the "Yes" key during programming.

To the left of the Navigator key, is a small, somewhat trapezoidal button called the TALK button; its lower edge is defined by a small ridge. The thin button below the TALK button is the SPEAKERPHONE button. To the right of the Navigator key, is another small trapezoidal button. This is the OFF button, and its lower edge is also defined by a small ridge. The thin button below the OFF button is the HOLD button. The HOLD button serves as the CLEAR, INTERCOM or TRANSFER button.

Below these buttons is the telephone keypad, which is laid out in the conventional telephone arrangement, with a "nib" on the 5 button. Immediately below the keypad are three thin buttons. The left-most button is the CONFERENCE or FUNCTION button. The middle one is the FLASH or CALL WAIT button. The right-most button is the PAUSE or REDIAL button.

The small indentation just below the FLASH button is the microphone. The two metal ridges at the bottom of the cordless handset are the charge contacts.

With the handset still facing you, you will find the headset jack on the left side of the cordless handset, parallel to the TALK button. It has a rubber cover that can be opened by pulling down, and is not removable. Finally, on the reverse side of the cordless handset is a circular, textured area, which is the speakerphone's speaker.

Charger unit

The cordless handset's charging cradle is located in the center of the charger unit, and has a single indicator light beneath it. The charging cradle is about 2 inches wide and 1 inch deep. The cordless handset is placed in this cradle with the cordless handset's buttons facing the front of the charging cradle. The unit will beep when the cordless handset is properly placed in the cradle for charging.

PQQX13561YB

May, 26 2003