


1. Fill the iron as described in "HOW TO FILL"
2. Set the iron vertically and make sure the temperature selector dial is set to OFF.
Plug the AC cord into the electrical outlet
3. Set the temperature selector dial to the "☁" indication area.
4. Preheat the iron until the indicator light goes out, usually about 1-2 minutes.
5. Simply pump the jet of steam button when it is desired. But pump the jet of steam button several times before using for the first time at each ironing session.
6. Allow at least 5 seconds between uses of jet of steam to prevent water spotting. Use a press cloth if necessary.



VERTICAL STEAM

To get better results when using vertical jet of steam, hang the garment on a clothes hanger. Curtain and drapes may also be steamed once they're hung. Hold the iron away from your body close to but not touching the fabric. Pull the fabric tight with your free hand and pump the vertical steam button (Jet of Steam Button) at 5-second intervals as you pass the iron over the wrinkled fabric.

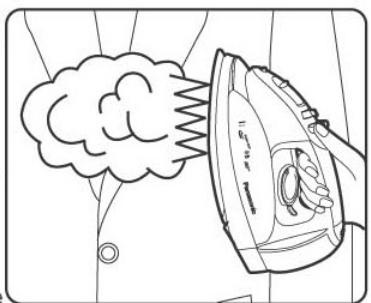


WARNING:

Never iron clothes on the body or point your iron at anyone when steaming. Keep hands and body away from steam areas while using vertical steam feature.

SELF-CLEANING



With the self-cleaning feature you can flush out mineral residue from the steam generating chamber and the steam vents refreshing your iron each time for a longer steaming life. It is very important to operate the self-cleaning feature after each steam ironing to prevent mineral accumulations from hardening.

1. Check water level. Water level should be at 1/2 full. When water level is below 1/2 full, fill with water according to the instructions in "How to Fill".
2. Preheat at "6" setting. (in about 1-2 minutes) Makes sure that the steam button is in the Dry position.
3. Set the dial to OFF and remove the AC plug.
4. Hold the iron horizontally over the sink.
5. Pump the "Jet of Steam" button quickly (at least 3 times per second) about 20-30 times.

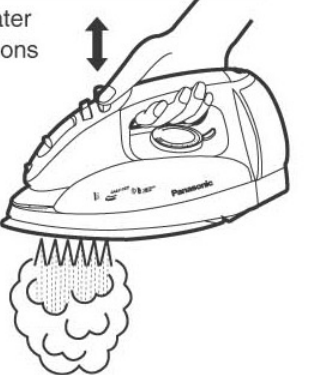

-8-

COMPONENTS IDENTIFICATION

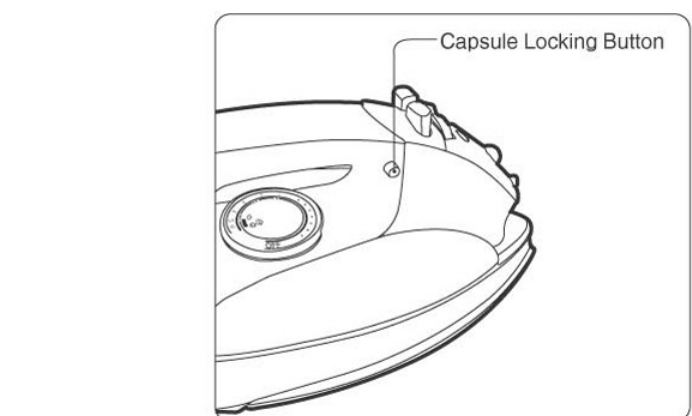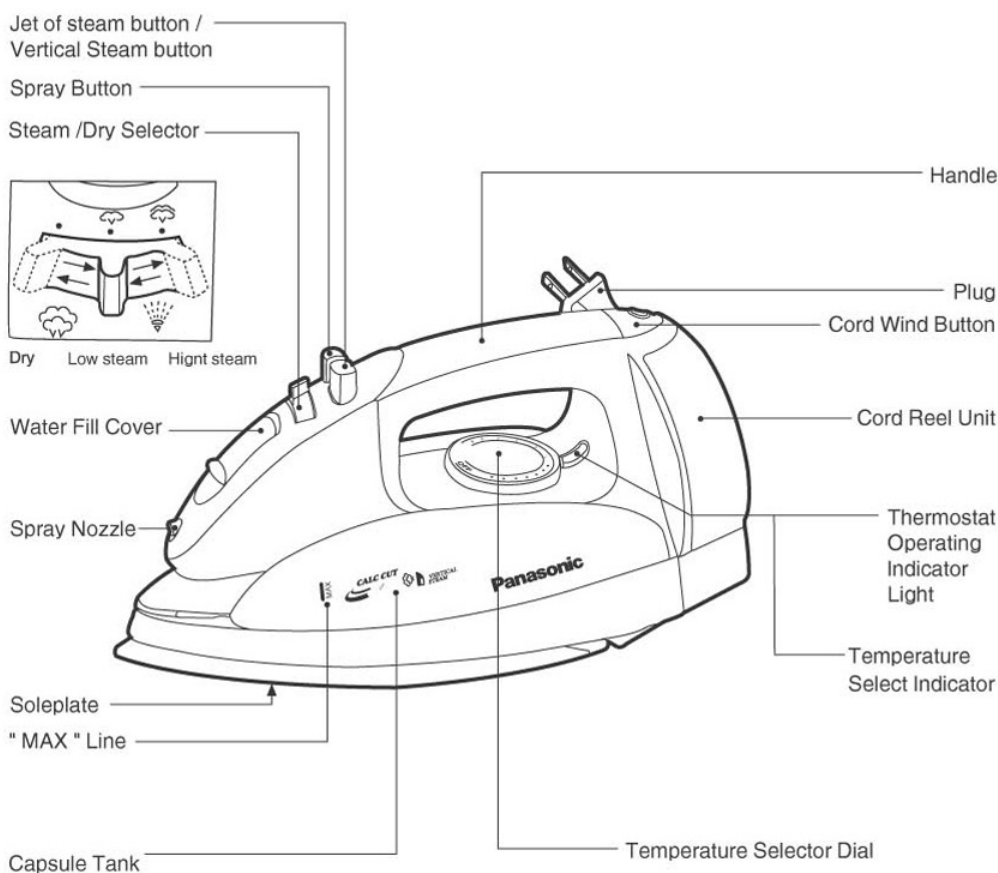

-3-

6. While self-cleaning, pitch the iron up and down slowly to help clean the entire inside and let the water drip out of the soleplate vents.
7. Check that all water and steam thoroughly stop coming out of the sole plate vents. After self-cleaning is finished empty any remaining water from the iron.
8. Iron on a towel to remove any drops of water remaining on the bottom of iron.
9. Cool as usual and store the iron on its heel rest. Never store an iron on its soleplate or with water in it.

NOTE:

If water still remains inside the soleplate after self-cleaning operation, dry out the iron by vaporizing the remaining water setting the iron to the "6" setting, and follow the instructions under "AFTER EACH USE".

Stay Clean Vents (Except NI-C55SR)

The built-in Anti Calcium Cassette in the Capsule Tank continuously reduces scale built-up in the vaporizing chamber of the iron. This system makes it possible to use steam function for a long period of time preventing steam vents clogging.

HOW TO CARE FOR YOUR IRON

AFTER EACH USE

1. Turn iron off and unplug.
2. Empty iron immediately after using. Don't store the iron with water in it.
3. Depress the steam button down into the dry position.
4. Wait until the iron has cooled before storing it, and always set it on the heel rest to protect the soleplate from scratches, corrosion or stains.
5. After letting iron cool completely, push the cord wind button to wind the cord. Store iron vertically in a safe place after winding cord completely.

MAIN BODY

After unplugging and cooling the iron, simply wipe off with a damp cloth and if necessary, use a mild detergent.

NEVER USE ANY HARSH CLEANERS.

SOLEPLATE

Starch and other residue may be easily removed from the soleplate with a damp cloth. To avoid scratching the finish never use a metallic pad to clean the soleplate, and never place the iron on a rough surface. If synthetics are ironed at too high a temperature, not only is the fabric usually ruined, but the iron soleplate is often covered with the melted remains of the synthetic fabric. The best way to remove synthetic residue from the soleplate is to heat the iron and to iron over an old cotton rag.

CAUTION:

Never use steam iron cleaners in the iron, since they may damage the inside of the iron.

-9-

CAUTION DURING USE OF RETRACTIVE POWER CORD

- (1) When retracting power cord, always grasp the plug with one hand while pressing the cord wind button with the other hand.
- (2) If cord does not retract completely, pull it out slightly and wind it again while guiding it into the reel.
- (3) Unwind the power cord in the amount of length you need before plugging it to the wall outlet.
- (4) If the power cord seems hard to unwind due to an improper winding, pull firmly until it is released.
- (5) Do not allow small children to handle the retractive power cord as this may cause the cord to "whip" and cause injury.

GENERAL HINTS BEFORE USING YOUR Panasonic IRON

1. Read this instruction book to become familiar with the iron and its features.
2. Most ordinary tap water can be used in this iron. In extremely hard water areas, distilled or demineralized water should be used. Do not use water processed through home water softening systems, as this water contains minerals that may be harmful to the iron.
3. It is best to start ironing garments requiring lower temperature setting first. This will help to avoid damaging garments. If you are not sure of the fabric content, first test the temperature of the iron on an area of a garment where it will not show.

HELPFUL IRONING TIPS

The Temperature Selector Dial of the Panasonic iron has dots on it, in addition to numbers and color indications. This makes it easy to adjust the iron for steam, more or less steam, and any other temperature setting desired. The dots are international fabric protection symbols for various temperature ranges:

- Low Temperature
- Medium Temperature
- High Temperature

Many garments are labeled with these dots as a guide for selecting the proper ironing temperature. For general information about ironing temperatures, refer to the handy fabric guide on the iron. For more specific information, use the "Fabric Ironing Chart" found on page 10. As a guide to the international Textile Care & Labeling code, the following symbols are noted for your information.



-4-

FABRIC IRONING CHART

- NOTES: 1. Check garment for specific ironing instructions. Always follow manufacturer's instructions.
2. Iron blended fabrics at setting for lower-temperature fiber or for the highest-percentage fiber.
3. Use caution, some synthetics may melt at high temperature.

Temperature Selector Setting	Fabric	Ironing Recommendations
1	ACRYLIC * ACRILAN * CRESLAN * ORLON ACETATE METALLICS SUEDE	Dry iron on reverse side, or use a press cloth on top of fabric. Don't sprinkle water directly on fabric to avoid spots. To iron suede, cover ironing board with brown paper and use it as a press cloth.
2	NYLON * ANTORON * CAPROLAN SILK	Dry iron on reverse side.
3	PERM. PRESS RAYONS POLYESTER * DACRON * FORTREL * KODEL TRIACETATE * ARNEL W'n W COTTON	Dry iron on reverse side. To touch-up collars, cuffs, pockets, etc., iron lightly on right side.
4	WOOL VELVET	Steam ironing is suggested. Never iron completely dry. To iron velvet, steam iron holding the slightly above the fabric
5	COTTON	Steam ironing is suggested. Sprinkle water on the fabric, depending on its thickness. Iron dark fabric on wrong side to avoid unwanted sheen.
6	LINEN	Steam ironing is suggested. Iron dark fabrics on wrong side to avoid unwanted sheen.

* Trademarks of Fiber Manufacturers.

Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus New Jersey 07094

Panasonic Sales Company
Division of Matsushita Electric of Puerto Rico, Inc. ("PSC")
Ave.65 de Infanteria. Km. 9.5
San Gabriel Industrial Park, Carolina, Puerto Rico 00985

consumerproducts @ panasonic.com

i82006-6M12A

-10-


Before ironing, sort the garments according to the different heat settings required. Iron fabrics that need a lower temperature first.

Do not touch plastic buttons with a hot iron because they may melt. Be careful around zippers and similar items to prevent the soleplate from scratching.

HOW TO FILL

Make sure the iron is turned off and the AC power cord is unplugged from the electrical outlet. The iron can be filled with the capsule tank in place or removed. Confirm that the steam sway button is swayed to the dry ironing position (LEFT) when installing or removing the tank.

1. When the iron sitting up on the heel rest, press the Capsule Locking Button down and the tank will be released.
2. Grasp the tank and lift it off the iron.
3. Open the water fill cover and fill the tank up to the " MAX " Line on the Capsule Tank. To check the level of water, grasp the tank vertically.
4. To re-install the capsule tank, set the tank onto the main body and press into place until a click sound is heard.
5. The water level can be observed through the transparent part of the tank, when iron is placed vertically. When the water level becomes low, place the iron vertically and add water, following the procedure described 1 to 4 above

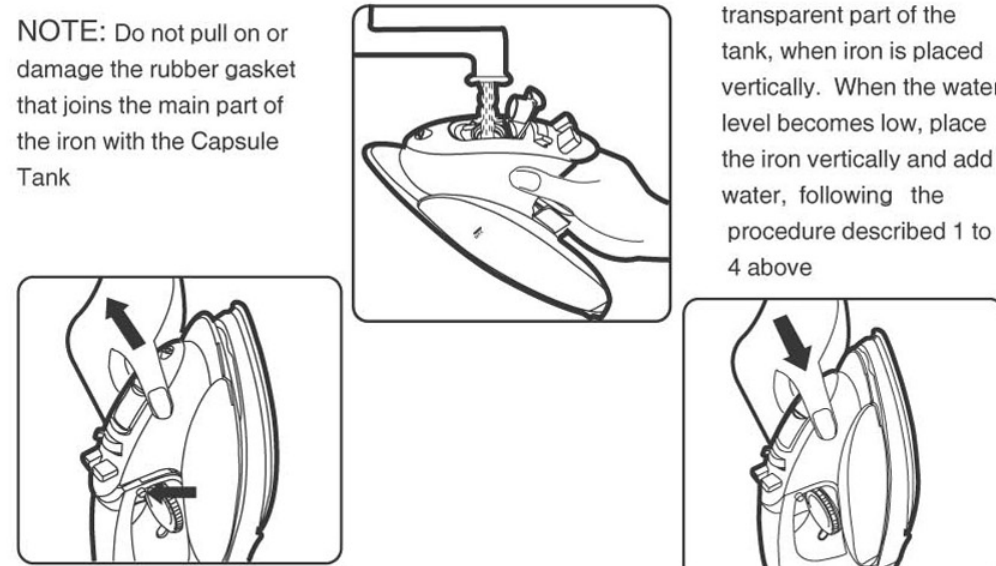

HOW TO USE AS A STEAM IRON

1. Fill the iron as described in "HOW TO FILL".
2. Set the iron vertically and make sure the Temperature Selector Dial is set to OFF. Plug the AC cord into the electrical outlet.

-6-

Panasonic®

Electric Steam Iron Operating Instructions

Model No.NI-C55SR/NI-C75TR/NI-C76SR/NI-C77XR




Please read these instructions carefully before using this product and save this manual for future use.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to:consumerproducts@panasonic.com or visit us at WWW.panasonic.com (U.S.A)

For assistance, please call : 787-757-4300 or visit us at WWW.panasonic.com (Puerto Rico)

3. Set the temperature selector dial to the "☁" or "☁☁" (steam) zone.
"☁" zone: Low steam, for thin or delicate fabrics requiring a small amount of steam.
"☁☁" zone: High steam, for fabrics requiring a lot of steam. (i. e. thick materials, items with stubborn wrinkles.)
4. Preheat the iron until the indicator light goes out, usually about 1-2 minutes. This light will go on and off during ironing to indicate the temperature chosen by the selector dial is being maintained.
5. Hold the iron horizontally and sway the steam sway button into the steam position. Steam/Dry Selector is regulated as follows.


NOTE: 3 position Steam /Dry Selector.

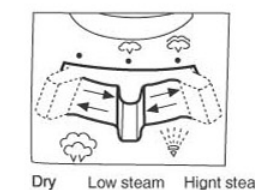

(Button Right : for Hight steam, MED: for Low steam)

Temperature Zone	Steam Button Position
☁	☁
☁☁	☁☁
☁☁☁	☁☁☁

Now steam ironing can begin

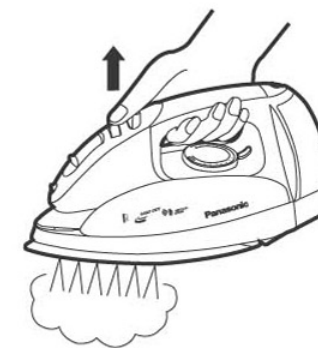

6. Anytime the iron is set vertically the steaming action will stop.

NOTE: Do not use the steam sway button unless the iron is sufficiently hot enough to produce steam, otherwise water will leak out through the vents instead.

HOW TO USE AS A DRY IRON

1. Sway the Steam /Dry Selector to the dry position.
2. Place the iron vertically, set the selector dial to OFF.
3. Plug in the iron.
4. Set the temperature selector dial to the desired position. (Refer to the Fabric Ironing Chart in this manual on page 10)
5. Preheat the iron until the indicator light goes out, usually about 1-2 minutes.

HOW TO USE THE SPRAY FEATURE

Before using the spray feature, check the garment label for ironing instructions because some fabrics may spot or stain with moisture. The spray feature is particularly helpful for removing stubborn wrinkles and where extra dampening is needed.

-7-

IMPORTANT SAFEGUARDS

When using your flatiron, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Use iron only for its intended use.
3. To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
4. The iron should always be turned to OFF before plugging into or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Wind cord into cord reel unit when storing.
6. Always disconnect iron from electrical outlet when filling with water or emptying it and when not in use.
7. Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid a risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
8. Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
9. Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down - there may be hot water in the reservoir.

SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 10 ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.


SAVE THESE INSTRUCTIONS

© 2004 Matsushita Electric industrial Co., LTD. All rights reserved.

-2-

The spray may be used with steam or dry ironing.


1. Simply pump the spray button when spray is desired. If the spray doesn't work immediately just keep pumping till it does.
2. To get a finer spray, pump the button vigorously. To get a more powerful spray, pump the button more slowly. For best results, use a quick, full stroke.

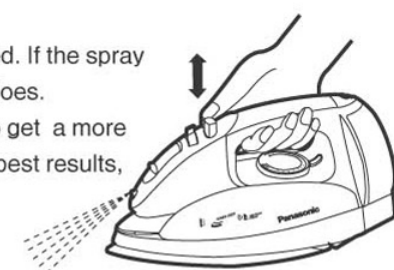

Electronic 3-Way AUTO SHUT-OFF FUNCTION

1. When the iron is left unmoved with its soleplate facing down or on its side for approx. 1 minute, the iron will automatically shut off power to the heater.
2. When the iron is left unmoved on its heel rest for approx. 10 minutes, the iron will automatically shut off power to the heater by itself.
3. To turn the iron back on to resume ironing, simply move the iron in any way. Reheat the iron until the indicator light goes out, if you have left the iron in the auto shut off mode for 10 minutes or more.

NOTE: 1. The Auto shut off system works regardless of position of the temperature selector dial, even at "OFF" position.
2. When you finish ironing, always unplug the iron.

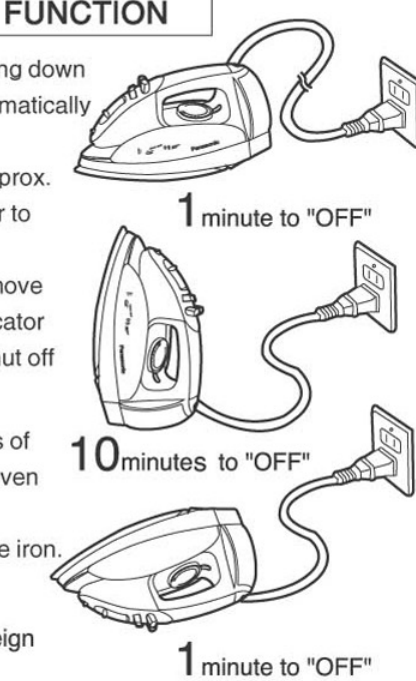

※ Licensed under U.S.patent No. 4,686,352 and foreign counterparts.

HOW TO USE JET OF STEAM FEATURE

The jet of steam feature gives extra steam which goes deep into the garment and is helpful for removing stubborn wrinkles. The jet of steam feature can be used only in the "☁☁☁" indication area of the temperature selector dial when steam or dry ironing (if used at lower setting, water spotting will occur because the iron is not hot enough to change water to steam). If you have not used the "Jet of Steam" feature for a long time, it is necessary to clean the inside of the iron before using this feature on any clothes to be ironed. Simply test the "Jet of Steam" feature several times away from the ironing board and clothes to be ironed. This will prevent brown spotting or water spotting on the clothes.

-7-