



Panasonic®

TV/DVD Combination Operating Instructions

Model No. PV-24DF62



- Initial Setup and Connection Procedures are on pages 10 to 11.



As an ENERGY STAR® Partner, Matsushita Electric Corporation of America has determined that this product or product model meets the ENERGY STAR® guidelines for energy efficiency.

Please read these instructions carefully before attempting to connect, operate, or adjust this product. Please save this manual.
Spanish Quick Use Guide is included.
(Guía para rápida consulta en español está incluida.)

LSQT0501A

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Initial Setup

Basic Operation

TV Operation

Advanced Operation

For Your Information

Important Safeguards and Precautions

READ AND RETAIN ALL SAFETY AND OPERATING INSTRUCTIONS. HEED ALL WARNINGS IN THE MANUAL AND ON UNIT

INSTALLATION

1 POWER SOURCE CAUTION

Operate only from power source indicated on unit or in this manual. If uncertain, have your Electric Utility Service Company or Video Products Dealer verify your home power source.

2 POWER CORD PLUG

For safety, this unit has a polarized type plug (one wide blade), or a three-wire grounding type plug. Always hold the plug firmly and make sure your hands are dry when plugging in or unplugging the AC power cord. Regularly remove dust, dirt, etc. on the plug.

POLARIZED PLUG CAUTION:

The plug fits into outlet one way. If it cannot be fully inserted, try reversing it. If it still will not fit, have an electrician install the proper wall outlet. Do not tamper with the plug.

GROUNDING PLUG CAUTION:

The plug requires a three-hole grounding outlet. If necessary, have an electrician install the proper outlet. Do not tamper with the plug.

3 POWER CORD

To avoid unit malfunction, and to protect against electrical shock, fire or personal injury:

- Keep power cord away from heating appliances and walking traffic. Do not rest heavy objects on, or roll such objects over the power cord.
- Do not tamper with the cord in any way.
- An extension cord should have the same type plug (polarized or grounding) and must be securely connected.
- Overloaded wall outlets or extension cords is a fire hazard.
- Frayed cords, damaged plugs, and damaged or cracked wire insulation are hazardous and should be replaced by a qualified electrician.

4 DO NOT BLOCK VENTILATION HOLES

Ventilation openings in the cabinet release heat generated during operation. If blocked, heat build-up may result in a fire hazard or heat damage to cassettes.

For your protection:

- Never cover ventilation slots while unit is ON, or operate unit while placed on a bed, sofa, rug, or other soft surface.
- Avoid built-in installation, such as a book case or rack, unless properly ventilated.

5 AVOID EXTREMELY HOT LOCATIONS OR SUDDEN TEMPERATURE CHANGES

Do not place unit over or near a heater or radiator, in direct sunlight, inside closed vehicles, in high temperature [over 95°F (35°C)], or in over 75% humidity. If unit is suddenly moved from a cold place to a warm one, moisture may condense in unit and on the tape causing damage. Never subject unit to vibration, impact, or place it so that the surface is tilted as internal parts may be seriously damaged.

6 TO AVOID PERSONAL INJURY


- Never place unit on support or stand that is not firm, level, and adequately strong. The unit could fall causing serious injury to a child or adult and damage to the unit.
- Move any appliance and cart combination with care. Quick stops, excessive force, and uneven surfaces may cause objects to overturn.
- Carefully follow all operating instructions.



OUTDOOR ANTENNA INSTALLATION

1 SAFE ANTENNA AND CABLE CONNECTION

An outside antenna or cable system must be properly grounded to provide some protection against built up static charges and voltages. Section 810 of the National Electrical Code, ANSI/NFPA 70 (in Canada, part 1 of the Canadian Electrical Code) provides information regarding proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

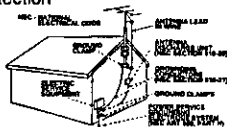

2 KEEP ANTENNA CLEAR OF HIGH VOLTAGE POWER LINES OR CIRCUITS

Locate an outside antenna system well away from power lines and electric light or power circuits so it will never touch these power sources should it ever fall. When installing antenna, absolutely never touch power lines, circuits or other power sources as this could be fatal.

USING THE UNIT

Before unit is brought out of storage or moved to a new location, refer again to the INSTALLATION section of these safeguards.

1 KEEP UNIT WELL AWAY FROM WATER OR

MOISTURE, such as vases, sinks, tubs, etc.

2 IF EXPOSED TO RAIN, MOISTURE, OR

STRONG IMPACT, unplug unit and have it inspected by a qualified service technician before use.

3 ELECTRICAL STORMS

During a lightning storm, or before leaving unit unused for extended periods of time, disconnect all equipment from the power source as well as the antenna and cable system.

4 WHEN UNIT IS PLUGGED IN

• DO NOT OPERATE IF:

- liquid has spilled into unit.
- unit was dropped or otherwise damaged.
- unit emits smoke, malodors, or noises.

Immediately unplug unit, and have it inspected by a service technician to avoid potential fire and shock hazards.

• Never drop or push any object through openings in unit.

- Touching internal parts may cause electric shock or fire hazard.
- Keep magnetic objects, such as speakers, away from unit to avoid electrical interference.

5 USING ACCESSORIES

Use only accessories recommended by the manufacturer to avoid risk of fire, shock, or other hazards.

6 CLEANING UNIT

Unplug unit. Use a clean, dry, chemically untreated cloth to gently remove dust or debris. DO NOT USE cleaning fluids, aerosols, or forced air that could over-spray, or seep into unit and cause electrical shock. Any substance, such as wax, adhesive tape, etc. may mar the cabinet surface. Exposure to greasy, humid, or dusty areas may adversely affect internal parts.

SERVICE

1 DO NOT SERVICE PRODUCT YOURSELF

If, after carefully following detailed operating instructions, the unit does not operate properly, do not attempt to open or remove covers, or make any adjustments not described in the manual. Unplug unit and contact a qualified service technician.

2 REPLACEMENT OF PARTS

Make sure the service technician uses only parts specified by the manufacturer, or have equal safety characteristics as original parts. The use of unauthorized substitutes may result in fire, electric shock, or other hazards.

3 SAFETY CHECK AFTER SERVICING

After unit is serviced or repaired, request that a thorough safety check be done as described in the manufacturer's service literature to insure video unit is in safe operating condition.

Safety Precautions/Mesures de sécurité

Warning : To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

Caution : To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Avertissement : Afin de prévenir tout risque d'incendie ou de chocs électriques, ne pas exposer cet appareil à la pluie ou à une humidité excessive.

Attention : Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

FCC WARNING : Any unauthorized changes or modifications to this equipment would void the user's authority to operate.

CAUTION:

UNIT IS A CLASS I LASER PRODUCT.

HOWEVER THIS UNIT USES A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE UNIT CORRECTLY AS INSTRUCTED.

WHEN THIS UNIT IS PLUGGED TO THE WALL OUTLET, DO NOT PLACE YOUR EYES CLOSE TO THE OPENING OF THE DISC TRAY AND OTHER OPENINGS TO LOOK INTO THE INSIDE OF THIS UNIT.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

DO NOT OPEN COVERS AND DO NOT ATTEMPT TO REPAIR THE UNIT YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

CAUTION:

LASER RADIATION
WHEN OPEN. DO NOT
STARE INTO BEAM.

ATTENTION:

RAYONNEMENT LASER
EN CAS D'OUVERTURE.
NE PAS REGARDER
DANS LE FAISCEAU.

(Inside of product)

FCC NOTICE:

This equipment has been tested and found to comply with part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when operated in a residential environment. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, use the equipment in another location and/or utilize an electrical outlet different from that used by the receiver. If necessary, consult the dealer or an experienced radio/TV technician for help. You may find the booklet, 'Something About Interference' available from FCC local regional offices helpful.

This product utilizes both a Cathode Ray Tube (CRT) and other components that contain lead. Disposal of these materials may be regulated in your community due to environmental considerations. For disposal or recycling information please contact your local authorities, or the Electronics Industries Alliance: <<http://www.eiae.org>>



This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.



This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

Region Management Information

Region Management Information: This unit is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this unit, this unit cannot play this disc.

The Region number
for this unit is 1.



 
Before Using

Congratulations

on your purchase of one of the most sophisticated and reliable products on the market today. Used properly, it will bring you and your family years of enjoyment. Please fill in the information below. The serial number is on the tag located on the back of your unit.


Date of Purchase _____
Dealer Purchased From _____
Dealer Address _____
Dealer Phone No. _____
Model No. _____
Serial No. _____

Accessories

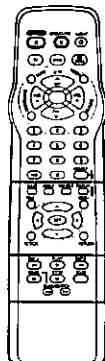


Remote Control
LSSQ0321

 Batteries 2 "AA"

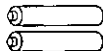

To order accessories,
call toll free
1-800-332-5368.

Loading the Batteries

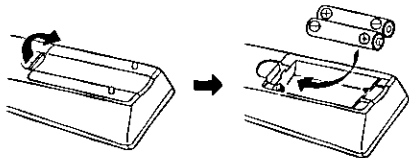

Battery replacement caution

- Do not mix old and new batteries.
- Do not mix alkaline with manganese batteries.

Features for a Quality Picture


 

PureFlat™ Picture Tube

This unit is equipped with PureFlat™ Picture Tube.

Disc Handling


Handling precautions

- Only hold disc by edges as shown. Fingerprints, dirt, and scratches can cause skipping and distortion.
- Do not write on label side of disc.
- Never use record cleaning sprays, benzene, thinner, static electricity prevention liquids, or any other solvent.
- Be careful not to drop or bend disc.
- Do not place more than 1 disc on disc tray.
- Do not try to close disc tray when disc is not properly placed.
- Always store discs in their proper cases when not in use.

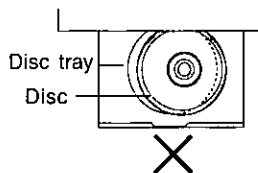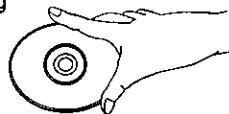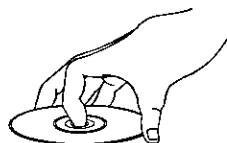

To clean disc surface

With a soft, damp (water only) cloth, gently wipe from the center hole to the outer edge as shown below. (Wiping in a circular pattern will scratch the surface.)

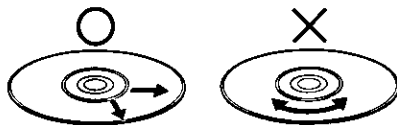

If disc is brought from a cold to a warm environment, moisture may form on the disc. Wipe away moisture with a soft, dry, lint-free cloth before using disc. (See above.)

Improper disc storage

Discs could be damaged if stored or left in areas:

- exposed to direct sunlight.
- that are humid or dusty.
- near heat (i.e. heater, radiator, etc.).

Table of Contents

Initial Setup

TV	Important Safeguards and Precautions/Safety Precautions	2 - 3
	Before Using	4
	Information	6 - 7
	Location of Controls	8 - 9
	Basic Connections & Initial Setup	10, 11
	Reset Language, Channels, Clock, Time Zone Adjust	12, 13
	Audio Connections	14, 15

Initial Setup

DVD Operation

DVD	Basic DVD Operation	16, 17
------------	---------------------------	--------

DVD Operation

TV Operation

TV	TV Operation	18
	MTS Broadcast/TV Stereo System	19
	Closed Caption System	20, 21
	TV Timer Features	22
	On-Screen Displays (OSD)	23

TV Operation

Advanced Operation

TV	Cable Box Universal Remote Control Feature	24, 25
	Special Features	26, 27
	V-Chip Control Feature	27 ~ 29
	Audio/Video Menu	30
	Audio/Video Adjustment	31
DVD	Disc Operation	32 ~ 36
	DVD Operation using On-Screen Displays	37 ~ 39
	DVD Lock Feature	40

Advanced Operation

For Your Information

TV	Before Requesting Service	44, 45
	Warning and Instruction Displays	45
	Servicenter List	47
	Spanish Quick Use Guide/Guía para rápida consulta	48 ~ 53
	Index	54, 55
	Limited Warranty	BC
DVD	Settings for DVD Operation	41 ~ 43
	Language Code List	46

For Your Information

Specifications

Display

Picture Tube: 24 inch diagonal pure flat Picture Tube

Tuner

Broadcast Channels: VHF 2 ~ 13, UHF 14 ~ 69
CABLE Channels: Midband A through I (14 ~ 22)
Superband J through W (23 ~ 36)
Hyperband AA ~ EEE (37 ~ 64)
Lowband A-5 ~ A-1 (95 ~ 99)
Special CABLE channel 5A (01)
Ultraband 65 ~ 94, 100 ~ 125

General

Power Source: 120V AC, 60 Hz
Power Consumption: Power On
Approx. 142 watts
Power Off
Approx. 2.9 watts
Television System: EIA Standard NTSC color
Speaker: 2 pieces (5.0W x 2)
Operating Temperature: 5 °C ~ 35 °C (41 °F ~ 95 °F)
Operating Humidity: 10 % ~ 75 %
Weight: 38.1 kg (84 lbs.)
Dimensions: 596 (W) x 568 (H) x 504 (D) mm
23-1/2" (W) x 22-3/8" (H) x 19-7/8" (D)

Discs played

(1) DVD-VIDEO disc
5" (12 cm) single-sided, single-layer
5" (12 cm) single-sided, double-layer
5" (12 cm) double-sided, double-layer
(one layer per side)
3" (8 cm) single-sided, single-layer
3" (8 cm) single-sided, double-layer
3" (8 cm) double-sided, double-layer
(one layer per side)
(2) Compact disc
5" (12 cm) disc
(CD-DA, VIDEO CD) 3" (8 cm) disc

Digital audio output:

Optical digital output: Optical connector

Pickup:

Wave length:
655 nm (DVD)
790 nm (Video CD/CD)
Laser power: CLASS II

Note : Designs and specifications are subject to change without notice.

Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, and 4,819,098, licensed for limited viewing uses only.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Disc formats supported by this unit

The unit can play back discs bearing any of the following marks:



DVD

3" (8 cm) disc / 5" (12 cm) disc



Video CD

3" (8 cm) disc / 5" (12 cm) disc



CD

3" (8 cm) disc / 5" (12 cm) disc

Discs which cannot be played with this unit

- DVD with Region No. other than "1" or "ALL"
- DVD of PAL system
- DVD-ROM
- DVD-R/DVD-RAM
- CDV
- CD-G
- Do not try to play a Photo CD.



is a registered trademark.

Definition of Terms

Angle

Some DVD discs feature scenes simultaneously shot from different angles. The ANGLE button can be used to view the scene from different angles. (ANGLE Indicator lights up on the unit when a scene recorded at different angles is detected.)

Chapter Number

Titles are subdivided into numbered sections. You can quickly search for a favorite scene using these numbers.

DVD

A high-density optical disc on which high-quality pictures and sound have been digitally recorded. DVD incorporates new video compression technology (MPEG II) and high-density recording technology which allow entire movies to be recorded with incredible playback quality.

Playback Control

With Video CD (version 2.0), scenes or information may be selected for viewing or listening from an interactive menu that appears on the TV screen.

Subtitles

Written dialogue which appears at the bottom of the screen.

Time Number

The elapsed play time from the start of a disc or title. Use to quickly find scenes. (May not work with some discs.)

Title Number

For DVD discs with two or more titles, the title is numbered as title 1, title 2, etc.

Track Number

Numbers assigned to tracks on Video CDs and CDs to allow specific tracks to be quickly located.


Video CD

CD containing picture and sound with same quality level as video tape. This unit also supports Video CDs with playback control (version 2.0).

If the disc cannot be removed...


First, unplug unit.

Then, prepare a rigid wire (e.g. an extended paper clip) and, applying moderate force, insert it straight into the hole at the base of the tray. The tray will eject a little. Then, pull the tray all the way out and remove the disc.

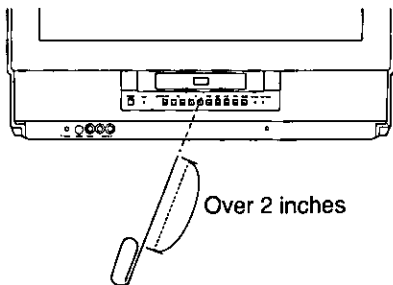

Location of Controls


Remote Control Buttons (Light Tower™ Illuminated Remote Control)

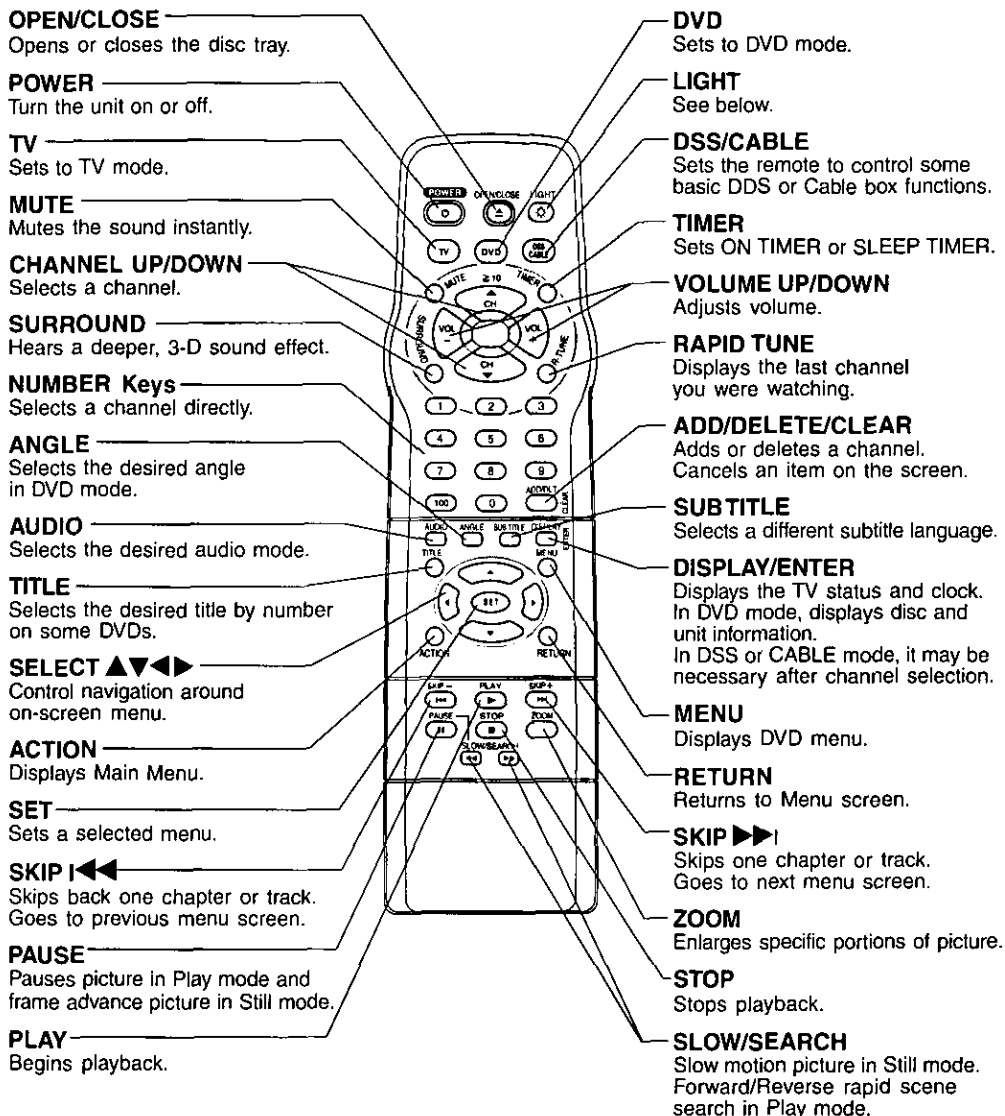


Note

- When **LIGHT** is pressed, (TV, DVD, DSS/CABLE, CH UP/DOWN, VOL+/-) buttons will light for 5 seconds for easy location. If no button is pressed in 5 seconds the light goes out to conserve the battery.

Front View of the Unit and Indicators

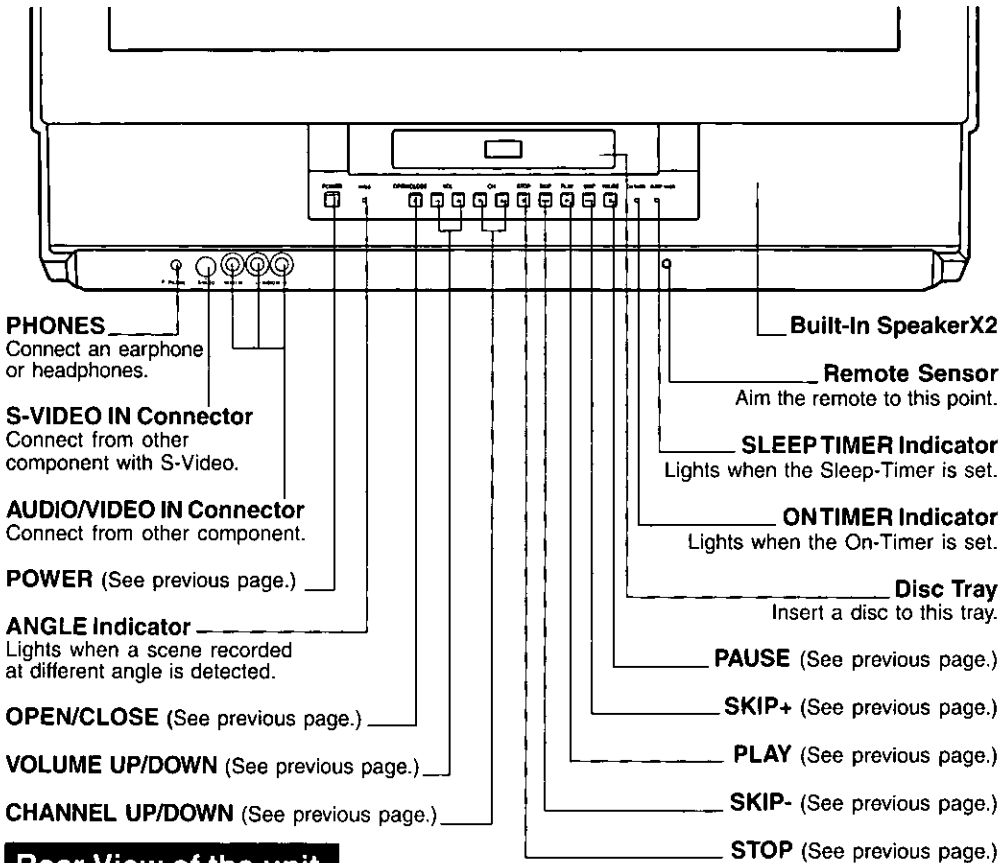

Rear View of the unit

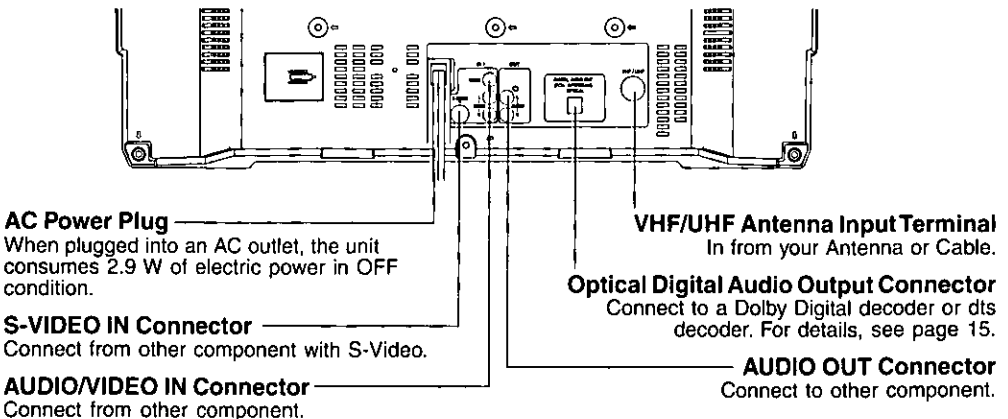

Basic Connections & Initial Setup



Connecting

For ANT./Cable

Connect the cable from Antenna/Cable to the VHF/UHF terminal on the unit.

For DSS/Cable Box

Connect the OUT jack on your cable box to the VHF/UHF terminal on the unit with a RF cable.

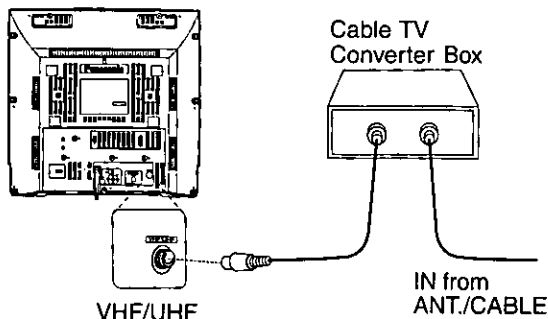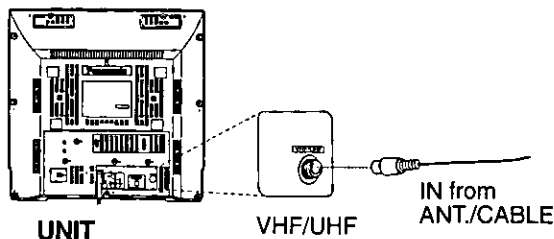

WARNING:

Overtightening "Nut type" RF coaxial cables may damage jacks. Finger tighten only.

How to do Initial Setup

Press TV on the remote for TV mode.

1 Press POWER* on the remote or unit.

- Turn on your cable box and set it to PBS (Public Broadcast Station) channel in your time zone. If you use DSS receiver, it must be turned off.

2

SELECT LANGUAGE

PRESS CH ▲ :English
OPRIMIR CH ▼ :Español
APP. VOL + :Français

Press CH ▲ to select English.

OR

Press CH ▼ to select Spanish (Español).

OR

Press VOL+ to select French (Français).

3

CHANNEL/CLOCK AUTO SET

CONNECT ANTENNA CABLE AND IF YOU USE A CABLE BOX, TUNE IT TO YOUR LOCAL PBS CH THEN...

PLEASE PRESS CH UP KEY

Press CH ▲ to start CHANNEL/CLOCK AUTO SET operation.

Setup completed

If the setup is completed, the following screen is displayed.

```
2/6/2002 WED 12:00PM
                                DST:ON
SETTING : CH 10
AUTO CLOCK SET
COMPLETED
END : PRESS CH UP KEY
```

- If time is not correct... even though your area observes daylight saving time and DST is set to ON, do "Time Zone Adjust" steps on page 13.

Setup incomplete

If the following screen is displayed, set the clock manually. (See "Manual Clock Set" on next page.)

```
AUTO CLOCK SET
IS INCOMPLETE


PLEASE SET CLOCK BY
PRESSING ACTION KEY
```

*Important: If a remote control button does not work when pressed, press the TV button on the remote and try the button again.

Manual Clock Set


If Auto Clock Set was incomplete, manually set the clock as follows.

a Press **ACTION** to display SET CLOCK screen.

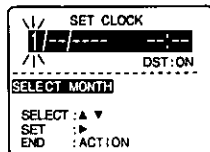


b Press **▲▼** to select the month and press **SET** to set. In the same manner, select and set the date, year, time, and DST (Daylight Saving Time).

To Make Corrections, repeatedly press **◀▶** to move to error, then correct.

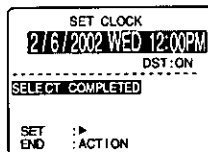

c Press **ACTION** twice to end setup. (Clock starts.)

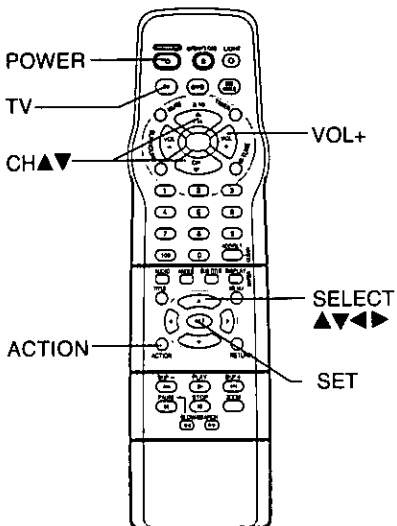

Note to CABLE System Installer

This reminder is provided to call the CABLE (Cable TV) System Installers attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

DST (Daylight Saving Time)

Unit auto adjusts clock for DST (Daylight Saving Time.)

■ **Spring (First Sunday In April)**

DST : ON ->Sets clock ahead one hour.


■ **Autumn (Last Sunday In October)**

DST : ON ->Turns clock back one hour.

- If your area does not observe Daylight Saving Time, select DST:OFF.

Reset Language, Channels, Clock


1

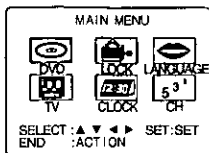


Press **ACTION***
to display MAIN MENU.

2 ■ Language


- 1) Press **▲▼◀▶** to select language icon.

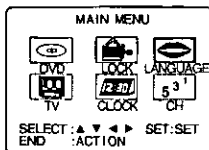


- 2) Press **SET** repeatedly.

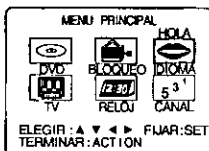

For Spanish

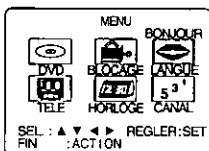

For French

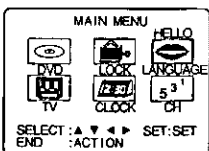


For English


- 3) Press **ACTION** to exit.

■ Channels

- 1) Press **▲▼◀▶** to select "CH."

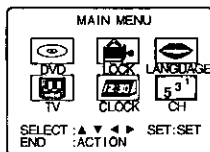

- 2) Press **SET**.

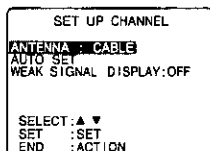


- 3) Press **▲▼** to select "ANTENNA," then press **SET** to set your antenna system ("TV" or "CABLE").

- 4) Press **▲▼** to select "AUTO SET," then press **SET**.


- After Channel Auto Set is finished, Clock Auto Set will be performed.

■ Clock

- 1) Press **▲▼◀▶** to select "CLOCK."

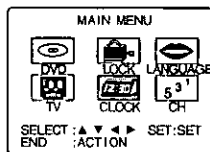


- 2) Press **SET**.

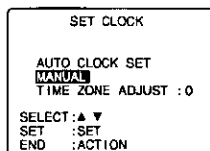

- ("TIME ZONE ADJUST" appears only when auto clock is set.)

- 3) Press **▲▼** to select "MANUAL" or "AUTO CLOCK SET" and press **SET**.

- For Auto Clock Set, select "AUTO CLOCK SET," and press **SET**. Then press **CH ▲**.

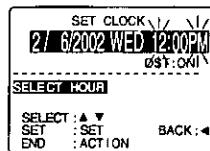

- 4) Press **▲▼** and press **SET** to select and set the month, date, year, time, and DST (Daylight Saving Time).

- To Make Corrections, repeatedly press **▲▼** to move to error, then correct.

- 5) Press **ACTION** twice to start the clock and exit this mode.


Time Zone Adjust

*Important: If a remote control button does not work when pressed, press the TV button on the remote and try the button again.


Time Zone Adjust

(Only when Auto Clock is set.)


- 1) Press **▲▼◀▶** to select "CLOCK."

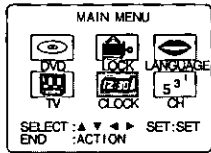

- 2) Press **SET**.

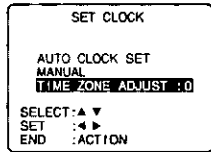

- 3) Press **▲▼** to select **TIME ZONE ADJUST** and press **◀** or **▶** to subtract or add hour(s) as necessary.

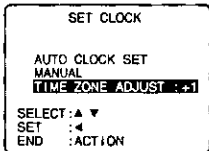


- 4) Press **ACTION** twice to exit.

Reset all unit Memory Functions

When moving unit to a new location, or if a mistake was made in the Initial Setup section.

- Make sure a disc is not inserted in the unit.

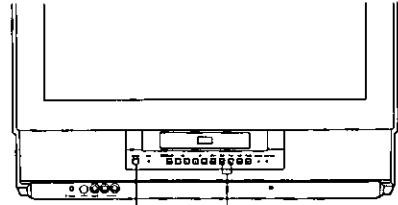

- 1 Turn the unit Power on.
- 2 Press and hold both **PLAY** and **SKIP-** on the unit for more than 5 seconds.
 - The power will shut off.
 - Please ignore "NO DISC" warning.
- 3 Do "Initial Setup" on page 10.

Add or Delete a Channel

To add channel:
Select channel with Number keys and press **ADD/DLT**.

CHANNEL 08 ADDED

To delete channel:
Select channel with **CH ▲▼** or Number keys and press **ADD/DLT**.

CHANNEL 08 DELETED


Audio Connections

■ Unit -> Amplifier -> Speaker

Do the "Speaker ON/OFF system" steps on page 27, and select "OFF".

✓ Ready Checklist

- Turn down the volume, then turn this unit, as well as other equipment to be connected, off before proceeding with connection.
- Do not block ventilation holes of any of the equipment and arrange them so that air can circulate freely.
- Read through the instructions before connecting other equipment.
- Ensure that you observe the color coding when connecting audio and video cables.

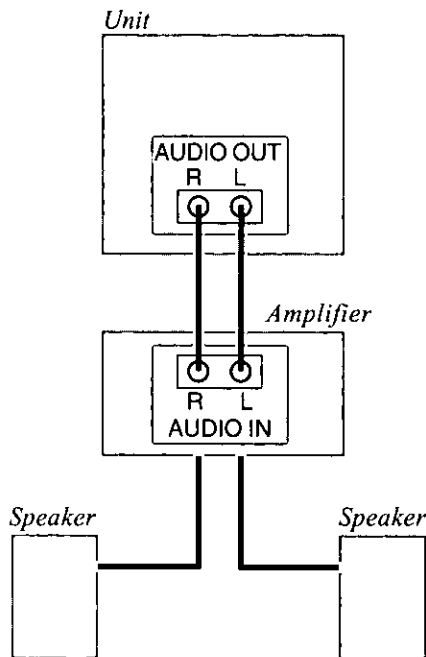

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. © 1992-1997 Dolby Laboratories, Inc. All rights reserved.

Enjoying digital audio output from the digital audio output connector

Notes on audio output from the optical digital audio output connector

Disc	Sound recording format	Optical digital audio output from connector
DVD	Dolby Digital	Dolby Digital bitstream (1-5.1 ch) or OFF (no output)* ¹
	Linear PCM (48/96 kHz 16/20/24 bit)	Linear PCM (2ch) (48 kHz sampling/16 bit only)* ² or no output* ¹
	dts	Bitstream or no output* ¹
Video CD	MPEG 1	PCM (44.1 kHz sampling)
CD	Linear PCM	Linear PCM (44.1 kHz sampling)

*¹ The type of audio output from the connector can be selected by the Settings for DVD Operation. (See page 46.)

*² Sound having 96 kHz sampling is converted into 48 kHz sampling when it is output from the unit's optical digital audio output connector.

For your reference:



- Dolby Digital is a digital sound compression technique developed by the Dolby Laboratories Licensing Corporation. Supporting 5.1-channel surround sound, as well as stereo (2-channel) sound, this technique enables a large quantity of sound data to be efficiently recorded on a disc.
- Linear PCM is a signal recording format used in CDs. While CDs are recorded in 44.1 kHz/16 bit, DVDs are recorded in 48 kHz/16 bit up to 96 kHz/24 bit.
- If you have a Dolby Pro Logic Surround decoder, you will obtain the full benefit of Pro Logic from the same DVD movies that provide full 5.1 channel Dolby Digital soundtracks, as well as from titles with the Dolby Surround mark. For information on Panasonic or Technics Dolby Pro Logic Surround Sound Decoders please contact your local dealer.

■ Unit -> Decoder with Dolby Digital -> Amplifier -> Speaker or dts (digital theater systems)

When DVDs recorded in Dolby Digital or dts are played, Dolby Digital bitstream or dts bitstream is output from the unit Optical digital audio output connector. When the unit is connected to a Dolby Digital decoder or dts decoder, you can enjoy theater-quality audio in your home. [An optical digital audio cable (optional) is required when an optional Dolby Digital decoder or dts decoder is used.]

Notes on connecting an Optical digital audio cable (optional)

- Firmly connect the cable to the connector.

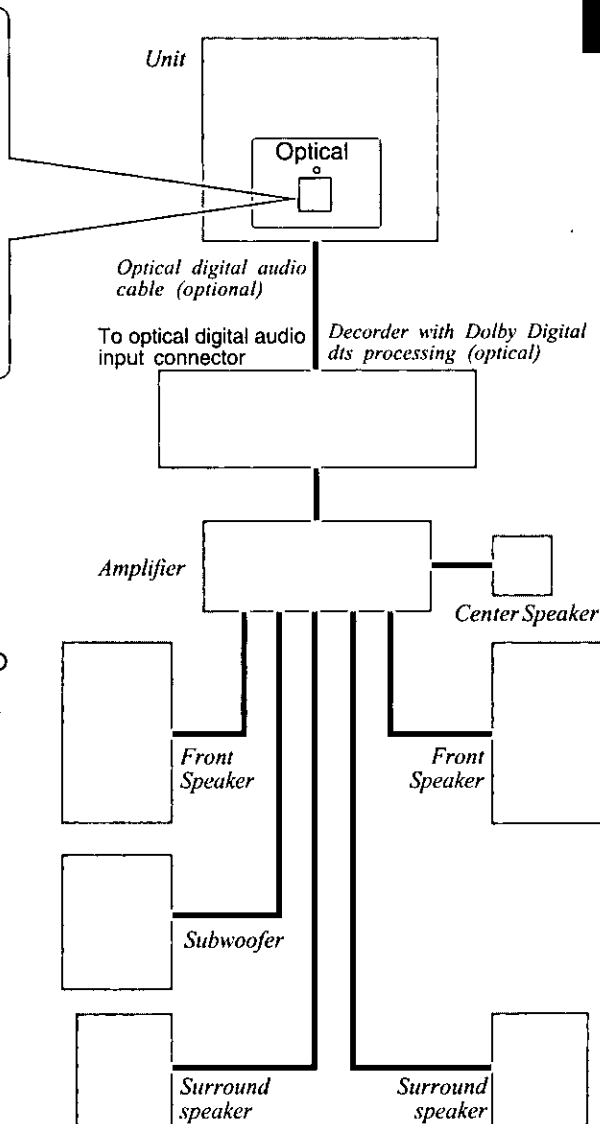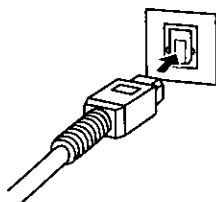

IMPORTANT NOTE:

Caution for optical digital audio output connector:

- When connecting an amplifier (with an Optical digital input connector) which does not contain the Dolby Digital or dts decoder, be sure to select "OFF" at "Dolby Digital" and "OFF" at "dts" of the Settings for DVD Operation "AUDIO OUTPUT" (see page 42). Otherwise, any attempt to play DVDs may cause such a high level of noise that it may be harmful to your ears and damage your speakers.
- When a dts decoder is connected, please select "Bitstream" at "dts" of the Settings for DVD Operation "AUDIO OUTPUT". If "OFF" is selected, there will be no sound. (See page 42).
- Video CDs and CDs can be played as normal.


Note:

- Some dts decoders which do not support DVD-dts interface may not work properly with the unit.

Basic DVD Operation

✓ Ready Checklist

- All connections are made. (See page 10.)
- Your unit is plugged in.
- If unit is connected to an audio amplifier, turn the stereo system's power on.

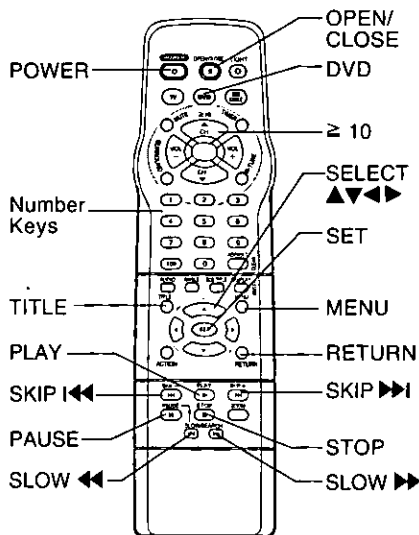


1 Press **POWER*** on the remote or unit.

2 Press **DVD** to select DVD mode.

- If a disc is already inserted, go to step 4. (Depending on the disc, playback may start automatically.)


3 Press **OPEN/CLOSE** to insert a disc and place disc into disc tray.

- Hold disc by its edges only (page 7) with printed side up and use guides to place into tray. Use **1** 3" (8 cm) or **2** 5" (12 cm) disc.

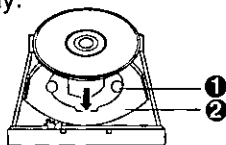


4 Press **PLAY** to start play.

- Disc tray closes automatically.

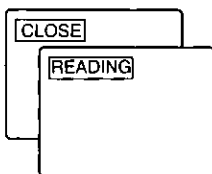


- You may also close the tray by pressing **OPEN/CLOSE**.
- Data reading time differs with each disc.

<Example>

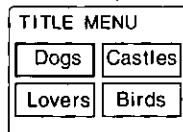

If an interactive DVD^{*1} or a Video CD with playback control^{*2} is used and a **TITLE MENU** appears, go to step 5.

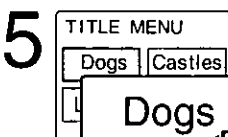

Press **▲▼◀▶** or **number key(s)** (see below) to select title and press **SET** to play.

Using **number key(s)** starts play automatically.

<Example> 1 digit number 1 *** 1
2 digit number 12 *** ≥10 ->1 ->2
3 digit number 123 *** 100 ->1 ->2 ->3


Press **SKIP ▶▶** or **◀◀** to go to next or previous menu screen.

- SKIP function not available with all discs. Please refer to disc jacket for operation information.

To return to **MENU (play stops)**, Press **TITLE**, **MENU**, or **RETURN**. (DVD)
Press **RETURN**. (Video CD)

6 Press **STOP** to stop play.

7 Press **OPEN/CLOSE** to eject the disc.

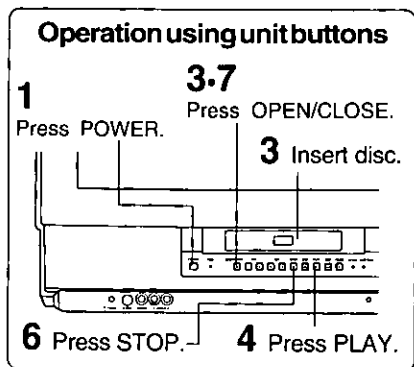

*1 Interactive DVD...

May include multiple camera angles, stories, etc.

*2 Video CD with playback control...

Particular scenes or information can be interactively selected from a menu that appears on the screen.

*Important: If a remote control button does not work when pressed, press the DVD button on the remote and try the button again.

■ Forward/Reverse rapid scene search

-> Press **SEARCH** **▶▶** or **SEARCH** **◀◀** during play.

-> Press **PLAY** to release.

- Starting forward/reverse search during play started from menu on Video CDs may recall menu.
- Search speed, slow at first, increases with each additional press of the button up to 5 levels.

■ Forward/Reverse Chapter/Track Skip


Press **SKIP** **▶▶|** or **|◀◀** during play.

Each press skips a chapter (DVD) or track (Video CD/CD).

- Pressing **|◀◀ SKIP** once midway through a chapter/track returns to start of that chapter/track. Each additional press skips back one chapter/track.

- Pressing **SKIP ▶▶|** or **|◀◀** during play started from menu on Video CDs may recall menu.

 Current playback position

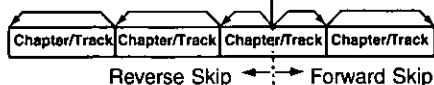

■ Still (Pause) Picture

-> Press **PAUSE** during play.

-> Press **PLAY** to release.

- **DVD/Video CD** : The unit will enter Still picture mode.
- **CD** : The unit will enter Pause mode.

■ Frame by Frame picture (DVD/Video CD)

-> Press **PAUSE** in Still mode.

-> Press **PLAY** to release.


- Each press advances picture one frame.
- Hold down for consecutive frame advance.
- Whether pictures are advanced by "FRAME" or "FIELD" is selected automatically (see page 43).

■ Slow Motion picture (DVD/Video CD)

-> Press **SLOW** **▶▶** or **SLOW** **◀◀** (DVD only) in Still mode.

-> Press **PLAY** to release.

- Slow motion speed, slow at first, is increased with each additional press of the button up to 5 levels.
- Reverse slow motion is not available for video CDs.

- When  appears on the screen while a button is being operated, it means that the corresponding operation is prohibited by the unit or the disc.

Enjoy Video CDs featuring playback control without using menus (Video CDs only)

1. Do steps 1-4 (previous page). When menu appears, press **STOP**.
2. Press number key(s) to select desired track (play begins).
 - Check disc for track numbers.
 - Press "1" to start at beginning of disc.

To Resume Menu use, Press **STOP**, and press **PLAY**, then menu appears. Now, go to step 5 (previous page)

Notes

- Please read the disc jacket for operation information.
- If a single sided disc is placed in upside down, "PLEASE CHECK THE DISC, AND FOR STAINS OR SCRATCHES ON DISC" is displayed.
- Remove disc and press unit **POWER** off when not in use.
- Disc continues to rotate with menu displayed even after play is done. Press **STOP** to clear menu display when finished with menu.


TV Operation

*Important: If a remote control button does not work when pressed, press the TV button on the remote and try the button again.


Ready Check List

- All connections are made.
- Your unit is plugged in.

1 Press **POWER*** on the remote or unit.

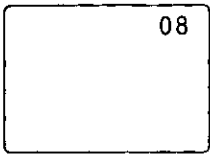2  Use **CH ▲▼** or **number keys** to select a channel.

3  Press **VOL +** or **VOL -** to adjust volume.

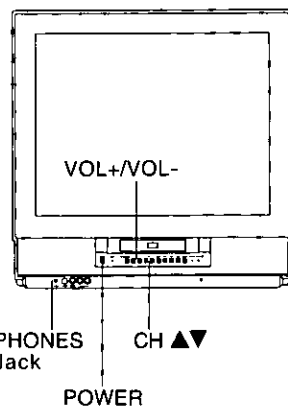

■ Using the 100 key

When selecting CABLE channels 100 to 125 with the number keys, first press the 100 key, and then enter the remaining two digits.

■ Rapid Tune


Press **R-TUNE** to display the last channel you were watching.

■ Audio Mute

Press **MUTE** to instantly mute the sound. Press again to restore the previous sound level.


■ Phones

Connect an earphone (not supplied) or headphones (not supplied) to the Phones Jack.

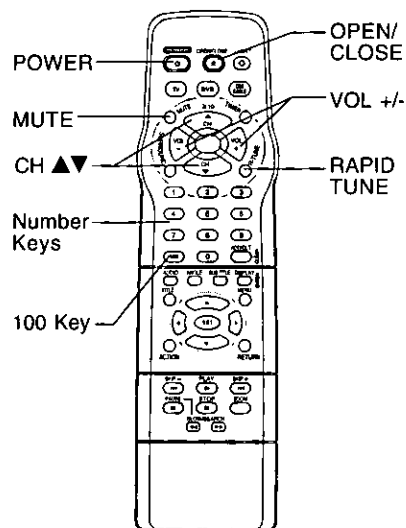

MTS Broadcast/TV Stereo System

Equipped with **dbx**[®] -TV Noise Reduction for true MTS reproduction. **dbx**[®] -TV Noise Reduction is required for good stereo separation and audio fidelity. **dbx**[®] is a registered trademark, and is licensed by **dbx**[®] Technology Licensing.

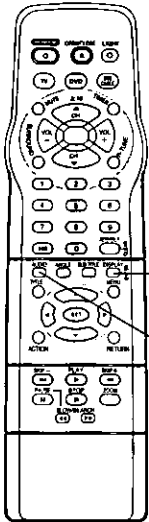


DISPLAY

AUDIO

Receivable Broadcast Types


The following are possible audio broadcast types and on-screen displays. The signal being received is indicated with an "Ⓢ" mark while the selected audio mode is indicated with an arrow. To change the audio mode for these broadcasts, see the "Select Audio Mode for TV Viewing" section (below.)

Press **DISPLAY** to display the broadcast signal being received.

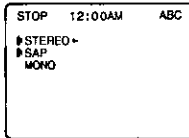

MTS Stereo and SAP broadcast


Multi-channel Television Sound Stereo (main language) and Secondary Audio Program (sub language) broadcasts are being received simultaneously. Select the STEREO or SAP audio mode.

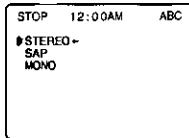

MTS Stereo broadcast

Multi-channel Television Sound Stereo broadcast. Select STEREO audio mode.


- If stereo broadcast is weak and the display flickers, select MONO audio mode for possibly better results.

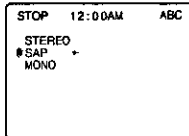

SAP broadcast

Secondary Audio Program (sub language).

Select SAP audio mode for the sub language.

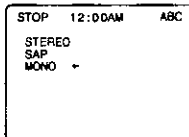

MONO broadcast

Normal monaural sound broadcast.


TV Operation

Select Audio Mode for TV Viewing

Press **AUDIO** to select the desired audio mode as described above. (Arrow shows selection.)

- Each press of AUDIO will change the audio mode as shown below.
- "SAP" is selected with first press of AUDIO.

< Example >

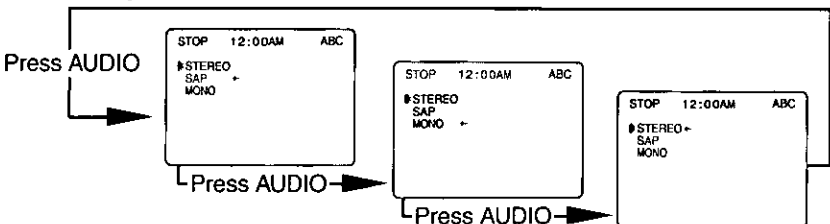

Closed Caption System

Closed Caption is ...

This multi-use system not only allows the hearing impaired to enjoy selected programs, but also makes useful information from TV stations available to everyone.

Closed Caption Mode Feature

1 Press **ACTION*** to display MAIN MENU.

2

1) Press **▲▼◀▶** to select "TV."
2) Press **SET** to display SET UP TV screen.

3

1) Press **▲▼** to select "CAPTION".
2) Press **SET** to display CAPTION screen.

4

1) Press **▲▼** to select CAPTION MODE.
2) Press **SET** repeatedly to select mode. (See left.)

5 Press **ACTION** three times to return to the normal screen.

Closed Caption Mode Selections

Caption Mode: CAP C1 or C2

A narration of selected TV programs is displayed. Check TV program listings for CC(Closed Caption) broadcasts.

Caption Mode: TEXT C1 or C2

The lower half of the screen will be blocked out. When the TV station broadcasts information, such as program listings, it will appear in this space.

Caption Mode: OFF

Closed Caption / Text narration will not be displayed.

NOTE:

The closed caption or text signal may be broadcast over C1, C2, or both. Also, text contents can vary so you may wish to try different settings.


*Important: If a remote control button does not work when pressed, press the TV button on the remote and try the button again.

Caption On Mute Feature

Closed Caption narration, if available, is displayed when MUTE button is pressed for silence.


1 Press **ACTION** to display MAIN MENU.

2

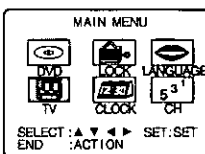


1) Press **▲▼◀▶** to select "TV."
2) Press **SET** to display SET UP TV screen.

3

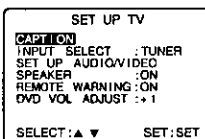


1) Press **▲▼** to select "CAPTION".
2) Press **SET** to display CAPTION screen.

4

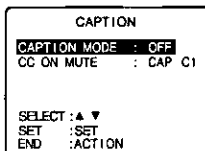


1) Press **▲▼** to select CAPTION MODE.
2) Press **SET** repeatedly to select "OFF."

5

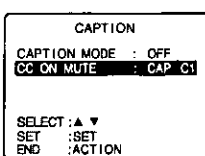

1) Press **▲▼** to select CC ON MUTE.
2) Press **SET** repeatedly to select desired mode.

 
- Each press of **SET** will change the display as shown left.
- The caption may be broadcast over CAP C1 or C2.

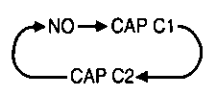

6 Press **ACTION** three times **▲** to return to the normal screen.

7 Press **MUTE** to mute the sound and display closed captioning.

- To cancel, press MUTE again.

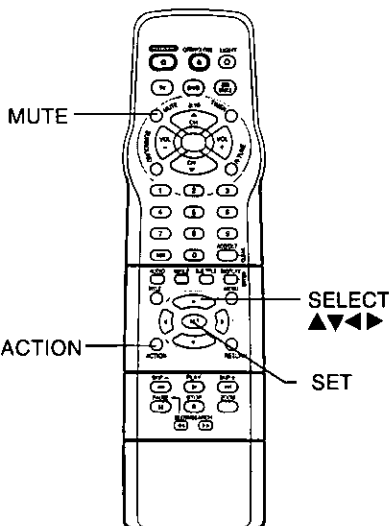

Note


- When a disc supporting closed caption is used, the subtitle and the closed caption may overlap. In this case, turn the subtitle or caption on mute mode off. (See page 32.)

TV Timer Features


ON-TIMER with Alarm

This unit can be set to automatically power on in one of 2 modes (TV, or DVD/Video CD/CD).

1 Press **TIMER*** to display SET TIMER screen.

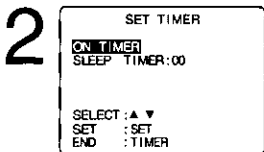


- 1) Press **▲▼** to select "ON TIMER."
- 2) Press **SET** to display ON TIMER screen.

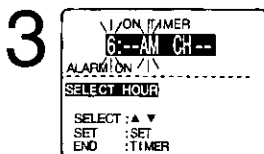


- 1) Press **▲▼** to select desired settings.
- 2) Press **SET** to set the ON-TIMER TIME or ON-TIMER mode.

 • ON-TIMER mode selection order

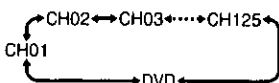

- Make sure a disc is inserted if DVD (DVD/Video CD/CD) mode is selected.

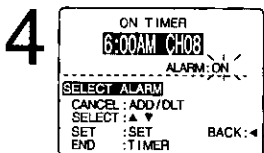

- Press **▲▼** to select ALARM "ON" or "OFF."

When "ON" is selected, an alarm will gradually increase in volume for one minute or until canceled by pressing any button (including VOL + -).

To Make Corrections, use **▲▼** and **◀▶** to move back and correct.

5 Press **TIMER** to set ON TIMER.


- "ON TIMER SET" is displayed.
- ON TIMER Indicator lights on the unit.

To Cancel ON-TIMER set,

Repeat steps 1 and 2. Then, press **ADD/DLT** to clear the time in step 3. Now, press **TIMER** to end. "ON TIMER END" briefly appears on-screen.

Ready Check List


- The clock is set to correct time.

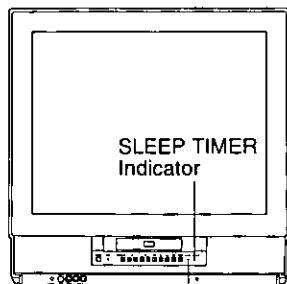

Sleep Timer

This unit can be set for auto power off.

1 Press **TIMER** to display SET TIMER screen.

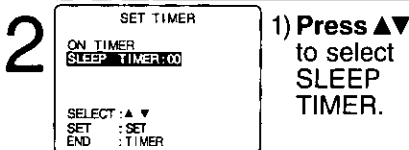

- 1) Press **▲▼** to select SLEEP TIMER.

2) Press **SET** repeatedly to select the desired time.

SLEEP TIMER 30 → 60 → 90 → 00



To cancel, press **SET** repeatedly until 00 appears.

3 Press **TIMER** to return to the normal screen.


- Pressing **DISPLAY** with sleep timer set displays remaining time.
- SLEEP TIMER Indicator lights on the unit.

ON TIMER Note

- When the ON-TIMER starts, the SLEEP TIMER for 60 minutes will start automatically. SLEEP TIMER Indicator lights during SLEEP TIMER.


On-Screen Displays (OSD)

*Important: If a remote control button does not work when pressed, press the TV button on the remote and try the button again.

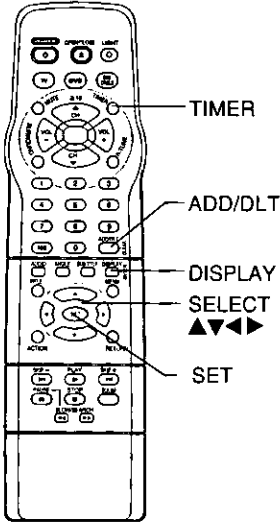

TV Status & Clock Display

Press **DISPLAY** to display or remove the overlay.

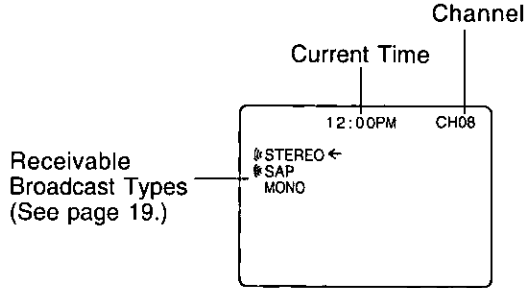


Blue Screen Display

Whenever the selected channel has no broadcast signal with the Weak Signal Display Feature set to "OFF" (see page 26), the screen will turn solid blue.

Channel Display

When you change channels, the channel number will be displayed.

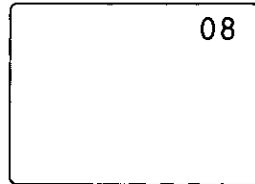

Cable Box Universal Remote Control Feature

Universal Remote Control is...

The Remote Control may be set up to control some basic DSS or Cable box functions.

The Universal Remote Control Setup

1 Find your DSS box or Cable box Brand Code Number from one of the charts on the next page.

2 Setup remote.

Hold down DSS CABLE and press Number Keys to enter code.

- For code 100 or greater, first press 100 key, then the remaining digits. E.g. for 102, press 100, then press 0, and then press 2.


3 Confirm code entry.

Press POWER* to turn selected unit ON or OFF.

- See below for controllable functions in each mode.

Notes

- Please repeat the Universal Remote Control Setup after replacing remote control batteries.
- The remote control will not operate all DSS receivers or Cable Boxes made by the manufactures listed. If you get no results, your particular brand cannot be controlled.

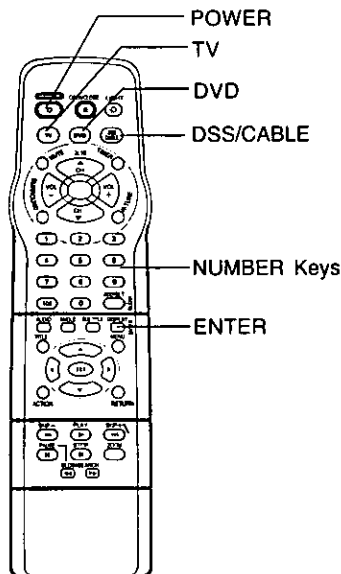

Using the Universal Remote Control

Once the remote control has been properly set up, you can select TV, DVD, DSS or CABLE mode depending on which functions you wish to control. (See below.)

Press TV or DVD, or DSS CABLE on the remote control to select the desired mode. (See below for buttons available in each mode.)

Set to TV, DVD:

- All TV and DVD functions.

Set to DSS CABLE:

- CABLE/DSS functions, e.g. POWER, ENTER, Number Keys (except 100 key), CH UP/DOWN.

DSS Brand Code Numbers

Toshiba	90	Optimus	94, 95
Hitachi/ Hughes	91, 99	Panasonic	96
Primestar	92	ProScan	97
Drake	93	RCA	97
Magnavox	94, 95	SONY	98, 105
Uniden	94, 95		

Cable Box Brand Code Numbers

Archer	44, 06, 01, 120, 05, 63, 126	Oak Sigma	46, 11, 129, 101
Cableview	29, 09, 01, 63, 120, 44, 42, 30, 52, 04, 124, 126	Panasonic	17, 16, 08, 87, 109
Citizen	44, 52, 30, 63, 42, 04, 124, 126	Phillips	23, 24, 20, 13, 07, 50, 128, 129
Curtis	08, 09, 25, 61, 53, 87	Pioneer	06, 05, 12
Century	44, 51, 75, 59, 126	Pulsar	04, 42, 63, 44, 30, 52, 124, 126
Cabletenna	29, 09, 01, 63, 120, 44, 126	Quest	06, 05, 12
Cable Cinema	29, 09, 01, 63, 120, 44, 126	Radio Shack	44, 51, 75, 59, 126
Diamond	29, 09, 01, 63, 120, 44, 126	RCA	17, 16, 08, 87, 109
Eagle	62, 40, 22, 13, 58, 20, 26, 107	Realistic	44, 51, 75, 59, 126
Eastern	28, 29, 130	Recoton	44, 51, 75, 59, 126
Explorer	08, 09, 25, 61, 53, 87	Regal	41, 14, 15, 28, 102, 104, 103, 130
Gemini	30, 04, 124	Regency	28, 29, 130
General Electric	01, 57, 120	Rembrandt ..	44, 42, 63, 29, 01, 32, 39, 120, 126
General Instruments ...	01, 84, 83, 34, 03, 02, 04, 55, 65, 66, 67, 68, 120, 106, 121, 122, 115, 117, 118, 124	Samsung	42, 06, 32, 05, 40
Gerrard	44, 51, 75, 59	Scientific Atlanta	08, 09, 25, 61, 53, 87
GC Electronics	44, 42, 63, 29, 30, 52, 04, 124, 126	Sheritech	27
Hamlin	41, 14, 15, 28, 102, 104, 103, 130	Signal	26, 112
Hitachi	31	SL Marx	42, 06, 32, 40, 43, 44, 52, 63, 126
Jerrold	01, 84, 83, 34, 03, 02, 04, 55, 65, 66, 67, 68, 120, 106, 121, 122, 115, 117, 118, 124	Sprucer	17, 16, 08, 87, 109
Jasco	30, 04, 124	Standard Components	32, 39, 42, 44, 126
Macom	31	Stargate	04, 42, 32, 40, 63, 44, 30, 52, 06, 124, 126
Magnavox	26, 112	Sylvania	19, 18
Matsushita	17, 16, 08, 87, 109	Teknika	74, 35
Movietime	32, 39, 42, 44, 126, 38, 40	Telecaption	77, 127
Maestro	74, 35	Television	40, 19, 38, 32, 42, 06
NEC	40, 19, 38, 32	Texscan	19, 18
NSC	40, 19, 38, 32	Tocom	34, 33, 01, 42, 66, 120
Novavision	08, 09, 25, 61, 53, 87	Toshiba	36
Next Level	01, 84, 83, 34, 03, 02, 04, 55, 65, 66, 67, 68, 120, 106, 121, 122	Unika	44, 42, 63, 29, 01, 126, 120
Oak	46, 11, 129, 101	Universal	52, 43, 44, 63, 42, 126
		Viewstar	62, 40, 22, 13, 58, 20, 26, 107
		Videoway	07, 23, 50, 129
		Vidtek	64
		Zenith	07, 23, 50, 129

Notes

- In DSS or CABLE mode, it may be necessary to press DISPLAY/ENTER after pressing number keys for channel selection.
- In DSS or CABLE mode, POWER, CH Up/Down, Number Keys, ACTION, TIMER, DISPLAY/ENTER, SEARCH, SKIP+/-, R-TUNE, SELECT, SET, ZOOM, ANGLE, AUDIO, TITLE, MENU, or ADD/HLT are not available. Press TV, DVD to use these functions.
- Depending on your DSS receiver or Cable box brand, some of the functions listed may not be remote controllable.
- Some DSS receiver or Cable box brands require you to turn on the power manually.
- Due to changes in infra-red commands used by manufacturers, some brands have several codes. If your unit does not respond to the first code, please try the next one.


Special Features

*Important: If a remote control button does not work when pressed, press the TV button on the remote and try the button again.


Weak Signal Display ON/OFF

When "ON" is selected, the picture is displayed even when a broadcast signal is weak or non-existent.

- 1 Press **ACTION*** to display MAIN MENU.

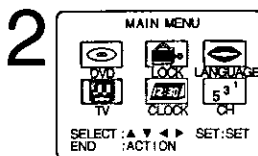

- 1) Press **▲▼◀▶** to select "CH."
- 2) Press **SET** to display SET UP CHANNEL screen.

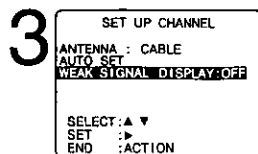

- 1) Press **▲▼** to select WEAK SIGNAL DISPLAY.
- 2) Press **SET** to set "ON" or "OFF."

Notes

- "ON" = Picture is displayed regardless of signal condition, and may not always be clearly visible.
- "OFF" = Screen turns solid blue when signal is absent or weak.
- If unit is connected to equipment which has blue back feature, selecting "ON" will have no effect on the other equipment.

- 4 Press **ACTION** twice to return to the normal screen.

Surround Sound System

You can hear a deeper, 3-D sound effect using just the unit's two front speakers.

Set Surround sound.



Press **SURROUND**.
• "SURROUND ON" is displayed.

To Cancel, press **SURROUND**.


Notes

- Surround sound effect is not available for normal (mono) broadcasts.
- The surround effect (TV mode only) is not output to Audio Output L/R Connector.


Remote Warning ON/OFF

When Universal Remote Control (page 24) is used, and this feature is set to "ON," a warning appears whenever an invalid key is pressed in DSS or Cable mode.

- 1 Press **ACTION** to display MAIN MENU.

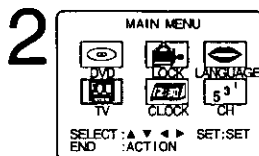

- 1) Press to select "TV."
- 2) Press **SET** to display SET UP TV screen.

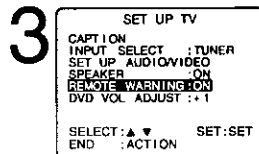

- 1) Press **▲▼** to select REMOTE WARNING.
- 2) Press **SET** to set "ON" or "OFF."


- "REMOTE WARNING : OFF"

-> Remote warning will not appear even if invalid key is pressed.

- 4 Press **ACTION** twice to return to normal screen.

DVD Volume Adjust

- 1 Repeat steps 1 and 2 on "Remote Warning ON/OFF" section above.

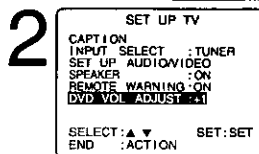

- 1) Press **▲▼** to select DVD VOL ADJUST.
- 2) Press **SET** to set the level (0, +1, or +2).


- 3 Press **ACTION** twice to return to normal screen.

Special Features/V-Chip Control


Speaker ON/OFF System

Allows you to turn off the speaker of the unit when it is connected to external audio equipment.

- 1 Press **ACTION** to display MAIN MENU.

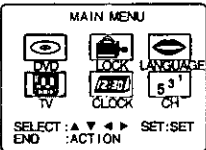- 2  1) Press **▲▼◀▶** to select "TV".

- 2) Press **SET** to display SET UP TV screen.

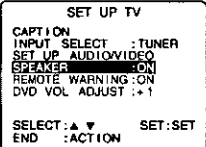- 3  1) Press **▲▼◀▶** to select **SPEAKER**.

- 2) Press **SET** to set "ON" or "OFF."
 - "OFF" → **MUTE** and **VOL+/-** buttons do not function

- 4 Press **ACTION** twice to end setup.

Auto Operation Functions

■ Auto Shut Off

No broadcast signal in TV mode, DVD stop for 5 minutes


→ Power turns off

- This feature is canceled if any button is pressed during above conditions.

Selecting Input Mode

Method 1:

 Press **CH ▲▼**. The display will change as follows.

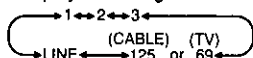

Method 2:

- Press **ACTION** for MAIN MENU.
- Press **▲▼◀▶** to select "TV", then press **SET** for SET UP TV screen.
- Press **▲▼** to select "INPUT SELECT," and then press **SET** to select "TUNER" or "LINE."
- Press **ACTION** twice to exit this mode.

Process of V-Chip Control Feature

Enter Code → **Setup** → **Blocking**


V-Chip Control Feature is...


This unit has a built-in V-Chip Control which allows you to block unwanted TV usage based on US MOVIES and US TV PROGRAMS Ratings.

Enter Secret Code

A 4-digit code must be entered to view a blocked program or change rating settings.


- 1 Press **ACTION** to display MAIN MENU.

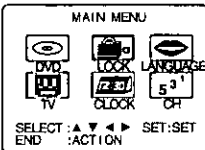- 2  1) Press **◀▶** to select **LOCK**.
2) Press **SET** to display screen.

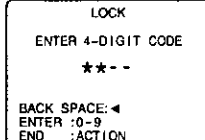- 3  1) Press **Number Keys** to enter your secret code.
2) Enter same code again for confirmation.

To Make Corrections, Press **◀** repeatedly to move the cursor. Press number keys to make the correction.

- Step 2) not necessary when changing rating or secret code.
- Take care that you are not observed entering the secret code.

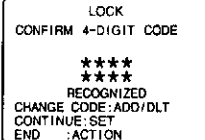- 4  Press **SET** to display US Ratings menu (see page 28).
Or
Press **ACTION** Twice to exit.

Changing your secret code

- You will need your current code. Do steps 1 - 3. In step 4, press **ADD/DLT** to clear current code. Repeat steps 3 and 4 to enter new code.

Notes

- DO NOT forget your secret code.
- Once ratings are set, restricted tapes or programs cannot be accessed unless the secret code is entered.

V-Chip Control Feature (continued)

If LOCK menu is not displayed, do "Enter Secret Code" steps on page 27.

Process of V-Chip Control Feature

Enter Code → Setup → Blocking

Setup US MOVIES Ratings

1

LOCK	
US MOVIES	:OFF
CHANGE SETTINGS	
US TV PROGRAMS	:OFF
CHANGE SETTINGS	
DVD LOCK	:OFF
CHANGE SETTINGS	
SELECT:▲▼	SET:SET
END	:ACTION

- 1) Press ▲▼* to select US MOVIES.
- 2) Press SET to set "ON" or "OFF."

- "ON" V-Chip Control is activated.
- "OFF" V-Chip Control is deactivated.

Note

* "NEXT PAGE" displays CANADIAN V-Chip setting menu. Not necessary except when viewing Canadian tapes or broadcasts.

Setup US TV PROGRAMS Ratings

1

LOCK	
US MOVIES	:OFF
CHANGE SETTINGS	
US TV PROGRAMS	:OFF
CHANGE SETTINGS	
DVD LOCK	:OFF
CHANGE SETTINGS	
SELECT:▲▼	SET:SET
END	:ACTION

- 1) Press ▲▼ to select US TV PROGRAMS.
- 2) Press SET to set "ON" or "OFF."

- "ON" V-Chip Control is activated.
- "OFF" V-Chip Control is deactivated.

2

LOCK	
US MOVIES	:OFF
CHANGE SETTINGS	
US TV PROGRAMS	:OFF
CHANGE SETTINGS	
DVD LOCK	:OFF
CHANGE SETTINGS	
SELECT:▲▼	SET:SET
END	:ACTION

- 1) Press ▲▼ to select CHANGE SETTINGS.
- 2) Press SET to display screen.

2

LOCK	
US MOVIES	:OFF
CHANGE SETTINGS	
US TV PROGRAMS	:OFF
CHANGE SETTINGS	
DVD LOCK	:OFF
CHANGE SETTINGS	
SELECT:▲▼	SET:SET
END	:ACTION

- 1) Press ▲▼ to select CHANGE SETTINGS.
- 2) Press SET to display screen.

3

VIEW NR PROGRAMS? : YES	
G	UNLOCKED
PG	
PG-13	
R	
NC-17	
X	
CONTAINS NO RATING	
SELECT:▲▼	SET:SET
END	:ACTION

- 1) Press ▲▼ to select VIEW NR PROGRAMS?.
- 2) Press SET to set "YES" or "NO."

NR (Not Rated) PROGRAMS

Some movies, such as old movies or foreign movies usually have no ratings.

3

VIEW NR PROGRAMS? : YES	
TV-V7	FV UNLOCKED
TV-G	
TV-PG	V S L D
TV-14	V S L D
TV-MA	V S L D
CONTAINS NO RATING	
SELECT:▲▼	SET:SET
END	:ACTION

- 1) Press ▲▼ to select VIEW NR PROGRAMS?.
- 2) Press SET to set "YES" or "NO."

NR (Not Rated) PROGRAMS

Some TV shows, such as news, sports, weather, bulletins, emergency information usually have no ratings.

4

VIEW NR PROGRAMS? : YES	
G	UNLOCKED
PG	
PG-13	
R	
NC-17	
GENERAL AUDIENCE	
SELECT:▲▼	SET:SET
END	:ACTION

- Press ▲▼ to select and SET to set ratings to be blocked. (See ratings chart next page.)

4

VIEW NR PROGRAMS? : YES	
TV-V7	FV UNLOCKED
TV-G	
TV-PG	V S L D
TV-14	V S L D
TV-MA	V S L D
FOR ALL CHILDREN	
SELECT:▲▼	SET:SET
END	:ACTION

- Press ▲▼ to select and SET to set ratings to be blocked. (See ratings charts next page.)

Note

- You may select from standard TV ratings (chart 1), or customize to a specific content rating (chart 2).

- Ratings highlighted in Green will be blocked. Ratings in white letters will not be blocked.

- 5) Press ACTION to redisplay LOCK menu and continue with US TV PROGRAMS Ratings Setup (this page). Or, press ACTION three times to exit.

- 5) Press ACTION three times to exit this mode.


Important: If a remote control button does not work when pressed, press the TV button on the remote and try the button again.

Process of V-Chip Control Feature

Enter Code → **Setup** → **Blocking**

Blocking Message

<When V-Chip Control is activated>

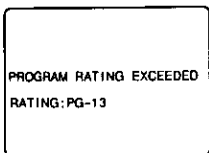


- If a program or movie exceeds the ratings you have set, a message will appear on a black background and sound is muted.

To View a Blocked Program/Movie

[Deactivate V-Chip Control]

Enter your secret code (steps 1-4 page 27). Then, set **US MOVIES** and/or **US TV PROGRAMS** to "OFF" using **▲▼** and **SET**. (Ratings set on page 28 is retained and will be in effect when V-Chip Control is activated again.)

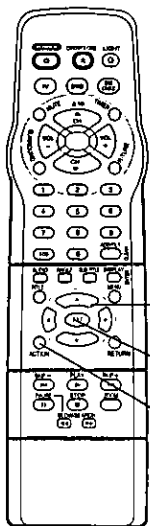

SELECT
▲▼◀▶

SET

ACTION

US MOVIES RATINGS

G	GENERAL AUDIENCE: All ages admitted.
PG	PARENTAL GUIDANCE: Some material may not be suitable for children.
PG-13	PARENTS CAUTIONED: Some material may be inappropriate for children under 13.
R	RESTRICTED: Children under 17 must be accompanied by a parent or adult.
NC-17	OVER AGE 17 ONLY: No one 17 and under admitted.
X	ADULTS ONLY:

US TV PROGRAMS RATINGS: Chart 1

TV-Y	FOR ALL CHILDREN: Content specifically geared to young viewers ages 2-6.
TV-Y7	FOR AGE 7 AND OLDER: May contain mild physical or comedic violence which may frighten children under 7.
TV-G	GENERAL AUDIENCE: Contains little or no violence, strong language, or sexual dialogue or situations.
TV-PG	PARENTAL GUIDANCE: May contain infrequent coarse language, limited violence, some suggestive sexual dialogue and situations.
TV-14	PARENTS CAUTIONED: May contain sophisticated themes, sexual situations, strong language, and more intense violence.
TV-MA	MATURE AUDIENCE: May contain mature themes, profane language, graphic violence, and sexual situations.

Advanced Operation

US TV PROGRAMS RATINGS: Chart 2

FV	Fantasy Violence
V	Violence
S	Sexual Situations
L	Adult Language
D	Sexually Suggestive Dialogue


Audio/Video Menu

*Important: If a remote control button does not work when pressed, press the TV button on the remote and try the button again.

This feature allows easy setting of picture and sound suitable for each program source.


Audio Menu

1 Press **ACTION*** to display MAIN MENU.

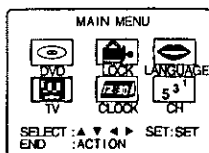


- 1) Press **▲▼◀▶** to select "TV."
- 2) Press **SET** to display SET UP TV screen.

3 Press **▲▼** to select "SET UP AUDIO/VIDEO." Press **SET** to display.

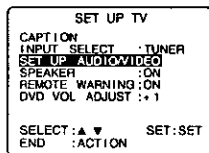

- 1) Press **▲▼** to select "SET UP AUDIO/VIDEO."
- 2) Press **SET** to display.

4 Press **▲▼** to select "AUDIO MENU." Press **SET** repeatedly to select desired mode. (See below.)

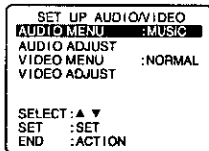


- 1) Press **▲▼** to select "AUDIO MENU."
- 2) Press **SET** repeatedly to select desired mode. (See below.)

5 Press **ACTION** three times to end setup.

[Audio Menu]


- **NORMAL**
- **AUTO [Audio AGC (Auto Gain Control)]**
The sound level is automatically adjusted to suit the program source (see below).
- **MOVIE**
Sound suited to movies.
- **MUSIC**
Sound suited to music. (Factory setting)
- **SPEECH**
Sound suited to dialog.

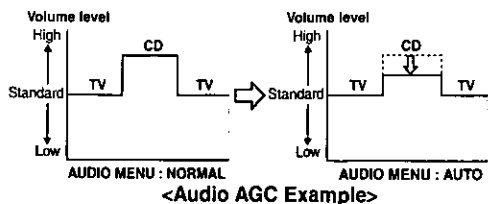

Video Menu

a Do steps 1 - 3 left.

b Press **▲▼** to select "VIDEO MENU." Press **SET** to select desired mode. (See below.)

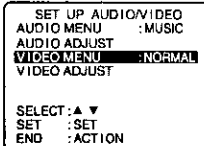


- 1) Press **▲▼** to select "VIDEO MENU."
- 2) Press **SET** to select desired mode. (See below.)

c Press **ACTION** three times to end setup.

[Video Menu]

- **NORMAL**
Factory setting.
- **MOVIE**
Picture is adjusted for a Movie-like feel.
- **NIGHT**
Color and picture intensity are adjusted to be easier on the eyes for night viewing.

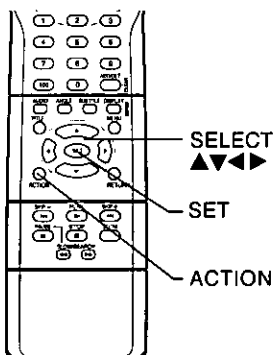

Notes

- The effects of this feature on the signal is not output to the Audio/Video Output Connector.
- When AUDIO MENU mode is "AUTO," the AUDIO ADJUST setting will be "STANDARD."
- AUDIO MENU settings remain in memory.
- VIDEO MENU settings do not remain in memory.

Audio/Video Adjustment

Video Adjustment

1 Press **ACTION** to display MAIN MENU.

2

MAIN MENU		
DVD	LOCK	LANGUAGE
TV	FREE CLOCK	5 3 1 CH
SELECT : ▲ ▼ ◀ ▶	SET : SET	
END : ACTION		

1) Press **▲▼◀▶** to select "TV."
2) Press **SET** to display SET UP TV screen.

3

SET UP TV	
CAPTION	TUNER
INPUT SELECT	SET UP AUDIO/VIDEO
SPEAKER ON	VIDEO MENU : NORMAL
REMOTE WARNING ON	VIDEO ADJUST
DVD VOL ADJUST : + 1	
SELECT : ▲ ▼	SET : SET
END : ACTION	

1) Press **▲▼** to select "SET UP AUDIO/VIDEO."
2) Press **SET** to display.

4

SET UP AUDIO/VIDEO	
AUDIO MENU : MUSIC	
AUDIO ADJUST	
VIDEO MENU : NORMAL	
VIDEO ADJUST	
SELECT : ▲ ▼	SET : SET
END : ACTION	

1) Press **▲▼** to select "VIDEO ADJUST."
2) Press **SET** to display.

5

VIDEO ADJUST	
COLOR
TINT
BRIGHTNESS
PICTURE
SHARPNESS
STANDARD
SELECT : ▲ ▼	
ADJUST : ◀ ▶	
END : ACTION	

1) Press **▲▼** to select an item. (See below.)
2) Press **◀▶** to adjust.

To Reset VIDEO Controls, Press **▲▼** and **SET** to select and set "STANDARD." All controls return to their factory settings.

6 Press **ACTION** four times to end setup.

[VIDEO Adjustment]

- **COLOR Control**
Adjust color intensity.
- **TINT Control**
Adjust for natural flesh tones.
- **BRIGHTNESS Control**
Adjust picture brightness.
- **PICTURE Control**
Adjust picture intensity by adjusting both contrast and color level in the proper balance.
- **SHARPNESS Control**
Adjust picture sharpness.

Audio Adjustment

a Do steps 1 - 3 left.

b

SET UP AUDIO/VIDEO	
AUDIO MENU : MUSIC	
AUDIO ADJUST	
VIDEO MENU : NORMAL	
VIDEO ADJUST	
SELECT : ▲ ▼	
SET : SET	
END : ACTION	

1) Press **▲▼** to select "AUDIO ADJUST."
2) Press **SET** to display.

c

AUDIO ADJUST	
BASS
TREBLE
BALANCE
STANDARD
SELECT : ▲ ▼	
ADJUST : ◀ ▶	
END : ACTION	

1) Press **▲▼** to select an item. (See below.)
2) Press **◀▶** to adjust.

To Reset AUDIO Controls, Press **▲▼** and **SET** to select and set "STANDARD." All controls return to their factory settings.

d Press **ACTION** four times to end setup.

[AUDIO Adjustment]


- **BASS Control**
To adjust the intensity of low frequency sound.
- **TREBLE Control**
To adjust the intensity of high frequency sound.
- **BALANCE Control**
To adjust the (L/R) unit speaker output level.
 - The levels set here do not affect other audio equipment when connected to the Audio Output L/R Connector.

Disc Operation

Subtitle Language (DVD only)

You can select a different subtitle language (if offered) than the one set at the Settings for DVD Operation. (See page 41.)

1

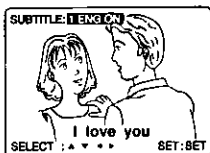

Press SUB TITLE* in Play mode to display the subtitle selection on-screen.

- Display disappears after 5 seconds.
- When no subtitles are offered, “-” will be displayed instead of the language number.

2



- 1) Press **▲▼** to select desired language.
- 2) Press **▶** (or **◀**) to set.
- 3) Press **▲** (or **▼**) to select “ON” or “OFF.”

Number of subtitle language being played back.

Notes

- When closed captioning is used along with subtitles, they may overlap. If so, turn one function off. (See page 20 ~ 21.)
- If after several presses of the button the language does not change, language selection is not offered on the disc.
- Subtitles may not change to the selected language immediately.
- When power is turned on again or disc is removed, subtitles revert to initial setting language. If the initial language is not recorded on the disc, the disc's priority language will appear.

Ready Checklist

- Please read “Basic DVD Operation” on page 16.

[Subtitle Language (No.)] [Audio Soundtrack Language (No.)]


ENG	English
FRA	French
DEU	German
ITA	Italian
ESP	Spanish
NLD	Dutch
SVE	Swedish
NOR	Norwegian
DAN	Danish
POR	Portuguese
RUS	Russian
JPN	Japanese
CHI	Chinese
KOR	Korean
MAL	Malay
VIE	Vietnamese
THA	Thai
*	Other

- Change the No. by pressing **▲▼**, and press **SET**.

Audio Soundtrack Language (DVD only)

You can change the audio soundtrack language, selected at the Settings for DVD Operation, to a different language if available. (See page 41.) (This operation works only with discs on which multiple audio soundtrack languages are recorded.)

a

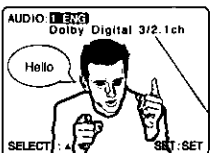

Press AUDIO in Play mode to display the audio selection on-screen.

- Display disappears after 5 seconds.

Audio attribute 1 type, sampling frequency, bit No. of the disc.

b



- 1) Press **▲▼** to select desired language.

Number of the audio soundtrack language being played back.


[Audio Attribute 1 type, Sampling Frequency, Bit No. of the Disc (see page 42)]


LPCM	96KHz or 48KHz	16bit	Linear PCM Disc
		20bit	
Dolby Digital	1ch - 5.1ch	Dolby Digital Disc	
DTS	1ch - 5.1ch	DTS Disc	

Notes

- If, after several presses of the AUDIO button the language does not change, language selection is not offered on the disc.
- When power is turned on again or disc is removed, language reverts to initial setting. If this language is not recorded on the disc, the language recorded will be heard.

***Important:** If a remote control button does not work when pressed, press the DVD button on the remote and try the button again.


When  appears on the screen while a button is being operated, it means that the corresponding operation is prohibited by the unit or the disc.

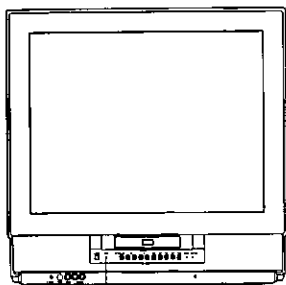

ANGLE Indicator

Notes

- ANGLE Indicator lights up on the unit when a scene recorded at different angles is detected.
- The angle number can be set beforehand so that the angle is switched whenever ANGLE Indicator lights up.

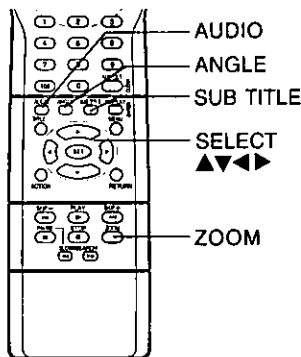


Notes

- Closed captioning will not be displayed while Picture Zoom is used. To see subtitles, set the subtitle feature to ON (see page 32).
- The subtitle cannot be enlarged nor can it's position be changed.
- The picture zoom feature does not work with a Video CD.
- During picture zoom, "ZOOM1" or "ZOOM2" is displayed on-screen.
- Zooming, on some discs, may result in poor picture quality, or not operate.


Multiple Angle Viewing (DVD only)

DVDs may contain scenes shot from multiple camera angles allowing the same scene to be viewed at different angles. You can view these angles, if available, using the ANGLE button.

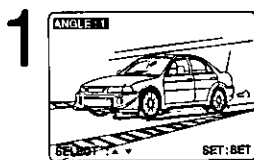

Press ANGLE in Play mode to display the angle selection on-screen.

- Display disappears after 5 seconds.

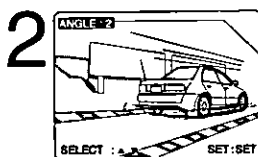


Press ▲▼ to select the desired angle.

- Number of angle being played back.

Vocal Selection for Karaoke Discs (DVD/Video CD)

a Press AUDIO in Play mode to display the audio screen.

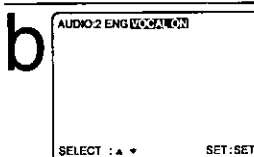

- 1) Press ▲▼ (or ◀▶) to select as shown below.
- 2) Press ▶ (or ◀) to set. (DVD only)

- DVD Karaoke (1 vocal) VOCAL ON ↔ VOCAL OFF
- DVD Karaoke (2 vocals) V1 + V2 → V1 → V2 → VOCAL OFF
- Video CD LR → L → R

Advanced Operation


Picture Zoom (DVD only)

You can enlarge specific portions of a picture and select the zoom ratio using the ZOOM button on the remote during DVD playback.

Set Zoom size.

Press ZOOM repeatedly to change display as follows.

- You can enlarge the center portion of the image to one of 2 magnifications.

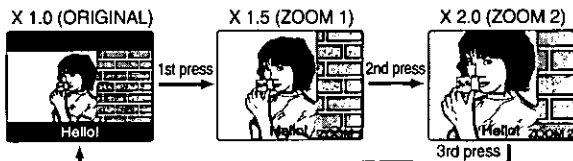


- Use the ▲, ▼, ◀ and ▶ buttons to move the position up, down, left and right.

Disc Operation (continued)

Title menu (DVD only)


Some DVDs have more than one title, e.g. movies. If the disc offers a title menu, you can select the desired title number. (Operation may vary according to the disc.)

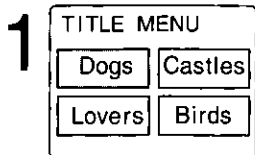

<Example>


Press **TITLE*** in Play mode to display title screen.

- Pressing **TITLE** again resumes play from the scene when **TITLE** was first pressed.

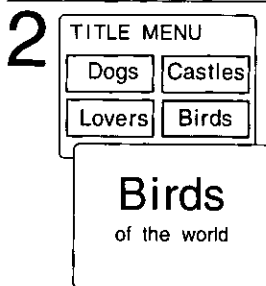


<Example>

- 1) Press **▲▼◀▶** or **number Key(s)** to select a title.
 - 2) Press **SET** or **PLAY** to start play.
- Step 2) not necessary when using Number Key(s).

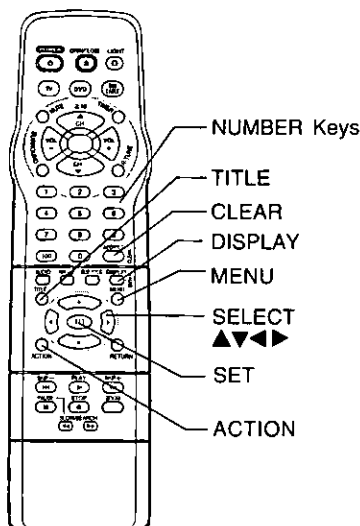

DVD menu (DVD only)


DVDs may offer a special menu. This menu may include guides to unique contents, audio/subtitle languages, etc. Although contents and operation may vary, the following steps show basic steps for using the menu.

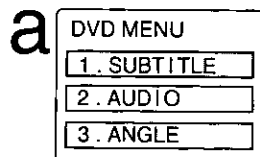

<Example>

Press **MENU** in Play mode to display DVD menu.

- Pressing **MENU** again resumes play from the scene when **MENU** was first pressed.

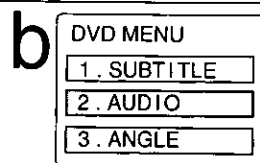

<Example>

- 1) Press **▲▼◀▶** or **number key(s)** to select an item.
- 2) Press **SET** or **PLAY** to access.

- Step 2) not necessary when using Number Key(s).


Repeat step "b" if more than one menu.

***Important:** If a remote control button does not work when pressed, press the TV, DVD button on the remote and try the button again.

Program Play (Video CD/CD)

You can program specific tracks and order of play.


1 Press **ACTION** in Stop mode to display MAIN MENU.

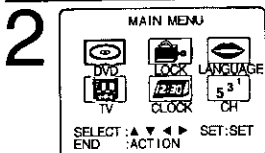


- 1) Press **▲▼◀▶** to select "DVD."
- 2) Press **SET** to display screen.



- 1) Press **▲▼** to select "PLAY MODE."
- 2) Press **SET** to display screen.

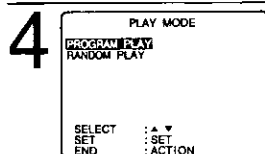


- 1) Press **▲▼** to select "PROGRAM PLAY."
- 2) Press **SET** to display screen.

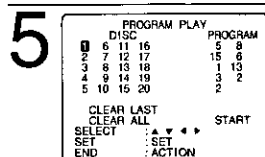

- 1) Press **▲▼◀▶** to select a track number. (Track numbers on disc are displayed.)
- 2) Press **SET** to set.

- Repeat step 5 to select another track.
- The selected track is added on the right side.

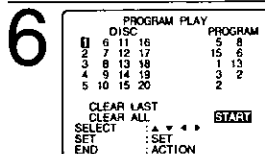

- 1) Press **▲▼◀▶** to select "START."
- 2) Press **SET** to start play of programs in the sequence selected.

- To cancel, press **STOP** during play, then press **CLEAR**.

Notes

- Up to 15 tracks can be programmed.
- "◀" or "▶" (depending on disc) indicates additional PROGRAM PLAY screen. Press **▲▼◀▶** for next or previous screen.
- To clear the last program one by one, Press **▲▼◀▶** to move to "CLEAR LAST" and press **SET**. (Pressing **CLEAR** also clears last program.)
- To clear all programs, Press **▲▼◀▶** to move to "CLEAR ALL" and press **SET**. (Programs are also cleared when the power is turned off or the disc is removed.)


✓ Ready Checklist

- Unit is in TV mode, press TV.
- Video CD or CD is inserted.

Program Repeat Play (Video CD/CD)


a Do steps 1 through 6 on this page.

b Press **DISPLAY** to display Disc Information screen. (Disc Information Screen)

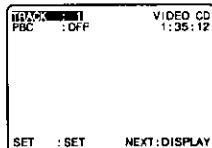


c Press **DISPLAY** again to display Unit Information screen.

d Press **SET** to enter Select mode. ("REPEAT OFF" will flash.) (Unit Information Screen)

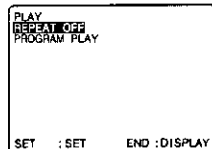

e Press **▲▼** to select "DISC REPEAT."

(Unit Information Screen)

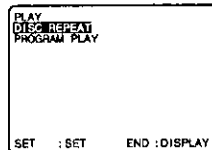

f Press **SET** to set mode. ("DISC REPEAT" stops flashing.)


To cancel, select "REPEAT OFF" in step e, then press **SET**.


Disc Operation (continued)


Random Play (Video CD/CD)

Tracks are played in a random order.

- 1 Press **ACTION*** in Stop mode to display **MAIN MENU**.

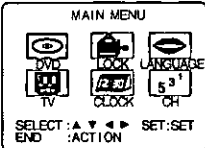
- 2  1) Press **▲▼◀▶** to select "DVD."
2) Press **SET** to display screen.

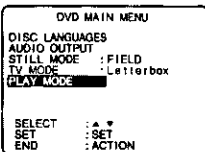- 3  1) Press **▲▼** to select "PLAY MODE."
2) Press **SET** to display screen.

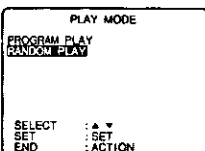- 4  1) Press **▲▼** to select "RANDOM PLAY."
2) Press **SET** to begin random play.
- To cancel, press **STOP** during play, then press **CLEAR**.

*Important:

If a remote control button does not work when pressed, press the TV, DVD button on the remote and try the button again.

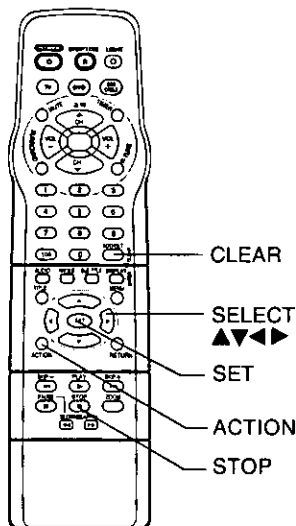

DVD Operation Using On-Screen Displays


When DISPLAY is pressed, On-Screen Displays show disc information (title/chapter/track number, elapsed playing time) and unit information (repeat play, Play mode).

Ready Checklist

- Unit is in DVD mode, press DVD.

1 Press **DISPLAY** in Play or Stop mode to display "On-Screen Display."

- Each press of **DISPLAY** changes the on-screen display as follows. (Please refer to page 38 or 39.)

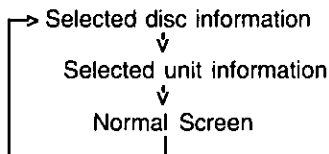


Note

- DISPLAY button does not function while DVD TITLE MENU is displayed.


2 1) Press **▲▼** (or **◀▶**) to select an item.
2) Press **SET** to set.

3 1) Press **▲▼** to select the setting.
2) Press **SET** to set.

<Example of DVD>

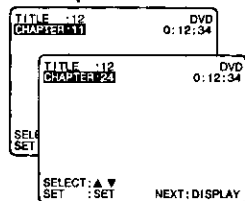

<Example of Video CD>

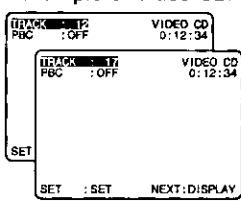


- For some functions the setting will be registered immediately without **pressing SET**.
- When numbers are displayed (e.g. title number), the Number Keys are also available.

To make corrections, press **▲▼** and **SET** repeatedly to move to error, then correct.

- Pressing ▶** is effective for elapsing time instead of the above buttons. **Press ◀** repeatedly to delete the error, then correct.

To return to the normal screen, press **CLEAR** or **DISPLAY** repeatedly.

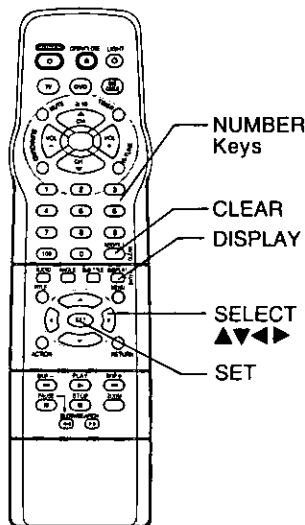

Notes

- When **DISPLAY** is pressed during playback of a Video CD with Playback control, the **Number Keys** are not available on the displayed screen. In this case, **press DISPLAY** again to remove the displayed screen.
- When **⊙** appears on the screen while a button is being operated, it means that the corresponding operation is prohibited by the unit or the disc.

DVD Operation Using On-Screen Displays (continued)

Detailed Descriptions of Each On-Screen Display

Disc Information Screen (for DVD)

1. TITLE No.

- Change the No. by pressing **▲▼** or the **Number Keys**, and press **SET**.

2. Chapter No.

- Change the No. by pressing **▲▼** or the **Number Keys**, and press **SET**.

3. Disc currently being played


4. Elapsed playing time

The screen may be changed by selecting the elapsed time.

- Change the elapsed time by pressing **Number Keys**, and press **SET**.

For "01 : 23 : 45," press **0 -> 1 -> 2 -> 3 -> 4 -> 5**

- This function does not work with some discs.

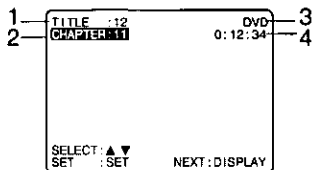

Disc Information Screen (for Video CD/ CD)

A. Track No.

- Change the No. by pressing **▲▼** or the **Number Keys**, and press **SET**.

B. Playback control ON/OFF


[Video CD with playback control only]

ON	Video CD menu play is displayed.
OFF	Video CD menu play is cleared.


C. Disc currently being played


Video CD	CD
----------	----

D. Elapsed playing time

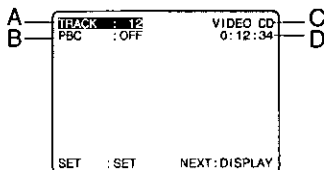

Notes

 - Track No. and elapsed playing time are not displayed during play started from menu of Video CDs with playback control.
- When  appears on the screen while a button is being operated, it means that the corresponding operation is prohibited by the unit or the disc.

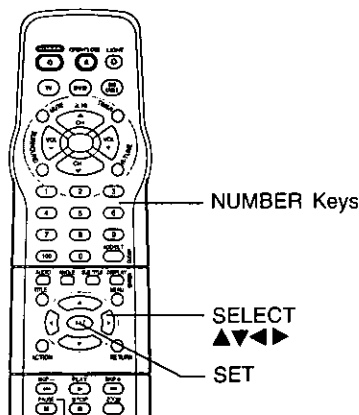

*Important: If a remote control button does not work when pressed, press the DVD button on the remote and try the button again.


Detailed Descriptions of Each On-Screen Display

Unit information screen


• Change the desired mode during play by pressing ▲▼, and press SET.

a. Repeat Play


Video CD/CD	DVD
TRACK REPEAT	CHAPTER REPEAT
DISC REPEAT	TITLE REPEAT
REPEAT OFF	REPEAT OFF

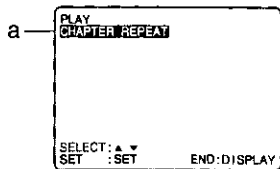

• TRACK/DISC REPEAT PLAY (Video CD/CD)

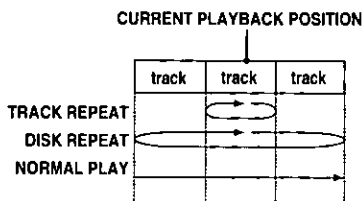


• CHAPTER/TITLE REPEAT PLAY (DVD)

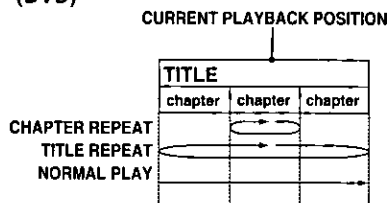

b. Play mode [Video CD/ CD only] (See pages 35 - 36.)

PROGRAM PLAY	program play
RANDOM PLAY	random play
-	normal play

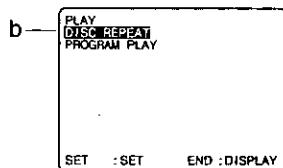

DVD Lock Feature

*Important: If a remote control button does not work when pressed, press the TV, DVD button on the remote and try the button again.

You can prevent playback of DVDs in a specific rating level which may be unsuitable for children.


- Some DVDs are encoded with a rating level. If the disc rating is higher (stricter) than the one you preset, playback will be prohibited.

Caution

Discs not encoded with rating level will play even if the jacket states it is for mature audiences. For these discs, the DVD Lock Ratings will not work.


DVD Lock Ratings (DVD only)

Perform DVD Lock setting in TV mode.
Enter your secret code to display LOCK menu.
(Do "Secret Code" steps on page 27.)

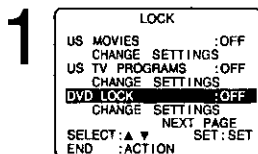


- 1) Press ▲▼* to select "DVDLOCK."
- 2) Press SET to set "ON" or "OFF."

- "ON" -> DVD Lock is activated.
- "OFF" -> DVD Lock is deactivated.

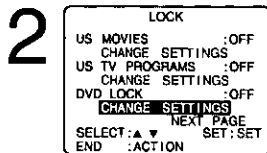

- 1) Press ▲▼ to select "CHANGESSETTINGS."
- 2) Press SET to display screen.

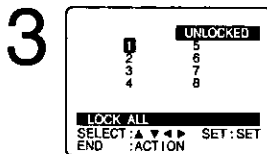

- 1) Press ▲▼◀▶ to select rating level.
- 2) Press SET to select "LOCKED" or "UNLOCKED."

LEVEL 1: LOCK ALL: Playback of all DVDs, CDs and Video CDs is prohibited. (Use to prohibit play of mature theme DVDs not encoded with rating level.)


LEVEL 2: DVDs expressly for children can be played back.

LEVEL 3 to 7:


DVDs for general audiences/children can be played back. (DVDs with mature content are prohibited.)

LEVEL 8: NO LIMIT: (Factory preset)
All DVDs can be played back.

- Ratings which are highlighted in Green will be blocked; those not highlighted (white letters) will not be blocked.

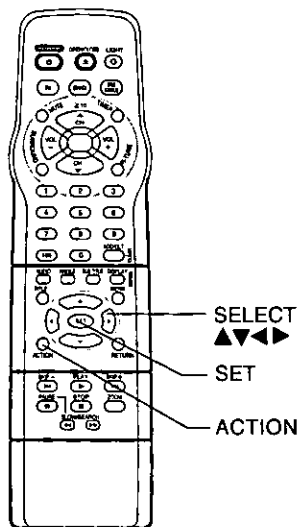

<When DVD Lock is activated>

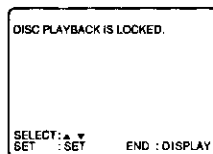


To change DVD LOCK settings

After entering your secret code in step 3 on page 27, select "OFF" to deactivate DVD Lock or change the rating level.

4 Press ACTION three times to end setup.

Settings for DVD Operation

- 1** Press **ACTION** in Stop mode to display MAIN MENU.

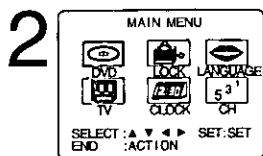

- 1) Press **▲▼◀▶** to select "DVD."
2) Press **SET** to display screen.



- 1) Press **▲▼** to select an item.
2) Press **SET** to set.

DISC LANGUAGES (See below.)

Any languages offered on the disc can be set. If a language not offered is set, the original disc language will be selected.

AUDIO OUTPUT (See page 42.)

You can set the audio output that comes from the digital audio output terminal.

STILL MODE (See page 43.)

To select "FIELD" or "FRAME" to prevent jitter or to make small text or fine patterns clearly visible in a still picture. When "AUTO" is set, "FIELD" or "FRAME" is selected automatically.

TV MODE (See page 43.)

To select whether the video material for a wide-screen will be played back in Pan & Scan style or in Letterbox style.

Disc Language (DVD only)

To select and set the language of the audio soundtrack, subtitles, or title/DVD menus for all discs to be played.



- 1) Press **▲▼** to select "DISC LANGUAGES."
2) Press **SET** to display screen.



- 1) Press **▲▼** to select an item.
2) Press **SET** repeatedly for desired language. (Please refer right.)

- 6** Press **ACTION** to redisplay DVD menu and go to step 3 to setup another item. Or, press **ACTION** three times to exit.

Once initial settings are done, they remain in memory (even after the power is off) until changed. This means the unit will always operate under the same conditions (especially DVDs) each time.

Ready Checklist

- Unit is in TV mode, press TV.

"AUDIO" selections

To select the audio soundtrack language. (factory preset: English)

English/Spanish/French

Original: Original disc language

Other **:** Other language selection*1

"SUBTITLE" selections

To select the subtitle language. (Factory preset: AUTO)

AUTO: Same language selected for "AUDIO"

- If language set for "AUDIO" is used in playback, subtitles will not appear.
- If another language is used during playback, the subtitles will appear in the language selected at "AUDIO" setup.

English/Spanish/French

Other **:** Other language selection*1

"MENUS" selections

(Factory preset: English)

To select the language used in title menus or DVD menus.

English/Spanish/French

Other **:** Other language selection*1

To enter **OTHER ****** code number, Press number keys (Please refer to language codes on page 46).

To make corrections, press **◀** repeatedly to delete language code number, and correct.

*1 If the selected language is not offered, the original disc language is selected.

Settings for DVD Operation (continued)


AUDIO OUTPUT

Select the digital output to be output from the optical digital audio output connector of the unit.

1 Do steps 1 and 2 on page 41.



- 1) Press **▲▼*** to select "AUDIO OUTPUT."
- 2) Press **SET** to display screen.

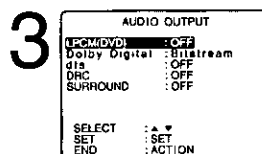

- 1) Press **▲▼** to select an item.
- 2) Press **SET** repeatedly for output. (See below.)

■ "LPCM (DVD)" selections

OFF: Linear PCM of less than 48 kHz/16 bit is output. When playing DVDs recorded in linear PCM of over 48 kHz/20 bit or 96 kHz, no digital audio is output. (Factory preset)

PCM: When playing DVDs recorded in linear PCM of 48 kHz/20 bit/24 bit or 96 kHz, digital audio converted to 48 kHz/16 bit is output. (Digital output of PCM audio is restricted to 48 kHz/16 bit or below for copyright protection.)

■ "Dolby Digital" selections

Bitstream: Dolby Digital bitstream (1ch-5.1ch) is output. (Factory preset)

OFF: No output.

■ "dts" selections

Bitstream: dts bitstream is output. (Factory preset)

OFF: No output.

■ "DRC (Dynamic Range Compression)" selections

OFF: Normal audio range is selected. (Factory preset)

ON: For dynamic sound even at low volume, this is useful for late-night listening. [Dolby Digital DVDs only].

■ "SURROUND" selections

Surround Sound creates the effect of sound coming from non-existent rear speakers even when only connected to a 2-channel stereo system.

OFF: No Surround Sound effect. (Factory preset)

ON: Surround Sound effect.

Type of amplifier to be connected	Recommended setting		
	LPCM (DVD)	Dolby Digital	dts
No amplifier is connected	OFF	OFF	OFF
AV amplifier (with digital audio input connector) without Dolby Digital/dts decoder	PCM ¹	OFF ²	OFF ²
AV amplifier including Dolby Digital decoder	PCM ¹	Bitstream	OFF
AV amplifier including Dolby Digital/dts decoder	PCM ¹	Bitstream	Bitstream ¹¹

- Make settings according to amplifier connected to optical audio output as shown in above table.
- When a dts decoder is not connected, to enjoy dts DVD, please select audio output other than dts at the dts DVD menu screen. Otherwise, there will be no sound from the unit speakers.

*1 Audio output from unit is converted to 48 kHz/16 bit in addition to audio from digital audio output. To enjoy high quality sound at 48 kHz/20 bit /24 bit or 96 kHz, connect the amplifier or decoder directly to the audio output connectors, not to the digital audio output connector. [Select "OFF" at the "LPCM (DVD)".]

*2 When connecting an amplifier (with an optical digital input connector) which does not contain the Dolby Digital or dts decoder, be sure to select "OFF." If "Bitstream" is selected, starting DVD play may cause such a high level of noise as to be harmful to your ears and damage the speakers.

*3 When a dts decoder is connected, please select "Bitstream" in "dts". If "OFF" is selected, there will be no sound.

Notes

- Turn off other surround effects when using this surround effect.
- For optimum effect, the distance between the unit and the listener should be about 3 or 4 times the distance between the right and left front speakers.

4 Press ACTION to redisplay DVD menu and go to step 2 to setup another item. Or, press ACTION three times to exit.

***Important:** If a remote control button does not work when pressed, press the DVD button on the remote and try the button again.

STILL MODE

Set to reduce jitter in a displayed still picture or a motion picture.

1 Do steps 1 and 2 on page 41.




- 1) Press ▲▼ to select "STILL MODE."
- 2) Press SET repeatedly for mode. (See below)

AUTO: "FIELD" (Field still) or "FRAME" (Frame still) is automatically selected during the still mode. (Factory preset)

FIELD: "FIELD" (Field still) is always selected. This setting will reduce jitter when compared with "AUTO" on some discs.

FRAME: "FRAME" (Frame still) is always selected. Some texts and fine patterns will be seen clearly when compared with "AUTO" on some discs.

3 Press ACTION twice to exit this mode.

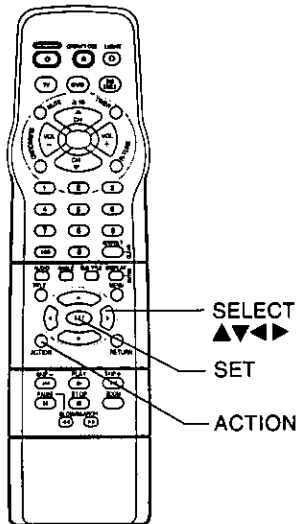

Selecting TV MODE

Set the screen display style for widescreen video material playback.

a Do steps 1 and 2 on page 41.



- 1) Press ▲▼ to select "TV MODE."
- 2) Press SET repeatedly for mode. (See below.)

Pan & Scan : Widescreen video data is played in Pan & Scan style (left and right of screen is trimmed.) (Factory preset)

- Video data not formatted in Pan & Scan will play in letterbox style.

Letterbox : Widescreen video data is played in Letterbox style (top and bottom of screen has black margin).

Example

- Pan & Scan (Factory preset)



- Letterbox



C Press ACTION twice to exit this mode.

Before Requesting Service

Check the following points once again if you are having trouble with your unit.

Power	Correction
No power...	<ul style="list-style-type: none">• Completely insert Power Plug into an AC outlet.• Set POWER button to ON.
Power turns itself off...	<ul style="list-style-type: none">• Auto power-off (shutoff) occurs after about 5 min. in DVD mode with no operation, or if there is no broadcast signal in TV. Turn the power back on. (P. 17, 27)
Monitor	Correction
No picture or sound...	<ul style="list-style-type: none">• Make sure your antenna system (TV or CABLE), is correctly set. (P. 10)• Completely insert Power Plug into an AC outlet.• Set POWER button to ON.
Poor picture with normal sound...	<ul style="list-style-type: none">• Adjust BRIGHTNESS, SHARPNESS, and PICTURE controls in the SET UP Video Adjustment. (P. 31)
Poor sound with normal picture...	<ul style="list-style-type: none">• Adjust VOLUME control. (P. 18)
Poor TV reception...	<ul style="list-style-type: none">• Adjust SHARPNESS and PICTURE controls in the SET UP Video Adjustment. (P. 31)
No color or poor color...	<ul style="list-style-type: none">• Adjust TINT and COLOR controls in the SET UP Video Adjustment. (P. 30, 31)
Ghost (multiple) images...	<ul style="list-style-type: none">• Install a directional antenna.
TV programs cannot be watched...	<ul style="list-style-type: none">• Make sure the selected channel is in unit's memory. (P. 12)
Remote Control	Correction
Unit cannot be controlled...	<ul style="list-style-type: none">• Aim Remote directly at the remote sensor on the unit. (P. 9)• Avoid any object blocking signal path.• Inspect the remote batteries. (P. 4)• Exposing unit remote sensor to direct fluorescent or outdoor light may cause signal interference.
ACTION, SELECT, SET, POWER, etc. buttons cannot be selected...	<ul style="list-style-type: none">• Press TV for TV mode. (P. 24)• Press DVD for DVD mode. (P. 24)• Check remote batteries.

If you cannot resolve the problem, please call the Customer Call Center for product assistance at 1-800-211-PANA (7262.)

To locate an authorized servicenter, please call toll free 1-800-211-PANA (7262.) or send e-mail to : consumerproducts@panasonic.com

DVD/Video CD/CD	Correction
Play fails to start even when PLAY is pressed...	<ul style="list-style-type: none"> • This unit cannot play discs other than DVDs, Video CDs and CDs. • The disc may be dirty and require cleaning.
Play starts but then stops immediately...	<ul style="list-style-type: none"> • Be sure disc is installed with label side up.
Picture is distorted during rapid advance or rapid reverse...	<ul style="list-style-type: none"> • The picture will be somewhat distorted at times: this is normal.
No Forward/Reverse search play...	<ul style="list-style-type: none"> • Some discs may have sections which prohibit Forward/Reverse search. (P. 17)
Play does not start even when title is selected...	<ul style="list-style-type: none"> • Confirm the "DVD LOCK" setting. (P. 40)
Audio soundtrack and/or subtitle language is not the one selected at the initial settings...	<ul style="list-style-type: none"> • If the audio soundtrack and/or subtitle language selected at DVD initial settings does not exist on the disc, it will not be accessible.
No subtitles...	<ul style="list-style-type: none"> • Subtitles appear only when available on disc. • Select "ON" at the "subtitle language" section (P. 32) to display subtitles.
Alternative audio soundtrack (or subtitle) language cannot be selected...	<ul style="list-style-type: none"> • Alternative language cannot be selected with discs which do not contain more than one language. • For some discs, alternative language cannot be selected with the AUDIO or SUB TITLE button. Try selecting it from the DVD menu if available.
Angle cannot be changed...	<ul style="list-style-type: none"> • This function is dependent on software availability. Even if disc has multiple angles, they may be recorded for specific scenes only (ANGLE Indicator on unit lights up). (P. 33)
Miscellaneous	Correction
The disc cannot be removed...	<ul style="list-style-type: none"> • First, unplug unit. Then, prepare a rigid wire (e.g. an extended paper clip, etc.) and, applying moderate force, insert it straight into the hole at the base of the tray. The tray will eject a little. Now, pull the tray all the way out and remove the disc. (P. 7)

Warning and Instruction Displays

These displays will alert you of a missed operation or provide further instructions.

OSD	Caution	Page
NO CH FOUND PLEASE CHECK ANTENNA CABLE CONNECTION THEN PRESS CH UP KEY AGAIN	<ul style="list-style-type: none"> • If no active channels are found for CHANNEL MEMORY... 	10
PLEASE SET CLOCK BEFORE TIMER SETTING	<ul style="list-style-type: none"> • If you attempt to set or review a set the On-Timer and the Clock is not set... 	12
PLEASE CHECK THE DISC, AND FOR STAINS OR SCRATCHES ON DISC	<ul style="list-style-type: none"> • If you press PLAY, or the unit reads data from a stained or scratched disc in DVD mode. Also, if the type of disc is other than DVD, Video CD or CD... 	4

Language Code List

Enter the appropriate code number for the initial settings "AUDIO", "SUBTITLE" and/or "MENU" (see page 45).

Code	Language
6565	Afar
6566	Abkhazian
6570	Afrikaans
6577	Ameharic
6582	Arabic
6583	Assamese
6588	Aymara
6590	Azerbaijani
6665	Bashkir
6669	Byelorussian
6671	Bulgarian
6672	Bihari
6678	Bengali, Bangla
6679	Tibetan
6682	Breton
6765	Catalan
6779	Corsican
6783	Czech
6789	Welsh
6865	Danish
6869	German
6890	Bhutani
6976	Greek
6978	English
6979	Esperanto
6983	Spanish
6984	Estonian
6985	Basque
7065	Persian
7073	Finnish
7074	Fiji

Code	Language
7079	Faroese
7082	French
7089	Frisian
7165	Irish
7168	Scots Gaelic
7176	Galician
7178	Guarani
7185	Gujarati
7265	Hausa
7273	Hindi
7282	Croatian
7285	Hungarian
7289	Armenian
7365	Interlingua
7378	Indonesian
7383	Icelandic
7384	Italian
7387	Hebrew
7465	Japanese
7473	Yiddish
7487	Javanese
7565	Georgian
7575	Kazakh
7576	Greenlandic
7577	Cambodian
7578	Kannada
7579	Korean
7583	Kashmiri
7585	Kurdish
7589	Kirghiz
7665	Latin

Code	Language
7678	Lingala
7679	Laothian
7684	Lithuanian
7686	Latvian, Lettish
7771	Malagasy
7773	Maori
7775	Macedonian
7776	Malayalam
7778	Mongolian
7779	Moldavian
7782	Marathi
7783	Malay
7784	Maltese
7789	Burmese
7865	Nauru
7869	Nepali
7876	Dutch
7879	Norwegian
7982	Oriya
8065	Panjabi
8076	Polish
8083	Pashto, Pushto
8084	Portuguese
8185	Quechua
8277	Rhaeto-Romance
8279	Romanian
8285	Russian
8365	Sanskrit
8368	Sindhi
8372	Serbo-Croatian
8373	Singhalese

Code	Language
8375	Slovak
8376	Slovenian
8377	Samoaan
8378	Shona
8379	Somali
8381	Albanian
8382	Serbian
8385	Sundanese
8386	Swedish
8387	Swahili
8465	Tamil
8469	Telugu
8471	Tajik
8472	Thai
8473	Tigrinya
8475	Turkmen
8476	Tagalog
8479	Tonga
8482	Turkish
8484	Tatar
8487	Twì
8575	Ukrainian
8582	Urdu
8590	Uzbek
8673	Vietnamese
8679	Volapük
8779	Wolof
8872	Xhosa
8979	Yoruba
9072	Chinese
9085	Zulu

Servicenter List

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:
1-800-211-PANA(7262), Monday-Friday 9am-9pm Saturday-Sunday 9am-7pm, EST.
or send e-mail : consumerproducts@panasonic.com

Web Site: <http://www.panasonic.com>
You can purchase parts, accessories or locate your nearest servicenter by visiting our Web Site.

Accessory Purchases:

1-800-332-5368 (Customer Orders Only)
Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032
(6 am to 5 pm Monday - Friday; 6 am to 10:30 am Saturday; PST)
(Visa, Master Card, Discover Card, American Express, Check)

Factory Servicenter Locations

CALIFORNIA

6550 Katella Avenue
Cypress, CA 90630
800 Dubuque Avenue
S. San Francisco,
CA 94080
3878 Ruffin Road
Suite A
San Diego, CA 92123

FLORIDA

3700 North 29th Avenue
Suite 102
Hollywood, FL 33020

GEORGIA

8655 Roswell Road
Suite 100
Atlanta, GA 30350

ILLINOIS

1709 North Randall Road
Elgin, IL 60123

MASSACHUSETTS

60 Glacier Drive,
Suite G
Westwood, MA 02090

MINNESOTA

7850-12th Avenue South
Airport Business Center
Bloomington, MN 55425

OHIO

2236 Waycross Road
Civic Center Plaza
Forest Park, OH 45240

PENNSYLVANIA

2221 Cabot Blvd. West
Suite B
Langhorne, PA 19047

TEXAS

13615 Welch Road
Suite 101
Farmers Branch,
TX 75244

WASHINGTON

20425-84th Avenue
South
Kent, WA 98032

HAWAII

99-859 Iwaiwa Street
Aiea, Hawaii 96701
Phone (808) 488-1996
Fax (808) 486-4369

Service in Puerto Rico

Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/ Factory Servicenter:
Ave. 65 de Infanteria. Km. 9.5 San Gabriel Industrial Park Carolina, Puerto Rico 00985
Phone (787) 750-4300 Fax (787) 768-2910


As of June 2001

Conexión de la antena externa

Desenganche la antena del televisor o de la videograbadora que tuviera anteriormente y conéctela a la parte trasera de la unidad Combinación TV/DVD, como se muestra en el diagrama. Si el sistema de su antena tiene conductores UHF y VHF separados, usted necesita un mezclador de banda UHF/VHF (no viene con el equipo.)

ADVERTENCIA:

Al utilizar cables coaxiales RF del "Tipo tuerca", solo debe apretarse con los dedos. Si se aprieta demasiado los cables pueden resultar dañados.

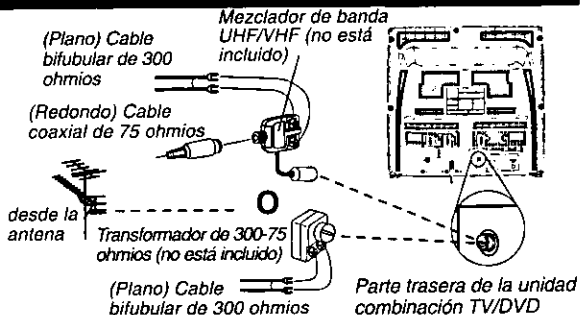

Conexiones de TV cable


Sin un decodificador de TV cable

Podrá;

- ver canales sin codificar.

No Podrá;

- ver canales codificados.

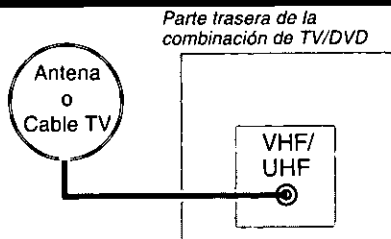


Con un decodificador de TV cable

Podrá;

- ver cualquier canal incluso los canales codificados.

NOTA : El canal deberá ser seleccionado en el decodificador de TV cable.

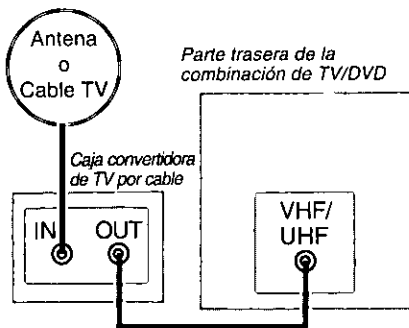

Para ver un canal codificado/ no codificado


Sintonice el canal del Registrador de la combinación de VCR/TV en el canal de salida de la caja convertidora de televisión por cable (por ejemplo el canal 3.) Después, seleccione en el decodificador de TV cable el canal que se quiera ver.

Con un receptor DSS

Podrá;

- ver cualquier canal incluso los canales codificados.

NOTA : El canal deberá ser seleccionado en el receptor DSS.

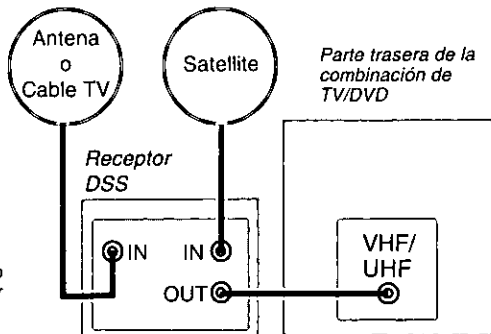

NOTA : El receptor DSS debe estar apagado para ver programas desde un decodificador de TV cable o desde la antena. Consulte el manual del receptor DSS para más detalles.

Para fijar el idioma, canal y reloj

1 Presione **POWER** para encender el videograbador combinado.

2 **SELECT LANGUAGE**
 PRESS CH ▲ : English
 OPRIMIR CH ▼ : Español
 APP. VOL + : Français

Seleccione el idioma.
 CH▲ : para inglés
 CH▼ : para español
 VOL+ : para francés

3 **FIJACION AUTO. (CA/RELOJ)**
 CONECTE EL CABLE DE LA ANTENA Y SI ESTA USANDO UNA CAJA DE TV POR CABLE SINTONICE AL CANAL PBS DE SU LOCAL LUEGO...
 POR FAVOR OPRIMIR CH UP

Comience el ajuste automático de canales y el ajuste automático del reloj.
 Presione CH

Las siguientes informaciones aparecerán seguidamente:

- AUTOPROGRAMACION EN PROCESO
- AUTOPROGRAMACION COMPLETO
- FIJACION AUTOMATICA DEL RELOJ EN PROCESO

2/7/2001 MI E 12:00PM
 HORA VERANIEGA: ACT
 CANAL FIJADO : CA 10
 FIJACION AUTOMATICA
 COMPLETO
 TERMINAR : OPRIMIR CH UP

Completo

Presione CH para salir.

- Si la hora exhibida no es la correcta para su zona, ajuste el reloj nuevamente de acuerdo con la sección "Ajuste del horario de zona" en la siguiente página.

Incompleto

FIJACION AUTOMATICA DEL RELOJ ES INCOMPLETO
 OPRIMIR ACTION PARA FIJAR EL RELOJ

NOTA IMPORTANTE PARA AJUSTE AUTOMATICO DEL RELOJ

- El ajuste automático del reloj será realizado al volver a encender el videograbador combinado cada vez que lo apague. Si usa un decodificador de TV cable y desea que la función de ajuste automático del reloj funcione, el decodificador de TV cable debe quedar encendido y sintonizando el canal PBS en el momento en que se apaga el videograbador combinado.
- Si usa un sintonizador de TV satelital, para que funcione el ajuste automático del reloj, debe de estar apagado.
- Si usa un toma de audio/video para conectar el videograbador combinado y el decodificador de TV cable o el sintonizador de TV satelital, deberá también conectar el cable coaxial RF para poder usar las funciones de ajuste automático de reloj y ajuste automático de canal.
- Si por cualquier razón se cambiara la hora manualmente, no se podrá realizar la corrección automática de la hora.

Incompleto

El ajuste del reloj es incompleto. Ajuste el reloj manualmente.

A

FIJACION AUTOMATICA DEL RELOJ ES INCOMPLETO
 OPRIMIR ACTION PARA FIJAR EL RELOJ

Presione ACTION para salir de este modo.

B

Exhiba el MENU PRINCIPAL. Presione ACTION.

MENU PRINCIPAL

ELEGIR: ▲ ▼ ◀ ▶ ▶▶ FLECHAS
 TERMINAR: ACTION

Exhiba la pantalla "FIJAR RELOJ."

- 1) Presione ▲▼◀▶▶ para seleccionar "RELOJ."
- 2) Presione SET para exhibirla.

C

FIJAR RELOJ

ELEGIR: ▲ ▼ FLECHAS
 FIJAR : SET
 TERMINAR: ACTION

Ajuste el reloj manualmente.

- 1) Seleccione forma MANUAL y presione SET
- 2) Presione ▲▼ para seleccionar el mes.
- 3) Presione SET para ajustar.

- De la misma manera, ajuste el día, el año, la hora y la hora veraniega. (VERANO)

Para hacer correcciones, presione repetidamente ◀▶ para moverse hasta el error, luego corrijalo.

D

Final del ajuste. Presione dos veces ACTION.

Ajuste del horario de zona

A

FIJAR RELOJ

FIJACION AUTOMATICA MANUAL
 AJUSTE ZONA HORA: 0
 ELEGIR: ▲ ▼ FLECHAS
 FIJAR : ▶▶
 TERMINAR: ACTION

Seleccione "AJUSTE ZONA HORA."

- 1) Presione ▲▼ para seleccionar.
- 2) Presione ◀▶ para ajustar.

B

Final del ajuste. Presione ACTION dos veces.

- El valor numérico ajustado aquí se vuelve "0" una vez que ajuste manualmente el reloj.

Para fijar o fijar de nuevo el reloj Regrese de Nuevo Ajuste Manual y Realice pasos B, C, D

Operaciones básicas del DVD

1 Presione **POWER** en el control remoto o el aparato.

2 Elija el modo **DVD**
Presione **DVD**.

3 Introducir un disco.

- 1) Presione **OPEN/CLOSE**.
- 2) Ponga un disco en la bandeja de disco.
 - Sujete el disco sin tocar ninguna de sus superficies, póngalo con el lado donde esté impreso el título hacia arriba, alinéelo con las guías y póngalo en su posición apropiada. Disco de 3"(8 cm) Disco de 5" (12 cm)

4 Iniciar la reproducción

- Presione **PLAY**.
- La bandeja del disco se cierra automáticamente.
- Si está usando un DVD interactivo (Interactive DVD) o un Video CD con control de reproducción (playback control) y aparece un menú de títulos (TITLE MENU) en la pantalla, siga al paso 5.

5 Elija el artículo deseado.

- 1) Presione **▲▼◀▶** o las teclas numéricas.
- 2) Presione **SET** para la reproducción.
Si usa las teclas numéricas, la reproducción comienza automáticamente.

6 Parar la reproducción.

Presione **STOP**.

7 Expulsar el disco.

Presione **OPEN/CLOSE**.

Para buscar una escena particular

Búsqueda hacia adelante

Presione **SLOW/SEARCH ▶▶** en el modo de reproducción.

Búsqueda hacia atrás

Presione **SLOW/SEARCH ◀◀** en el modo de reproducción.

(Para liberar, presione **PLAY**)

Para saltar un capítulo o una pista

Salto hacia adelante

Presione **SKIP ▶▶I** + en el modo de reproducción.

Un capítulo (DVD) o una pista (Video CD/CD) se salta cada vez que se oprime la tecla.

Salto hacia atrás

Presione **I◀◀ SKIP** en el modo de reproducción.

Para ver una imagen fija

Presione **PAUSE** durante la reproducción.

(Para liberar, presione **PLAY**)

Para ver imágenes cuadro a cuadro

(DVD/Video CD)

Presione **PAUSE** en el modo de imagen fija.

La imagen avanza un cuadro cada vez que presiona la tecla.

(Para volver a la reproducción normal, presione **PLAY**.)

Para ver en cámara lenta (DVD/Video CD)

Coloque modo de imagen fija (pause) y después presione

SLOW/SEARCH ▶▶ o **SLOW/SEARCH ◀◀** (Para liberar presione **PLAY**.)

Funcionamiento del DVD utilizando visualizaciones en pantalla

Quando se presiona **DISPLAY**, la visualización en pantalla muestra la información del disco (título / capítulo / número de lista, tiempo transcurrido de reproducción, audio / idioma del subtítulo, y ángulo) e información (repetir la reproducción, modo reproducción, Karaoke vocal encendido / apagado, etc.).

1 Visualizar Información en pantalla.

Presione **DISPLAY** en el modo reproducción o parada.

- Cada vez que se presione **DISPLAY**, la visualización en pantalla cambia como se muestra a continuación.


Información seleccionada del disco
Información seleccionada de la unidad
Limpiar la Pantalla

2 Selección del ítem deseado

1) Presione **▲▼** (o **◀▶**) para seleccionar.

2) Presione **SET** para ajustar

3 <Ejemplo de DVD>

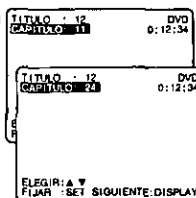

Selección del ajuste deseado


- 1) Presione **▲▼** para seleccionar.

2) Presione **SET** para Inicio de Ajuste

3) Presione **▲▼** para cambiar

4) Presione de nuevo set para Realización

<Ejemplo de Video CD>

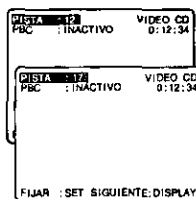

Para limpiar la pantalla, Presione repetidamente CLEAR o DISPLAY.

Cambio del idioma de subtítulos [DVD solamente]

El idioma de los subtítulos seleccionado al hacer las fijaciones iniciales se puede cambiar por otro idioma diferente, si éste se encuentra disponible.



Presione **SUBTITLE** durante la reproducción. Cuando no haya subtítulos grabados, "-" se visualizará en lugar del número de idioma.



Seleccionar el idioma deseado.

- 1) Presione **▲▼** para seleccionar idioma.
- 2) Presione **▶◀** para ajustar.
- 3) Presione **▲** (o **▼**) para seleccionar "ACTIVO" o "INACTIVO."

Cambio del idioma de la pista de sonido [DVD solamente]

El idioma de la pista de sonido seleccionado al hacer las fijaciones iniciales se puede cambiar por otro idioma diferente, si éste se encuentra disponible.




Visualizar la pantalla AUDIO.
Presione **AUDIO** durante la reproducción.




Seleccionar el idioma deseado.
Presione **▲▼** para seleccionar idioma.

Visión desde otro ángulo [DVD solamente]

Algunos discos DVD tienen escenas que han sido filmadas simultáneamente desde un número de ángulos diferentes. Con estos discos, la misma escena podrá verse desde cada uno de estos ángulos diferentes utilizando el botón **ANGLE**.

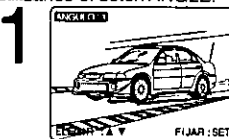

Visualizar la pantalla de ángulo.
Presione **ANGLE** durante la reproducción.

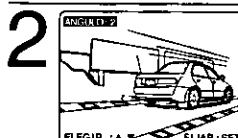

Seleccionar el ángulo deseado.
Presione **▲▼** para seleccionar.

Selección de vocal para los discos de Karaoke [DVD/Video CD]

1 **Visualizar la pantalla AUDIO.**
Presione **AUDIO** durante la reproducción.

2

Seleccionar el ajuste deseado.

- 1) Presione **▲▼** (o **▶◀**) para seleccionar.
- 2) Presione **▶◀** (o **◀▶**) para ajustar. (DVD solamente)

- DVD Karaoke (1 vocal) VOZ ACTIVA VOZ INACTIVA
- DVD Karaoke (2 vocales) VOCAL V1 + V2 VOCAL V1
- Video CD VOCAL OFF VOCAL V2
- LR L R

Utilización de un menú de títulos [DVD solamente]

Algunos discos con películas, por ejemplo, vienen con dos o más títulos. Si el disco tiene un menú de títulos grabados, el botón **TITLE** podrá utilizarse para seleccionar el título de la película.

1 **Presione TITLE** durante la reproducción.
Ahora se visualiza una lista de los títulos del disco.

2

Seleccionar el título deseado.

- 1) Presione **▲▼▶◀** o las teclas numéricas para seleccionar.
- 2) Presione **SET** o **PLAY**.

Utilización de un menú de DVD [DVD solamente]

Algunos discos DVD tienen estructuras únicas de menús llamadas menús DVD. Por ejemplo, los DVDs programados con un contenido complejo proporcionan menús guía, y los grabados con varios idiomas proporcionan menús para audio e idiomas de subtítulos. Aunque los contenidos de los menús DVD y la operación cambian de disco a disco, a continuación se explica la operación básica cuando se utiliza esta característica.

1 **Presione MENU** durante la reproducción.
El menú de DVD introducido en el disco se visualiza ahora.

2

Seleccionar el ítem deseado.

- 1) Presione **▲▼▶◀** o las teclas numéricas para seleccionar.
- 2) Presione **SET** o **PLAY**.

Ampliación de la imagen [DVD solamente]

Durante la reproducción de un DVD, puede ampliar partes específicas de una imagen y seleccionar la relación de zoom usando el botón **ZOOM** del control remoto.

Seleccione el tamaño de la imagen.
Presione **ZOOM** repetidamente para cambiar el tamaño de la imagen como se indica a continuación:

Use los botones **▲** y **▼** para desplazar la posición hacia arriba o hacia abajo. Use los botones **◀** y **▶** para desplazar la posición hacia la izquierda o hacia la derecha.

For Your Information


Reproducción programada [Vídeo CD/CD]

Puede usted programar pistas específicas y el orden de reproducción.

• Vídeo CD o CD es insertado en el modo DVD.

1 Visualizar MAIN MENU.

Presione ACTION en el modo parada.

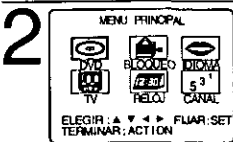

Visualizar la pantalla DVD.

- 1) Presione **▲▼◀▶** para seleccionar "DVD."
- 2) Presione SET para visualizar.



Seleccionar "MODO DE REPRODUCCION."

- 1) Presione **▲▼** para seleccionar.
- 2) Presione SET para visualizar.



Seleccionar "REPRODUCCION DE PROGRAMAS."

- 1) Presione **▲▼** para seleccionar.
- 2) Presione SET para visualizar.



Seleccionar el número de la pista deseada. (Se visualizan los números de la pista del disco).

- 1) Presione **▲▼◀▶** para seleccionar.
 - 2) Presione SET para seleccionar.
- Repita el paso 5 para seleccionar otra pista.
 - La pista seleccionada se añade a la parte derecha.



Comenzar, "REPRODUCCION DE PROGRAMAS."

- 1) Presione **▲▼◀▶** para seleccionar "INICIAR."
 - 2) Presione SET.
- La reproducción comienza en la secuencia programada.
 - Para cancelar, pulsar STOP durante la reproducción y luego presione CLEAR.

Reproducción arbitraria [Vídeo CD/CD]

Las pistas se reproducen de forma arbitraria.

1 Repita los pasos 1-3 de la página anterior.



Seleccionar "REPRODUCCION ALEATORIA."

- 1) Presione **▲▼** para seleccionar.
 - 2) Presione SET.
- Comienza la reproducción arbitraria.
 - Para cancelar, presione STOP durante la reproducción y luego presione CLEAR.

Fijaciones iniciales

1 Visualizar MAIN MENU. Presione ACTION en el modo de parada.

2 Visualizar la pantalla DVD. Presione **▲▼◀▶** para seleccionar. Presione SET.

3 Seleccionar el artículo deseado. Presione **▲▼** para seleccionar. Presione SET.

IDIOMAS DEL DISCO

Todos los idiomas ofrecidos en el disco pueden ser ajustados. Si el idioma ajustado no es ofrecido en el disco, se seleccionará el idioma original del disco.

SALIDA DE AUDIO

Puede usted ajustar la salida audio procedente del terminal de salida audio digital.

DETENER RASTREO

Para seleccionar "CAMPO" o "CUADRO" para prevenir inestabilidad o para permitir ver textos pequeños o patrones finos claramente en el modo de imagen fija.

4 : 3 PREFERENCIA

Para seleccionar si el material del vídeo para pantalla ancha será vuelto a reproducir en el estilo Pan&Scan o en el estilo Letterbox en la pantalla.

4 Seleccionar el artículo deseado. Presione **▲▼** para seleccionar. Presione SET.

5 Volver a visualizar el menú de DVD para continuar el ajuste.

Presione ACTION y pase al paso 3 para ajustar otro ajuste o, para salir, presione ACTION tres veces.

Selección de IDIOMAS DEL DISCO [DVD solamente]

Seleccione "AUDIO" Inglés / Español / Francés : (Fijación de fábrica : inglés)

Original : Se seleccionará el idioma original de cada disco.

OTRO **** : Se puede seleccionar el otro idioma.

Seleccione "SUBTITULO"

AUTO : Se seleccionará el mismo que fue seleccionado en la preparación de "AUDIO". (Fijación de fábrica)

- Si el idioma seleccionado en la preparación de "AUDIO" se utiliza durante la reproducción, los subtítulos no aparecerán.
- Si se utiliza otro idioma durante la reproducción, los subtítulos aparecerán en el idioma seleccionado en la preparación de "AUDIO"

Inglés / Español / Francés

OTRO **** : Se puede seleccionar el otro idioma.

Seleccione "MENU"

Inglés / Español / Francés : (Fijación de fábrica : inglés)

OTRO **** : Se puede seleccionar el otro idioma.

Selección de SALIDA DE AUDIO

Seleccione "LPCM(DVD)"

INACTIVO : Por el conector de salida de audio digital solamente sale PCM lineal de 48 kHz/16 bits. Durante la reproducción del DVD grabado en el PCM lineal de 48 kHz/20 bits o 96 kHz, no sale audio digital. (Fijación de fábrica)

PCM : Durante la reproducción del DVD grabado en el PCM lineal de 48 kHz/20 bits/24 bits o 96 kHz, sale audio digital convertido a 48 kHz/16 bits. (La salida digital de audio PCM está restringida a 48 kHz/16bits o menos para proteger los derechos de autor.)

Seleccione "Dolby Digital"

Bitstream : Sale un flujo de bits Dolby digital (2ch-5.1ch). (Fijación de fábrica)

INACTIVO : No hay salida de audio.

Seleccione "dts"

Bitstream : Sale un flujo de bits dts. (Fijación de fábrica)

INACTIVO : No hay salida de audio.

Seleccione "DRC (Dynamic Range Compression)"

INACTIVO : Se selecciona el margen de audio normal. (Fijación de fábrica)

ACTIVO : Seleccione este ajuste para disfrutar de un sonido dinámico incluso a bajo volumen. Esto es muy útil para escuchar durante la noche. [Esta función sólo se activa con DVDs Dolby Digital.]

Seleccione "SURROUND"

El sonido envolvente crea el efecto de sonido que procede de altavoces que parecen estar en la parte de atrás aún cuando solo se ha conectado a un sistema estéreo de 2 canales.

INACTIVO : No efecto de sonido envolvente. (Fijación de fábrica)

ACTIVO : Efecto de sonido envolvente.

Selección de DETENER RASTREO

AUTO : Durante el modo de imagen fija se seleccionarán automáticamente "Campo fijo" o "Cuadro fijo" (Fijación de fábrica)

CAMPO : Seleccione este ajuste cuando ocurra "distorsión" en las imágenes, incluso cuando se haya seleccionado "AUTO".

CUADRO : "Cuadro fijo" es siempre seleccionado. Seleccionar este ajuste cuando no se puedan ver claramente texto pequeño o patrones finos incluso cuando esté seleccionado "AUTO".

Selección de 4 : 3 PREFERENCIA

Pan&Scan : Datos de la pantalla ancha de vídeo son reproducidos en el estilo Pan & Scan (la parte derecha e izquierda de la pantalla son recortadas). (Fijación de fábrica)

- Datos de vídeo no formateados en Pan & Scan serán reproducidos en el estilo letterbox.

Letterbox : Datos de la pantalla ancha de vídeo son reproducidos en el estilo Letterbox (la parte de arriba y abajo de la pantalla tienen un margen negro).

TV

- A** Accessories 4
- AC Power Plug 9
- ACTION button 8, 12
- ADD / DLT button 8, 13
- Audio Adjustment 31
- Audio Auto Gain Control (AGC) 30
- Audio button 8, 19
- Audio connections 14, 15
- Audio Menu 30
- Audio Mode for TV Viewing 19
- Audio Mute 18
- Audio / Video Adjustment 31
- Audio / Video In Jack 9
- Audio / Video Menu 30
- Audio Output Connector (L/R) 9
- Auto Operation Functions 27
- B** Batteries 4
- Before Requesting Service 44
- Before Using 4
- Blocking Message 29
- Blue Screen Display 23
- Broadcast Types 19
- C** Cable Box Brand Code Number 25
- Cable Box Universal Remote
 - Control Feature 24
 - Caption On Mute 21
 - Channel 10, 11, 23
 - CHANNEL UP / DOWN button 8, 9, 18
 - Clock 12
 - Closed Caption 20, 21
 - Code Numbers, DSS / Cable Box Brand 25
 - Connections 10
 - Connections, Audio 15
 - Connections, DSS / Cable Box 10
 - Connections, Ant./Cable 10
- D** DISPLAY / ENTER button 8, 23, 24
- DSS Brand Code Number 25
- DSS CABLE button 8, 24
- DSS / Cable Box Connections 10
- DST (Daylight Saving Time) 11
- F** Front Panel Indicators 9
- Function Display 23
- I** Important Safeguards and Precautions ... 2
- Information (Unit, Disc) 4, 6, 7
- Initial Setup 10
- Indicators on the Front Panel 9
- Input Mode 27
- L** Language 12
- LIGHT button 8
- Limited Warranty BC
- Location of Controls 8, 9
- M** MTS Broadcast / TV Stereo System 19
- MUTE button 8, 18, 21
- N** NUMBER keys 8; 18, 24
- O** 100 Key 18, 24
- On-Screen Displays (OSD) 23, 37, 38
- ON-TIMER Indicator 9, 22
- ON-TIMER with Alarm 22
- Outdoor Antenna Connections 10
- P** Phones 18
- POWER button 8, 9, 10, 16, 18, 24
- Q** Quality Picture 4
- R** Rapid Tune 18
- R-TUNE button 8, 18
- Remote Control Buttons 8
- Remote Sensor 9
- Remote Warning Feature 26
- Reset Language, Channels, Clock, Time Zone Adjust 12, 13
- S** Safety Precautions 3
- Secret Code 27
- SELECT / SET button 8, 12
- Servicenter 47
- Sleep Timer 22
- Spanish Quick Use Guide 48 ~ 53
- Specifications 6
- SURROUND button 8, 26
- Surround Sound 26
- T** Table of Contents 5
- Time Zone Adjust 13
- TV Operation 18
- TV Timer Features 22
- TV button 8, 24
- TV Status & Clock Display 23
- U** Unit, Front/Rear view 8, 9
- Universal Remote Control 24
- US MOVIES Ratings 28, 29
- US TV PROGRAMS Ratings 28, 29
- V** Video Adjustment 31
- Video Menu 30
- V-Chip Control Feature 27 ~ 29
- VHF / UHF Antenna Input Terminal 9
- Volume Adjust 26
- VOLUME UP / DOWN button 8, 18
- W** Warning and Instruction Displays 45
- Weak Signal Display Feature 26

DVD

A	ANGLE button	8, 33
	ANGLE Indicator	33
	Auto-Power Off function	17
	AUDIO button	8, 32
	AUDIO OUTPUT	41, 42
	Audio soundtrack language (DVD)	32
B	Basic DVD Operation	16, 17
C	CLEAR button	8, 35 ~ 37
D	Definition of terms	7
	Disc Audio Attribute 1 Type, Sampling Frequency, Bit No.	32
	Disc format	7
	Disc handling	4
	Disc Information Screen	35, 38
	DISC LANGUAGES (DVD)	41
	Disc Operation	32 ~ 36
	Disc Tray	4, 9, 16
	DISPLAY button	8, 35, 37
	DVD button	8, 16
	DVD Lock Feature (DVD)	40
	DVD Lock Ratings (DVD)	40
	DVD menu (DVD)	34
	DVD Operation using On-Screen ..	37 ~ 39
F	FF button	16
	Foward / Reverse Chapter / Track skip Frame by Frame picture (DVD/Video CD)	17
K	Karaoke (DVD/Video CD)	33
L	Language Code List	46
M	MENU button	34
	Multiple angle viewing (DVD)	33
O	OPEN / CLOSE button	8, 9, 16
	Optical digital audio output connector	9
P	PAUSE button	8, 17
	Picture Zoom (DVD)	33
	Play	16
	Playback control (Video CDs)	17
	PLAY button	8, 16
	Program Play (Video CD/CD)	35
	Program Repeat Play (Video CD/CD) ..	35
R	Random Play (Video CD/CD)	36
	Region number	3
	Foward / Reverse rapid scene search ..	17
	Repeat Play	35
	RESUME function	17
	RETURN button	8, 16
	REW button	8, 16
S	Settings for DVD Operation	41 ~ 43
	SKIP ►► / ◀◀ button	8, 16
	Slow Motion (DVD/Video CD)	17
	SLOW ►► / ◀◀ button	8, 17
	STILL MODE	41, 43
	Still (Pause) Picture	17

	Subtitle language (DVD)	32, 41
T	TV MODE	41, 43
	Title menu (DVD)	34
U	Unit information screen (Unit)	39
Z	Zoom button	8, 33

Warranty

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation
of America, One Panasonic Way
Secaucus, New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc.
AVE. 65 de Infantería, Km. 9.5 San Gabriel
Industrial Park Carolina, Puerto Rico 00985

PANASONIC/QUASAR Video Products Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the Warrantor") will repair or replace this product with new or refurbished parts or equivalent product, free of charge, in the USA or Puerto Rico, in the event of a defect in materials or workmanship as follows (all time periods commence from the date of the original purchase):

PRODUCT	PARTS	LABOR	SERVICE	CONTACT NUMBER
CAMCORDER	ONE (1) YEAR, EXCEPT CCD IMAGE SENSOR CCD IMAGE SENSOR - SIX (6) MONTHS	NINETY (90) DAYS	Carry-In or Mail-In	1-800-211-PANA(7262)
DVD/VCR DECK	ONE (1) YEAR	NINETY (90) DAYS	Carry-In or Mail-In	1-800-211-PANA(7262)
DIGITAL STILL CAMERA	ONE (1) YEAR, EXCEPT CCD IMAGE SENSOR CCD IMAGE SENSOR - SIX (6) MONTHS	NINETY (90) DAYS NINETY (90) DAYS	Carry-In or Mail-In	1-800-272-7033
AV MIXER	ONE (1) YEAR	NINETY (90) DAYS	Carry-In or Mail-In	1-800-211-PANA(7262)
TV/VCR, TV/DVD TV/DVD/VCR COMBINATION	ONE (1) YEAR, EXCEPT CRT CRT - TWO (2) YEARS	NINETY (90) DAYS NINETY (90) DAYS CRT - NINETY (90) DAYS	Carry-In: 21" CRT and Smaller In-Home or Carry-In: 22" CRT and Larger	1-800-211-PANA(7262)
TV/HDR COMBINATION	ONE (1) YEAR, EXCEPT CRT CRT - TWO (2) YEARS	NINETY (90) DAYS CRT - NINETY (90) DAYS	In-Home or Carry-In	1-888-843-9788

Batteries (if included) - New rechargeable batteries in exchange for defective rechargeable batteries for ten (10) days.

Non-rechargeable batteries are not warranted.

Tape (if included) - New video cassette tape in exchange for a defective video cassette tape for five (5) days.

Memory cards (if included) - Exchange defective item for new one for ninety (90) days.

In-home, carry-in or mail-in service, as applicable, in the USA can be obtained during the warranty period by contacting a Panasonic Services Company (PASC) Factory Servicenter listed in the Servicenter Directory. Or call toll free contact number listed above, to locate an authorized PASC Servicenter. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the Panasonic Sales Company telephone number listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of the date of the original purchase is required before warranty service is rendered.

This warranty only covers failures due to defects in materials and workmanship, which occur during normal use and does not cover normal maintenance, including, but not limited to, video and audio head cleaning. The warranty does not cover damage which occurs in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set-up adjustments, improper antenna, inadequate signal pickup, maladjustment of consumer controls, improper operation, power line surge, improper voltage supply, lightning damage, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a PASC Factory Servicenter or a PASC authorized Servicenter, or damage that is attributable to acts of God.

LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGE TO RECORDING MEDIA) RESULTING FROM THE USE OF HIS PRODUCTS, OR ARISING OUT OF ANY BREACH OF THE WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary, from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Consumer Affairs Department at the Panasonic Consumer Electronics Company address above.

SERVICE CALLS WHICH DO NOT INVOLVE DEFECTIVE MATERIALS OR WORKMANSHIP AS DETERMINED BY THE WARRANTOR, IN ITS SOLE DISCRETION, ARE NOT COVERED. COSTS OF SUCH SERVICE CALLS ARE THE RESPONSIBILITY OF THE PURCHASER.

warvid02/12/2001

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus, New Jersey 07094

Panasonic Sales Company ("PSC"),
Division of Matsushita Electric of Puerto Rico, Inc.
Ave. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park, Carolina, Puerto Rico 00985



Printed in U.S.A.
LSQT0501A
M1001-0