



Omnivision **VHS**

# Panasonic®

## TV / DVD / VCR Combination Operating Instructions

Models No. **PV-DF205/PV-DF275**



• Connection and Initial Setup Procedures are on pages 10 and 13.



### MULTI FORMAT PLAYBACK



\*Ability to play back may depend on recording conditions.



As an **ENERGY STAR®** Partner, Panasonic Corporation of North America has determined that this product or product model meets the **ENERGY STAR®** guidelines for energy efficiency.



Please read these instructions carefully before attempting to connect, operate, or adjust this product. Please save this manual.  
Spanish Quick Use Guide is included.  
(Guía para rápida consulta en español está incluida.)

This operating instruction book is designed for use with models PV-DF205 and PV-DF275. Illustrations in this manual show the PV-DF275. Features may vary, so please read carefully.

LSQT0941A



Getting Started

TV Operation

VCR Operation

TV/VCR Operation

Disc Operation

Information

# Before Using

## Congratulations

On your purchase of one of the most sophisticated and reliable products on the market today. Used properly, it will bring you and your family years of enjoyment. Please fill in the information below. The serial number is on the tag located on the back of your unit.

Date of Purchase \_\_\_\_\_

Dealer Purchased From \_\_\_\_\_

Dealer Address \_\_\_\_\_

Dealer Phone No. \_\_\_\_\_

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

U.S. Patent Nos. 4,631,603; 4,577,216; 4,819,098; 4,907,093; 5,315,448; and 6,516,132.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

This television receiver provides display of television closed captioning.

 
 
## Accessories

Please check and identify the supplied accessories. Use numbers indicated in parentheses when asking for replacement parts.

To order accessories, call toll free  
1-800-332-5368.

1 Remote Control  
(EUR7724020 or  
EUR7724020R)

2 Batteries "AA"




## Safety Precaution

Be sure to read the following cautions carefully.


### ⚠ WARNING

Never pick unit up by VCR cassette opening.

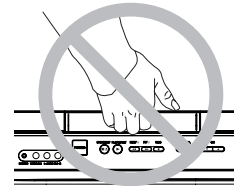

### ■ PV-DF275 only

The unit may tip or fall if not situated on a stable surface, if pushed, or during an earthquake. Use a strong rope or chain (not included) to fasten the unit firmly to a strong wall support.

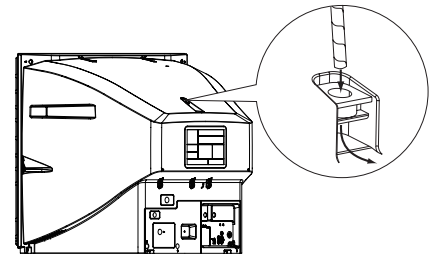

# Safety Precautions/Mesures de sécurité

## **⚠ WARNING**

**TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.**

## **⚠ CAUTION**

**TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT IN WALL SOCKET. FULLY INSERT.**

## **AVERTISSEMENT :**

**AFIN DE PRÉVENIR TOUT RISQUE D'INCENDIE OU DE CHOCS ÉLECTRIQUES, NE PAS EXPOSER CET APPAREIL À LA PLUIE OU À UNE HUMIDITÉ EXCESSIVE.**

## **Attention :**

**POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.**

## **FCC WARNING :**

**ANY UNAUTHORIZED CHANGES OR MODIFICATIONS TO THIS EQUIPMENT WOULD VOID THE USER'S AUTHORITY TO OPERATE IT.**

### **FCC NOTICE:**

This equipment has been tested and found to comply with part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when operated in a residential environment. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, use the equipment in another location and/or utilize an electrical outlet different from that used by the receiver. If necessary, consult the dealer or an experienced radio/TV technician for help. You may find the booklet, "Something About Interference", available from FCC local regional offices, helpful.

This product utilizes both a Cathode Ray Tube (CRT) and other components that contain lead. Disposal of these materials may be regulated in your community due to environmental considerations. For disposal or recycling information please contact your local authorities, or the Electronics Industries Alliance: <<http://www.eiae.org>>

This video recorder, equipped with the HQ (High Quality) System, is compatible with existing VHS equipment. Only use those tapes with the **VHS** mark. It is recommended that only cassette tapes that have been tested and inspected for use in 2, 4, 6, and 8 hour VCR machines be used. This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.

### **CAUTION:**

UNIT IS A CLASS I LASER PRODUCT. HOWEVER, THIS UNIT USES A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE UNIT CORRECTLY AS INSTRUCTED. WHEN THIS UNIT IS PLUGGED INTO THE WALL OUTLET, DO NOT PLACE YOUR EYES CLOSE TO THE OPENING OF THE DISC TRAY AND OTHER OPENINGS TO LOOK INTO THE INSIDE OF THIS UNIT. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT ATTEMPT TO REPAIR THE UNIT YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.


### **CAUTION:**

LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM.

### **ATTENTION:**

RAYONNEMENT LASER EN CAS D'OUVERTURE. NE PAS REGARDER DANS LE FAISCEAU.

(Inside of product)

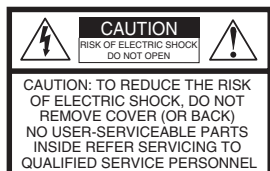

This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.

This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

# IMPORTANT SAFEGUARDS AND PRECAUTIONS

## **⚠ WARNING**

**TO REDUCE THE RISK OF ELECTRIC SHOCK, FIRE, INJURY TO PERSONS OR DAMAGE TO THIS PRODUCT, READ AND RETAIN ALL SAFETY AND OPERATING INSTRUCTIONS. HEED ALL WARNINGS IN THE MANUAL AND ON THE PRODUCT.**

### ■ INSTALLATION

#### 1 POWER SOURCE CAUTION

Operate only from power source indicated on unit or in this manual. If uncertain, have your Electric Utility Service Company or Video Products Dealer verify your home power source.

#### 2 POWER CORD PLUG

For safety, this unit has a polarized type plug (one wide blade), or a three-wire grounding type plug. Always hold the plug firmly and make sure your hands are dry when plugging in or unplugging the AC power cord. Regularly remove dust, dirt, etc. on the plug.

##### POLARIZED PLUG CAUTION:

The plug fits into outlet only one way. If it cannot be fully inserted, try reversing it. If it still will not fit, have an electrician install the proper wall outlet. Do not tamper with the plug.

##### GROUNDING PLUG CAUTION:

The plug requires a three-hole grounding outlet. If necessary, have an electrician install the proper outlet. Do not tamper with the plug.

#### 3 POWER CORD

To avoid unit malfunction, and to protect against electrical shock, fire or personal injury:

- Keep power cord away from heating appliances and walking traffic. Do not rest heavy objects on, or roll such objects over the power cord.
- Do not tamper with the cord in any way.
- An extension cord should have the same type plug (polarized or grounding) and must be securely connected.
- Overloaded wall outlets or extension cords are fire hazards.
- Frayed cords, damaged plugs, and damaged or cracked wire insulation are hazardous and should be replaced by a qualified electrician.

#### 4 DO NOT BLOCK VENTILATION HOLES

Ventilation openings in the cabinet release heat generated during operation. If blocked, heat build-up may result in a fire hazard or heat damage to cassettes or discs.

For your protection:

- a. Never cover ventilation slots while unit is ON, or operate unit while placed on a bed, sofa, rug, or other soft surface.
- b. Avoid built-in installation, such as a book case or rack, unless properly ventilated.

#### 5 AVOID EXTREMELY HOT LOCATIONS OR SUDDEN TEMPERATURE CHANGES

Do not place unit over or near a heater or radiator, in direct sunlight, inside closed vehicles, in high temperature locations [over 95 °F (35 °C)], or in over 75 % humidity. If unit is suddenly moved from a cold place to a warm one, moisture may condense in unit and on the tape causing damage. Never subject unit to vibration, impact, or place it so that the surface is tilted as internal parts may be seriously damaged.

#### 6 TO AVOID PERSONAL INJURY

- Never place unit on support or stand that is not firm, level, and adequately strong. The unit could fall causing serious injury to a child or adult and damage to the unit.
- Move any appliance and cart combination with care. Quick stops, excessive force, and uneven surfaces may cause objects to overturn.
- Carefully follow all operating instructions.



### ■ SERVICE

#### 1 DO NOT SERVICE PRODUCT YOURSELF

If, after carefully following detailed operating instructions, the unit does not operate properly, do not attempt to open or remove covers, or make any adjustments not described in the manual. Unplug unit and contact a qualified service technician.

#### 2 REPLACEMENT OF PARTS

Make sure the service technician uses only parts specified by the manufacturer, or that have equal safety characteristics as original parts. The use of unauthorized substitutes may result in fire, electric shock, or other hazards.

#### 3 SAFETY CHECK AFTER SERVICING

After unit is serviced or repaired, request that a thorough safety check be done as described in the manufacturer's service literature to ensure video unit is in safe operating condition.

### ■ USING THE UNIT

Before unit is brought out of storage or moved to a new location, refer again to the INSTALLATION section of these safeguards.

#### 1 KEEP UNIT WELL AWAY FROM WATER OR MOISTURE, such as vases, sinks, tubs, etc.

#### 2 IF EXPOSED TO RAIN, MOISTURE, OR STRONG IMPACT, unplug unit and have it inspected by a qualified service technician before use.

#### 3 ELECTRICAL STORMS

During a lightning storm, or before leaving unit unused for extended periods of time, disconnect all equipment from the power source as well as the antenna and cable system.

#### 4 WHEN UNIT IS PLUGGED IN

##### • DO NOT OPERATE IF:

- liquid has spilled into unit.
  - unit was dropped or otherwise damaged.
  - unit emits smoke, odours, or noises. Immediately unplug unit, and have it inspected by a service technician to avoid potential fire and shock hazards.
- Never drop or push any object through openings in unit. Touching internal parts may cause electric shock or fire hazard. Do not put any foreign object on the tray.
- Keep magnetic objects, such as speakers, away from unit to avoid electrical interference.

#### 5 USING ACCESSORIES

Use only accessories recommended by the manufacturer to avoid risk of fire, shock, or other hazards.

#### 6 CLEANING UNIT

Unplug unit. Use a clean, dry, chemically untreated cloth to gently remove dust or debris. DO NOT USE cleaning fluids, aerosols, or forced air that could overspray, or seep into unit and cause electrical shock. Any substance such as wax, adhesive tape, etc. may mar the cabinet surface. Exposure to greasy, humid, or dusty areas may adversely affect internal parts.


### ■ OUTDOOR ANTENNA INSTALLATION

#### 1 SAFE ANTENNA AND CABLE CONNECTION

An outside antenna or cable system must be properly grounded to provide some protection against built up static charges and voltage. Section 810 of the National Electrical Code, ANSI/NFPA 70 (in Canada, part 1 of the Canadian Electrical Code) provides information regarding proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

#### 2 KEEP ANTENNA CLEAR OF HIGH VOLTAGE POWER LINES OR CIRCUITS

Locate an outside antenna system well away from power lines and electric light or power circuits so it will never touch these power sources should it ever fall. When installing antenna, absolutely never touch power lines, circuits or other power sources as this could be fatal.

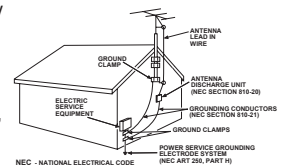

NEC - NATIONAL ELECTRICAL CODE


# Table of Contents

<b>Getting Started</b>	Before Using .....	2
	Safety Precautions/Mesures de sécurité .....	3
	IMPORTANT SAFEGUARDS AND PRECAUTIONS .....	4
	Information .....	6
<b>TV and VCR Operation</b>	Location of Controls .....	8
	Connections .....	10
	Tuning TV .....	13
	TV Operation .....	16
	MTS Broadcast / TV Stereo System .....	18
	TV Timer Features .....	19
	Closed Caption System .....	20
	Video / Audio Setting .....	22
	Before using the VCR .....	24
	Recording Television Programs .....	25
	Playing VCR .....	27
	Copy Your Tapes (Dubbing) .....	30
	V-Chip Control Features .....	31
	Display Features .....	35
<b>Disc Operation</b>	Basic Disc Operation .....	36
	DVD-RAM Operation .....	40
	Disc Operation -Using Information Screen- .....	42
	Special Disc Operation .....	45
	Settings for DVD Operation .....	48
<b>Information</b>	Warning and Instruction Displays .....	52
	Glossary .....	52
	Before Requesting Service .....	53
	Guía rápida de uso en español .....	54
	Limited Warranty .....	60
	Customer Services Directory .....	61
	Specifications .....	62
Index .....	63	

# Information

## Information (Unit, Cassette)

### Loading the Batteries

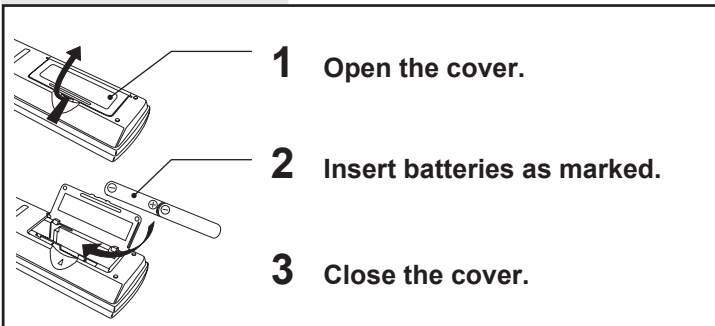

- Insert so the poles (+ and -) match those in the remote control.
- Do not use rechargeable type batteries.


#### Do not:

- Mix old and new batteries.
- Use different types at the same time.
- Heat or expose to flame.
- Take apart or short circuit.
- Attempt to recharge alkaline or manganese batteries.
- Use batteries if the covering has been peeled off.


Mishandling of batteries can cause electrolyte leakage which can damage items the fluid contacts and may cause a fire. Remove if the remote control is not going to be used for a long period of time. Store in a cool, dark place.

### Prevent Accidental Tape Erasure

#### ■ Break off the tab to protect.

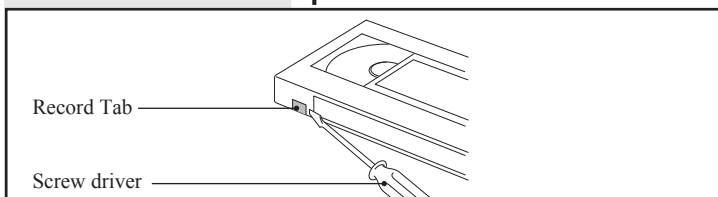

#### ■ To record again.

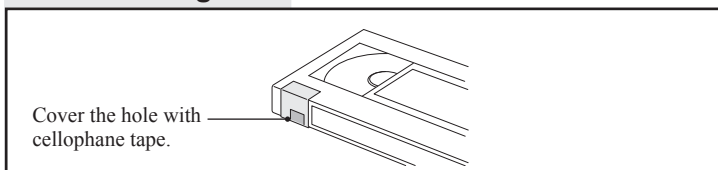

### DST (Daylight Saving Time)

Unit auto adjusts clock for DST (Daylight Saving Time.)

#### ■ Spring (First Sunday in April)

DST: ON → Sets clock ahead one hour.

#### ■ Autumn (Last Sunday in October)

DST: ON → Turns clock back one hour.

- If your area does not observe Daylight Saving Time, select DST : OFF (see "Manual Clock Setting" on page 14).
- Keep these time changes in mind when programming the unit for timer recording.

### Head Cleaning

Playing older or damaged tapes may eventually cause video heads to become clogged.

#### ■ Head Clog Sensor

During playback this screen appears if clogging is detected. To clear message from screen, press PLAY on the remote or unit.

VIDEO HEADS MAY  
NEED CLEANING  
PLEASE INSERT HEAD  
CLEANING CASSETTE  
OR REFER TO MANUAL

END:PLAY

- Use "dry" type head cleaning cassette only. (Part No. NV-TCL30PT is recommended.)
- Follow cleaning tape directions carefully. Excessive use of head cleaning tape can shorten the video head life.

## Information (Disc)

### Discs that can be played

Disc type	Disc Logo	Indication in these operating instructions
DVD-Video		<b>DVD-V</b> (DVD-Video)
DVD-R*1		
DVD-RAM*2		<b>RAM</b>
CD		<b>CD</b> (CD-DA)
Video CD		<b>VCD</b>
CD-R		<b>CD</b>
CD-RW		or <b>VCD</b>

Do not use irregularly shaped discs (e.g. heart-shaped), as these can damage the unit.

\*1 DVD-Video formatted discs [finalized].

\*2 Discs recorded using Version 1.1 of the Video Recording Format.

#### ■ Discs that cannot be played

DVD with Region No. other than "1" or "ALL", DVD from PAL system, DVD-ROM, DVD+R, DVD-AUDIO, DVD-RW, DVD+RW, CD-ROM, CDV, CVD, CD-G, CD-TEXT, SACD, Photo-CD.

#### Note:

- The digital audio content side of DualDiscs do not meet the technical specifications of the Compact Disc Digital Audio (CD-DA) format so may not play back in this unit.
- It may not be possible to play CD-R, CD-RW, DVD-R and DVD-RAM in all cases due to the type of disc or condition of the recording.

## DVDs that can be played

You can play discs with these symbols.



## Playing DVDs

The producer of these discs can control how they are played so you may not always be able to control play as described in these operating instructions. Read the disc's instructions carefully.

## DVD-R discs


Panasonic DVD-R recorded and finalized\* on a Panasonic DVD video recorder are played as DVD-Video on this unit.

## DVD-RAM discs

DVD-RAM discs must meet the following conditions for this unit to be able to play them.

<b>Type</b>	<ul style="list-style-type: none"> <li>• Non-cartridge discs</li> <li>• Discs that can be removed from their cartridges (TYPE 2 and 4)</li> </ul>
<b>Capacity</b>	<ul style="list-style-type: none"> <li>• 12 cm (5") 9.4 GB (double-sided) and 4.7 GB (single-sided)</li> <li>• 8 cm (3") 2.8 GB (double-sided)</li> </ul>

- Remove TYPE 2 and 4 discs from their cartridges before use, then return them when you are finished. Read the instructions for the disc carefully.

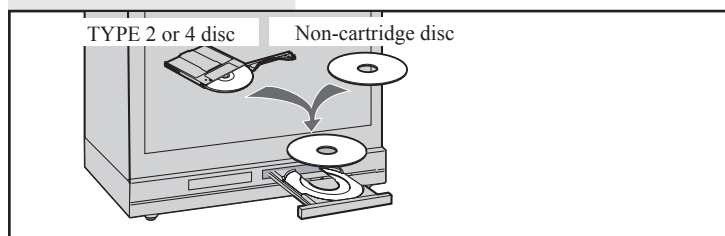

- Some parts of the disc, for example where one program ends and another begins, may not play smoothly.

## CD-R and CD-RW discs

This unit can play CD-R and CD-RW if they are formatted as CD-DA (digital audio) and finalized\*.

- \* A process that allows play on compatible equipment.

## Region Management Information

This unit is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this unit, this unit cannot play this disc.

### For U.S.A. and Canada

- The region number of this player is "1".
- The player will play DVD-Video marked with labels bearing "1" or "ALL".



#### Example:



## Disc Handling

### Handling precautions

- Sticking a label on the disc may impair DVD-R playback.
- Do not attach sticker to disc. (Do not use discs with exposed adhesive from tape or left over peeled-off stickers.)
- Only hold disc by edges as shown at right. Fingerprints, dirt and scratches can cause skipping and distortion.
- Do not write on label side of disc.
- Never use record cleaning sprays, benzine, thinner, static electricity prevention liquids, or any other solvent.
- Do not try to close disc tray when disc is not properly placed.

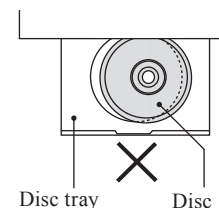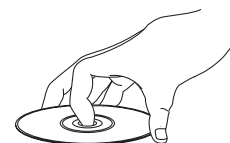

## To clean disc surface

With a soft, damp (water only) cloth, gently wipe from the center hole to the outer edge as shown below. (Wiping in a circular pattern will scratch the surface.)

## DVD-RAM, DVD-R :

Clean only with DVD-RAM disc cleaner. Never use cloths or cleaners for CDs, etc.



**If disc is brought from a cold to a warm environment, moisture may form on the disc**

Wipe away moisture with a soft, dry, lint-free cloth before using disc. (See above.)

### Improper disc storage

Discs can be damaged if stored or left in areas:


- Exposed to direct sunlight.
- That are humid or dusty.
- Near heat (i.e. heater, radiator, etc.).

## Information (MAIN MENU Screen)

In the Main Menu display, only icons which can be selected appear normally while those not available appear dark.


Example:

When the unit is used for the first time, the DVD icon is dark because it cannot be selected in this condition (see right). However, when DVD is pressed to enter DVD mode, the DVD icon becomes selectable.

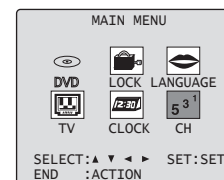

# Location of Controls

## Remote Control Buttons

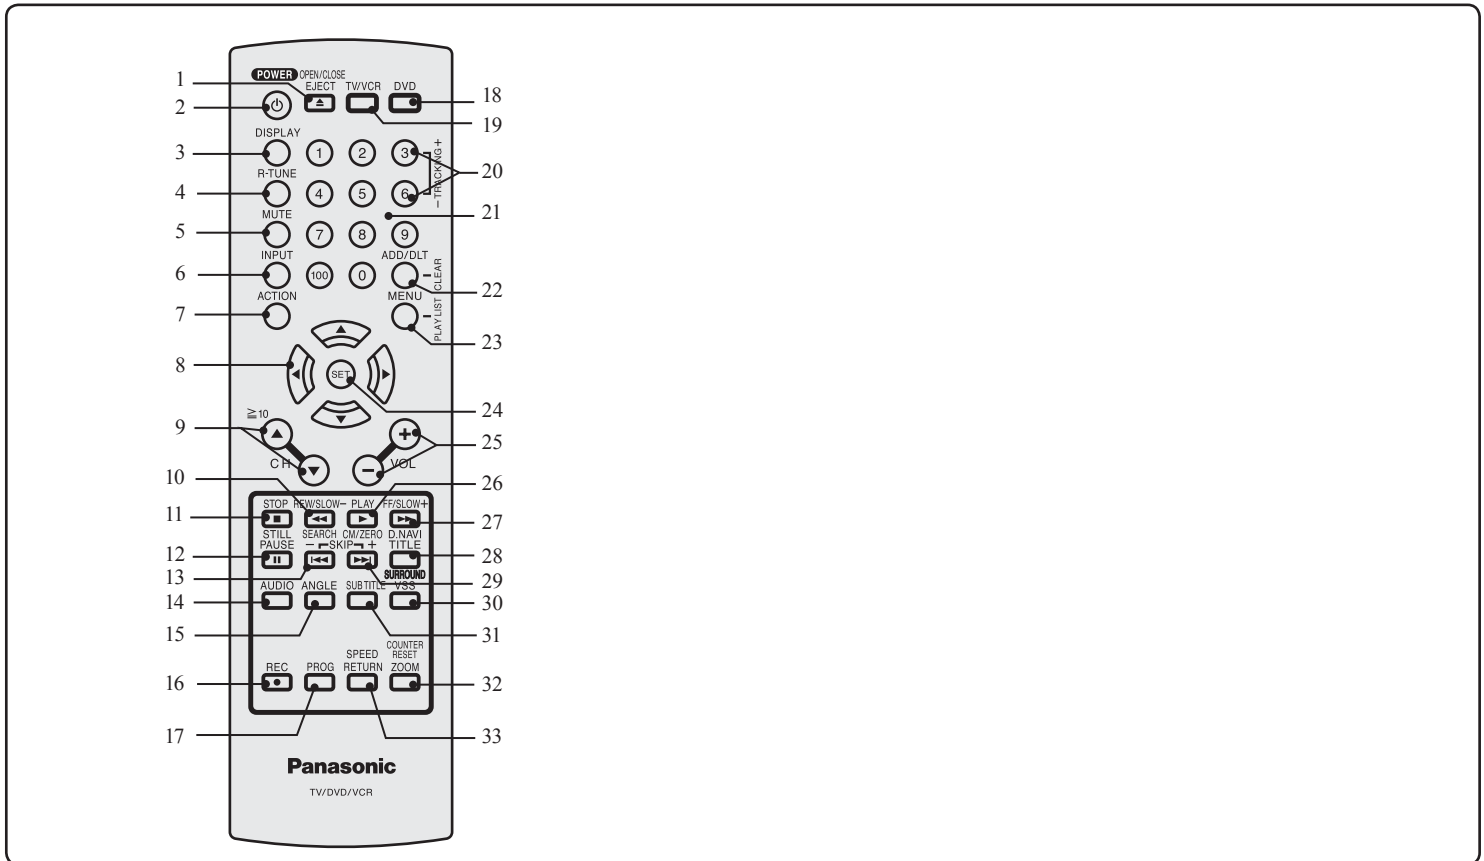


1	<b>OPEN / CLOSE / EJECT</b>	When this button is pressed in TV / VCR mode, the tape is ejected. This button is inoperative if pressed during recording. If pressed in DVD mode, the disc tray opens or closes.
2	<b>POWER</b>	Turns the unit on or off.
3	<b>DISPLAY</b>	Displays the TV status and clock. In DVD mode, displays disc and unit information.
4	<b>RAPID TUNE</b>	Displays the last channel you were watching.
5	<b>MUTE</b>	Mutes the sound instantly.
6	<b>INPUT</b>	Changes input source.
7	<b>ACTION</b>	Displays Main Menu.
8	<b>SELECT ▲▼◀▶</b>	Controls navigation around on-screen menu.
9	<b>CHANNEL UP/ DOWN</b>	Selects a channel.
10	<b>REW/SLOW-</b>	Rewinds tape and searches previous scene. Decreases slow motion speed in Still mode.
11	<b>STOP</b>	Stops recording or playback.
12	<b>STILL/PAUSE</b>	Pauses picture in Playback mode and frame advance picture in Still mode.
13	<b>SKIP-◀◀ / SEARCH</b>	Skips back one chapter or track. Goes to previous menu screen. Goes directly to the desired recording.
14	<b>AUDIO</b>	Selects the desired audio mode.
15	<b>ANGLE</b>	Selects the desired angle in DVD mode.
16	<b>REC</b>	Records a program.
17	<b>PROGRAM</b>	Displays SET PROGRAM screen. You can set Timer Program and On-Timer.
18	<b>DVD</b>	Set to DVD mode.

19	<b>TV/VCR</b>	Sets to TV/VCR mode.
20	<b>TRACKING UP / DOWN</b>	Reduces picture noise during Playback and Slow Motion.
21	<b>NUMBER Keys</b>	Selects a channel directly.
22	<b>ADD/DELETE/ CLEAR</b>	Adds or deletes a channel. Cancels an item on the screen.
23	<b>MENU / PLAY LIST</b>	Displays DVD menu. Displays Play List. (DVD-RAM)
24	<b>SET</b>	Sets selected menu.
25	<b>VOLUME UP/ DOWN</b>	Adjusts volume.
26	<b>PLAY</b>	Begins playback.
27	<b>FF/SLOW+</b>	Fast forwards tape and searches next scene. Increases slow motion speed in Still mode.
28	<b>TITLE / D.NAVI</b>	Selects the desired title by number on some DVDs. Displays Direct Navigator. (DVD-RAM).
29	<b>SKIP+▶▶ / CM SKIP / ZERO SEARCH</b>	Skips one chapter or track. Goes to next menu screen. In Stop mode, goes to counter position "0:00:00". In Playback mode, skips over 1 to 3 minutes of tape.
30	<b>SURROUND / VSS</b>	Creates a deeper, 3-D sound effect.
31	<b>SUB TITLE</b>	Selects a different subtitle language.
32	<b>ZOOM/ COUNTER RESET</b>	Enlarges specific portions of DVD picture. Resets to "0:00:00" at desired portion of tape.
33	<b>SPEED / RETURN</b>	Returns to DVD and Video CD (Playback Control) menu screen. Selects recording speed of tape.



## Unit Buttons

### ■ Front View <Model PV-DF275 unit shown>

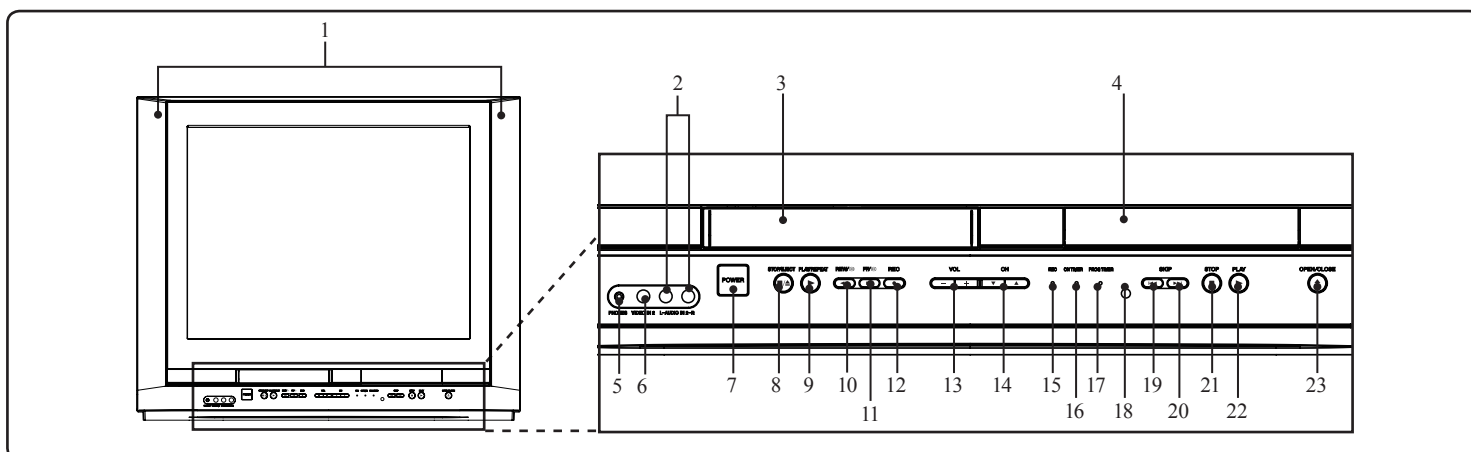


1	<b>Built In Speakers</b>	Equipped with 2 front speakers.
2	<b>Audio Input Connector 2</b>	Connect from other component. (LINE 2)
3	<b>Cassette Compartment</b>	Insert VHS tapes here.
4	<b>Disc Tray</b>	Place compatible discs here.
5	<b>Phones Jack</b>	Connect an ear phone or headphones.
6	<b>Video Input Connector 2</b>	Connect from other component. (LINE 2)
7	<b>POWER</b>	Turns the unit on or off.

8	VCR Operation	<b>STOP/ EJECT</b>	STOP: Stops playback. EJECT: Ejects the tape.
		<b>PLAY/ REPEAT</b>	PLAY: Begins playback. REPEAT: Set to see a recording over and over.
		<b>REWIND/ SEARCH</b>	Rewinds tape and searches previous scene. Decreases slow motion speed in Still mode.
		<b>FAST FORWARD/ SEARCH</b>	Fast forwards tape and searches next scene. Increases slow motion speed in Still mode.
		<b>REC</b>	Records a program.
13	<b>VOLUME UP/ DOWN</b>	Adjusts volume.	
14	<b>CHANNEL UP/ DOWN or TRACKING UP/ DOWN</b>	Selects a channel. Reduces picture noise during Playback and Slow Motion.	

15	<b>REC Indicator (RED)</b>	Lights up during recording. In Rec Pause or OTR Pause mode, the Indicator flashes.	
16	<b>ON TIMER Indicator (ORANGE)</b>	Lights when the On Timer is set.	
17	<b>PROG TIMER Indicator (GREEN)</b>	Lights up when the unit is set for Timer Recording. It flashes when a Timer Recording has been set with no tape inserted, the clock is not set, or the tape is in motion. Lights up when the On Timer is set.	
18	<b>Remote Sensor</b>	Receives infrared signal from remote control.	
19	DVD Operation	<b>SKIP ◀◀</b>	Skips back one chapter or track. Goes to previous menu screen.
		<b>SKIP ▶▶</b>	Skips one chapter or track. Goes to next menu screen.
		<b>STOP</b>	Stops playback.
		<b>PLAY</b>	Begins playback.
23	<b>OPEN/CLOSE</b>	Opens or closes the disc tray.	

### ■ Rear View <Model PV-DF275 unit shown>

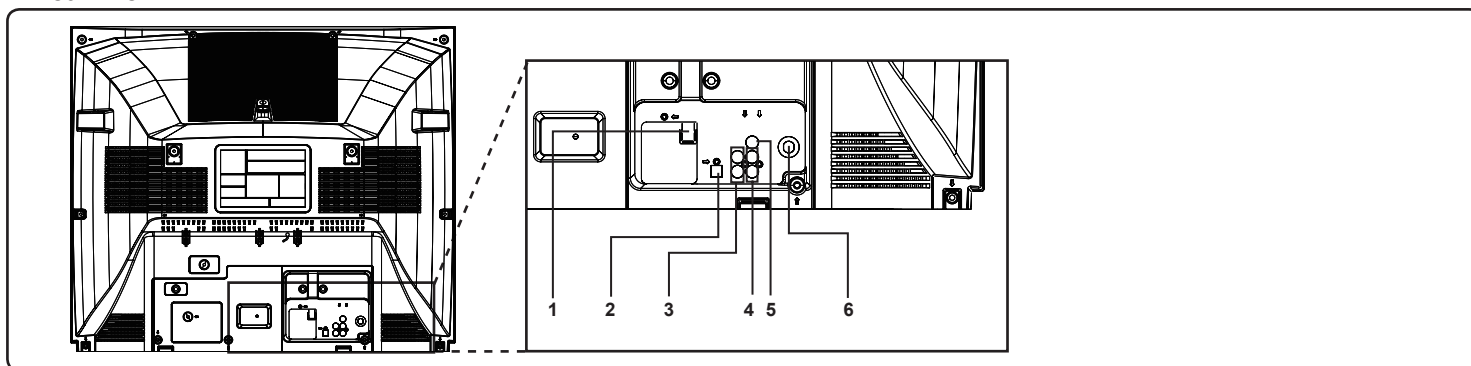

1	<b>AC Power Plug</b>	When plugged into an AC outlet, this unit consumes 0.8 W of electric power in OFF condition.
2	<b>Optical digital audio output connector</b>	Outputs audio signal. (Digital)
3	<b>Audio Output Connector (L/R)</b>	Outputs audio signal. (Analog)

4	<b>Audio Input Connector 1</b>	Connect from other component. (LINE 1)
5	<b>Video Input Connector 1</b>	Connect from other component. (LINE 1)
6	<b>VHF/UHF Antenna Input Terminal</b>	Input terminal for an antenna or cable box signal.

# Connections

## Notes on connections

- Turn off the power supply for all components before making any connections.
- If the cables necessary for connecting a component to the system are not included with the component or available as an option, you may need to fashion a cable to suit the component concerned.
- Read the instruction manual for each system component carefully before connecting it.


## Connecting the RF in Terminal

### CAUTION

Overtightening "Nut type" RF coaxial cables may damage jacks. Finger tighten only.


### Antenna Connection

Connect the cable from the Antenna to the VHF/UHF terminal on the unit.

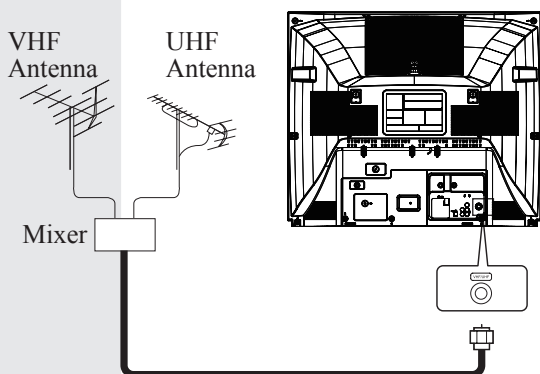

### Cable Connection

Connect the cable supplied by your local cable company to the VHF/UHF terminal on the unit.

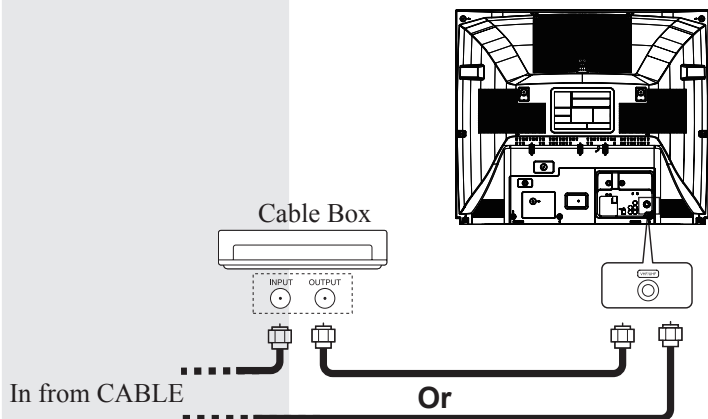


#### Note to CABLE system installer:

This reminder is provided to call the CABLE (Cable TV) System Installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## Connecting the "1, 2" AV Input Terminals

Connects VCRs and other peripheral equipment

### AV Input terminal 1 is used

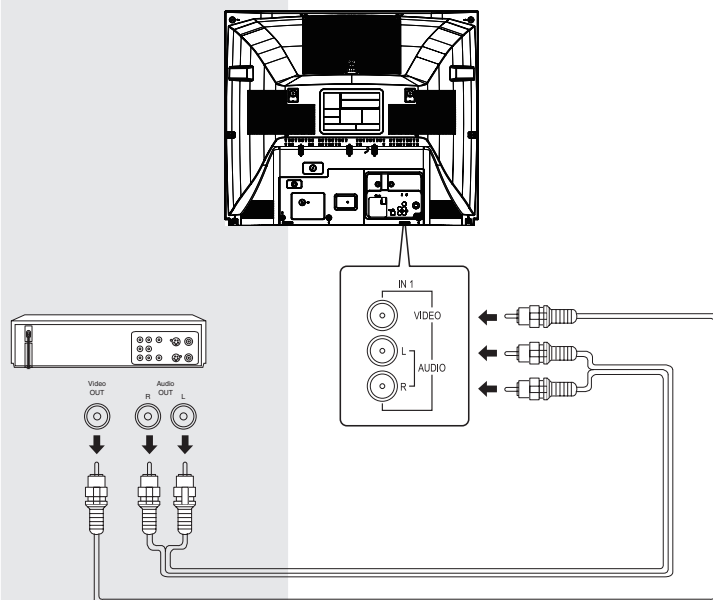

#### Notes:


- Similar connections are available at the "1, 2" AV input terminals.
- AV Input terminal 2 is located on the front of the unit.

## Connecting the Audio Output Terminal

Enjoy the powerful movie theater and hall-like sound available with multiple channel audio found on DVDs by connecting an amplifier and speakers. There are two types of connection, digital and analog.

### ⚠ WARNING

Don't place the unit on amplifier or equipment that may become hot. The heat can damage the unit.

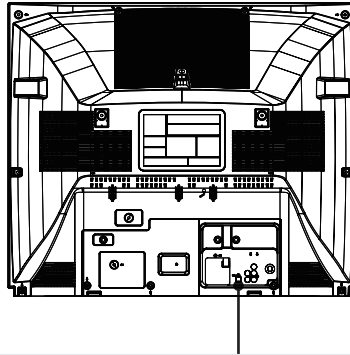

### ■ Digital connection



 


Firmly connect the cable to the connector.

Connect an AV amplifier with Dolby Digital or DTS decoders

Enjoy "Dolby Digital" or "DTS" surround sound.

Connect a Digital amplifier

Smart one-line connection is possible.

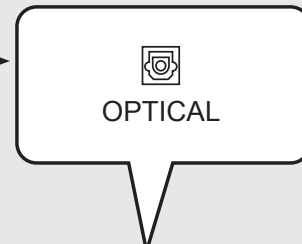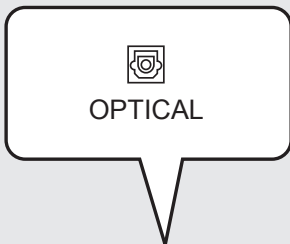



Amplifier with built in Dolby Digital or DTS decoders.

Speakers (example)




Please see amplifier manual for speaker requirements.

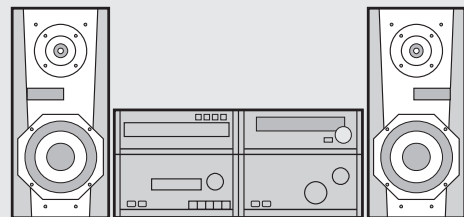

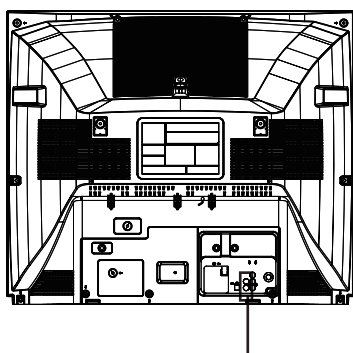

### ■ Analog connection

Connect an analog amplifier to enjoy high-quality stereo sound with sampling frequencies of 96 kHz.

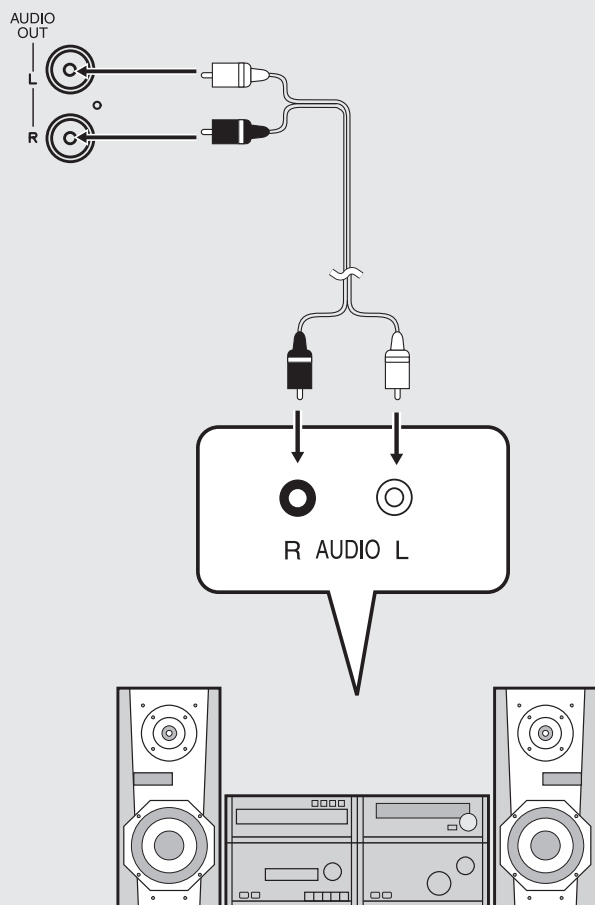

### IMPORTANT NOTE:

#### Caution for optical digital audio output connector:

- Be sure to refer to page 50 regarding output settings of Dolby Digital, DTS, and PCM.
- CDs and Video CDs can be played as usual.
- Audio from the Digital Audio Out terminal is only output during playback.
- When connecting an amplifier which contains the Dolby Digital or DTS decoder, be sure to select "Bitstream". When connecting an amplifier which does not contain the Dolby Digital or DTS decoder, be sure to select "PCM". (See page 50.) Otherwise, attempting to play a DVD may cause such a high level of noise that it may harm your hearing and damage your speakers.

#### Notes:

- Some DTS decoders which do not support DVD-DTS Interface may not work properly with the unit.
- Avoid bending/twisting the optical digital cable when connecting.


#### For your reference:

- Dolby Digital is a digital sound compression technique developed by the Dolby Laboratories Licensing Corporation. Supporting 5.1-channel surround sound, as well as stereo (2-channel) sound, this technique enables a large quantity of sound data to be efficiently recorded on a disc.
- Linear PCM is a signal recording format used in CDs. While CDs are recorded in 44.1 kHz/16 bit, DVDs are recorded in 48 kHz/16 bit up to 96 kHz/24 bit.
- If you have a Dolby Pro Logic Surround decoder, you will obtain the full benefit of Pro Logic from the same DVD movies that provide full 5.1 channel Dolby Digital soundtracks, as well as from titles with the Dolby Surround mark. For information on Panasonic or Technics Dolby Pro Logic Surround Sound Decoders please contact your local dealer.

Manufactured under license from Digital Theater Systems, Inc. US Pat. No's. 5,451,942, 5,956,674, 5,974,380, 5,978,762, 6,487,535 and other U.S. and world-wide patents issued and pending. "DTS" and "DTS 2.0 + Digital Out" are trademarks of Digital Theater Systems, Inc. Copyright 1996, 2003 Digital Theater Systems, Inc. All Rights Reserved.


Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

# Tuning TV

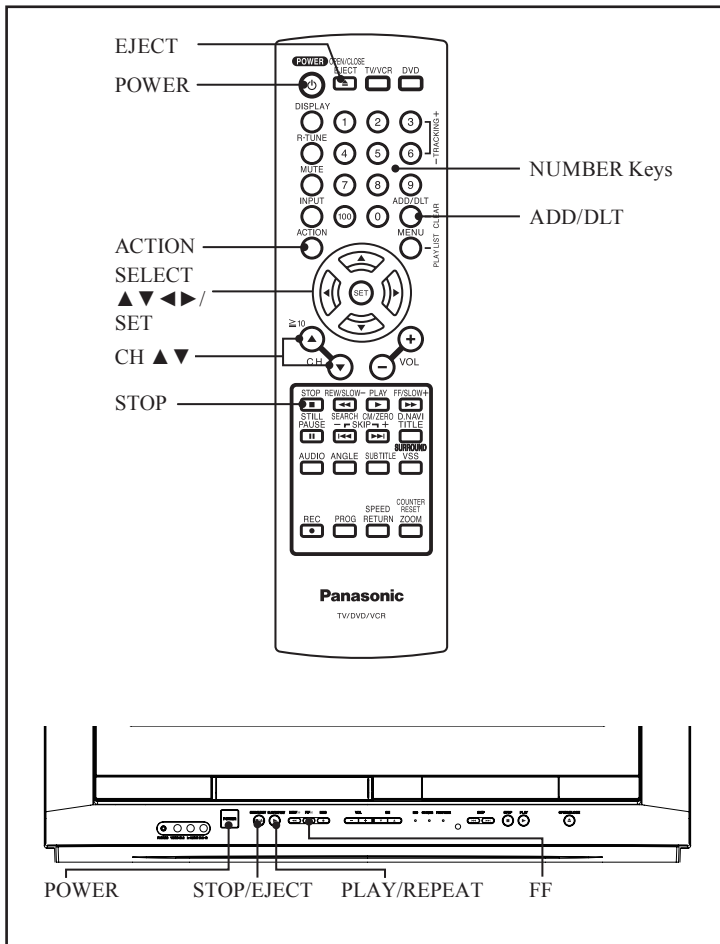


## Case 2

If setup is incomplete, the following screen appears. Check connection of Antenna/Cable to the RF in Terminal, then try to manually set the clock as follows.

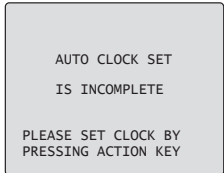


**a. Press ACTION on the Remote Control to display SET CLOCK Menu screen.**

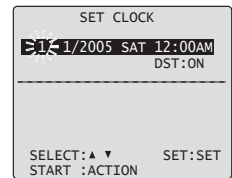

**b. Press ▲▼ to select the month and press SET to set. In the same manner, select and set the date, year, time, and DST (Daylight Saving Time).**

- Press ◀ repeatedly to move the cursor. Press ▲▼ to make a correction.

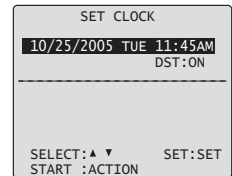


**c. Press ACTION twice to start CLOCK and exit.**

## Initial Setup (Ready to Play)

Please make all cable or antenna connections before powering on. Plug the unit power cord into an AC wall outlet.


- 1 Press POWER on the Remote Control or unit. Auto channel and clock set start.**
  - If you use a cable box, turn it on and set it to the Public Broadcasting Service (PBS) channel in your time zone. If you use a DSS receiver, it must be turned off.

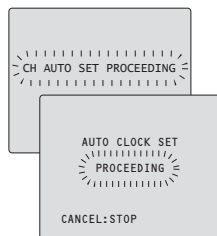

- Function buttons are void during Initial Setup.
- To eject a tape during Auto Set, press the unit STOP/EJECT button twice. Then, make settings manually. (See pages 14-15.)
- If Auto Clock Set takes more than 30 minutes, press STOP and perform settings manually. (See pages 14-15.)

## Case 1


Settings are made automatically. When complete, this screen appears.

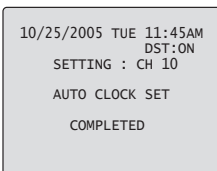


## Automatic Channel Setting

**1 Press ACTION to display MAIN MENU.**

**2 Press ▲▼◀▶ to select "CH."**

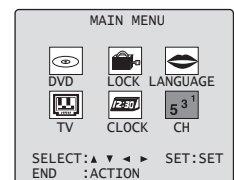

**3 Press SET to display SET UP CHANNEL screen.**

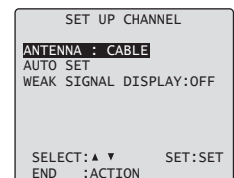

**4 Press ▲▼ to select "ANTENNA," then press SET to set your antenna system ("TV" or "CABLE").**

**5 Press ▲▼ to select "AUTO SET," then press SET.**

### Note:

- After Channel Auto Set is finished, Clock Auto Set will be performed. (If clock is set manually, Clock Auto Set will not be performed.)

## Add or Delete a Channel

### ■ To add channel:

Select channel with NUMBER keys and press ADD/DLT.



### ■ To delete channel:


Select channel with CH ▲▼ or NUMBER keys and press ADD/DLT.




## Automatic Clock Setting

**1** Press ACTION to display MAIN MENU.

**2** Press ▲▼◀▶ to select "CLOCK."

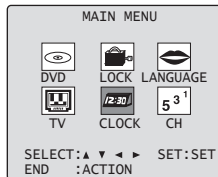

**3** Press SET to display SET CLOCK screen.

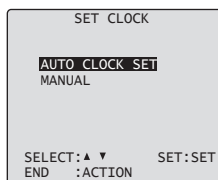


**4** Press ▲▼ to select "AUTO CLOCK SET," then press SET.

## Manual Clock Setting


**1** Press ACTION to display MAIN MENU.

**2** Press ▲▼◀▶ to select "CLOCK."

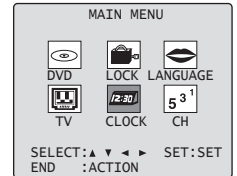


**3** Press SET to display SET CLOCK screen.

("TIME ZONE ADJUST" appears only when auto clock is set.)

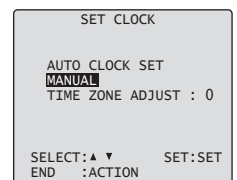

**4** Press ▲▼ to select "MANUAL," then press SET.

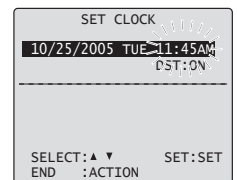

**5** Press ▲▼ and press SET to select and set the month, date, year, time, and DST (Daylight Saving Time).


To Make Corrections, repeatedly press ◀ to move to error, then correct.

**6** Press ACTION twice to start the clock and exit this mode.


## Time Zone Adjust

(Only when Auto Clock is set.)



- 1 Press ACTION to display MAIN MENU.
- 2 Press ▲▼◀▶ to select "CLOCK."

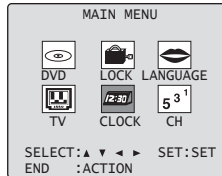

- 3 Press SET to display SET CLOCK screen.

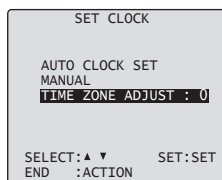

 - 4 Press ▲▼ to select "TIME ZONE ADJUST" and press SET to subtract or add hour(s) as necessary.

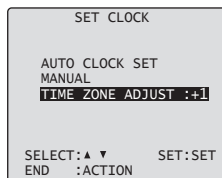


- 5 Press ACTION twice to exit.

### Note:


- If set manually time zone does not appear.

## Change Language Setting


- 1 Press ACTION to display MAIN MENU.
- 2 Press ▲▼◀▶ to select "LANGUAGE."

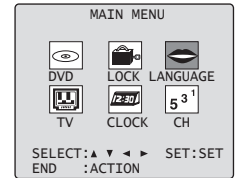


- 3 Press SET repeatedly.

 


For English

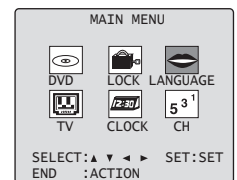

For Spanish

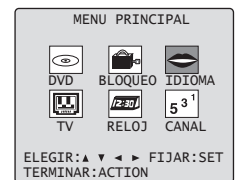

For French

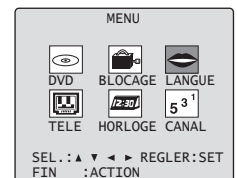

- 4 Press ACTION to exit.


## Reset all unit Memory Functions

Returns to factory setting. Use if relocating unit, or if Initial Setup needs to be redone.

- Make sure a tape and/or disc is not inserted in unit.

- 1 Turn the unit Power on.
- 2 Hold down both PLAY/REPEAT and FF on the unit for more than 5 seconds.
  - The power will shut off.
  - Please ignore "NO CASSETTE" warning.
- 3 Perform "Initial Setup" on page 13.

# TV Operation

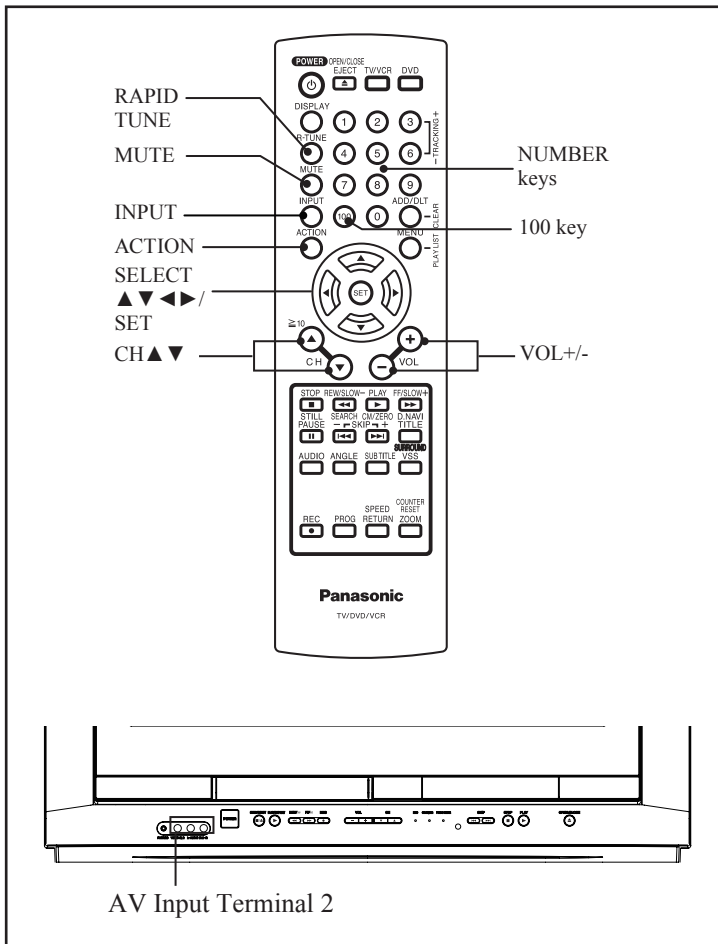


## Method 2:

Press INPUT. The display will change as follows.




## Method 3:

- 1 Press ACTION for MAIN MENU.
- 2 Press ▲▼◀▶ to select "TV", then press SET for SET UP TV screen.

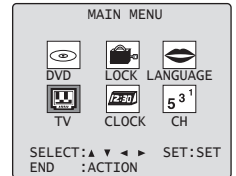

- 3 Press ▲▼ to select "INPUT SELECT," and then press SET to select "TUNER", "LINE 1", or "LINE 2."

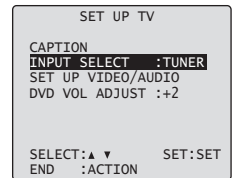

- 4 Press ACTION twice to exit this mode.

### LINE 1:

Signal of source connected to AV Input terminal 1 is displayed. (Rear of the unit.)

### LINE 2:

Signal of source connected to AV Input terminal 2 is displayed.

### TUNER:

Signal of source connected to VHF/UHF terminal is displayed.


## Selecting Input Mode

### Method 1:

Press CH ▲▼. The display will change as follows.

#### Notes:

- The diagram at right is an example.
- TV CH 2 and CABLE CH 1 represent the lowest channels in memory, while TV CH 69 and CABLE CH 125 represent the highest channels in memory.

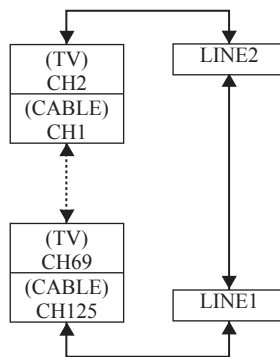

## Using the CH/VOL Button

### Select desired channel:

Press CH ▲▼ or NUMBER keys.

### Adjust desired volume level:

Press VOL + or VOL -.

## Using the Number and 100 keys

When selecting CABLE channels 100 to 125 with the NUMBER keys, first press the 100 key, and then enter the remaining two digits.

#### Example 1:

To select channel 125, first press the 100 key, then 2, then 5.

#### Example 2:

To select channel 12, first press the 1 key, then 2.

#### Example 3:

To select channel 2, first press the 0 key, then 2.



## Rapid Tune

Press R-TUNE to display the last channel you were watching.

## Audio Mute

Press MUTE to instantly mute the sound. Press again to restore the previous sound level.

## Surround Sound System

You can hear a deeper, 3-D sound effect using just the unit's two front speakers.

- 1 Press **SURROUND**.  
• "SURROUND ON" is displayed.

To Cancel, press **SURROUND**.


### Notes:

- Surround sound effect is not available for normal (mono) broadcasts.
- The surround effect (TV, VCR mode only) is not output to Audio Output L/R Connector.


## Weak Signal Display Feature

When "ON" is selected, the picture is displayed even when a broadcast signal is weak or non-existent.

- 1 Press **ACTION** to display **MAIN MENU**.
- 2 Press **▲ ▼ ◀ ▶** to select "CH."
- 3 Press **SET** to display **SET UP CHANNEL** screen.

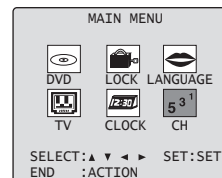

- 4 Press **▲ ▼** to select "WEAK SIGNAL DISPLAY."
- 5 Press **SET** to set "ON" or "OFF."

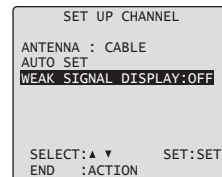

### ON:

Picture is displayed regardless of signal condition, and may not always be clearly visible.

### OFF:


Screen turns solid blue when signal is absent or weak.

### Note:

- If the unit is connected to equipment which has a blue screen feature, selecting "ON" will have no effect on the other equipment.

- 6 Press **ACTION** twice to return to the normal screen.

# MTS Broadcast / TV Stereo System

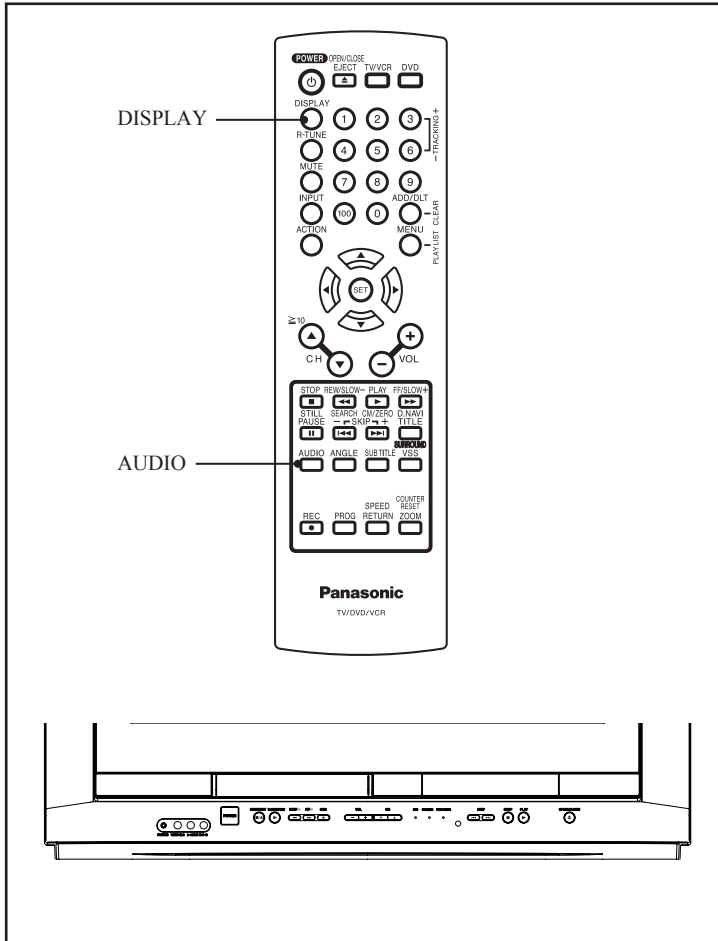


Equipped with **dbx**<sup>®</sup>-TV Noise Reduction for true MTS reproduction. **dbx**<sup>®</sup>-TV Noise Reduction is required for good stereo separation and audio fidelity. **dbx**<sup>®</sup> is a registered trademark, and is licensed by **dbx**<sup>®</sup> Technology Licensing.

## Audio Mode for TV Viewing

### 1 Press AUDIO to select the desired audio mode as described above. (Arrow shows selection.)

- Each press of AUDIO will change the audio mode as shown below.
- "SAP" is selected with first press of AUDIO.

< Example >

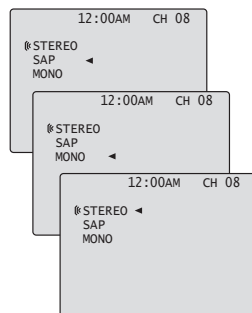

## Receivable Broadcast Types


The following are possible audio broadcast types and on-screen displays. The signal being received is indicated with a "Ⓢ" mark while the selected audio mode is indicated with an arrow. To change the audio mode for these broadcasts, see the "Audio Mode for TV Viewing" section.

### 1 Press DISPLAY to display the broadcast signal being received.

#### ■ MTS Stereo broadcast:


Multi-channel Television Sound Stereo broadcast. Select STEREO audio mode.

- If stereo broadcast is weak and the display flickers, select MONO audio mode for possible improvement.

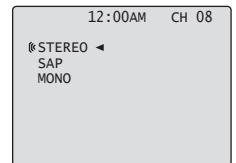


#### ■ SAP broadcast:

Secondary Audio Program (sub language). Select SAP audio mode for the sub language.

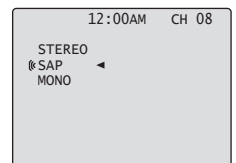


#### ■ MTS Stereo and SAP broadcast:

Multi-channel Television Sound Stereo (main language) and Secondary Audio Program (sub language) broadcasts are being received simultaneously. Select the STEREO or SAP audio mode.

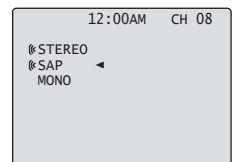


#### ■ MONO broadcast:


Normal monaural sound broadcast.

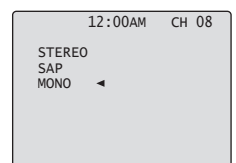

# TV Timer Features

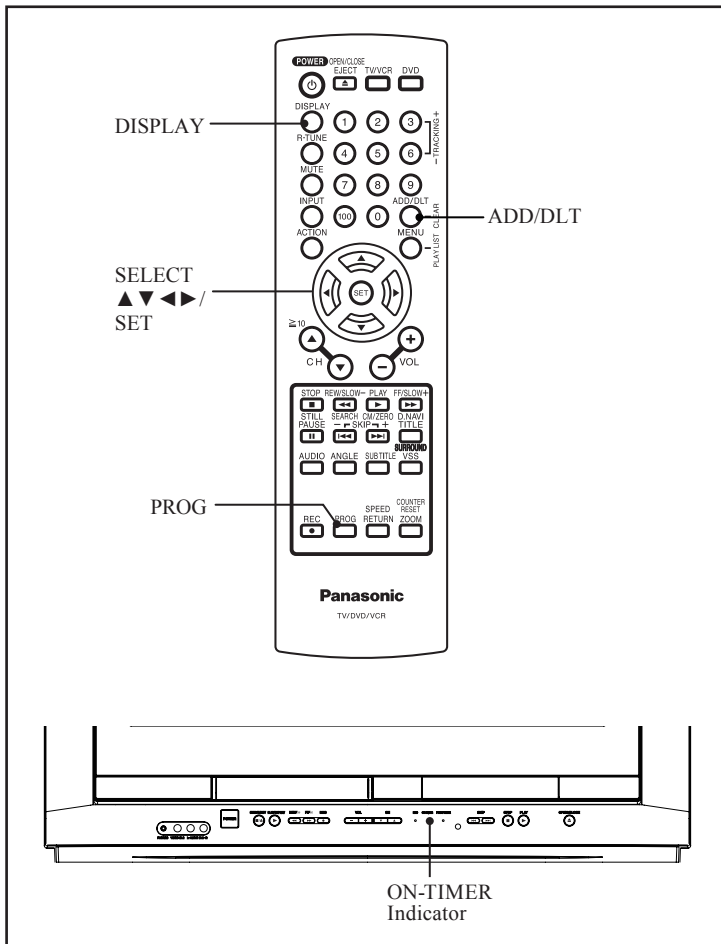


- Make sure a tape is inserted if Playback mode is selected.
- Make sure a disc is inserted if Disc (DVD/CD/Video CD) mode is selected.

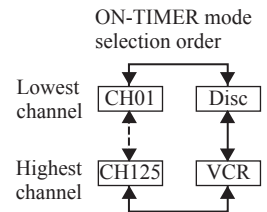

To Make Corrections, use ▲▼ and ◀▶ to move back and correct.

## 6 Press PROG to set ON TIMER.

- "ON TIMER SET" is displayed.
- PROG TIMER Indicator lights up on the unit.

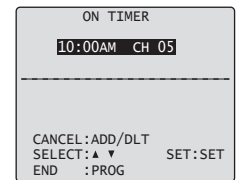

### To Cancel ON-TIMER,

Repeat steps 1-3. Then, press ADD/HLT to clear the time in steps 4-5. Now, press PROG to end. "ON TIMER END" briefly appears on-screen.


### Note:

- If no button on the remote or unit is pressed within 60 minutes after unit turns itself on, it will turn itself back off.


## ON-TIMER

This unit can be set to automatically power on in one of 3 modes (TV, VCR Playback, or Disc.)

- 1 Press PROG to display SET PROGRAM screen.
- 2 Press ▲▼ to select "ON TIMER."
- 3 Press SET to display ON TIMER screen.

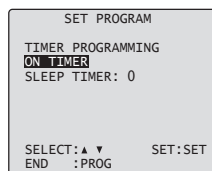


- 4 Press ▲▼ to select desired settings.
- 5 Press SET to set the ON-TIMER time and ON-TIMER mode.

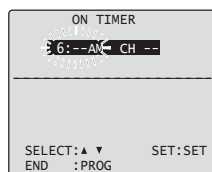


## Sleep Timer

This unit can be set for auto power off.

- 1 Press PROG to display SET PROGRAM screen.
- 2 Press ▲▼ to select "SLEEP TIMER."
- 3 Press SET repeatedly to select the desired time.

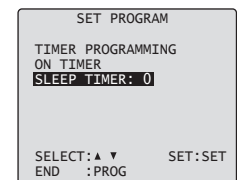

 
To cancel, press SET repeatedly until 0 appears.



## 4 Press PROG to return to the normal screen.

- Pressing DISPLAY with sleep timer set displays remaining time.

# Closed Caption System

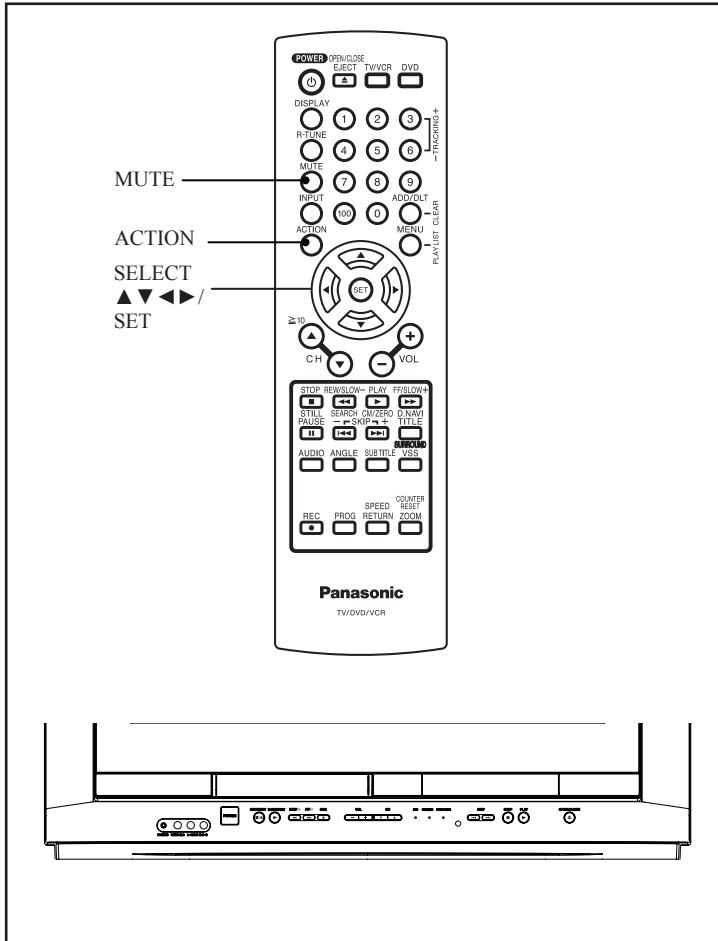


## Closed Caption is ...

This multi-use system not only allows the hearing impaired to enjoy selected programs, but also allows one to watch programs with the volume muted.

## Closed Caption Mode Feature

**1** Press ACTION to display MAIN MENU.


**2** Press ▲▼◀▶ to select "TV."

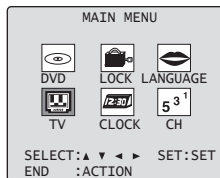

**3** Press SET to display SET UP TV screen.


**4** Press ▲▼ to select "CAPTION".

**5** Press SET to display CAPTION screen.

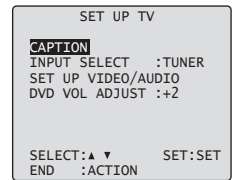

**6** Press ▲▼ to select "CAPTION MODE."

**7** Press SET repeatedly to select mode.

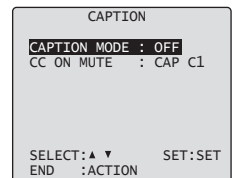

### ■ Caption Mode: CAP C1 or C2

A narration of selected TV programs is displayed. Check TV program listings for CC (Closed Caption) broadcasts.

### ■ Caption Mode: TEXT C1 or C2

Most of the screen will be blocked out. When the TV station broadcasts information, such as program listings, it will appear in this space.

### ■ Caption Mode: OFF

Closed Caption/Text narration will not be displayed.

**8** Press ACTION three times to return to the normal screen.


### Notes:

- The closed caption or text signal may be broadcast over C1, C2, or both. Also, text contents can vary so you may wish to try different settings.
- The closed caption display may overlap the display of a Disc.


## Caption On Mute Feature

Closed Caption narration, if available, is displayed when MUTE button is pressed for silence.


- 1 Press ACTION to display MAIN MENU.
- 2 Press ▲▼◀▶ to select "TV."
- 3 Press SET to display SET UP TV screen.

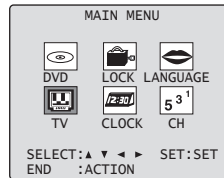



- 4 Press ▲▼ to select "CAPTION".
- 5 Press SET to display CAPTION screen.

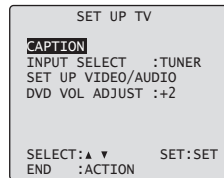

- 6 Press ▲▼ to select "CAPTION MODE."
- 7 Press SET repeatedly to select "OFF."

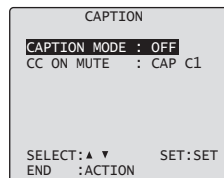

 - 8 Press ▲▼ to select "CC ON MUTE."
- 9 Press SET repeatedly to select desired mode.
  - The caption may be broadcast over CAP C1 or C2.

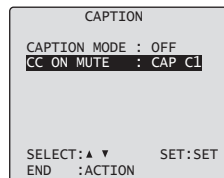

### ■ CC ON MUTE: CAP C1 or C2

A narration of selected TV programs is displayed when MUTE button is pressed for silence.

### ■ CC ON MUTE: NO

A narration will not be displayed when MUTE button is pressed for silence.

- 10 Press ACTION three times to return to the normal screen.

- 11 Press MUTE to mute the sound and display closed captioning.

• To cancel, press MUTE again.

#### Note:

- When a disc supporting closed captions is used, the subtitle and the closed caption may overlap. In this case, turn the subtitle or caption mode off. (See page 39.)

## Recording and Playing Back a Closed Caption/Text Program


### ■ Record:

Record normally. Closed Caption/Text signal, if present, is recorded automatically.

### ■ Playback:

Start playback. Perform steps to select desired caption mode.


# Video / Audio Setting

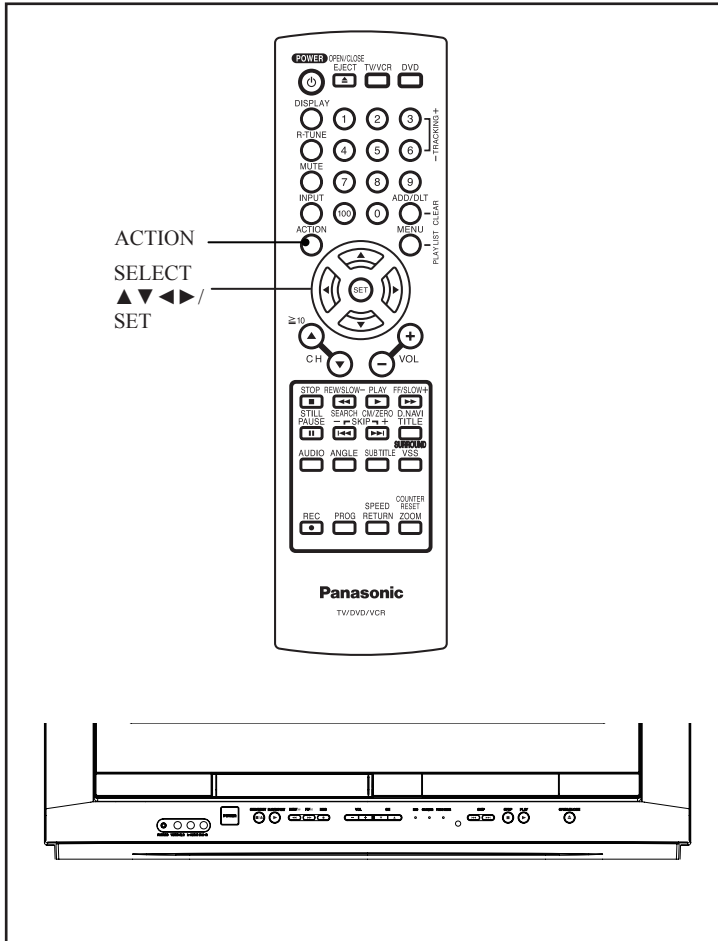


This feature allows easy setting of picture and sound suitable for each program source.

## Video Menu


- 1 Press ACTION to display MAIN MENU.
- 2 Press ▲▼◀▶ to select "TV."
- 3 Press SET to display SET UP TV screen.

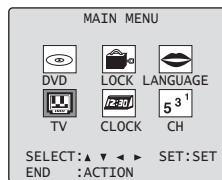

- 4 Press ▲▼ to select "SET UP VIDEO/AUDIO."
- 5 Press SET to display SET UP VIDEO/AUDIO screen.

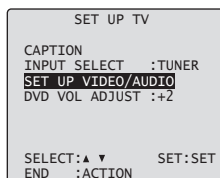

- 6 Press ▲▼ to select "VIDEO MENU."
- 7 Press SET repeatedly to select desired mode.

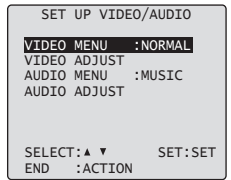


NORMAL	Factory setting.
MOVIE	Picture is adjusted for a movie-like feel.
NIGHT	Color and picture intensity are adjusted to be easier on the eyes for night viewing.

- 8 Press ACTION three times to end setup.

## Audio Menu

- 1 Perform steps 1 - 5 at left.
- 2 Press ▲▼ to select "AUDIO MENU."
- 3 Press SET to select desired mode.

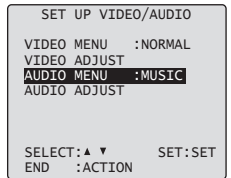

MUSIC	Sound suited to music. (Factory setting)
SPEECH	Sound suited to dialogue.
NORMAL	
AUTO	[Audio AGC (Auto Gain Control)] The sound level is automatically adjusted to suit the program source.  <Audio AGC Example>
MOVIE	Sound suited to movies.

- 4 Press ACTION three times to end setup.

### Notes:


- The effects of this feature on the signal are not output to the Audio/Video Output Connector.
- When AUDIO MENU mode is "AUTO," the AUDIO ADJUST setting will be "STANDARD."
- AUDIO MENU settings remain in memory.
- VIDEO MENU settings do not remain in memory.

## Video Adjustment

**1** Press ACTION to display MAIN MENU.


**2** Press ▲▼◀▶ to select "TV."

**3** Press SET to display SET UP TV screen.

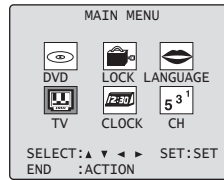


**4** Press ▲▼ to select "SET UP VIDEO/AUDIO."

**5** Press SET to display SET UP VIDEO/AUDIO screen.

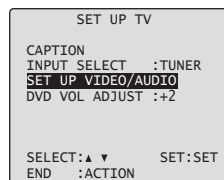

**6** Press ▲▼ to select "VIDEO ADJUST."

**7** Press SET to display VIDEO ADJUST screen.

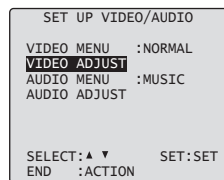

**8** Press ▲▼ to select an item.

**9** Press ◀▶ to adjust.



<b>COLOR Control</b>	Adjust color intensity.
<b>TINT Control</b>	Adjust for natural flesh tones.
<b>BRIGHTNESS Control</b>	Adjust picture brightness.
<b>PICTURE Control</b>	Adjust picture intensity by adjusting both contrast and color level in the proper balance.
<b>SHARPNESS Control</b>	Increases or decreases the level of detail in the image.

### ■ To Reset VIDEO Controls.

Press ▲▼ and SET to select and set "STANDARD." All controls return to their factory settings.


**10** Press ACTION four times to end setup.

## Audio Adjustment

**1** Press ACTION to display MAIN MENU.


**2** Press ▲▼◀▶ to select "TV."

**3** Press SET to display SET UP TV screen.

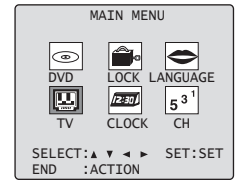


**4** Press ▲▼ to select "SET UP VIDEO/AUDIO."

**5** Press SET to display SET UP VIDEO/AUDIO screen.

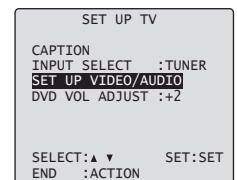


**6** Press ▲▼ to select "AUDIO ADJUST."

**7** Press SET to display AUDIO ADJUST screen.

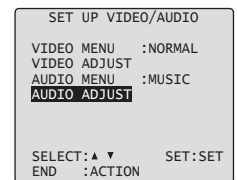

**8** Press ▲▼ to select an item.

**9** Press ◀▶ to adjust.

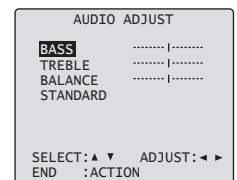

<b>BASS Control</b>	To adjust the intensity of low frequency sound.
<b>TREBLE Control</b>	To adjust the intensity of high frequency sound.
<b>BALANCE Control</b>	Controls the difference in audio level between the left and right speaker.



- The levels set here do not affect other audio equipment when connected to the Audio Output L/R Connector.

### ■ To Reset AUDIO Controls.

Press ▲▼ and SET to select and set "STANDARD." All controls return to their factory settings.

**10** Press ACTION four times to end setup.

# Before using the VCR

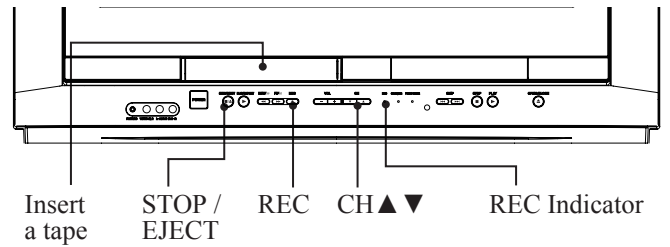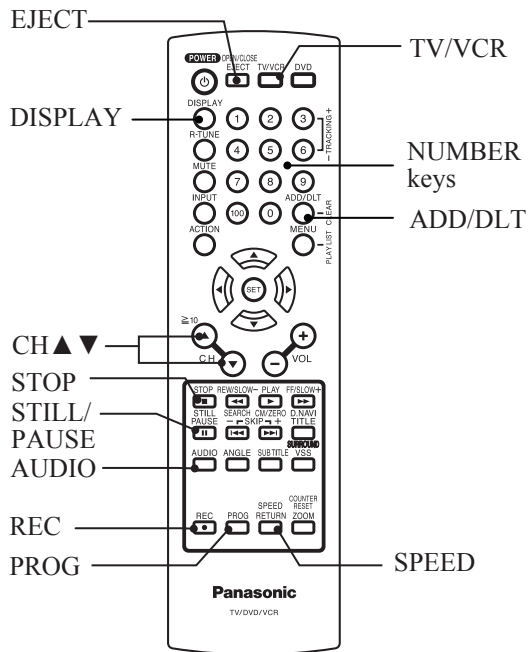


## Before using VCR Functions


- 1 Confirm that tape is inserted.
- 2 Press TV/VCR.

## Inserting a Tape

 - 1 Insert a tape.
  - The unit power comes on automatically.



To prevent tape jam,  
remove loose or peeling labels from tapes.

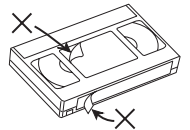

### ■ Eject tape

Press EJECT on the remote or STOP/EJECT on the unit.



# Recording Television Programs

## Record On a Tape

- 1 Insert a tape with record tab.**
  - The unit power comes on automatically.
- 2 Press CH ▲ ▼ or NUMBER keys to Select Channel.**
  - For "LINE" input, see page 16.
- 3 Press SPEED to select recording speed.**
  - Selected speed is displayed.

SP = Standard Play  
SLP = Super Long Play

### ■ Recording modes and approximate recording times

Only use tapes with the **VHS** mark in this unit.

 
Tape Speed Setting	Type of Video Cassette		
	T60	T120	T160
SP (Standard Play)	1 Hour	2 Hours	2 Hours 40 Minutes
SLP (Super Long Play)	3 Hours	6 Hours	8 Hours

- 4 Press REC to start recording.**
  - You cannot view another channel during recording.

### ■ One Touch Recording (OTR)

Press REC repeatedly to set the recording length (30 min - 4 hours.)

- The unit stops recording at a preset time.
- PROG TIMER Indicator lights on the unit.



### ■ Pause a Recording

- Press STILL/PAUSE.
- Press STILL/PAUSE to resume recording.

#### Notes:

- It is not possible to record from DVD/CD/Video CD to VHS tape using the unit.
- After the unit has been in Rec Pause mode for 5 minutes, it will stop automatically to protect the tape and the video head.
- The remaining recording time of an OTR can be displayed by pressing DISPLAY.
- When an OTR is paused, the pause time is also factored into the total recording length.

## Stop Recording

- 1 Press STOP to stop recording.**

## Audio Mode for Recording


### With the proper audio mode setting, your unit can:

- Record and playback MTS stereo broadcast (main language) in stereo Hi-Fi. Stereo sound is recorded on the left and right audio tracks and on the video portion of a tape.
- Record and playback a monaural broadcast (main language) or SAP (Secondary Audio Program, usually in a second language) on the Hi-Fi tracks for better quality monaural sound.
- Playback non-Hi-Fi tapes in monaural.

Choose audio mode to match recording type.

- 1 Press AUDIO repeatedly to select the audio mode according to the type of broadcast to be recorded.**

- The Audio mode selected stays in effect until it is changed.
- Refer to "MTS Broadcast / TV Stereo System" on page 18.

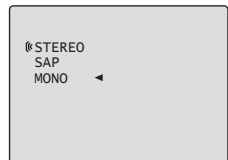

- 2 See the "Record On a Tape" section to do a recording.**

#### Notes:

- Refer to "Audio Mode for Playback" on page 28.
- Only tapes recorded in Hi-Fi stereo will playback with true stereo sound. Standard stereo tapes will playback with monaural sound.
- To listen to Hi-Fi stereo playback, the unit AUDIO (L/R) jacks must be connected to a stereo amp and speakers.
- There may be a difference in audio level between Hi-Fi and normal audio playback.


## Timer Recording

### Set up to 8 Programs

You can set up to 8 programs to be recorded while you are away.

**1** Press PROG to display SET PROGRAM screen.

**2** Press ▲▼ to select "TIMER PROGRAMMING."

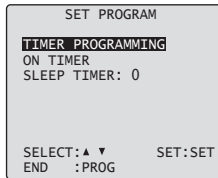


**3** Press SET to display screen.

- If a program is already in memory, press ▲▼, and SET to select an unused program number.

**4** Press ▲▼ to select and SET or ◀▶ to set the recording DATE.


- 1~31 = One time
- DAILY (day) = Monday~Friday
- WEEKLY (SU~SA) = Same time once a week

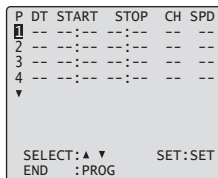


**Repeat step 4 to set:**

- Start time, stop time
- Channel (or LINE for outside source)
- Speed (SP, SLP)

Example:

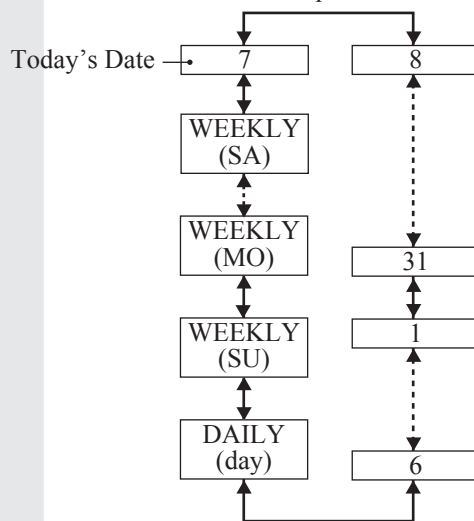

**5** Press PROG to set the program. To Enter More Programs, press ▲▼ to select and SET to set a blank program number, and then repeat step 4.

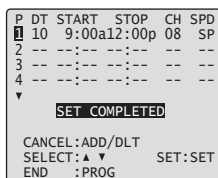


**6** Press PROG twice to exit this mode.

- If you're using a cable box, make sure that it is tuned to the desired channel and the power is left on for timer recording.
- PROG TIMER indicator lights up on the unit.

### Review, Replace or Clear Program Contents : (Recording is not in progress)


**1** Press PROG to display SET PROGRAM screen.

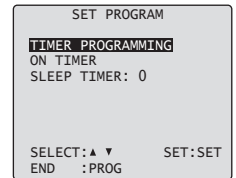

**2** Press ▲▼ to select "TIMER PROGRAMMING."


**3** Press SET to display screen.

**4** Press ▲▼ to select the desired program.

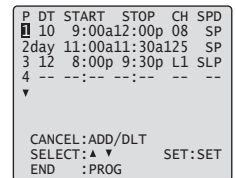


#### ■ To Replace program...

- Press SET to display.
- Press ▲▼ to select and press SET or ◀▶ to set new program contents.
- Press PROG.

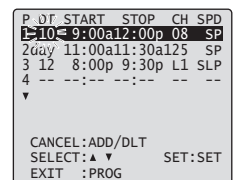

#### ■ To Clear program...

Press ADD/DLT.

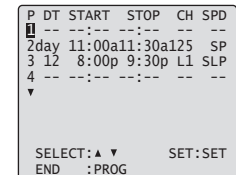

**5** Press PROG twice to exit this mode.

#### Notes:


- 2 minutes before Timer recording is performed, "PLEASE PREPARE FOR TIMER REC" appears and/or the PROG TIMER Indicator flashes. Be sure a cassette with record tab is loaded and the unit is in Stop mode.
- If the start times of two programs overlap, the lower numbered program will have priority.
- If the start time for a Timer Recording comes up during a normal recording or One Touch Recording (page 25), the Timer Recording will not be performed.
- If there is a power interruption of more than one minute, the recording may not be performed or continued.
- If "INCOMPLETE" appears after all items have been set, check all entries and make necessary corrections.

### Cancel a Timer Recording: (Recording is in progress)

**1** Hold down STOP for a few seconds to cancel the Timer Recording.

- Any future daily or weekly recordings will be performed as programmed.

# Playing VCR

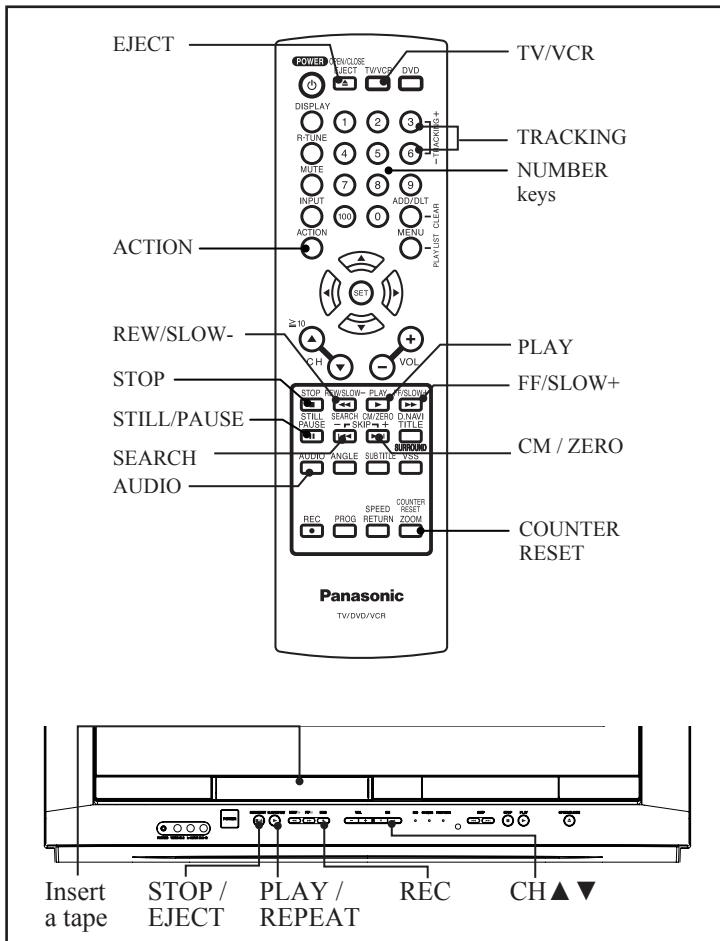

## ■ Slow Motion picture

- Press STILL/PAUSE.
- Press FF/SLOW+ (increases speed) or REW/SLOW- (decreases speed) in Still mode.
- Press PLAY to release.

## ■ Frame by Frame picture

- Press STILL/PAUSE.
- Press STILL/PAUSE in Still mode.
- Press PLAY to release.

### Notes:

- These features work best in SLP mode.
- After 3 minutes in Still or Slow mode, unit stops to protect the tape and the video heads.

## Stop a Tape

### Press STOP.

#### ■ Rapid Rewind tape

Press REW/SLOW- in Stop mode.  
Rewinds a T-120 tape in approx. 1 minute.

#### ■ Rapid Fast forward tape

Press FF/SLOW+ in Stop mode.

#### ■ Eject tape

Press EJECT on the Remote Control or STOP/EJECT on the unit.

## Playback a Tape

- 1 Insert a tape with record tab. (p. 24)**
  - The unit power comes on automatically.

- 2 Press PLAY to play a tape.**
  - If tape has no record tab (see page 6), auto play begins.

### Note:

- To reduce picture noise, see "Manual Tracking Control" on page 29.

#### ■ Forward/Reverse scene search

- Press FF/SLOW+ or REW/SLOW-.
- Press PLAY to release.

- FF and REW search speed may vary depending on current tape position.
- After 10 minutes in search mode, unit returns to Play mode to protect the tape and the video heads.

#### ■ Still (Freeze) picture

- Press STILL/PAUSE.
- Press PLAY to release.

## Repeat Play

Set to see a recording over and over.



#### ■ To turn "ON"

Press PLAY/REPEAT on the unit repeatedly in Play mode to select "REPEAT ON."

#### ■ To turn "OFF"

Repeat above to select "REPEAT OFF."


### Notes:

- Playback repeats when tape end is reached or an unrecorded portion longer than 30 seconds is detected.
- For repeat play in disc mode, see pages 42-44.

## Zero Search

To quickly return to a specific tape counter location.

- 1 Press **DISPLAY** during playback to display the Counter.
- 2 Press **COUNTER RESET** at the desired position to reset to "0:00:00."

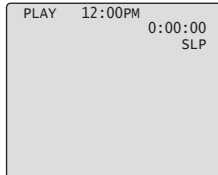


- 3 Continue to record, playback, etc.
- 4 Press **STOP**.
- 5 Press **CM/ZERO** in Stop mode to start **ZERO SEARCH**.
  - Unit will go into FF or REW mode and stop at the last point the Counter was set to 0:00:00.

## Audio Mode for Playback

Choose the type of sound track for playback.

- 1 See the "Playback a Tape" section on page 27 to playback the tape.
- 2 Press **AUDIO** repeatedly (each press within 5 seconds) to select desired mode.
  - Select "HIFI (L/R)," to listen to a regular Hi Fi Stereo recording. Select "HIFI (L)" or "HIFI (R)" to listen only to the left or right channel of a stereo recording. This is commonly used for Karaoke, music on one channel and vocals on the other. Select "NORMAL" for linear stereo playback from a recorded tape with Hi Fi disabled.
  - This screen appears when you press AUDIO during playback.

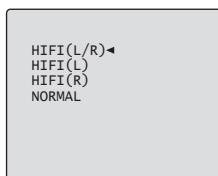


## Index Search

### Search System is ...

Each time a recording is made, an invisible index mark is placed on the tape. When timer recordings are made, program index and information are also included. These index marks can be used to access or scan recordings.

Go directly to the desired recording.

- 1 Press **SEARCH** in Playback or Stop mode to display **INDEX SEARCH** screen, and then press **NUMBER** keys to select the recording number.

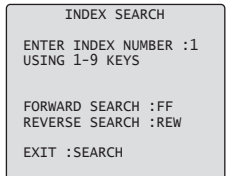

- 2 Press **FF** or **REW** to start search.


Example 1:

To go to rec. 2 from rec. 4, enter 3 and press REW.



Example 2:

 To go to rec. 6 from rec. 2, enter 4 and press FF.




NOTE: ↓ indicates start points of each recording.

### Note:

- If Index Search is started very close to an index mark, that index mark may not be counted in the search.

- 3 Play begins at search end. To search forward or back 1 index, press **FF** or **REW** while screen below is displayed (10 seconds).

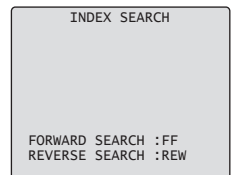


- To cancel, press **STOP**.

## Commercial Skip

By pressing CM/ZERO in Playback mode you can skip over 1, 2, or 3 minutes of recorded tape as desired.

- 1 Press CM/ZERO repeatedly to select skip time in Playback mode.

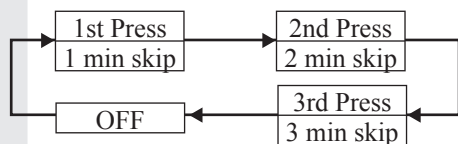

**Note:**

- No indication appears.

## Auto Playback

Insert a tape in Power off mode.

**Power turns on, → Play.**

**Note:**

- Playback begins if tape has no record tab.

## Auto Rewind

(except for Recording)

Tape reaches its end

**Rewind, → Stop.**

## Playback Auto Eject

(Repeat Play must be "OFF")

Tape with no record tab reaches its end

**Rewind, → Stop, → Eject.**

## Digital Auto Tracking

Continuously analyzes the signal and adjusts for optimum picture quality.

## Manual Tracking Control

Use during Playback and Slow Motion mode to reduce picture noise. Press the 3 or 6 number key on the remote control or CH ▲ ▼ on the unit until the picture clears up. To return to Auto Tracking, press POWER off, then on again a few seconds later.



## V-Lock Control

In Still mode, the 3 or 6 number key on the remote control or CH ▲ ▼ on the unit operate as a V-Lock control to reduce jitter.

## VCR Lock

All operations are prohibited except Timer recording and tape eject. Useful for families with small children.

**In Stop mode, hold down REC on the unit without a cassette inserted for 7 seconds to turn "ON."**

(Please ignore "NO CASSETTE" warning.)

VCR LOCK ACTIVATED

**Repeat above with or without cassette to turn "OFF."**

VCR LOCK OFF

**Note:**

- VCR Lock is canceled automatically after about 24 hours if clock is set.

# Copy Your Tapes (Dubbing)

Refer to page 10 "Connecting the "1, 2" Input Terminal" before you perform this operation.

## IMPORTANT

Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.


### Note:

- Please note that some tapes cannot be dubbed on this unit. Also, it is not possible to dub DVD/CD/Video CD to VHS tape using this unit.

## Playback (Source) unit



1

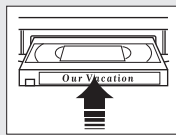

Insert pre-recorded tape.

2

Press **PLAY**, then press **PAUSE** at starting point to put in Standby mode.



3

Press **PLAY** to start dubbing.  
Playing Source unit starts playback.

4

Press **STOP** to stop dubbing.

## Recording (Editing) unit

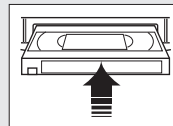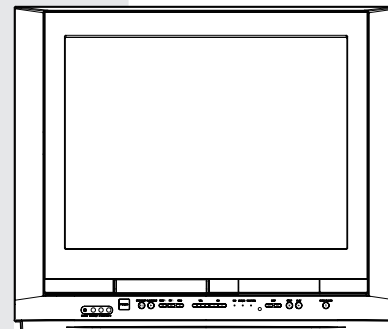

Insert blank tape with record tab.

- Dubbing tapes protected with Copy Guard will have poor quality results.

Select "**LINE**" mode.

See page 16 "Selecting Input Mode".


Press **REC**, then press **STILL/PAUSE** immediately to put in Standby mode.

Press **STILL/PAUSE** to start dubbing.  
Editing unit starts recording.

Press **STOP** to stop dubbing.

(Perform operation of steps 3 and 4 on both units at same time.)

# V-Chip Control Features

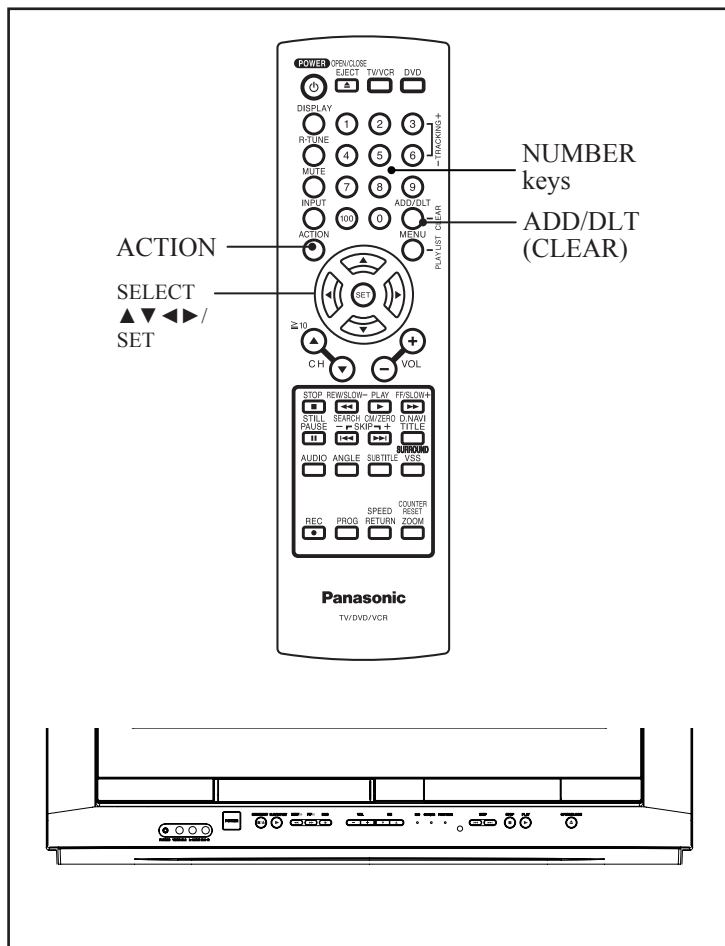


## V-Chip Control Feature is...

This unit has a built-in V-Chip Control which allows you to block unwanted TV usage based on US MOVIES, US TV PROGRAMS Ratings, Canadian English Language Ratings and Canadian French Language Ratings.


## Enter Secret Code

A 4-digit code must be entered to view a blocked program or change rating settings.


- 1 Press ACTION to display MAIN MENU.
- 2 Press ▲▼◀▶ to select "LOCK."
- 3 Press SET to display LOCK screen.

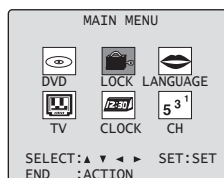

- 4 Press NUMBER keys to enter your secret code.
  - Take care that you are not observed entering the secret code.

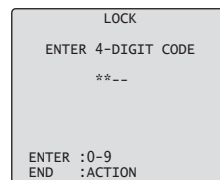

- 5 Enter same code again for confirmation.

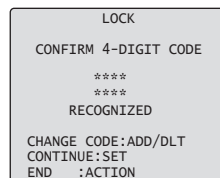

### To Make Corrections

- a. Press ◀ repeatedly to move the cursor.
- b. Press NUMBER keys to make the correction.

- 6 Press SET to display Ratings menu (see pages 32-34). Or press ACTION twice to exit.


### Notes:

- Some rental movies do not include V-Chip data.
- Do not forget your secret code.
- Once ratings are set, restricted tapes or programs cannot be accessed unless the secret code is entered.
- Step 5 not necessary when changing rating.

## Changing your secret code

You will need your current code.

- 1 While this OSD (on screen display) is displayed, press ADD/DLT (CLEAR) to clear current code.

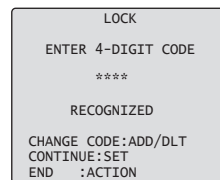

- 2 Enter new secret code.


If LOCK menu is not displayed, perform "Enter Secret Code" steps on page 31.

## US MOVIES Ratings

- 1 Press ▲▼ to select "US MOVIES."  
 • "NEXT PAGE" displays CANADIAN V-Chip settings menu. Please refer to page 33 for more details on Canadian tapes or broadcasts.


- 2 Press SET to set "ON" or "OFF."

**ON:**  
V-Chip Control is activated.  
**OFF:**  
V-Chip Control is deactivated.

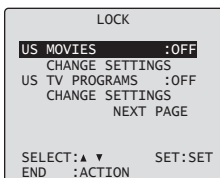

- 3 Press ▲▼ to select "CHANGE SETTINGS."


- 4 Press SET to display screen.

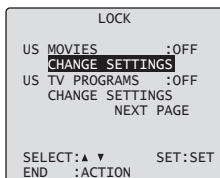

- 5 Press ▲▼ to select "VIEW NR PROGRAMS?."


- 6 Press SET to set "YES" or "NO."

■ **NR (Not Rated) PROGRAMS:**  
Some movies, such as old movies or foreign movies, have no ratings.

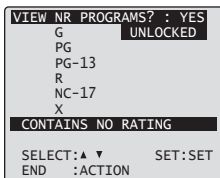

- 7 Press ▲▼ to select and SET to set ratings to be blocked.

• See "US MOVIES Ratings Chart" on page 34.

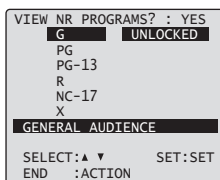


- 8 Press ACTION to redisplay LOCK menu and continue with US TV PROGRAMS Ratings. Or, press ACTION three times to exit.

## US TV PROGRAMS Ratings

- 1 Press ▲▼ to select "US TV PROGRAMS."  
 • "NEXT PAGE" displays CANADIAN V-Chip setting menu. Please refer to page 33 for more details on Canadian tapes or broadcasts.


- 2 Press SET to set "ON" or "OFF."

**ON:**  
V-Chip Control is activated.  
**OFF:**  
V-Chip Control is deactivated.

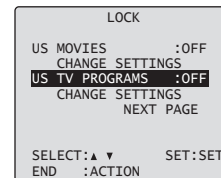

- 3 Press ▲▼ to select "CHANGE SETTINGS."


- 4 Press SET to display screen.

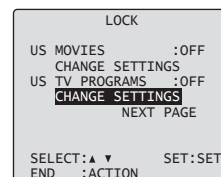

- 5 Press ▲▼ to select "VIEW NR PROGRAMS?."


- 6 Press SET to set "YES" or "NO."

■ **NR (Not Rated) PROGRAMS:**  
Some TV shows, such as news, sports, weather, bulletins, emergency information have no ratings.

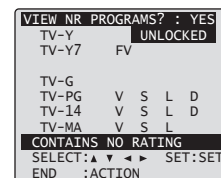

- 7 Press ▲▼ to select and SET to set ratings to be blocked.

• See "US TV PROGRAMS Ratings Chart" on page 34.  
 • You may select from standard TV ratings (chart 1), or customize to a specific content rating (chart 2).  
 • Ratings highlighted in green will be blocked. Ratings in white letters will not be blocked.

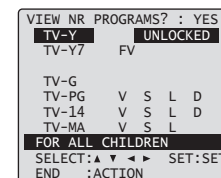


- 8 Press ACTION three times to exit this mode.



## Canadian English Language Ratings


- 1 Press ▲ ▼ to select "NEXT PAGE."
- 2 Press SET to display screen.

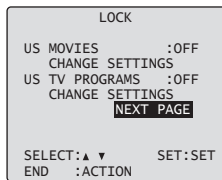


- 3 Press ▲ ▼ to select "CANADIAN ENGLISH."
- 4 Press SET to set "ON" or "OFF."

**ON:**  
V-Chip Control is activated.

**OFF:**  
V-Chip Control is deactivated.

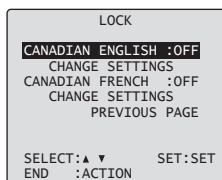


- 5 Press ▲ ▼ to select "CHANGE SETTINGS."
- 6 Press SET to display screen.

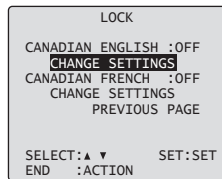


- 7 Press ▲ ▼ to select "VIEW E PROGRAMS?."
- 8 Press SET to set "YES" or "NO."

■ **E (Exempt) PROGRAMS:**  
Some TV shows, such as news, sports, weather, bulletins, and emergency information have no ratings.

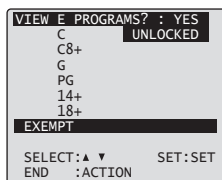

- 9 Press ▲ ▼ to select and SET to set ratings to be blocked.


• See "Canadian English Language Ratings Chart" on page 34.

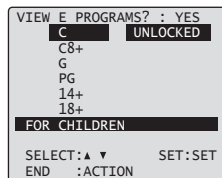

- 10 Press ACTION to redisplay LOCK menu and continue with Canadian French Language Ratings. Or, press ACTION three times to exit.

## Canadian French Language Ratings


- 1 Press ▲ ▼ to select "NEXT PAGE."
- 2 Press SET to display screen.

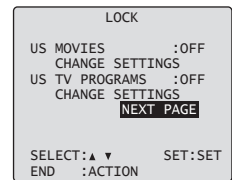


- 3 Press ▲ ▼ to select "CANADIAN FRENCH."
- 4 Press SET to set "ON" or "OFF."

**ON:**  
V-Chip Control is activated.

**OFF:**  
V-Chip Control is deactivated.

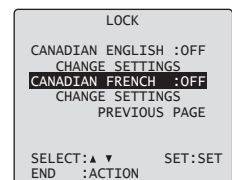


- 5 Press ▲ ▼ to select "CHANGE SETTINGS."
- 6 Press SET to display screen.

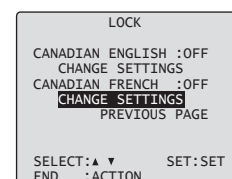


- 7 Press ▲ ▼ to select "VIEW E PROGRAMS?."
- 8 Press SET to set "YES" or "NO."

■ **E (Exempt) PROGRAMS:**  
Some TV shows, such as news, sports, weather, bulletins, and emergency information have no ratings.

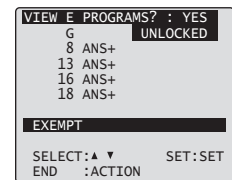

- 9 Repeatedly press ▲ ▼ to select and SET to set ratings to be blocked.

• See "Canadian French Language Ratings Chart" on page 34.

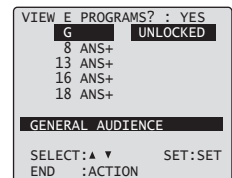

- 10 Press ACTION three times to exit this mode.

## US MOVIES Ratings Chart

<b>G</b>	<b>GENERAL AUDIENCE:</b> All ages admitted.
<b>PG</b>	<b>PARENTAL GUIDANCE:</b> Some material may not be suitable for children.
<b>PG-13</b>	<b>PARENTS CAUTIONED:</b> Some material may be inappropriate for children under 13.
<b>R</b>	<b>RESTRICTED:</b> Children under 17 must be accompanied by a parent or adult.
<b>NC-17</b>	<b>OVER AGE 17 ONLY:</b> No one 17 and under admitted.
<b>X</b>	<b>ADULTS ONLY:</b>

## US TV PROGRAMS Ratings Chart

Chart 1

<b>TV-Y</b>	<b>FOR ALL CHILDREN:</b> Content specifically geared to young viewers ages 2-6.
<b>TV-Y7</b>	<b>FOR AGE 7 AND OLDER:</b> May contain mild physical or comedic violence which may frighten children under 7.
<b>TV-G</b>	<b>GENERAL AUDIENCE:</b> Contains little or no violence, strong language, or sexual dialogue or situations.
<b>TV-PG</b>	<b>PARENTAL GUIDANCE:</b> May contain infrequent coarse language, limited violence, some suggestive sexual dialogue and situations.
<b>TV-14</b>	<b>PARENTS CAUTIONED:</b> May contain sophisticated themes, sexual situations, strong language, and more intense violence.
<b>TV-MA</b>	<b>MATURE AUDIENCE:</b> May contain mature themes, profane language, graphic violence, and sexual situations.

Chart 2

<b>FV</b>	<b>Fantasy Violence</b>
<b>V</b>	<b>Violence</b>
<b>S</b>	<b>Sexual Situations</b>
<b>L</b>	<b>Adult Language</b>
<b>D</b>	<b>Sexually Suggestive Dialogue</b>

## Canadian English Language Ratings Chart

<b>C</b>	<b>Children</b>
<b>C8+</b>	<b>Children 8 years and older</b>
<b>G</b>	<b>General Audience</b>
<b>PG</b>	<b>Parental Guidance</b>
<b>14+</b>	<b>Viewers 14 years and older</b>
<b>18+</b>	<b>Adult Programming</b>


## Canadian French Language Ratings Chart

<b>G</b>	<b>General Audience</b>
<b>8 ANS +</b>	<b>Not recommended for young children</b>
<b>13 ANS +</b>	<b>Programming may not be suitable for children under the age of 13</b>
<b>16 ANS +</b>	<b>Programming is not suitable for children under the age of 16</b>
<b>18 ANS +</b>	<b>Programming restricted to adults</b>


## Blocking Message

<When V-Chip Control is activated>

If a program or movie exceeds the ratings you have set, a message will appear on a black background and sound is muted.

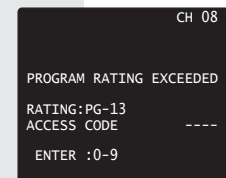

<US Rating>

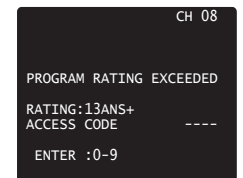


<Canadian French Rating>

## To View a Blocked Program/Movie

### Temporarily Deactivate V-Chip Control

Press NUMBER keys to enter your secret code in the Blocking Message screen.


- V-Chip Control is reactivated when power is turned off or power failure occurs.

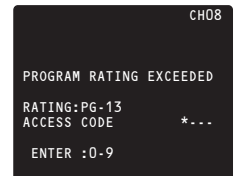


<Example: US Rating>

### Deactivate V-Chip Control


- Enter your secret code.  
(See page 31.)

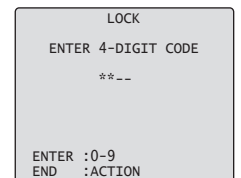

- Then, set **US MOVIES** and/or **US TV PROGRAMS** and/or **CANADIAN ENGLISH LANGUAGE** and/or **CANADIAN FRENCH LANGUAGE** to "OFF" using **▲ ▼** and **SET**. (Ratings set on pages 31-34 are retained and will be in effect when V-Chip Control is activated again.)

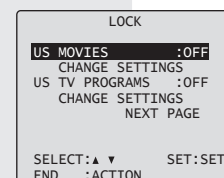


<US Rating>

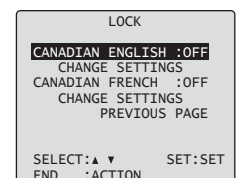


<Canadian Rating>

# Display Features

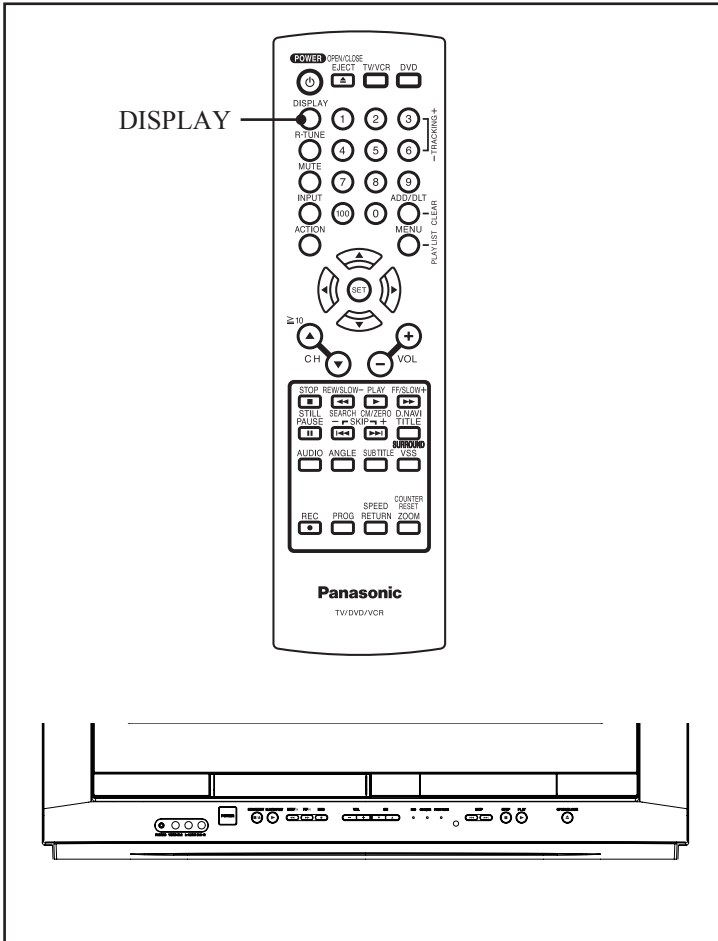

## TV/VCR Status & Clock Display


- 1 Press **DISPLAY** to display or remove the overlay.

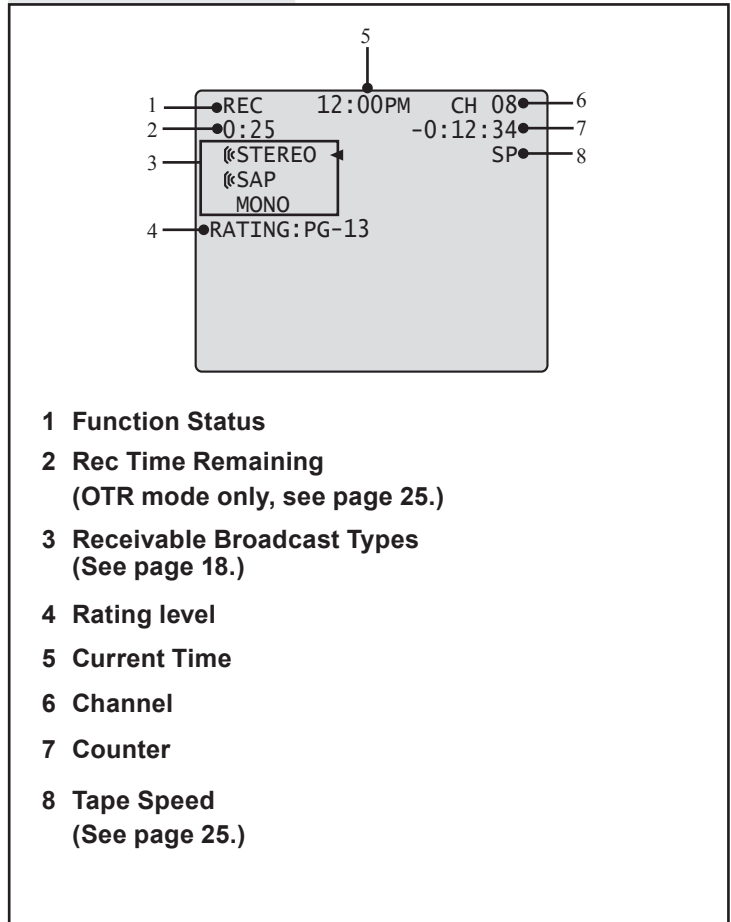

- 1 **Function Status**
- 2 **Rec Time Remaining**  
(OTR mode only, see page 25.)
- 3 **Receivable Broadcast Types**  
(See page 18.)
- 4 **Rating level**
- 5 **Current Time**
- 6 **Channel**
- 7 **Counter**
- 8 **Tape Speed**  
(See page 25.)

## Channel & Function Display

When a function button is pressed (PLAY, FF, etc.) or you change channels, the unit mode or channel number will be displayed.

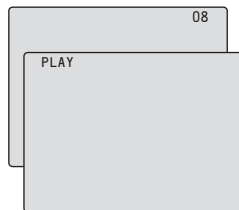

## Auto Shut Off



No broadcast signal in TV mode (Only when Weak Signal Display is set to OFF (See page 17)), or blank tape is played for 5 minutes.  
**Power turns off.**

- Note:**
- This feature is canceled if any button is pressed during above conditions.

## Blue Screen Display

Whenever a blank section of a tape comes up in Play mode, or when the selected channel has no broadcast signal with the Weak Signal Display Feature set to "OFF" (see page 17), the screen will turn solid blue.



# Basic Disc Operation

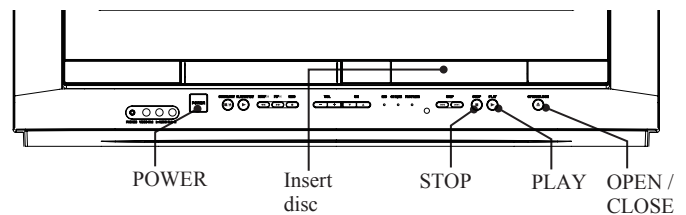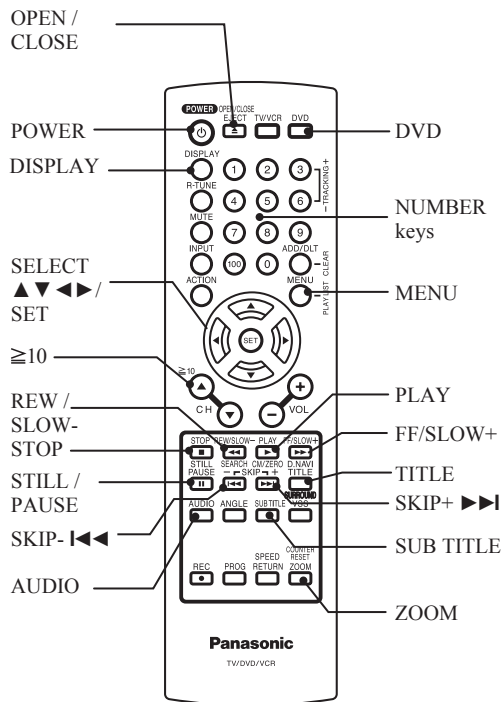

If a remote control button does not work when pressed, press the DVD button on the remote and try the button again.

## Play Disc


- 1 Press POWER on the remote or unit.**
- 2 Press DVD to set remote to DVD mode.**
- 3 Press OPEN/CLOSE.**
  - If a disc is already inserted, go to step 5. (Depending on the disc, playback may start automatically.)
- 4 Place disc into disc tray.**
  - Hold disc by its edges only (page 7) with printed side up and use guides to place into tray. Use ① 3" (8 cm) or ② 5" (12 cm) disc.
- 5 Press PLAY to start play. Disc tray closes automatically.**
  - You may also close the tray by pressing OPEN/CLOSE.
  - Data reading time differs with each disc.

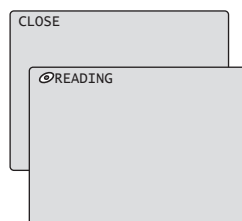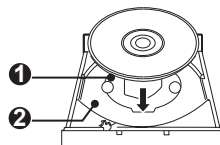

If an interactive DVD\*<sup>1</sup> or a Video CD with playback control\*<sup>2</sup> is used and a Main MENU of disc appears, go to step 6.

- \*<sup>1</sup> Interactive DVD...  
May include multiple camera angles, stories, etc.
- \*<sup>2</sup> Video CD with playback control...  
Particular scenes or information can be interactively selected from a menu that appears on the screen.

<Example>

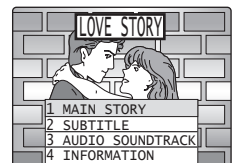


While Main MENU is displayed, press SKIP+ ►► or SKIP- ◄◄ to go to next or previous Main MENU of disc screen.

- SKIP function not available with all discs. Please refer to disc jacket for operation information.

- 6 Press ▲▼◄► to select title and press SET to start play. Or, pressing NUMBER keys starts play automatically.**
  - The number of available titles varies with each disc.

**To return to Main MENU of DVD (play stops):**  
Press TITLE, MENU, or RETURN.  
**To return to Main MENU of Video CD (play stops):**  
Press RETURN.
- 7 Press STOP to stop playing.**
- 8 Press OPEN/CLOSE to eject the disc.**

- When  appears on the screen while a button is being pressed, it means that the corresponding operation is prohibited by the unit or the disc.

## Auto-Power Off function

DVD-V CD VCD RAM

Power turns off after unit is in stop mode with wallpaper displayed for about 5 minutes.

## Using the NUMBER keys

DVD-V CD VCD RAM

When a NUMBER key is used in disc mode, it performs a different operation from TV mode.

### Example 1:

To select 12, first press the  $\geq 10$  key, then 1, then 2.

### Example 2:

To select 2, press the 2 key.

## Enjoy Video CDs featuring playback control without using menus

VCD

### 1 Do steps 1-5 (previous page).

When menu appears, press STOP.

### 2 Press NUMBER key(s) to select desired track (play begins).

- Check disc for track numbers.
- Press "1" to start at beginning of disc.

### ■ To Resume Menu use,

Press STOP, and press PLAY, then the menu appears. Now, go to step 6 (previous page).

### Note:

- Please read the disc jacket for operation information.
- If a single sided disc is placed in upside down, "THIS TYPE OF DISC CANNOT BE PLAYED. PLEASE INSERT A DIFFERENT DISC" is displayed.
- Remove disc and press unit POWER off when not in use.
- Disc continues to rotate with menu displayed even after play is done. Press STOP to clear menu display when finished with menu.

## Forward/Reverse Rapid Scene Search

DVD-V CD VCD RAM

### 1 Press FF/SLOW+ or REW/SLOW- during play.

- Search speed, slow at first, increases with each additional press of the button up to 5 levels.
- Starting forward/reverse search during play started from menu on Video CDs may recall menu.

 

 
### 2 Press PLAY to release.


## Forward/Reverse Chapter/Track Skip

DVD-V CD VCD RAM


### 1 Press SKIP+ or SKIP- during play.


#### DVD and CD/Video CD

- Pressing SKIP-  once midway through a chapter/track returns to start of that chapter/track. Each additional press skips back one chapter/track.
- Pressing SKIP+  or SKIP-  during play started from menu on Video CDs may recall menu.

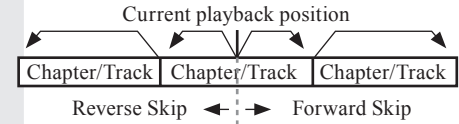


#### DVD-RAM

 - Pressing SKIP-  once midway through a program/play list returns to start of that program/play list. Each additional press skips back one program/play list.

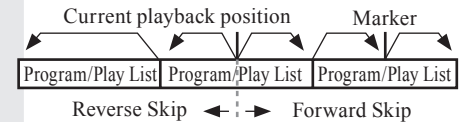

### 2 Each press skips a chapter (DVD), track (CD/Video CD) or Program/Play List/Marker (DVD-RAM).

 - Pressing SKIP-  within 3 seconds of a track/chapter/program/play list start point skips to the previous start point.

## Slow Motion Picture

DVD-V VCD RAM

### 1 Press FF/SLOW+ or REW/SLOW- in Still mode.

- Slow motion speed, slow at first, is increased with each additional press of the button up to 5 levels.
- Reverse slow motion is not available for video CDs.

### 2 Press PLAY to release.

## Still (Pause) Picture

DVD-V CD VCD RAM

### 1 Press STILL/PAUSE during play.

- DVD/Video CD:  
The unit will enter Still picture mode.
- CD:  
The unit will enter Pause mode.

### 2 Press PLAY to release.

## Frame by Frame Picture

DVD-V VCD RAM

### 1 Press STILL/PAUSE in Still mode.

- Each press advances picture one frame.
- Hold down for consecutive frame advance.

### 2 Press PLAY to release.

#### Note:

- Whether pictures are advanced by "FRAME" or "FIELD" is selected automatically (see page 51).

## RESUME Function

DVD-V CD RAM

The unit memorizes the point where STOP is pressed (STOP ► display on screen). Press PLAY to resume play from this point. Pressing STOP again or opening the tray cancels RESUME. However, RESUME is not canceled when power is turned off and on.

### Notes:

- RESUME works only with discs for which elapsed play time is displayed during play.
- When a DVD-RAM still picture is played back, the counter will not be displayed; however, RESUME will function.


## Main Menu of DVD

DVD-V

DVDs may offer a special menu. This menu may include guides to unique contents, audio/subtitle languages, etc. Although contents and operation may vary, the following steps show basic steps for using menus.

- Press **MENU** in Play mode to display main menu of DVD.
- Press **▲▼◀▶** or **NUMBER** keys to select an item.
- Press **SET** or **PLAY** to access.
  - Step 3 not necessary when using NUMBER keys.

<Example>

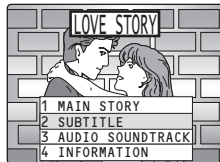

### Note:

- Repeat steps 2-3 if there is more than one menu.


## Title Menu of DVD

DVD-V



Some DVDs have more than one title, e.g. movies. If the disc offers a title menu, you can select the desired title number. (Operation may vary according to the disc.)

- Press **TITLE** in Play mode to display title screen.
- Press **▲▼◀▶** or **NUMBER** keys to select a title.
- Press **SET** or **PLAY** to access.
  - Step 3 not necessary when using NUMBER keys.

<Example>

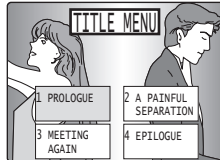

<Example>

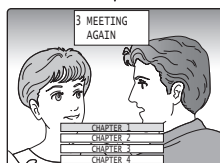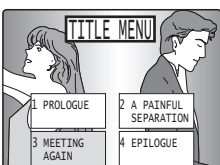

## Audio Soundtrack Language

DVD-V

You can change the audio soundtrack language, selected at Settings for DVD Operation, to a different language if available. (See page 48.) (This operation works only with discs on which multiple audio soundtrack languages are recorded.)

### 1 Press AUDIO in Play mode to display the audio selection on-screen.



- Display disappears after 5 seconds.

LPCM	96 kHz or 48 kHz	16 bit	Linear PCM disc
		20 bit	
		24 bit	
Dolby Digital	1 ch - 5.1 ch	Dolby Digital disc	
dts	1 ch - 5.1 ch	dts disc	

### Note:

- With DVD-RAM, Audio Soundtrack Language cannot be set. Audio stream and Audio mode (LR/L/R) settings can be made. Audio stream operation method is the same as for Audio Soundtrack Language. Press ► to move the cursor to Audio mode, then press AUDIO or ▲▼ to select LR/ L/ R.

Information on the audio stream currently being played back is displayed. (See page 50.)

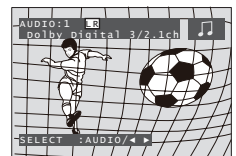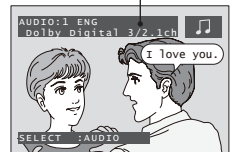

### 2 Press AUDIO repeatedly, ▲▼, or NUMBER keys to select desired language.


Audio soundtrack language being played back.



ENG	English	SVE	Swedish	CHI	Chinese
FRA	French	NOR	Norwegian	KOR	Korean
DEU	German	DAN	Danish	MAL	Malay
ITA	Italian	POR	Portuguese	VIE	Vietnamese
ESP	Spanish	RUS	Russian	THA	Thai
NLD	Dutch	JPN	Japanese	*	Other

### Notes:

- If, after several presses of the AUDIO button, the language does not change, language selection is not offered on the disc.
- When disc is removed, language reverts to initial setting. If this language is not recorded on the disc, the language recorded will be heard.

- When  appears on the screen while a button is being pressed, it means that the corresponding operation is prohibited by the unit or the disc.

 
## Vocal selection for Karaoke discs

**DVD-V** **VCD**


- Press **AUDIO** in Play mode to display the audio screen.
- Press **◀▶** to select "VOCAL."
- Press **AUDIO** or **▲▼** to set.




DVD Karaoke (1 vocal)



DVD Karaoke (2 vocals)

 

Video CD

 


## Subtitle Language

**DVD-V** **RAM**

You can select a different subtitle language (if offered) than the one set at Settings for DVD Operation. (See page 48.)


- Press **SUB TITLE** in Play mode to display the subtitle selection on-screen.

- Display disappears after 5 seconds.

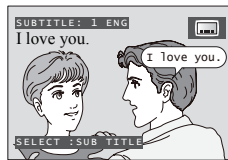

- Press **SUB TITLE** repeatedly, **▲▼**, or **NUMBER** keys to select desired language.

Number of subtitle language being played back.

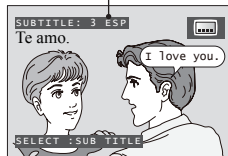

### Note:

- With DVD-RAM, the subtitle can only be set to ON/OFF. The subtitle language cannot be selected.

<b>ENG</b>	English	<b>SVE</b>	Swedish	<b>CHI</b>	Chinese
<b>FRA</b>	French	<b>NOR</b>	Norwegian	<b>KOR</b>	Korean
<b>DEU</b>	German	<b>DAN</b>	Danish	<b>MAL</b>	Malay
<b>ITA</b>	Italian	<b>POR</b>	Portuguese	<b>VIE</b>	Vietnamese
<b>ESP</b>	Spanish	<b>RUS</b>	Russian	<b>THA</b>	Thai
<b>NLD</b>	Dutch	<b>JPN</b>	Japanese	<b>*</b>	Other

### Notes:

- When closed captioning is used along with subtitles, they may overlap. If so, turn one function off. (See pages 20-21.)
- If, after several presses of the button, the language does not change, language selection is not offered on the disc.
- Subtitles may not change to the selected language immediately.
- When disc is removed, subtitles revert to initial setting language. If the initial language is not recorded on the disc, the disc's priority language will appear.


## Information Display

**DVD-V** **CD** **RAM**

When **DISPLAY** is pressed, On-Screen Displays show disc information and unit information.

- Press **DISPLAY** in Play or Stop mode to display "On-Screen Display."

- Each press of **DISPLAY** changes the on-screen display as follows. (Please refer to pages 42-44.)

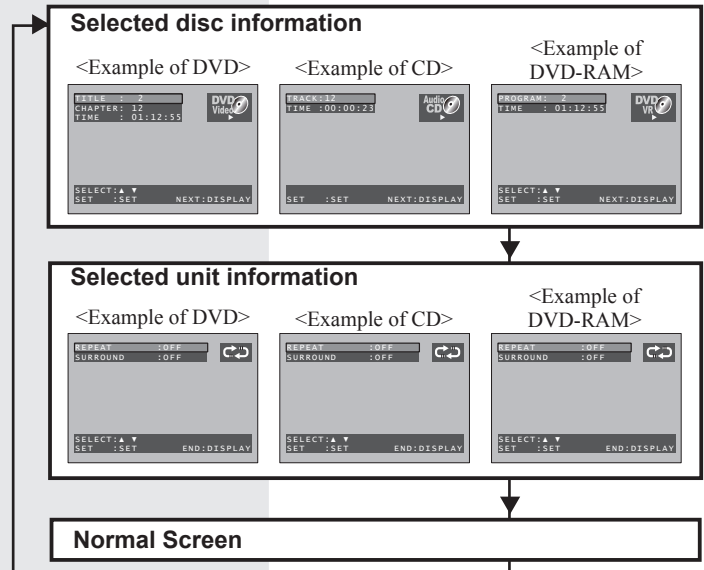

### Note:

- When **DISPLAY** is pressed during play of a Video CD with Play control, the **NUMBER** keys are not available on the displayed screen. In this case, press **DISPLAY** again to remove the displayed screen.
- DISPLAY** button does not function while main menu of DVD, title menu of DVD, Direct Navigator, or Play List is displayed.


## Picture Zoom

**DVD-V** **RAM**

You can enlarge specific portions of a picture and select the zoom ratio using the **ZOOM** button on the remote during DVD playback.

- Press **ZOOM** repeatedly to change display as follows.

- You can enlarge the center portion of the image to one of 2 magnifications.

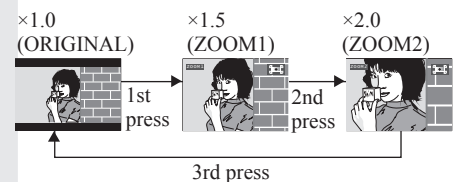


- Use the **▲**, **▼**, **◀** and **▶** buttons to move the position up, down, left and right.

### Notes:

- The subtitle cannot be enlarged nor can its position be changed.
- During picture zoom, "ZOOM1" or "ZOOM2" appears on-screen for 5 seconds.
- Zooming, on some discs, may result in poor picture quality, or may not operate at all.
- The picture zoom feature does not work with a Video CD.

# DVD-RAM Operation

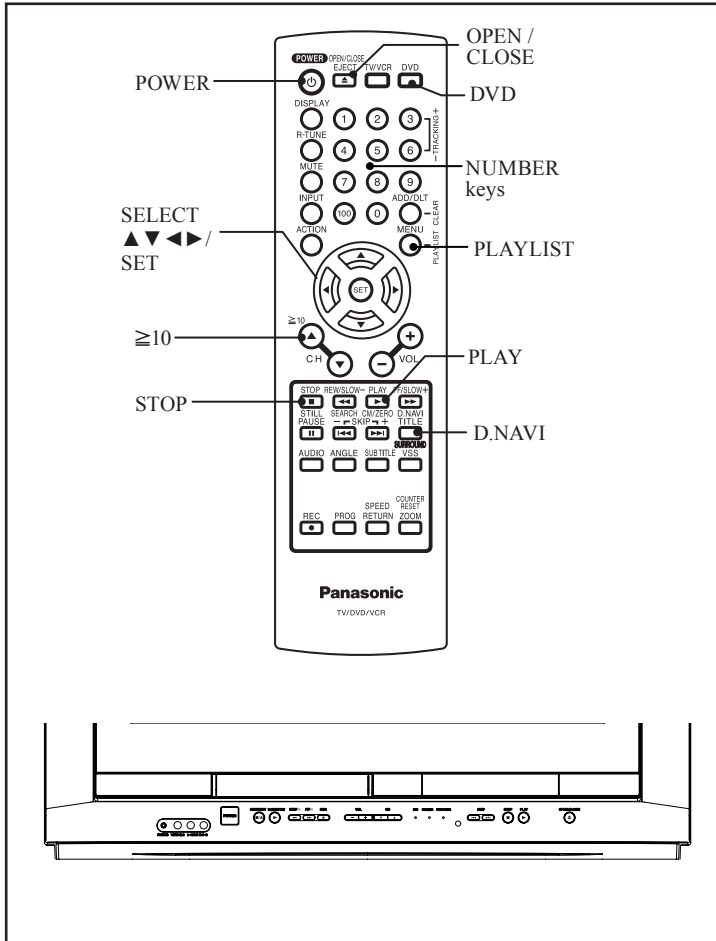

You can enjoy playing your personally recorded/edited DVD-RAM discs on this unit.

**Note:**

- This unit was designed for playback only. DVD-RAM recording is not possible.

## Play a DVD-RAM

### RAM

- 1 Press **POWER** on the remote or unit.
- 2 Press **DVD** to set remote to DVD mode.
- 3 Press **OPEN/CLOSE**.
- 4 Place disc into disc tray.
- 5 Press **PLAY** to start play. Disc tray closes automatically.
  - Play begins from the first program title recorded on the DVD-RAM.

- 6 Press **PLAYLIST** or **D.NAVI** to display Play List or Direct Navigator menu for easy title or scene selection.

Example: Play List menu

Play List No.	Recorded time length	Page No.	
Play List Page1/5			
No.	Date	Length	Title
1	2002/12/24 5:15:41AM	00:01:00	Movie Picture Playback
2	2002/12/25 4:31:49AM	00:03:12	Still Picture Playback
3	2002/12/25 8:24:25AM	00:15:01	Hybrid Playback
4	2002/12/25 12:45:00AM	00:03:00	Partial Playback
SELECT: ▲ ▼ ▶ ◀		END: MENU	
SET : SET			

Recording time and date      Titles

Example: Direct Navigator menu

Program No.	Recorded time length	Page No.	
Direct Navigator Page1/4			
No.	Date	Length	Title
1	2002/12/24 5:15:41AM	01:00:00	Drama
2	2002/12/25 4:31:49AM	00:30:00	Pana NEWS
3	2002/12/25 8:24:25AM	01:30:25	Tigers vs. Giants
4	2002/12/25 12:45:00AM	02:00:50	Dinosaur
SELECT: ▲ ▼ ▶ ◀		END: TITLE	
SET : SET			

Recording time and date      Titles


- 7 Press **STOP** to stop playing.

- 8 Press **OPEN/CLOSE** to eject the disc.

**Notes:**

- Titles in Direct Navigator and Play List cannot be changed using this unit.
- With Direct Navigator, up to 99 programs can be displayed. With Play List, up to 99 titles (999 scenes) can be displayed.
- While DVD MAIN MENU is displayed, Play List and Direct Navigator display will not appear even if PLAYLIST or D.NAVI is pressed.



• When  appears on the screen while a button is being pressed, it means that the corresponding operation is prohibited by the unit or the disc.

## Play List

RAM

If the DVD-RAM features a Play List, your preselected list of favorite scenes is displayed for easy access. (Operation can vary according to how you edited the DVD-RAM.)

- 1 Press **PLAYLIST** in Play/Stop mode to display the Play List menu.

Play List		Page1/5	
No.	Date	Length	Title
1	2002/12/24 5:15:41AM	00:01:00	Movie Picture Playback
2	2002/12/25 4:31:49AM	00:03:12	Still Picture Playback
3	2002/12/25 8:24:25AM	00:15:01	Hybrid Playback
4	2002/12/25 12:45:00AM	00:03:00	Partial playback

SELECT: ▲ ▼ ◀ ▶  
SET :SET END:MENU

- 2 Press **◀▶** to select a page and press **▲▼** or the **NUMBER** keys to select a title (Play List No.).

Play List		Page1/5	
No.	Date	Length	Title
1	2002/12/24 5:15:41AM	00:01:00	Movie Picture Playback
2	2002/12/25 4:31:49AM	00:03:12	Still Picture Playback
3	2002/12/25 8:24:25AM	00:15:01	Hybrid Playback
4	2002/12/25 12:45:00AM	00:03:00	Partial playback

SELECT: ▲ ▼ ◀ ▶  
SET :SET END:MENU

- 3 Press **SET** or **PLAY** to start playing.
  - Pressing SET or PLAY is not necessary when using NUMBER keys.

**Using NUMBER keys starts play automatically.**

- The number of available titles varies with each disc.

**Example 1:**

To select No. 12, first press the  $\geq 10$  key, then 1, then 2.

**Example 2:**

To select No. 2, press 2.

- 4 Press **PLAYLIST** to clear Play List menu.

## Direct Navigator

RAM

If the DVD-RAM features Direct Navigator, a list of recorded titles is displayed. Simply select a title number and start playback. (Operation can vary with disc used.)

- 1 Press **D.NAVI** in Play/Stop mode to display the Direct Navigator menu.

Direct Navigator		Page1/4	
No.	Date	Length	Title
1	2002/12/24 5:15:41AM	01:00:00	Drama
2	2002/12/25 4:31:49AM	00:30:00	Pana NEWS
3	2002/12/25 8:24:25AM	01:30:25	Tigers vs. Giants
4	2002/12/25 12:45:00AM	02:00:50	Dinosaur

SELECT: ▲ ▼ ◀ ▶  
SET :SET END:TITLE

- 2 Press **◀▶** to select a page and press **▲▼** or the **NUMBER** keys to select a title (Program No.).

Direct Navigator		Page1/4	
No.	Date	Length	Title
1	2002/12/24 5:15:41AM	01:00:00	Drama
2	2002/12/25 4:31:49AM	00:30:00	Pana NEWS
3	2002/12/25 8:24:25AM	01:30:25	Tigers vs. Giants
4	2002/12/25 12:45:00AM	02:00:50	Dinosaur

SELECT: ▲ ▼ ◀ ▶  
SET :SET END:TITLE

- 3 Press **SET** or **PLAY** to start playing.
  - Pressing SET or PLAY is not necessary when using NUMBER keys.

**Using NUMBER keys starts play automatically.**

- The number of available titles varies with each disc.

**Example 1:**


To select No. 12, first press the  $\geq 10$  key, then 1, then 2.

**Example 2:**

To select No. 2, press 2.

- 4 Press **D.NAVI** to clear Direct navigator menu.

# Disc Operation -Using Information Screen-

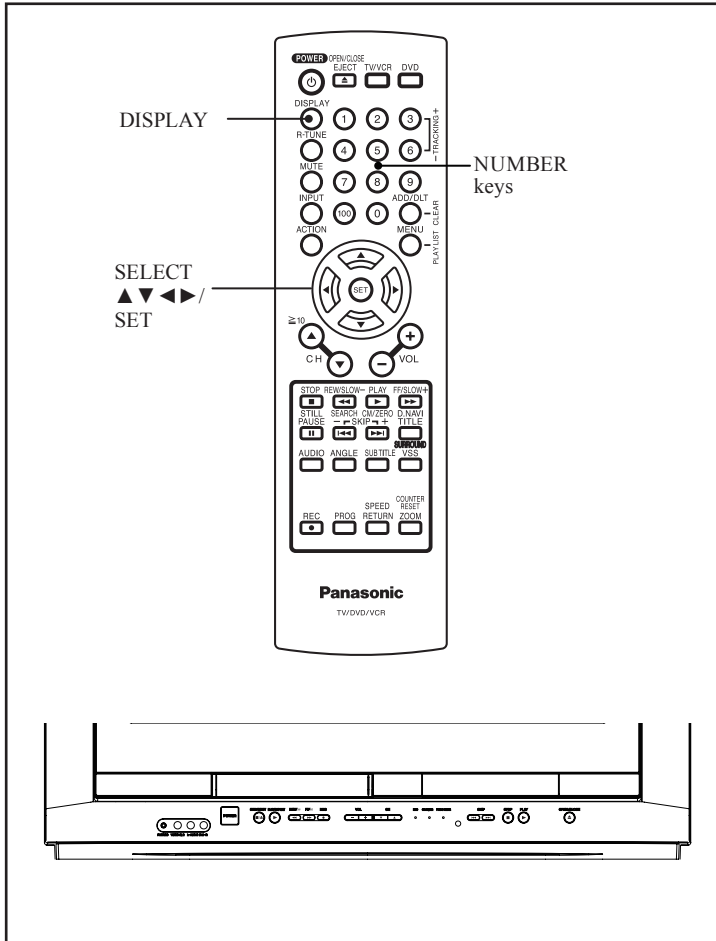

## c. Disc currently being played:

The type of disc currently inserted is displayed.

## d. Elapsed playing time:

Go to a different scene by entering an elapsed playing time, then SET.

- This function does not work with some discs.

- If SET is pressed while making entries, unit returns to the condition before entries were made.


Example:

12 : 34 : 56    1 → 2 → 3 → 4 → 5 → 6  
00 : 20 : 00    2 → 0 → 0 → 0 → SET

## Unit information screen 1

DVD-V

- 1 Press DISPLAY twice in Play or Stop mode to display "On-Screen Display."
- 2 Press SET to enter. Change the item by pressing ▲ ▼ and press SET.

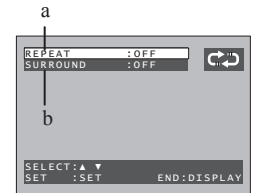

### a. REPEAT MODE:

REPEAT MODE can be selected

Example:

CURRENT PLAYBACK POSITION

	TITLE		
	chapter	chapter	chapter
REPEAT:		→	
CHAPTER		→	
REPEAT:TITLE	→		
REPEAT:OFF			

### b. SURROUND MODE:


See page 47.

## Disc information screen 1


DVD-V

- 1 Press DISPLAY in Play or Stop mode to display "On-Screen Display."

- 2 Press ▲ ▼ to select an item.

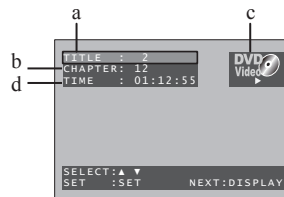

- 3 Press SET to enter selected item. Change the item by pressing ▲ ▼ or the NUMBER keys, and press SET.

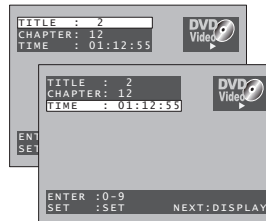


### a. TITLE:

Go directly to a preset title number.

### b. Chapter:

Go directly to a preset chapter number.


- This function does not work with some discs.

• When  appears on the screen while a button is being pressed, it means that the corresponding operation is prohibited by the unit or the disc.


## Disc information screen 2

CD

1 Press DISPLAY in Play or Stop mode to display “On-Screen Display.”

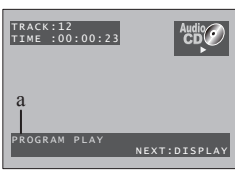

2 Press SET to enter selected item. Change the item by pressing ▲▼ or the NUMBER keys, and press SET.

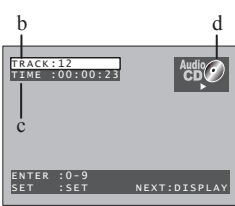


- a.Play mode:**  
When Play mode is set (see pages 45-46), the mode name is displayed.
- b.TRACK:**  
Go directly to a preset track number.
- c.Elapsed playing time:**  
When disc information screen 2 is displayed, it is not possible to enter an elapsed playing time.
- d.Disc currently being played:**  
The type of disc currently inserted is displayed.


## Disc information screen 3

VCD

1 Press DISPLAY in Play or Stop mode to display “On-Screen Display.”

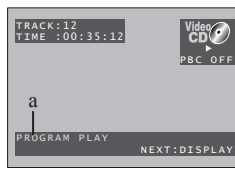

2 Press SET to enter selected item. Change the item by pressing ▲▼ or the NUMBER keys, and press SET.

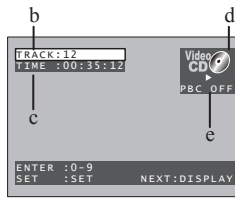


- a.Play mode:**  
When Play mode is set (see pages 45-46), the mode name is displayed.
- b.TRACK:**  
Go directly to a preset track number.
- c.Elapsed playing time:**  
When disc information screen 3 is displayed, it is not possible to enter an elapsed playing time.
- d.Disc currently being played:**  
The type of disc currently inserted is displayed.
- e.Playback control ON/OFF:**  
ON: Video CD menu play is displayed.  
OFF: Video CD menu play is not displayed.

## Unit information screen 2


CD

1 Press DISPLAY twice in Play or Stop mode to display “On-Screen Display.”

2 Press SET to enter. Change the item by pressing ▲▼, and press SET.

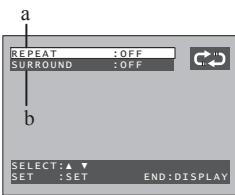

**a.REPEAT MODE:**  
REPEAT MODE can be selected.  
Example:

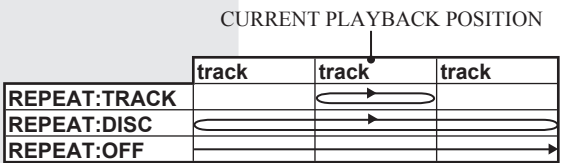


**b.SURROUND MODE:**  
See page 47.

## Unit information screen 3


VCD

1 Press DISPLAY twice in Play or Stop mode to display “On-Screen Display.”


2 Press SET to enter. Change the item by pressing ▲▼, and press SET.

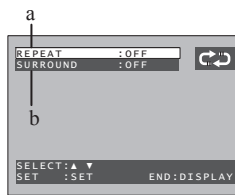

**a.REPEAT MODE:**  
REPEAT MODE can be selected.  
Example:

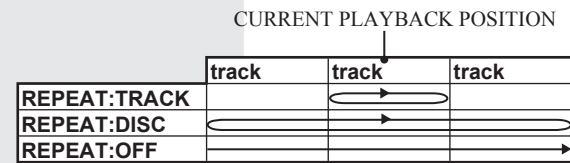


**b.SURROUND MODE:**  
See page 47.

• When  appears on the screen while a button is being pressed, it means that the corresponding operation is prohibited by the unit or the disc.


## Disc information screen 4

RAM


- 1 Press DISPLAY in Play or Stop mode to display "On-Screen Display."
- 2 Press  $\blacktriangle$   $\blacktriangledown$  to select an item.

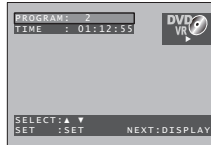


- 3 Press SET to enter selected item. Change the item by pressing  $\blacktriangle$   $\blacktriangledown$  or the NUMBER keys, and press SET.

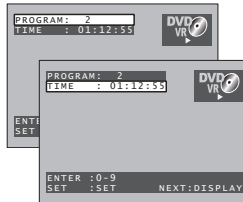

Example:  
Direct Navigation (PROGRAM)

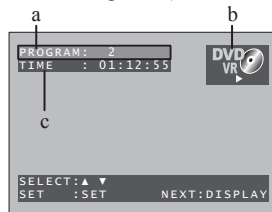

Example:  
PLAY LIST

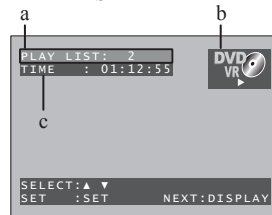

### a. Direct Navigation (PROGRAM) or PLAY LIST No.:

Go directly to a preset title number.

### b. Disc currently being played:

The type of disc currently inserted is displayed.

### c. Elapsed playing time:

Go to a different scene by entering an elapsed playing time, then SET.

- This function does not work with some discs.
- If SET is pressed while making entries, unit returns to the condition before entries were made.


Example:

12 : 34 : 56 1 → 2 → 3 → 4 → 5 → 6  
00 : 20 : 00 2 → 0 → 0 → 0 → SET

## Unit information screen 4

RAM


- 1 Press DISPLAY twice in Play or Stop mode to display "On-Screen Display."
- 2 Press SET to enter. Cursor moves to the right. Change the item by pressing  $\blacktriangle$   $\blacktriangledown$  and press SET.

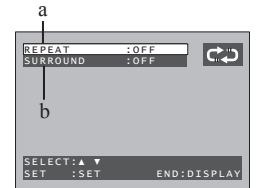


### a. REPEAT MODE:

REPEAT MODE can be selected.

Example: Direct Navigation  
(PROGRAM)

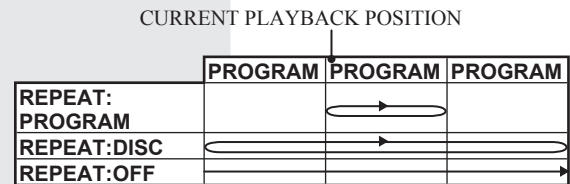


Example: PLAY LIST

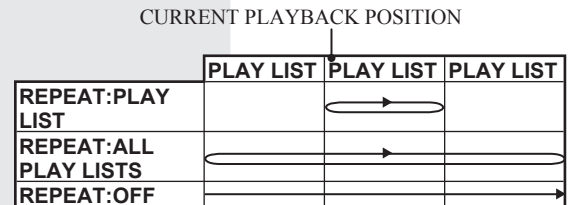

### b. SURROUND MODE:


See page 47.

# Special Disc Operation

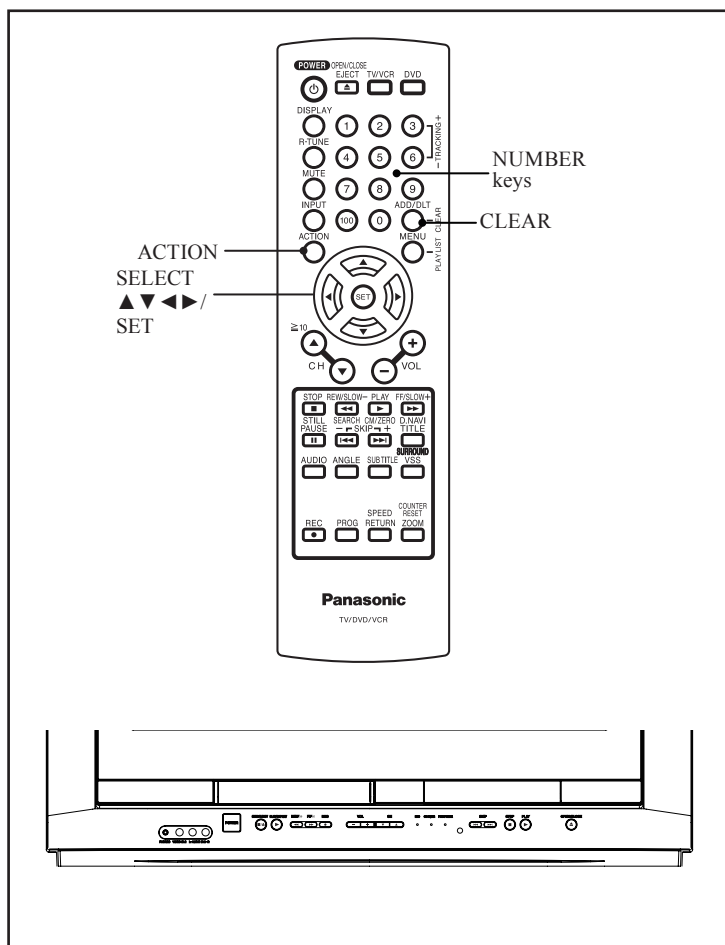

**6** Press ▲▼ to select “PROGRAM PLAY.”


**7** Press SET to display screen.

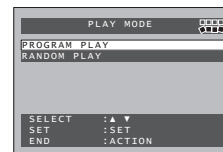

**8** Press ▲▼◀▶ to select a track number.  
(Track numbers on disc are displayed.)

**9** Press SET to set.


- Repeat steps 8-9 to select another track.
- The selected track is added on the right side.

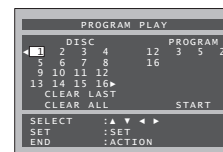

**10** Press ▲▼◀▶ to select “START.”

**11** Press SET to start play of programs in the sequence selected.

To cancel, press STOP during play, then press CLEAR.

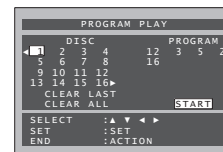

## Program Play


CD VCD

You can program specific tracks and order of play.

**1** Press ACTION in Stop mode to display MAIN MENU.


**2** Press ▲▼◀▶ to select “DVD.”

**3** Press SET to display DVD MAIN MENU.

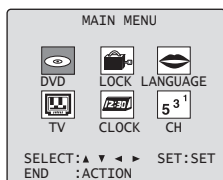

**4** Press ▲▼ to select “PLAY MODE.”

**5** Press SET to display PLAY MODE screen.

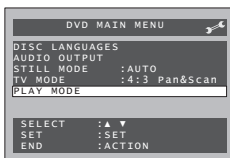

### Notes:


- Up to 16 tracks can be programmed.
- “◀” or “▶” (depending on disc) indicates additional PROGRAM PLAY screen. Press ▲▼◀▶ for next or previous screen.
- To clear the last programmed track, press ▲▼◀▶ to move to “CLEAR LAST” and press SET. (Pressing CLEAR also clears.)
- To clear all programs, Press ▲▼◀▶ to move to “CLEAR ALL” and press SET. (Programs are also cleared when the power is turned off or the disc is removed.)

## Program Repeat Play

CD VCD

- 1 Do steps 1-11 on page 45.
- 2 Press DISPLAY to display Disc Information screen.

(Disc Information Screen)

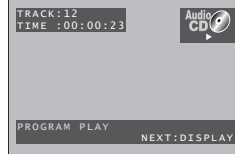


- 3 Press DISPLAY again to display Unit Information screen.

(Unit Information Screen)




- 4 Press SET to enter Select mode.

(Unit Information Screen)

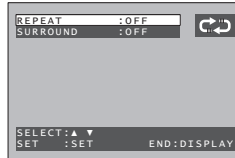

- 5 Press ▲▼ to select "DISC."

(Unit Information Screen)

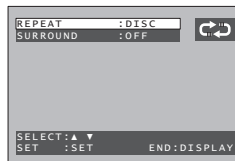

- 6 Press SET to set mode. To cancel, select "REPEAT OFF" in step 5, then press SET.

(Unit Information Screen)




## Random Play


CD VCD

Tracks are played in random order.


- 1 Press ACTION in Stop mode to display MAIN MENU.
- 2 Press ▲▼◀▶ to select "DVD."
- 3 Press SET to display DVD MAIN MENU.

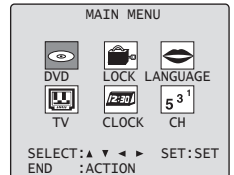


- 4 Press ▲▼ to select "PLAY MODE."
- 5 Press SET to display PLAY MODE screen.

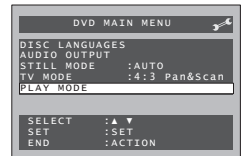

- 6 Press ▲▼ to select "RANDOM PLAY."
- 7 Press SET to begin random play.

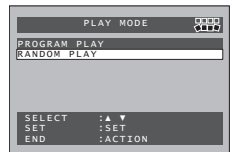

To cancel, press STOP during play, then press CLEAR.

- When  appears on the screen while a button is being pressed, it means that the corresponding operation is prohibited by the unit or the disc.

## DVD Volume Adjust


DVD-V

Some DVDs are recorded at lower than average volume levels. For these DVDs, this unit can be set so that the average volume is increased automatically.

**1** Press ACTION to display MAIN MENU.


**2** Press     to select "TV."

**3** Press SET to display SET UP TV screen.

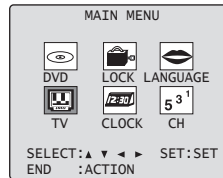

**4** Press   to select "DVD VOL ADJUST."

**5** Press SET to set the level (0, +1, or +2).

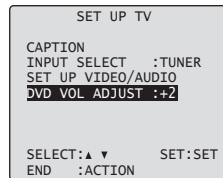

**6** Press ACTION twice to return to the normal screen.

### Note:

- DVD Volume Adjust works only when sound is in Dolby Digital.


## V.S.S. (Virtual Surround Sound)

DVD-V CD RAM

Enjoy a surround-like effect if you are using two front speakers only. The effect is broadened and sound seems to come from virtual speakers on either side if the disc has surround signals recorded on it.

**1** Press VSS in Disc mode.

- The Surround sound effects can be changed by pressing VSS repeatedly as shown in the figure below.

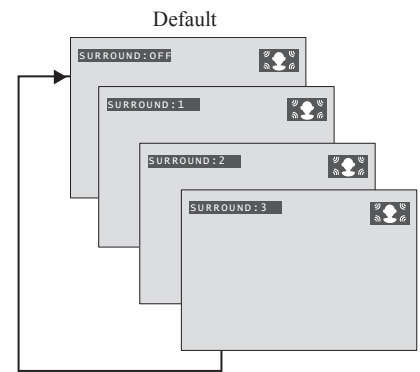

### Notes:


- Turn off the surround effects on the other equipment.
- V.S.S. will not work, or will have less effect, with some discs.
- Turn V.S.S. off if it causes distortion.



## Multiple Angle Viewing

DVD-V

DVDs may contain scenes shot from multiple camera angles allowing the same scene to be viewed from different angles. You can view these angles, if available, using the ANGLE button.

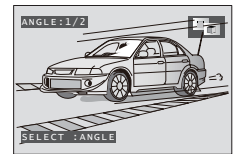
**1** Press ANGLE in Play mode to display the angle selection on-screen.



**2** Press ANGLE repeatedly,  , or NUMBER keys to select the desired angle.

- Display disappears after 5 seconds.


Number of angle being played back.

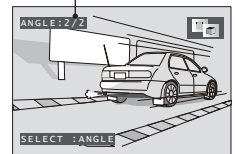

### Notes:

- This function not available with DVD-RAM.
- ANGLE Indicator lights up on the unit when a scene recorded from different angles is detected.
- The angle number can be set beforehand so that the angle is switched whenever ANGLE Indicator lights up.

# Settings for DVD Operation

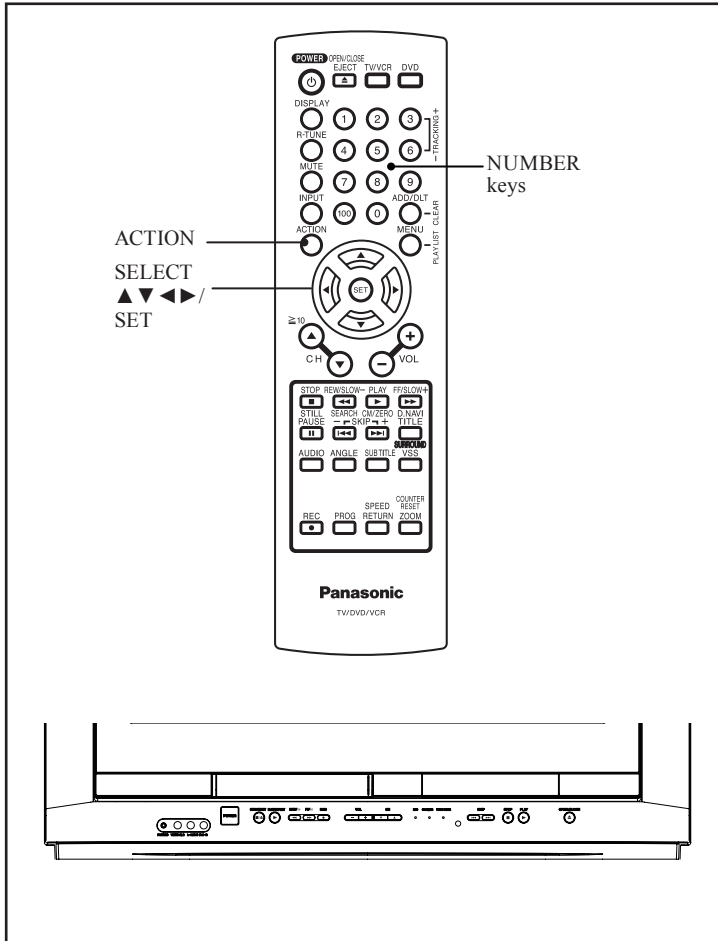


## Disc Languages


### DVD-V

To select and set the language of the audio soundtrack, subtitles, or title/DVD menus for all discs to be played.

- 1 Press **ACTION** in Stop mode to display **MAIN MENU**.
- 2 Press **▲▼◀▶** to select "DVD."
- 3 Press **SET** to display **DVD MAIN MENU**.

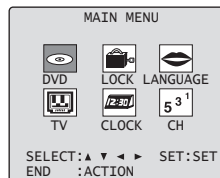

- 4 Press **▲▼** to select "DISC LANGUAGES."
- 5 Press **SET** to display **DISC LANGUAGES** screen.

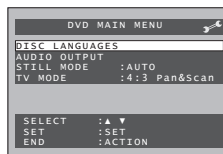

- 6 Press **▲▼** to select an item.
- 7 Press **SET** repeatedly for desired language.



### AUDIO

To select the audio soundtrack language.  
(Factory preset: English)

#### English/Spanish/French/Japanese

**Original**: Original disc language

**Other \*\*\*\***: Other language selection\*1

### SUBTITLE

To select the subtitle language.  
(Factory preset: AUTO)

**AUTO**: Same language as selected for "AUDIO"

- If language set for "AUDIO" is used in playback, subtitles will not appear.
- If another language is used during playback, the subtitles will appear in the language selected at "AUDIO" setup.

#### English/Spanish/French/Japanese

**Other \*\*\*\***: Other language selection\*1

### MENUS

To select the language used in title menus or DVD menus.  
(Factory preset: English)

#### English/Spanish/French/Japanese

**Other \*\*\*\***: Other language selection\*1

\*1 If the selected language is not offered, the original disc language is selected.


**To enter OTHER \*\*\*\* code number, Press NUMBER keys** (Please refer to next page).

To make corrections, press **◀** repeatedly to delete language code number, and correct.

- Once initial settings are done, they remain in memory (even after the power is off) until changed. This means the unit will always operate under the same conditions (especially DVDs) each time.

- 8 Press **ACTION** twice to exit this mode.



• When  appears on the screen while a button is being pressed, it means that the corresponding operation is prohibited by the unit or the disc.

## Language Code List

Language	Code
Abkhazian	6566
Afar	6565
Afrikaans	6570
Albanian	8381
Ameharic	6577
Arabic	6582
Armenian	7289
Assamese	6583
Aymara	6588
Azerbaijani	6590
Bashkir	6665
Basque	6985
Bengali; Bangla	6678
Bhutani	6890
Bihari	6672
Breton	6682
Bulgarian	6671
Burmese	7789
Byelorussian	6669
Cambodian	7577
Catalan	6765
Chinese	9072
Corsican	6779
Croatian	7282
Czech	6783
Danish	6865
Dutch	7876
English	6978
Esperanto	6979
Estonian	6984
Faroese	7079
Fiji	7074
Finnish	7073
French	7082
Frisian	7089
Galician	7176
Georgian	7565
German	6869
Greek	6976
Greenlandic	7576
Guarani	7178
Gujarati	7185
Hausa	7265
Hebrew	7387

Language	Code
Hindi	7273
Hungarian	7285
Icelandic	7383
Indonesian	7378
Interlingua	7365
Irish	7165
Italian	7384
Japanese	7465
Javanese	7487
Kannada	7578
Kashmiri	7583
Kazakh	7575
Kirghiz	7589
Korean	7579
Kurdish	7585
Laotian	7679
Latin	7665
Latvian, Lettish	7686
Lingala	7678
Lithuanian	7684
Macedonian	7775
Malagasy	7771
Malay	7783
Malayalam	7776
Maltese	7784
Maori	7773
Marathi	7782
Moldavian	7779
Mongolian	7778
Nauru	7865
Nepali	7869
Norwegian	7879
Oriya	7982
Pashto, Pushto	8083
Persian	7065
Polish	8076
Portuguese	8084
Punjabi	8065
Quechua	8185
Rhaeto-Romance	8277
Romanian	8279
Russian	8285
Samoan	8377
Sanskrit	8365

Language	Code
Scots Gaelic	7168
Serbian	8382
Serbo-Croatian	8372
Shona	8378
Sindhi	8368
Singhalese	8373
Slovak	8375
Slovenian	8376
Somali	8379
Spanish	6983
Sundanese	8385
Swahili	8387
Swedish	8386
Tagalog	8476
Tajik	8471
Tamil	8465
Tatar	8484
Telugu	8469
Thai	8472
Tibetan	6679
Tigrinya	8473
Tonga	8479
Turkish	8482
Turkmen	8475
Twi	8487
Ukrainian	8575
Urdu	8582
Uzbek	8590
Vietnamese	8673
Volapük	8679
Welsh	6789
Wolof	8779
Xhosa	8872
Yiddish	7473
Yoruba	8979
Zulu	9085

## Selecting AUDIO OUTPUT


### DVD-V

Select the digital output to be output from the optical digital audio output connector of the unit.

**1** Press **ACTION** in Stop mode to display **MAIN MENU**.


**2** Press **▲▼◀▶** to select "DVD."

**3** Press **SET** to display DVD **MAIN MENU**.

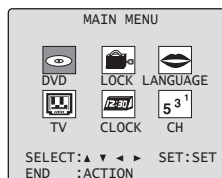


**4** Press **▲▼** to select "AUDIO OUTPUT."

**5** Press **SET** to display **AUDIO OUTPUT** screen.

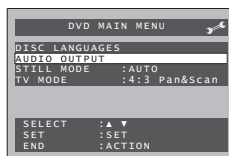

**6** Press **▲▼** to select an item.

**7** Press **SET** repeatedly for desired output.

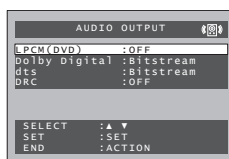

### ■ LPCM (DVD)

#### OFF:

Linear PCM of less than 48 kHz/16 bit is output. When playing DVDs recorded in linear PCM of over 48 kHz/20 bit, no digital audio is output. (Factory preset)

#### PCM:

When playing DVDs recorded in linear PCM of 48 kHz/20 bit/24 bit or more, digital audio converted to 44.1 kHz/16 bit or 48 kHz/16 bit is output.

(Digital output of PCM audio is restricted to 48 kHz/16 bit or below for copyright protection.)

### ■ Dolby Digital

#### Bitstream:

Dolby Digital bitstream (1ch-5.1ch) is output. (Factory preset)

#### PCM:

When you have connected an amplifier that doesn't have a built-in Dolby Digital decoder.

### ■ dts selection

#### Bitstream:

dts bitstream is output. (Factory preset)

#### PCM:

When you have connected an amplifier that doesn't have a built-in dts decoder.

### ■ DRC (Dynamic Range Compression)

#### OFF:

Normal audio range is selected. (Factory preset)

#### ON:

For dynamic sound even at low volume. This is useful for late-night listening. [Dolby Digital DVDs only].

Type of amplifier to be connected	Recommended setting		
	LPCM (DVD)	Dolby Digital	dts
No amplifier is connected			
AV amplifier without Dolby Digital/dts decoder	PCM	PCM*1	PCM*1
AV amplifier including Dolby Digital decoder	PCM	Bitstream*3	PCM
AV amplifier including Dolby Digital/dts decoder	PCM	Bitstream*3	Bitstream*2

\*1 When connecting an amplifier (with an optical digital input connector) which does not contain the Dolby Digital or dts decoder, be sure to select "PCM." If "Bitstream" is selected, starting DVD play may cause such a high level of noise as to be harmful to your ears and damage the speakers.


\*2 When a dts decoder is connected, please select "Bitstream" in "dts." If "PCM" is selected, there will be stereo sound.

\*3 When a Dolby Digital decoder is connected, please select "Bitstream" in "Dolby Digital." If "PCM" is selected, there will be stereo sound.

#### Note:

- Make settings according to amplifier connected to optical audio output as shown in above table.

**8** Press **ACTION** to redisplay DVD MAIN MENU and go to step 4 to set up another item. Or, press **ACTION** three times to exit.


• When  appears on the screen while a button is being pressed, it means that the corresponding operation is prohibited by the unit or the disc.

## Selecting STILL MODE


DVD-V

Set to reduce jitter in a displayed still picture or a motion picture.

- 1 Press ACTION in Stop mode to display MAIN MENU.
- 2 Press ▲▼◀▶ to select "DVD."
- 3 Press SET to display DVD MAIN MENU.

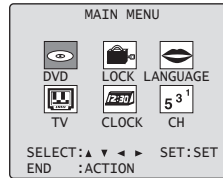

- 4 Press ▲▼ to select "STILL MODE."
- 5 Press SET repeatedly for mode.

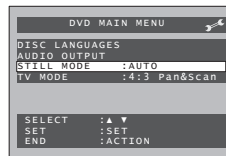

### ■ AUTO:

"FIELD" (Field still) or "FRAME" (Frame still) is automatically selected during still mode. (Factory preset)

### ■ Field:

"FIELD" (Field still) is always selected. This setting will reduce jitter when compared with "AUTO" on some discs.

### ■ Frame:

"FRAME" (Frame still) is always selected. Some texts and fine patterns will be seen clearly when compared with "AUTO" on some discs.


- 6 Press ACTION twice to exit this mode.

## Selecting TV MODE


DVD-V

Set the screen display style for widescreen video material playback.

- 1 Press ACTION in Stop mode to display MAIN MENU.
- 2 Press ▲▼◀▶ to select "DVD."
- 3 Press SET to display DVD MAIN MENU.

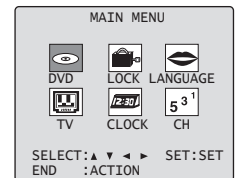

- 4 Press ▲▼ to select "TV MODE."
- 5 Press SET repeatedly for mode.

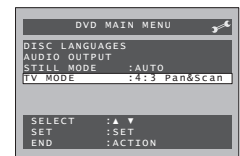

### ■ 4:3 Pan & Scan:

Widescreen video data is played in Pan & Scan style (left and right of screen are trimmed.)

- Video data not formatted in Pan & Scan will play in letterbox style.

(Factory preset)



### ■ 4:3 Letterbox:

Widescreen video data is played in Letterbox style (top and bottom of screen display a black margin).



- 6 Press ACTION twice to exit this mode.

# Warning and Instruction Displays

These displays will alert you to a missed operation or provide further instructions.

OSD	CAUTION	Page
<b>PLEASE SET CLOCK BY PRESSING ACTION KEY</b>	If you attempt to set or review a Timer Recording or set the On-Timer and the Clock is not set...	<b>14</b>
<b>CHECK CASSETTE RECORD TAB</b>	If you press REC, and a cassette is inserted with no record tab...	<b>6, 24</b>
<b>TO CANCEL TIMER REC HOLD DOWN STOP KEY FOR APPROX 3 SEC</b>	If you press STOP during a Timer Recording...	<b>26</b>
<b>NO CASSETTE</b>	If you press PLAY, FF, REW, or REC without a cassette inserted...	<b>24</b>
<b>PLEASE PREPARE FOR TIMER REC</b>	If the unit is not in Stop mode, or cassette is not inserted, or cassette has no record tab, or tape is at its end two minutes before a Timer Recording is about to begin...	<b>26</b>
<b>VIDEO HEADS MAY NEED CLEANING PLEASE INSERT HEAD CLEANING CASSETTE OR REFER TO MANUAL</b>  <b>END: PLAY</b>	If head cleaning becomes necessary while playing back a tape...	<b>6</b>
<b>VCR LOCK ACTIVATED</b>	If you press a function button other than STOP/EJECT or POWER while the unit is in VCR Lock mode...	<b>29</b>
<b>PLEASE CHECK THE DISC, AND FOR STAINS OR SCRATCHES ON DISC</b>	If you press PLAY, or the unit reads data from a stained or scratched disc in DVD mode. Also, if the type of disc is other than DVD, CD or Video CD...	<b>7</b>
<b>THIS DISC MAY NOT BE PLAYED IN YOUR REGION</b>	Playback of a disc with different region number was attempted. Only discs marked region "1," "ALL," or those that include "1" are playable on this unit.	<b>7</b>
<b>THIS TYPE OF DISC CANNOT BE PLAYED. PLEASE INSERT A DIFFERENT DISC</b>	An unusable disc is inserted in the unit, or the disc is not inserted with label side up.	<b>7</b>

## Glossary

### Angle

Some DVD discs feature scenes simultaneously shot from different angles. The ANGLE button can be used to view the scene from different angles. (ANGLE Indicator lights up on the unit when a scene recorded from different angles is detected.)

### Bitstream

This is the digital form of multi-channel audio data (e.g., 5.1 channel) before it is decoded into its various channels.

### Chapter Number

Titles are subdivided into numbered sections. You can quickly search for a favorite scene using these numbers.

### Decoder

A decoder restores the coded audio signals on DVDs to normal. This is called decoding.

### Dolby Digital

This is a method of coding digital signals developed by Dolby Laboratories. Apart from stereo (2-channel) audio, these signals can also be multichannel audio. A large amount of audio information can be recorded on one disc using this method.

### Dolby Pro Logic

A surround system where a 4-channel audio track is recorded as 2 channels and then is restored to 4 channels for play. The surround channel is monaural and can reproduce up to 7 kHz.

### DTS (Digital Theater Systems)

This surround system is used in many movie theaters around the world. There is good separation between the channels, so realistic sound effects are possible.

### Dynamic range

Dynamic range is the difference between the lowest level of sound that can be heard above the noise of the equipment and the highest level of sound before distortion occurs.

### DVD

A high-density optical disc on which high-quality pictures and sound have been digitally recorded. DVD incorporates new video compression technology (MPEG II) and high-density recording technology which allow entire movies to be recorded with incredible playback quality.

### Film and video

DVD-Videos are recorded using either film or video. Usually, film is recorded at 24 frames per second, the rate movies are filmed at, while video is recorded at 30 frames per second.

### Frame still and field still

Frames are the still pictures that go together to make a moving picture. There are about 30 frames shown each second. One frame is made up of two fields. A regular television shows these fields one after the other to create frames.

A still is shown when you pause a moving picture. A frame still is made up of two alternating fields, so the picture may appear blurred, but overall quality is high. A field still is not blurred, but it has only half the information of a frame still so picture quality is lower.

### Linear PCM (pulse code modulation)

These are uncompressed digital signals, similar to those found on CDs.

### Playback Control

With Video CD (version 2.0), scenes or information may be selected for viewing or listening from an interactive menu that appears on the TV screen.

### Regional Code

This is a copyright protection measure unique to DVD-Video. There are 6 regional codes worldwide. In order to play a disc encoded with a regional code, the DVD player must be equipped with the same code.

### Sampling bit number

This is the resolution shown in number of bits to determine how faithfully the sampled analog frequency was expressed at the time the signal was converted from analog to digital.

### Sampling Frequency

This is the number of times sampling is performed in (1) second shown in Hz units at the time the signal is converted from analog to digital using the PCM method. The greater the number, the higher the sound quality.

### Subtitles

Written dialogue which appears at the bottom of the screen.

### Time Number

The elapsed play time from the start of a disc or title. Use to quickly find scenes. (May not work with some discs.)

### Title Number

For DVD discs with two or more titles, the titles are numbered as title 1, title 2, etc.

### Track Number

Numbers assigned to tracks on Video CDs and CDs to allow specific tracks to be quickly located.

### Video CD

CD containing picture and sound with same quality level as video tape. This unit also supports Video CDs with playback control (version 2.0).

### V.S.S. Feature

Virtual surround sound playback is possible even with only 2 speakers. For example, using this unit's built-in speakers, the 2 speakers of a connected stereo, etc., you can enjoy a surround sound effect. If the disc was recorded in Dolby Digital 5.1 ch, with just the two front L/R speakers, you will feel as if you are hearing sound from nonexistent speakers on both sides of you. This effect also works with Dolby Digital 2-channel discs.

# Before Requesting Service

Check the following points once again if you are having trouble with your unit.

	PROBLEM	CORRECTION	Page
Power	No power...	Completely insert Power Plug into an AC outlet.	9
		Set POWER button to ON.	8-9
	Power turns itself off...	Auto power-off (shut off) occurs after about 5 min. in DVD mode with no operation, or if there is no broadcast signal in TV or Playback mode. Turn the power back on.	35, 37
Monitor	No picture or sound...	Make sure your antenna system (TV or CABLE) is correctly set.	10
		Completely insert Power Plug into an AC outlet.	9
		Set POWER button to ON.	8-9
	Poor picture with normal sound...	Adjust BRIGHTNESS, SHARPNESS, and PICTURE controls in the SET UP Video Adjustment.	22-23
	Poor sound with normal picture...	Adjust VOLUME control.	16
	Poor TV reception...	Adjust SHARPNESS and PICTURE controls in the SET UP Video Adjustment.	22-23
	No color or poor color...	Adjust TINT and COLOR controls in the SET UP Video Adjustment.	22-23
	Ghost (multiple) images...	Install a directional antenna.	10
	TV programs cannot be watched...	Make sure the selected channel is in unit's memory.	15
	Channel cannot be selected...	Only the channel being recorded can be viewed on this unit.	25
VCR	TV program cannot be recorded...	Make sure your antenna system (TV or CABLE) is correctly set.	10
		Make sure cassette record tab is intact.	6
	Timer recording cannot be performed...	Check that clock is set to current time and date.	35
		Make sure DSS/CABLE box (if used) is left on and tuned to channel to be recorded.	10
		Set recording Start/Stop times correctly.	26
		Timer recording may not be performed or continued if a power interruption of more than 1 minute occurs before or during a Timer Recording, even after power is restored.	
	No playback picture, or the playback picture is noisy or contains streaks...	Adjust TRACKING control in either direction.	29
Try Head Cleaning.		6	
VCR cannot be controlled...	Make sure VCR LOCK is set to off.	29	
Remote Control	Unit cannot be controlled...	Aim Remote directly at the remote sensor on the unit. Avoid any object blocking signal path.	9
		Inspect the remote batteries.	6
		Make sure VCR LOCK is set to off.	29
		Exposing unit remote sensor to direct fluorescent or outdoor light may cause signal interference.	9
	ACTION, PLAY, SELECT, SET POWER, etc. buttons cannot be selected...	Press TV/VCR for TV-VCR mode.	9
		Press DVD for DVD mode.	9
	Check remote batteries.	6	
DVD/CD/Video CD	Play fails to start even when PLAY is pressed...	This unit cannot play discs other than DVDs, CDs and Video CDs.	6
		The disc may be dirty and require cleaning.	7
	Picture is distorted during rapid advance or rapid reverse...	The picture will be somewhat distorted at times; this is normal.	
	No Forward/Reverse search play...	Some discs may have sections which prohibit Forward/Reverse search.	37
	Audio soundtrack and/or subtitle language is not the one selected at the initial settings...	The audio soundtrack and/or subtitle language selected at DVD initial settings must exist on the disc.	38-39
	No subtitles...	Subtitles appear only when available on disc.	39
		Select "ON" at the "Subtitle language" section to display subtitles.	39
Alternative audio soundtrack (or subtitle) language cannot be selected...	Alternative language cannot be selected with discs which do not contain more than one language.	38-39	
	For some discs, alternative language cannot be selected with the AUDIO or SUB TITLE button. Try selecting it from the DVD menu if available.	38-39	
Angle cannot be changed...	This function is dependent on software availability. Even if disc has multiple angles, they may be recorded for specific scenes only (ANGLE Indicator on unit lights up).	47	
Miscellaneous	Video cassette cannot be inserted...	Insert the cassette window side up, record tab facing you.	6
	Video cassette cannot be removed...	Completely insert Power Plug into an AC outlet.	9
	Eject does not function or insertion cannot be done...	Turn the POWER off and then on, and try ejecting or inserting the tape again.	
	Video cassette ejects when a recording is started, or the power is turned off for timer recording...	Make sure cassette record tab is intact.	6
	In Stop mode, the VCR motor (CYLINDER) continues to rotate...	To enable Quick Play mechanism, the VCR cylinder will rotate for about 3 minutes. This reduces response time from Stop to Play mode and from Play to Rewind Search mode.	

If you cannot resolve the problem, please call the Customer Satisfaction Center for product assistance at 1-800-211-PANA(7262).  
To locate an authorized servicer call toll free 1-800-211-PANA(7262) or, contact us via the web at: <http://www.panasonic.com/contactinfo>

# Guía rápida de uso en español

## IMPORTANTES PRECAUCIONES DE SEGURIDAD

### ⚠️ ADVERTENCIA

**PARA REDUCIR EL RIESGO DE GOLPES ELÉCTRICOS, INCENDIOS, HERIDAS O DAÑOS A ESTE PRODUCTO, LEA Y GUARDE TODAS LAS INSTRUCCIONES DE SEGURIDAD Y FUNCIONAMIENTO. TENGA EN CUENTA TODAS LAS ADVERTENCIAS INDICADAS EN EL MANUAL Y EN EL PRODUCTO.**

## Instalación

### 1 Precauciones para los recursos de energía

Opere solamente usando la fuente de energía indicada en el aparato o en este manual. Si tiene dudas haga que su compañía de utilidades eléctricas o a su distribuidor que verifiquen las fuentes de energía de su casa.

### 2 Enchufar el cordón de energía

Para la seguridad de este aparato, este posee una clavija de tipo polarizado (una clavija ancha) o una clavija de tres patas. Siempre mantenga el enchufe firmemente y asegúrese de que tenga las manos secas cuando conecte o desconecte el enchufe del cordón de energía. Limpie el polvo y la tierra del enchufe regularmente.

### PRECAUCIONES PARA EL ENCHUFE POLARIZADO:

La clavija queda en el enchufe de una manera solamente, si esta no entra trate de revertirla y si aun no le es posible conectarla llame a un electricista para que le instale un enchufe apropiado. No trate de ajustar la clavija.

### PRECAUCIÓN CON ENCHUFES CON TOMA A TIERRA:

Este enchufe sólo entrará en una toma con conexión a tierra de tres orificios. Si fuera necesario, que un técnico electricista le instale la toma de red adecuada. No desactive esta función de seguridad manipulando el enchufe de ninguna manera.

### 3 CORDÓN DE ENERGÍA

Para evitar un mal funcionamiento del aparato y para protegerse de un corto circuito, fuego o un daño personal.

- Mantenga el cordón de energía alejado de los aparatos que generen calor y de los espacios por donde se camine. No coloque objetos pesados o cosas rodando sobre el cordón de energía.
- No ajuste el cordón de ninguna manera.
- Si se usa una extensión de cordón, esta debe tener el mismo tipo de clavija y estar seguramente conectado.
- Los enchufes sobrecargados o los cordones de extensión, pueden causar incendios.
- Cordones dañados cortados o cables craqueados pueden causar incendios y deben ser reemplazados por un electricista calificado.

### 4 NO BLOQUEE LAS ABERTURAS DE VENTILACION

Las aberturas de ventilación en el gabinete dejan escapar el calor que es generado durante el funcionamiento. Si estos son obstruidos el calor se acumula, lo que puede resultar en un incendio o daños a casetes o a discos.

### Para su protección:

- Nunca cubra las aberturas de ventilación mientras el aparato este ENCENDIDO, no ponga el aparato a funcionar sobre la cama, el sillón, el tapete, o alguna superficie blanda.
- Evite la instalación incorporada, como en una biblioteca o estantería, a menos que esté correctamente ventilada.

### 5 EVITE LUGARES EXTREMADAMENTE CALIENTES O CAMBIOS BRUSCOS DE TEMPERATURA

No coloque el aparato sobre o junto a un aparato de calefacción, radiador o lo exponga a los rayos solares, o dentro de un vehículo cerrado, en altas temperaturas de más de 95 °F (35 °C), o 75 % de humedad. Si el aparato es cambiado bruscamente de una temperatura fría a caliente la humedad se puede condensar dentro del aparato y causar daños a las cintas. Nunca exponga el aparato a vibraciones, impactos o lo coloque en una superficie desnivelada porque puede causar serios daños a las partes interiores.

### 6 Para evitar daños personales


- Nunca coloque el aparato en alguna superficie insegura, mantenga el aparato sobre una superficie segura, nivelada y fuerte. De otra manera el aparato podría caer causando daños a algún niño, adulto y dañar el aparato.
- Mueva cualquier aparato con cuidado y usando una mesa rodante. Las paradas rápidas, exceso de fuerza, o las superficies desniveladas pueden causar que los objetos vuelten.
- Siga cuidadosamente todas las instrucciones de funcionamiento.



## INSTALACION PARA LA ANTENA AFUERA

### 1 SEGURIDAD PARA LA INSTALACION DE LA ANTENA Y EL CABLE

Un sistema de antena o cable instalado afuera debe de estar apropiadamente incrustado en la tierra para proveer algo de protección contra la estática y las cargas de voltaje. La Sección 810 de el código nacional de electricidad ANSI / NFPA 70 (en Canadá parte 1 del código de electricidad de Canadá) que provee con información acerca de la manera apropiada para poner tierra en el mástil y asegurar la estructura, la entrada del alambre a la tierra y dirigirlo a una unidad de descarga de la antena, tamaño de los conductores de tierra, la ubicación de la unidad de descarga de la antena, conexiones de los electrodos, y los requerimientos para los electrodos de tierra.

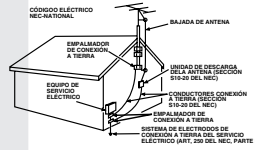

### 2 MANTENGA LA ANTENA ALEJADA DE LOS CABLES Y CIRCUITOS DE ALTO VOLTAJE.

Sitúe el sistema de antena de afuera alejado de las líneas eléctricas o circuitos de energía para en caso de caerse este no toque las líneas de energía eléctrica. Cuando instale la antena nunca toque los cables de energía eléctrica, los circuitos eléctricos u otros recursos de energía.

## USANDO EL APARATO

Antes de sacar el aparato del almacén, o moverlo de lugar, consulte de nuevo esta sección referente a la seguridad.

### 1 Mantenga el aparato alejado del agua o la humedad, como floreros, lavabos, tinas, etc.

2 Si es expuesto a la lluvia la humedad, o a un impacto fuerte, desconecte el aparato y deje que lo examine un inspector técnico calificado antes de usarlo.

### 3 Tormenta eléctrica

Durante una tormenta eléctrica, o antes de dejar el aparato sin usar por un período largo de tiempo desconecte todo el equipo de la energía eléctrica así como también la antena y el sistema de cable.

### 4 CUANDO EL APARATO ESTE CONECTADO

- NO LO PONGA A FUNCIONAR SI:
  - Ha caído líquido dentro del aparato.
  - El aparato se cayó o se dañó de alguna otra manera.
  - Si el aparato soltó humo, algún olor o hizo ruido.
- inmediatamente desconecte el aparato, y haga que lo revise un técnico de servicio para evitar las probabilidades de fuego y daños de cortocircuitos.
- Nunca tire o empuje ningún objeto en la abertura del aparato. Tocar las partes internas del aparato puede causar cortocircuito o incendios. No coloque ningún objeto extraño en charola.
- Mantenga objetos magnéticos, tales como bocinas lejos del aparato para evitar interferencia eléctrica.

### 5 USO DE ACCESORIOS

Use solamente objetos recomendados por los fabricantes para evadir los riesgos de fuego, electrochoques u otros daños.

### 6 PARA LIMPIAR EL APARATO

Desconecte el aparato. Use un trapo limpio y sin ningún producto químico para limpiar el polvo suavemente. NO USE químicos líquidos o aerosol, o aire forzado que se pueda expandir, o deslizarse dentro del aparato y causar un choque eléctrico. Cualquier substancia o cinta adhesiva, etc. pueden marcar la superficie del gabinete. La exposición a la grasa, la humedad o áreas con polvo pueden causar daños en las partes internas del aparato.

## SERVICIOS

### 1 NO ARREGLE EL PRODUCTO USTED MISMO

Si, después de seguir las instrucciones cuidadosas y detalladamente el aparato no funciona adecuadamente, no trate de abrir ni quitar las cubiertas, o hacer ningunos ajustes que no se encuentren descritos en el manual. Desconecte el aparato y comuníquese con un técnico calificado.

### 2 REEMPLAZO DE PARTES

Asegúrese que el técnico de servicios use solamente partes de manufactura o que tengan las características originales de manufactura, el uso o sustituto de partes inautorizadas puede resultar en fuego, choques eléctricos o otros daños.

### 3 REVISIÓN DE SEGURIDAD DESPUES DEL SERVICIO

Después de darle servicio o reparar el aparato solicite una revisión cuidadosa de acuerdo como lo describe en las escrituras de servicio de los fabricantes para asegurar que el aparato este seguro y en condiciones operables.

## Precauciones de seguridad

### ⚠️ ADVERTENCIA

**PARA PREVENIR INCENDIOS O CHOQUES ELÉCTRICOS NO EXPONGA ESTE APARATO A LA LLUVIA O LA HUMEDAD.**

### ⚠️ PRECAUCIÓN

**PARA PREVENIR CHOQUES ELÉCTRICOS, ASEGURASE QUE LA CLAVIJA HAGA JUEGO CON EL ENCHUFE Y CONÉCTELO COMPLETAMENTE.**



Este símbolo es una advertencia para el usuario de que el voltaje dentro del aparato podría contener la suficiente magnitud para causar choques eléctricos. Por eso es peligroso el tratar de hacer cualquier clase de contacto con cualquier parte de adentro de este aparato.



Este símbolo es una advertencia de la literatura importante concierne al funcionamiento y mantenimiento de este aparato que ha sido incluida. Por lo tanto es de suma importancia que esta sea leída cuidadosamente para poder evitar cualquier problema.

## Conexión

### Notas sobre las conexiones

- Desconecte la alimentación de todos los componentes antes de realizar cualquier conexión.
- Si los cables necesarios para conectar un componente al sistema no están incluidos con el componente o disponibles opcionalmente, quizás deba adoptar un cable para que se adecue al componente involucrado.
- Consulte cuidadosamente el manual de instrucciones de cada componente del sistema antes de conectarlo.


### Conexión del terminal de entrada RF

#### ⚠ PRECAUCIÓN

Apretar demasiado los cables coaxiales RF "tipo tuerca" podría dañar los conectores. Asegúrelos solamente con los dedos.


#### ■ Conexión de la antena

Conecte el cable de la antena al terminal VHF/UHF de la unidad.

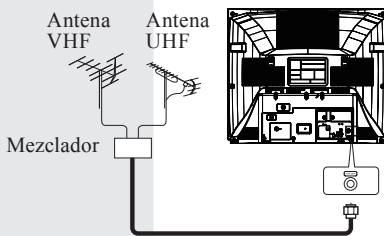

#### ■ Conexión del cable

Conecte el cable suministrado por la compañía de cable local al terminal VHF/UHF de la unidad.

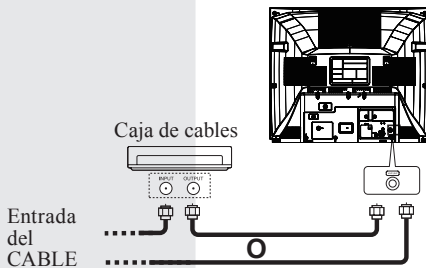


#### Nota para el instalador del sistema de CABLE:

Este recordatorio tiene la finalidad de llamar la atención a los instaladores del sistema de CABLE (televisión por cable) sobre el artículo 820-40 de NEC que brinda pautas para una conexión a tierra apropiada y, en particular, especifica que la tierra del cable se deberá conectar al sistema de tierra del edificio, tan cerca del punto de ingreso del cable como sea práctico.

### Conexión del terminal de entrada AV

Conecta videograbadores y otros equipos periféricos

#### ■ Se usa el terminal Video

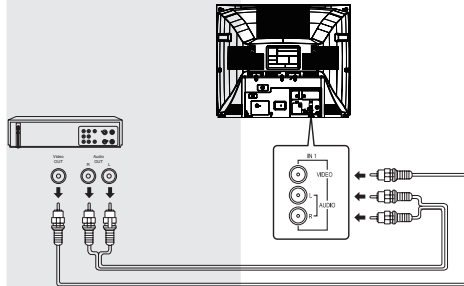

### Funcionamiento del televisor


#### Configuración inicial (listo para reproducir)

Por favor realice todas las conexiones del cable o antena antes de conectar la alimentación.

Enchufe el cable de alimentación de la unidad en un tomacorriente de CA.

Presione **POWER** en el control remoto o unidad. Comienza el ajuste automático de reloj y canal.

- Si usa una caja de cables, debe encenderla y ajustarla al canal de servicio de difusión pública (PBS) en su zona horaria. Si usa un receptor DSS, éste debe estar apagado.

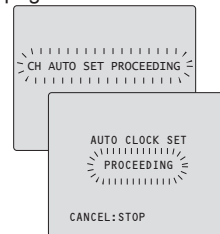

- Los botones de funciones no funcionarán durante la configuración inicial.
- Para retirar un casete durante el ajuste automático, presione **EJECT** en el control remoto. Luego ajuste manualmente.
- Dependiendo de las condiciones, el ajuste automático de reloj podría llevar más de 30 minutos. En tal caso, presione **STOP** para detener la configuración y realizar los ajustes manualmente.

#### Caso 1

Los ajustes se realizan automáticamente. Cuando se termina la configuración, aparecerá la siguiente pantalla.

```
10/25/2005 TUE 11:45AM
DST:ON
SETTING : CH 10
AUTO CLOCK SET
COMPLETED
```

#### Caso 2

Si la configuración no está completa, aparecerá la siguiente pantalla. Verifique la conexión de la antena/cable al terminal de entrada RF, luego pruebe ajustar manualmente el reloj de la siguiente manera.

```
AUTO CLOCK SET
IS INCOMPLETE
PLEASE SET CLOCK BY
PRESSING ACTION KEY
```

a. Presione **ACTION** del control remoto para exhibir la pantalla de menú **SET CLOCK**.

```
SET CLOCK
10/25/2005 SAT 12:00AM
DST:ON
SELECT: ▲ ▼ SET:SET
START :ACTION
```

b. Presione **▲▼** para seleccionar el mes y presione **SET** para ajustarlo. De la misma manera, seleccione y ajuste la fecha, año, hora, y **DST** (hora de verano).

- Presione **◀** repetidamente para mover el cursor. Presione **▲▼** para realizar la corrección.


```
SET CLOCK
10/25/2005 TUE 11:45AM
DST:ON
SELECT: ▲ ▼ SET:SET
START :ACTION
```

c. Presione **ACTION** dos veces para arrancar el reloj y salir.

## Selección del modo de entrada

### ■ Método 1:

Presione CH ▲▼. La exhibición cambiará de la siguiente manera.

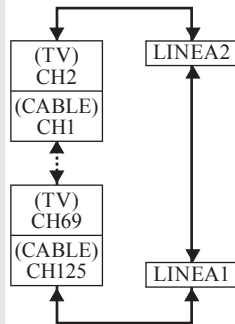


### ■ Método 2:

Presione INPUT. La exhibición cambiará de la siguiente manera.




### ■ Método 3:

- 1 Presione ACTION para acceder al MENU PRINCIPAL.
- 2 Presione ▲▼◀▶ para seleccionar "TV", luego presione SET para acceder a la pantalla PREPARAR.

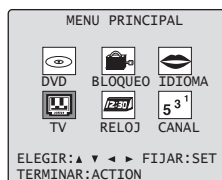

- 3 Presione ▲▼ para seleccionar "ENTRADA", y luego presione SET para seleccionar "SINTONIZADOR", "LINEA1" o "LINEA2".

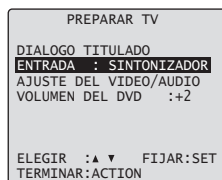

- 4 Presione ACTION dos veces para salir de este modo.

#### LINEA1:

Se exhibe la señal de la fuente conectada al terminal de entrada AV1.

#### LINEA2:

Se exhibe la señal de la fuente conectada al terminal de entrada AV2.

#### SINTONIZADOR:

Se exhibe la señal de la fuente conectada al terminal VHF/UHF.

## Uso del botón CH/VOL

### Seleccione el canal deseado:

Presione CH ▲▼ o las teclas NUMBER.

### Ajuste el nivel de volumen deseado:

Presione VOL + o VOL -.

## Uso de la tecla Number y 100

Cuando esté seleccionando canales de CABLE del 100 al 125 con las teclas NUMBER, primero presione la tecla 100, y luego ingrese los dos dígitos restantes.

### Ejemplo 1:

Para seleccionar el canal 125, primero presione la tecla 100, luego 2, luego 5.

### Ejemplo 2:

Para seleccionar el canal 12, primero presione el 1, luego el 2.

### Ejemplo 3:

Para seleccionar el canal 2, primero presione el 2.

## Sintonización rápida

Presione R-TUNE para exhibir el último canal que estaba mirando.

## Apagado del audio

Presione MUTE para apagar instantáneamente el sonido. Presione de nuevo para restaurar el sonido a su nivel anterior.

## Funcionamiento del videograbador

### Reproducción de una cinta

#### 1 Inserte una cinta.

- La alimentación de la unidad se conecta automáticamente.

#### 2 Presione PLAY para reproducir una cinta.

- Si la cinta no tiene marca de grabación, comienza la reproducción automática.

#### ■ Búsqueda de escena hacia adelante o atrás

a. Presione FF/SLOW+ o REW/SLOW-.

b. Presione de nuevo o PLAY para cancelar.

Una vez comenzada la búsqueda, cada presión adicional de FF o REW cambia la velocidad.

- La velocidad de búsqueda de FF y REW puede variar dependiendo de la posición actual de la cinta.

#### ■ Imagen fija (congelar)

a. Presione STILL/PAUSE.

b. Presione PLAY para cancelar.

#### ■ Imágenes en cámara lenta

a. Presione FF/SLOW+ (aumenta la velocidad) o REW/SLOW- (disminuye la velocidad) en el modo de imagen fija.

b. Presione PLAY para cancelar.

#### ■ Imágenes cuadro a cuadro

a. Presione STILL/PAUSE en el modo de imagen fija.

b. Presione PLAY para cancelar.

## Detención de una cinta

### Presione STOP.

#### ■ Rebobinado rápido de una cinta

Presione REW/SLOW- en el modo de detención. Rebobina una cinta T-120 en aproximadamente 1 minuto.

#### ■ Avance de la cinta rápido hacia adelante

Presione FF/SLOW+ en el modo de detención.

#### ■ Expulsión de la cinta

Presione EJECT en el control remoto o STOP/EJECT en la unidad.



## Grabación de una cinta

### 1 Inserte una cinta con marca de grabación.

- La alimentación de la unidad se conecta automáticamente.

### 2 Presione CH ▲▼ o las teclas NUMBER para seleccionar el canal.

- Para entrada de "LINEA", consulte la página 22.

### 3 Presione SPEED para seleccionar la velocidad de grabación (consulte la página 8).

- SP = Reproducción estándar
- SLP = Reproducción súper larga.
- Se exhibe la velocidad seleccionada.

 
### 4 Presione REC para comenzar la grabación.

- No puede visualizar otro canal durante la grabación.

#### ■ Grabación de un toque (OTR)

Presione REC repetidamente para ajustar la duración de la grabación (30 minutos - 4 horas.)

- La unidad detiene la grabación a la hora preajustada.
- El indicador PROG TIMER se ilumina en la unidad.



#### ■ Pausar una grabación

- Presione STILL/PAUSE.
- Presione STILL/PAUSE para retomar la grabación.

#### Notas

- No es posible grabar desde un DVD/CD a una cinta VHS usando esta unidad.
- Después de que la unidad ha estado en el modo de pausa de grabación por cinco minutos, se detendrá automáticamente para proteger la cinta y el cabezal de vídeo.
- El tiempo de grabación restante de la grabación de un toque se puede exhibir presionando DISPLAY.

## Detención de una grabación

Presione STOP para detener la grabación.

## Grabación con temporizador


Puede establecer que sean grabados hasta ocho programas mientras usted está fuera.

### 1 Presione PROG para exhibir la pantalla FIJAR PROGRAMACION.

### 2 Presione ▲▼ para seleccionar "TEMPORIZADOR".

### 3 Presione SET para exhibir la pantalla.

- Si un programa ya está en la memoria, presione ▲▼, y SET para seleccionar un número de programa no usado.


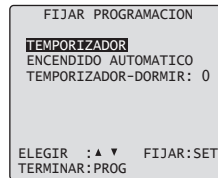


### 4 Presione ▲▼ para seleccionar y SET o ◀▶ para ajustar la fecha de grabación.


- 1~31 = una vez
- DIARIO = diariamente de lunes a viernes
- SEMANAL = semanalmente de domingo a sábado (a la misma hora una vez a la semana)

#### Repita el paso 4 para ajustar:

- Hora de comienzo, hora de detención
- Canal (o LINEA para una fuente del exterior)
- Velocidad (SP, SLP)

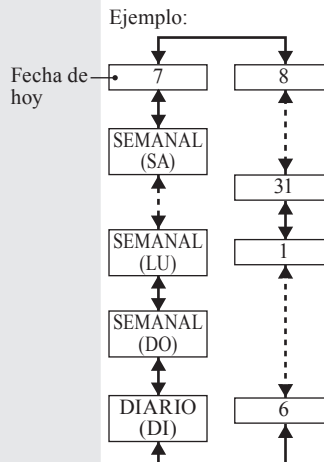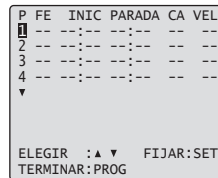

### 5 Presione PROG para terminar el programa. Para ingresar más programas, presione ▲▼ para seleccionar y SET para ajustar un número de programa vacío, y luego repita el paso 4.

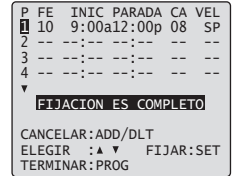


### 6 Presione PROG dos veces para salir de este modo.

- Si está usando una caja de cables, asegúrese de que esté sintonizada en el canal deseado y de que la alimentación se deje conectada para la grabación con temporizador.
- El indicador PROG TIMER se ilumina en la unidad.


#### ■ Para reemplazar el programa...

- Presione ▲▼ para seleccionar el programa deseado.
- Presione SET para exhibir.
- Presione ▲▼ para seleccionar y presione SET o ◀▶ para ajustar un programa nuevo.
- Presione PROG.

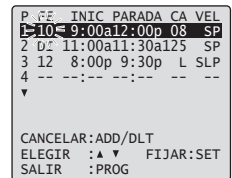

#### ■ Para borrar un programa...

- Presione ▲▼ para seleccionar el programa deseado.
- Presione ADD/DLT.

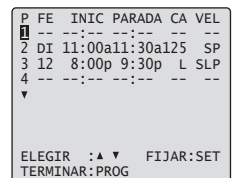

## Cancelar una grabación con temporizador: (Grabación en progreso)

Mantenga presionado STOP por algunos segundos para cancelar la grabación con temporizador.

- Cualquier grabación diaria o semanal se realizará como estaba programado.


## Funcionamiento del disco

### Reproducir disco

- 1 Presione **POWER** en el control remoto o en la unidad.
- 2 Presione **DVD** para ajustar el modo remoto a DVD.
- 3 Presione **OPEN/CLOSE**.
  - Si ya está insertado un disco, vaya al paso 5. (Dependiendo del disco, la reproducción puede comenzar automáticamente.)

### 4 Coloque un disco en la bandeja de discos.

- Sujete el disco por sus bordes solamente con el lado impreso hacia arriba y use las guías para colocarlo en la bandeja. Use un disco de ① 3" (8 cm) o ② 5" (12 cm).

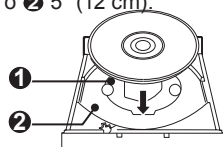

### 5 Presione **PLAY** para comenzar la reproducción. La bandeja de disco se cierra automáticamente.

- También puede cerrar la bandeja presionando **OPEN/CLOSE**.
- El tiempo de lectura de los datos difiere con cada disco.



Si se usa un DVD interactivo y aparece un menú principal del DVD, vaya al paso 6.

### 6 Presione **▲▼◀▶** para seleccionar el título y presione **SET** para comenzar la reproducción. **O**, presione las teclas **NUMBER** para comenzar a reproducir automáticamente.

- El número de títulos disponibles varía con cada disco.

#### ■ Detención de un disco

Presione **STOP** para detener la reproducción.

#### ■ Para volver al menú principal del DVD (se detiene la reproducción)

Presione **TITLE**, **MENU** o **RETURN**.

### 7 Presione **OPEN/CLOSE** para expulsar el disco.

## Uso de las teclas NUMBER

**DVD-V** **CD** **VCD** **RAM**

Cuando se usan teclas **NUMBER** en el modo de disco, el funcionamiento es diferente que en el modo de televisión.

#### Ejemplo 1:

Para seleccionar el canal 12, primero presione la tecla  $\geq 10$ , luego 1, luego 2.

#### Ejemplo 2:

Para seleccionar el canal 2, primero presione el 2.

### Búsqueda de escena rápida hacia adelante/atrás

**DVD-V** **CD** **VCD** **RAM**

### 1 Presione **FF/SLOW+** o **REW/SLOW-** durante la reproducción.

- La velocidad de búsqueda, lenta al principio, aumenta con cada presión adicional del botón hasta 5 niveles.

### 2 Presione **PLAY** para cancelar.


### Saltar hacia delante/atrás un capítulo o pista

**DVD-V** **CD** **VCD** **RAM**

### 1 Presione **SKIP+** **▶▶** o **SKIP-** **◀◀** durante la reproducción.


#### DVD y CD

- Al presionar **SKIP-** **◀◀** una vez hasta la mitad durante un capítulo o pista se vuelve al comienzo de ese capítulo o pista. Cada presión adicional salta hacia atrás un capítulo o pista.

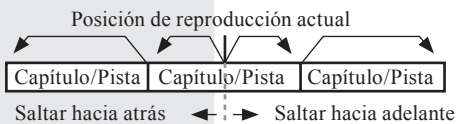

#### DVD-RAM

- Al presionar **SKIP-** **◀◀** una vez a la mitad a través de un programa/lista de reproducción se vuelve al comienzo de la programa/lista de reproducción. Cada vez adicional que se presiona se vuelve un programa/lista de reproducción para atrás.

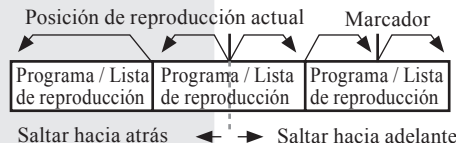

### 2 Cada vez que se presiona un capítulo (DVD), pista (CD) o programa/lista de reproducción/marcador (DVD-RAM).

## Función de apagado automático

**DVD-V** **CD** **VCD** **RAM**

Desconecta la alimentación después que la unidad ha estado en el modo de detención exhibiendo el fondo de pantalla durante unos cinco minutos.

## Imagen fija (pausa)

**DVD-V** **CD** **VCD** **RAM**

### 1 Presione **STILL/PAUSE** durante la reproducción.

- DVD: La unidad ingresará en el modo de imagen fija.
- CD: La unidad ingresará al modo de pausa.

### 2 Presione **PLAY** para cancelar.

## Imagen cuadro a cuadro

**DVD-V** **VCD** **RAM**

### 1 Presione **STILL/PAUSE** en el modo de imagen fija.

- Cada presión avanza la imagen un cuadro.
- Mantenga presionado para obtener un avance continuo de los cuadros.

### 2 Presione **PLAY** para cancelar.

## Imagen en cámara lenta

**DVD-V** **VCD** **RAM**

### 1 Presione **FF/SLOW+** o **REW/SLOW-** en el modo de imagen fija.

- Velocidad de cámara lenta, lenta al principio, aumenta con cada presión adicional del botón hasta 5 niveles.

### 2 Presione **PLAY** para cancelar.

## Función de continuación

**DVD-V** **CD** **VCD** **RAM**

La unidad memoriza el punto donde se presiona **STOP** (exhibición de **PARADA** en la pantalla).

Presione **PLAY** para retomar la reproducción a partir de ese punto. Al presionar **STOP** de nuevo o abrir la bandeja se cancela la función de continuación, sin embargo, no se cancela esta función cuando se desconecta y conecta la alimentación.


## Idioma de la banda sonora

### DVD-V

Puede cambiar el idioma de la banda sonora, seleccionado en los ajustes de funcionamiento del DVD, a un idioma diferente, si está disponible.

#### 1 Presione AUDIO en el modo de reproducción para exhibir la selección de audio en la pantalla.

- La exhibición desaparece después de cinco segundos.

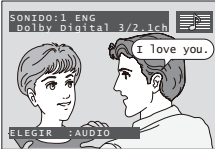

#### 2 Presione AUDIO, ▲▼, o las teclas NUMBER para seleccionar el idioma deseado.




## Idioma de los subtítulos

### DVD-V RAM

Puede seleccionar un idioma de subtítulos diferente (si se ofrece) al ajustado en los ajustes de funcionamiento del DVD.

#### 1 Presione SUB TITLE en el modo de reproducción para exhibir la selección de subtítulos en la pantalla.

- La exhibición desaparece después de cinco segundos.

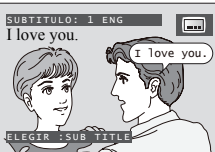

#### 2 Presione SUB TITLE, ▲▼, o teclas NUMBER para seleccionar el idioma deseado.



## Lista de reproducción

### RAM

Si entre las características del DVD-RAM se incluye una lista de reproducción, a fin de brindar un fácil acceso se exhibe su lista preseleccionada de escenas favoritas. (El funcionamiento puede variar de acuerdo a como editó el DVD-RAM.)

#### 1 Presione PLAYLIST en el modo de reproducción / detención para exhibir el menú de lista de reproducción.

No.	Fecha	Longitud	Título
1	2002/12/24 5:15:41AM	00:01:00	Reproducción de película
2	2002/12/25 4:31:49AM	00:03:12	Reproducción de imagen fija
3	2002/12/25 8:24:25AM	00:15:01	Reproducción híbrida
4	2002/12/25 12:45:00AM	00:03:00	Reproducción parcial

ELEGIR: ▲ ▼ ◀ ▶  
FIJAR :SET TERMINAR:MENU

#### 2 Presione ▲▼ para seleccionar una página y presione ◀▶ o las teclas NUMBER para seleccionar un título (número de lista de reproducción).

No.	Fecha	Longitud	Título
1	2002/12/24 5:15:41AM	00:01:00	Reproducción de película
2	2002/12/25 4:31:49AM	00:03:12	Reproducción de imagen fija
3	2002/12/25 8:24:25AM	00:15:01	Reproducción híbrida
4	2002/12/25 12:45:00AM	00:03:00	Reproducción parcial

ELEGIR: ▲ ▼ ◀ ▶  
FIJAR :SET TERMINAR:MENU

#### 3 Presione SET o PLAY, para comenzar la reproducción.

- No es necesario que presione SET o PLAY cuando esté usando las teclas NUMBER.

Al usar las teclas NUMBER se comienza automáticamente la reproducción.

- El número de títulos disponibles varía con cada disco.

##### Ejemplo 1:

Para seleccionar el número 12, primero presione la tecla  $\geq 10$ , luego 1, luego dos.

##### Ejemplo 2:

Para seleccionar el número 2, primero presione el dos.

#### 4 Presione PLAYLIST para borrar el menú de lista de reproducción.

## Navegador directo

### RAM

Si entre las características del DVD-RAM se incluye un Navegador directo, se exhibe una lista de títulos grabados. Simplemente seleccione un número de título y comience la reproducción. (El funcionamiento puede variar con cada disco usado.)

#### 1 Presione D.NAVI en el modo de reproducción/detención para exhibir el menú del Navegador directo.

No.	Fecha	Longitud	Título
1	2002/12/24 5:15:41AM	01:00:00	Drama
2	2002/12/25 4:31:49AM	00:30:00	Pana News
3	2002/12/25 8:24:25AM	01:30:25	Tigers vs. Giants
4	2002/12/25 12:45:00AM	02:00:50	Dinosaurio

ELEGIR: ▲ ▼ ◀ ▶  
FIJAR :SET TERMINAR:TITLE

#### 2 Presione ▲▼ para seleccionar una página y presione ◀▶ o las teclas NUMBER para seleccionar un título (número de programa).

No.	Fecha	Longitud	Título
1	2002/12/24 5:15:41AM	01:00:00	Drama
2	2002/12/25 4:31:49AM	00:30:00	Pana News
3	2002/12/25 8:24:25AM	01:30:25	Tigers vs. Giants
4	2002/12/25 12:45:00AM	02:00:50	Dinosaurio

ELEGIR: ▲ ▼ ◀ ▶  
FIJAR :SET TERMINAR:TITLE

#### 3 Presione SET o PLAY para comenzar la reproducción.

- No es necesario presionar SET o PLAY cuando esté usando las teclas NUMBER.

Al usar las teclas NUMBER se comienza automáticamente la reproducción.

- El número de títulos disponibles varía con cada disco.

##### Ejemplo 1:

Para seleccionar el número 12, primero presione la tecla  $\geq 10$ , luego 1, luego dos.

##### Ejemplo 2:

Para seleccionar el número 2, primero presione el dos.

#### 4 Presione D.NAVI para borrar el menú del Navegador directo.

# Limited Warranty

PANASONIC CONSUMER ELECTRONICS COMPANY, DIVISION  
OF PANASONIC CORPORATION OF NORTH AMERICA  
One Panasonic Way Secaucus, New Jersey 07094

PANASONIC SALES COMPANY, DIVISION OF PANASONIC  
PUERTO RICO, INC.,  
AVE. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park,  
Carolina, Puerto Rico 00985

## Panasonic/Quasar Video Products Limited Warranty

### Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

Product	Parts	Labor	Service	Contact Number
Camcorder	One (1) Year (except CCD Image Sensor) CCD Image Sensor - 6 (Six) Months	Ninety (90) Days Ninety (90) Days	Carry-In or Mail-In	1-800-211-PANA(7262)
DVD/VCR Deck, A/V Mixer	One (1) Year	Ninety (90) Days	Carry-In or Mail-In	1-800-211-PANA(7262)
TV/VCR, TV/DVD, TV/DVD/VCR Combination	One (1) Year (except CRT) CRT - Two (2) Years	Ninety (90) Days Ninety (90) Days	Carry-In: 21" CRT and Smaller In-Home or Carry-In: 22" CRT and Larger	1-800-211-PANA(7262)
TV/HDR Combination	One (1) Year (except CRT) CRT - Two (2) Years	Ninety (90) Days Ninety (90) Days	In-Home or Carry-In	1-888-843-9788
Rechargeable Batteries (in exchange for defective item)	Ten (10) Days	Not Applicable	Carry-In or Mail-In	1-800-211-PANA(7262)
Tape (in exchange for defective item)	Five (5) Days	Not Applicable	Carry-In or Mail-In	1-800-211-PANA(7262)
Memory Cards (in exchange for defective item)	Ninety (90) Days	Not Applicable	Carry-In or Mail-In	1-800-211-PANA(7262)

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must carry-in or mail-in your product or arrange for in-home service, as applicable, during the warranty period.

If non-rechargeable batteries are included, they are not warranted. This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is". A purchase receipt or other proof of the original purchase date is required for warranty service.

### Carry-In, Mail-in or In-Home Service

For Carry-In, Mail-In or In-Home Service (as applicable) in the United States call toll free contact number listed above or visit Panasonic Web Site: <http://www.panasonic.com>

For assistance in Puerto Rico call Panasonic Sales Company (787)-750-4300 or fax (787)-768-2910.

In-Home service, if applicable, requires clear, complete and easy access to the product by the authorized servicer and does not include removal or re-installation of an installed product. It is possible that certain in-home repairs will not be completed in-home, but will require that the product, or parts of the product, be removed for shop diagnosis and/or repair and then returned.

### Limited Warranty Limits And Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage, nor does it cover markings or retained images on the picture tube resulting from viewing fixed images (including, among other things, letterbox pictures on standard 4:3 screen TV's, or non-expanded standard 4:3 pictures on wide screen TV's, or onscreen data in a stationary and fixed location). The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.** (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, or travel to and from the servicer, loss of media or images, data or other memory or recorded content. The items listed are not exclusive, but are for illustration only.)

**ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicer. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

**PARTS AND SERVICE (INCLUDING COST OF AN IN-HOME SERVICE CALL, WHERE APPLICABLE) WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.**

## Customer Services Directory

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Servicer; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/consumersupport>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at:

1-800-211-PANA (7262),  
Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

For hearing or speech impaired TTY users, TTY : 1-877-833-8855

### Accessory Purchases

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

<http://www.pasc.panasonic.com>

or, send your request by E-mail to:

[npcparts@us.panasonic.com](mailto:npcparts@us.panasonic.com)

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only) (Monday – Friday 9 am to 8 pm, EST.)

Panasonic Services Company

20421 84th Avenue South,

Kent, WA 98032

(We Accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

For hearing or speech impaired TTY users, TTY : 1-866-605-1277

*Service in Puerto Rico*  
**Panasonic Puerto Rico, Inc. Panasonic Sales Company**  
**Factory Servicenter:**  
**Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985**  
**Phone (787)750-4300 Fax (787)768-2910**

As of December 2004

# Specifications

Display		
Picture Tube	20 inch, measured diagonally pure flat Picture Tube (PV-DF205) 27 inch, measured diagonally pure flat Picture Tube (PV-DF275)	
VCR		
Video Recording System	4 rotary heads helical scanning system	
Audio Track	1 track (Normal) 2 channel (Hi-Fi Audio Sound)	
Tuner		
Broadcast Channels	VHF 2 ~ 13, UHF 14 ~ 69	
CABLE Channels	Midband A through I (14 ~ 22) Superband J through W (23 ~ 36) Hyperband AA ~ EEE (37 ~ 64) Lowband A-5 ~ A-1 (95 ~ 99) Special CABLE channel 5A (01) Ultraband 65 ~ 94, 100 ~ 125	
General		
Power Source	120 V AC, 60 Hz	
Power Consumption	Power On	Approx. 112 W (PV-DF205) Approx. 132 W (PV-DF275)
	Power Off	Approx. 0.8 W
Television System	EIA Standard NTSC color	
Speaker	2 pieces 3 W (PV-DF205) 2 pieces 5 W (PV-DF275)	
Operating Temperature	5 °C ~ 35 °C (41 °F ~ 95 °F)	
Operating Humidity	10 % ~ 75 %	
Weight	28 kg (61.7 lbs.) (PV-DF205) 48 kg (105.8 lbs.) (PV-DF275)	
Dimensions (W × H × D)	604 mm (23-3/4") × 520 mm (20-1/2") × 496 mm (19-1/2") (PV-DF205) 760 mm (29-7/8") × 642 mm (25-1/4") × 502 mm (19-3/4") (PV-DF275)	
Discs played		
DVD disc (DVD-Video, DVD-R)	12 cm (5") single-sided, single-layer 12 cm (5") single-sided, double-layer 12 cm (5") double-sided, double-layer (one layer per side) 8 cm (3") single-sided, single-layer 8 cm (3") single-sided, double-layer 8 cm (3") double-sided, double-layer (one layer per side)	
DVD-RAM	12 cm (5") 9.4 GB (double-sided) and 4.7 GB (single-sided) 8 cm (3") 2.8 GB (double-sided)	
Compact disc (CD-DA, Video CD, CD-R, CD-RW)	12 cm (5") disc 8 cm (3") disc	
Digital audio output		
Optical digital output	Optical connector	
Pickup		
Wavelength	655 nm (DVD) 790 nm (CD, Video CD) Laser power: CLASS II	

**Note:**

- Designs and specifications are subject to change without notice.

# Index

<b>A</b>			
Accessories.....	2	Forward/Reverse Rapid Scene Search [Disc]..	37
ACTION button.....	8	Forward/Reverse scene search [Tape].	27
AC Power Plug.....	9	Frame by Frame Picture [Disc].....	37
ADD/DELETE/CLEAR button.....	8	Frame by Frame picture [Tape].....	27
Add or Delete a Channel.....	14	<b>G</b>	
ANGLE button.....	8	Glossary.....	52
Audio Adjustment.....	23	<b>H</b>	
AUDIO button.....	8	Head Cleaning.....	6
Audio Input Connector 1.....	9	<b>I</b>	
Audio Input Connector 2.....	9	Important Safeguards and Precautions..	4
Audio Menu.....	22	Index Search.....	28
Audio Mode for Playback.....	28	Information (Disc).....	6
Audio Mode for Recording.....	25	Information (MAIN MENU Screen).....	7
Audio Mode for TV Viewing.....	18	Information (Unit, Cassette).....	6
Audio Mute.....	17	Information Display.....	39
AUDIO OUTPUT.....	50	Initial Setup (Ready to Play).....	13
Audio Output Connector (L/R).....	9	INPUT button.....	8
Audio Output Terminal.....	11	Input Mode.....	16
Audio Soundtrack Language.....	38	Inserting a Tape.....	24
Auto-Power Off function.....	37	<b>L</b>	
Automatic Channel Setting.....	13	Language Code List.....	49
Automatic Clock Setting.....	14	Location of Controls.....	8
Auto Playback.....	29	<b>M</b>	
Auto Rewind.....	29	Main Menu of DVD.....	38
Auto Shut Off.....	35	Manual Tracking Control.....	29
AV Input Terminals.....	10	MENU/PLAY LIST button.....	8
<b>B</b>		Multiple Angle Viewing.....	47
Batteries.....	6	MUTE button.....	8
Before Requesting Service.....	53	<b>N</b>	
Before using VCR Functions.....	24	Number and 100 keys.....	16
Blocking Message.....	34	NUMBER Keys.....	8
Blue Screen Display.....	35	NUMBER Keys [Disc].....	37
Built In Speakers.....	9	<b>O</b>	
<b>C</b>		ON-TIMER.....	19
Canadian English Language Ratings....	33	One Touch Recording (OTR).....	25
Canadian English Language Ratings Chart..	34	ON TIMER Indicator.....	9
Canadian French Language Ratings....	33	OPEN/CLOSE/EJECT button.....	8
Canadian French Language Ratings Chart..	34	Optical digital audio output connector....	9
Cancel a Timer Recording: (Recording is in progress).....	26	<b>P</b>	
Caption On Mute Feature.....	21	Pause a Recording.....	25
Cassette Compartment.....	9	Phones Jack.....	9
CH/VOL Button.....	16	Picture Zoom.....	39
Change Language Setting.....	15	Playback Auto Eject.....	29
Changing your secret code.....	31	Playback a Tape.....	27
Channel & Function Display.....	35	Play a DVD-RAM.....	40
CHANNEL UP/DOWN button.....	8	PLAY button.....	8
Cleaning disc surface.....	7	Play Disc.....	36
Clock Setting (Manual).....	14	Play List.....	41
Closed Caption Mode Feature.....	20	POWER button.....	8
Commercial Skip.....	29	Prevent Accidental Tape Erasure.....	6
Copy Your Tapes (Dubbing).....	30	PROGRAM button.....	8
<b>D</b>		Program Play.....	45
Digital Auto Tracking.....	29	Program Repeat Play.....	46
Direct Navigator.....	41	PROG TIMER Indicator.....	9
Discs that can be played.....	6	<b>R</b>	
Disc Handling.....	7	Random Play.....	46
Disc languages.....	48	Rapid Fast forward tape.....	27
Disc Operation -Using Information Screen-....	42	Rapid Rewind tape.....	27
Disc Tray.....	9	Rapid Tune.....	17
DISPLAY button.....	8	RAPID TUNE button.....	8
DST (Daylight Saving Time).....	6	Receivable Broadcast Types.....	18
DVD button.....	8	Recording and Playing Back a Closed Caption/Text Program.....	21
DVD Volume Adjust.....	47	Record On a Tape.....	25
<b>E</b>		REC button.....	8
Eject tape.....	27	REC Indicator.....	9
<b>F</b>		Region Management Information.....	7
FF/SLOW+ button.....	8		
Forward/Reverse Chapter/Track Skip [Disc] ..	37		
		Remote Control Buttons.....	8
		Remote Sensor.....	9
		Repeat Play.....	27
		Reset all unit Memory Functions.....	15
		RESUME Function.....	38
		Review, Replace or Clear Program Contents :(Recording is not in progress) ...	26
		REW/SLOW- button.....	8
		RF in Terminal.....	10
		<b>S</b>	
		Safety Precaution.....	2
		Safety Precautions.....	3
		Secret Code.....	31
		SELECT ▲▼◀▶ button.....	8
		SET button.....	8
		Set Up to 8 Programs.....	26
		SKIP+/CM SKIP/ZERO SEARCH button... ..	8
		SKIP-/SEARCH button.....	8
		Sleep Timer.....	19
		Slow Motion Picture [Disc].....	37
		Slow Motion picture [Tape].....	27
		SPEED/RETURN button.....	8
		STILL/PAUSE button.....	8
		Still (Freeze) picture [Tape].....	27
		Still (Pause) Picture [Disc].....	37
		STILL MODE.....	51
		Stop a Tape.....	27
		STOP button.....	8
		Stop Recording.....	25
		Subtitle Language.....	39
		SUB TITLE button.....	8
		SURROUND/VSS button.....	8
		Surround Sound System.....	17
		<b>T</b>	
		Table of Contents.....	5
		Timer Recording.....	26
		Time Zone Adjust.....	15
		TITLE/D.NAVI button.....	8
		Title Menu of DVD.....	38
		TRACKING UP/DOWN button.....	8
		TV/VCR button.....	8
		TV/VCR Status & Clock Display.....	35
		TV MODE.....	51
		<b>U</b>	
		Unit Buttons.....	9
		US MOVIES Ratings.....	32
		US MOVIES Ratings Chart.....	34
		US TV PROGRAMS Ratings.....	32
		US TV PROGRAMS Ratings Chart.....	34
		<b>V</b>	
		V-Lock Control.....	29
		V.S.S. (Virtual Surround Sound).....	47
		VCR Lock.....	29
		VHF/UHF Antenna Input Terminal.....	9
		Video Adjustment.....	23
		Video CDs.....	37
		Video Input Connector 1.....	9
		Video Input Connector 2.....	9
		Video Menu.....	22
		Viewing a Blocked Program/Movie.....	34
		Vocal selection for Karaoke discs.....	39
		VOLUME UP/DOWN button.....	8
		<b>W</b>	
		Warning and Instruction Displays.....	52
		Weak Signal Display Feature.....	17
		<b>Z</b>	
		Zero Search.....	28
		ZOOM/COUNTER RESET button.....	8

LSQT0941 A

---

**Panasonic Consumer Electronics Company,**  
**Division of Panasonic Corporation of North America**  
One Panasonic Way Secaucus, New Jersey 07094  
**Panasonic Sales Company ("PSC"),**  
**Division of Panasonic Puerto Rico, Inc.**  
Ave. 65 de Infantería, Km. 9.5  
San Gabriel Industrial Park, Carolina, Puerto Rico 00985



Printed in Indonesia  
LSQT0941 A  
S0205-0