


Thank you for choosing

Panasonic OmniVision **S** VHS

MODEL PV-S4690

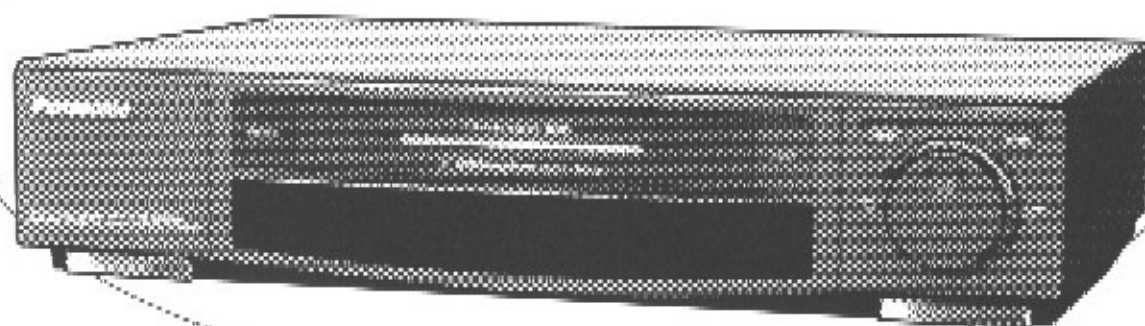

Video Cassette Recorder

VCR *Plus*[®]
w/Cable Channel
Changer

Operating Instructions

Please read these instructions carefully before attempting to connect, operate or adjust this product and save this manual.
Spanish Quick Use Guide is included. Guía para rápida consulta en español está incluido.

P6 ~ P9
Connections

P10 ~ P16
Getting Started

P17 ~ P22
Basic Operation

P23 ~ P40
More You Can Do

P41 ~ Back Cover
Other Information

Things You Should Know

Congratulations

on your purchase of one of the most sophisticated and reliable products on the market today. Used properly, we're sure it will bring you and your family years of enjoyment. Please take time to fill in the information at right. The serial number is on the tag located on the back of your VCR. You'll want to keep this manual handy as your convenient VCR information source.

Date of Purchase _____
Dealer Purchased From _____
Dealer Address _____
Dealer Phone No. _____
Model No. **PV-S4690** _____
Serial No. _____

Safety Precautions

Warning: To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

This video recorder, equipped with the HQ System, is compatible with existing VHS equipment. Only use those tapes with the **VHS** or **SVHS** mark. It is recommended that only cassette tapes that have been tested and inspected for use in 2, 4, 6, and 8 hour VCR machines be used.

This video recorder is equipped with recording functions for both conventional **VHS** and **SVHS** systems to enable users to select either mode. An **SVHS** cassette recorded in the **SVHS** mode cannot be played back with conventional **VHS** VCRs.

FCC Warning: Any unauthorized changes or modifications to this equipment would void the user's authority to operate.



This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.

This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

Table of Contents

Important Safeguards and Precautions	3
Unpacking Your VCR and Features	4
VCR and Cassette Information (Record Tab, Tape Speeds, Tape Cleaning, Head Cleaner, D. S. T., Specifications)	5

Connections

Basic Connection (Antenna and VCR, VCR and TV)	6, 7
Additional Connections (CATV, Audio/Video)	8, 9

Getting Started

One Time VCR Setup (Cable Box/ DSS Receiver Setup, Channel Memory, Auto Clock Set)	10 ~ 15
On Screen Displays (OSD) (Function, Channel, Menu, VCR Status & Clock, Warning, Instruction)	16

Basic Operation

Playback a Tape (Main Operation, Special Effects, Quality Picture Features)	17
Record On a Tape (Main Operation, One Touch Record, Channel Selection, , Select Input Mode, Rapid Tune) ...	18, 19
Tape Operation (Repeat Play, One Minute Skip, Zero Search, Auto Function, Jog/Shuttle Search, Book Mark Search, Index Search, Color ON/OFF)	20~22

More You Can Do

Special VCR and Remote Features (VCR Lock, Warning Beeper, Control 2 Separate VCRs)	23
Timer Recording (Main Operation, Cancel-Clear or Replace, Program Contents)	24, 25
Timer Recording Using VCR Buttons	25
Super (S) VHS System	26
Copying Your Tapes (Dubbing) (Connection, Main Operation, Monitoring)	27
Using the 5 Pin Editing Controller	28, 29
Dubbing Over Your Recording (Connection, Main Operation)	30, 31
Assemble Edit Copying (Target VCR Setup, Segment Sequence Setup, Main Operation)	32~35
MTS Broadcast/ VHS Hi-Fi Stereo System (Stereo/SAP/Mono Broadcast, Select Audio Mode, Spatializer)	36, 37
VCR Plus+ Set Up (VCR Plus+ Channel Set Up)	38
VCR Plus+ Programming (Main Operation, Make Corrections)	39
Multi-Brand Control Feature	40

Other Information

Before Requesting Service (Self-check items)	41
Spanish Quick Use Guide/Guía para rápida consulta	42~45
Index of Controls (Remote Control, VCR)	46, 47, Back Cover

Important Safeguards and Precautions

INTRODUCTION

Careful attention has been given to this Video product to assure a quality standard devoted to your safety and enjoyment. This quality standard together with your personal responsibility for the safety of yourself and others, will contribute to your enjoyment. This Video product uses electrical energy and requires proper handling at all times.

CAUTION

READ AND RETAIN THE SAFETY AND OPERATING INSTRUCTIONS
To make full use of the safeguards incorporated in this unit, read and follow this basic guide, adopted in part from Underwriter's Laboratories Standard 1409, Second Edition, before operating this Video product.


FOLLOW THE INSTRUCTIONS AND BE SURE TO HEED ALL WARNINGS on unit and in the manual, for easy maintenance, proper and trouble free operation of this Video product.

INSTALLATION

- OPERATE FROM A POWER SOURCE INDICATED** on this Video product, or in this Manual. Your Electric Utility Service Company or Video Products Dealer will be happy to verify the power source in your home.
- THE GROUNDED OR POLARIZED PLUG IS A SAFETY FEATURE**
This Video product may be equipped with either a polarized 2-wire AC line plug or a 3-wire grounding type plug. The two wire polarized plug (having one blade wider than the other) will fit into the power outlet only one way. If it is a three wire grounding type plug (having a third pin), it will fit into a grounding type outlet.
DO NOT DEFEAT THE SAFETY PURPOSE OF THE GROUNDED OR POLARIZED PLUG by tampering with it. If the plug does not fit fully into the socket, try reversing it. If you should still be unable to fully insert the plug into the socket, you may find that a proper outlet is needed to meet today's Electrical Standards. An electrician will replace your outlet safely.
- POWER SUPPLY CORDS SHOULD BE PROTECTED** and routed so that they are not likely to have anything rest on them, roll over them, or be subject to walking traffic or abuse: particularly at plug-ins, convenience receptacles, or cord exit points from the unit. Where an extension is needed, use a grounded or polarized cord.
HAZARDOUS FRAYED CORDS OR DAMAGED PLUGS SHOULD BE REPLACED BY A QUALIFIED SERVICE TECHNICIAN.
OVERLOADED WALL OUTLETS AND EXTENSION CORDS PRESENT DANGEROUS RISKS OF FIRE OR ELECTRICAL SHOCK.
- AVOID BLOCKING VENTILATION HOLES**
Your video unit has ventilation openings in its cabinet to release heat generated during operation. Blocking these opening can cause heat build-up inside the unit, causing failure that may result in a fire hazard or heat damage to cassettes. For protection:
 - Never cover the bottom ventilation slots or the unit with soft material, or operate the unit placed on a bed, sofa, rug, or soft accessory.
 - Avoid built-in installations, such as a bookcase or rack, unless proper ventilation is provided.
- AVOID EXTREMELY HOT LOCATIONS OR SUDDEN CHANGES IN TEMPERATURE** such as placing the unit near or over a radiator, in direct sunlight, closed vehicles, or transporting it suddenly between areas of extreme temperature variation.
If the unit is suddenly moved from a cold place to a warm place, moisture may form on the tape and inside the unit.
- TO AVOID INJURY TO A CHILD, ADULT; OR COSTLY DAMAGE:**
 - Do not place unsecured equipment on a sloping surface or any heavy object or unit.
(Use the unit in a horizontal position and do not place anything heavy on it.)
 - Support for the unit should be adequately firm, level, and strong. Replace any unstable cart, table or support. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
 - Carefully follow all operating instructions and use the manufacturer's recommended accessories when operating this unit or connecting it to any other equipment.



OUTSIDE ANTENNA, EQUIPMENT, AND POWERLINE EXPOSURE

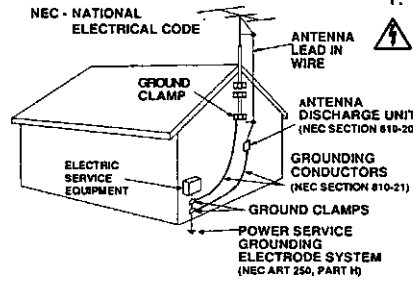

- INSURE SAFE ANTENNA AND CABLE CONNECTIONS**
If an outside antenna or cable system is connected to the equipment, be sure the antenna or cable system is grounded so as to provide some protection against built up static charges and voltage surges. Part 1 of the Canadian Electrical Code, in USA Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements for the grounding electrode.
- ELIMINATE ANTENNA PROXIMITY TO HIGH VOLTAGE POWER SOURCES, OR CHANCE OF ACCIDENTAL CONTACT BY INSTALLER**
An outside antenna system should be located where it will never be reached by power lines, electric light or power circuits and where it will never contact these power sources if it falls. Installer should use extreme care to avoid possible fatal contact by touching power lines, circuits or other power sources when installing an outside antenna.

USE

- AFTER STORING OR WHEN MOVING THE UNIT, REFER TO THE INSTALLATION SECTION OF THE SAFEGUARDS.**
- DO NOT USE THIS VIDEO UNIT NEAR WATER:** around bathtubs, sinks, laundry, wet basement, swimming pool or any water source.
 - USE ACCESSORIES RECOMMENDED ONLY BY THE MANUFACTURER** to avoid risk of fire, shock or other hazards.
 - UNPLUG ALL EQUIPMENT EXPOSED TO RAIN, MOISTURE, OR STRONG IMPACT AND GET A QUALIFIED INSPECTION**
If your unit has been exposed to rain, water, excessive moisture, or subjected to strong impact, unplug it and have it inspected by a service technician before use.
 - UNPLUG UNUSED UNIT, AND ALL EQUIPMENT DURING A STORM**
During a lightning storm, when indoors or outdoors, or before leaving unit unused for extended periods of time, disconnect all equipment from power source, antenna and cable system.
 - UNPLUG ALL EQUIPMENT BEFORE CLEANING.** After unit has been unplugged use a dry, clean, chemically untreated cloth. Use no cleaning fluids, aerosols, or forced air that could over-spray, or soak into the unit, and cause electrical shock. Any substance such as wax, adhesive tape, etc. may affect the cabinet surface.
Exposure to greasy, humid, or dusty areas may affect internal parts.
 - WHEN PLUGGED-IN: KEEP WATER AWAY; NO FINGERS INSIDE NOR ANY OBJECTS INSIDE; AND NO MAGNETS OR ELECTRICAL INTERFERENCE NEARBY.**
 - Never operate the unit if liquid has been spilled into it. Immediately unplug the unit, and have it inspected by a service technician. Fire and shock hazards can result from electrical shorts caused by liquid contact inside.
 - Caution the children about dropping or pushing objects into the unit. Some parts inside carry hazardous voltages and contact can cause electric shock. Objects dropped in electrical equipment can cause fire hazards.
 - Separate the unit from any interference causing appliances. Placing the unit directly above or below your TV set may cause electrical interference. Keep all magnets away from electronic equipment.

SERVICE


- DO NOT ATTEMPT TO SERVICE THIS PRODUCT YOURSELF.** If this Video product does not operate as described, when the detailed Operating Instructions are followed, do not attempt to open or remove covers, or make any adjustments not described in the manual. Attempting to service this unit yourself may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- CHECK ON REPLACEMENT PARTS REQUIRED.** Be sure the service technician has used replacement parts specified by the manufacturer or having the same characteristics as the original part. Unauthorized substitutes may result in fire, electric shock or other hazards.
- HAVE TECHNICIAN PERFORM SAFETY CHECK** described in the manufacture's service literature, after any service or repairs, to determine that the Video unit is in safe operating order.

Unpacking Your VCR and Features


Unpacking Your VCR

The accessories shown below are provided to help you use or set up your VCR. Optional accessories are also listed.

Accessories

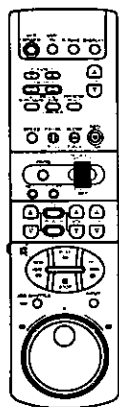

Remote Control
VSQS1383

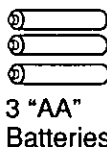

3 "AA"
Batteries



S-VHS
Connecting Cable
VJAS0148



RF Coaxial Cable
VJAS0183




Synchro
Edit Cord
VJAS0076

Optional Accessories


- 1/2" Video Cassette Tape

Load the batteries in the Remote Control


1 Lift off the lid after pressing in and up on the latch with your thumb nail or other narrow object.

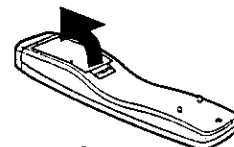

2 Install three batteries as indicated inside the Battery Compartment.

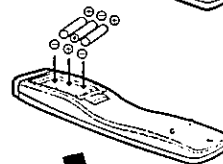

3 Fit the lid's hinge piece into the indent on the case, and snap lid into place.

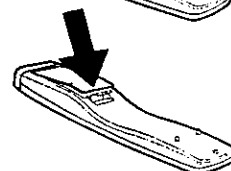


Battery replacement caution

- Do not mix old and new batteries.
(Also, never mix alkaline with manganese batteries.)

Product Features

5 Pin Editing Controller	28, 29
All Channel Auto Set/ 181-CH TV/CATV Tuner	12
Advanced Noise Reduction	17
Audio Dubbing	31
Auto Clock Set	12, 13, 14
Auto Daylight Saving Time	5
Auto Operation Functions (Auto Playback, Rewind, Tape Eject, Power off)	20
Auto Repeat Function	20
Book Mark Search	21
Cable Box Channel Control	11
Color Noise Reduction	17
Color ON/OFF Feature	21
Digital Auto Picture	17
DynAmorphous™ Metal Head	17
Flying Erased Head	30
Front-mounted A/V In Terminals	27
Jog/Shuttle Search	21
Head Cleaner	5
MTS Broadcast System (Multi-channel Television Sound-Stereo, SAP, Mono)	36
Multi Brand TV/Cable Box Remote Control	40
One Minute Skip	20
One Month, 8 Program Timer Recording	24, 25
One Touch Recording (OTR)	18
Program Director Remote Control	24, 25
Quick Play Mechanism	41
Rapid Tune	19
Spatializer	37
Special Effects Playback	17
Special VCR Features (VCR Lock, Warning Beeper)	23
Super (S) VHS System	26
Synchronized Editing	27, 30, 31
VCR Plus+ Recording	38, 39
VHS Hi-Fi Stereo System	37
VHS Index Search System (Direct Access Search, Index Scan Search)	22
Video Dubbing	30
Zero Search	20

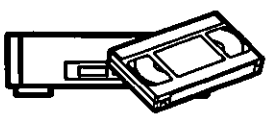


VCR and Cassette Information


Erase Protection (Record Tab)

Cassettes have a record tab to ensure that recordings are not accidentally erased.

To prevent accidental erasure, break off the tab with a screwdriver.

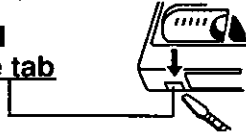

To record again, cover the hole with cellophane tape.

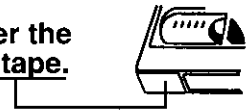

Maximum Record/Playback Time

Only use tapes with the **VHS** or **SVHS** mark in this unit.

Tape Speed Position	Type of Video Cassette		
	T60	T120	T160
SP (Standard Play)	1 Hour	2 Hours	2 Hours 40 Minutes
SLP (Super Long Play)	3 Hours	6 Hours	8 Hours

Cleaning Care for Video Heads



Clogged Video Head Picture

or

Blue Back
(During playback of pre-recorded tape)

Blue Back Screen

Clogged Video Heads

While your VCR will not normally require head cleaning, however the heads may become clogged when playing an old or damaged tape. If the image on your screen resembles the illustration on the left or the screen becomes solid blue when playing back a pre-recorded signal on the tape, the heads probably require cleaning.

Cleaning the Heads

It is recommended that head cleaning be performed by a qualified service technician. Please contact your nearest Panasonic Service Center. An alternate solution is to obtain a head cleaning cassette. Be sure to follow the cleaning instructions carefully. Excessive use of a cleaning cassette could shorten head life. Use this cassette only when symptoms occur.

Head Cleaner

A clean video head helps produce a clear picture. So we have equipped your VCR with a built-in, non-chemical head cleaning system that helps prevent clogging of the video heads. Cleaning is performed each time you load or unload a video cassette.

Note: This feature is preventative only. If your video heads are seriously clogged, consider the use of a chemical nonabrasive head cleaning kit or take your VCR to a Service Center.

Reset all VCR Memory Functions


This operation is convenient when moving the VCR to a new location, or if a mistake was made in the One Time VCR Setup section. Make sure a tape is not inserted in the VCR.

- 1) Turn VCR Power on.
- 2) Press and hold both Play and Rewind buttons on the VCR for more than 5 seconds.
 - The power will shut off.
- 3) Perform the One Time VCR Setup section on page 12.

D.S.T. (Daylight Saving Time)


Spring:

First Sunday in April (DAYLIGHT SAVING TIME: AUTO) Automatically adds one hour and adjusts the clock.

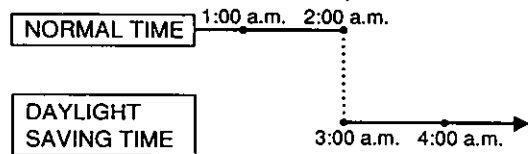

Autumn:

Last Sunday in October (DAYLIGHT SAVING TIME: AUTO) Automatically turns back one hour and adjusts the clock.

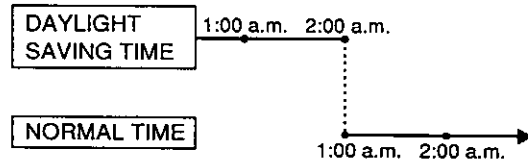

Product Specifications


Power Source:	120V AC, 60 Hz
Power Consumption:	Approx. 28 watts (Power on) Approx. 10.5 watts (Power off)
Video Signal:	EIA Standard NTSC color
Video Recording System:	4 rotary heads helical scanning system
Audio Track:	1 track (Normal) 2 channel (Hi-Fi Audio Sound)
Tuner:	
Broadcast Channels:	VHF 2~13, UHF 14~69
CATV Channels:	Midband A through I (14~22) Superband J through W (23~36) Hyperband AA~EEE (37~64) Lowband A-5~A-1 (95~99) Special CATV channel 5A (01) Ultraband 65~94, 100~125
S-VIDEO Input/Output Level:	S-VIDEO CONNECTOR (SEPARATED YC CONNECTOR): Y CONNECTOR 1.0 Vp-p, 75 ohm unbalanced C CONNECTOR 0.286 Vp-p, 75 ohm unbalanced
Operating Temperature:	41°F~104°F (5°C~40°C)
Operating Humidity:	10%~75%
Weight:	9.9 lbs. (4.5 Kg)
Dimensions:	16-15/16" (W) X 3-1/2" (H) X 11-1/2" (D) 430 (W) X 89 (H) X 292 (D) mm

Note: Designs and specifications are subject to change without notice.




Basic Connection


ANTENNA

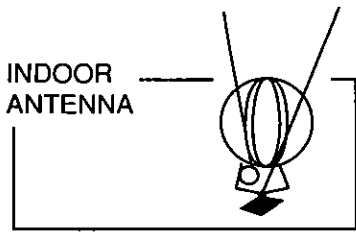

or

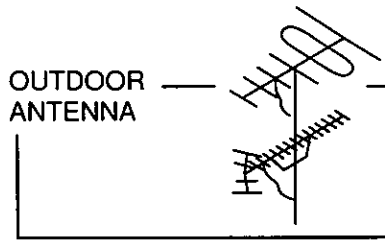

or


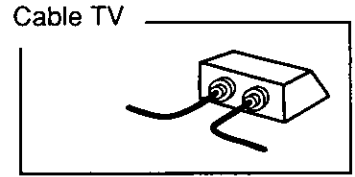


Disconnect the antenna or cable from your TV and connect it to the VCR (IN FROM ANT.)

Antenna Cable

TV

VCR

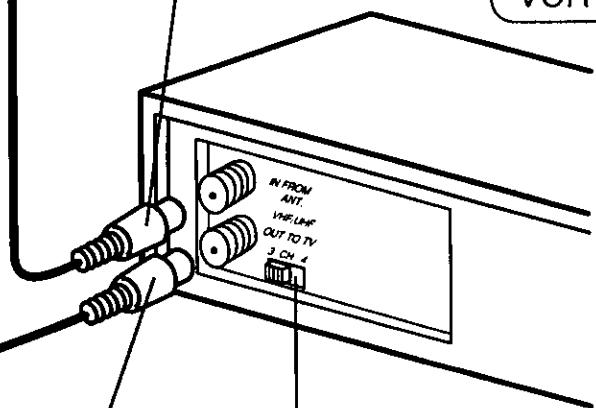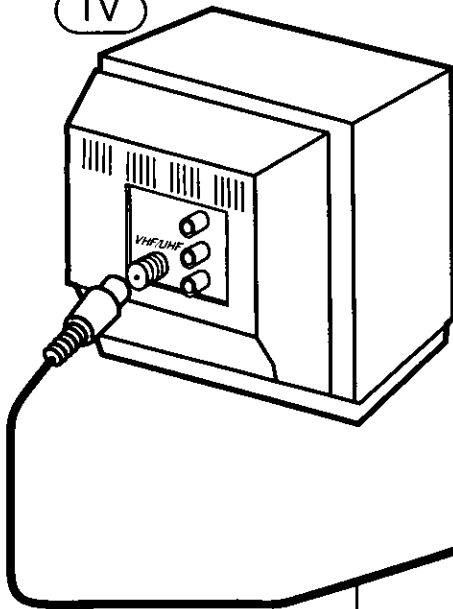


RF Coaxial Cable (VCR-TV Connection Cable) (supplied)

Set the Output Channel of your VCR to channel 3 or 4 (whichever is not being transmitted on by a Local TV broadcast).


Connect the VCR to your TV with the RF Coaxial Cable (OUT TO TV).

Between Antenna and VCR


Case 1: Twin Lead Cable Only

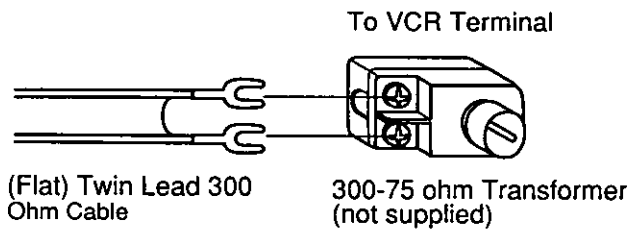

Case 2: Twin Lead & Coaxial Cables

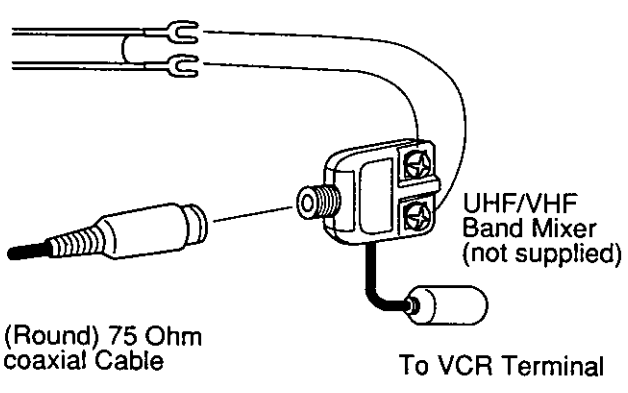


Case 3: Two Twin Lead Cables

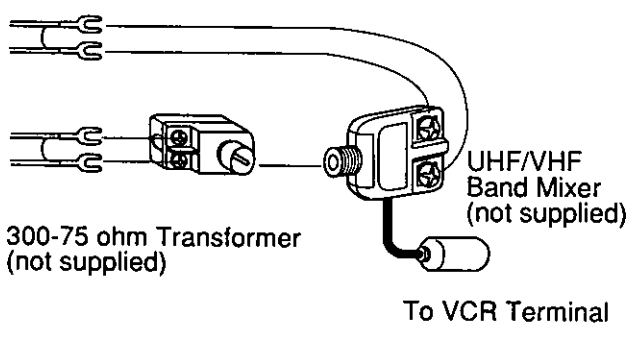


- If your TV has both post and screw-type VHF terminals, using the post connection is recommended to minimize signal loss.

Between VCR and TV


Case 1: Screw & Plug Type Terminal

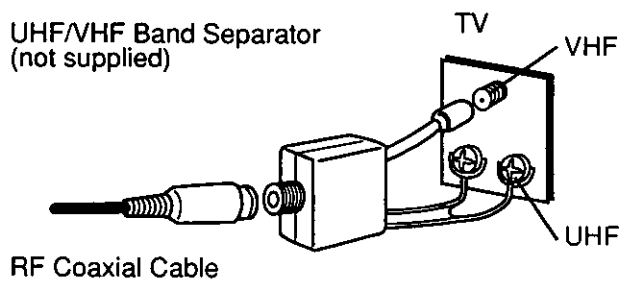

Case 2: Screw Type Terminal

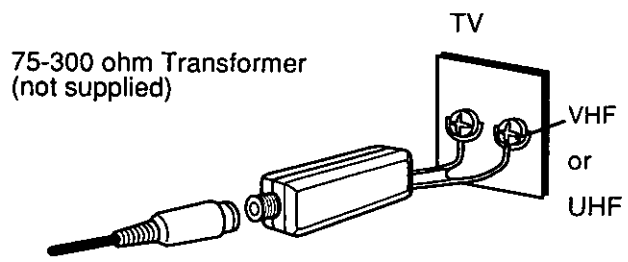


Case 3: Double Screw Type Terminal

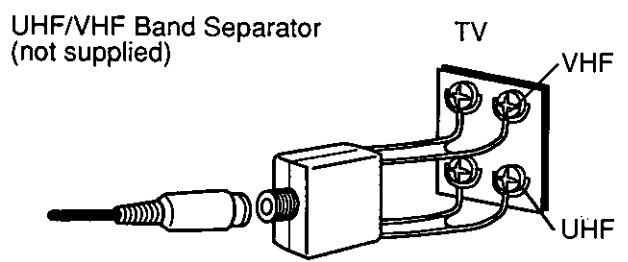

Case 4: Complex TV Terminal

TERMINALS ON BACK OF TV SET

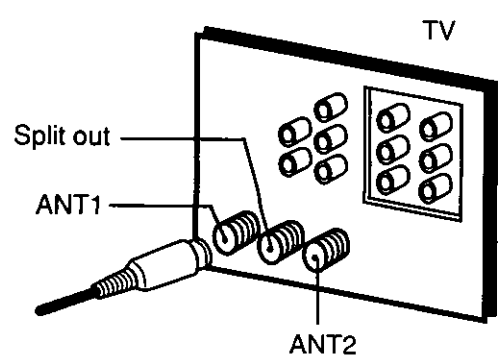

- Connect to one of the ANT terminals and select the same antenna number on the TV.



Additional Connections

CATV(Cable) Connections


All connections on this page are made with 75 Ohm coaxial cables.

Without a Converter/Descrambler Box

You can:

- 1) Use your VCR Remote Control to select channels.
- 2) Program one or more unscrambled channels for unattended recording.


NOTE: You cannot record or view scrambled channels with this connection.

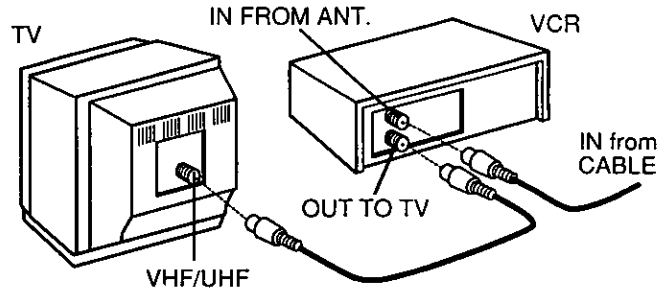

With a (CABLE to VCR) Converter/Descrambler Box

You can:

- 1) Record and view any channel including scrambled channels; channel selection must be made at the Cable TV Converter Box.
- 2) Program one channel for unattended recording.

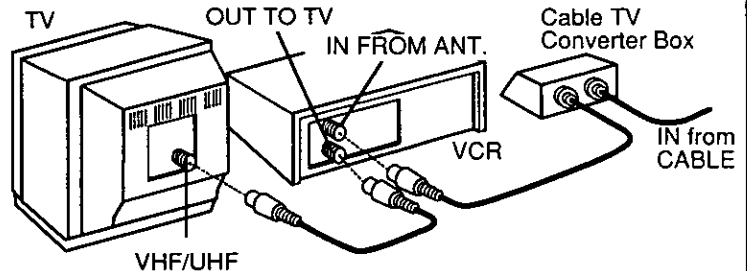


With a (VCR to TV) Converter/Descrambler Box

You can:


- 1) Use your VCR Remote Control to select channels.
- 2) Program unattended recordings of more than one unscrambled channel.

NOTE: You cannot record scrambled channels with this connection.

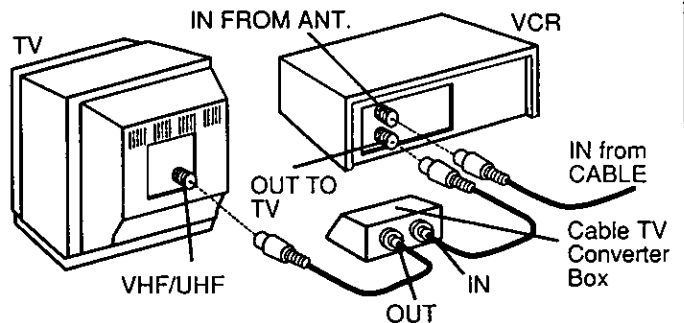

With Two Converter/Descrambler Boxes

If you want to record and view a combination of scrambled and unscrambled channels, you will need additional equipment. This connection requires two converter boxes, an A/B switch, and a 2-way splitter as shown here.

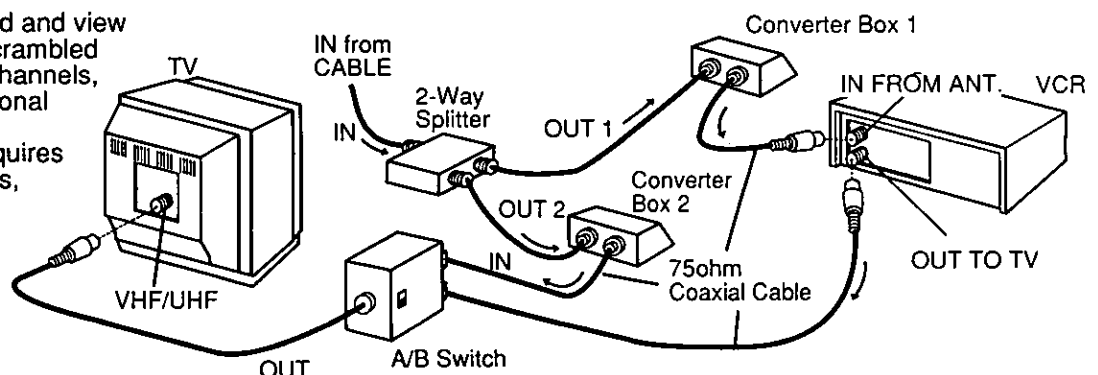


With a DSS Receiver

You can:

- 1) Record and view any channel including scrambled channels; channel selection must be made at the DSS Receiver.
- 2) Program one channel for unattended recording.


NOTE: The DSS receiver must be turned off to view programs from a cable box or antenna. See the DSS manual for details.

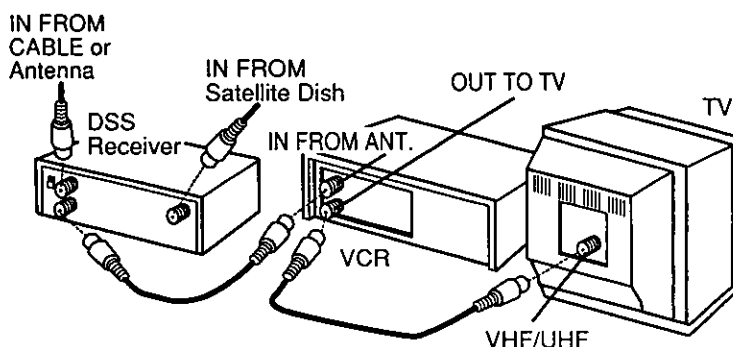

Audio/Video Connections

If your TV has AUDIO IN and VIDEO IN terminals, you can connect your VCR to them to receive a higher quality picture and sound. The antenna-VCR and VCR-TV connection is as shown.

Audio/Video Connections

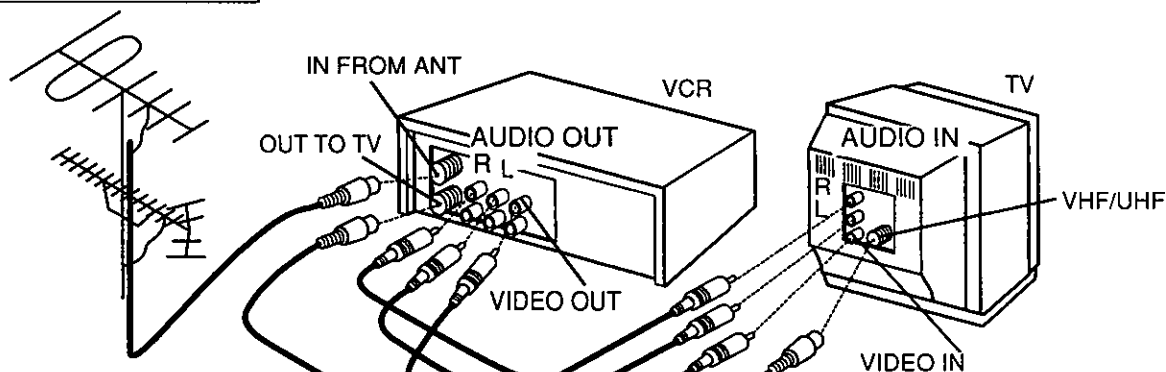


- 1 Connect the VIDEO OUT terminal on the VCR to the VIDEO IN terminal of your TV.
- 2 Connect the "L" and "R" AUDIO OUT terminals on the VCR to the "L" and "R" AUDIO IN terminals of your TV.
- 3 Set the VIDEO/TV selector of your TV (Monitor/Receiver) to "VIDEO."

NOTE: To use your TV as a VCR monitor, set the VIDEO/TV selector on the TV (Monitor/Receiver) to "VIDEO."

Stereo Amplifier Connections

When you connect your VCR to a Stereo Component System, you can view the picture from the VCR while enjoying stereo from your audio system.

Connect the "L" and "R" AUDIO OUT terminals on the VCR to the "L" and "R" AUDIO IN terminals of your stereo.

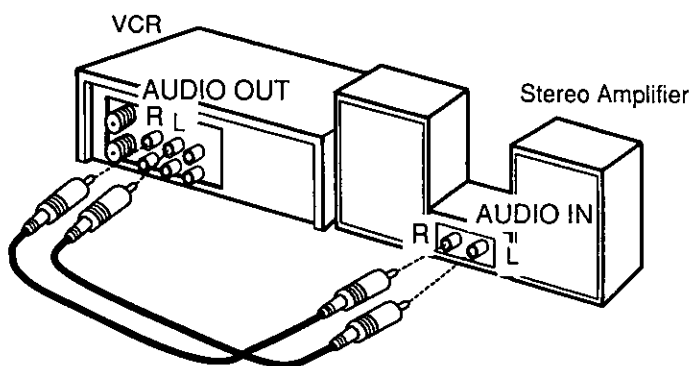

**DSS® is a registered trademark of DIRECTV, INC., a unit of GM Hughes Electronics.

Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC in USA (and to the Canadian Electrical code in Canada) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.



One Time VCR Setup

The setup on pages 12 through 14 is vital for proper VCR operation. Please read the instructions carefully and in the order presented.

NOTE: These first two pages contain reference material needed for setup on pages 12 ~14. Please look over the information before you begin setup procedure.

Setup Overview

You will be performing the following tasks:

- Telling the VCR what kind of equipment you are using to receive channels and how it is connected.
- Entering pertinent cable box or DSS receiver information if used.
- Entering a local PBS channel so that the VCR can receive auto clock set data. (Not available in all areas.)
- Placing channels in memory and setting the clock.


Please Note Which Connection Method You are Using.

Make sure all equipment is hooked up as described on pages 6~9.


The diagrams below illustrate some of the basic connection types. Confirm which method you used for later reference.

Connection Method 1

A. <CABLE BOX ->VCR ->TV>

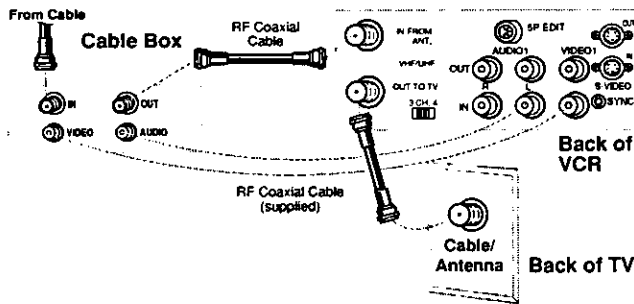


B. <ANT/CABLE BOX ->DSS BOX ->VCR ->TV>

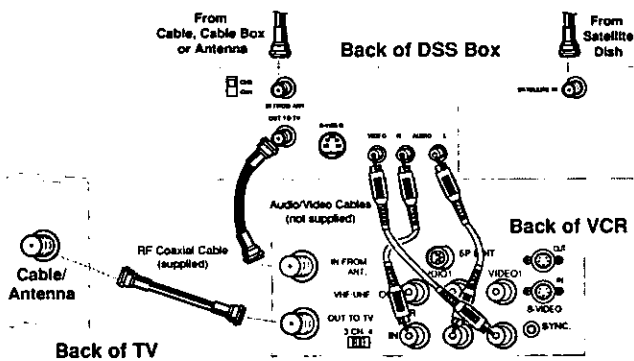


Connection Method 2

C. <VCR ->TV>

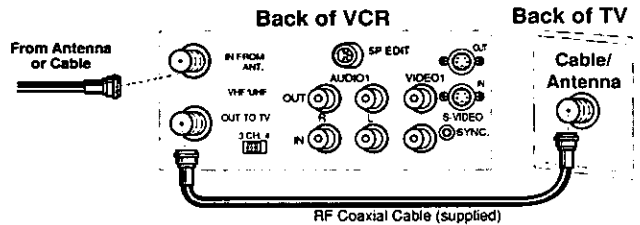

D. <VCR ->CABLE BOX ->TV>

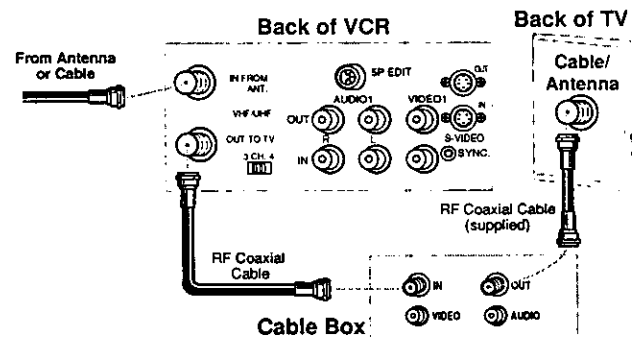

ONE TIME SETUP IMPORTANT NOTES:

- For detailed DSS receiver connection instruction, please see your DSS operating manual.
- The DSS receiver must be turned off to view programs from the cable box or antenna.
- If you use a DSS receiver, it must be turned off for auto clock set.
- If your cable box is not remote controllable, it must be tuned to your PBS channel.
- If you use Audio/Video Jack connection between the VCR and cable box or DSS receiver, you must also connect the RF coaxial cable in order to use the auto clock set and channel auto set features.

Cable Box/ DSS Receiver Code Number List

If your cable box or DSS receiver is remote controllable, refer to this list during setup on page 13.

Cable Box

Brand	Code Numbers
Archer	29, 44, 88, 91
Cableview	30, 42, 44, 52, 63, 88
Citizen	30, 42, 44, 52, 63, 88
Curtis	8, 9, 56, 61, 87, 90
Diamond	1, 29, 44, 88, 91
Drake	37, 67, 71
Eagle	13, 20, 22, 26, 40, 58, 62
Eastern	28
GC Brand	30, 42, 44, 52, 63, 88
Gemini	4, 85
General Electric	57
General Instruments	1, 2, 3, 4, 34, 55, 83, 85, 91, 93, 95
Hamlin	14, 15, 28, 41
Jerrold	1, 2, 3, 4, 34, 55, 83, 85, 91, 93, 95
Macom, Hitachi	31, 79
Magnavox	25, 26
Movietime	32, 38, 40
Movietime	29, 32, 39, 42, 44, 88
NSC	32, 38, 40
Oak	11, 46
Panasonic	16, 17
Philips	13, 20, 23, 24, 96
Pioneer	5, 06, 78
Pulser	30, 42, 44, 52, 63, 88
RCA	16, 17
Realistic	44, 51, 88
Regal	14, 41

Brand	Code Numbers
Regency	28
Rembran	29, 32, 39, 42, 44, 88
Salora	68, 72
Samsung	32, 40, 42, 78, 94
Scientific Atlantic	8, 9, 56, 61, 87, 90
Sheritech	27
SL Marx	32, 40, 42, 78, 94
Sprucer	16, 17
Stargate	32, 40, 42, 78, 94
Stargate	30, 42, 44, 52, 63, 88
Sylvania	19
Telecaption	77, 92
Teknika	74
Television	32, 40, 42, 78, 94
Texscan	18, 19
Tocom	1, 33, 34, 42, 48, 49, 91
Toshiba	36
Uniden Satellite	65, 69
Unika	1, 29, 44, 88, 91
Universal	42, 43, 44, 52, 63, 88
Viewstar	13, 20, 22, 26, 40, 58, 62
Vid Tech	64
Vidter	64
Videoway	7, 23, 50
Zenith	7, 23, 50


DSS (Digital Satellite System Receiver)

Sony	98
RCA	99
Panasonic	100

Note: During setup you will be instructed to enter your brand code number. As some brands have multiple codes, it may be necessary to try different codes to attain the proper results. These codes are for Cable box or DSS Box setup for Auto Clock and VCR Plus+ recording only. For TV/Cable Box Universal Remote Control operation, please see page 40.

Positioning Your Cable Box or DSS Receiver

If your cable box or DSS receiver is remote controllable, place it on or near the VCR as shown in the example below. The VCR transmits an infrared signal from two locations. Be sure not to cover the transmitter windows.

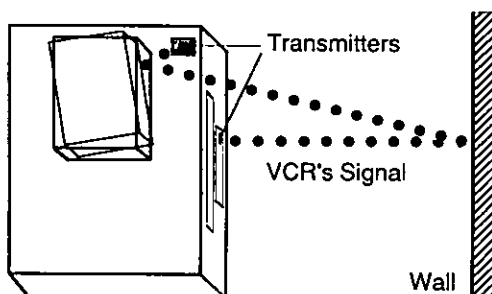



One Time VCR Setup



Follow along in the manual as you are guided through the setup procedure on the screen.

- If you make a mistake, see the "Reset all VCR Memory Function" section on page 5.



Check list before you begin.

- All TV and VCR connections are made. (See pages 6~9.)

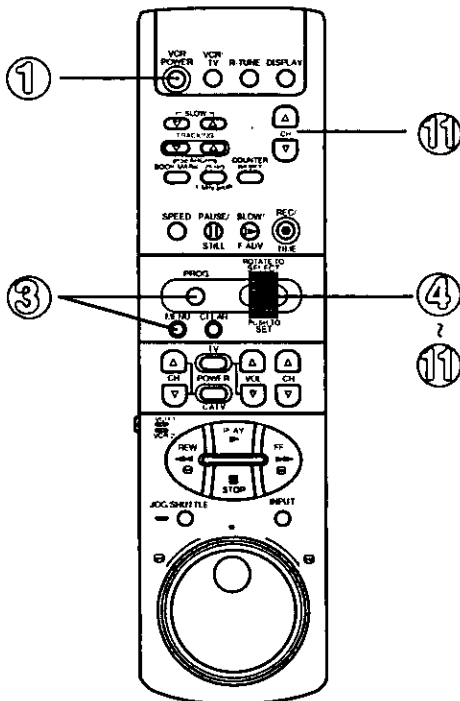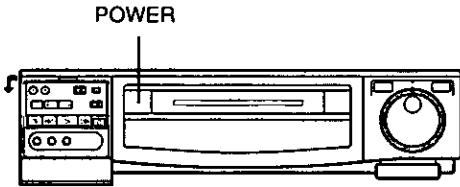

Using the Select/Set Wheel

There are basically two types of Wheel operation.

- Selecting items from an on-screen display.
- Entering information, such as setting the clock.

OPERATION



- ① **Rotate** (up or down) ROTATE TO SELECT
- ② **Push** (like a button) ROTATE TO SELECT

to make selection to enter selection

Cable box/ DSS receiver Setup, Channel Memory, and Auto Clock



Turn the TV and VCR power on.

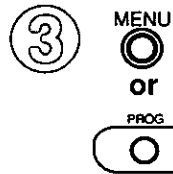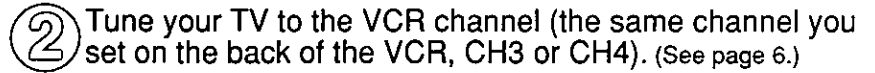

Push MENU for YES or PROG for NO.
If YES, continue with next step.
If NO, go to Alternate Instructions on page 14.

ARE YOU USING A CABLE BOX OR DSS RECEIVER?
PUSH MENU KEY : YES
PUSH PROG. KEY : NO



Rotate and push the WHEEL to select your equipment connection method. (Refer to page 10.)
If "CABLE/DSS BOX- VCR- TV," go to next step.
If not, go to Alternate Instructions on page 14.


- CABLE/DSS BOX SET UP -
SELECT YOUR CABLE BOX OR DSS RECEIVER SET UP.
CABLE/DSS BOX-VCR-TV
VCR-CABLE/DSS BOX-TV
SELECT : ROTATE WHEEL
SET : PUSH WHEEL
END : PUSH MENU KEY



Rotate and push the WHEEL to set your Cable box or DSS receiver output channel. (the channel you tune the TV to in order to watch cable or DSS stations).

- CABLE/DSS BOX SET UP -
ENTER CABLE BOX OR DSS RECEIVER OUTPUT CHANNEL.
01
SELECT : ROTATE WHEEL
SET : PUSH WHEEL
END : PUSH MENU KEY

- If both a cable box and DSS receiver is used, set the output channel of the DSS receiver.
- If you are using Audio/Video jack connections, set VIDEO OUT as the output channel.

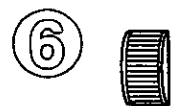

Rotate and push the WHEEL to select YES or NO.
If YES continue with next step.
If NO, go to Alternate Instructions on page 14.

- CABLE/DSS BOX SET UP -
DOES YOUR CABLE BOX OR DSS RECEIVER HAVE WIRELESS REMOTE CONTROL?
YES
NO
SELECT : ROTATE WHEEL
SET : PUSH WHEEL
END : PUSH MENU KEY



Rotate and push the WHEEL to set the Cable box or DSS receiver code number that matches your brand from the list on page 11.
• This determines whether the VCR will control your cable box or DSS receiver.

- CABLE/DSS BOX SET UP -
CHOOSE A CODE NUMBER FOR CABLE BOX/DSS RECEIVER FROM THE LIST IN OWNER'S MANUAL AND ENTER NUMBER.
02
SELECT : ROTATE WHEEL
SET : PUSH WHEEL
END : PUSH MENU KEY

Continued on the next page.

8 If you use a cable box, tune it to channel 02.
If you use a DSS receiver, tune it to any channel other than 200.



Push the WHEEL to continue.

If Cable Box
- CABLE/DSS BOX SET UP -
PLEASE TUNE YOUR CABLE BOX TO CH02.

If DSS Receiver
PLEASE TUNE YOUR DSS RECEIVER TO CH 270.

PROCEED : PUSH WHEEL
END : PUSH MENU KEY

9 Rotate and push the WHEEL to select YES or NO.



If you use a cable box and selected YES, go to step 10.

If you use a DSS receiver and selected YES, go to the Alternate Instructions on page 14.

If NO, the screen in step 7 will reappear. Try entering a different code assigned to your brand and/ or repositioning the equipment (see page 11).

If the answer is still NO, cable box or DSS receiver control is not available. Push MENU and go to the Alternate Instructions on page 14.

If Cable Box
- CABLE/DSS BOX SET UP -
IS YOUR CABLE BOX RECEIVING CH 09 ?

YES
NO

If DSS Receiver
IS YOUR DSS RECEIVER RECEIVING CH 200 ?

YES
NO
SELECT : ROTATE WHEEL
SET : PUSH WHEEL
END : PUSH MENU KEY

If the Auto Clock Set displayed time is incorrect

If you use a cable box and receive more than one PBS station, try auto clock set again. Follow the Set or Reset Auto Clock Set steps and when the instructions call for you to enter a PBS station, make sure to enter the one you have not tried yet.

If AUTO CLOCK SET INCOMPLETE appears

The screen below will appear on-screen if auto clock set data is not available in your area.

AUTO CLOCK SET
IS INCOMPLETE

PUSH MENU TO SET CLOCK

Push MENU to display the manual clock set screen. (See the "Manual Clock Set" section on page 14.)

10 Rotate and push the WHEEL to select and set the local PBS channel number you receive on your cable box.
• If you live near a different time zone, enter the channel in your time zone.



----- SET CLOCK -----
PLEASE ENTER YOUR LOCAL PBS CHANNEL ON CABLE BOX

CH 12

SELECT : ROTATE WHEEL
SET : PUSH WHEEL
END : PUSH MENU KEY

Note:
If you use a cable box and receive more than one PBS station, you may exit the manual clock set screen and try auto clock set again.
Follow the Set or Reset Auto Clock Set steps and when the instructions call for you to enter a PBS station, make sure to enter the one you have not tried yet.

11 Confirm that your cable box is on and that your DSS Box is off. Push the WHEEL to start CHANNEL AUTO SET and AUTO CLOCK SET.



The following displays appear in sequence:
"CH AUTO SET PROCEEDING"
"CH AUTO SET COMPLETED"
"AUTO CLOCK SET PROCEEDING"

This display appears when auto clock set is completed. Confirm that the time is correct and push CH ▲ to exit.



12/25/1996 WED 12:00PM
DST: ON
SETTING : CH02
AUTO CLOCK SET
COMPLETED
END : PUSH CH UP KEY

- Auto clock set will be performed when the VCR is turned off for the first time each day. If you use a cable box and you want auto clock set to be performed, the cable box must be left on at the time the VCR power is turned off.



One Time VCR Setup

Alternative Instructions

Complete the following steps if, during one time setup, any of the following applies:

- A You selected NO in step 3 on page 12 (you do not use a cable box or DSS receiver).
- B You selected connection method 2 (VCR-CABLE DSS BOX- TV) in step 4 on page 12.
- C You selected NO in step 6 on page 12 (your cable box or DSS receiver is not remote controllable).
- D You use a DSS receiver and selected YES in step 9 on page 13.
- E Cable Box or DSS receiver can not be controlled in step 9 on page 13.

1 Turn on the cable box and set it to the local PBS channel.

- If you live near a different time zone, make sure to set the channel in your time zone.
- If you use a DSS receiver, it must be turned off.

CHANNEL/CLOCK AUTO SET

CONNECT ANTENNA CABLE AND IF YOU USE A CABLE BOX, TUNE IT TO YOUR LOCAL PBS CH THEN...

PLEASE PUSH CH UP KEY

2



Push CH ▲ to start CHANNEL AUTO SET and AUTO CLOCK SET.

The following displays will appear in sequence.
"CH AUTO SET PROCEEDING"
"CH AUTO SET COMPLETED"
"AUTO CLOCK SET PROCEEDING"

This screen appears to confirm that auto clock set is completed.

3



Confirm that the time is correct and push CH ▲ to exit this screen.

If this screen appears, auto clock set is not available in your area. Please set the clock manually as described at right.


12/25/1996 WED 12:00PM
DST:ON
SETTING : CH02
AUTO CLOCK SET
COMPLETED
END : PUSH CH UP KEY

AUTO CLOCK SET
IS INCOMPLETE
PUSH MENU TO SET CLOCK

If the displayed auto clock set time and D.S.T. are not correct

If you live close to two different time zones, the VCR may recognize the wrong PBS station as the setting channel. If this happens, please complete the following steps.


- 1 Make a note of the SETTING: CH number on screen and push CH ▲ to exit.
- 2 Delete the setting channel from channel memory. (See the Add or Delete a Channel section on page 15.)
- 3 Push MENU button to display the menu.
- 4 Use the Wheel to select "SET CLOCK" and then to select "AUTO SET."
 - If you use a cable box and have multiple PBS stations, tune the cable box to a different PBS station and try auto clock set again using the menu.

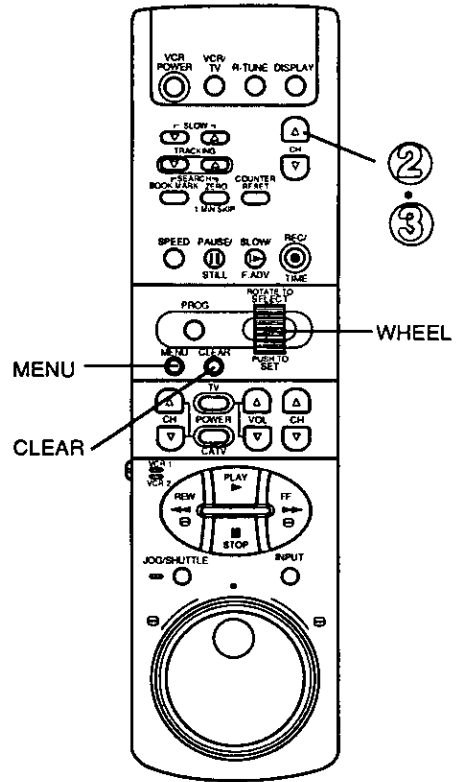

Manual Clock Set

(In case Auto Clock Set could not be performed)

1 Push MENU to display the set clock screen.

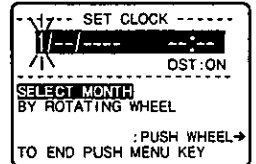



2 Rotate and push the Wheel to select and enter the month, date, year, time and D.S.T. (Daylight Saving Time).

- "DST:ON" automatically adjusts for daylight saving time. (See page 5.)

To Make Corrections, push the Wheel or CLEAR button repeatedly to move back or forward to the desired item.

3 Push MENU twice to start the clock and exit this mode.

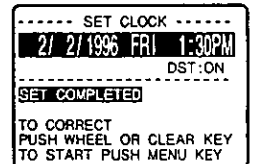

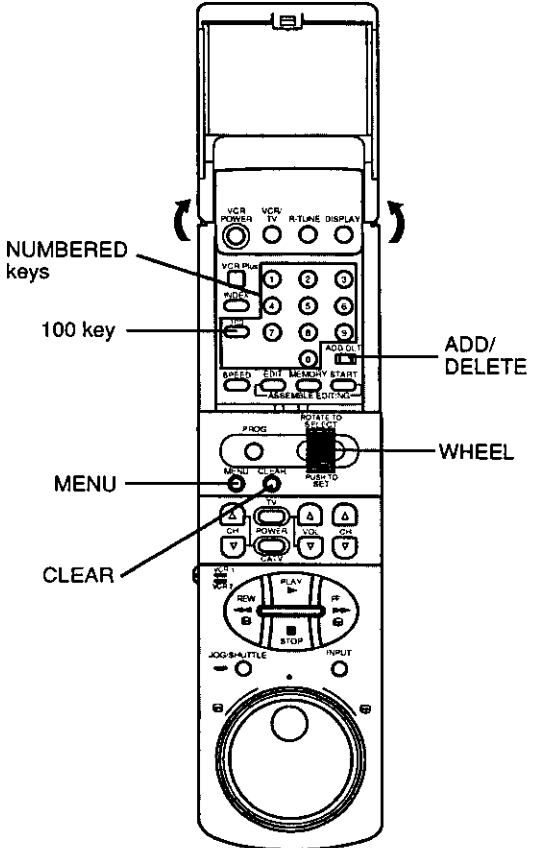


When Using the 100 key

When selecting CATV channels 100 to 125 with the NUMBERED keys, first push the 100 key and then enter the remaining two digits.
For example, to select channel 125:
Push NUMBERED keys 100, then 2, then 5.

To Set or Reset the Clock


In case the clock is wrong, or a power failure occurred.

- 1 Push MENU to display the menu.
- 2 Rotate and push the Wheel to:
 - (A) Select SET CLOCK
 - (B) Select MANUAL SET
 - (C) Set the date, time, and D.S.T. (Daylight Saving Time).
- 3 Push MENU twice to start the clock and exit this mode.

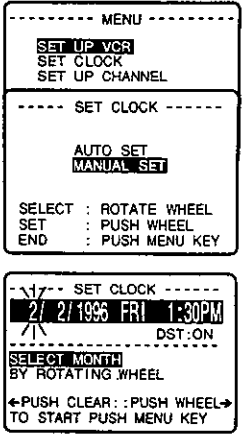

To Add or Delete a Channel

- 1 Select a channel using the NUMBERED keys.
- 2 Push ADD/HLT to add or delete the channel.
 - To select a deleted channel, use the NUMBERED keys on the remote control. Deleted channels will flash in the Multi Function Display when selected.

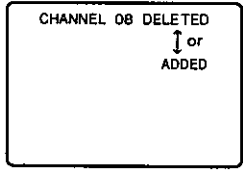


To Set or Reset Auto Clock Set

Complete the following steps if:

- Auto clock set displayed time was incorrect.
- Auto clock set was not available at the time one time setup was done, but is available now.
- The PBS channel over which clock data is sent was changed by the broadcast company.



- 1 Push MENU to display the menu.
- 2 Rotate and push the Wheel to select SET CLOCK and then select AUTO SET.
- 3 Follow the one time setup instructions on page 12~14.

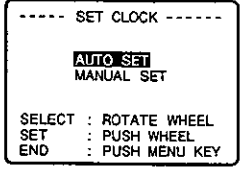

To Replace Channels in Memory



Example, if you have cable installed, etc.

- 1 Push MENU to display the menu.
- 2 Rotate and push the Wheel to select SET UP CHANNEL from menu, and then push to set your antenna system (TV or CATV).
- 3 Rotate and push the Wheel to select AUTO SET.
 - To exit this mode, push MENU twice.
- 4 Follow the one time setup instructions on page 12~14.
 - Whenever channels are replaced in memory, auto clock set is also reprogrammed.

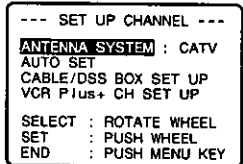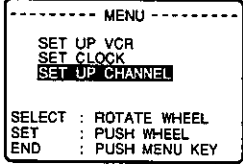


To setup the VCR in case a cable box or DSS receiver was installed or replaced

- 1 Push MENU to display the menu.
- 2 Rotate and push the Wheel to select SET UP CHANNEL from menu.
- 3 Rotate and push the Wheel to select CABLE/DSS BOX SET UP.
 - To exit this mode, push MENU twice.
- 4 Rotate and push the Wheel to select YES and continue with steps 4~9 on pages 12 and 13.

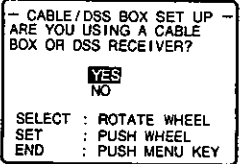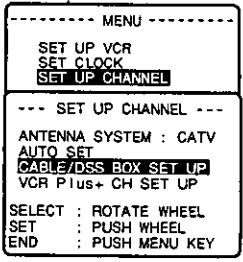


- This VCR will accurately maintain its calendar up to Dec. 31, 2014, 11:59PM.
- Normal TV or Cable channels are automatically selected and placed in memory depending on how your VCR is hooked up.
- By pushing the Wheel or CLEAR button repeatedly, you can skip forward or backward over correct entries and go directly to a specific item.

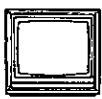

On Screen Displays (OSD)

Channel & Function Display

Whenever the channel is changed, the Channel number will appear for a few seconds on-screen. (Some station names may also appear.)

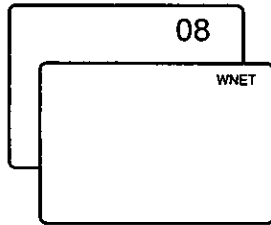


When a function button is pushed (PLAY, FF, etc.) the VCR mode will be displayed.

Menu Screen

1 Push MENU to display the menu.


2 Rotate and push the wheel to make your selection (see page 12).

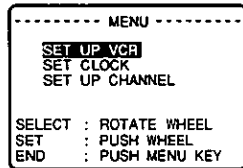

- To get the most from each feature, it is recommended that you read the Operation Manual before attempting any operation.

VCR Status & Clock Display

Push DISPLAY to display and remove the overlay shown below.

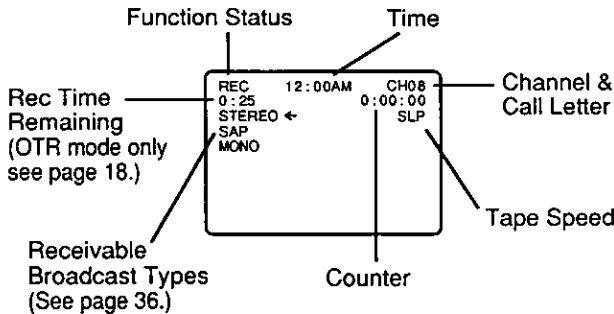


Blank Tape and will be Blue Screen

If a blank section of tape is encountered in the Play mode or the channel you select has no broadcast, the TV screen will change to a solid blue field. The screen will remain blue until a recorded signal is again detected or an active channel is selected.


Warning and Instruction Displays

These displays will alert you to a missed operation or provide further instructions.


If no active channels are found for CHANNEL MEMORY...

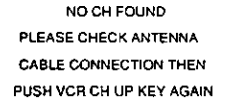


If you attempt to set or review a Timer Recording and the Clock is not set...

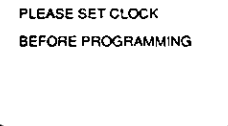


If a Timer Program was not completed before exiting the Program mode...

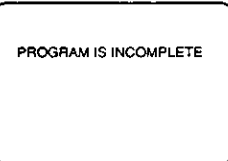


After a Timer Program has been set...

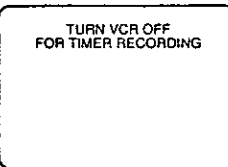


If you push REC on the remote control or REC and PLAY on the VCR, and a cassette is inserted with no record tab...

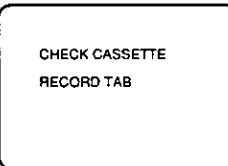

If you push PLAY, FF, REW, or REC on the remote control or if you push REC and PLAY, PLAY, FF, REW, or REC on the VCR without a cassette inserted...

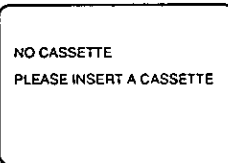



If you push POWER or STOP during a Timer Recording... (visible in VCR mode only)

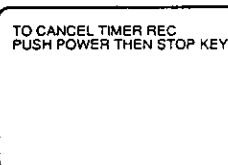

▶ Playback a Tape



✓ Check list before you begin

- All connections are made. (See pages 6~9.)
- TV and VCR are plugged in.
- TV is turned on and set to the VCR channel (CH 3 or 4).

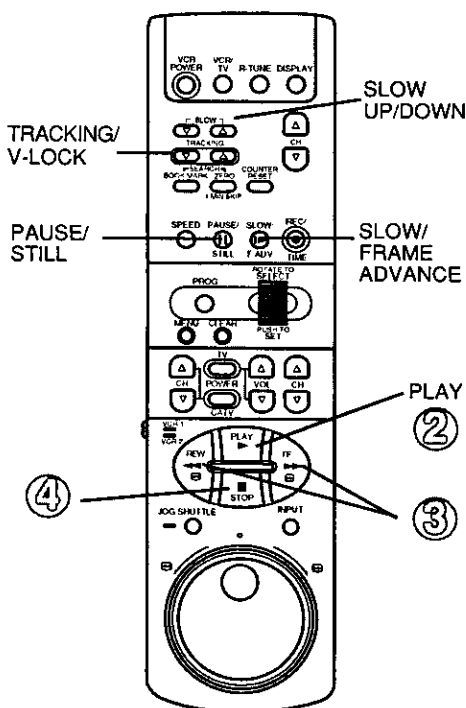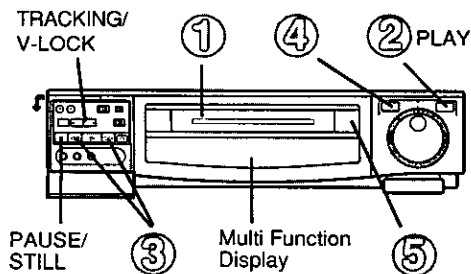


Caution:

Please inspect your cassette tape for any loose or peeling labels as it may become jammed in your unit.

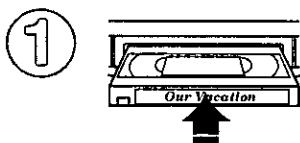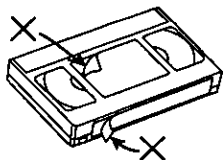

Insert a cassette.
• VCR power comes on automatically.

 This indicator lights in the Multi Function Display.



Push **PLAY** to start playback.

- Playback begins automatically if cassette has no record tab.



Push **REW** or **FF** to quickly locate a scene.

- SP mode tapes have a search speed of 9 times and SLP mode tapes 27 times the normal speed.
- Some noise bars will appear during search.



Push **STOP** to stop playback.



Push **EJECT** to eject the cassette.

- This button only on the VCR.

Special Effects During Playback

The sound will be muted. (After the VCR is in the Still or Slow mode for 3 minutes, it will go into the Stop mode automatically to protect the tape and video head.)

Slow Motion Playback

Push **SLOW/F.ADV** to start, then **SLOW ▲/▼** to vary the tape speed. Push **PLAY** or **SLOW/F.ADV** to release the Slow mode.

Still (Freeze) Frame Picture

Push **PAUSE/STILL** to freeze and release the picture.

- To reduce picture noise:
Place the VCR in Slow motion mode. Use **TRACKING ▲/▼** to clear up the picture, then push **PAUSE/STILL**.

Frame by Frame Advance

While in Still mode, hold down **SLOW/F.ADV** to advance the still picture one frame at a time. Push **PAUSE/STILL** to release.

Feature for a Quality Picture

Digital Auto Picture

This feature automatically controls the video output signal for less noise depending on the tape condition.

Digital Auto Tracking

This feature continuously analyzes the signal and adjusts for optimum picture quality.

Manual Tracking Control

Use during Playback and Slow Motion mode to reduce picture noise. Push **TRACKING ▲/▼** buttons until the picture clears up.

To return to Auto Tracking mode, push **VCR POWER** off and then on again.

V-Lock Control

In Still mode, the **TRACKING ▲/▼** buttons operate as a V-Lock control to reduce jitter. Push **▲/▼** until the picture is stabilized.

DynAmorphous™ Metal Head/




CNR (Color Noise Reduction)/ ANR (Advanced Noise Reduction)

DynAmorphous™ Metal Head increases playback and record picture quality. Color Noise Reduction reduces the color noise. Advanced Noise Reduction reduces the luminance noise.


Record On a Tape

✓ Check list before you begin.


- All connections are made. (See pages 6~9.)
- VCR is Plugged in.
- TV is turned on and set to the VCR channel (CH3 or CH4).

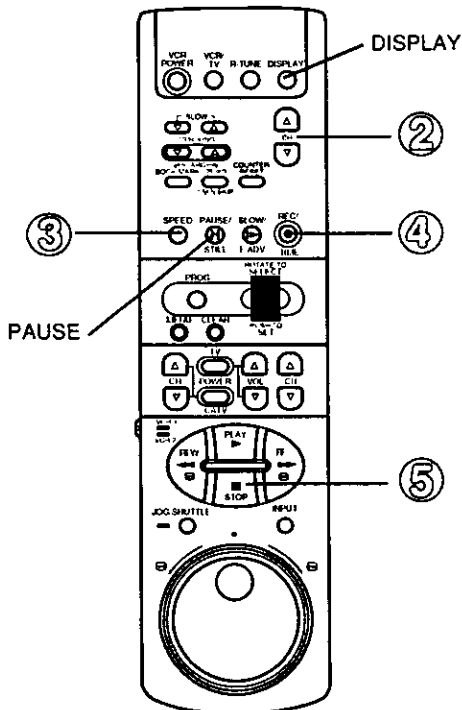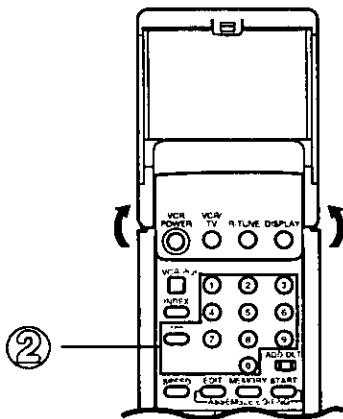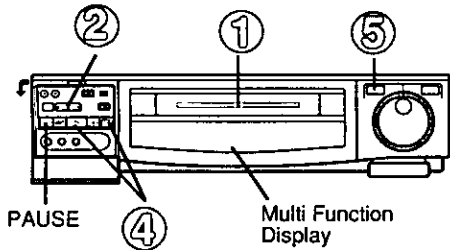


- ① Insert a cassette with record tab.
- VCR power comes on automatically.

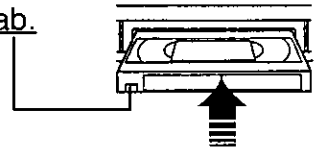

- ② Push CH ▲/▼ or NUMBERED keys to select a channel.
- Or, push CHANNEL ▲/▼ on the VCR.
 - To record from an outside source, push CH ▲/▼ to select "LINE1" or "LINE2" (see next page).

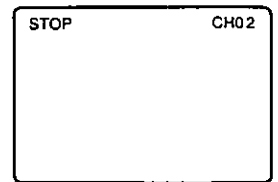

- ③ Push SPEED to change current recording speed.
- SP = Standard Play.
 - SLP = Super Long Play.

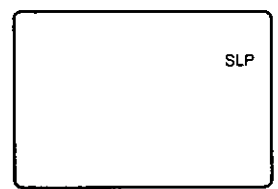


- ④ Push REC/TIME to start recording.
- Or, push PLAY and REC/TIME on the VCR.
 - The REC indicator lights in the Multi Function Display.
 - Push PAUSE to pause a recording in progress. (After the VCR has been in Pause mode for 5 minutes, it will stop automatically to protect the tape and video head.)

One Touch Timer Recording (OTR)

The VCR starts recording and turns itself off at a preset time.

Continue to push REC/TIME to set the recording length. Each push will change the stop time as shown.

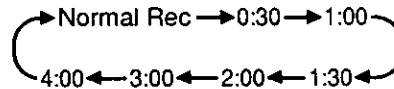

- The TIMER indicator lights in the Multi Function Display.
- The recording time remaining appears if the DISPLAY button is pushed during OTR mode.

- ⑤ Push STOP to stop recording.
- Or, push STOP on the VCR.



Selecting the Input Mode

You can select the Input Mode in one of three ways. When LINE is selected, "L1" or "L2" is displayed in the Multi Function Display for about 4 seconds.

Push INPUT button.


The display will change in the order below.



or

Push CH ▲/▼ buttons.

The display will change in the order below.

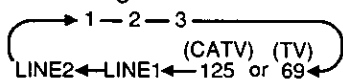

or



Push MENU to display the menu.

Then, rotate and push the Wheel to select "SET UP VCR".

Now, rotate the Wheel to select "INPUT SELECT" and then, push to choose TUNER or LINE (LINE1 or LINE2).

- LINE1: For rear audio/video connection.
- LINE2: For front audio/video connection.

MENU	
SET UP VCR	
SET CLOCK	
SET UP CHANNEL	
COLOR	: ON
REPEAT PLAY	: ON
REFFER	: ON
INPUT SELECT	: LINE1
SET AUDIO MODE	
ASSEMBLE EDIT SET UP	
SELECT	: ROTATE WHEEL
SET	: PUSH WHEEL
END	: PUSH MENU KEY

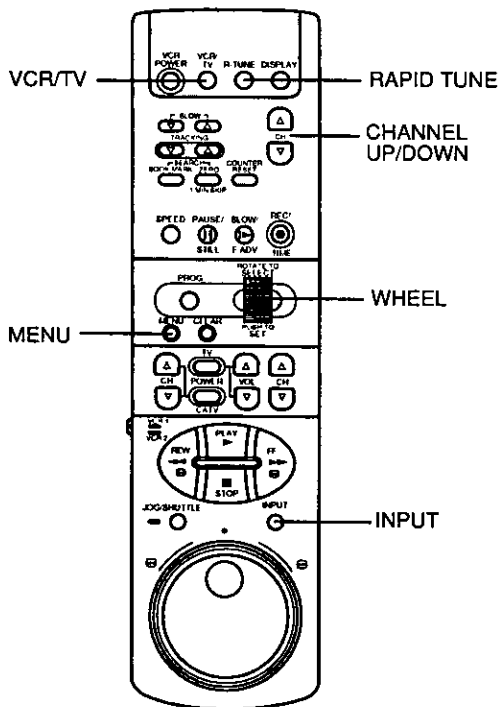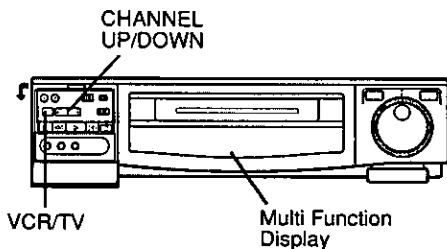

Watching Another TV Program

- 1 Push VCR/TV while recording is in progress to turn off the VCR indicator in the Multi Function Display.
- 2 Use the TV channel controls to select a program. The VCR will continue to record your program while you watch any channel you choose.
 - Switch back and forth between the recording and viewing channel with the VCR/TV selector.

Selecting Channels at the VCR

- 1 Turn TV on.




If indicator doesn't light, push VCR/TV to turn it on.

- 2 Use CH ▲/▼ buttons to select channels for viewing or recording.
 - To resume TV control channel selection, push VCR/TV to turn VCR indicator off, or simply turn VCR off.

Rapid Tune

Push R-TUNE to display the last channel you were watching.

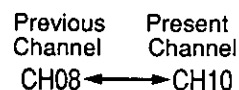


- When selecting channels with the CH ▲/▼ buttons, channels must be displayed for at least 4 seconds in order for the VCR to recognize them as a new selection.



Tape Operation

Your VCR is equipped with several time saving features as well as convenient automatic functions which make tape operation easier than ever.


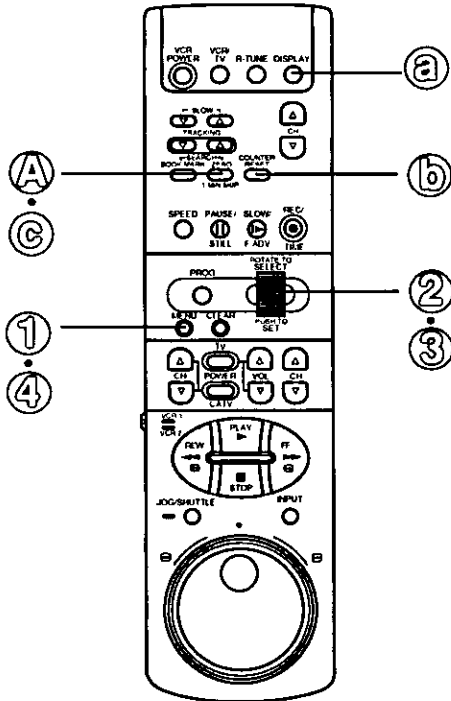


Repeat Play

You can set your VCR up to play a recording over and over.




Push MENU to display the menu.

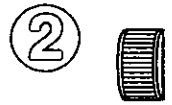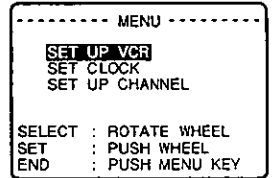

Rotate and push the WHEEL to select SET UP VCR.



Rotate the WHEEL to select "REPEAT PLAY", then push to select "ON" or "OFF".

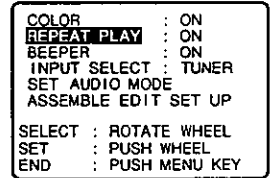

- The VCR plays to the end of a tape, or until a blank portion of 30 seconds or more is reached. (Erased portions of tape are not considered blank.) The tape is then automatically rewound and played again and again until Repeat Play is cancelled. All function buttons (REW, FF, etc.) are operational during Repeat Play.



Push MENU twice to leave this screen.

One Minute Skip

With this feature, you can skip over commercials recorded on a tape.



Push ZERO/1MIN SKIP in Play mode.

- The VCR will go into FF search mode and skip over 60 seconds of recorded time. Then, normal playback will resume.

Auto Operation Functions

Auto Playback

When a tape is inserted, the power comes on (Auto). If the record tab* is removed, playback begins (Auto).

Auto Rewind

After a tape reaches its end during playback, fast forward or manual record, the VCR will rewind and go into Stop mode.

Playback Auto Eject

After a tape without a record tab* is played to its end, the VCR will rewind and then eject the tape.

Memory Rewind Off

When the POWER button is pushed during rewind, the VCR will turn off after rewind is complete.

Eject Cassette

A cassette may be ejected with power on or off.


* For record tab information, see page 5.

Zero Search

You can reset the Time Counter to zero and then return to that point.




Push DISPLAY to display the Time Counter overlay.

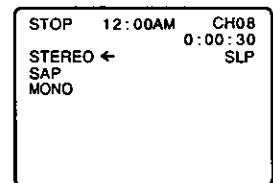


Push COUNTER RESET to reset the Time Counter.

- This may be done at as many places as you wish on the tape.

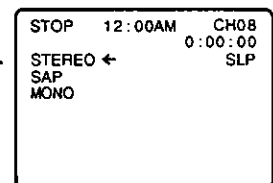

Push ZERO/1MIN SKIP in Stop mode.

- The VCR will go into FF or REW mode and stop at the last point the Time Counter was set to 0:00:00.

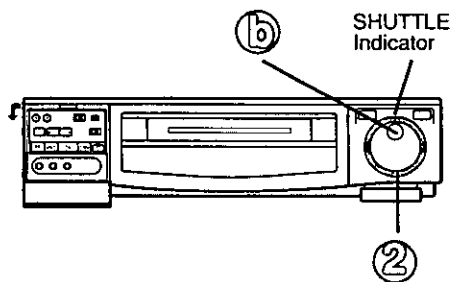

Shuttle Variable Speed Search

The SHUTTLE Ring allows you to smoothly control the tape speed during special effects playback in both forward or reverse.



Push JOG/SHUTTLE in Stop or Play mode. When using the Shuttle on the VCR, turn the SHUTTLE Ring in Still or Play mode.

- The VCR goes into Shuttle mode.
- The Shuttle indicator lights on the remote and/or VCR.




Turn SHUTTLE Ring to start a forward or reverse search.



Push JOG/SHUTTLE again to release the Shuttle mode.

- The Shuttle indicator(s) go out.
- The VCR goes into Still mode.
- When using the Shuttle on the VCR, simply press a function button such as, PLAY, STOP, etc. and the VCR will perform that function.
- When "NORMAL" is selected in the SET AUDIO MODE display, (see page 37) you will be able to hear the audio during FF or REW search. This will help you distinguish between scenes for more accuracy.

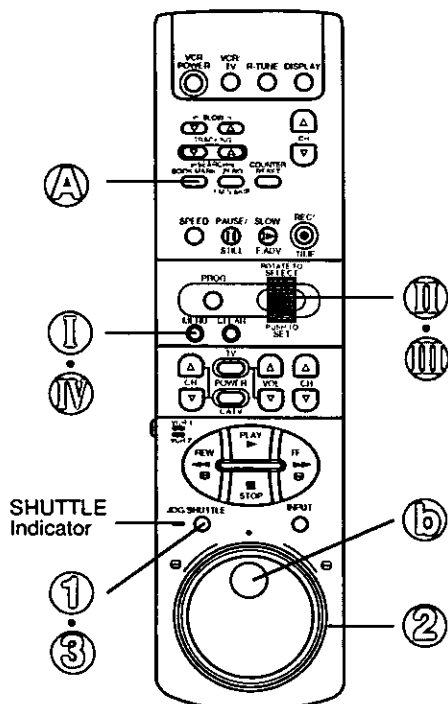

Jog Frame by Frame Search



Place the VCR in Jog/Shuttle mode. (To do this, follow step 1 above.)



Rotate the JOG DIAL to advance or reverse the picture one frame at a time.

- Follow step 3 above to resume normal operation.



- Some noise bars are normal during Shuttle operation.
- After 3 minutes in Still or Slow, the VCR will go into Stop mode.

Book Mark Search




Push BOOK MARK SEARCH in Play, FF, or Stop mode.

The following display will appear in sequence: "BOOK MARK SEARCH" The VCR will go into FF mode and then STOP automatically around the end of your recording.

- If the BOOK MARK SEARCH button is pushed where no signal is recorded, the VCR will go into Rewind mode and then stop automatically around the end of your recording.
- Playback a few seconds of tape to find the exact location to start a new recordings.

Video tape

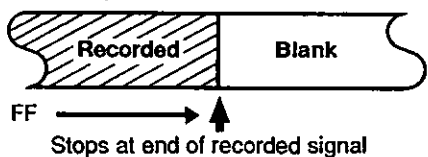


Color ON/OFF Feature

When playing back a black and white formatted tape for viewing or dubbing, or when viewing a black and white program, you may get a cleaner picture by setting the Color ON/OFF feature to OFF.




Push MENU to display the menu.

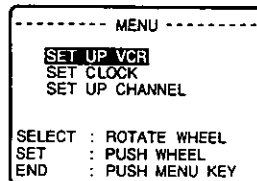

Rotate and push the WHEEL to select SET UP VCR.



Rotate the WHEEL to select "COLOR", then push to select "OFF" or "ON".

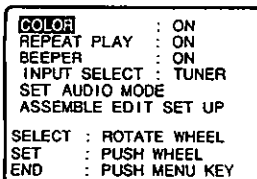

- As long as OFF is selected, the VCR picture will appear in black and white only.





Push MENU twice to leave this screen.

Tape Operation (continued)

VHS Index Search System

Each time you start a recording, an invisible index mark is automatically placed on the tape. You can then use these index points to locate a particular recording in one of the two ways described.

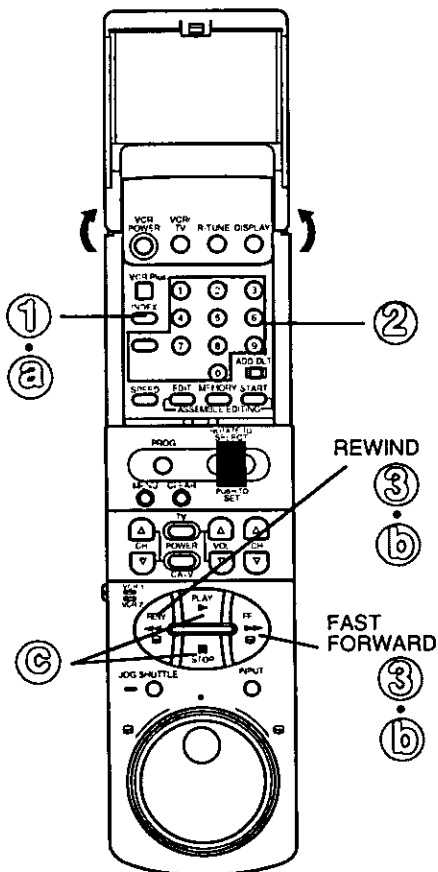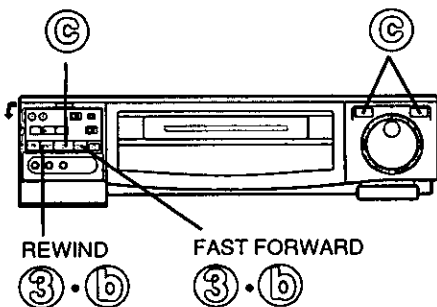


- Make entries within 10 seconds, or the Index Search mode will be canceled.
- Index marks will be placed for Timer recordings as well.
- If the Direct Access index search is initiated extremely close to an index mark, there is a possibility that the index mark will not be counted in the search.

Direct Access

This method allows you to go directly to the recording you want from anywhere on the tape by entering a specific index number.



Push INDEX in the Playback or Stop mode.

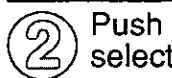


Push a NUMBERED Key to select the desired recording.

- To calculate the number, see below.




Push REW or FF to start the Index Search forward or backward.

- When the designated location is reached, the VCR goes into Playback mode.

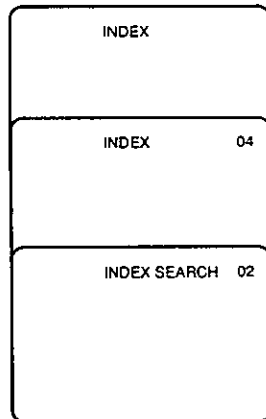

To Select an Index Number

Count forward or backward each recording start point including the recording you want to see from wherever you are on the tape.

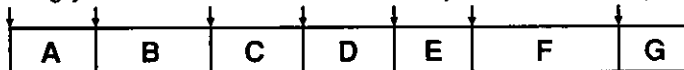

Examples:

You are now viewing recording D and you want to see recording B. Count the starting point of D, C and B which adds up to 3. Enter 3 in step 2 and then push the REW button.

You are watching recording B and you want to see recording F. Count the starting point of C, D, E and F which adds up to 4. Enter 4 in step 2 and then push the FF button.

Index Scan

Index Scan allows you to scan (forward or reverse) each recording, first for 7 seconds in Visual Search mode and then for 10 seconds in Playback mode.



Push INDEX in the Playback or Stop mode.





Push REW or FF to begin the scan.

- When each index mark is reached, a short visual search and playback will be performed after which FF or REW resumes.



Push PLAY or STOP to cancel the scan and begin playback.

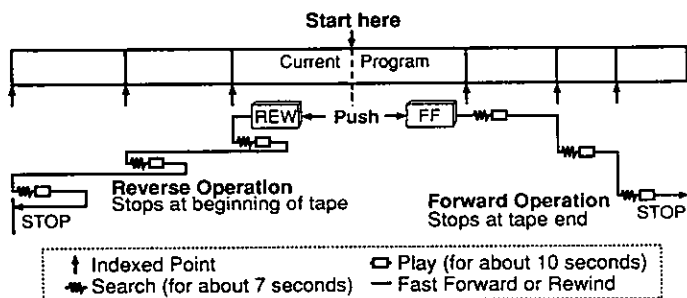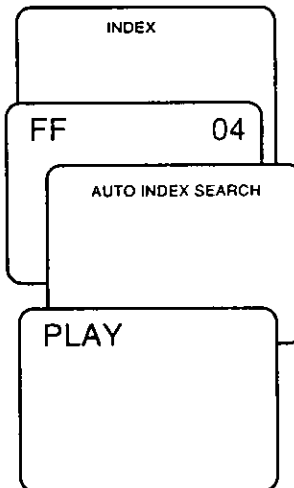




Special VCR and Remote Features

✓ Check list before you begin.

- All connections are made. (See pages 6~9.)
- VCR is Plugged in.
- TV is turned on and set to the VCR channel (CH3 or CH4).

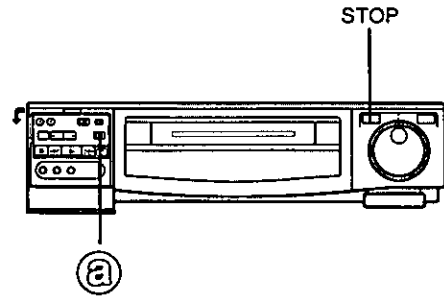


VCR Lock Feature

When activated, this feature prohibits all operations except for timer recording, and tape eject. This is useful to prevent misoperation and protect your VCR from curious children.




Hold down STOP on the VCR for 7 seconds during Stop, or Power OFF mode.

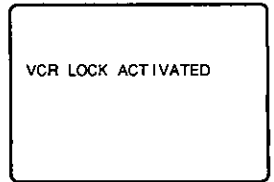

To Cancel the VCR Lock feature,



Hold down STOP on the VCR for 7 seconds again during Stop, or Power OFF mode.

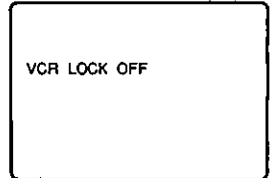


- VCR Lock mode is cancelled automatically after 24 hours when the clock is set.

Warning Beeper Feature

When you select BEEPER ON as described below, a short warning will sound each time an invalid entry or operation is made and a timer program is set.




Push MENU to display the menu.

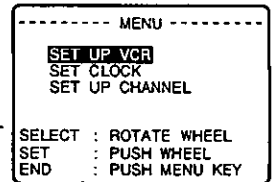


Rotate and push the WHEEL to select "SET UP VCR".



Rotate the WHEEL to select "BEEPER", then push to select "ON" or "OFF".

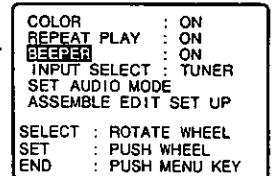

Push MENU twice to exit this screen.

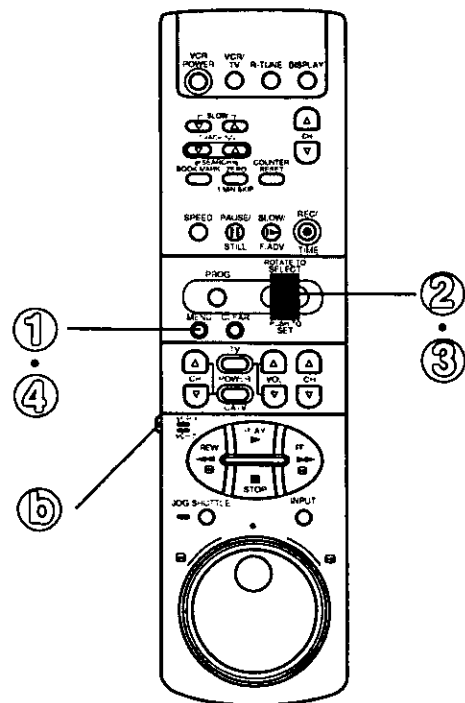

Control 2 Separate VCRs with this Remote Control

If you already own a Panasonic brand VCR, you can control both VCRs with your remote control by simply selecting the VCR1 or VCR2 position.



Set the VCR 1/2 Switch on this VCR to the "VCR1" or "VCR2" position.

- If your other VCR does not have a VCR1/2 Switch, set this VCR to the VCR2 position.



Set the VCR 1/2 Switch on the remote control of your new VCR to correspond with the VCR you wish to control.

- Point the remote in the direction of the VCR you are controlling.

More You Can Do





Timer Recording

Your VCR can be set up to do a recording while you are away or otherwise occupied. Up to 8 programs can be placed in memory. You can choose to record one time, daily, or weekly.



Check list before you begin.

- All connections are made. (See pages 6~9.)
- TV and VCR are plugged in and turned on.
- VCR/TV selector is set to "VCR."
- Clock is set to correct time.
- Record tab in place. (See page 5.)

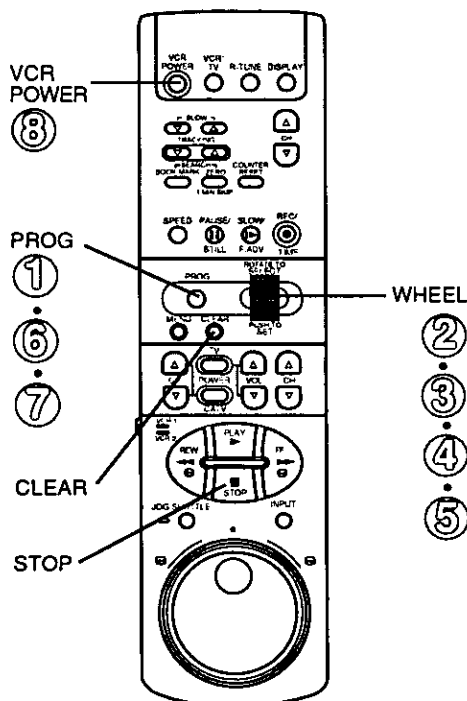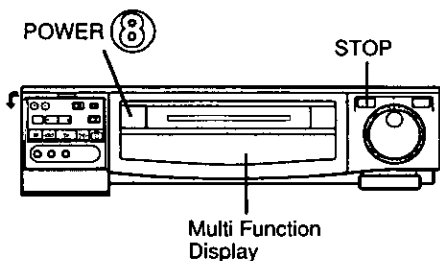


Important notes when using a DSS receiver.

- When recording programs via a DSS receiver the DSS receiver must be left on.
- When recording programs via an antenna or cable, the DSS receiver must be turned off.




- If a DSS channel is selected, the channel will appear as blue numbers on white background.
- If the cassette record tab is missing at the time the VCR power is turned OFF, the tape ejects and the TIMER indicator flashes in the Multi Function Display.
- If the start times of two programs overlap, the lower numbered program will have priority.
- If the start time for a timer recording comes up during a normal recording or One Touch Recording (page 18), the timer recording will not be performed.

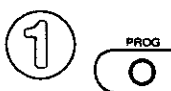


Push PROG to display the program screen.

- If a program is already in memory, use the Wheel to select an unused program number.

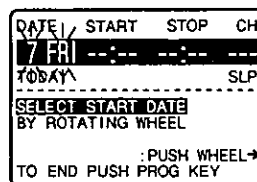


Rotate and push the WHEEL to select and set the DATE.

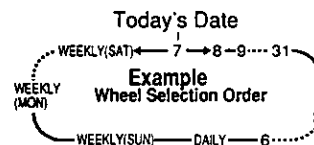

Daily and Weekly Timer Recording

If you want the program to be recorded daily (Mon thru Fri), enter DAILY in place of the DATE in step 2. If you want the recording to be on a weekly basis, enter WEEKLY MON, TUE, etc..

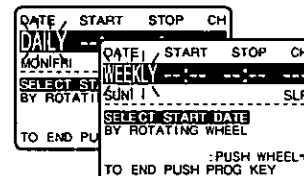

Rotate and push the WHEEL to select and set remaining items at right.

- Remaining items to be set:**
- START time
 - STOP time
 - CH(annel) number, or LINE for outside source recording.
 - Speed (SP, SLP).


To Make Corrections

Repeatedly push the Wheel to move forward, or the CLEAR button to move back to the desired item.



Push the WHEEL when program is completed. "PROGRAM COMPLETED" will appear on-screen.

- If "PROGRAM IS INCOMPLETE" appears on-screen, check all entries and make necessary corrections.
- If you enter a channel number of 100~125, the screen at right appears a few seconds later.


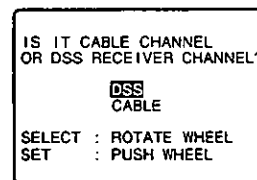


Rotate and push the WHEEL to select "DSS" or "CABLE".




Push PROG to end the program.

- If you want to enter more programs, select a blank program number with Wheel and repeat steps 2 and 3.

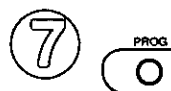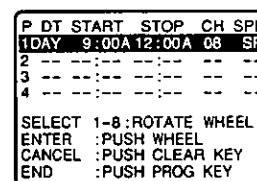

Push PROG to exit this mode.

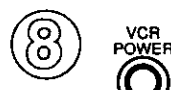

Push VCR POWER off to set the timer.

- When recording programs via a cable box, make sure the cable box is left on. If the cable box cannot be controlled with the VCR, you must manually select the desired channel.



Multi Function Display

Cancel a Timer Recording: Recording is in progress

- 1 Push the VCR POWER button to release the VCR from timer mode.
- 2 Push the STOP button within 10 seconds of pushing the VCR Power button to cancel the recording. The TIMER indicator goes out in the Multi Function Display.

Replace Program Contents: Recording is not in progress

- 1 Push the PROG button to display all currently set programs.
- 2 Rotate and push the Wheel to select and enter the desired timer recording. (See page 24.)
- 3 Rotate and push the Wheel to select and enter replacement information.
- 4 Push the PROG button to exit this mode and return to the normal TV screen.

P	DT	START	STOP	CH	SPD
1	--	--	--	--	--
2	8	10:00P	12:00P	125	SLP
3	10	8:00P	9:00P	850	SP
4	SU	9:00P	10:00P	L	SLP

SELECT 1-8: ROTATE WHEEL
ENTER : PUSH WHEEL
CANCEL : PUSH CLEAR KEY
END : PUSH PROG KEY

DATE	START	STOP	CH
8 SAT	10:00P	12:00P	125

SELECT START DATE BY ROTATING WHEEL
←PUSH CLEAR : PUSH WHEEL→
TO END PUSH PROG KEY

Review or Clear Program Contents: Recording is not in progress

- 1 Push the PROG button to display all currently set programs.
- 2 Rotate the Wheel to select the desired program number.
- 3 Push the CLEAR button to clear the program.
- 4 Push the PROG button to exit this mode and return to the normal TV screen.

P	DT	START	STOP	CH	SPD
1	DAY	9:00A	12:00A	08	SP
2	8	10:00P	12:00P	125	SLP
3	10	8:00P	9:00P	850	SP
4	SU	9:00P	10:00P	L	SLP

SELECT 1-8: ROTATE WHEEL
ENTER : PUSH WHEEL
CANCEL : PUSH CLEAR KEY
END : PUSH PROG KEY


P	DT	START	STOP	CH	SPD
1	--	--	--	--	--
2	8	10:00P	12:00P	125	SLP
3	10	8:00P	9:00P	850	SP
4	SU	9:00P	10:00P	L	SLP

SELECT 1-8: ROTATE WHEEL
ENTER : PUSH WHEEL
END : PUSH PROG KEY



Timer Recording Using VCR Buttons

A timer recording can be set up using the buttons on the VCR. If necessary, the clock can also be set.

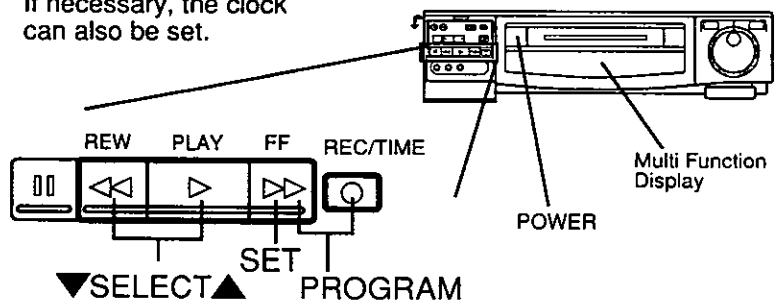

- 1 Hold down REC/TIME.

and
 Push FF to enter the program mode.

DATE	START	STOP	CH
7 FRI	--	--	--

SELECT START DATE BY SELECT ▲/▼ KEY
NEXT, PUSH SET KEY OR TO END PUSH PROG KEY

SET CLOCK	DST:ON
---	---

SELECT MONTH BY SELECT ▲/▼ KEY
NEXT, PUSH SET KEY OR TO END PUSH PROG KEY

- If the clock is not set, pushing these buttons will display the SET CLOCK screen. In this case, proceed with steps 2 and 3 to set the clock and then steps 2-6 to set a timer recording.
- Once the VCR is in the Program mode, the PLAY, REC, FF, and REW buttons on the VCR operate only as specified above.

- 2 or Push REW or PLAY to make your selection.

(for down) (for up)

- 3 Push FF to set and move on to the next item.
- Items to be Set:**
- recording DATE
 - START time
 - STOP time
 - CH(annel), or LINE
 - SPEED (SP, LP, SLP)

- Push SET (FF) repeatedly to move to a particular item for setting or correction.

When the program is completed...

- 4 and Push REC/TIME and FF to display program contents.


(at the same time)

To set the next program, repeat steps 2, 3, and 4 before continuing with step 5.

- 5 and Push REC/TIME and FF to exit this mode.

(at the same time)

- 6 Push POWER off to set the timer.

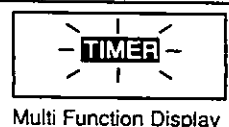


Multi Function Display

- It is not possible to clear a timer program using the VCR buttons. Please use the Remote Control.
- When recording programs via a cable box, make sure the cable box is left on. If the Cable box cannot be controlled with the VCR, you must manually select the desired channel.

S-VHS Super (S) VHS System

S-VHS tape playback is superior to VHS, even when using a conventional TV. And, your S-VHS VCR can also play back VHS format tapes.

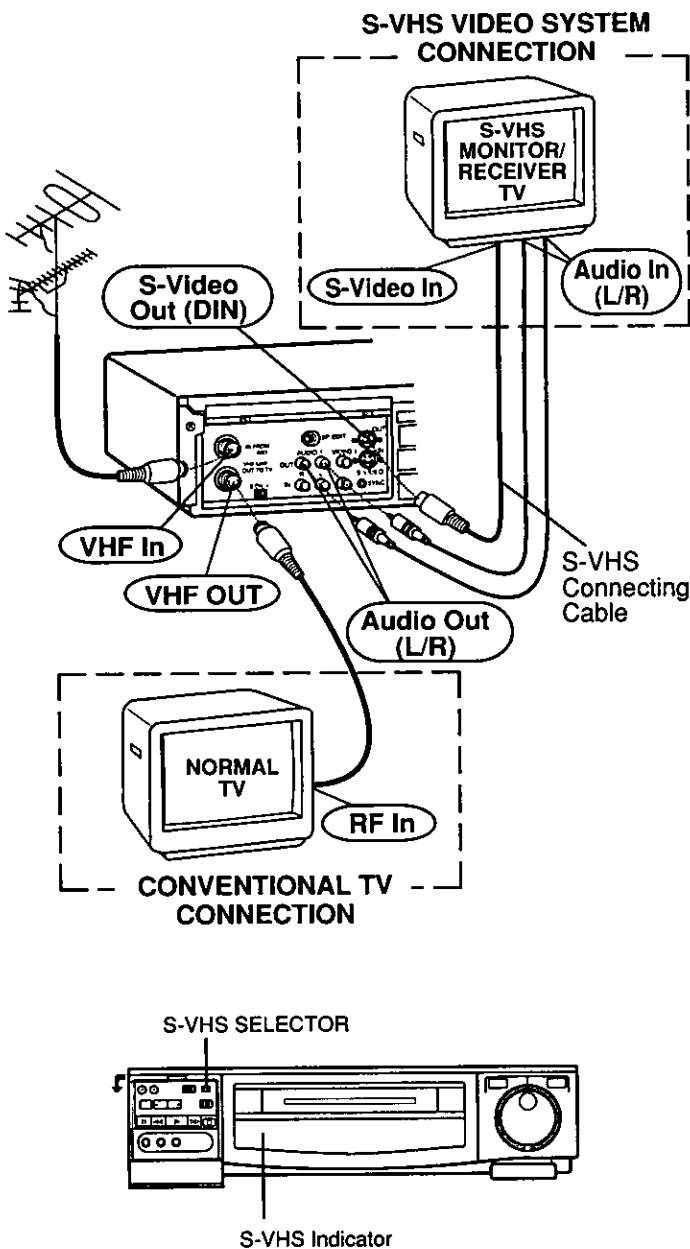


S-VHS and VHS Tapes

Both Super-VHS and VHS recordings can be made on an S-VHS tape. Tapes recorded in VHS may be played back on either an S-VHS or VHS type VCR. Tapes recorded in S-VHS cannot be played back on a conventional VHS VCR.

- When a VHS recorded tape is played back on your S-VHS VCR, the VHS mode is automatically selected. Playback and Recording operations are described on pages 17, 18 and 19.

Compatibility

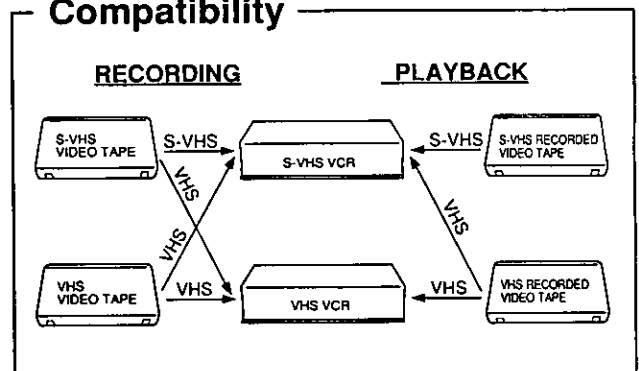

When the S-VHS Selector switch is set to on, the recording mode is automatically set according to the type of cassette tape used, S-VHS or VHS. When the S-VHS Selector switch is set to off, recording is done in the normal VHS mode, regardless of the type of cassette tape inserted. Use the off position when recording on an S-VHS tape in VHS mode to be played back on a VHS VCR.

S-VHS SELECTOR S-VHS AUTO OFF <input type="checkbox"/> ON <input type="checkbox"/>	Cassette Tape	
	SUPER VHS	VHS
ON	S-VHS RECORDING	VHS RECORDING
OFF	VHS RECORDING	VHS RECORDING



- A conventional VCR will not be able to play back your S-VHS recordings. To make recordings that are compatible with conventional VHS VCR's, use your S-VHS VCR with the S-VHS Selector switch set to "OFF".
- The "S-VHS" Indicator lights up when the power comes on, when using an S-VHS tape to make an S-VHS recording and during S-VHS tape playback.



Copying Your Tapes (Dubbing)


Connections you'll need to make.

• on the editing S-VHS VCR, set the S-VHS selector to on. (Choose front or rear connection.)


TV for Monitoring

Recording (Editing) VCR


Playing (Source) VCR

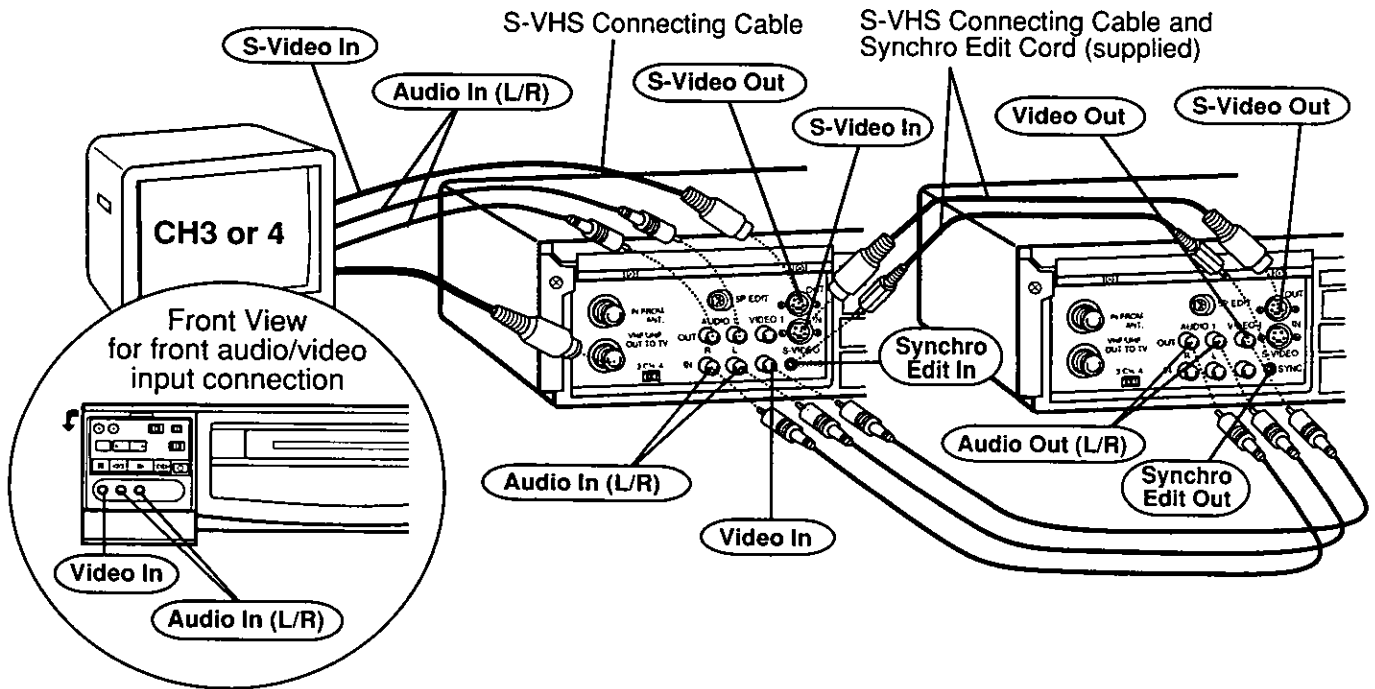

- 1 Insert a pre-recorded tape into the Playing (Source) VCR.

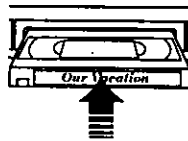

- 2 Insert a blank tape with record tab into the Recording (Editing) VCR.

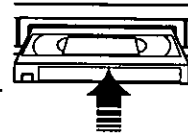

- 3 Select Input "LINE" on the Recording (Editing) VCR. (See "Selecting the Input Mode" on page 19.)

- 4 Push PLAY on Playing VCR. Push PAUSE at the point you want to start copying.

- 5 Push REC and PLAY at the same time on Recording VCR. Push PAUSE immediately.

- 6 Push PAUSE on both VCRs (at the same time), to begin copying.

Edit Out Unwanted Parts
of the original recording by using the PAUSE button (on the Recording unit) while copying is in progress.

- 7 Push STOP on both VCRs to stop copying.

To Monitor the Re-Recording

- 1 Turn the TV on and select its VCR channel (CH3 or CH4) on the Recording VCR.
- 2 Set the VCR/TV selector on the Recording VCR to the "VCR" position.


Caution:

Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.



Using the 5 Pin Editing Controller

For greater flexibility and control over the editing process, this VCR is equipped with a 5 pin editing terminal for connection to an Editing Controller, or to a Personal Computer via a Computer Interface. The simplified diagrams below give you an idea of how your VCRs can be hooked up to meet your editing needs. Detailed instructions on connection and operation can be found in your Editing Controller or PC Interface Product.

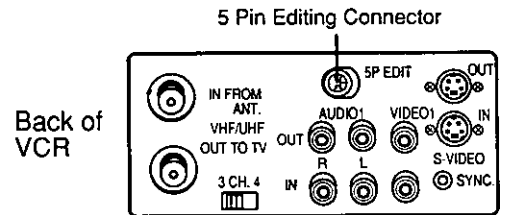


Product Information

COMPANY	MODEL	CONSUMER INFORMATION
Panasonic PBTS Edit Controller	AG-A96* only!	800-524-1448 Product Information
MCEC 5-Pin VCRs and Camcorders	PV-S4680 PV-S4690 PV-DV1000 PV-D776	201-348-9090 Product Information
Future Video Co. Computer Editing Program	V-Stations only!	714-770-4416 Product information/purchase (Available June 96)

* All control Functions of AG-A96 are not available for all consumer models.


Editing Controller Hook-up

(Both VCRs must have a 5 pin editing terminal.)

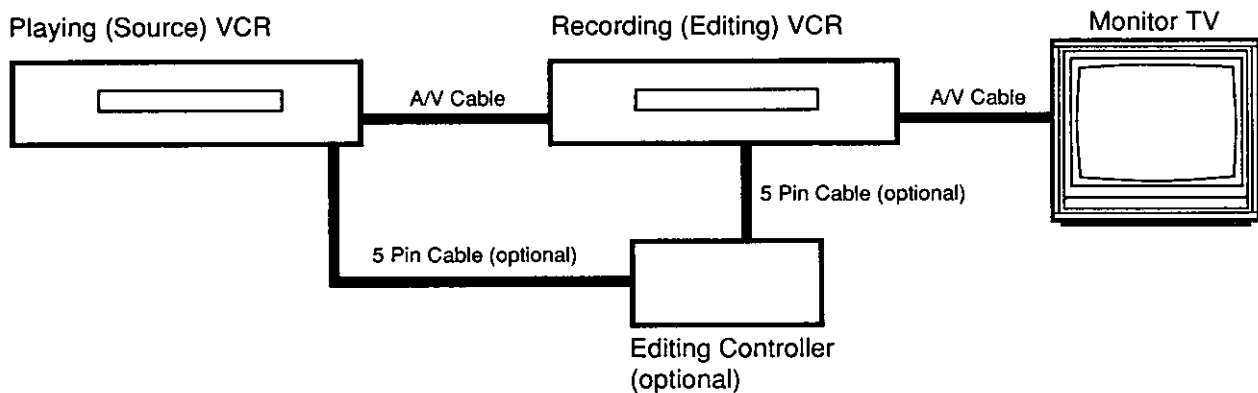

Personal Computer Hook-up

(A V-STATION must be used.)

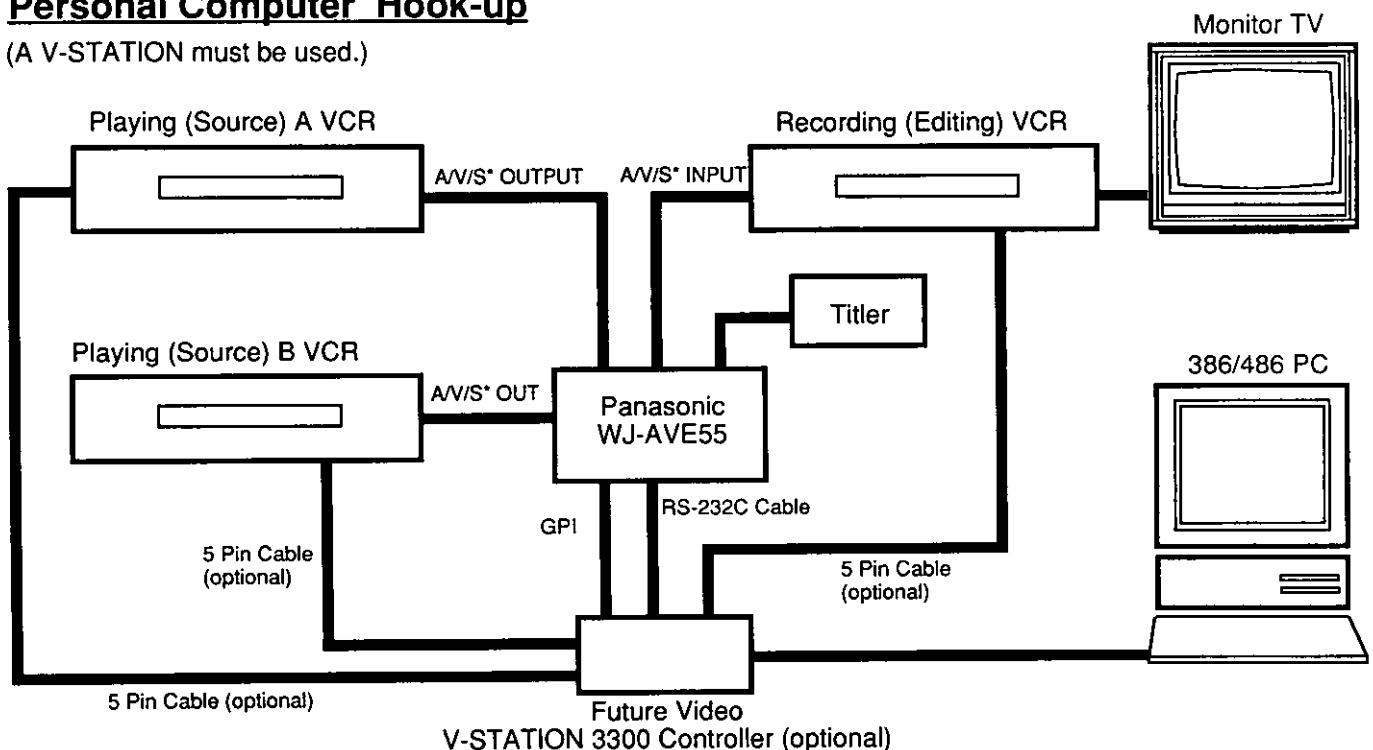

* A/V/S=Audio/Video/S-Video

Product Information for Edit Controllers and 5-Pin VCRs/Camcorders.


The following chart lists commands available with the Panasonic PBTS Edit Controller (AG-A96) when connected with one of the 4 product models shown.

* All control Functions of AG-A96 are not available for all consumer models.

COMMAND	PV-S4680	PV-S4690	PV-DV1000	PV-D776
STOP	YES	YES	YES	YES
EJECT	YES	YES	YES	-----
REWIND/LOCKING REVIEW	YES	YES	YES	YES
FF/LOCKING CUE	YES	YES	YES	YES
REVIEW	YES	YES	YES	YES-in Play mode
CUE	YES	YES	YES	YES-in Play mode
STILL/PAUSE	YES	YES	YES	YES
RECORD	YES	YES	YES	YES
SLOW SPEED UP	YES	YES	-----	-----
SLOW SPEED DOWN	YES	YES	-----	-----
ASSEMBLE INSERT	YES	YES	YES-Camera mode only	-----
ASSEMBLE RECORD	YES	YES	YES-Camera mode only	-----
ASSEMBLE PLAY	YES	YES	YES	YES
POWER ON/OFF	YES	YES	-----	-----
COUNTER RESET	YES	YES	YES	YES
ASSEMBLE A-DUB	YES	YES	YES-Camera mode only	-----
ASSEMBLE A/V INSERT	YES	YES	YES-Camera mode only	-----
REHEARSAL A-DUB	YES	YES	YES-Camera mode only	-----
REHEARSAL A/V INSERT	YES	YES	YES-Camera mode only	-----
REHEARSAL INSERT	YES	YES	YES-Camera mode only	-----
REHEARSAL RECORD	YES	YES	YES-Camera mode only	-----
FRAME REQUEST	YES	YES	YES	YES
NOP (CONNECT)	YES	YES	YES	-----
NOP (CONNECT)	YES	YES	YES	YES
PLAY	YES	YES	YES	YES
REVERSE PLAY	YES	YES	YES	-----
FRAME ADVANCE	YES	YES	YES	one frame every 20
FRAME REVERSE 1/60	YES	YES	YES	-----
FORWARD SLOW 1/9	YES	YES	-----	-----
JOG SHUTTLE CONTROL				
SHUTTLE ON STILL	YES	YES	-----	-----
REVERSE SLOW 1/5	YES	YES	-----	-----
FORWARD SLOW 1/5	YES	YES	-----	-----
REVERSE PLAY	YES	YES	-----	-----
FORWARD PLAY	YES	YES	-----	-----
REVERSE SLOW SPEED 5X	YES	YES	-----	-----
CUE 5X	YES	YES	-----	-----
REVERSE HIGH SPEED 9X	YES	YES	-----	-----
CUE 9X	YES	YES	-----	-----
REVERSE SLOW 1/59	YES	YES	-----	-----
FORWARD SLOW 1/59	YES	YES	-----	-----
REVERSE SLOW 1/9	YES	YES	-----	-----
FORWARD SLOW 1/9	YES	YES	-----	-----
JOG ON/OFF	YES	YES	-----	-----



- Editing may not be performed correctly if more than 10 hours have lapsed on the Time Counter. If necessary reset the Time Counter to 0:00:00 (see page 20) before starting the edit.
- When the VCR is connected to an edit controller, buttons on the VCR unit and on the remote control may not function properly during the dubbing.

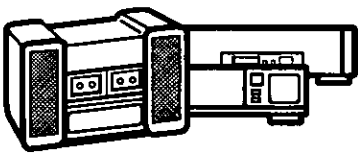

Dubbing Over Your Recording

Because your VCR uses Flying Erase Head technology, you can dub over the original video, audio or both video and audio portion of your recording with exceptional quality.




Check list before you begin

- Connections below are complete.
- The master tape is inserted into the playing VCR or camcorder and the tape (with record tab) to be dubbed over is inserted into the recording VCR.


Connections

TV for Monitoring

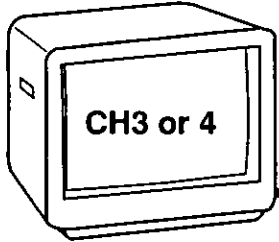


Recording (Editing) VCR


Playing (Source) VCR

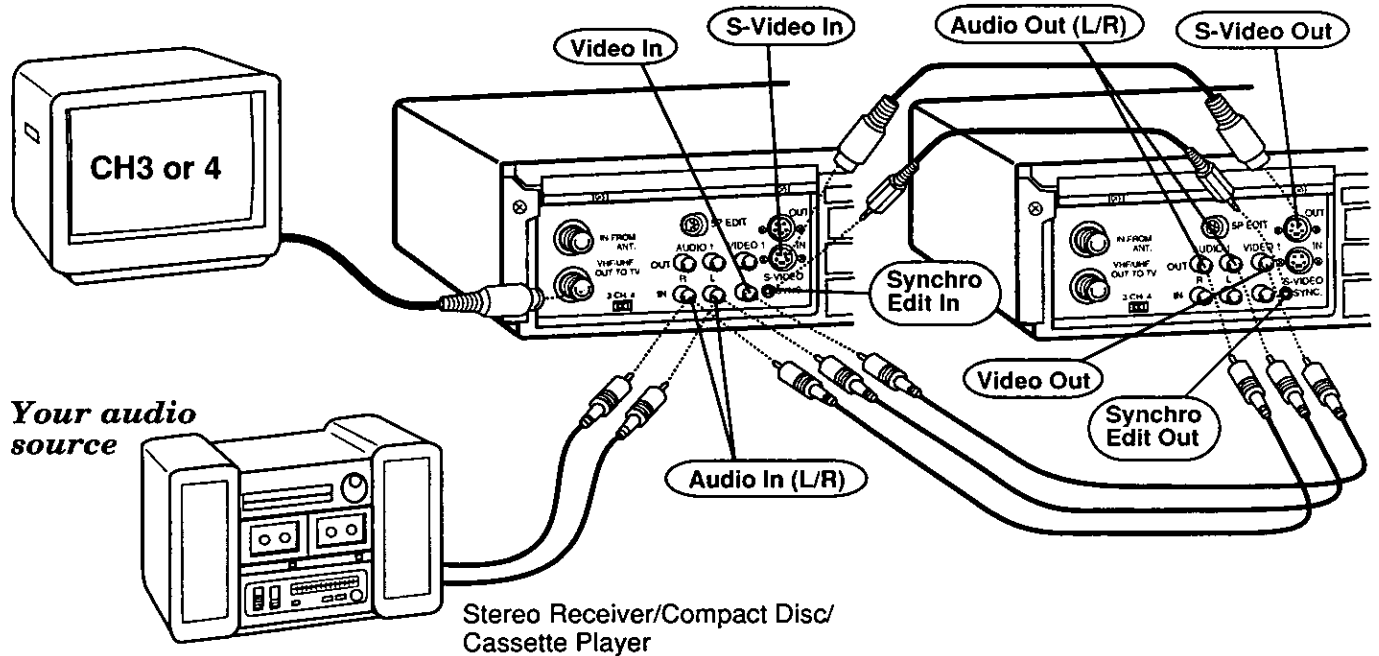

Your audio source

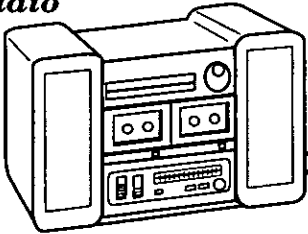


Stereo Receiver/Compact Disc/
Cassette Player

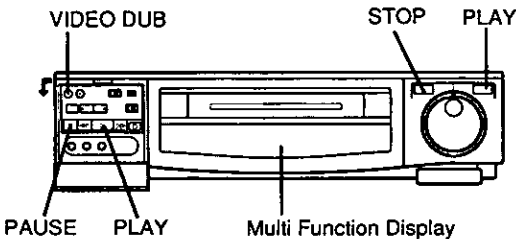

Dubbing over the Video

If both units are equipped with a synchro edit jack (see connection illustration) be sure to hook-up the supplied synchro edit cord. This will allow you to control both units with the push of one button.

- 1** Push **INPUT** on the Remote Control until **LINE1** (for rear panel connection) or **LINE2** (for front panel connection) appears on screen.
- 2** Push **PLAY**, and then push **PAUSE** where you want the dubbing to begin. Do this first on the playing and then the recording VCR.
 - Both VCRs should now be in Still mode.
- 3** Push **V. DUB** on the recording VCR.
 - The "V.DUB" indicator appears in the Multi Function Display.
- 4** If Synchro Edit connection is used, push **PAUSE** on the recording VCR. If Synchro Edit connection is not used, push **PAUSE** on both VCRs simultaneously.
- 5** Push **STOP** on both VCRs to stop the dubbing.
 - Hi-Fi sound will be erased while the normal (mono) sound remains unchanged.

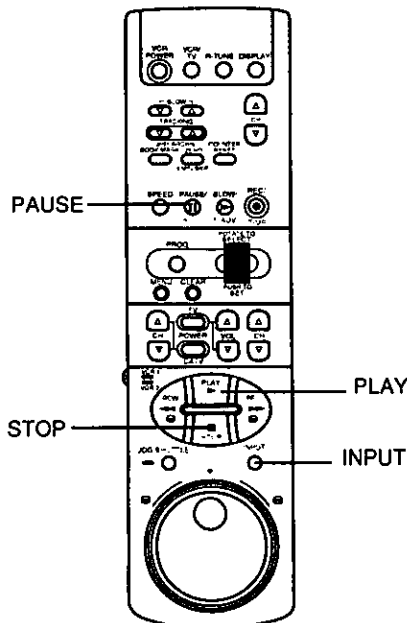

Dubbing from Your Audio

Make sure audio connections are complete.

- 1 Push **INPUT** on the Remote Control until **LINE1** (for rear panel connection) or **LINE2** (for front panel connection) appears on screen.

- 2 Push **PLAY**, and then push **PAUSE** where you want the dubbing to begin.
 - The VCR and your audio source should now be in Still mode.

- 3 Push **A. DUB**.
 - The "A.DUB" indicator appears in the Multi Function Display.

- 4 Push **PAUSE** on the VCR and at the same time, start the audio source playback.

- 5 Push **STOP** on the VCR and your audio source to stop the audio dubbing.

- An audio dub will only be performed on the normal (mono) track. Hi-Fi audio sound will not be affected.

Dubbing Over Audio and Video

Make sure both Audio and Video connections are made.

- 1 Push **INPUT** on the Remote Control until **LINE1** (for rear panel connection) or **LINE2** (for front panel connection) appears on screen.



- 2 Push **PLAY**, and then push **PAUSE** where you want the dubbing to begin.
 - Both VCRs and your audio source should now be in Still mode.

- 3 Push **A. DUB** and **V. DUB** together on the recording VCR.
 - The "A.DUB" and "V.DUB" indicators appear in the Multi Function Display.

- 4 Push **PAUSE** on both VCRs and at the same time, start the audio source playback.

- 5 Push **STOP** on both VCRs and your audio source to stop the Audio/Video dubbing.

- Both Hi-Fi and normal (mono) audio sound will be replaced by the new recording.

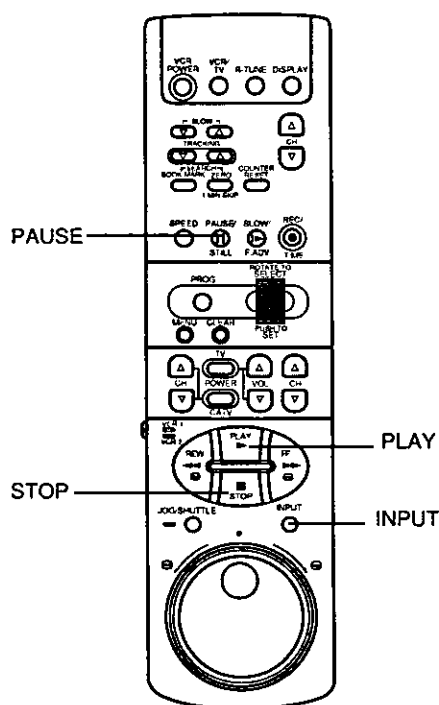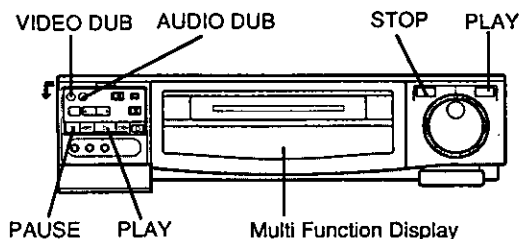

• Do not use the VCR Plus+ feature during Audio, Video, or Audio/Video dubbing.

- If both units are not S-VHS, connect the VIDEO OUT of the playing VCR to the VIDEO IN of the recording VCR.



Assemble Edit Copying

Using only standard tape dubbing connections, this feature allows you to setup the VCR to copy your recordings onto another tape and at the same time, rearrange the order of up to 8 recorded segments into the desired sequence. This feature works with Panasonic brand VCRs as well as some other VCR brands. Some setup is required.

How does assemble edit work?

The source VCR sends out an infrared command signal which is picked up by the target (or editing) VCR. (See diagram A.) This signal tells the target VCR when to record and when to pause. At the same time, the source VCR automatically goes into Play, Fast Forward search, or Rewind search mode according to your specifications. You may decide to edit out some unwanted segments, or even enter a favorite segment twice for repeat playback. (See diagram B.)

Diagram (A)

Place the VCRs near each other, such as in one of the positions shown below. If you stack them, do not to cover the transmitter window on the top of the source VCR (this VCR).

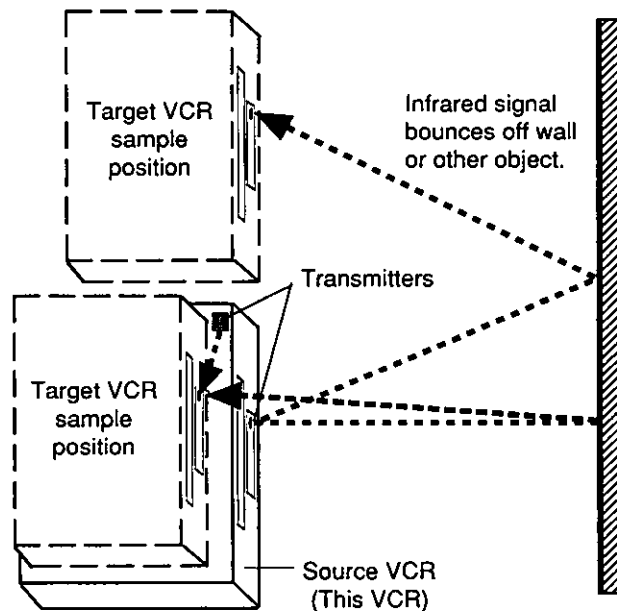


Diagram (B)

Each of the patterns below represents a different part of your recording. Please note that in the example above, segments 4 and 5 have been edited out while segment 1 was entered twice for repeat play enjoyment.

Example of Source (master) tape recording sequence



Master tape total recording time: 2 hours 20 minutes

Example of Target tape recording sequence using the Assemble Edit feature




Target tape total recording time: 1 hour 40 minutes


Assemble Edit Set Up

These steps are to make sure the target VCR brand can indeed be controlled with this VCR.


Place the VCRs as shown in diagram (A) at left.

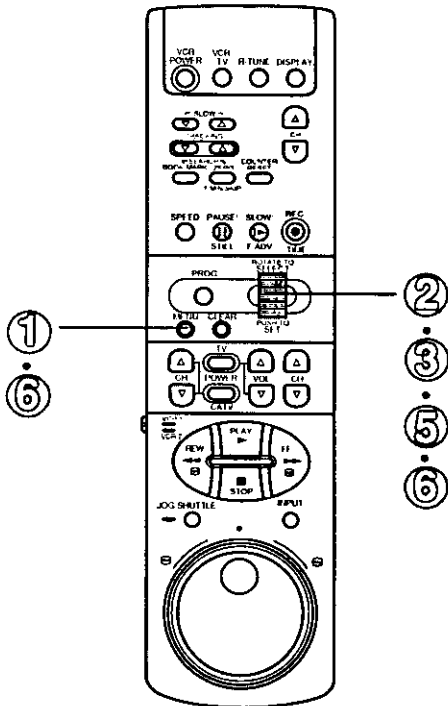

Push MENU to display the menu.

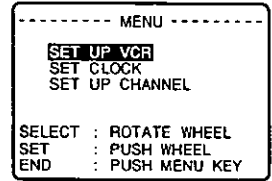

Rotate and push the WHEEL to select SET UP VCR.

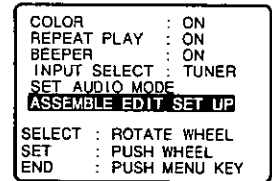


Rotate and push the WHEEL to select ASSEMBLE EDIT SET UP.




Turn the "Target" VCR off.



Push the WHEEL. The source VCR sends a "Power On" command using NO.1 of 4 different signal possibilities to the target VCR.

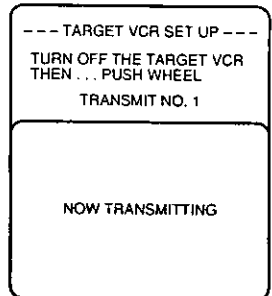



Rotate and push the WHEEL to select "YES" or "NO".

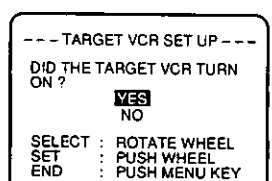

Select YES if the target VCR power came on. This screen appears for a few seconds. Push MENU twice to exit.

Select NO if nothing happened. The screen in step 4 will reappear with "TRANSMIT NO. 2". Then, repeat steps 5 and 6 until the answer is yes, or all 4 signal possibilities have been tried.

This screen appears after all 4 signals have been tried with no result. Push MENU three times to exit.

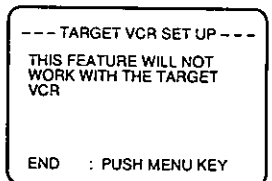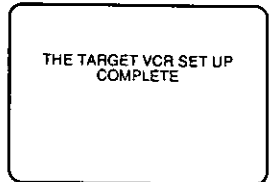

- If the target VCR cannot be controlled by this VCR, you may skip pages 34 and 35 of the operating instructions.
- If during setup, you exit the setup mode, "THE TARGET VCR SET UP INCOMPLETE" appears for a few seconds. Push MENU to exit.

More You Can Do



Assemble Edit Copying (continued)



Check list before you begin.

- Assemble edit setup on page 33 is complete.
- Connections on page 27 are complete using this VCR as the source VCR and your other VCR as the target (or editing) VCR.

NOTE: Ejecting the tape clears all start and stop points from memory. Do not eject the tape until after assemble editing is complete.

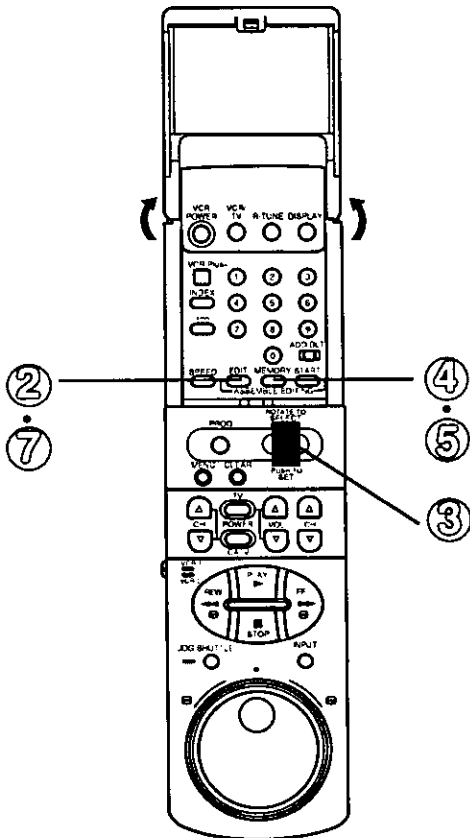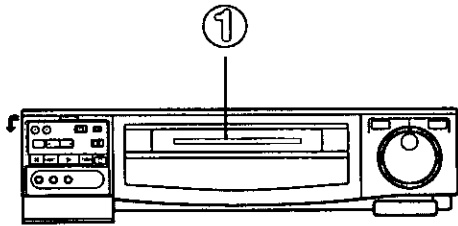


Video Segment Sequence Set Up

Please turn the target VCR off or set the source VCR and remote control to VCR2 (refer to page 23) to complete these steps.

①

Insert the master tape into the source VCR.

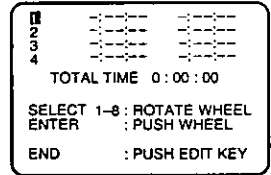

②




Push EDIT to display this screen.

③



Rotate and push the WHEEL to select and push to enter programs 1-8.

• This overlay appears if program 1 is selected.

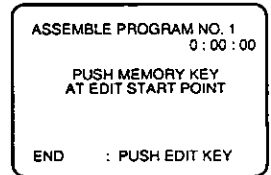

④

Locate the start point of the segment of tape you want to be next.


Any function button may be used, however FF search, REW search, and SLOW during playback are recommended for accuracy.

MEMORY



Push MEMORY to memorize the start point.

• This screen appears and the tape continues in the mode currently selected.

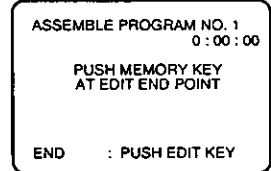

⑤

Locate the end point. The same as you did in step 4.

MEMORY



Push MEMORY to memorize the end point.

- The screen in step 2 appears and the tape continues in the mode currently selected. Pause the tape if desired.
- If the EDIT button is pushed during programming, or if an error detected, "ASSEMBLE PROGRAM NO. 1 IS NOT REGISTERED" will appear on-screen.

⑥

Repeat step 2-5 to set the start and end points of the remaining recorded segments (up to 8 total) in the order you want them.

- You may edit out unwanted segments, or enter the same segment twice. (See diagram (B) on page 32.)

⑦




Push EDIT to return to the normal screen.


-DO NOT EJECT THE TAPE-
All video segments will be cleared if tape is ejected.

Begin Assemble Editing

The source (this VCR) and target VCR are connected as shown on page 27, and positioned as shown on page 32. Please set the source VCR and remote control to VCR2 (refer to page 23). If the target VCR also has a VCR1/VCR2 feature, set it to VCR1.

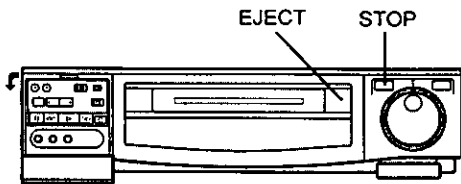


① Insert a tape with record tab into the target VCR.


②  Push START on the source VCR remote.

1	FROM	0:10:00	TO	0:20:00	
2	FROM	0:30:30	TO	0:35:30	
3	FROM	0:40:00	TO	0:45:00	
4	FROM	1:30:00	TO	1:33:00	
5	FROM	1:00:00	TO	1:30:00	
6	FROM	0:39:00	TO	0:42:30	
7	FROM	0:01:00	TO	0:03:00	
8	FROM	0:05:00	TO	0:08:00	
				TOTAL TIME	0:33:30
				PROCEED	: PUSH START KEY

All programs are displayed along with total (real) time for confirmation.

- If the target VCR has not been set up, "PLEASE SET TARGET VCR BEFORE ASSEMBLE PROGRAM" appears followed by the target VCR setup screen.
- If the edit start and end points have not been set, "PLEASE SET EDIT POINT BEFORE ASSEMBLE PROGRAM" appears followed by the normal screen.
- To exit to the normal screen at this time, push the CLEAR button. Memory is not erased.

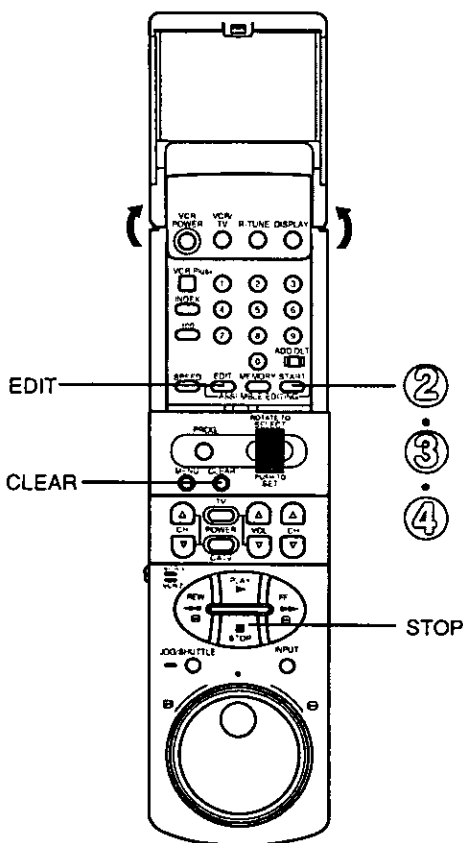

③  Push START. Then, place the target VCR into Rec/Pause mode.

PLACE THE TARGET VCR
IN REC-PAUSE MODE

START : PUSH START KEY
END : PUSH CLEAR KEY

- If step 4 is not completed within 2 to 3 minutes, the target VCR may go into Stop mode. In this case, place the target VCR in Rec/Pause mode again.

④  Push START to begin Assemble Editing.

- When editing is complete, the source VCR goes into Stop mode and the target VCR goes into Rec/Pause mode. Push STOP on the target VCR.
- If you want to watch TV during the editing process, set the TV/VCR selector to TV.



• During assemble editing, playback begins a few seconds prior to the start point you selected. Recording then begins at the actual start point.

- If segments are widely separated, there may be a slight margin of error in the final edits.
- Index search, and zero search will not function while the assemble edit feature is being used.
- Do not connect the synchro edit cord for this feature.

Cancel Editing In Progress


Push the STOP button. Start and stop times will remain in memory until the cassette is ejected or entries are cleared.

Clear Specific Video Segments

Push EDIT to display start and stop times. Then, rotate the Wheel to select the desired video segment. Next, push CLEAR to clear that line. Now, push EDIT to return to the normal screen.

Clear All Video Segments

Push EJECT at the source VCR to eject the tape and erase all start and stop times from memory.

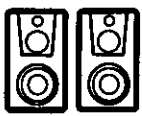


MTS Broadcast/ VHS Hi-Fi Stereo System



Check list before you begin

- The VCR is connected to a stereo TV, or a mono TV and stereo amp or receiver with speakers.
- The VCR and other components are plugged in and turned on.

Connections to Make

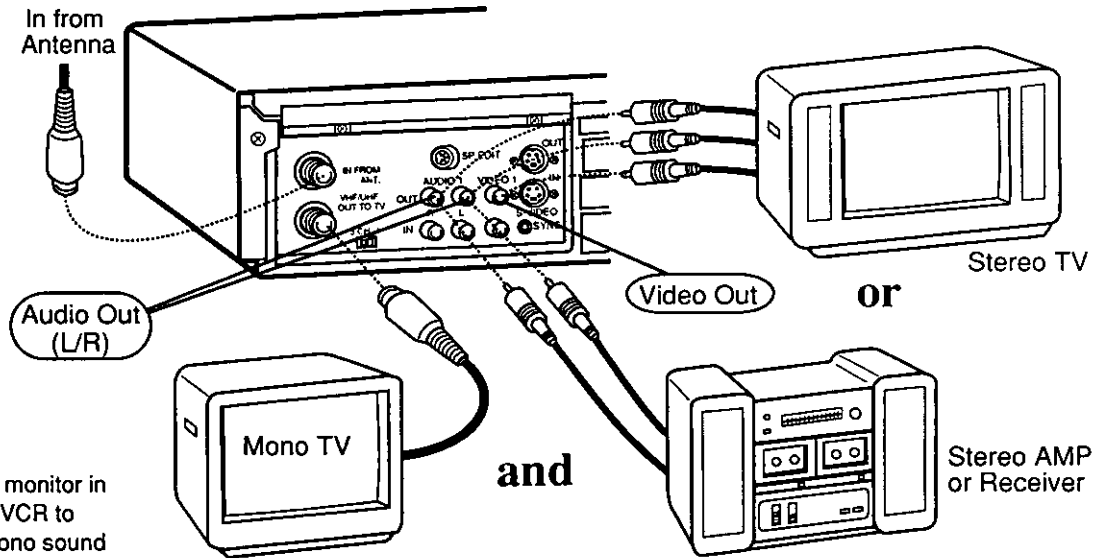

When recording, you may monitor in stereo, by connecting the VCR to either a stereo TV, or a mono sound TV with stereo amp and speakers.




Multi Function Display

Receivable Broadcast Types


The following are possible broadcast types with their accompanying on-screen displays. The signal(s) not being received is enclosed in parenthesis. The currently selected audio mode is indicated with an arrow. To change the audio mode for listening to, or recording these broadcasts, follow the steps on page 37.

Push DISPLAY to display the broadcast signal currently being received on-screen.

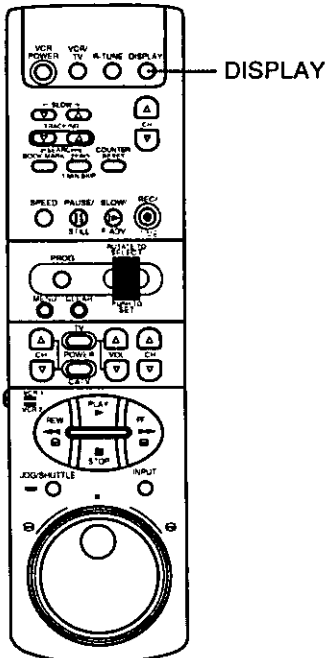


MTS Stereo and SAP broadcast

Multi-channel Television Sound Stereo (main language) and Second Audio Program (second language) broadcasts are being received simultaneously. The "STEREO" and "SAP" indicators light in the Multi Function Display. Select the STEREO or SAP audio mode as desired.

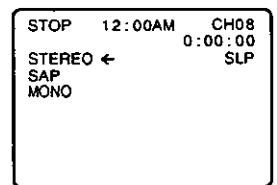


MTS Stereo broadcast

Multi-channel Television Sound Stereo broadcast is being received. The "STEREO" indicator lights in the Multi Function Display.

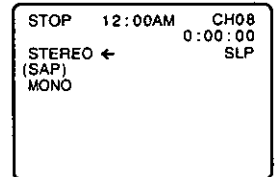

SAP broadcast


Second Audio Program (second language) broadcast is being received. The "SAP" indicator lights in the Multi Function Display. Select SAP audio mode for the second language.

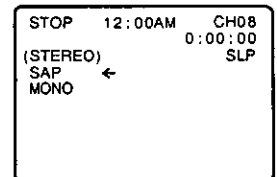

MONO broadcast

Normal monaural sound broadcast is being received.

- If a stereo broadcast is weak and the display flickers, you may want to select the MONO audio mode for better results.


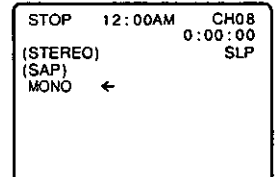


Equipped with **dbx**[®] -TV Noise Reduction for true MTS reproduction. **dbx**[®] -TV Noise Reduction is required for good stereo separation and audio fidelity. **dbx**[®] is a registered trademark, and is licensed by **dbx**[®] Technology Licensing.

- When recording, the currently selected broadcast sound is always recorded on the left and right Hi-Fi tracks as well as the normal monaural track. This means your tapes can be played back on Hi-Fi as well as non-Hi-Fi VCRs.

With the proper audio mode setting, your VCR can:

- 1) record and playback an MTS stereo broadcast (main language) in stereo Hi-Fi.
- 2) record and playback a monaural broadcast (main language) or Second Audio Program (second language) on the Hi-Fi tracks for better quality monaural sound.
- 3) playback non Hi-Fi tapes in monaural.

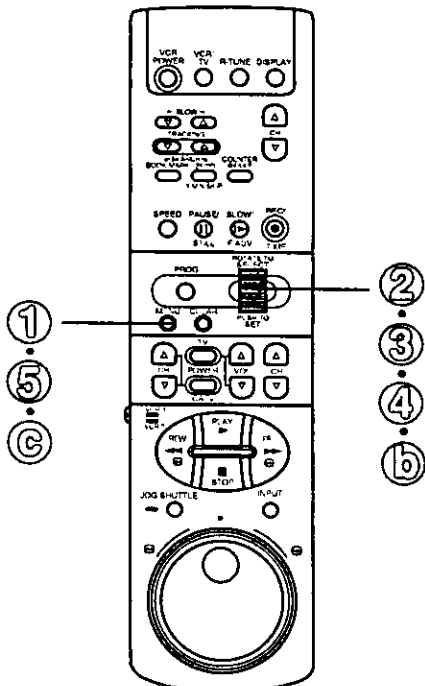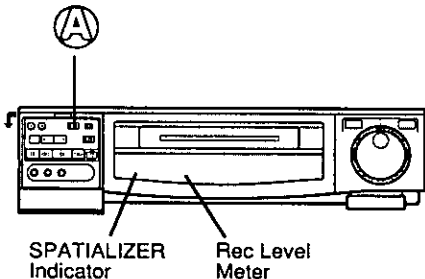

• When purchasing or renting prerecorded tapes, remember that only those recorded in Hi-Fi stereo will play back with true stereo sound. Standard stereo tapes will play back with monaural sound.


- In order to listen to Hi-Fi stereo playback, the VCR AUDIO (L/R) jacks must be connected to a stereo TV or stereo amp and speakers. (See previous page.)
- When adjusting the tracking during playback, the Hi-Fi audio sound may revert to normal audio sound. This is normal.
- There may be a difference in audio level between Hi-Fi and normal audio playback.
- If you select "HIFI", the Hi-Fi indicator lights in the Multi Function Display.
- Rec Level Meter will show the audio level during recording or playback.

Selecting the Audio Mode for Recording



Select the type of broadcast and sound track you wish to record.




Push MENU to display the menu.

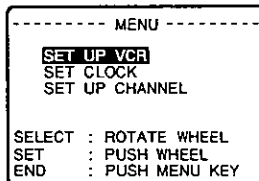


Rotate and push the WHEEL to select SET UP VCR.

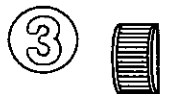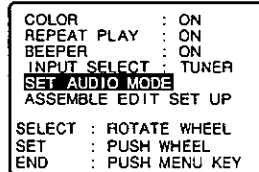

Rotate and push the WHEEL to select SET AUDIO MODE.

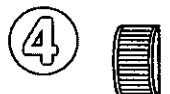

Rotate the WHEEL to select AUDIO MODE, and then push to select the desired audio mode (STEREO/SAP/MONO).

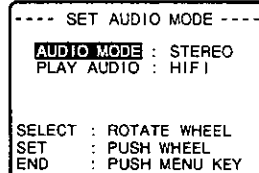

• Please refer to "Receivable Broadcast Types" section on previous page.



Push MENU three times to exit this mode.




Do a recording. See the "Record On a Tape" section on page 18.

Selecting the Audio Mode for Playback

Select the type of sound track you desire for playback.



Do steps 1, 2, and 3 above.

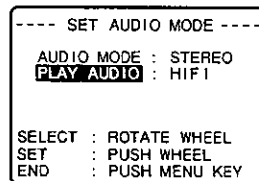

Rotate the WHEEL to select PLAY AUDIO, and then push to select the desired audio mode (HIFI/NORMAL).

• Please select HIFI to listen to your stereo recordings with stereo sound or MONO for monaural sound.




Push MENU three times to exit this mode.



Playback the tape. See the "Playback a Tape" section on page 17.

Spatializer Feature

This feature allows you to enhance the stereo sound so that it seems to completely surround you. Spatializer indicator lights when set to "LOW" or "HIGH". Your VCR needs to be hooked up to a stereo TV or stereo amp/receiver with speakers (see page 36). For playback, tapes must be recorded in Hi-Fi stereo. For TV viewing, programs must be broadcast in stereo.

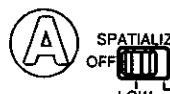

Slide SPATIALIZER Switch to choose the desired setting.

Portions of this product manufactured under a licence from Desper Products, Inc. SPATIALIZER, and the circle-in-square device are trademarks owned by Desper Products, Inc.


More You Can Do



VCR Plus+ Set Up


This setup is for VCR Plus+ and timer programming only.

VCR Plus+ programming allows you to set most items of a timer recording by simply entering a special code found in *TV GUIDE* magazine as well as the TV listings in selected newspapers. In order for the VCR to read this special code, some set up is required. A Guide (VCR Plus+) channel number is assigned to each local broadcast and cable station. Because this number sometimes differs from the channel your TV receives the station on, it is necessary to program the VCR with local channel information.

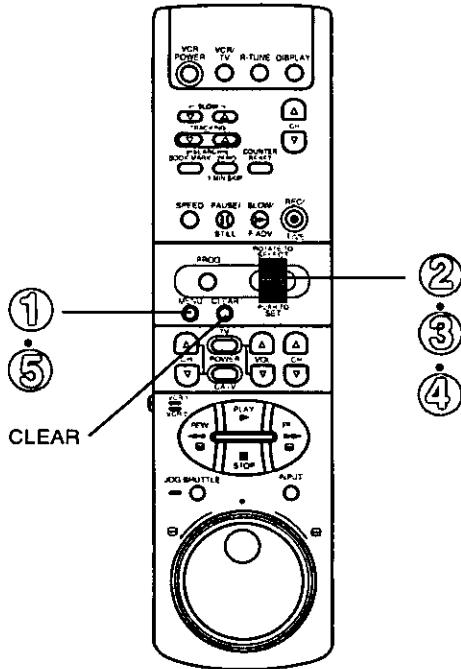


VCR Plus+ Channel Set Up (Connection Method 2 on page 10)

1 MENU Push MENU to display the menu.

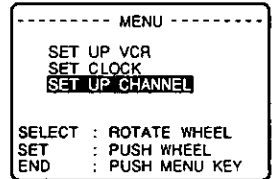

2 Rotate and push the WHEEL to select SET UP CHANNEL.


3 Rotate and push the WHEEL to select VCR Plus+ CH SET UP.

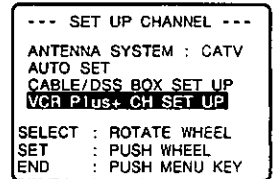

IMPORTANT NOTE:

For this step, use the list you prepared. You may leave lines blank if, you don't receive that station, or the GUIDE CH number and the CATV (or TV) CH numbers are the same.

4 Push the WHEEL to move the shaded area on the right side.

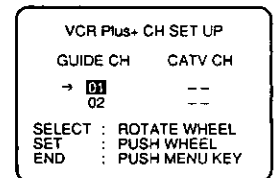

Then, rotate the Wheel to change CATV or TV CH number.

Next, push the Wheel to enter CATV or TV CH number.

Now, rotate the Wheel to continue. Repeat this operation until the list is complete.

To Make Corrections

Rotate and push the Wheel to select the incorrect CATV or TV CH number. Then, push CLEAR to delete the numbers. Now, use the Wheel to re-enter the channel.

5 MENU Push MENU twice to exit the VCR Plus+ CH SET UP mode.

Channel Set Up Preparations

NOTE: Complete the steps on this page if you are using Connection Method 2 on page 10 for VCR hookup.

Prepare a list like the example below. This list will help you smoothly enter the information needed in step 4 at right.

You will need the following to complete the list:

- A line up of normal and/or cable stations you receive along with the channel numbers your TV receives them on. A cable channel line-up chart is supplied by your cable company.
- A list of Guide (VCR Plus+) channel numbers assigned to the stations you receive. This list is available in *TV Guide* and the TV listings found in selected newspapers.

- 1 Make a chart with 3 columns like the example below. In the left column, fill in the name or call letters of the stations you receive.
- 2 In the middle column, fill in each station's assigned Guide (VCR Plus+) number found in *TV Guide*, newspapers, etc.
- 3 In the right column, fill in the channel number that your TV receives the station on from your channel line-up.

EXAMPLE ONLY

Broadcast or Cable Station Name	Assigned Guide (VCR Plus+) channel no.	Channel no. your TV receives the station on
HBO	33	15
Nickelodeon	38	20
CBS	04	04
FOX	11	

NOTES

- Make your entries within 60 seconds or the VCR will leave this mode.
- Once local channels have been programmed, they will stay in memory, even in the case of a power failure.


VCR Plus+³ and PlusCode are trademarks of Gemstar Development Corporation. The VCR Plus+ system is manufactured under license from Gemstar Development Corporation.




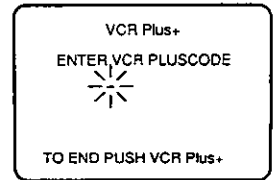
VCR Plus+ Programming

✓ Check list before you begin.

- The clock is set.
- One Time VCR Setup is complete. (See pages 10~14.)
- VCR Plus+ Set Up is complete. (See page 38.)

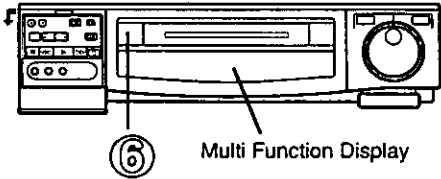


①  Push VCR Plus+ to display the VCR Plus+ screen.




② Push the Numbered Keys to enter the PlusCode number.

- Refer to your local TV listings.

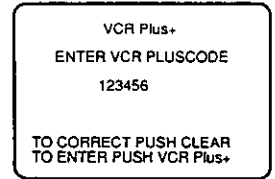


To make corrections

Push the CLEAR button repeatedly to delete the PlusCode number. Then, enter the correct number.

③  Push VCR Plus+ to lock in your program.


④ Push 1, 2 or 3 Key to select the program type.

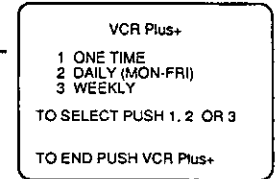


To change the recording speed:
Push the SPEED button for SP, LP or SLP.


To cancel program contents:
Push the CLEAR button.

- If you use Connection Method 1 on page 10, the channel shown in the on-screen display in this step will always be the cable box output channel number.

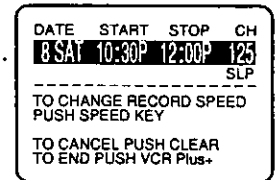


⑤  Push VCR Plus+ to complete the program.

- When recording programs via a cable box, make sure the cable box is left on. If the cable box can not be controlled with the VCR, you must manually select the desired channel.

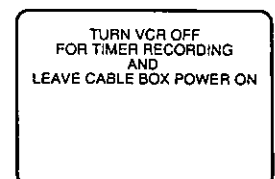

- This display may differ depending on your cable box hook-up.

⑥  Push VCR POWER off to set the timer.

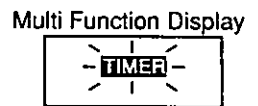

Use normal Timer Recording steps if:

- the PlusCode for a program is not listed.
- you anticipate the program, such as a sporting event, to run over the scheduled stop time.

See page 25 to:

- Cancel a timer recording in progress
- Replace program contents
- Review or Clear program contents once set


Important notes when using a DSS receiver.

- When recording programs via a DSS receiver the DSS receiver must be left on.
- When recording programs via an antenna or cable, the DSS receiver must be turned off.



- For a list of publications that carry the PlusCode numbers in your area, call 1 - 800 - 258 - 4827.
- You can obtain unlisted PlusCode numbers by calling 1 - 900 - 454 - 7587. Call costs approximately \$.95 per minute.
- VCR PlusCodes can not be used to program the VCR to record DSS channels.
- Avoid overlapping program times.
- An on-screen display will indicate if an invalid PlusCode number has been entered.
- An on-screen display will indicate when all timer programs are full.

More You Can Do

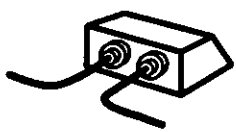


Multi-Brand Control Feature



The Remote Control may be set up to control some of the functions on your TV or Cable Box.

TV Brand Code Numbers	
Panasonic	01, 02
Quasar	01, 02
RCA	03
GE	03
Zenith	04
Magnavox	05
Sylvania	05
Sharp	06, 07
Sony	08
Toshiba	09
Sanyo	10
Fisher	10
JVC	11
Hitachi	12
Mitsubishi	13
Samsung	14
Gold Star	15, 16, 17

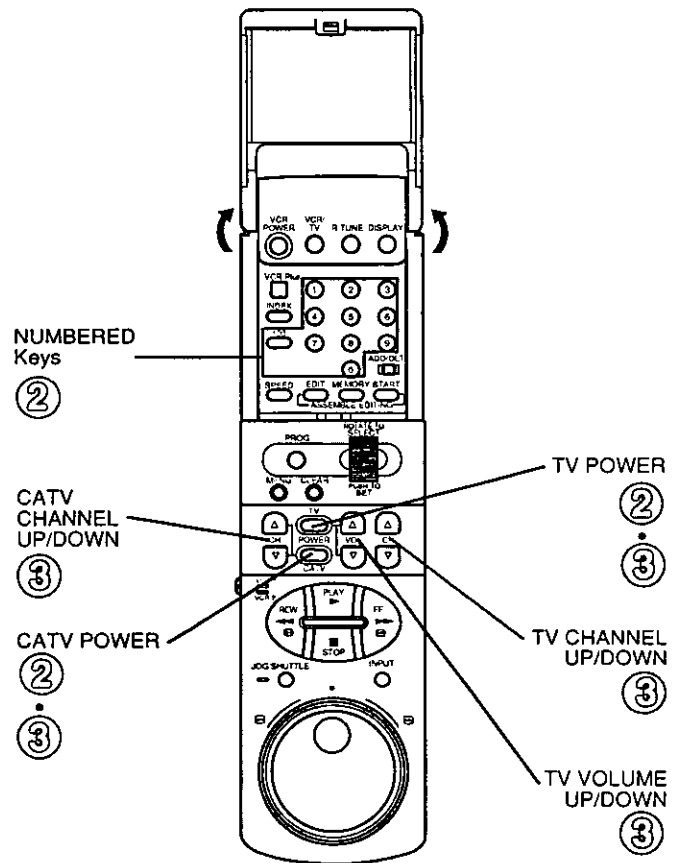Cable Box Brand Code Numbers	
Archer	01, 29, 44, 88, 91
Cableview	4, 30, 42, 44, 52, 63, 85, 88
Citizen	4, 30, 42, 44, 52, 63, 85, 88
Curtis	08, 09, 56, 61, 87, 90
Diamond	01, 29, 44, 88, 91
Drake	37
Eagle	13, 20, 22, 26, 40, 58, 62, 98
Eastern	28
GC Brand	4, 30, 42, 44, 52, 63, 85, 88
Gemini	04, 85
General Electric	57
General Instruments	
.....	01, 02, 03, 04, 34, 55, 83, 85, 91, 93, 95
Hamlin	14, 15, 28, 41, 97
Hitachi	31, 79
Jerrold	01, 02, 03, 04, 34, 55, 83, 85, 91, 93, 95
Macom	31, 79
Magnavox	25, 26
Matsushita	16, 17
Movietime	32, 38, 40
Movietime	29, 32, 39, 42, 44, 88
NSC	32, 38, 40
Oak	46
Panasonic	16, 17
Philips	13, 20, 23, 24, 96
Pioneer	05, 06, 78
Pulser	4, 30, 42, 44, 52, 63, 85, 88
RCA	16, 17
Realistic	44, 88
Regal	14, 41
Regency	28
Rembrandt	29, 32, 39, 42, 44, 88
Samsung	32, 40, 42, 78, 94
Scientific Atlanta	08, 09, 56, 61, 87, 90
Sheritech	27
SL Marx	32, 40, 42, 78, 94
Sprucer	16, 17
Stargate	32, 40, 42, 78, 94
Stargate	4, 30, 42, 44, 52, 63, 85, 88
Sylvania	19
Telecaption	77, 92
Televue	32, 40, 42, 78, 94
Texscan	18, 19
Tocom	01, 33, 34, 42, 48, 49, 91
Toshiba	36
Unika	01, 29, 44, 88, 91
Universal	42, 43, 44, 52, 63, 88
Viewstar	13, 20, 22, 26, 40, 58, 62, 98
Videoway	07, 23, 50
Zenith	07, 23, 50



1 Find your TV or Cable Box Brand Code Numbers.
 • See left chart for TV or Cable Box Brand Code Numbers.

2  or  Hold down TV POWER or CATV POWER. and Use the **NUMBERED** keys to enter code number.
 • Enter your TV or Cable Box brand code number.
 • Due to changes in infra-red commands used by some manufacturers, some TV or Cable Box brands are listed more than once. If your TV or Cable Box does not respond in step 3 with the first code, please try entering the next code.

3 Try each of the following functions.
 • Some TV and Cable Box brands require you to turn on the power manually.

(TV)	(Cable Box)
POWER ON/OFF	POWER ON/OFF
CHANNEL UP/DOWN	CHANNEL UP/DOWN
VOLUME UP/DOWN	

• Depending on your TV or Cable Box model, not all functions listed may be controlled by this remote.

NOTES

- Please repeat the TV/ Cable Box Set Up procedure when you replace the remote's batteries.
- The remote control is designed to control the brands listed. However, it will not operate all TVs or Cable Boxes made by these manufacturers. If you get no results, your particular product brand cannot be controlled by this remote.





Before Requesting Service

Check the following points once again if you are having some trouble with your VCR.

Power	Correction
No power...	<ul style="list-style-type: none"> • Check that the Power Plug is completely inserted to an AC outlet. • Check that the POWER button is set to on.
Recording & Playback	Correction
TV program can't be recorded...	<ul style="list-style-type: none"> • Check the connections between the VCR, the external antenna, and your TV. • Check that the band selected matches your antenna or cable TV system. (P.15) • Make sure that the record tab on the back of the cassette is still intact. (P.5)
Timer recording can't be performed...	<ul style="list-style-type: none"> • Set the recording start/stop times correctly. (P.24) • Make sure that the POWER button is set to off. (P.24) • Timer recording may not be performed or continued if a power interruption of more than 1 minute occurs before, or during, Timer Recording, even if power resumes thereafter.
There is no playback picture, or the playback picture is noisy or contains streaks...	<ul style="list-style-type: none"> • Select the same channel on your TV as that of the Channel 3/4 switch located on the rear panel of the VCR. (P.6) • Set the VCR/TV selector to "VCR". (P.17) • Check that channel 3 or 4 of the TV is properly adjusted. • Adjust the TRACKING control slowly in either direction. (P.17)
During special effects playback, the picture may contain some vertical jitter when using a TV which has an Automatic Vertical Hold Control...	<ul style="list-style-type: none"> • Set the TV's Vertical Hold Control to "MANUAL" and then adjust it.
If the top of your playback picture waves back and forth excessively...	<ul style="list-style-type: none"> • Because the VCR playback signal is not as stable as an off-the-air TV signal, the top of your TV screen may be bent or unstable during playback. To solve this problem, slowly turn the horizontal hold control on your TV to correct the wavy picture. If your TV does not have a horizontal hold control or adjusting the control does not help, please contact your local TV service center.
VCR can't be controlled...	<ul style="list-style-type: none"> • Make sure that VCR LOCK is set to off. (P. 23)
Remote Control	Correction
VCR can't be remote controlled...	<ul style="list-style-type: none"> • Aim the Remote Control directly at the remote sensor on the VCR. (Refer to Back Cover.) • Avoid all obstacles which may interfere with the signal path. • Inspect or replace the batteries (P.4). • Make sure that VCR LOCK is set to off. (P. 23) • Exposing the VCR remote sensor to direct fluorescent or outdoor light may cause signal interference.
Miscellaneous	Correction
You can't view programs normally on TV...	<ul style="list-style-type: none"> • Set the VCR/TV selector to "TV". (P.19)
Video cassette can't be inserted...	<ul style="list-style-type: none"> • Insert the cassette with the window side up and the record tab facing you.
Video cassette can't be removed...	<ul style="list-style-type: none"> • Check that the power plug is completely connected to an AC outlet.
Video cassette ejects when the REC and PLAY buttons are pushed or when the POWER button is pushed off to set the Timer...	<ul style="list-style-type: none"> • Make sure the record tab on the back of the cassette is still intact. (P.5)
In the stop mode, the motor (CYLINDER) continues to rotate...	<ul style="list-style-type: none"> • To enable the quick play mechanism, the cylinder will rotate for about 5 minutes. • The quick play mechanism reduces response time from stop to PLAY mode from PLAY to REWIND search mode.
VCR can't be controlled...	<ul style="list-style-type: none"> • Make sure that VCR LOCK is set to off. (P. 23)


Spanish Quick Use Guide/Guía para rápida consulta

Fijación del Idioma de la pantalla, fijaciones para la conexión con la caja de TV por cable y receptor DSS, memorizar los canales y fijación automática de la hora.

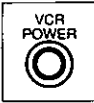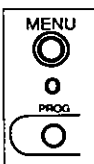- 1**  Encienda el televisor y la videogradora.
- 2** El televisor debe estar fijado al mismo canal que ha seleccionado en la parte trasera de la videogradora (canal 3 o 4).
- 3**  Oprimir MENU para elegir "YES" (Sí) o PROG para "NO."

ARE YOU USING A CABLE BOX OR DSS RECEIVER?

 
PUSH MENU KEY : YES
PUSH PROG. KEY : NO

 - Si ha elegido "YES" (Sí), continúe al paso siguiente. Si ha elegido NO, siga las instrucciones alternativas de la página 43.
- 4**  Girar y oprimir la rueda para elegir la conexión de su equipo.

- CABLE/DSS BOX SET UP -
SELECT YOUR CABLE BOX OR DSS RECEIVER SET UP.

CABLE/DSS BOX-VCR-TV
VCR-CABLE/DSS BOX-TV


SELECT : ROTATE WHEEL
SET : PUSH WHEEL
END : PUSH MENU KEY

 - Si es "CABLE/DSS BOX-VCR-TV", continúe pase al paso 5. Si ha elegido NO, siga las instrucciones alternativas de la página 43.
- 5**  Girar y oprimir la rueda para fijar el canal de salida de la caja de TV por cable o el receptor DSS (el canal sintonizado en el televisor para ver la emisión de la caja de TV por cable o receptor DSS).

- CABLE/DSS BOX SET UP -
ENTER CABLE BOX OR DSS RECEIVER OUTPUT CHANNEL.

01

 
SELECT : ROTATE WHEEL
SET : PUSH WHEEL
END : PUSH MENU KEY

 - Si está usando los dos, fije el canal de salida del receptor DSS.
 - Si ud. está usando los terminales de audio/video, elija y fije a "SALIDA DE VIDEO" para el canal de salida.
- 6**  Girar y oprimir la rueda para elegir "YES" (Sí) o "NO".

- CABLE/DSS BOX SET UP -
DOES YOUR CABLE BOX OR DSS RECEIVER HAVE WIRELESS REMOTE CONTROL?

YES
NO

 SELECT : ROTATE WHEEL
SET : PUSH WHEEL
END : PUSH MENU KEY

 - Si ha elegido "YES" (Sí), continúe al paso siguiente. Si ha elegido "NO", siga las instrucciones alternativas de la página 43.
- 7**  Girar y oprimir la rueda para fijar el número de código de la caja de TV por cable o receptor DSS que coincide con su marca desde la lista de la página 11.

- CABLE/DSS BOX SET UP -
CHOOSE A CODE NUMBER FOR CABLE BOX/DSS RECEIVER FROM THE LIST IN OWNER'S MANUAL AND ENTER NUMBER.

02

SELECT : ROTATE WHEEL
SET : PUSH WHEEL
END : PUSH MENU KEY

 - Este determinará si la videogradora controlará la caja de TV por cable o el receptor DSS.

- 8** Si ud. usa una caja de TV por cable, sintonice al canal 2. Si usa un receptor DSS, sintonice a cualquier canal fuera de 200.

 

Caja de TV

- CABLE/DSS BOX SET UP -
PLEASE TUNE YOUR CABLE BOX TO CH02.

Receptor DSS

PLEASE TUNE YOUR DSS RECEIVER TO CH 270.

PROCEED : PUSH WHEEL
END : PUSH MENU KEY

 Oprimir la rueda para continuar.
- 9**  Girar y oprimir la rueda para elegir "YES" (Sí) o "NO".

Caja de TV

- CABLE/DSS BOX SET UP -
IS YOUR CABLE BOX RECEIVING CH 09 ?

 
YES
NO

Receptor DSS

IS YOUR DSS RECEIVER RECEIVING CH 200?

YES
NO

SELECT : ROTATE WHEEL
SET : PUSH WHEEL
END : PUSH MENU KEY


Si ud. usa una caja de TV por cable y ha elegido "YES" (Sí), siga al paso 10. Si ud. usa un receptor DSS y ha elegido "YES" (Sí), siga las instrucciones alternativas de la página 43. Si ha elegido "NO", aparecerá de nuevo la pantalla del paso 7. Intente fijar un código diferente para su marca y/o cambie la conexión de su equipo. Si su respuesta es todavía "NO", el control de la caja de TV por cable o el receptor DSS no es disponible. Oprimir MENU y pase a las instrucciones alternativas de la página 43.
- 10**  Girar y oprimir la rueda para elegir y fijar el canal PBS de su local que está recibiendo en su caja de TV por cable.

----- SET CLOCK -----


PLEASE ENTER YOUR LOCAL PBS CHANNEL ON CABLE BOX

CH 12

 SELECT : ROTATE WHEEL
SET : PUSH WHEEL
END : PUSH MENU KEY

 - Si ud. vive cerca de una zona con diferente hora, fije el canal de su zona.
- 11**  Verifique que su caja de TV por cable esté encendido y su receptor DSS esté apagado. Oprimir la rueda para iniciar la fijación automática de los canales.

  - Las siguientes informaciones aparecerán seguidamente:
 - "CH AUTO SET PROCEEDING"
 - (AUTOPROGRAMACION EN PROCESO)
 - "CH AUTOSSET COMPLETED"
 - (AUTOPROGRAMACION COMPLETO)
 - "AUTO CLOCK SET PROCEEDING"
 - (FIJACION AUTOMATICA DEL RELOJ EN PROCESO)

Esta pantalla aparece cuando la fijación automática del reloj es incompleto. Comprobar si la hora está fijada correctamente y luego oprimir CH  para terminar la fijación.

12/25/1996 WED 12:00PM

DST: ON

SETTING : CH02

AUTO CLOCK SET COMPLETED

END : PUSH CH UP KEY


Si la hora fijada automáticamente es incorrecto

Si ud. usa una caja de TV por cable y recibe emisiones de más de un canal PBS, intente fijar automáticamente otravez.

Siga los pasos de la fijación o anulación de la hora y cuando las instrucciones de la pantalla requiere la fijación del canal PBS, fije un canal que no ha intentado anteriormente.

Si aparece en la pantalla FIJACION DEL RELOJ INCOMPLETO

La pantalla a la derecha aparecerá si no es disponible en zona la fijación automática de la hora.

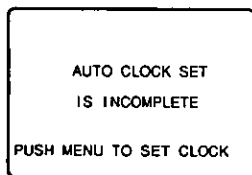

Oprimir MENU para ver la pantalla de la fijación manual del reloj. (Consulte la "Fijacion Manual del reloj" en la página 44).

Notas:

Si ud. usa una caja de TV por cable y recibe emisiones de más de un canal PBS, ud. debe salir desde la pantalla de la fijación del reloj manual e intente fijar automáticamente otravez.

Siga los pasos de la fijación o anulación de la hora y cuando las instrucciones de la pantalla requiere la fijación del canal PBS, fije un canal que no ha intentado anteriormente.

- La fijación automática de la hora se efectuará cada día al apagar la videograbadora por primera vez. Si ud. usa una caja de TV por cable y desea efectuar la fijación automática de la hora, la caja de TV por cable debe permanecer encendido cuando la videograbadora se apaga.


Instrucciones alternativas


Complete los siguientes pasos si ha efectuado una de las siguientes explicaciones durante su fijación.

- A Ud. ha elegido NO en el paso 3 de la página 42 (ud. no está usando una caja de TV por cable o un receptor DSS).
- B Ud. ha elegido la segunda conexión (VCR-CABLE/DSSBOX-TV) en el paso 4 de la página 42.
- C Ud. ha elegido NO en el paso 6 de la página 42 (su caja de TV por cable o receptor DSS no tiene un control remoto).
- D Ud. está usando un receptor DSS y ha elegido SI en el paso 9 de la página 42.
- E No se puede controlar la caja de TV por cable o receptor DSS en el paso 9 de la página 42.

- 1 Encienda la caja de TV por cable y fije la caja de TV por cable al canal PBS de su zona.


- Si ud. vive cerca de una zona con diferente hora, asegúrese de fijar el canal de su zona.
- Si ud. usa un receptor DSS, éste debe estar apagado.

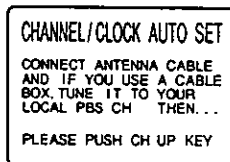


- 2  Oprimir CH ▲ para iniciar la fijación automática de los canales.


- Las siguientes informaciones aparecerán seguidamente:
"CH AUTO SET PROCEEDING"
(AUTOPROGRAMACION EN PROCESO)
"CH AUTOSET COMPLETED"
(AUTOPROGRAMACION COMPLETO)
"AUTO CLOCK SET PROCEEDING"
(FIJACION AUTOMATICA DEL RELOJ EN PROCESO)

Esta pantalla aparece para informarle que la fijación automática de la hora es incompleto.

- 3  Comprobar si la hora está fijada correctamente y luego oprimir CH ▲ para terminar la fijación.

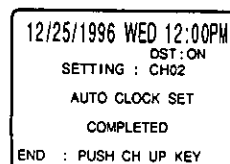

Si aparece esta pantalla, la fijación automática no es disponible en su zona. Por favor fije la hora manualmente como describe al siguiente.

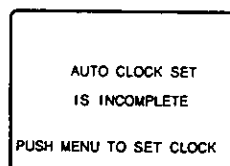

Spanish Quick Use Guide/Guía para rápida consulta


Si la hora y la hora veraniega es incorrecta, por favor siga los siguientes pasos:

Raras veces, en caso de que ud. vive cerca de dos zonas con hora diferente, el aparato puede elegir un canal PBS con diferente hora de su zona. En este caso, haga los siguientes pasos:

- 1 Tome nota del canal que está fijado en la pantalla y salga desde este modo oprimiendo el botón CH ▲.
- 2 Anule este canal desde los canales memorizados en la combinación de VCR/TV.
- 3 Oprima el botón MENU para que aparezca la pantalla del MENU.
- 4 Use la rueda para elegir "SET CLOCK" (Fijar reloj) y luego para elegir "AUTO SET" (Auto matico).
 - Si ud. esta usando una caja de TV por cable y tiene muchos canales PBS, sintonize la caja de TV por cable a un canal PBS diferente e intente la fijación automática otravez.

Fijación manual del reloj


- 1 Oprimir MENU para que aparezca la pantalla de la fijación del reloj.
- 2 Girar y oprimir la RUEDA para elegir y fijar el mes, la fecha, el año, la hora y la hora veraniega.

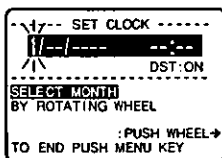

Para hacer correcciones

Oprimir la rueda o el botón CLEAR repetidamente para retroceder o avanzar hasta el paso que desea corregir.



- 3 Oprimir MENU dos veces para iniciar a funcionar el reloj y salir desde este modo.

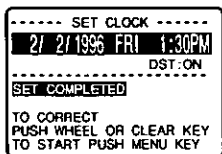


Fijación o cambio de la hora


En caso de que el reloj está incorrecto o ha ocurrido un corte eléctrico.

- 1 Oprimir MENU para que aparezca la pantalla del menú.
- 2 Girar y oprimir la rueda para elegir la pantalla de la fijación del reloj y luego fijar la hora y la fecha.
- 3 Oprimir MENU dos veces para iniciar a funcionar el reloj y salir desde este modo.

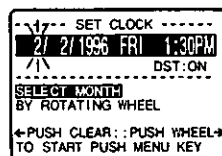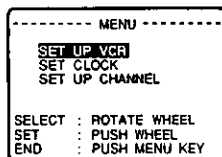


Operaciones básicas para la reproducción

 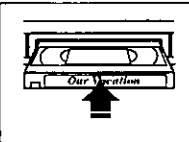- 1  Introducir una cinta
 - La videograbadora se enciende automáticamente.



Esta indicación aparece en la pantalla multifuncional.

- 2  Oprimir PLAY para comenzar a reproducir.
 - Si la cinta no tiene la lengüeta para evitar borrado la videograbadora comienza a reproducir automáticamente.

(Videograbadora o Control Remoto)

- 3  Oprimir REW o FF para localizar rápidamente una escena.

(Videograbadora o Control Remoto)

- La velocidad de búsqueda en el modo SP es a 9 veces más rápida que la velocidad normal y en el modo SLP es a 27 veces más rápida.
- Durante la búsqueda aparece alguna barras de ruido.

- 4  Oprimir STOP para parar la reproducción.


(Videograbadora o Control Remoto)

- 5  Oprimir EJECT para expulsar la cinta.

- Este botón se encuentra solamente en la videograbadora.


Operaciones básicas para la grabación

1 Introducir una cinta con la lengüeta.

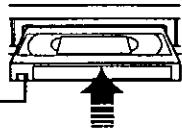


- La videograbadora se enciende automáticamente.

2 Oprimir VCR CH ▲/▼ para elegir el canal.

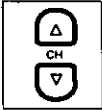

- U oprimir CH ▲/▼ en la videograbadora.
- Para grabar desde una fuente externa, oprimir CH ▲/▼ para elegir LINEA1 ou LINEA2.

3 Oprimir SPEED para cambiar la velocidad de la cinta.

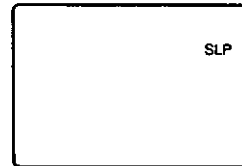

- SP = Reproducción estándar, SLP = Superlarga duración.

4 Oprimir REC/TIME con el control remoto para empezar a grabar.




- U oprimir PLAY y REC/TIME en la videograbadora.

Grabación de un toque (OTR)

La videograbadora termina la grabación a una hora programada.


Oprima sucesivamente REC/TIME para fijar el tiempo de la grabación.

Cada presión cambiará la hora de parada como demuestra al siguiente.

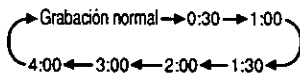

- La indicación TIMER aparece en la pantalla multifuncional.

5 Oprimir STOP para parar la grabación.


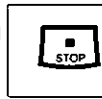


- U oprimir STOP en la videograbadora.

- Si mantiene oprimiendo el botón de CH ▲/▼ aumentará la velocidad del cambio del canal.
- Oprimir PAUSE para hacer una pausa en la grabación en progreso.



Programación fácil para la grabación con temporizador

1 Oprimir PROG para que aparezca la pantalla de la programación.

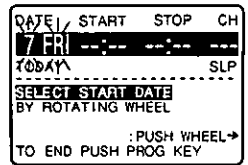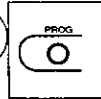


- Si ya existe una programación, elija usando la rueda un número sin programación.

2 Girar y oprimir la rueda para elegir y fijar la fecha.

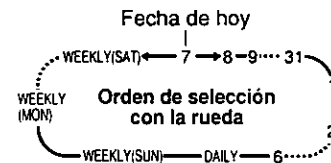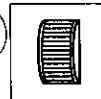


Grabación diaria y semanal

Si ud. desea programar una grabación diaria (lunes a viernes), elija DAILY (Diario) en vez de la fecha en el paso 2. Si desea una grabación semanal, elija WEEKLY MAN (Semanal Lun), TUE (Mar), etc.

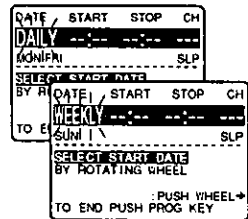

3 Girar y oprimir la ruedad para elegir y fijar las fijaciones que sobran.

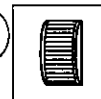


Fijaciones:

- Hora de inicio
- Hora de parada
- Canal o LINEA para una fuente externa.
- Velocidad de la cinta (SP, LP, SLP).


Para hacer correcciones

Oprimir la rueda sucesivamente para avanzar u oprimir CLEAR para retroceder hasta el paso que desea corregir.


4 Oprimir PROG para terminar la programación.

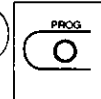


- Si desea hacer más programaciones, elija un número de programa en blanco con la rueda y repita los paso 2 y 3.

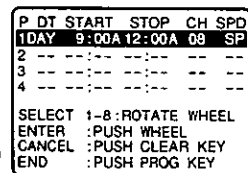

5 Oprimir PROG para salir desde este modo.

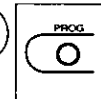


6 Oprimir POWER y apaque el aparato para la grabación con temporizador.

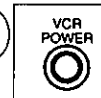

Pantalla multifuncional




- Si la fuente de la grabación es una caja de TV por cable, asegúrese de que la caja de TV por cable esté encendido y esté sintonizado al canal que desea grabar.

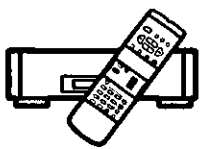


Index of Controls

Multi Function Display

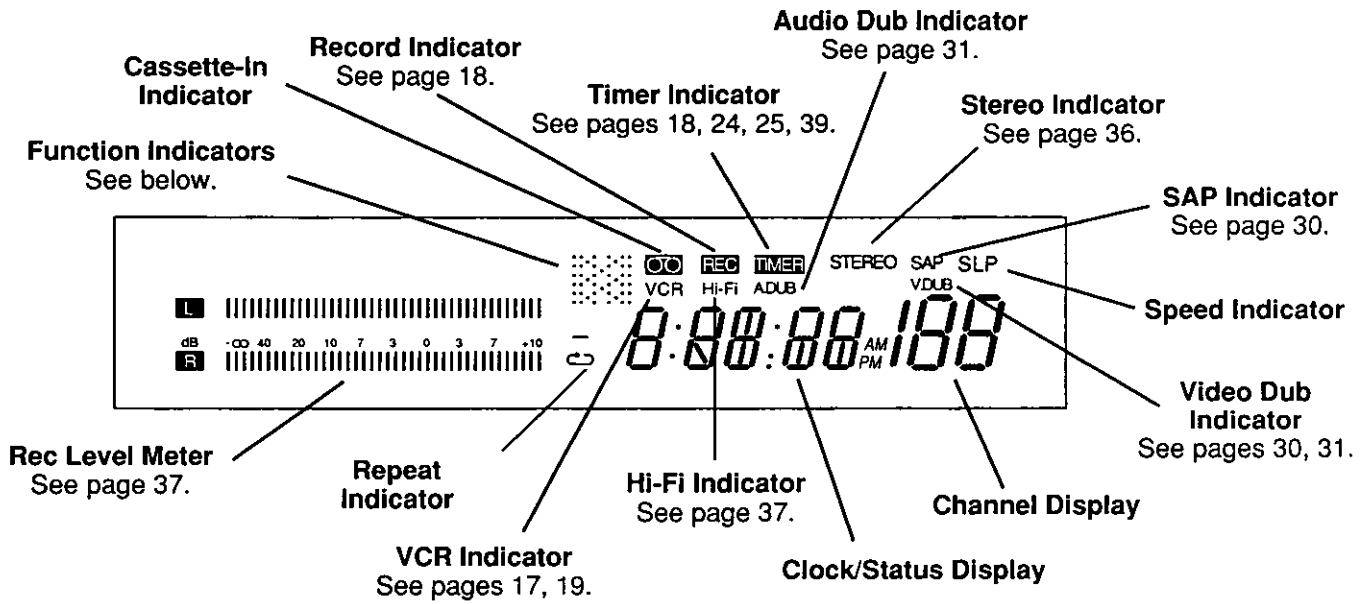


Play		Rewind/Rewind Search		Fast Forward/Fast Forward Search		Record	
Record/Pause		Still		Slow/Frame Advance		Eject	

Rear View of the VCR

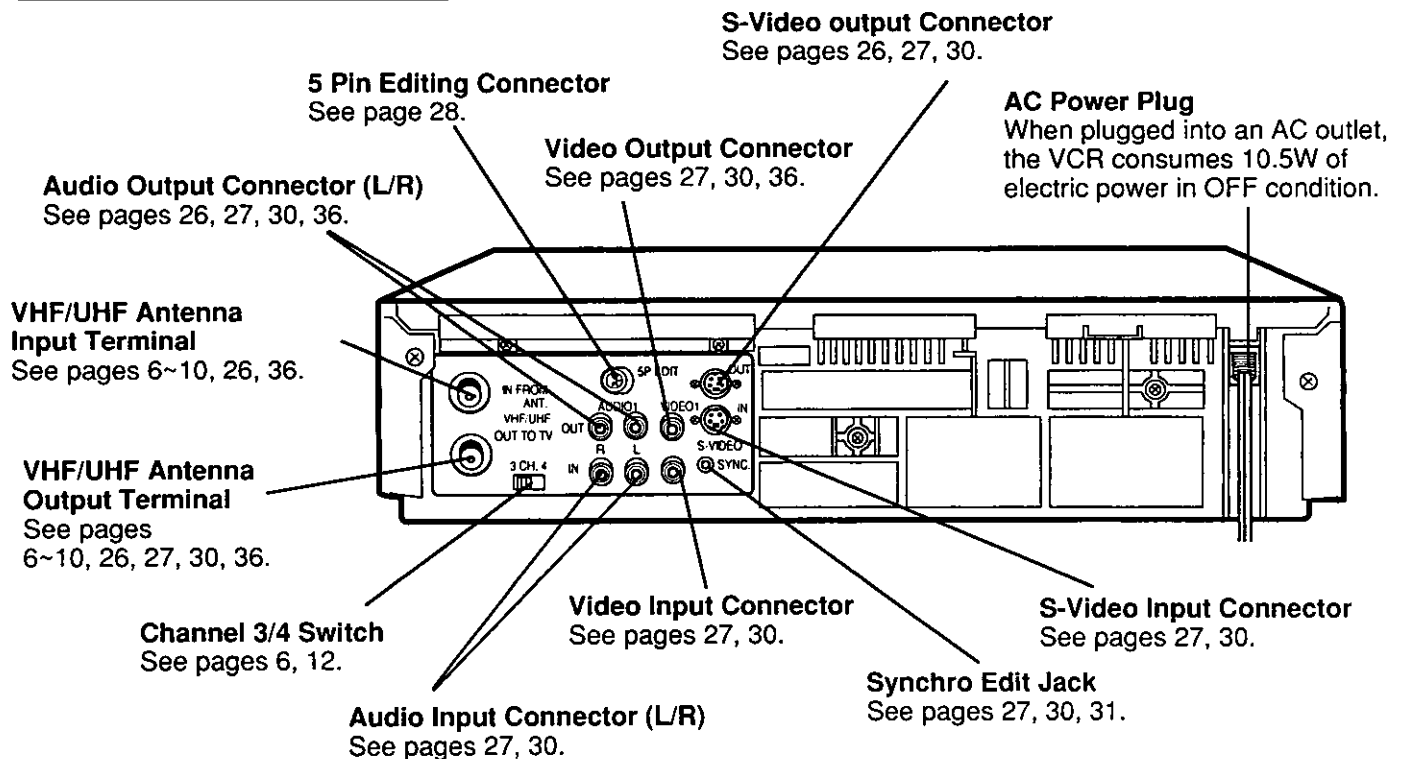


Remote Control (Door open)

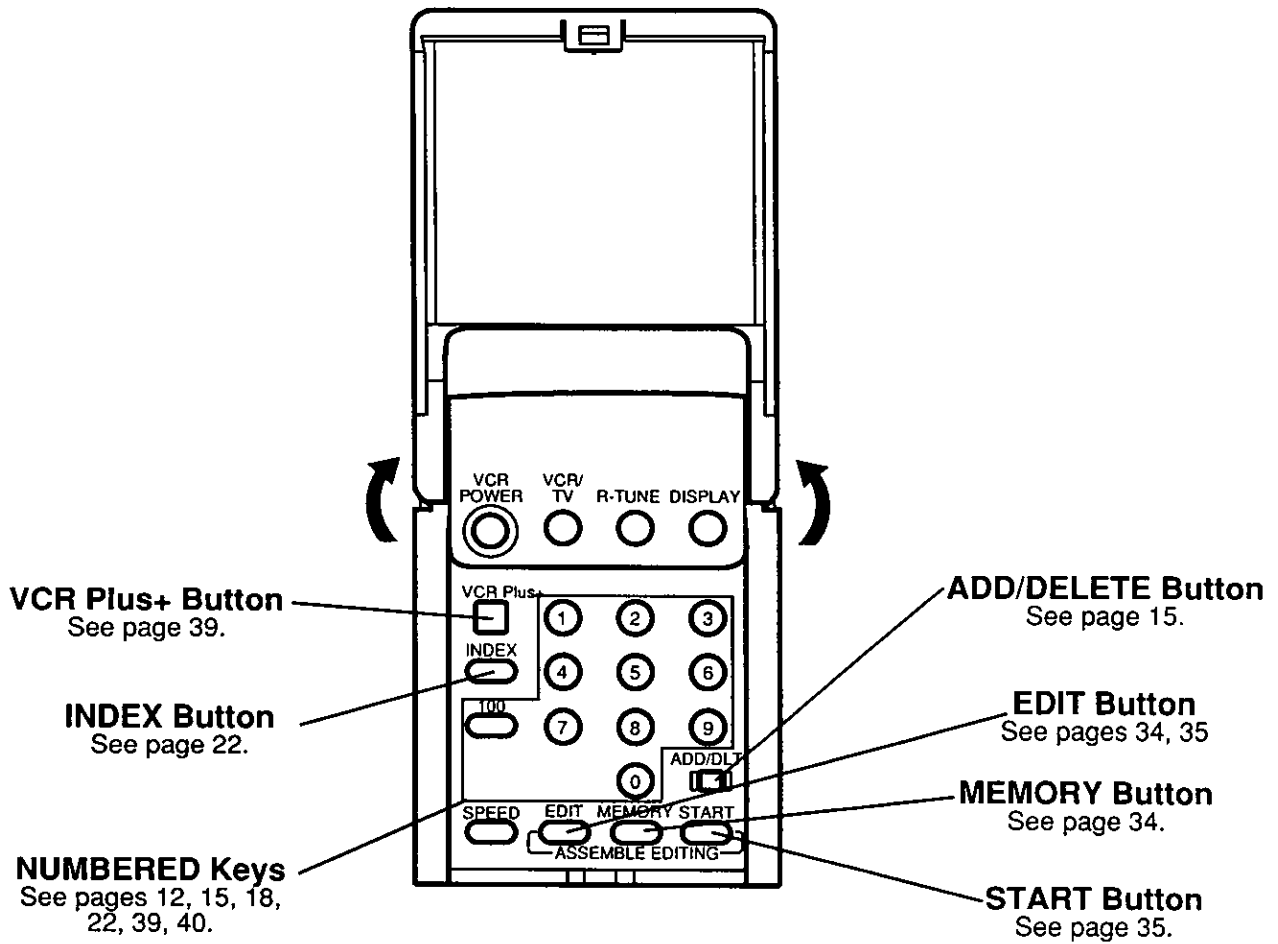


To Open the Door

1 Grasp grip pads on both sides of door.


2 Swing door open for button access.

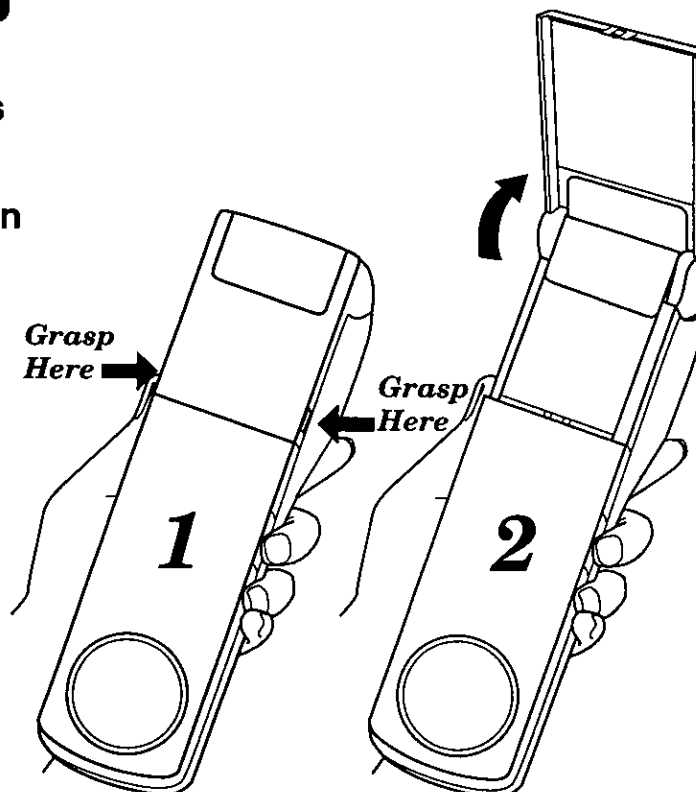

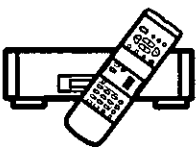

Index of Controls

Remote Control Button

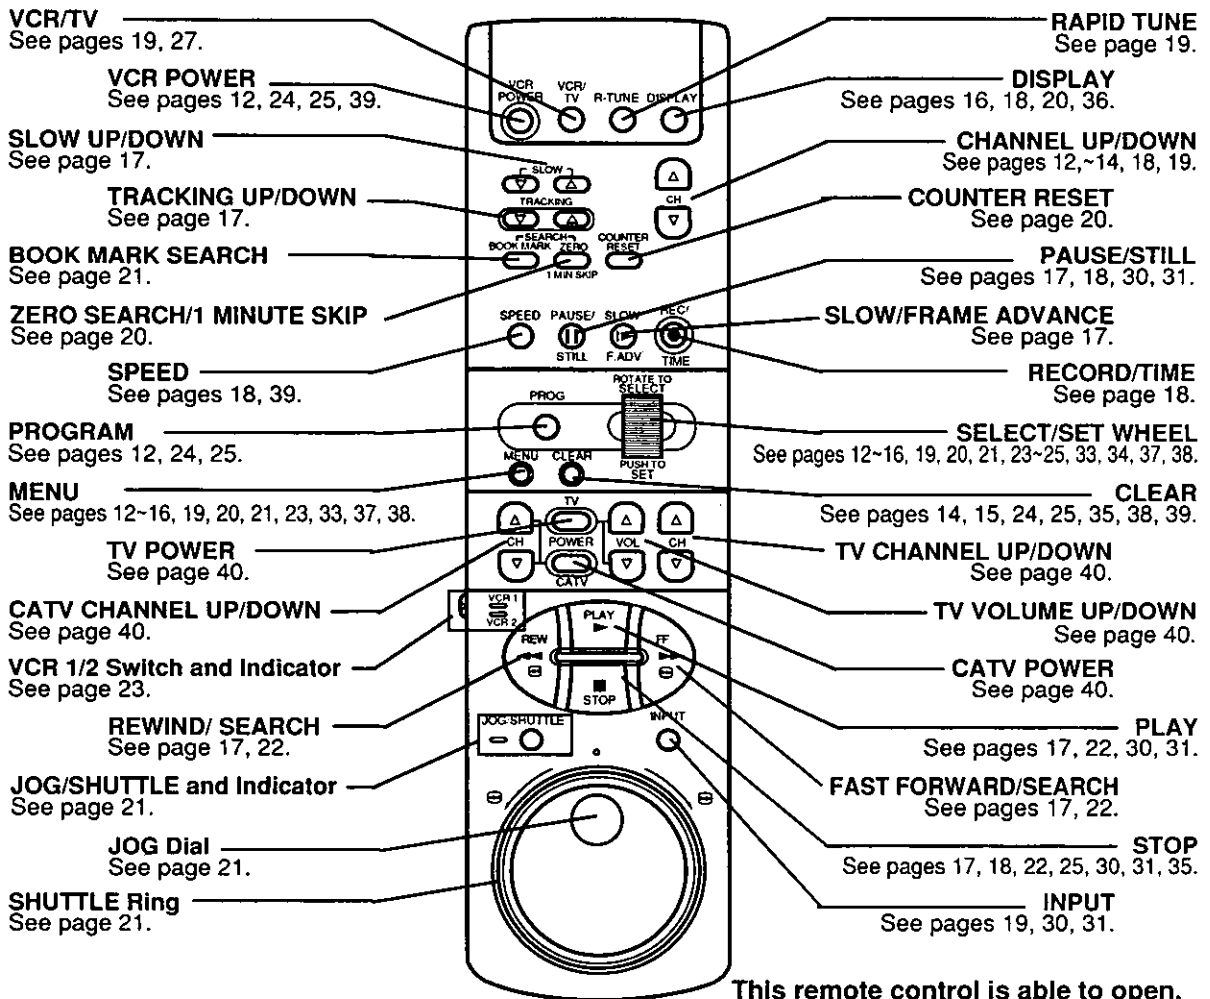

This remote control is able to open.
See previous page.

Front View of the VCR

