


Location of Controls


Multi Function Display

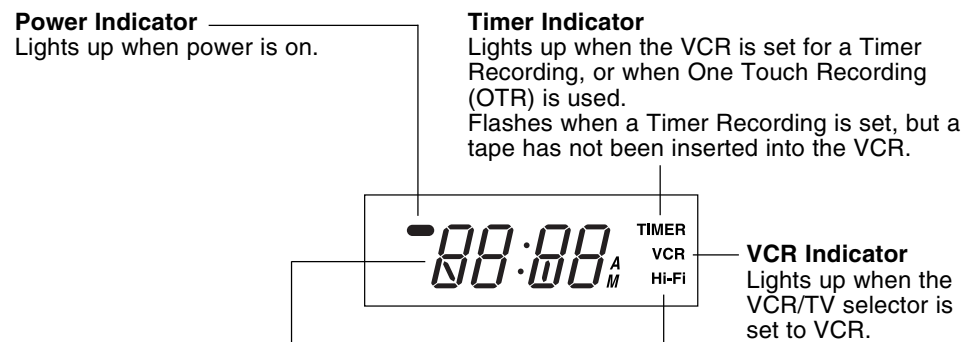

Clock/ Status/ Channel/ Speed Display
Displays the current time. Briefly displays VCR status when a function button is pressed.
Briefly displays the channel number, or "L1" or "L2" when a channel or line input is selected.
Briefly displays the recording speed when SPEED is pressed.

Rear View of the VCR

AC Power Plug
While plugged into an AC outlet, the VCR consumes 3.0 W (PV-V4522) [2.5 W (PV-V4022)] of electrical power in off condition.

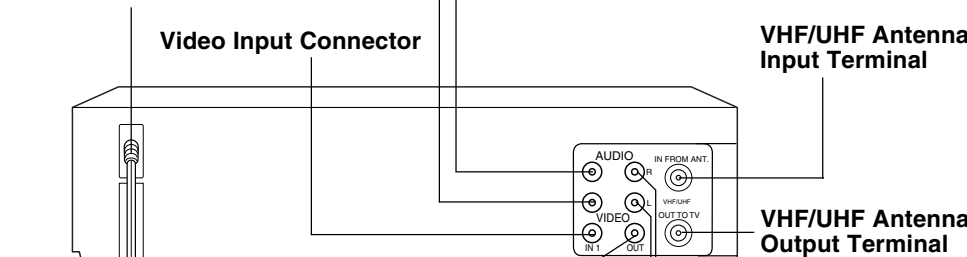

Rear View of Model PV-V4522 VCR only.



Rear View of Model PV-V4022 VCR only.

Note to CABLE system installer:

This reminder is provided to call the CABLE system installer's attention to Article 820-40 of the NEC in USA (and to the Canadian Electrical Code in Canada) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus, New Jersey 07094

Panasonic Sales Company ("PSC"),
Division of Matsushita Electric of Puerto Rico, Inc.
Ave. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park,
Carolina, Puerto Rico 00985

Printed in Indonesia
LSQT0507B
S1001-1052

Spanish Quick Use Guide/ Guía para rápida consulta


CONEXIONES/CONFIGURACIÓN INICIAL (READY TO PLAY)

Realice la conexión de la antena o TV por cable antes de enchufar el cable de CA. La videograbadora iniciará automáticamente la fijación de los canales y del reloj al enchufar el cable de CA.

CONEXIONES


Para Ant/Cable → VCR → TV

- 1 Conecte el cable de la antena al terminal IN FROM ANT del VCR.
- 2 Conecte el terminal OUT TO TV del VCR a la entrada de la antena VHF/UHF del TV con el cable RF incluido.

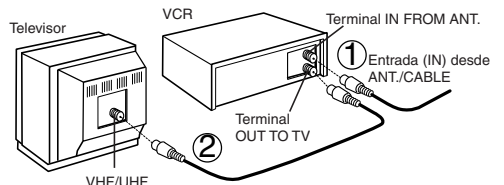

Para Sistema Digital de Satellite (DSS)/ Convertidor de cable → VCR → TV


- 1 Conecte la salida de convertidor de cable al terminal IN FROM ANT.
- 2 Conecte el terminal OUT TO TV del VCR a la entrada de la antena VHF/UHF del TV con el cable RF incluido.

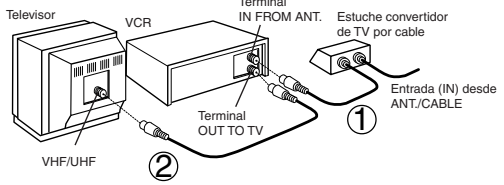


CONFIGURACIÓN INICIAL

- 1 Encienda el TV y cambie al canal 3.
- 2 Enchufe el cable de CA. La videograbadora se encenderá e iniciará las fijaciones de los canales y del reloj.


- Si no aparece la pantalla de abajo, compruebe la conexión del VCR-TV y si el canal del TV está a 3, intente cambiando al canal 4.
- Para cambiar el canal de salida del VCR, consulte las instrucciones de "Canal de salida del VCR" en la página 12 de las operaciones avanzadas.

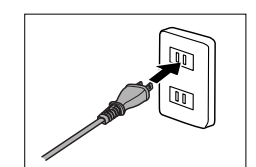

Enchufe el cable de CA.

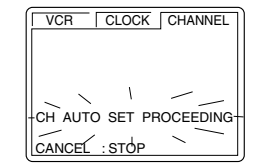


Cambie el idioma luego de la fijación inicial (para su ayuda vea la página 12 de las operaciones avanzadas.)

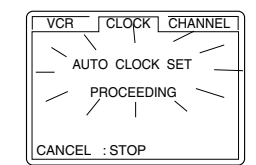


Si está usando un convertidor de TV por cable y en su área hay un canal de Public Broadcast Station (PBS), ajuste su convertidor al canal PBS de su área. Si está usando un receptor DSS, este debe estar apagado.

PRECAUCIÓN
Al usar cables coaxiales RF del tipo "tuercas", apriételes solamente con los dedos. Un apriete excesivo puede dañar los terminales.

- 3 Las fijaciones se realizan automáticamente. Cuando termina las fijaciones, aparecerá la siguiente pantalla.

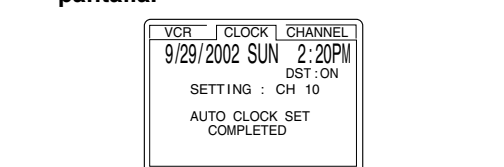


Si aparece en la pantalla "FIJACION AUTOMATICA DEL RELOJ ES INCOMPLETO", Ajuste el reloj como se describe a continuación.

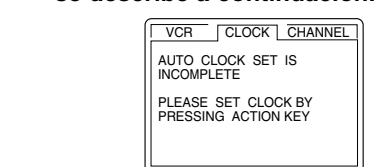

AJUSTE MANUAL DEL RELOJ

Si la fijación ha sido incompleta.

- 1 Presione la tecla ACTION en el control remoto para visualizar la pantalla del menú RELOJ.

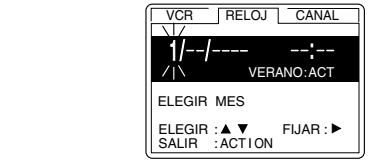

- 2 Presione ▲ ▼ para seleccionar el mes y ► para ajustar. De la misma forma, seleccione y ajuste la fecha, año, hora y DST (Hora de Verano).



- 3 Presione dos veces la tecla ACTION para poner el RELOJ en marcha y salir.

Spanish Quick Use Guide/ Guía para rápida consulta

OPERACIONES BÁSICAS PARA LA REPRODUCCIÓN

 
- 1 Inserte una cassette.
 - La alimentación del VCR se activa. En la Pantalla de Visualización Multi Función se ilumina "VCR".
- 2 Presione PLAY para reproducir el cassette.
 - Si el cassette no tiene lengüeta de prevención de grabación (p. 3), se inicia la reproducción automáticamente.

Detalles especiales durante la grabación

- Presione FF o REW para búsqueda de escenas hacia delante/ hacia atrás. Presione PLAY para liberar. Luego de que la búsqueda se ha iniciado, cada vez que presione FF o REW se cambia la velocidad como sigue: [SLP] aprox. 21x ↔ aprox. 9x [LP] aprox. 9x ↔ aprox. 7x [SP] aprox. 7x ↔ aprox. 3x Si la imagen se interrumpe con la velocidad de 21x, 9x o 7x, cambie la velocidad a 9x, 7x o 3x.
- Presione PAUSE/SLOW para imagen fija (Congelada). Presione PLAY para liberar.
- Presione PAUSE/SLOW en el modo de Imagen fija para imágenes cuadro a cuadro. Presione PLAY para liberar.

- Mantenga pulsado PAUSE/SLOW en el modo de imagen fija para imágenes en cámara lenta. Presione PLAY para liberar.
- 3 Presione STOP para detener el cassette.
- Presione REW o FF en el modo de parada para rebobinado/avance rápido del cassette.
- Presione EJECT en el control remoto, o STOP/EJECT en el VCR para expulsar el cassette.

- 3 Presione ▲ ▼ para seleccionar un número que no está usando para ingresar mas programas y presione ► para ajustar. Luego repita el paso 2.



Presione nuevamente PROG para salir.

OPERACIONES BÁSICAS PARA LA GRABACIÓN

- 1 Inserte el cassette con lengüeta de protección de grabación (p. 3).
 - La alimentación del VCR se activa. En la pantalla Multi Función se ilumina "VCR".
- 2 Presione CH ▲ ▼, o las teclas de números para seleccionar el canal.
- 3 Presione SPEED para seleccionar la velocidad de grabación (p. 3)
 - SP = Reproducción estándar,
 - LP = Larga duración,
 - SLP = Superlarga duración.
- 4 Presione REC para comenzar a grabar.
 - Para eliminar escenas indeseadas, presione PAUSE/SLOW para pausar, y al presionar nuevamente se reanuda la grabación.
- 5 Presione STOP para detener la grabación.


- Grabación de un toque. Presione REC repetidamente para ajustar la duración de la grabación como sigue: como sigue: 30 min. → 1 hr → 1:30hr → 2:00 → 3:00 → 4:00 → Salida. La VCR se apagará automáticamente en intervalo seleccionado de tiempo.
- Ver un canal y grabar otro. Presione CRTV. (La indicación VCR se apagará en la "visualización de Multi-Función") → Selección canales de TV (Mientras permanece grabando)
- Selección canales con VCR. Presione VCR/TV (la indicación "VCR" se encenderá en la visualización multi-función) → Selección canales en su VCR.

PARA CANCELAR LA GRABACIÓN CON TEMPORIZADOR (la grabación está teniendo lugar)

Presione POWER y luego STOP dentro de los 10 segundos para cancelar la grabación con temporizador (el indicador TIMER se apagará en la Pantalla de Multi-Función)


PROGRAMACIÓN FÁCIL PARA LA GRABACIÓN CON TEMPORIZADOR

- 1) Presione PROG.
- 2) Presione ▼ para visualizar la pantalla de Programación.

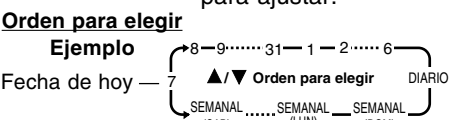

- 2) Para los ajustes siguientes, presione ▲ ▼ para seleccionar y presione ► para ajustar los tiempos de INICIO/PARADA, CANAL, o entrada de LINEA, y velocidad del cassette (SP, LP, SLP). Presione PROG para finalizar el programa.

 
- 3 Presione ▲ ▼ para seleccionar un número que no está usando para ingresar mas programas y presione ► para ajustar. Luego repita el paso 2.



- 4 Presione POWER off para ajustar el temporizador. (Se ilumina "TIMER" en el panel delantero)

REVISIÓN, REEMPLAZO O BORRADO DE PROGRAMACIONES (no se puede efectuar durante la grabación)

- 1) Presione PROG.
- 2) Presione ◀ ▶ para seleccionar la línea.

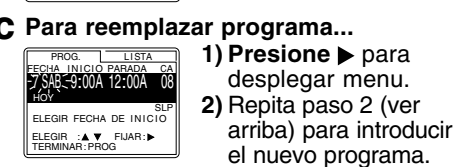

Para reemplazar programa...
1) Presione ► para desplegar menú.
2) Repita paso 2 (ver arriba) para introducir el nuevo programa.

Para cancelar programas... Presione ADD/DLT

Presione PROG Para terminar programación.

PARA CANCELAR LA GRABACIÓN CON TEMPORIZADOR (la grabación está teniendo lugar)

Presione POWER y luego STOP dentro de los 10 segundos para cancelar la grabación con temporizador (el indicador TIMER se apagará en la Pantalla de Multi-Función)

Spanish Quick Use Guide/ Guía para rápida consulta

ANTES DE AL SERVICIO SOPORTE TÉCNICO

Verifique los siguientes puntos una y otra vez si esta teniendo problemas con su VCR. (BO : Haga referencia en la instrucciones de funcionamiento [Operaciones Básicas]) (AO : Haga referencia el la instrucciones de funcionamiento [Operaciones Avanzadas])

ALIMENTACIÓN DE AC	CORRECCIÓN
La unidad no enciende....	<ul style="list-style-type: none"> • Revise que el cordón de alimentación de AC este correctamente conectado a la toma de pared. • Presione el botón "POWER" para el encendido de la unidad. • Verifique que la fuente de alimentación está activada.

GRABACIÓN Y REPRODUCCIÓN (REC / PLAY)	CORRECCIÓN
No se pueden grabar programas de TV	<ul style="list-style-type: none"> • Revise las conexiones entre VCR, antena externa o cable y TV. • Verifique la selección de conexiones (BO p. 4, AO p. 3) • Verifique que su sistema de antena (Cable o TV) estén correctamente seleccionados. Vea "Channels" (AO p. 12). • Asegúrese que la pestaña en el cassette de grabación está intacta (BO p. 3).

No se puede efectuar grabación con temporizador...	<ul style="list-style-type: none"> • Compruebe que el reloj ha sido ajustado a la hora y fecha actual. • Asegúrese de que la caja de Cable/DSS (si se utiliza) se deja encendido y está sintonizado al canal a grabar. • Ajuste las horas de comienzo y detección de grabación correctamente. (BO p. 6) • Asegúrese de que ha apagado el VCR antes de la grabación. (BO p. 6) • La grabación con temporizador quizás no pueda realizarse o continuarse si se produjera una interrupción de corriente antes o durante una grabación con temporizador, incluso después de restablecido el fluido eléctrico.
--	--

No hay imagen de reproducción, o la imagen de reproducción tiene ruidos o contiene rayas...	<ul style="list-style-type: none"> • Seleccione el canal 3 o 4 en el televisor, de modo que corresponda con el canal de salida del videograbador (3 o 4) (BO p. 4), o selección LINE. • Ajuste el selector VCR/TV a "VCR". • Ajuste el control TRACKING en una de las dos direcciones. (BO p. 3) • Pruebe a realizar la limpieza de cabezales. (BO p. 3)
---	--

En la reproducción de efectos especiales, la imagen puede contener algunos saltos verticales cuando se utiliza un televisor con Control de Bloqueo Vertical Automático...	<ul style="list-style-type: none"> • Ponga el Control de Bloqueo Vertical del televisor en "MANUAL" y luego realice el ajuste.
---	---

No se puede controlar el VCR...	<ul style="list-style-type: none"> • Asegúrese de que el aparato está encendido. • Revise las pilas del control remoto. • Asegúrese de que el BLOQUEO DEL VCR esté ajustado a INACTIVO (AO p. 10) • Asegúrese de que no está funcionando una grabación con temporizador.
---------------------------------	--

CONTROL REMOTO	CORRECCIÓN
NO funciona el control remoto...	<ul style="list-style-type: none"> • Asegúrese de que el aparato está encendido. • Asegúrese de que el control remoto está en el modo de VCR. • Apunte el control remoto directamente al sensor remoto del VCR. (BO p. 7) • Evite que ningún objeto interrumpa la señal del control remoto. • Revise las pilas del control remoto (BO p. 3) • Asegúrese de que el BLOQUEO DEL VCR esté ajustado a INACTIVO (AO p. 10) • Si el sensor remoto recibe directamente la luz del fluorescente o luz solar puede causar interferencia con la señal del control remoto.

Los botones "ACTION" y/o "PROG" no responden...	<ul style="list-style-type: none"> • Presione el botón VCR para el modo de "VCR". (AO p. 2) • Revise las baterías del control remoto. (BO p. 3)
---	---

Varios	CORRECCIÓN
No se pueden ver los programas en el televisor...	<ul style="list-style-type: none"> • Asegúrese que la TV esté encendida. • Asegúrese que la TV esté conectado a la salida de la VCR (VCR Out). • Verifique las conexiones entre VCR, cable o antena y TV. • Ajuste el selector VCR/TV a "TV". (BO p. 5) • Asegúrese que la apropiada señal fue seleccionada.

No se puede introducir la cassette de video...	<ul style="list-style-type: none"> • Inserte el cassette con el lado de la ventana hacia arriba y la pestaña de grabación frente a usted. • Verifique que no tenga ningún cassette dentro del aparato.
--	--

No se puede extraer la cassette de video...	<ul style="list-style-type: none"> • Inserte o conecte completamente el cable de alimentación de AC a la toma de pared.
---	--

La cassette de video es expulsada al dar comienzo a una grabación o al desactivar la alimentación para la grabación con teporizador...	<ul style="list-style-type: none"> • Asegúrese que la pestaña de grabación del cassette este intacta. (BO p. 3)
--	--

En el modo de Detención, el motor (CILINDRO) sigue girando...	<ul style="list-style-type: none"> • Para activar rápidamente el mecanismo de reproducción, el cilindro sigue rotando durante 3 minutos. Esto disminuye el tiempo de respuesta desde la parada hasta la reproducción o hasta la el modo de búsqueda en rebobinado.
---	---

Si no puede resolver su problema, por favor comunicarse al Centro de llamadas del Cliente para asistencia del producto al 1-800-211-PANA(7262). Para localizar un centro de servicios autorizado, llame sin costo al 1-800-211-PANA(7262) o envíe un correo a : consumerproducts@panasonic.com

Limited Warranty

PANASONIC CONSUMER ELECTRONICS COMPANY,
DIVISION OF MATSUSHITA ELECTRIC CORPORATION OF AMERICA
One Panasonic Way Secaucus, New Jersey 07094

PANASONIC SALES COMPANY,
DIVISION OF MATSUSHITA ELECTRIC OF PUERTO RICO, INC.,
Ave. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park, Carolina, Puerto Rico 00985

Panasonic VHS VCR Products Limited Warranty

Limited Warranty Coverage
If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

Product or Part Name	Parts	Labor
All components of VCR except item listed below	One (1) Year	Ninety (90) Days
Video Tape (in exchange for defective video tape)	Five (5) Days	Not Applicable

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must mail-in your product during the warranty period. If non-rechargeable batteries are included, they are not warranted. This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is".

Mail-In Service
For assistance in the continental U.S.A. in obtaining repairs please ship the product to:
Panasonic Services Company
Customer Service Center
4900 George McVay Drive
McAllen, TX 78503

For assistance in Puerto Rico call Panasonic Sales Company (787) 750-4300 or fax (787)768-2910
When shipping the unit carefully pack and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone number where you can be reached.

IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

Limited Warranty Limits And Exclusions
This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY DAMAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, travel to and from the servicer, loss of or damage to media or images, data or other recorded content. The items listed are not exclusive, but are for illustration only.)

ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

Customer Services Directory

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:
1-800-211-PANA (7262), Monday-Friday 9 am-9 pm; Saturday-Sunday 9 am-7 pm, EST. or send e-mail : consumerproducts@panasonic.com

Web Site: <http://www.panasonic.com>
You can purchase parts, accessories or locate your nearest servicenter by visiting our Web Site.

Accessory Purchases:
1-800-332-5368 (Customer Orders Only)
Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032
(6 am to 5 pm Monday - Friday; 6 am to 10:30 am Saturday; PST)
(Visa, MasterCard, Discover Card, American Express, Check)

Service in Puerto Rico
Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/ Factory Servicenter:
Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985
Phone (787)750-4300 Fax (787)768-2910

Panasonic

Video Cassette Recorder Operating Instructions (Basic Operations)

For advanced operations, see the separate "Advanced Operations" instruction book.

Models No. PV-V4022/PV-V4522



Table of Contents

Important Safeguards and Precautions	2
Before Using	3
Connections and Initial Setup (Ready to Play)	4
Playback / Record on a Tape	5
Timer Recording	6
Location of Controls	7, 8
Spanish (Español) Quick Use Guide	9, 10, 11
Limited Warranty / Customer Services Directory	12

As an ENERGY STAR® Partner, Matsushita Electric Corporation of America has determined that this product or product model meets the ENERGY STAR® guidelines for energy efficiency.



Please read these instructions carefully before attempting to connect, operate or adjust this product. Please save this manual.
Spanish Quick Use Guide is included.
(Guía para rápida consulta en español está incluida.)

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

LSQT0507B

Before Requesting Service

Check the following points once again if you are having trouble with your VCR.
(BO : refers to "Basic Operations" Instruction book.)
(AO : refers to "Advanced Operations" Instruction book.)

Power	Correction
No power...	<ul style="list-style-type: none"> Completely insert Power Plug into an AC outlet. Set POWER button to on. Make sure power source is active.
Recording & Playback	Correction
TV program cannot be recorded...	<ul style="list-style-type: none"> Check connections between VCR, external antenna, and TV. Check connections selection. (BO p. 4, AO p. 3) Make sure your antenna system (CABLE or TV) is correctly set. (Channels [AO p. 12]) Make sure cassette record tab is intact. (BO p. 3)
Timer recording cannot be performed...	<ul style="list-style-type: none"> Confirm that clock is set to current time and date. Make sure Cable/DSS box (if used) is left on and tuned to channel to be recorded. Set recording start/stop times correctly. (BO p. 6) Make sure VCR POWER button is pressed off. (BO p. 6) Timer recording may not be performed or continued if a power interruption occurs before or during a Timer Recording, even after power is restored.
There is no playback picture, or the playback picture is noisy or contains streaks...	<ul style="list-style-type: none"> Select channel 3 or 4 on TV to match VCR output channel (3 or 4) (BO p. 4) or select LINE. Set VCR/TV selector to "VCR." Adjust TRACKING control in either direction. (BO p. 3) Try Head Cleaning. (BO p. 3)
Special effects playback, picture may contain some vertical jitter when using a TV with an Automatic Vertical Hold Control...	<ul style="list-style-type: none"> Set TV's Vertical Hold Control to MANUAL, then adjust.
VCR cannot be controlled...	<ul style="list-style-type: none"> Make sure VCR power is on. Check Remote batteries. Make sure VCR LOCK is set to off. (AO p. 10) Make sure Timer Record is not in progress.
Remote Control	Correction
VCR cannot be remote controlled...	<ul style="list-style-type: none"> Make sure VCR power is on. Make sure Remote is in VCR mode. Aim Remote Control directly at remote sensor on VCR. (BO p. 7) Avoid any object blocking signal path. Check Remote batteries. (BO p. 3) Make sure VCR LOCK is set to off. (AO p. 10) Exposing VCR remote sensor to direct fluorescent or outdoor light may cause signal interference.
ACTION and PROG buttons do not respond...	<ul style="list-style-type: none"> Check connections between VCR, external antenna, and TV. Press VCR button for VCR mode. (AO p. 2) Check Remote batteries. (BO p. 3)
Miscellaneous	Correction
Programs cannot be viewed on TV...	<ul style="list-style-type: none"> Make sure TV power is on. Make sure TV is set to output of VCR. Check connections between VCR, external antenna, and TV. Set VCR/TV selector to "TV." (BO p. 5) Make sure proper signal source is selected.
Video cassette cannot be inserted...	<ul style="list-style-type: none"> Insert the cassette with window side up; record tab facing you. Check if a tape is already in the unit.
Video cassette cannot be removed...	<ul style="list-style-type: none"> Completely insert Power Plug into an AC outlet. Make sure cassette record tab is intact. (BO p. 3)
Video cassette ejects when a recording is started or the power is turned off for timer recording...	<ul style="list-style-type: none"> To enable Quick play mechanism, the cylinder will rotate for about 3 minutes. This reduces response time from Stop to Play mode and from Play to Rewind Search mode.
In Stop mode, the motor (CYLINDER) continues to rotate...	<ul style="list-style-type: none"> To enable Quick play mechanism, the cylinder will rotate for about 3 minutes. This reduces response time from Stop to Play mode and from Play to Rewind Search mode.

If you cannot resolve the problem, please call the Customer Call Center for product assistance at 1-800-211-PANA (7262).
To locate an authorized servicer, please call toll free 1-800-211-PANA (7262).
or send e-mail to : consumerproducts@panasonic.com

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus, New Jersey 07094


Panasonic Sales Company ("PSC"),
Division of Matsushita Electric of Puerto Rico, Inc.
Ave. 65 de Infrantera. Km. 9.5 San Gabriel Industrial Park,
Carolina, Puerto Rico 00985

Printed in Indonesia
LSQT0523B
S1001-1052

Copying Your Tapes (Dubbing)


Connection

(Rear connection shown.)

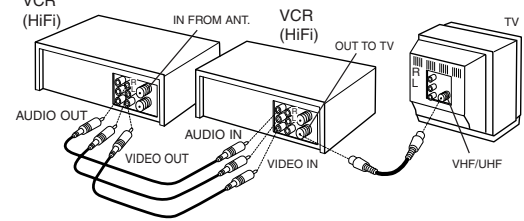

Front of VCR
VIDEO IN 2 AUDIO IN 2

(Front Audio L/R Video IN jacks are also provided)
For Model PV-V4522 only

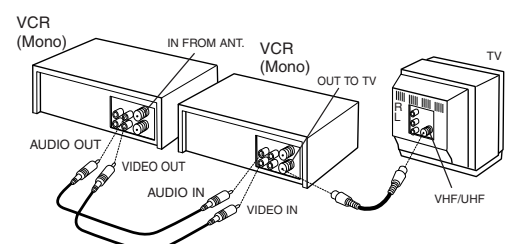

Front of VCR
VIDEO IN 2 AUDIO IN 2

(Front Audio/Video IN jacks are also provided)
For Model PV-V4022 only

- Connect VIDEO OUT jack on Playing VCR to VIDEO IN jack on Recording VCR. To monitor the dubbing, also connect a TV as shown.
- PV-V4522 : Connect AUDIO L/R OUT jacks on Playing VCR to AUDIO L/R IN jacks on Recording VCR.
PV-V4022 : Connect AUDIO OUT jack on Playing VCR to AUDIO IN jack on Recording VCR.

In place of a Playing VCR, you can use other equipment, such as a Camcorder. Simply connect the unit's Audio/Video outputs to the Recording VCR.

Playing (Source) VCR	Recording (Editing) VCR
1 Insert pre-recorded tape.	Insert blank tape with record tab.
2	Press INPUT* to set VCR Input mode to LINE1 for Video Input (Rear) or to LINE2 for Video Input (Front). (See "Selecting the Input Mode" below.)
3 Press PLAY, then PAUSE/SLOW immediately to enter PLAY/PAUSE mode.	Press REC, then PAUSE/SLOW immediately to enter REC/PAUSE mode.
The operation of steps 4 and 5 must be done on both playing and recording VCRs at the same time.	
4 Press PLAY to start dubbing. Playing VCR starts playback.	Press PAUSE/SLOW to start dubbing. Recording VCR starts recording.
5 Press STOP to stop dubbing.	Press STOP to stop dubbing.
To Monitor Dubbing on Your TV	Selecting the Input Mode
1 Turn your TV on and tune to the Recording VCR channel (CH3 or CH4).	Method 1: Press INPUT repeatedly. Channel Number ↔ LINE1 ↔ LINE2
2 Set the VCR/TV Selector on the Recording VCR to "VCR."	Method 2: Press CH ▲/▼. Display will change as below.
Note • Dubbing tapes protected with Copy Guard will have poor quality results.	<ul style="list-style-type: none"> "L1" or "L2" lights on Multi-Function Display (about 4 sec.) when LINE1 or LINE2 is selected. LINE1: For rear audio/video connection. LINE2: For front audio/video connection.

Caution: Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.


Special VCR Features

Tape Position Display Feature

To find out the present tape position. Tape position is displayed for VHS-C Cassettes type, tapes under 30 minutes, and some other tapes, but the position is not correct.

- Press ACTION to display menu.

DETECTING TAPE POSITION

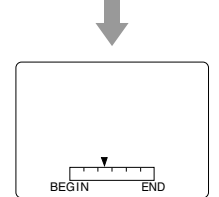

"DETECTING TAPE POSITION" only appears the first time a cassette is inserted and it takes several seconds for correct indication to appear.


- The present tape position indication is displayed.

- Press TAPE POSITION to return to normal screen.

Remote Warning ON/OFF Feature

If Multi-brand feature is used (page 2), and this feature is set to on, a warning appears whenever an invalid key is pressed in TV mode.

- Press ACTION to display menu.

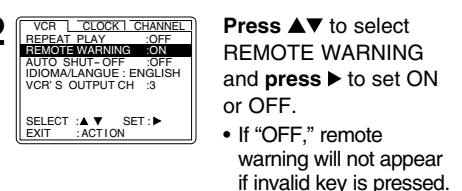


Press ▲▼ to select REMOTE WARNING and press ► to set ON or OFF.
• If "OFF," remote warning will not appear if invalid key is pressed.

- Press ACTION to return to normal screen.


Auto Shut-Off Feature

The power shuts off at a preset time.

- Press ACTION to display menu.

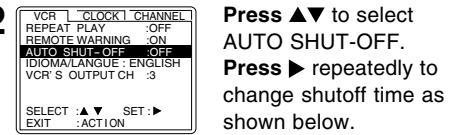

Press ▲▼ to select AUTO SHUT-OFF. Press ► repeatedly to change shutoff time as shown below.

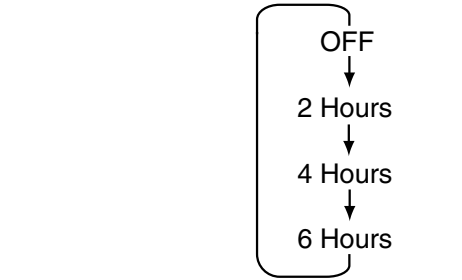

- Press ACTION to return to normal screen.

Note • The shut-off countdown will not function during Play or Record.

***Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

Weak Signal Display ON/OFF Feature

When set to "ON," picture is displayed regardless of signal strength.

- Press ACTION to display menu.





Press ▲► to select and display CHANNEL. Press ▲▼ to select WEAK SIGNAL DISPLAY, and press ► to set ON or OFF.

- ON: Picture is displayed despite signal condition an may have poor quality.
- OFF: Screen turns solid blue when signal is weak or non-existent.
- Selecting ON has no effect on connected equipment with blue back feature.

- Press ACTION to return to normal screen.

VCR Lock Feature

When set to ON, all operations except for timer record and tape eject are prohibited. Useful for households with small children.

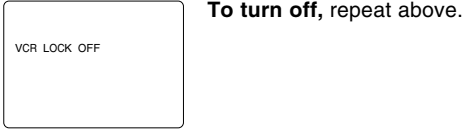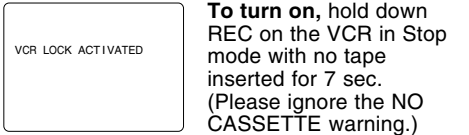


To turn on, hold down REC on the VCR in Stop mode with no tape inserted for 7 sec. (Please ignore the NO CASSETTE warning.)
To turn off, repeat above.

- VCR Lock cancels in 24 hours if clock is set.

On-Screen Displays (OSD)

On-Screen Displays (OSD)

Function & Channel Displays

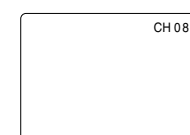


When a function button is pressed, e.g. PLAY, or you change channels, a 5 second display appears.

Blank Tape/ No Video Signal Indications

When blank tape is detected during play, or the current channel has no signal (with Weak Signal Display feature (p. 10) set to OFF), the TV screen will turn solid blue.

VCR Status & Clock Displays

To display or remove overlay at right, press DISPLAY*.

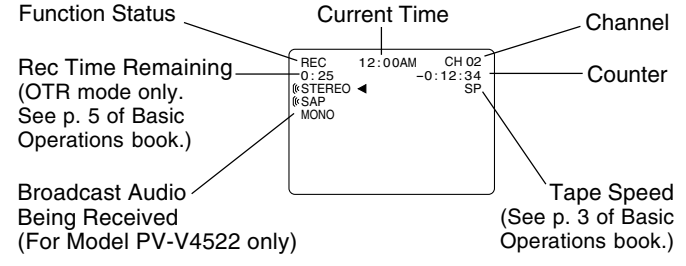

Warning and Instruction Displays

OSD	Caution	Page
PLEASE SET CLOCK BY PRESSING ACTION KEY	If you attempt to set or review a Timer Recording and the Clock is not set...	See page 6 of Basic Operations book
TURN VCR OFF FOR TIMER RECORDING	After a Timer Program has been set...	See page 6 of Basic Operations book
CHECK CASSETTE RECORD TAB	If you press REC on the remote control or VCR, and a cassette is inserted with no record tab...	See page 3 of Basic Operations book
NO CASSETTE	If you press PLAY, FF, REW, or REC on the remote control or VCR without a cassette inserted...	See page 5 of Basic Operations book
TO CANCEL TIMER REC PRESS POWER THEN STOP KEY	If you press POWER or STOP during a Timer Recording... (visible in VCR mode only)	See page 6 of Basic Operations book
VIDEO HEADS MAY NEED CLEANING PLEASE INSERT HEAD CLEANING CASSETTE OR REFER TO MANUAL	If head cleaning becomes necessary while playing back a tape...	See page 3 of Basic Operations book
END :PLAY		
VCR LOCK ACTIVATED	If you press a function button other than STOP/EJECT or POWER while the VCR is in VCR Lock mode...	See page 10
REMOTE CONTROL IS SET TO TV MODE	If you press an invalid key on the remote while in TV mode...	See pages 2, 10
USE VCR : VCR KEY		

***Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

 
Reset Language, Channels, Clock, VCR's Output Channel

Reset Language, Channels, Clock, VCR's Output Channel

Press ACTION to display MENU.

Language


- Press ▲▼ to select language item.




- Press ► repeatedly.



 
For English



For Spanish

 


For French

 


- Press ACTION to exit.

Channels

 
- Press ▲► to select CHANNEL.



 - Press ▲▼ to select "ANTENNA," then press ► to set your antenna system ("TV" or "CABLE.")




 - Press ▲▼ to select "AUTO SET," then press ►.



- Press ▲▼ and ▲► to select and set the date, time, and DST (Daylight Saving Time).

 - After Channel Auto Set is finished, Auto Clock Set will be performed.



- Press ACTION to start the Clock and exit this mode.

• After Channel Auto Set is finished, Auto Clock Set will be performed.

VCR's Output Channel

- Press ▲▼ to select "VCR'S OUTPUT CH."



- Press ►.



- Press ACTION.



 
After 3 seconds




- To Make Corrections, repeat steps 1) ~ 3).

Clock


- Press ▲► to select CLOCK.



 - Press ▲▼ to select "MANUAL," and press ► (For Auto Clock Set, select "AUTO CLOCK SET.")



 - Press ▲▼ and ▲► to select and set the date, time, and DST (Daylight Saving Time).



- Press ACTION.

 
• After Channel Auto Set is finished, Auto Clock Set will be performed.




- After Channel Auto Set is finished, Auto Clock Set will be performed.

Add or Delete a Channel

To add channel: Select channel with NUMBER keys and press ADD/DLT.



 To delete channel: Select channel with CH ▲▼ or NUMBER keys and press ADD/DLT.



DST (Daylight Saving Time)

VCR auto adjusts clock for DST.
Spring (First Sunday in April)
DST:ON → Sets clock ahead one hour.
Autumn (Last Sunday in October)
DST:ON → Turns clock back one hour.
• If your area does not observe Daylight Saving Time, select DST:OFF.
• Keep these time changes in mind when programming VCR for timer recordings.

Panasonic

Video Cassette Recorder
Operating Instructions
(Advanced Operations)
For Basic operations, see the separate "Basic Operations" instruction book.

Models No. PV-V4022/PV-V4522

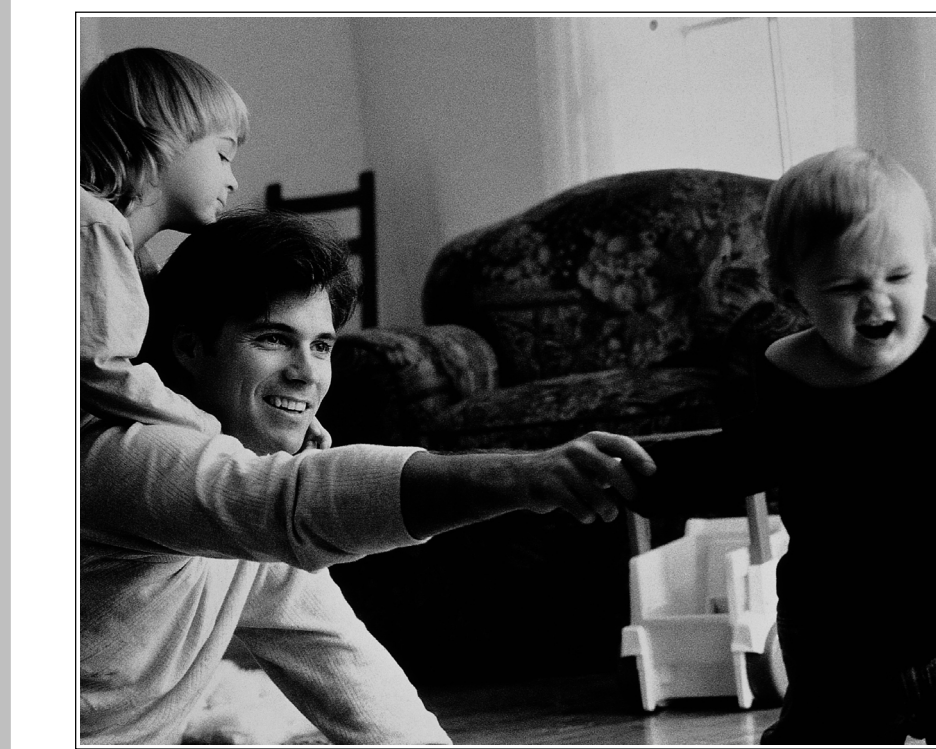


Table of Contents	
Multi-Brand Control Feature	2
Advanced Connections (Cable/DSS)	2
MTS Broadcast (For Model PV-V4522 only)	3
VHS Hi-Fi Stereo System (For Model PV-V4522 only) ...	5
Tape Operation	6, 7
Before Requesting Service	8
Copying Your Tapes (Dubbing)	9
Special VCR Features	10
On-Screen Displays (OSD)	11
Reset Language, Channels, Clock, VCR's Output Channel ...	12

As an ENERGY STAR® Partner, Matsushita Electric Corporation of America has determined that this product or product model meets the ENERGY STAR® guidelines for energy efficiency.

Please read these instructions carefully before attempting to connect, operate or adjust this product. Please save this manual.

Multi-Brand Control Feature

Multi-Brand Control Setup

The Remote Control can be set to control some TV functions.

1 Find your TV Brand Code Number from those shown below.

2 Setup for TV control,

- > hold down **TV** button,
- > enter code with **NUMBER** keys.

3 Confirm code entry,

- > press **POWER** to turn your TV on or off.
- See table below for controllable functions in each mode.

- Notes**
- Repeat setup after remote battery replacement.
 - Remote will not control every TV made by the manufacturer listed. If you get no response, your particular unit cannot be controlled. There are NO additional codes for the products listed. If your product is not listed, then the remote is not compatible with that product.

Using Multi-Brand Control

After remote is set up, you can select VCR or TV for the desired function.

Press **VCR** or **TV** on the remote.

(Table below shows available unit buttons for each mode.)

Unit Mode	VCR	TV
VCR	All	VOL UP/DOWN
TV	VCR/TV, PLAY, STOP, EJECT, SAP/Hi-Fi (PV-V4522 only), DISPLAY, FF, REW, PAUSE/SLOW, REC, SPEED, CM/ZERO, RESET COUNTER, TAPE POSITION	POWER, INPUT, ENTER, NUMBER keys, CH UP/DOWN, VOL UP/DOWN

- Notes**
- Not all functions listed may be controllable.
 - In TV mode, it may be necessary to press ENTER after pressing NUMBER keys for channel selection.

TV Brand Code Numbers

Panasonic	01, 02	Sylvania	05	JVC	11
Quasar	01, 02	Sharp	06, 07	Hitachi	12
RCA	03	Sony	08	Mitsubishi	07, 13
GE	03	Toshiba	09	Samsung	14
Zenith	04	Sanyo	10	Gold Star	15, 16, 17
Magnavox	05	Fisher	10		


Important Notes

- Due to changes in infra-red commands used by manufacturers, some brands have several codes. If your unit does not respond to the first code, please try the next one.
- Some TV brands require you to turn on the power manually.


Advanced Connections

Audio/Video connection

If your TV has AUDIO IN and VIDEO IN terminals, you can connect your VCR to them to receive higher quality picture and sound.

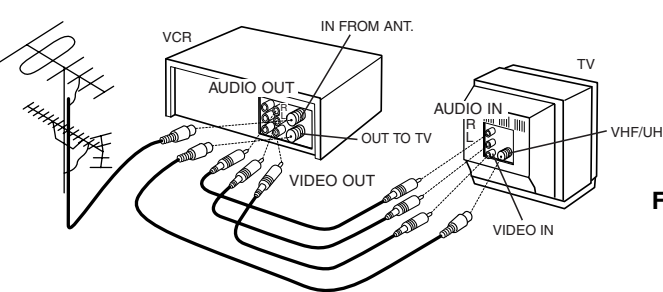


For Model PV-V4522 only

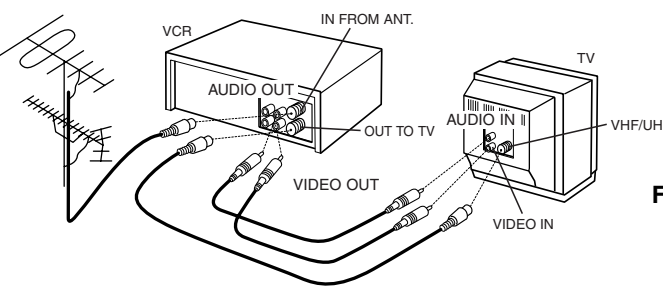

For Model PV-V4022 only


- 1 Connect the VCR's VIDEO OUT jack to the TV's VIDEO IN jack.
- 2 PV-V4522 : Connect VCR's L/R AUDIO OUT jacks to the TV's L/R AUDIO IN jacks.
PV-V4022 : Connect VCR's AUDIO OUT jack to the TV's AUDIO IN jack.
- 3 Set the VIDEO/TV selector of your TV (Monitor/Receiver) to "VIDEO."

With a Cable Box (VCR → Cable Box)

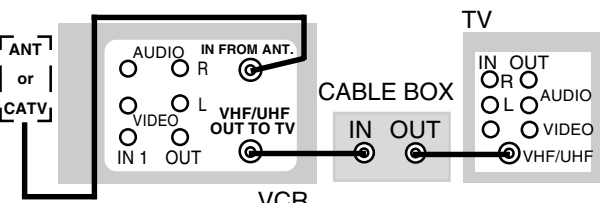

- You Can**
- view any (including scrambled) channel.
 - use VCR Remote Control to select channels without using Multi-brand control feature.
- You Cannot**
- record scrambled channels.

Connect With Two Cable Boxes

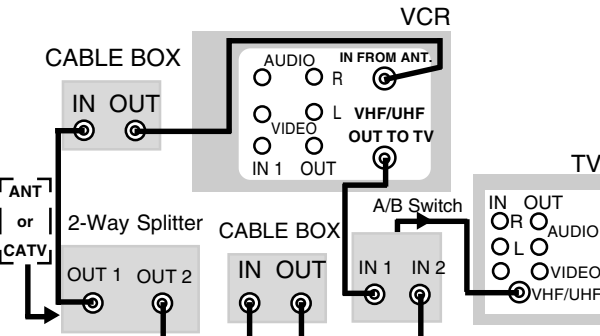


- You Can**
- record and view both scrambled and unscrambled channels if additional equipment is added. This connection requires: two converter boxes, an A/B switch, and a 2-way splitter.
- You Cannot**
- view channel other than the one selected for any type of recording.
 - do a Timer recording of a channel unless you select it at the cable box.

MTS Broadcast

For Model PV-V4522 only

Connection

Make the Audio/Video Connection as shown on page 3.
• You can use a TV connected to Stereo amp and speakers instead of a Stereo TV.

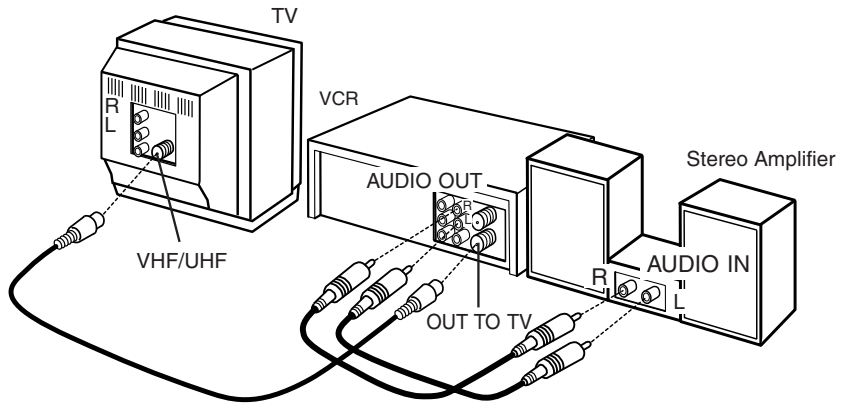


Receivable Broadcast Types

The following are possible audio broadcast types and on-screen displays. The signal being received is indicated with an "Ⓜ" mark while the selected audio mode is indicated with an arrow.

To display the broadcast signal being received,
→ press **DISPLAY**.

MTS Stereo and SAP broadcast


Multi-channel Television Sound Stereo (main language) and Secondary Audio Program (sub language) broadcasts are being received simultaneously. Select STEREO or SAP audio mode.

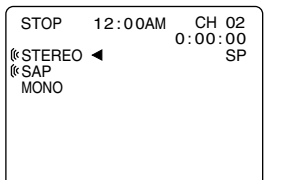

MTS Stereo broadcast


Multi-channel Television Sound Stereo broadcast. Select STEREO audio mode.

- If stereo broadcast is weak and display flickers, select MONO audio mode for possibly better results.

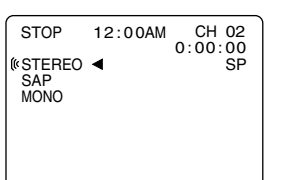


SAP broadcast

Secondary Audio Program (sub language) broadcast. Select SAP audio mode for the sub language.

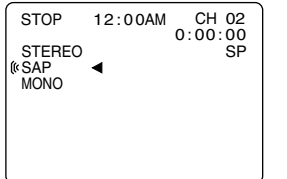

MONO broadcast

Normal monaural sound broadcast.

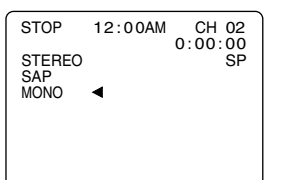

Equipped with **dbx**®-TV Noise Reduction for true MTS reproduction. **dbx**®-TV Noise Reduction is required for good stereo separation and audio fidelity. **dbx**® is a registered trademark, and is licensed by **dbx**® Technology Licensing.

VHS Hi-Fi Stereo System

For Model PV-V4522 only

Audio Mode for Recording

1 Press SAP/ Hi-Fi to display audio mode. (Display disappears after 5 seconds.)



Press **SAP/ Hi-Fi** repeatedly to select desired mode.
• Refer to "Receivable Broadcast Types" on page 4.

- Arrow indicates selection.

3 Do a recording.


See p. 5 of "Basic Operations" Instruction book.

Audio Mode for Playback

1 Start playback.

See p. 5 of "Basic Operations" Instruction book.

2 Press SAP/ Hi-Fi to display audio mode. (Display disappears after 5 seconds.)

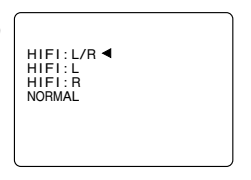

Press **SAP/ Hi-Fi** repeatedly to select desired mode.
• Select "HIFI(L/R)" or "HIFI(L)" or "HIFI(R)" to listen to stereo recordings in stereo sound. Select "NORMAL" for monaural sound.

- Arrow indicates selection.

Notes

- Only tapes recorded in Hi-Fi stereo will playback with true stereo sound. Standard stereo tapes will playback in monaural sound.
- To listen to Hi-Fi stereo playback, the VCR AUDIO (L/R) jacks must be connected to a stereo TV or an external stereo amp and speakers. (See page 4.)
- If tracking is adjusted during playback, Hi-Fi audio may revert to normal audio.
- Hi-Fi and normal audio playback volume level may differ.


***Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

Tape Operation

Search System


For each recording, an invisible index mark is placed on the tape. A program index and information are also included for timer recordings. These marks are used to access or scan recordings.

Index Search

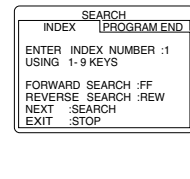

Press **SEARCH*** to display SEARCH in Stop or Play mode, and then press **NUMBER** keys to select recording number.

- To calculate number, see below.
- Press **FF** or **REW** on the remote to start search.

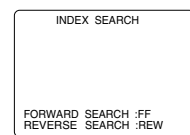


Play begins at search end. To search forward or back 1 index, press **FF** or **REW** on the remote or VCR while screen left is displayed (10 sec.).


- To cancel, press **PLAY** or **STOP**.

To Calculate Index Number

 Example 1:
To go to rec. 2 from rec. 4, enter 3 and press REW.



Example 2:
To go to rec. 6 from rec. 2, enter 4 and press FF.

 

NOTE: ↓ indicates start points of each recording.

Note

- If Index Search is started very close to an index mark, that index mark may not be counted in the search.


***Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

Tape Operation

Repeat Play

Set to playback a recording over and over.

1 Press ACTION to display menu.

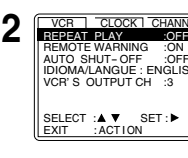

Press **▲▼** to select REPEAT PLAY and press **▶** to set ON or OFF.


ON : Play repeats at tape end or if unrecorded portion over 30 sec. is detected.

3 Press ACTION to return to normal screen.

Zero Search

To quickly return to a specified tape location.


1 Press DISPLAY during play to display Counter.

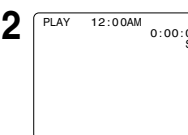


Press **RESET COUNTER** at desired position to reset to "0:00:00".

3 Continue to record, playback, etc.

4 Press STOP.

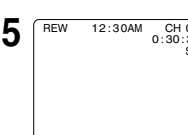

Press **CM/ZERO** in Stop mode to start ZERO SEARCH.
• Unit will go into FF or REW mode and stop at the last point the Counter was set to 0:00:00.

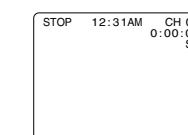

Notes

- If Program End Search is started very close to an index mark, that mark may be skipped over.
- To cancel, press **PLAY** or **STOP**.

***Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

Important Safeguards and Precautions

FOR YOUR SAFETY, READ AND RETAIN ALL SAFETY AND OPERATING INSTRUCTIONS. HEED ALL WARNINGS IN THE MANUAL AND ON THE UNIT.

INSTALLATION
1 POWER SOURCE CAUTION
 Operate only from a power source indicated on the unit or in this manual. If necessary, have your Electric Utility Service Company or Video Products Dealer verify the power source in your home.

2 POLARIZED OR GROUNDING PLUG
 As a safety feature, this Video product comes with either a polarized video cord plug (one blade is wider than the other), or a three-wire grounding type plug.

GROUNDING PLUG CAUTION:
 This plug will only fit into a three-hole grounding outlet. If necessary, have an electrician install the proper wall outlet. Do not defeat the safety feature by tampering with the plug.

3 POWER CORD
 Make sure power cords are routed so that they are not likely to have anything rest on them, roll over them, or be in the way of walking traffic. If an extension cord is used, make sure it also has either a polarized or grounding plug and that the cords can be securely connected. Frayed cords, damaged plugs, and damaged or cracked wire insulation are hazardous and should be replaced by a qualified service technician.

4 DO NOT BLOCK VENTILATION HOLES
 Ventilation openings in the cabinet help reduce heat generated during operation. If they are blocked, heat build-up inside the unit can cause failures that may result in a fire hazard or heat damage to cassettes. For protection, follow these rules:

- Never cover ventilation slots or the unit while in use, or operate the unit when placed on a bed, sofa, rug, or other soft surface.
- Avoid built-in installation, such as a book case or rack, unless proper ventilation is provided.

5 AVOID EXTREMELY HOT LOCATIONS OR SUDDEN TEMPERATURE CHANGES
 Do not place the unit over or near any kind of heater or radiator, in direct sunlight, inside a closed vehicle, etc. Do not move the unit suddenly between areas of extreme temperature variation. If the unit is suddenly moved from a cold place to a warm place, moisture may condense in the unit and on the tape.

6 TO AVOID PERSONAL INJURY
 • Do not place unsecured equipment on a sloping surface.
 • Do not place this unit on any support that is not firm, level, and adequately strong. The unit could fall causing serious injury to a child or adult and damage to the unit.

• An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
 • Carefully follow all operating instructions and use the manufacturer's recommended accessories when operating this unit or connecting it to any other equipment.

SAFETY PRECAUTIONS
 Warning: To prevent fire or shock hazard, do not expose this equipment to rain or moisture.
 CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.
 Attention: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Service
 1. DO NOT SERVICE THIS PRODUCT YOURSELF. If, after carefully following the detailed operating instructions, this Video product does not operate properly, do not attempt to open or remove covers, or make any adjustments not described in the manual. Unplug the unit and contact a qualified service technician.
 2. IF REPLACEMENT PARTS ARE REQUIRED. Make sure the service technician uses only parts specified by the manufacturer, or those having the same safety characteristics as the original parts. The use of unauthorized substitutes may result in fire, electric shock, or other hazards.
 3. HAVE THE SERVICE TECHNICIAN PERFORM A SAFETY CHECK. After any service or repairs to the unit, request the service technician to conduct a thorough safety check as described in the manufacturer's service literature to ensure that the video unit is in safe operating condition.

Features for a Quality Picture
Digital Auto Picture
 Automatically controls the video output signal for less noise depending on the tape condition.
Digital Auto Tracking
 Continuously analyzes the signal and adjusts for optimum picture quality.
Manual Tracking Control (to reduce picture noise)
 Use during Playback and Slow Motion mode to reduce picture noise.
V-Lock Control (to reduce picture jitter)
 In Still mode, CH (TRACKING) ▲/▼ operate as a V-Lock control.

Important notes when using DSS receiver
 • When recording programs via DSS receiver, DSS receiver must be left on.
 • When recording programs via an antenna or cable, DSS receiver must be turned off.

FCC Warning: Any unauthorized changes or modifications to this equipment would void the user's authority to operate.

Before Using

CONGRATULATIONS
 on your new purchase! With proper use, this dependable product will provide years of enjoyment. Please fill in the information below. (Serial number is on tag on back of VCR.)

Accessories
 Remote Control LSSQ0263 (PV-V4022)
 Batteries 2 "AA"
 LSSQ0264 (PV-V4522)
 RF Coaxial Cable VJAS0196

Model PV-V4522 remote shown.
 To order accessories, call toll free 1-800-332-5368.

Using the Video Unit
 If the unit has been in storage or moved to a new location, refer first to the INSTALLATION section of these safeguards.
 1. KEEP THIS VIDEO UNIT AWAY FROM WATER OR MOISTURE OF ANY KIND.
 2. IF EQUIPMENT IS EXPOSED TO RAIN, MOISTURE, OR STRONG WIND, unplug the unit and have it inspected by a qualified service technician before use.
 3. DURING AN ELECTRICAL STORM. During a lightning storm, whether indoors or outdoors, or before leaving the unit unused for extended periods of time, disconnect all equipment from the power source as well as the antenna and cable system.
 4. WHEN THE UNIT IS PLUGGED IN. Never expose the unit to rain or water. DO NOT OPERATE if liquid has been spilled into the unit. Immediately unplug the unit, and have it inspected by a service technician. Fire and shock hazards can result from electrical shorts caused by liquid contact inside.
 • Never drop or push any object through openings in the unit. Some internal parts carry hazardous voltages and contact can cause electric shock or fire hazard.
 • Avoid placing the unit directly above or below your TV set as this may cause electrical interference. Keep all magnets away from electronic equipment.
 5. USING ACCESSORIES. Use only accessories recommended by the manufacturer to avoid risk of fire, shock, or other hazards.
 6. CLEANING THE UNIT. Unplug the unit. Then, use a clean, dry, chemically untreated cloth to gently remove dust or debris. DO NOT use cleaning fluids, aerosols, or forced air that could overspray, or seep into the unit and cause electrical shock. Any substance such as wax, adhesive tape, etc. may mar the cabinet surface. Exposure to greasy, humid, or dusty areas may adversely affect internal parts.


LOADING THE BATTERIES
 1. DO NOT SERVICE THIS PRODUCT YOURSELF. If, after carefully following the detailed operating instructions, this Video product does not operate properly, do not attempt to open or remove covers, or make any adjustments not described in the manual. Unplug the unit and contact a qualified service technician.
 2. IF REPLACEMENT PARTS ARE REQUIRED. Make sure the service technician uses only parts specified by the manufacturer, or those having the same safety characteristics as the original parts. The use of unauthorized substitutes may result in fire, electric shock, or other hazards.
 3. HAVE THE SERVICE TECHNICIAN PERFORM A SAFETY CHECK. After any service or repairs to the unit, request the service technician to conduct a thorough safety check as described in the manufacturer's service literature to ensure that the video unit is in safe operating condition.

RECORD/PLAYBACK TIME
 Only use tapes with the VHS mark in this unit.


Tape Speed Setting	Type of Video Cassette		
	T60	T120	T160
SP (Standard Play)	1 Hour	2 Hours	2 Hours 40 Minutes
LP (Long Play)	2 Hours	4 Hours	5 Hours 20 Minutes
SLP (Super Long Play)	3 Hours	6 Hours	8 Hours

Connections / Initial Setup (Ready to Play)


Connecting
For ANT./Cable → VCR → TV
 1. Connect cable from Antenna/Cable to VCR's IN FROM ANT. jack.
 2. Connect VCR's OUT TO TV jack to TV's ANT. IN jack with included RF Cable accessory.

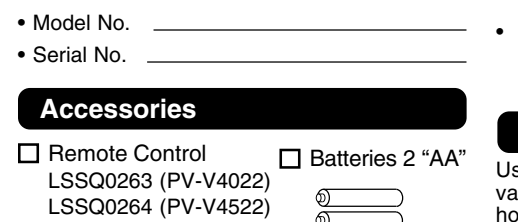


For DSS/Cable Box → VCR → TV
 1. Connect your cable box's OUT jack to the VCR's IN FROM ANT. jack with an RF cable.
 2. Connect VCR's OUT TO TV jack to TV's ANT. IN jack with included RF Cable accessory.

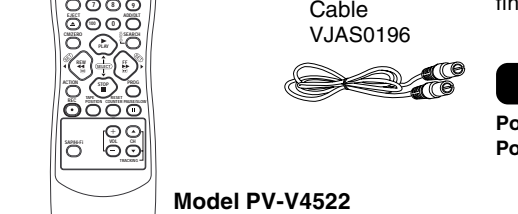

Initial Setup (Ready to Play)
 1. Turn TV on and tune to channel 3.
 2. Plug VCR Power Cord into AC wall outlet. VCR comes on and auto channel and clock set starts.
 3. Settings are made automatically. When setup is done, this screen appears.

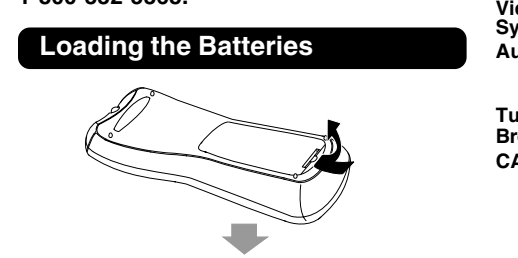

Manual Clock Set
 If Auto Clock Set was incomplete.
 1. Press ACTION* on remote to display CLOCK menu.
 2. Press ▲/▼ to select the month and ► to set. In the same manner, select and set the date, year, time, and DST (Daylight Saving Time).
 3. Press ACTION to start clock and exit.

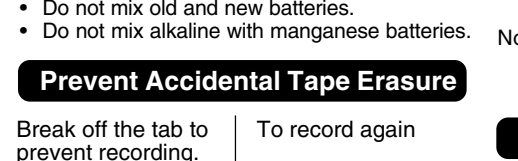

WARNING
 Over tightening "Nut type" RF coaxial cables may damage jacks. Finger tighten only.


Plugging the AC Power Plug into an AC outlet
 Plug the VCR power cord into an AC wall outlet. The VCR will power on and the auto channel and clock set will start.

Plugging the AC Power Plug into an AC outlet
 Plug the VCR power cord into an AC wall outlet. The VCR will power on and the auto channel and clock set will start.

Plugging the AC Power Plug into an AC outlet
 Plug the VCR power cord into an AC wall outlet. The VCR will power on and the auto channel and clock set will start.

Playback / Record on a Tape

Playback a Tape
 1. Insert a tape.
 • Loose or peeling labels may cause tape jam.
 2. Press PLAY to play tape.
 • If tape has no rec. tab (p. 3), auto play begins.

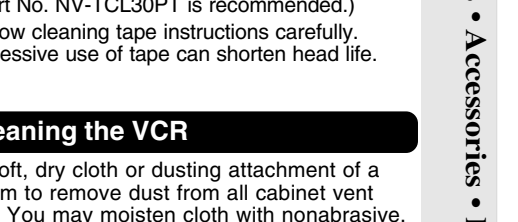

Record on a Tape
 1. Insert a tape with a record tab (p. 3).
 2. Press CH ▲/▼ or NUMBER keys to select the channel.
 • To select "LINE" input, see p. 9 of "Advanced Operations" book.
 • If recording from a channel over 100, first press 100 key then the other 2 digits.
 3. Press SPEED to select record speed (p. 3).
 4. Press REC to start recording.
 • To edit, press PAUSE/SLOW to pause, and again to resume recording.
 5. Press STOP to stop recording.

Special Features During Play
 ■ Forward/Reverse Scene Search
 → Press FF or REW.
 → Press PLAY to release.
 After search has begun, each additional press of FF or REW changes speed as shown below.
 [SLP] : Approx. 21X ↔ Approx. 9X
 [LP] : Approx. 9X ↔ Approx. 7X
 [SP] : Approx. 7X ↔ Approx. 3X
 If at 21X, 9X, or 7X speed the picture is interrupted, change speed to 9X, 7X, or 3X.
 ■ One Touch Recording (record in progress)
 Press REC repeatedly to set length as follows:
 30 min. → 1 hr. → 1:30 → 2:00 → 3:00 → 4:00 → exit.
 The VCR shuts off at the length set.
 ■ Record one station, watch another Press VCR/TV ("VCR" goes out on Multi Function Display), → select channels on TV (recording continues).
 ■ Select channels on VCR (in STOP or PAUSE mode) Press VCR/TV ("VCR" lights up on Multi Function Display), → select channels on VCR.

Notes
 • Picture interruption may occur with some TVs.
 • FF and REW search speed may vary depending on current tape position.
 ■ Still (Freeze) Picture
 → Press PAUSE/SLOW.
 → Press PLAY to release.
 ■ Frame by Frame Picture
 → Press PAUSE/SLOW in Still mode.
 → Press PLAY to release.
 ■ Slow Motion Picture
 → Hold down PAUSE/SLOW in Still mode.
 → Press PLAY to release.

Notes
 • These features work best in SP or SLP mode.
 • The sound will be muted.
 • To reduce picture noise, see "Manual Tracking Control" on p. 3.
 • After VCR is in Still or Slow mode 3 minutes, it auto switches to Stop mode to protect the tape and the video heads.

3 Press STOP to stop tape.
 ■ Press REW or FF in Stop mode to Rewind or Fast Forward tape.
 ■ Press EJECT on remote, or STOP/EJECT on VCR to eject tape.

Auto Operation Functions
 ■ Auto Play
 Insert a tape → Power comes on → Play starts if there is no record tab (see p. 3).
 ■ Auto Rewind
 Play → Tape end → Rewind
 Fast Forward → Tape end → Rewind
 ■ Play Auto Eject
 (Repeat Play must be off)
 Play → Tape end → Rewind → Tape ejects if there is no record tab


Important notes when using DSS receiver
 • When recording programs via DSS receiver, DSS receiver must be left on.
 • When recording programs via an antenna or cable, DSS receiver must be turned off.

Important: If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

Important: If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

Timer Recording

Timer Recording
 1) Press PROG*.
 2) Press ▼ to display program screen.
 3) Press ▲ to select DATE, press ▲/▼ to select: 1-31= one time, or DAILY= MON- FRI, or WEEKLY= same time each week and press ►.
 4) Press REC to start recording. Press PAUSE/SLOW to pause, and again to resume recording.
 Press PROG to end programming.
 To Enter More Programs Press ▲/▼ to select and press ► to set an unused program. Then repeat step 2. Or, press PROG to exit.

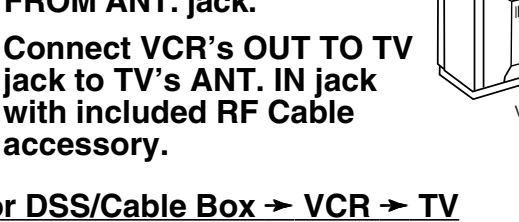


Review, Replace, or Clear Program
 (Recording is not in progress)
 a) Press PROG.
 b) Press ◀▶ to select LIST.
 Press ▲/▼ to select desired program.

Cancel a Timer Recording
 (Recording is in progress)
 Press POWER and then STOP within 10 seconds to cancel the Timer Recording. (The TIMER indicator goes out on Multi Function Display.)
 Press ADD/DLT.
 Press PROG to end the programming.

Notes
 • If you are using a Cable Box, VCR Timer Programming Channel (Step 2 above) must be set to the Cable Box output channel and your Cable Box must be manually set to the desired channel. The Cable Box must be left on.
 • If a power interruption occurs while programming the timer, the timer program(s) may be canceled. If "TIMER PROGRAMS WERE LOST DUE TO POWER INTERRUPTION" appears on-screen, please re-enter the timer programs.

Front View of the VCR
 Model PV-V4522 VCR shown.

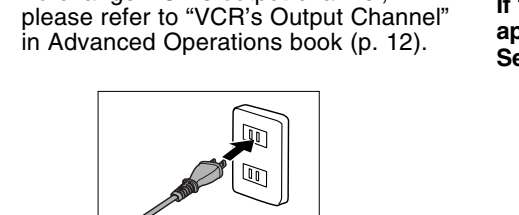

Location of Controls
 VCR (mode) (Enables VCR functions)
 POWER (Turns VCR off/on)
 VCR/TV (For TV or VCR mode)
 INPUT (For LINE or channel)
 SPEED (Changes tape speed)
 EJECT (Ejects tape)
 COMMERCIAL SKIP/ZERO SEARCH (Starts COMMERCIAL SKIP/Zero Search)
 ACTION (Displays menu)
 RECORD (Records a program, etc.)
 TAPE POSITION (Locates tape position)
 COUNTER RESET (Resets counter to zero)
 SAP/Hi-Fi (For Model PV-V4522 only) (Selects audio mode for play or record)
 VOLUME +/- (Adjusts TV volume)
 TV (mode) (Enables TV functions)
 DISPLAY (Displays VCR status)
 NUMBER Keys (Selects channel directly)
 ADD/DELETE (Adds or deletes a channel)
 SEARCH/ENTER (Set search system/Tunes TV channel)
 PLAY (Plays a tape/FAST FORWARD/SEARCH (Fast forwards tape/forward visual search)
 REWIND/SEARCH (Rewinds tape/ reverse visual search)
 STOP (Stops tape)
 ◀▶▶▶ Remote keys (PLAY, STOP, REW, and FF function as ▶▶▶▶ operation keys when menus are displayed)
 PROGRAM (Displays Timer Program screen)
 PAUSE/SLOW (Displays still, frame by frame, or slow motion picture)
 TRACKING (Selects channel/ reduces picture noise during Play and Slow mode)


EJECT button: Press to eject tape. EJECT is not available during recording.

Important: If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.


Important: If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

Connections / Initial Setup (Ready to Play)


Connecting
For ANT./Cable → VCR → TV
 1. Connect cable from Antenna/Cable to VCR's IN FROM ANT. jack.
 2. Connect VCR's OUT TO TV jack to TV's ANT. IN jack with included RF Cable accessory.

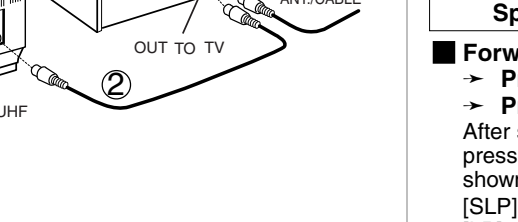


For DSS/Cable Box → VCR → TV
 1. Connect your cable box's OUT jack to the VCR's IN FROM ANT. jack with an RF cable.
 2. Connect VCR's OUT TO TV jack to TV's ANT. IN jack with included RF Cable accessory.

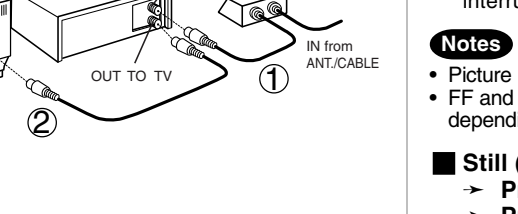

Initial Setup (Ready to Play)
 1. Turn TV on and tune to channel 3.
 2. Plug VCR Power Cord into AC wall outlet. VCR comes on and auto channel and clock set starts.
 3. Settings are made automatically. When setup is done, this screen appears.

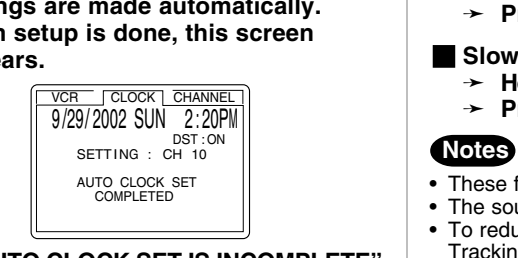

Manual Clock Set
 If Auto Clock Set was incomplete.
 1. Press ACTION* on remote to display CLOCK menu.
 2. Press ▲/▼ to select the month and ► to set. In the same manner, select and set the date, year, time, and DST (Daylight Saving Time).
 3. Press ACTION to start clock and exit.

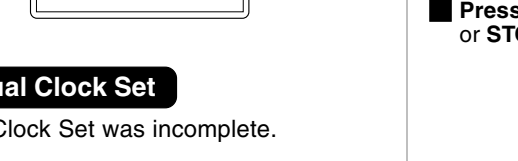


WARNING
 Over tightening "Nut type" RF coaxial cables may damage jacks. Finger tighten only.

Plugging the AC Power Plug into an AC outlet
 Plug the VCR power cord into an AC wall outlet. The VCR will power on and the auto channel and clock set will start.

Plugging the AC Power Plug into an AC outlet
 Plug the VCR power cord into an AC wall outlet. The VCR will power on and the auto channel and clock set will start.

Playback / Record on a Tape

Playback a Tape
 1. Insert a tape.
 • Loose or peeling labels may cause tape jam.
 2. Press PLAY to play tape.
 • If tape has no rec. tab (p. 3), auto play begins.

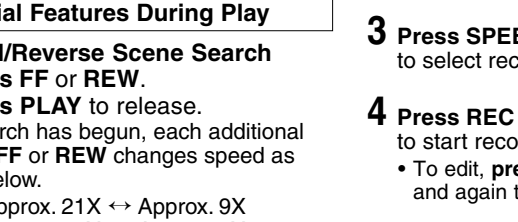

Record on a Tape
 1. Insert a tape with a record tab (p. 3).
 2. Press CH ▲/▼ or NUMBER keys to select the channel.
 • To select "LINE" input, see p. 9 of "Advanced Operations" book.
 • If recording from a channel over 100, first press 100 key then the other 2 digits.
 3. Press SPEED to select record speed (p. 3).
 4. Press REC to start recording.
 • To edit, press PAUSE/SLOW to pause, and again to resume recording.
 5. Press STOP to stop recording.

Special Features During Play
 ■ Forward/Reverse Scene Search
 → Press FF or REW.
 → Press PLAY to release.
 After search has begun, each additional press of FF or REW changes speed as shown below.
 [SLP] : Approx. 21X ↔ Approx. 9X
 [LP] : Approx. 9X ↔ Approx. 7X
 [SP] : Approx. 7X ↔ Approx. 3X
 If at 21X, 9X, or 7X speed the picture is interrupted, change speed to 9X, 7X, or 3X.
 ■ One Touch Recording (record in progress)
 Press REC repeatedly to set length as follows:
 30 min. → 1 hr. → 1:30 → 2:00 → 3:00 → 4:00 → exit.
 The VCR shuts off at the length set.
 ■ Record one station, watch another Press VCR/TV ("VCR" goes out on Multi Function Display), → select channels on TV (recording continues).
 ■ Select channels on VCR (in STOP or PAUSE mode) Press VCR/TV ("VCR" lights up on Multi Function Display), → select channels on VCR.

Notes
 • Picture interruption may occur with some TVs.
 • FF and REW search speed may vary depending on current tape position.
 ■ Still (Freeze) Picture
 → Press PAUSE/SLOW.
 → Press PLAY to release.
 ■ Frame by Frame Picture
 → Press PAUSE/SLOW in Still mode.
 → Press PLAY to release.
 ■ Slow Motion Picture
 → Hold down PAUSE/SLOW in Still mode.
 → Press PLAY to release.

Notes
 • These features work best in SP or SLP mode.
 • The sound will be muted.
 • To reduce picture noise, see "Manual Tracking Control" on p. 3.
 • After VCR is in Still or Slow mode 3 minutes, it auto switches to Stop mode to protect the tape and the video heads.

3 Press STOP to stop tape.
 ■ Press REW or FF in Stop mode to Rewind or Fast Forward tape.
 ■ Press EJECT on remote, or STOP/EJECT on VCR to eject tape.

Auto Operation Functions
 ■ Auto Play
 Insert a tape → Power comes on → Play starts if there is no record tab (see p. 3).
 ■ Auto Rewind
 Play → Tape end → Rewind
 Fast Forward → Tape end → Rewind
 ■ Play Auto Eject
 (Repeat Play must be off)
 Play → Tape end → Rewind → Tape ejects if there is no record tab


Important notes when using DSS receiver
 • When recording programs via DSS receiver, DSS receiver must be left on.
 • When recording programs via an antenna or cable, DSS receiver must be turned off.

Important: If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

Important: If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

Timer Recording

Timer Recording
 1) Press PROG*.
 2) Press ▼ to display program screen.
 3) Press ▲ to select DATE, press ▲/▼ to select: 1-31= one time, or DAILY= MON- FRI, or WEEKLY= same time each week and press ►.
 4) Press REC to start recording. Press PAUSE/SLOW to pause, and again to resume recording.
 Press PROG to end programming.
 To Enter More Programs Press ▲/▼ to select and press ► to set an unused program. Then repeat step 2. Or, press PROG to exit.

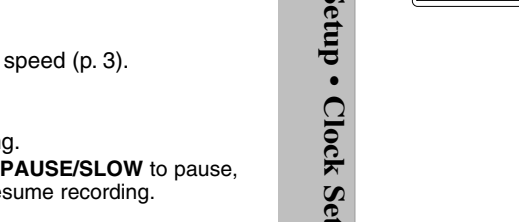


Review, Replace, or Clear Program
 (Recording is not in progress)
 a) Press PROG.
 b) Press ◀▶ to select LIST.
 Press ▲/▼ to select desired program.

Cancel a Timer Recording
 (Recording is in progress)
 Press POWER and then STOP within 10 seconds to cancel the Timer Recording. (The TIMER indicator goes out on Multi Function Display.)
 Press ADD/DLT.
 Press PROG to end the programming.

Notes
 • If you are using a Cable Box, VCR Timer Programming Channel (Step 2 above) must be set to the Cable Box output channel and your Cable Box must be manually set to the desired channel. The Cable Box must be left on.
 • If a power interruption occurs while programming the timer, the timer program(s) may be canceled. If "TIMER PROGRAMS WERE LOST DUE TO POWER INTERRUPTION" appears on-screen, please re-enter the timer programs.

Front View of the VCR
 Model PV-V4522 VCR shown.

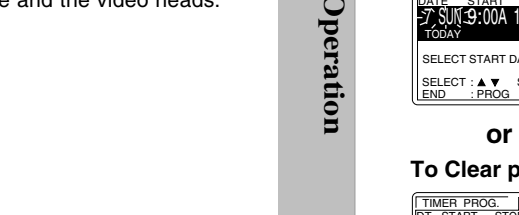

Location of Controls
 VCR (mode) (Enables VCR functions)
 POWER (Turns VCR off/on)
 VCR/TV (For TV or VCR mode)
 INPUT (For LINE or channel)
 SPEED (Changes tape speed)
 EJECT (Ejects tape)
 COMMERCIAL SKIP/ZERO SEARCH (Starts COMMERCIAL SKIP/Zero Search)
 ACTION (Displays menu)
 RECORD (Records a program, etc.)
 TAPE POSITION (Locates tape position)
 COUNTER RESET (Resets counter to zero)
 SAP/Hi-Fi (For Model PV-V4522 only) (Selects audio mode for play or record)
 VOLUME +/- (Adjusts TV volume)
 TV (mode) (Enables TV functions)
 DISPLAY (Displays VCR status)
 NUMBER Keys (Selects channel directly)
 ADD/DELETE (Adds or deletes a channel)
 SEARCH/ENTER (Set search system/Tunes TV channel)
 PLAY (Plays a tape/FAST FORWARD/SEARCH (Fast forwards tape/forward visual search)
 REWIND/SEARCH (Rewinds tape/ reverse visual search)
 STOP (Stops tape)
 ◀▶▶▶ Remote keys (PLAY, STOP, REW, and FF function as ▶▶▶▶ operation keys when menus are displayed)
 PROGRAM (Displays Timer Program screen)
 PAUSE/SLOW (Displays still, frame by frame, or slow motion picture)
 TRACKING (Selects channel/ reduces picture noise during Play and Slow mode)


EJECT button: Press to eject tape. EJECT is not available during recording.

Important: If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.


Important: If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

Connections / Initial Setup (Ready to Play)


Connecting
For ANT./Cable → VCR → TV
 1. Connect cable from Antenna/Cable to VCR's IN FROM ANT. jack.
 2. Connect VCR's OUT TO TV jack to TV's ANT. IN jack with included RF Cable accessory.

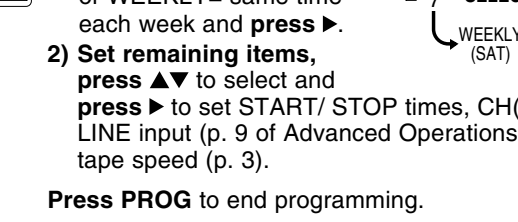

For DSS/Cable Box → VCR → TV
 1. Connect your cable box's OUT jack to the VCR's IN FROM ANT. jack with an RF cable.
 2. Connect VCR's OUT TO TV jack to TV's ANT. IN jack with included RF Cable accessory.

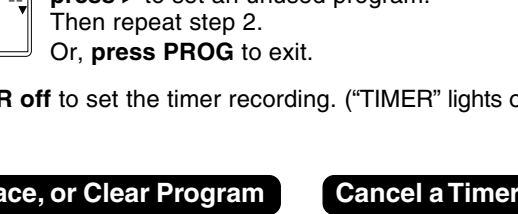

Initial Setup (Ready to Play)
 1. Turn TV on and tune to channel 3.
 2. Plug VCR Power Cord into AC wall outlet. VCR comes on and auto channel and clock set starts.
 3. Settings are made automatically. When setup is done, this screen appears.

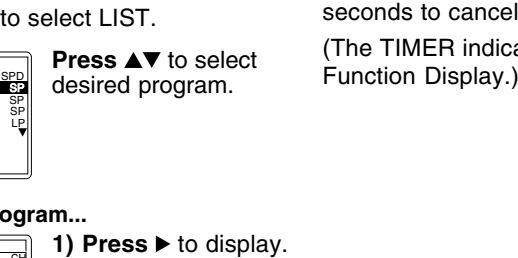

Manual Clock Set
 If Auto Clock Set was incomplete.
 1. Press ACTION* on remote to display CLOCK menu.
 2. Press ▲/▼ to select the month and ► to set. In the same manner, select and set the date, year, time, and DST (Daylight Saving Time).
 3. Press ACTION to start clock and exit.