




Omnivision VHS

# Panasonic

## Video Cassette Recorder Operating Instructions

Model No. **PV-V4600**

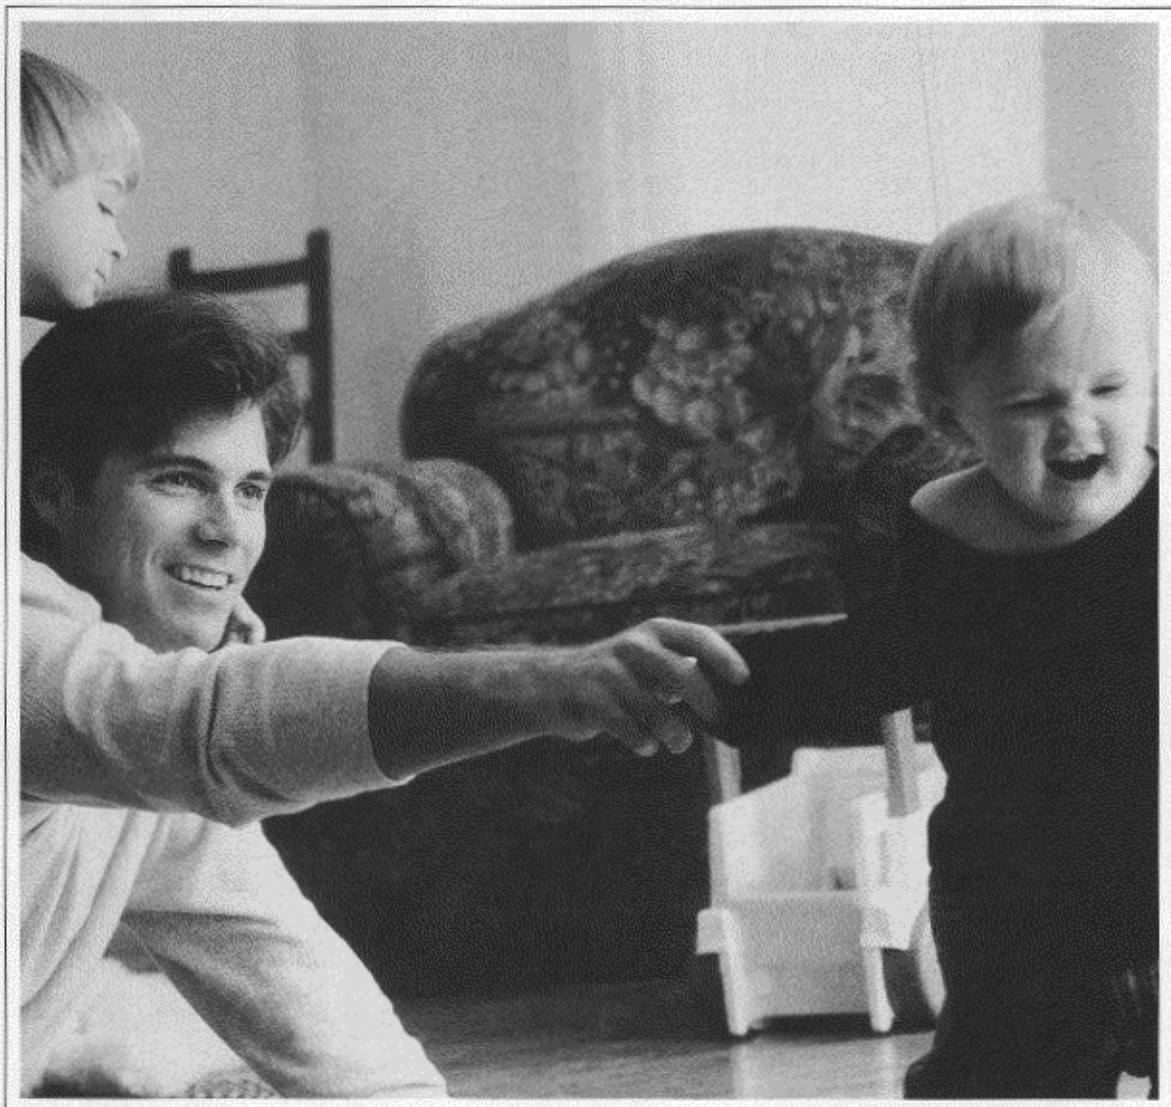

Basic Operation

Advanced Operation

 
 
For Your Information

Please read these instructions carefully before attempting to connect, operate or adjust this product. Please save this manual.

Spanish Quick Use Guide is included. (Guía para rápida consulta en español está incluida.)

Quick Use Guide is on the back cover.

As an ENERGY STAR® Partner, Matsushita Electric Corporation of America has determined that this product or product model meets the ENERGY STAR® guidelines for energy efficiency.

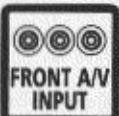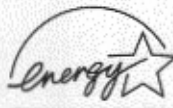

For assistance, call 1-800-211-PANA(7262).

LSQT0244A

# Important Safeguards and Precautions

**FOR YOUR SAFETY, READ AND RETAIN ALL SAFETY AND OPERATING INSTRUCTIONS. HEED ALL WARNINGS IN THE MANUAL AND ON THE UNIT**

## INSTALLATION

### 1 POWER SOURCE CAUTION

Operate only from a power source indicated on the unit or in this manual. If necessary, have your Electric Utility Service Company or Video Products Dealer verify the power source in your home.

### 2 POLARIZED OR GROUNDING PLUG

As a safety feature, this Video product comes with either a polarized power cord plug (one blade is wider than the other), or a three-wire grounding type plug.

### POLARIZED PLUG CAUTION:

This plug will only fit into an outlet one way. If you cannot fully insert the plug, try reversing it. If it still will not fit, have an electrician install the proper wall outlet. Do not defeat the safety feature by tampering with the plug.

### GROUNDING PLUG CAUTION:

This plug will only fit into a three-hole grounding outlet. If necessary, have an electrician install the proper outlet. Do not defeat the safety feature by tampering with the plug.

### 3 POWER CORD

Make sure power cords are routed so that they are not likely to have anything rest on them, roll over them, or be in the way of walking traffic. If an extension cord is used, make sure it also has either a polarized or grounded plug and that the cords can be securely connected. Frayed cords, damaged plugs, and damaged or cracked wire insulation are hazardous and should be replaced by a qualified service technician. Overloaded outlets and extension cords are fire hazards and should be avoided.

### 4 DO NOT BLOCK VENTILATION HOLES

Ventilation openings in the cabinet release heat generated during operation. If they are blocked, heat build-up inside the unit can cause failures that may result in a fire hazard or heat damage to cassettes.

For protection, follow these rules:

- Never cover ventilation slots or the unit while in use, or operate the unit when placed on a bed, sofa, rug, or other soft surface.
- Avoid built-in installation, such as a book case or rack, unless proper ventilation is provided.

### 5 AVOID EXTREMELY HOT LOCATIONS OR SUDDEN TEMPERATURE CHANGES

Do not place the unit over or near any kind of heater or regulator, in direct sunlight, inside a closed vehicle, etc.. Do not move the unit suddenly between areas of extreme temperature variation. If the unit is suddenly moved from a cold place to a warm place, moisture may condense in the unit and on the tape.

### 6 TO AVOID PERSONAL INJURY


- Do not place unsecured equipment on a sloping surface.
- Do not place this unit on any support that is not firm, level, and adequately strong. The unit could fall causing serious injury to a child or adult and damage to the unit.
- An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- Carefully follow all operating instructions and use the manufacturer's recommended accessories when operating this unit or connecting it to any other equipment.



## OUTDOOR ANTENNA INSTALLATION

### 1 SAFE ANTENNA AND CABLE CONNECTION

If an outside antenna or cable system is connected to the equipment, be sure the antenna or cable system is grounded so as to provide some protection against built up static charges and voltage surges. Section 810 of the National Electrical Code, ANSI/NFPA 70 (in Canada, part 1 of the Canadian Electrical Code) provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements for the grounding electrode.

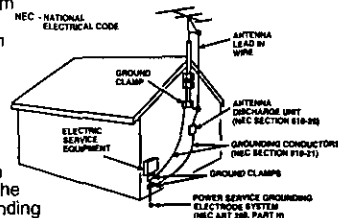

### 2 KEEP ANTENNA CLEAR OF HIGH VOLTAGE POWER LINES OR CIRCUITS

An outside antenna system should be located well away from power lines, electric light or power circuits and where it will never come into contact with these power sources if it should happen to fall. When installing an outside antenna, extreme care should be taken to avoid touching power lines, circuits or other power sources as this could be fatal. Because of the hazards involved, antenna installation should be left to a professional.

## USING THE VIDEO UNIT

If the unit has been in storage or moved to a new location, refer first to the INSTALLATION section of these safeguards.

### 1 KEEP THIS VIDEO UNIT AWAY FROM WATER OR MOISTURE OF ANY KIND.

2 IF EQUIPMENT IS EXPOSED TO RAIN, MOISTURE, OR STRONG IMPACT, unplug the unit and have it inspected by a qualified service technician before use.

### 3 DURING AN ELECTRICAL STORM

During a lightning storm, whether indoors or outdoors, or before leaving the unit unused for extended periods of time, disconnect all equipment from the power source as well as the antenna and cable system.

### 4 WHEN THE UNIT IS PLUGGED IN

- Never expose the unit to rain or water. DO NOT OPERATE if liquid has been spilled into the unit. Immediately unplug the unit, and have it inspected by a service technician. Fire and shock hazards can result from electrical shorts caused by liquid contact inside.
- Never drop or push any object through openings in the unit. Some internal parts carry hazardous voltages and contact can cause electric shock or fire hazard.
- Avoid placing the unit directly above or below your TV set as this may cause electrical interference. Keep all magnets away from electronic equipment.

### 5 USING ACCESSORIES

Use only accessories recommended by the manufacturer to avoid risk of fire, shock, or other hazards.

### 6 CLEANING THE UNIT

Unplug the unit. Then, use a clean, dry, chemically untreated cloth to gently remove dust or debris. DO NOT USE cleaning fluids, aerosols, or forced air that could over-spray, or seep into the unit and cause electrical shock. Any substance such as wax, adhesive tape, etc. may mar the cabinet surface. Exposure to greasy, humid, or dusty areas may adversely affect internal parts.

## SERVICE

### 1 DO NOT SERVICE THIS PRODUCT YOURSELF

If, after carefully following the detailed operating instructions, this Video product does not operate properly, do not attempt to open or remove covers, or make any adjustments not described in the manual. Unplug the unit and contact a qualified service technician.

### 2 IF REPLACEMENT PARTS ARE REQUIRED

Make sure the service technician uses only parts specified by the manufacturer, or those having the same safety characteristics as the original parts. The use of unauthorized substitutes may result in fire, electric shock, or other hazards.

### 3 HAVE THE SERVICE TECHNICIAN PERFORM A SAFETY CHECK

After any service or repairs to the unit, request the service technician to conduct a thorough safety check as described in the manufacturer's service literature to insure that the video unit is in safe operating condition.

## Safety Precautions

**Warning:** To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**Attention:** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.



This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.



This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

# Table of Contents

Use  
Now!

Important Safeguards and Precautions .....	2
Accessories .....	4
Loading the Batteries .....	4
Basic Connections (Antenna, VCR, TV) .....	4, 5
One Time VCR Setup (Language, VCR Output Channel, Channel, Clock) ..	6, 7
Playback a Tape (Still picture, Frame by Frame picture, Slow Motion) .....	8
Record On a Tape .....	9
• One Touch Recording .....	9

Basic Operation

Enjoy  
more!

Advanced Connections (Cable/DSS) .....	10
Copying Your Tapes (Dubbing) .....	11
Timer Recording .....	12, 13
• Timer Recording .....	12
• Review, Replace or Clear Program Contents .....	13
Using VCR Buttons .....	12
Timer Recording Using VCR Plus+® System .....	14 ~ 17
• Choose your connection type ..	14
• VCR Plus+ System Channel Setup .....	16
• Cable Box Setup .....	15
• VCR Plus+ System Programming .....	17
Multi-Brand Control Feature .....	18, 19
Tape Operation (Search System) .....	20 ~ 23
• Program End Search .....	20
• Repeat Play .....	23
• Program Index Search, Index Scan ..	21
• Zero Search .....	23
• Auto Operation Functions .....	21
• Commercial Skip .....	23
• Direct Access .....	22
MTS Broadcast/ VHS Hi-Fi Stereo System .....	24, 25
• Stereo/SAP/Mono Broadcast ..	24
• Select Audio Mode .....	25
Special VCR Features .....	26 ~ 31
• Channel Caption .....	26, 27
• VCR Lock .....	30
• Time Stamp .....	28, 29
• Weak Signal Display ON/OFF ....	31
• Tape Position Display .....	30
• Auto Shut-Off .....	31
• Remote Warning ON/OFF .....	30
• Shuttle Variable Speed Search ..	31

Advanced Operation

Other  
Information!

Reset Language, Channels, Clock, VCR's Output Channel ...	32, 33
VCR & Cassette Information .....	34, 35
• Reset All VCR Memory Functions ...	34
• Head Cleaning .....	35
• DST (Daylight Saving Time) ....	34
• Built-in Head Cleaner .....	35
• Prevent Accidental Tape Erasure ..	34
• Cleaning the VCR .....	35
• Record/Playback Time .....	34
• Specifications .....	35
• Features for Quality .....	35
On Screen Displays (OSD) .....	36
• Function & Channel Display ....	36
• Blank Tape/ No Video Signal Indication .....	36
• VCR Status & Clock Display ...	36
• Warning and Instruction Displays ..	36
Before Requesting Service .....	37
Service Center List .....	38
Warranty .....	39
Spanish (Español) Quick Use Guide .....	40, 41
Location of Controls .....	42, 43
Quick Use Guide (Playback, Recording) .....	Back Cover

For Your Information

 
 
## Congratulations

on your purchase of one of the most sophisticated and reliable products on the market today. Used properly, it will bring you and your family years of enjoyment. Please fill in the information below. The serial number is on the tag located on the back of your VCR.

- Date of Purchase \_\_\_\_\_
- Dealer Purchased From \_\_\_\_\_
- Dealer Address \_\_\_\_\_
- Dealer Phone No. \_\_\_\_\_
- Model No. \_\_\_\_\_
- Serial No. \_\_\_\_\_

## Accessories

- Remote Control LSSQ0231
- Batteries 2 "AA"

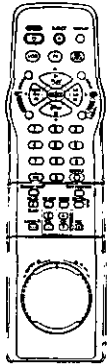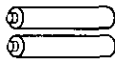


- RF Coaxial Cable VJAS0196



To order accessories, call toll free 1-800-332-5368.


## Loading the Batteries

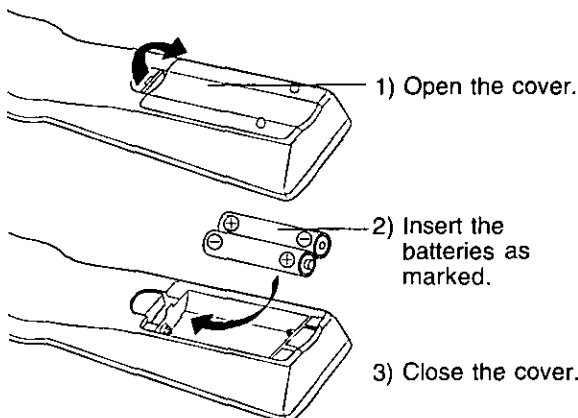

- Battery replacement caution**
- Do not mix old and new batteries.
- Do not mix alkaline with manganese batteries.

If your TV has AUDIO and VIDEO IN terminals, connect them to VCR for higher quality picture and sound. You can enjoy stereo sound even if your TV is not stereo by connecting a stereo amplifier to the VCR.

Connect VCR and TV with an AV Cable (not supplied) or a RF Coaxial Cable (supplied) as shown in the figure below.

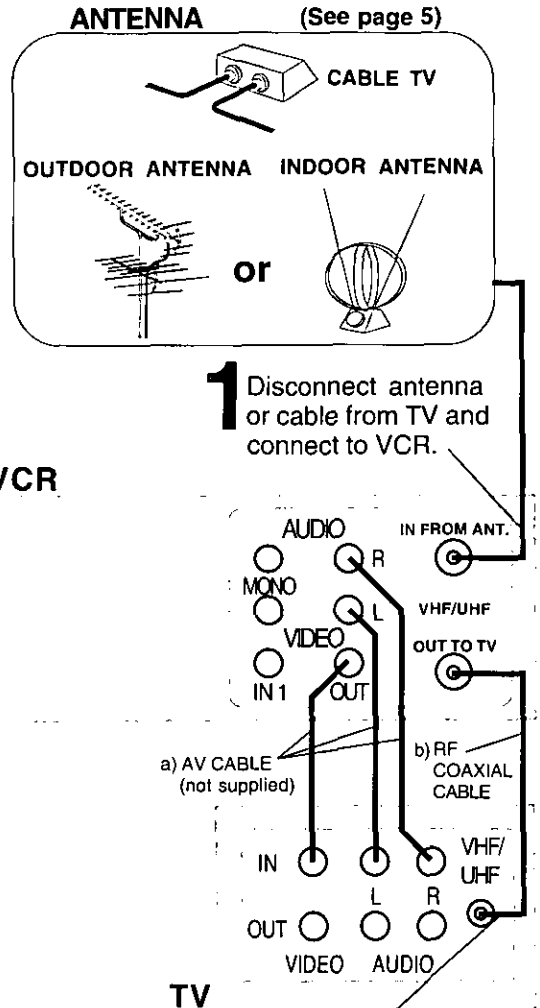

**2** Connect VCR to TV with RF Coaxial Cable.

### Notes


- 1) While connection b) (above) is sufficient, connection a) offers better sound and picture (especially with this model, you can enjoy Hi-Fi STEREO sound).
  - 2) For both connections a) and b) proceed as follows:
    - To use VCR : VCR Power on, set TV to VIDEO.
    - To watch TV : VCR Power off, select channel on.
  - 3) Set VCR Output to channel 3 or 4 (not an active station). (See page 6.)
- Use the L Audio OUT jack for proper sound reproduction when connecting to a monaural TV.

### WARNING


When using "Nut type" RF coaxial cables, tighten with fingers only. Overtightening may damage terminals.

# 1 Between ANT. and VCR


## ■ Case 1: Twin Lead Cable Only

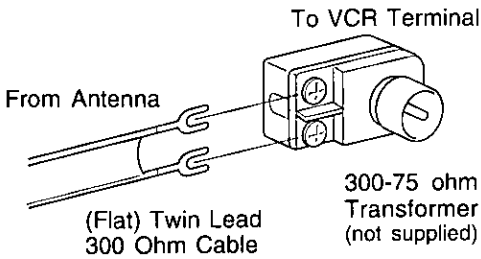

## ■ Case 2: Twin Lead & Coaxial Cables

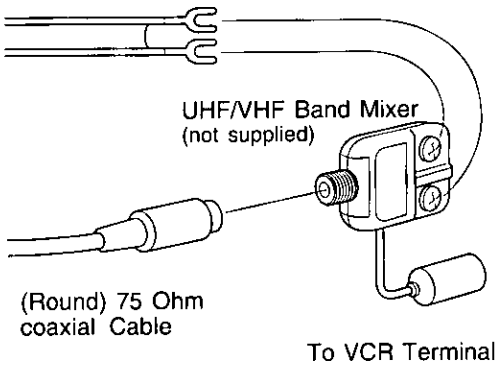


## ■ Case 3: Two Twin Lead Cables

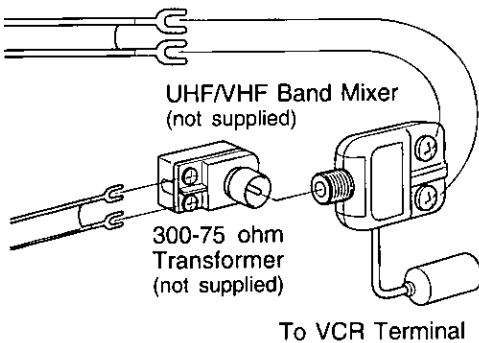


- If your TV has both post and plug-type VHF terminals, the post connection is recommended to minimize signal loss.

# 2 Between VCR and TV


## ■ Case 1: Screw & Plug Type Terminal

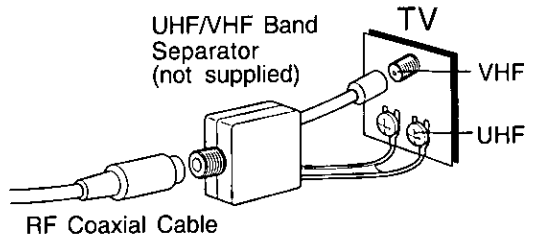


## ■ Case 2: Screw Type Terminal

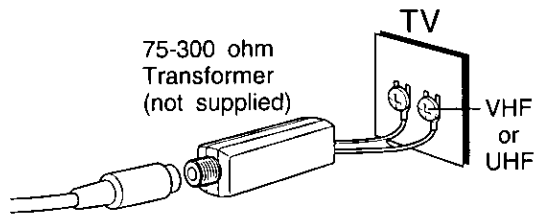

## ■ Case 3: Double Screw Type Terminal

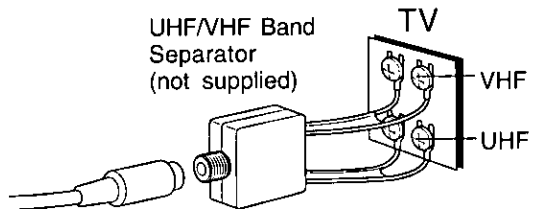

## ■ Case 4: Complex TV Terminal TERMINALS ON BACK OF TV SET

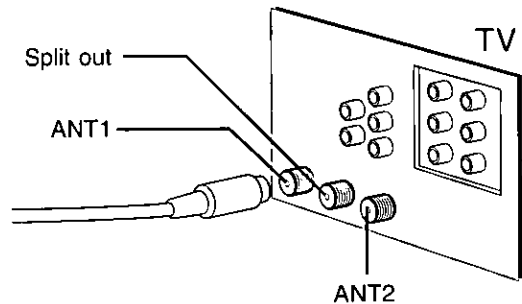

- Connect to one of the ANT terminals and select the same antenna number on the TV.



**Note to CABLE system installer:**  
This reminder is provided to call the CABLE system installer's attention to Article 820-40 of the NEC in USA (and to the Canadian Electrical Code in Canada) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

**FCC Warning:** Any unauthorized changes or modifications to this equipment would void the user's authority to operate.

# OneTime VCR Setup

  When VCR is turned on the first time, setup mode is entered automatically.

## Process of Setup

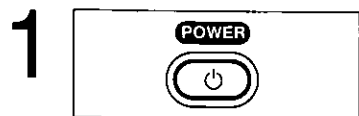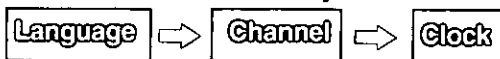

Turn the TV and VCR on. Press POWER\*.

Set TV Channel to CH 3.



- If using AV Cable connection, set TV to Video instead of channel. (See connection a) on page 4.)

**2**

### Display SELECT LANGUAGE.

This display appears for first time setup only.

#### Select the language.

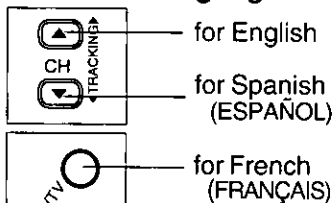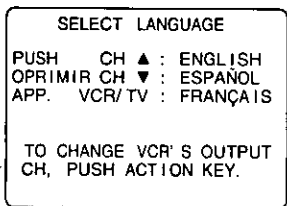

TO CHANGE VCR'S OUTPUT CH, PUSH ACTION KEY.

↓ Press ACTION

IF YOU PUSH ACTION KEY, VCR'S OUTPUT CH SWITCHES TO CH 4.

↓ Press ACTION

PLEASE TUNE YOUR TV TO CH 4.


After 3 seconds

#### When using connection b) (see page 4), tune TV to VCR's output channel.



If there is beat or noise on CH3, change VCR's output channel to CH4 by pressing ACTION twice.

- Always tune TV to this channel to monitor the VCR.
- If you used audio/video jack connection, tune the TV to its video input.
- If wrong language is set, do "Reset All VCR Memory Functions" steps on page 34.

**3**

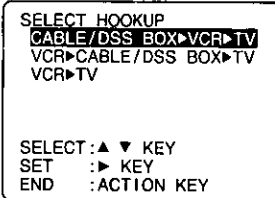


#### Select hookup.

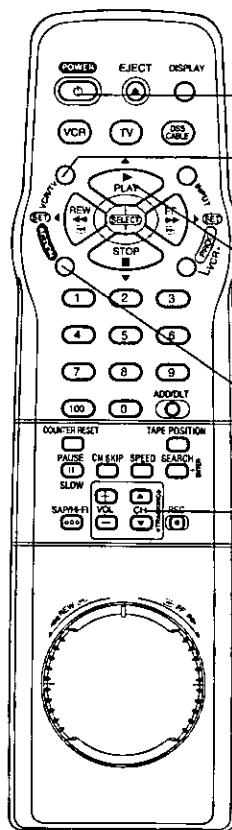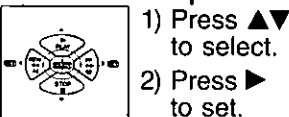 


- If you selected "CABLE/ DSS BOX ► VCR ► TV," continue with step 4 and only the cable box output channel will be placed in memory. If not, go to step 6.

**4**

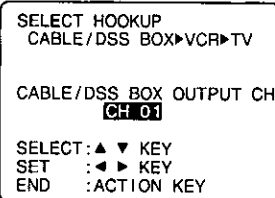

#### Select cable box or DSS receiver output channel.

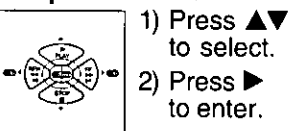

- If necessary, refer to cable box manual.
- If you used Audio/ Video jack connection to cable box, set "VIDEO OUT".

### **5** Turn on cable box and set it to PBS channel in your time zone.

- If you use DSS receiver, it must be turned off.

**6**

**\*Important:** If the remote control POWER, ACTION, PROG/VCR+, CH▲/▼, CH▲/▼, NUMBERED keys, INPUT, SEARCH or ADD/HLT button does not work when pressed, press the VCR button on the remote and try the button again.

# 6


## CHANNEL/CLOCK AUTO SET

CONNECT ANTENNA CABLE AND IF YOU USE A CABLE BOX, TUNE IT TO YOUR LOCAL PBS CH THEN...  
PLEASE PUSH CH UP KEY

CH AUTO SET PROCEEDING

AUTO CLOCK SET PROCEEDING

## Start Channel Auto Set and Clock Auto Set.

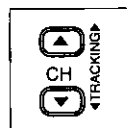


Press CH ▲.

## IMPORTANT NOTE FOR AUTO CLOCK SET

- Auto clock set is performed the first time the VCR is turned off each day. If used, a cable box must be left on and tuned to the PBS channel at the time VCR power is turned off if you want auto clock set to be done.
- If used, a DSS receiver must be turned off for auto clock set.
- If Cable Box or DSS receiver is connected to VCR via Audio/Video jacks, an RF coaxial cable must also be connected for auto clock set and channel auto set features to work.

**Case 1** (Setup completed)

1/ 4/2000 TUE 12:00PM  
DST: ON  
SETTING : CH 02  
AUTO CLOCK SET COMPLETED  
END : PUSH CH UP KEY

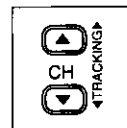


Press CH ▲ to exit.

**Case 2** (Setup incomplete)


AUTO CLOCK SET IS INCOMPLETE  
PUSH ACTION TO SET CLOCK

## Clock Setup incomplete. Set the clock manually.

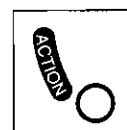

1) Press ACTION.

SET CLOCK  
1/ 4/2000 TUE 12:00PM  
DST: ON  
SELECT MONTH  
SELECT: ▲ ▼ KEY  
SET : ► KEY  
END : ACTION KEY

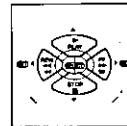

2) Press ▲▼ to select month.  
3) Press ► to set.

• Likewise, set date, year, time, DST (Daylight Saving Time).


**To Make Corrections,** repeatedly press ◀▶ to move to error, then correct.

SET CLOCK  
1/ 4/2000 TUE 12:00PM  
DST: ON  
SET COMPLETED  
SET : ◀▶ KEY  
START : ACTION KEY



4) Press ACTION.  
(Clock starts.)  
• To exit this mode, press ACTION again.

• If your area observes DST (daylight saving time), but the time is incorrect; do the "Time Zone Adjust" steps on page 33.

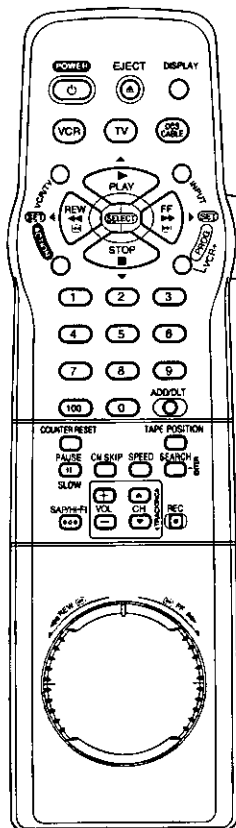

SELECT/SET

▲: PLAY  
▼: STOP  
◀: REW  
▶: FF

ACTION

CH ▲

## Notes

- VCR calendar is accurately maintained to Dec. 31, 2096 11:59PM.
- Channel auto set selects normal TV or Cable channels depending on your VCR hookup.
- To reset Language, Channels, Clock or VCR's Output Channel see pages 32 and 33.


## Using ▲▼◀▶ keys

You can also operate the menu screen using VCR buttons.

When menu screens are displayed, the PLAY, STOP, REWIND, and FF buttons on the VCR and remote function as ▲▼◀▶ only with no tape inserted.

To display menu using VCR buttons, press CH ▲ and CH ▼ together.

To exit the menu, repeat above.

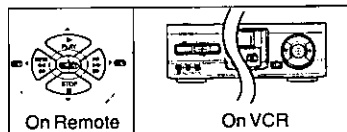


▲: PLAY ◀: REW  
▼: STOP ▶: FF

# Playback a Tape




## Check list before you begin.

- All connections are made.
- TV and VCR are plugged in.
- TV is turned on and tuned to CH3, 4 or Video.
- Remote is in VCR mode.

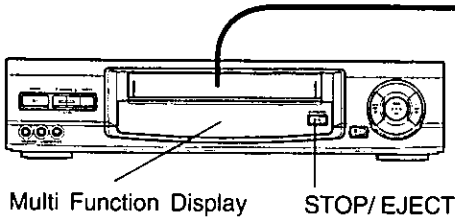

1

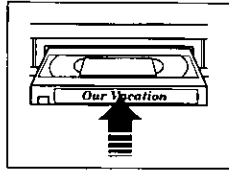

## Insert a cassette.


- VCR power comes on and "VCR" appears on Multi Function Display.

2



## Press PLAY.

- Or, if cassette has no record tab (see page 34), auto playback begins.

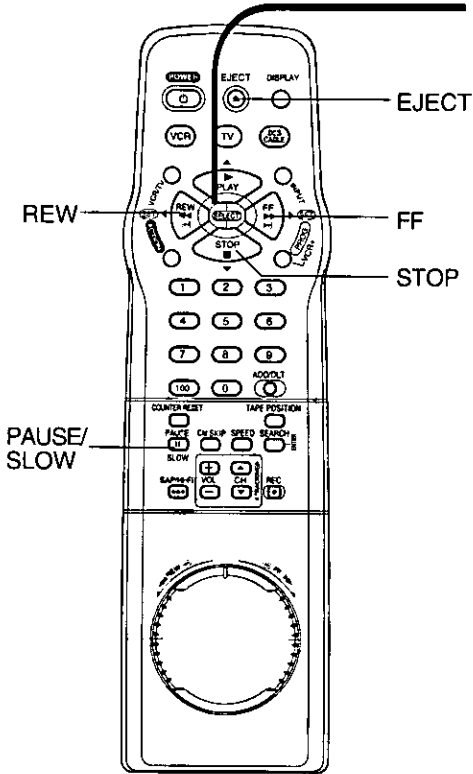

- To Find a Particular Scene
  - Forward Search --> Press FF. (To release, press PLAY or FF.)
  - Reverse Search --> Press REW. (To release, press PLAY or REW.)
- For Still (Freeze) picture --> Press PAUSE/SLOW. (To release, press PLAY.)
- For Frame by Frame picture --> Press PAUSE/SLOW in Still mode. (To release, press PLAY.)
- For Slow Motion --> Press and hold PAUSE/SLOW in Still mode. (To release, press PLAY.)


### Notes

- These features work best in SP or SLP mode.
- The sound will be muted.
- To reduce picture noise, see "Manual Tracking Control" on page 35.
- After the VCR is in Still or Slow mode for 3 minutes, it will switch to Stop mode automatically to protect the tape and the video head.

- To stop --> Press STOP.
- To rewind tape --> Press REW in Stop mode.
- To fast forward tape --> Press FF in Stop mode.
- To eject tape --> Press EJECT on the remote or STOP/ EJECT on the VCR.

### Note


- To prevent tape jam  
Inspect your cassette tapes and remove any loose or peeling labels.

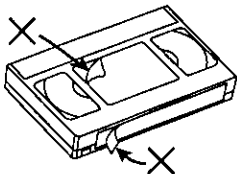

### Playback using VCR controls

1 Insert a cassette.

 2 Press PLAY.

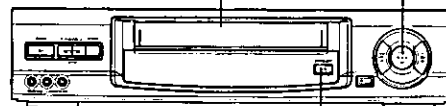

- Press to stop and/ or eject tape.



# Record On a Tape


**Important:** If the remote control POWER, ACTION, PROG/VCR+, CH ▲/▼, NUMBERED keys, INPUT, SEARCH or ADD/HLT button does not work when pressed, press the VCR button on the remote and try the button again.

**Check list before you begin.**

- All connections are made.
- TV is turned on and tuned to CH3, 4 or Video.
- Cassette record tab is in place.
- Remote in VCR mode.



Multi Function Display

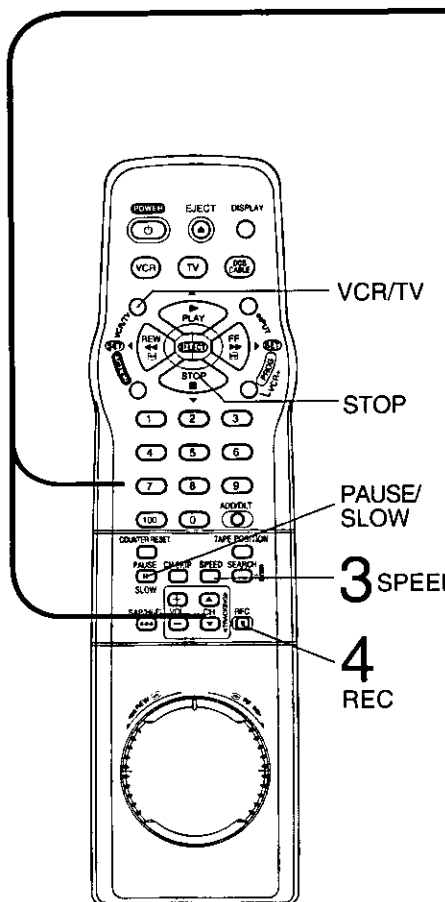


VCR/TV

STOP

PAUSE/  
SLOW


3 SPEED

4 REC

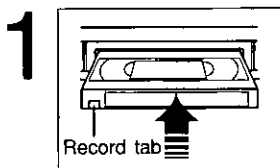

**Insert a cassette.**


- VCR power comes on and "VCR" appears on Multi Function Display.

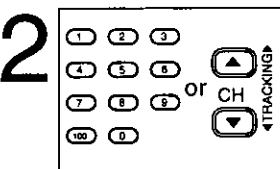

**Select Channel.**

Press CH ▲/▼\* or NUMBERED keys.

 - To select "LINE," see page 11.
- To select channels over 100, first press 100 key, then enter remaining two digits.

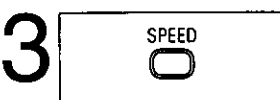


**Select Recording speed.**

(See page 34.)

Press SPEED.

 - SP = Standard Play
- LP = Long Play
- SLP = Super Long Play
- Selected speed is displayed on TV screen and Multi Function Display.

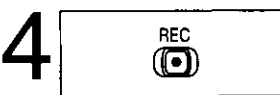

**Start Recording.**

Press REC.

 
- To edit out unwanted portions, press PAUSE/SLOW to pause and to resume recording.

■ **To stop -->** Press STOP

■ **One Touch Recording**

Press REC repeatedly to set the recording length (30 min. ~ 4 hours).

- The VCR turns itself off at a preset time.

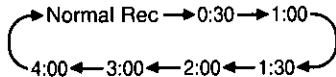

■ **Record One Program While Watching Another**

Press VCR/TV-> "VCR" disappears on Multi Function Display --> Select Channel at the TV.

■ **Selecting Channel at the VCR**

Press VCR/TV-> "VCR" appears on Multi Function Display --> Select Channel at the VCR (applies to connection b) only, see page 4).

**Note**

After the VCR has been in Pause mode for 5 minutes, it will stop automatically to protect the tape and the video head.

**Record using VCR controls**

This video recorder, equipped with the HQ (High Quality) System, is compatible with existing VHS equipment. Only use those tapes with the **VHS** mark. It is recommended that only cassette tapes that have been tested and inspected for use in 2, 4, 6, and 8 hour VCR machines be used.


# Advanced Connections

Be sure to tune TV to VCR output channel. (The same one you set on screen of TV: CH3 or CH4.)

All connections on these pages are made with 75 Ohm coaxial cables.

## CATV Connection

### ■ With a Cable Box (Cable Box → VCR)

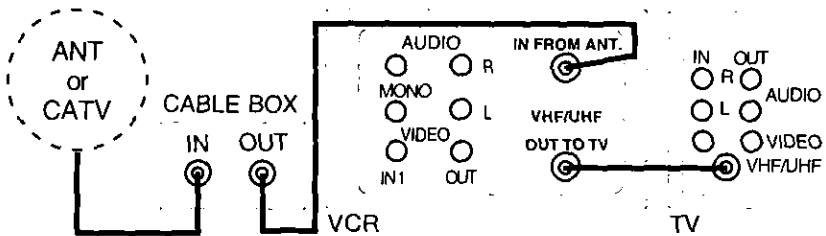


### You Can

- record or view any (including scrambled) channel.
- use VCR Remote Control to select channels using Multi-brand control feature.

### You Cannot

- view channel other than the one selected for any type of recording.
- do a Timer recording of a channel unless you select it at the cable box.


### ■ With a Cable Box (VCR → Cable Box)

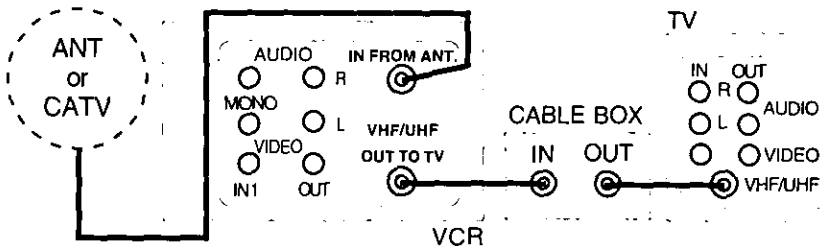

- view any (including scrambled) channel.
- use VCR Remote Control to select channels without using Multi-brand control feature.

- record scrambled channels.


### ■ With Two Cable Boxes

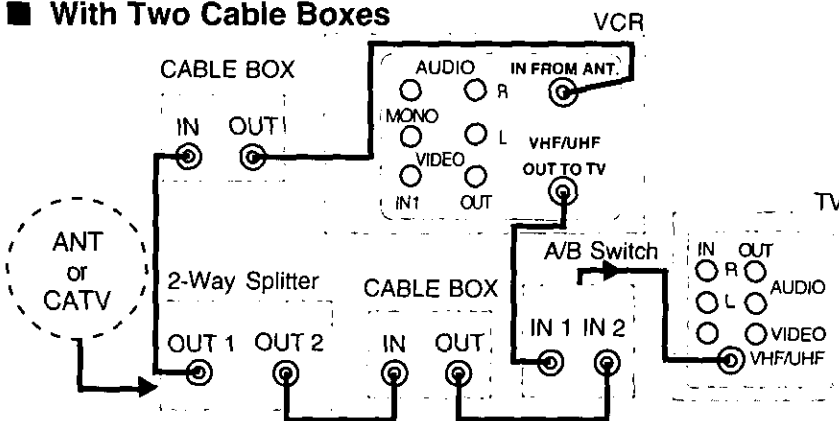

- record and view both scrambled and unscrambled channels if additional equipment is added. This connection requires: two converter boxes, an A/B switch, and a 2-way splitter.

- view channel other than the one selected for any type of recording.
- do a Timer recording of a channel unless you select it at the cable box.

## DSS Connection

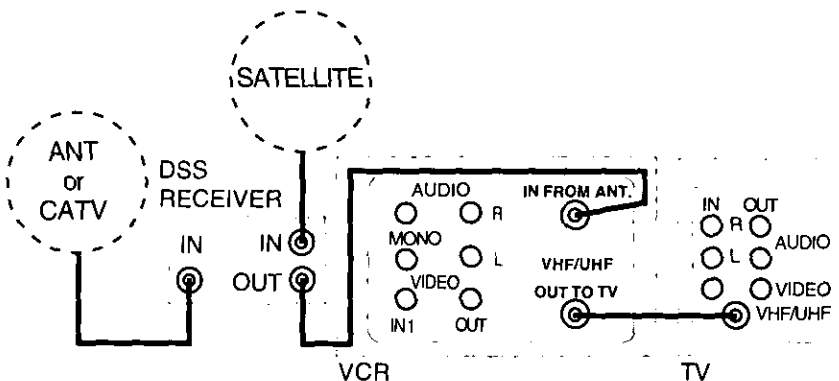

- record and view any (including scrambled) channel.
- use your VCR Remote Control to select channels using Multi-brand control feature.

- view channel other than the one selected for any type of recording.
- do a Timer recording of a channel unless you select it at the DSS box.

NOTE:  
DSS receiver must be turned off to view cable box or antenna programs.


# Copying Your Tapes (Dubbing)

Connections you'll need to make.

Playing (Source) VCR





Recording (Editing) VCR

TV for Monitoring

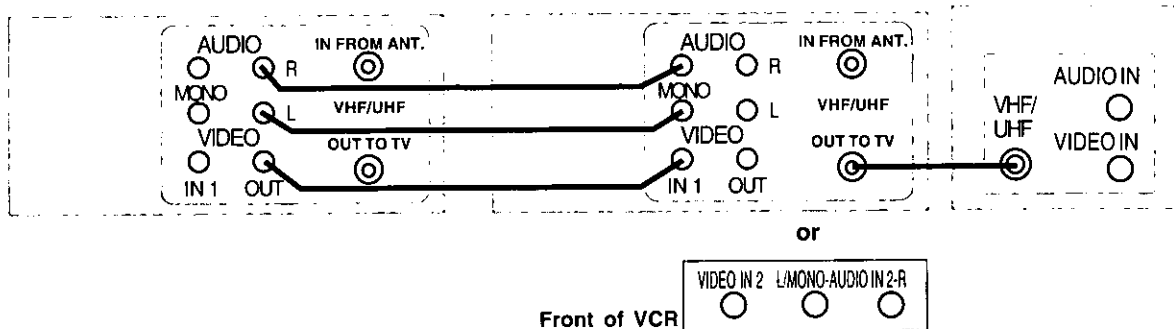

## Playing (Source) VCR
   
## Recording (Editing) VCR

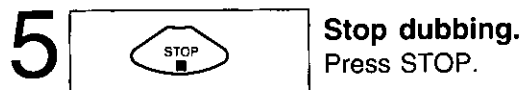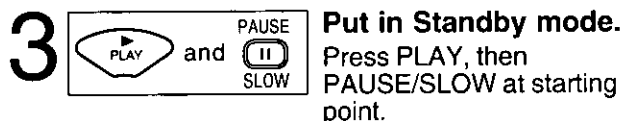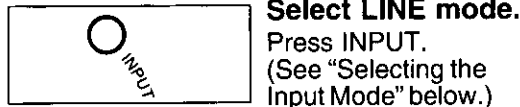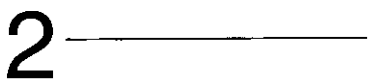


## ■ To Monitor Dubbing on Your TV

- 1 Turn your TV on and tune to the Recording VCR channel (CH3 or CH4).
- 2 Set the VCR/ TV Selector on the Recording VCR to "VCR."

**Note** Dubbing tapes protected with Copy Guard will have poor quality results.

## ■ Selecting the Input Mode

 - Method 1: Press INPUT.  
Channel Number <--> LINE1 <--> LINE2
- Method 2: Press CH▲/▼. Display will change as below.

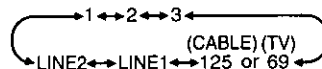

- "L1" or "L2" lights on Multi-Function Display (about 4 sec.) when LINE1 or LINE2 is selected.
- LINE1: For rear audio/video connection.
- LINE2: For front audio/video connection.

**Caution:** Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

Advanced Connection/ Copying Your Tapes (Dubbing)

# Timer Recording


You can set up to 8 programs to be recorded while you are away.




**Display SET PROGRAM.**  
Press PROG/VCR+.\*

You can also display Program screen from Menu.

- 1) Press ACTION to display Menu.
- You can also set up using VCR buttons. See the bottom right of this page.
- 2) Press ▲▼ and ► to select and set SET UP FEATURE.
- 3) Press ► to display Program screen.
- 4) Go to step 3.

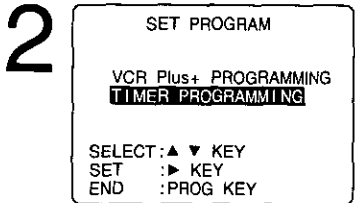


**Display Program screen.**

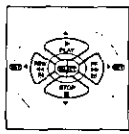


- 1) Press ▲▼ to select TIMER PROGRAMMING.
- 2) Press ► to display.
- If a program is already in memory, press ▲▼ and ► to select an unused program number.

• You may not use the VCR buttons on "SET PROGRAM" screen.

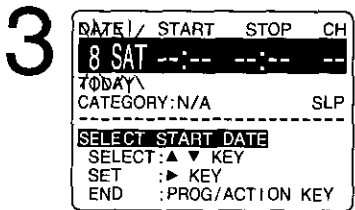

**Set the recording DATE.**

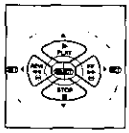


- 1) Press ▲▼ to select.
- 2) Press ► or ◀ to set.
- 1-31 = One time
- DAILY = MON-FRI
- WEEKLY = Same time once a week

**Example**


Today — { 8-9.....31 — 1-2.....6 } Repeat step 3 to set: start time, stop time Channel (or LINE for outside source), Category\*\*, tape speed (SP, LP, SLP).

WEEKLY (SAT) ..... WEEKLY (MON) ..... WEEKLY (SUN)

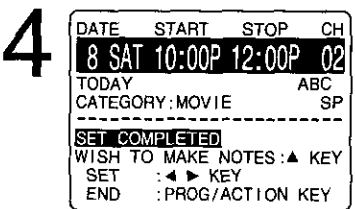

**Make the notes.**

- If not wanted, go to step 5.

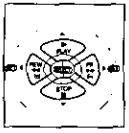


- 1) Press ▲ to begin.
- 2) Press ▲▼ to select.
- 3) Press ► to set.

• Characters will change in the following order.

→ A ↔ B ↔ C ..... Z ↔ BLANK ↔ → & ←  
→ 9 ..... 2 ↔ 1 ↔ 0 ↔ / ↔ ! ←

- 4) Press PROG/VCR+ (or ACTION) to end.

Continued on the next page.

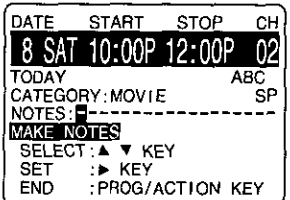


### Important notes when using a DSS receiver

- When recording programs via a DSS receiver, the DSS receiver must be left on.
- When recording programs via an antenna or cable, the DSS receiver must be turned off.

### ✓ Check list before you begin.

- All connections are made. (See pages 4-5.)
- TV and VCR are plugged in and turned on.
- VCR/TV selector is set to "VCR."
- Clock is set to correct time.
- Record tab in place. (See page 34.)
- Remote in VCR mode.

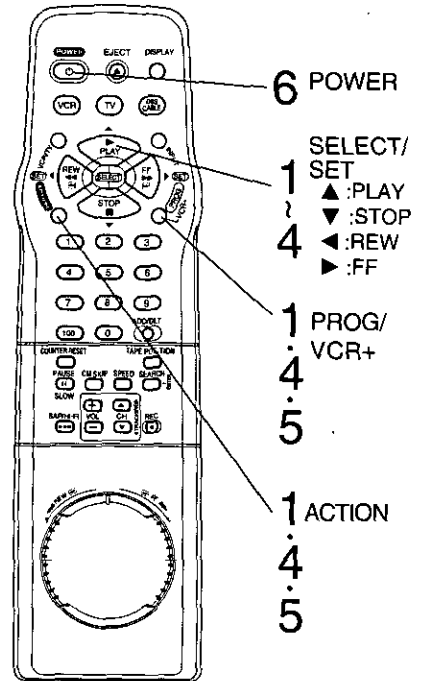

\*\* Category Items  
N/A(not applicable), SPORTS, MOVIE, COMEDY, MUSIC, DRAMA

### Timer Recording Using VCR Buttons.

#### Using ▲▼◀► keys

You can also operate the menu screen using VCR buttons.

When menu screens are displayed, the PLAY, STOP, REWIND, and FF buttons on the VCR and remote function as ▲▼◀► only with no tape inserted.



To display menu using VCR buttons, press CH ▲ and CH ▼ together. To exit the menu, repeat above.

 
\*Important: If the remote control POWER, ACTION, PROG/VCR+, CH▲/▼, NUMBERED keys, INPUT, SEARCH or ADD/DLT button does not work when pressed, press the VCR button on the remote and try the button again.

5

P	DT	START	STOP	CH	SPD
1	8	10:00P	12:00P	02	SP
2	---	---	---	---	---
3	---	---	---	---	---
4	---	---	---	---	---

CANCEL: ADD/DLT KEY  
 SELECT 1-8: ▲ ▼ KEY  
 ENTER: ► KEY  
 END: :PROG/ACTION KEY

### End the program.

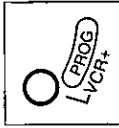

- 1) Press PROG/VCR+ (or ACTION).

### To Enter More Programs


Press ▲▼ to select, and ► to display a blank program number. Then repeat steps 3 and 4.

- 2) Press PROG/VCR+ (or ACTION) again to exit.

### To cancel Timer Recording (Recording is in progress)


Press POWER and then STOP within 10 seconds to cancel the Timer recording. (The TIMER indicator goes out on Multi Function Display.)

6

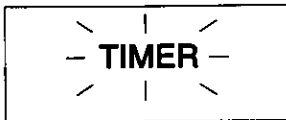


Multi Function Display

### Set the timer.

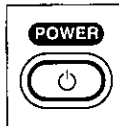 

### Press Power off.

 - When recording programs via a cable box, make sure the cable box is left ON and tuned to the desired channel.

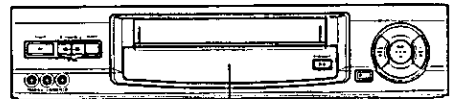

Multi Function Display

## Review, Replace or Clear Program Contents:

(Recording is not in progress)


a Repeat steps 1~2 on page 12.

b

P	DT	START	STOP	CH	SPD
1	DAY	9:00A	12:00A	08	SP
2	8	10:00P	12:00P	02	SP
3	10	8:00P	9:00P	10	SP
4	SU	9:00P	10:00P	L1	LP

CANCEL: ADD/DLT KEY  
 SELECT 1-8: ▲ ▼ KEY


### Select program.

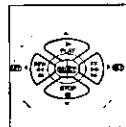

- 1) Press ▲▼ to select number.

### c To Replace program...

DATE	START	STOP	CH
8 SAT	10:00P	12:00P	125
CATEGORY: MOVIE ABC SP			
NOTES: STAND BY ME			
SELECT START DATE			
SELECT: ▲ ▼ KEY			
SET: ◀ ▶ KEY			

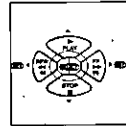


- 1) Press ► to display.
- 2) Press ▲▼◀▶ to set new program contents.

or

### To Clear program...


P	DT	START	STOP	CH	SPD
1	---	---	---	---	---
2	8	10:00P	12:00P	02	SP
3	10	8:00P	9:00P	10	SP
4	SU	9:00P	10:00P	L1	LP

SELECT 1-8: ▲ ▼ KEY  
 ENTER: ► KEY

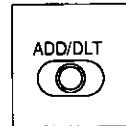


- 1) Press ADD/DLT.

 d

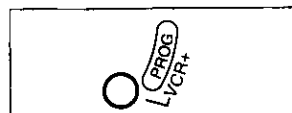

### End the program.

- 1) Press PROG/VCR+ (or ACTION).
- If there are programs, press POWER off.

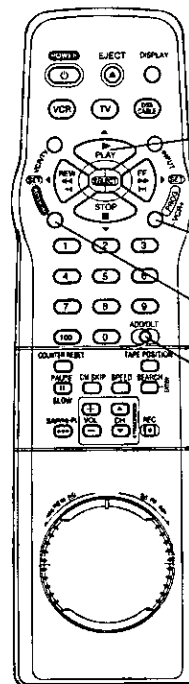

- SELECT/SET
- b ▲ :PLAY
  - ▼ :STOP
  - c ◀ :REW
  - ▶ :FF
  - d PROG/VCR+
  - d ACTION
  - c ADD/DELETE

Timer Recording

# Timer Recording Using VCR Plus+® System


VCR Plus+ System is ... a feature that allows you to set most items of a timer recording by simply entering a special code number (PlusCode programming number) found in TV GUIDE and selected newspaper TV listings.

## Process of Recording




Find the type of connection you use from the following diagrams and proceed to the page number indicated to begin set up.


### Cable box → VCR → TV connection

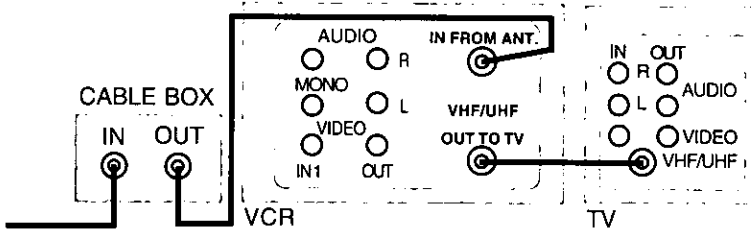


### DSS box → VCR → TV connection

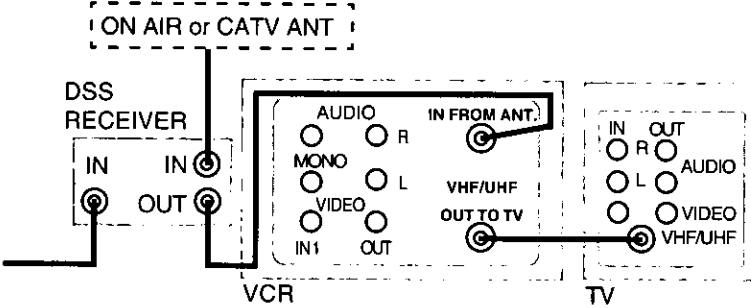

### VCR → TV connection

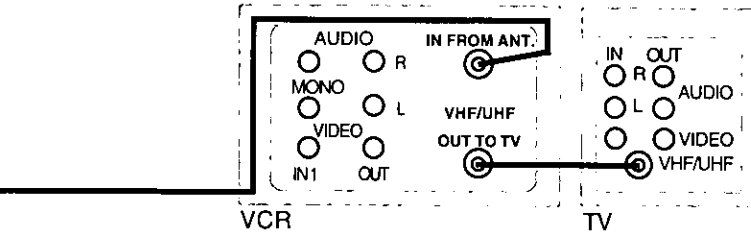

### VCR → Cable box → TV connection

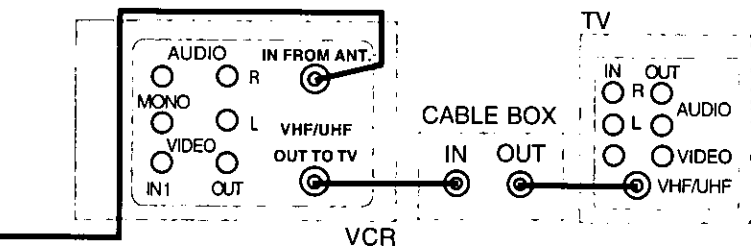

Setup on page

**15**

Programming on page

**17**

Setup on page

**16**


**\*Important:** If the remote control POWER, ACTION, PROG/VCR+, CH▲/▼, NUMBERED keys, INPUT, SEARCH or ADD/HLT button does not work when pressed, press the VCR button on the remote and try the button again.

# Cable Box Setup


## Process of Recording




**1 Display MENU.**  
Press ACTION.\*

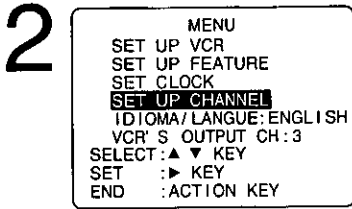


**Select SET UP CHANNEL.**

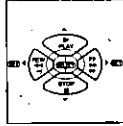


- 1) Press ▲▼ to select.
- 2) Press ▶ to display.

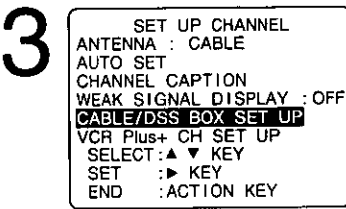


**Select CABLE/DSS BOX SET UP.**

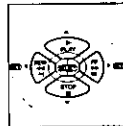

- 1) Press ▲▼ to select.
- 2) Press ▶ to display.

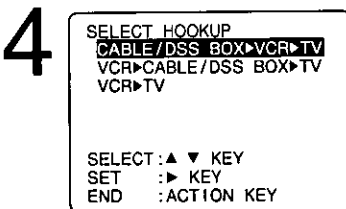


**Select your hookup method.**

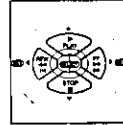


- 1) Press ▲▼ to select.
- 2) Press ▶ to set.

• If CABLE/DSSBOX ▶VCR ▶TV, go to step 4.  
If other, press ACTION three times and go to page 16.

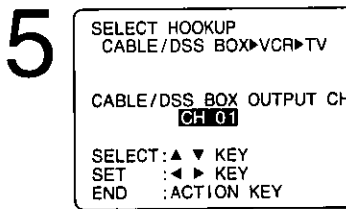

**Select cable box or DSS receiver output channel.**

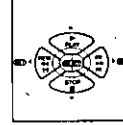


- 1) Press ▲▼ to select.
- 2) Press ▶ to enter.

• If necessary, refer to your Cable Box/DSS manual.  
• If you are using Audio/Video jack connections, select and set "VIDEO OUT" as output channel.



**6 End setup.**  
Press ACTION twice.

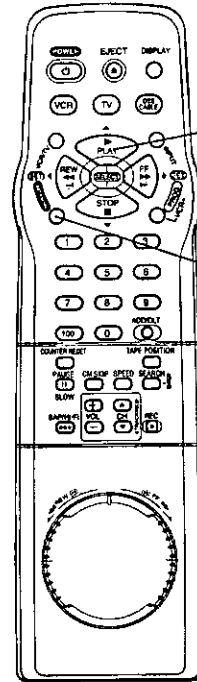

- 2 SELECT/SET
- 5 ▲:PLAY  
▼:STOP  
▶:FF
- 1 ACTION
- 6

Timer Recording Using VCR Plus+ System

VCR Plus+ and PlusCode are registered trademarks of Gemstar Development Corporation. The VCR Plus+ system is manufactured under license from Gemstar Development Corporation.

# Timer Recording Using VCR Plus+® System (continued)


It is necessary to program the VCR with local channel information for proper VCR Plus+ System operation.

## Process of Recording




## VCR Plus+ System Channel Setup

• At first, do Channel Setup Preparations below right.

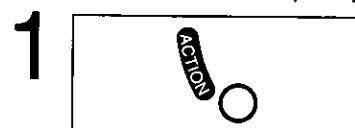


**Display menu.**  
Press ACTION.\*

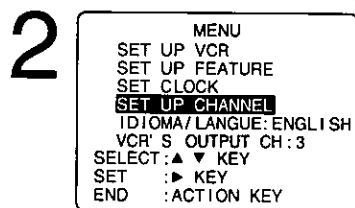


**Select SET UP CHANNEL.**

- 1) Press ▲▼ to select.
- 2) Press ▶ to display.

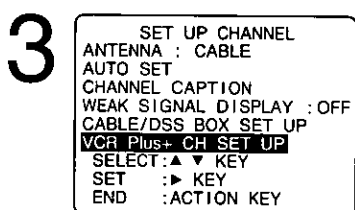

**Select VCR Plus+ CHANNEL SETUP.**

- 1) Press ▲▼ to select.
- 2) Press ▶ to display.

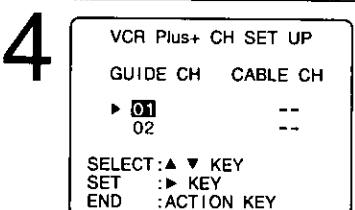

**Select VCR Plus+ channels.**

- 1) Press ▶ to move cursor to right column.

- 2) Press ▲▼ to change CABLE CH number.
- 3) Press ◀ to set.
- 4) Press ▲▼ to scroll up/down GUIDE CH column.

• Repeat step 4 until list is complete.


**To make corrections,**  
Press ▲▼ and ▶ to move to error, then ▲▼ to change, or ADD/HLT\* to erase number.



**End setup.**  
Press ACTION three times.

### Notes

- Make each entry within 5 minutes or the VCR will exit this mode.
- Once local channels have been programmed, they will stay in memory, even in the case of a power failure.

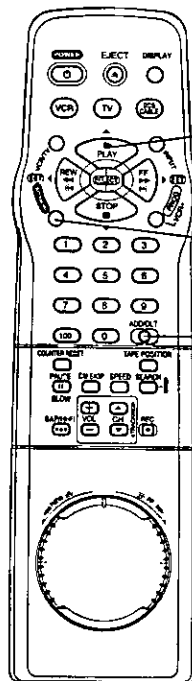

- 2 SELECT/SET
- 3 ▲:PLAY
- 4 ▼:STOP
- 5 ◀:REW
- ▶:FF
- 1 ACTION
- 5 ADD/DELETE

## Channel Setup Preparations

In order to complete step 4 left, make a local channel list (see example below).

You will need the following:

- A line up of normal TV and/ or Cable stations and the channel number you receive them on.
- A list of Guide (PlusCode) channel numbers for the stations you receive found in TV Guide and selected newspapers.

- 1 Make a 3-column chart. In the left column, write the name of all the stations you receive.
- 2 In the middle column, write each station's Guide (PlusCode) number from TV Guide.
- 3 In the right column, write the channel number your TV receives the station on.

EXAMPLE ONLY

Broadcast or Cable Station Name	Assigned Guide (VCR Plus+) channel no.	Channel no. your TV receives the station on
HBO	33	15
Nickelodeon	38	20
CBS	04	04
FOX	11	



**\*Important:** If the remote control POWER, ACTION, PROG/VCR+, CH▲/▼, NUMBERED keys, INPUT, SEARCH or ADD/HLT button does not work when pressed, press the VCR button on the remote and try the button again.

Check list before you begin.


- The clock is set.
- VCR Plus+ System Setup is complete (see pages 14~16).

## Process of Recording




# VCR Plus+ System Programming

**1**  **Display SET PROGRAM.**  
Press PROG/VCR+.\*

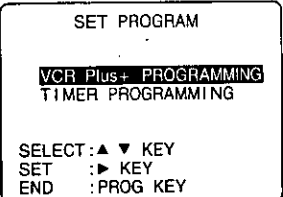
**2**  **Display VCR Plus+ screen.**

- 1) Press ▲▼ to select.
- 2) Press ► to display.

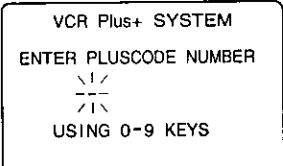
**3**  **Enter PlusCode programming number.**

- 1) Press Numbered keys.
- 2) Press PROG/VCR+ to lock in the program.

**To make corrections,** press ◀ repeatedly to delete the PlusCode programming number.

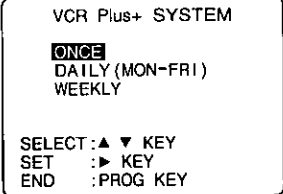 **Enter record frequency.**

- 1) Press ▲▼ to select program type.
- 2) Press ► set.

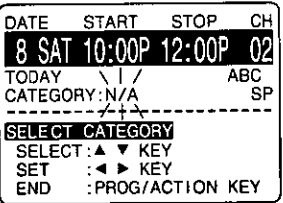
**4**  **Select Category.\*\***

- 1) Press ▲▼ to change.
- 2) Press ► set.

**Change record speed.**  
Repeat 1) and 2).

**5** **Make notes. -----> Do step 4 on page 12.**


- If not wanted, go to step 6.

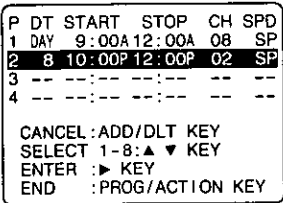
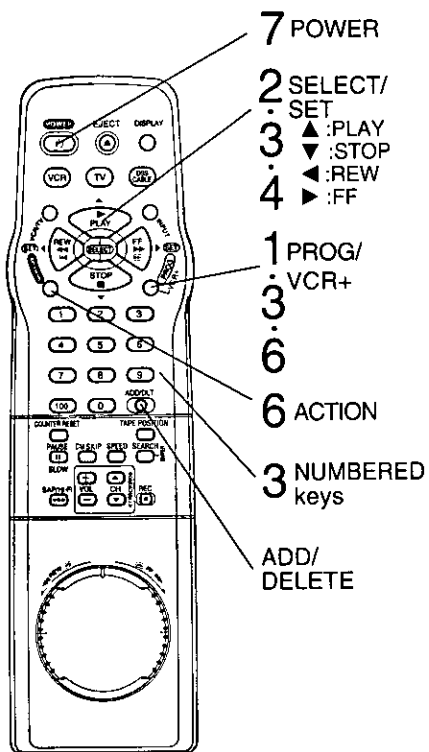
**6**  **End programming.**

- 1) Press PROG/VCR+ (or ACTION).

**To cancel** press ADD/HLT.

- 2) Press PROG/VCR+ (or ACTION) again to exit.

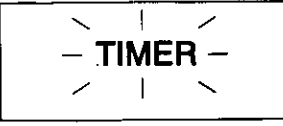**7**  **Set timer.**  
Press Power off.

\*\* Category Items  
N/A(not applicable), SPORTS, MOVIE, COMEDY, MUSIC, DRAMA

### Use normal Timer Recording steps if:

- the PlusCode programming number for a program is not listed.
- you anticipate the program, such as a sporting event, to run over the scheduled stop time.

### See page 13 to:

- cancel a timer recording in progress.
- replace program contents.
- review or clear program contents once set.

### Important notes for DSS/Cable Box users

- When recording via DSS, the receiver, must be left on.
- When recording via cable or antenna, DSS receiver must be off.

### Notes

- Avoid overlapping program times.
- VCR PlusCode programming numbers can not be used to program the VCR to record DSS channels.
- You can obtain unlisted PlusCode numbers by calling 1 - 900 - 454 - 7587. Call costs approximately \$.95 per minute.


# Multi-Brand Control Feature

The Remote Control may be set up to control some TV or Cable/DSS Box functions.

## Multi-Brand Control Setup

### 1 Find your TV, Cable or DSS Receiver Brand Code Number on following page.


### 2 Setup for TV

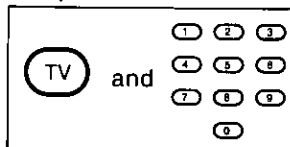

#### Setup remote.

Hold down TV and enter code with NUMBERED keys.


### Setup for Cable or DSS

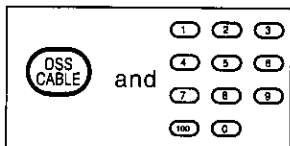

Hold down DSS/CABLE and enter code with NUMBERED keys.

- For code 100 or greater, press the 100 key first, then remaining digit. E.g. for 102, press 100, then press 0, and then press 2.


### 3

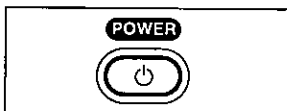 

#### Confirm code entry.

Press POWER to turn selected unit on or off.

- See table below for list of controllable functions in each mode.

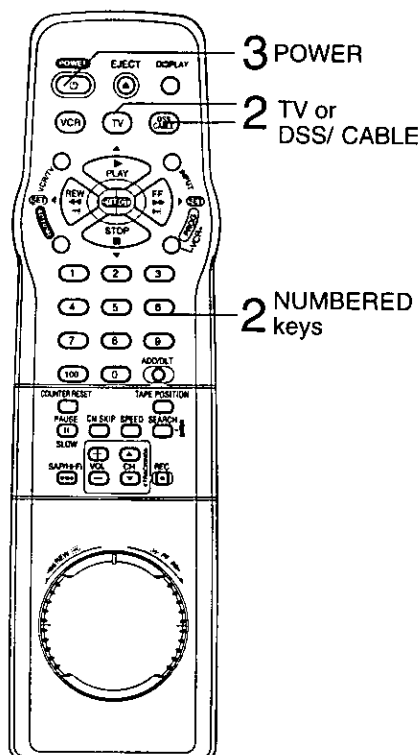

#### Notes

- Please repeat Multi-Brand Control setup after replacing remote control batteries.
- The remote control will not operate all TVs, Cable Boxes, and DSS receivers made by manufacturers listed. If you get no results, your particular brand cannot be controlled.

## Using the Multi-Brand Control

After remote control is setup, you can select VCR, TV, or DSS/CABLE for the desired function.

Press **VCR** or **TV** or **DSS/CABLE** on the remote control.

This table shows which buttons are available for each mode.

Mode \ Available Buttons	VCR	TV	CABLE/ DSS
<b>VCR</b>	All Functions	VOL UP/DOWN	—
<b>TV</b>	VCR/TV, PLAY, STOP EJECT, SAP/Hi-Fi, DISPLAY, FF, REW, PAUSE/SLOW, REC, SPEED, COUNTER RESET TAPE POSITION, CMSKIP	POWER, INPUT, NUMBERED keys, ENTER, CH UP/ DOWN, VOL UP/DOWN	—
<b>CABLE/ DSS</b>	VCR/TV, PLAY, STOP EJECT, SAP/Hi-Fi, DISPLAY, FF, REW, PAUSE/SLOW, REC, SPEED, COUNTER RESET TAPE POSITION, CMSKIP	VOL UP/ DOWN	POWER, ENTER, NUMBERED keys (except 100key), CH UP/ DOWN

**Note** In TV or DSS/ CABLE mode, it may be necessary to press ENTER after pressing NUMBERED keys for channel selection.

## TV Brand Code Numbers

Panasonic .....	01, 02	Sylvania .....	05	JVC .....	11
Quasar .....	01, 02	Sharp .....	06, 07	Hitachi .....	12
RCA .....	03	Sony .....	08	Mitsubishi .....	07, 13
GE .....	03	Toshiba .....	09	Samsung .....	14
Zenith .....	04	Sanyo .....	10	Gold Star .....	15, 16, 17
Magnavox .....	05	Fisher .....	10		

## Cable Box Brand Code Numbers

Archer .....	44, 06, 01, 120, 05, 63, 126	Oak Sigma .....	46, 11, 129, 101
Cableview .....	29, 09, 01, 63, 120, 44, 42, 30	Panasonic .....	17, 16, 08, 87, 109
	52, 04, 124, 126	Philips .....	23, 24, 20, 13, 07, 50, 128, 129
Citizen .....	44, 52, 30, 63, 42, 04, 124, 126	Pioneer .....	06, 05, 12
Curtis .....	08, 09, 25, 61, 53, 87	Pulsar .....	04, 42, 63, 44, 30, 52, 124, 126
Century .....	44, 51, 75, 59, 126	Quest .....	06, 05, 12
Cabletenna .....	29, 09, 01, 63, 120, 44, 126	Radio Shack .....	44, 51, 75, 59, 126
Cable Cinema .....	29, 09, 01, 63, 120, 44, 126	RCA .....	17, 16, 08, 87, 109
Diamond .....	29, 09, 01, 63, 120, 44, 126	Realistic .....	44, 51, 75, 59, 126
Eagle .....	62, 40, 22, 13, 58, 20, 26, 107	Recoton .....	44, 51, 75, 59, 126
Eastern .....	28, 29, 130	Regal .....	41, 14, 15, 28, 102, 104, 103, 130
Explorer .....	08, 09, 25, 61, 53, 87	Regency .....	28, 29, 130
Gemini .....	30, 04, 124	Rembrandt .....	44, 42, 63, 29, 01, 32, 39, 120, 126
General Electric .....	01, 57, 120	Samsung .....	42, 06, 32, 05, 40
General Instruments .....	01, 84, 83, 34, 03, 02, 04, 55, 65, 66, 67, 68, 120, 106, 121, 122, 115, 117, 118, 124	Scientific Atlanta .....	08, 09, 25, 61, 53, 87
Gerrard .....	44, 51, 75, 59	Sheritech .....	27
GC Electronics .....	44, 42, 63, 29, 30, 52, 04, 124, 126	Signal .....	26, 112
Hamlin .....	41, 14, 15, 28, 102, 104, 103, 130	SL Marx .....	42, 06, 32, 40, 43, 44, 52, 63, 126
Hitachi .....	31	Sprucer .....	17, 16, 08, 87, 109
Jerrold .....	01, 84, 83, 34, 03, 02, 04, 55, 65, 66, 67, 68, 120, 106, 121, 122, 115, 117, 118, 124	Standard Components .....	32, 39, 42, 44, 126
Jasco .....	30, 04, 124	Stargate .....	04, 42, 32, 40, 63, 44, 30, 52, 06, 124, 126
Macom .....	31	Sylvania .....	19, 18
Magnavox .....	26, 112	Teknika .....	74, 35
Matsushita .....	17, 16, 08, 87, 109	Telecaption .....	77, 127
Movietime .....	32, 39, 42, 44, 126, 38, 40	Televue .....	40, 19, 38, 32, 42, 06
Maestro .....	74, 35	Texscan .....	19, 18
NEC .....	40, 19, 38, 32	Tocom .....	34, 33, 01, 42, 66, 120
NSC .....	40, 19, 38, 32	Toshiba .....	36
Novavision .....	08, 09, 25, 61, 53, 87	Unika .....	44, 42, 63, 29, 01, 126, 120
Next Level .....	01, 84, 83, 34, 03, 02, 04, 55, 65, 66, 67, 68, 120, 106, 121, 122	Universal .....	52, 43, 44, 63, 42, 126
Oak .....	46, 11, 129, 101	Viewstar .....	62, 40, 22, 13, 58, 20, 26, 107
		Videoway .....	07, 23, 50, 129
		Vidtek .....	64
		Zenith .....	07, 23, 50, 129

## DSS Brand Code Numbers

Toshiba .....	90	Optimus .....	94, 95
Hitachi/ Hughes .....	91, 99	Panasonic .....	96
Primestar .....	92	ProScan .....	97
Drake .....	93	RCA .....	97
Magnavox .....	94, 95	SONY .....	98, 105
Uniden .....	94, 95		

### Important Notes

- Due to changes in infra-red commands used by manufacturers, some brands have several codes. If your unit does not respond to the first code, please try the next one.
- Some TV, Cable Box and DSS Box brands require you to turn on the power manually.
- Not all functions listed may be controlled by this remote control.

# Tape Operation


## Search System

Each time a recording is made, an invisible index mark is placed on the tape. When timer recordings are made, program index and information are also included. These index marks can be used to access or scan recordings.

### Program End Search




It is easy to locate the end of a recorded program allowing you to continue recording where you left off.

**1**  **Display SELECT SEARCH MODE in Stop or Play mode. Press SEARCH.\***

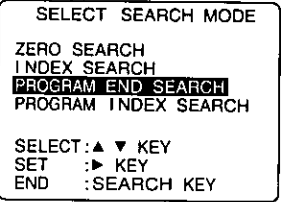**2**  **Select PROGRAM END SEARCH.**



1) Press ▲▼ to select.  
2) Press ► to start search.

Examples of Program End Search operation.

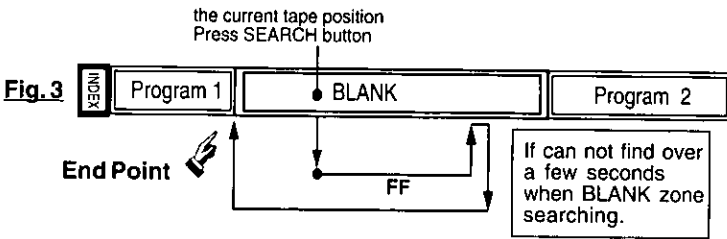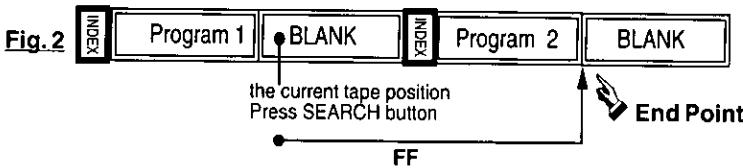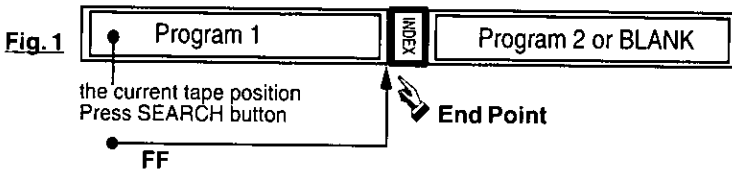

### If Program End Point (👉) is found.

The search continues slightly beyond the end point, then rewinds and plays the last few seconds of the program and finally stop.

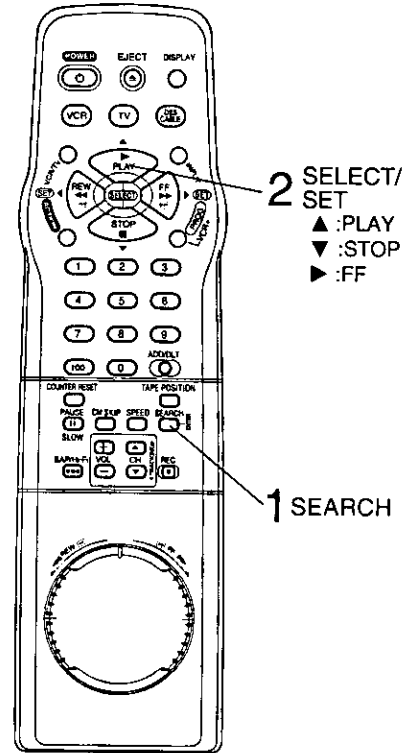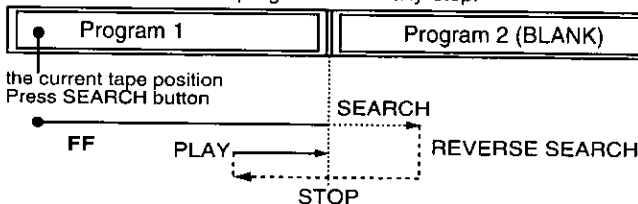

### Notes


- If Program End Search is started very close to an index mark, one program may be skipped over.
- To cancel Program End Search, press PLAY or STOP.

**\*Important:** If the POWER, ACTION, PROG/VCR+, CH▲/▼, CH▲/▼, NUMBERED keys, INPUT, SEARCH or ADD/HLT button does not work when pressed, press the VCR button on the remote and try the button again.

## Program Index Search (For timer recordings only)

Choose a timer recorded program from a Program Index List. When the tape is ejected or normal recording is started, all program index data is deleted.

**1**




**Display SELECT SEARCH MODE in Stop or Play mode.**  
Press SEARCH.\*

**2**

SELECT SEARCH MODE  
ZERO SEARCH  
INDEX SEARCH  
PROGRAM END SEARCH  
PROGRAM INDEX SEARCH

**Select PROGRAM INDEX SEARCH.**  
1) Press ▲▼ to select.  
2) Press ► to display.

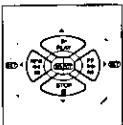


**3**

PROGRAM INDEX  
DATE START CATEGORY CH  
12/28 10:00A SPORTS ABCD  
1/ 4 12:30P MOVIE NBC  
1/ 4 8:00P COMEDY CBC  
1/ 7 3:00P MUSIC NBC

SELECT: ▲ ▼ KEY  
SEARCH: ► KEY  
END :SEARCH KEY


**Select the desired recorded program.**  
1) Press ▲▼ to select.  
2) Press ► to start the forward or rewind search.  
• When search is finished, playback begins.

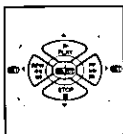

## Index Scan (For normal and /or timer recordings)

In Play mode, the first 10 seconds of each recording can be scanned (forward or reverse).

**a**




**Display SELECT SEARCH MODE.**  
Press SEARCH.\*

**b**

SELECT SEARCH MODE  
ZERO SEARCH  
INDEX SEARCH  
PROGRAM END SEARCH  
PROGRAM INDEX SEARCH

SELECT: ▲ ▼ KEY  
SET : ► KEY  
END :SEARCH KEY

**Select INDEX SEARCH.**  
1) Press ▲▼ to select.  
2) Press ► to display.  
• This screen appears only if there are timer recordings.

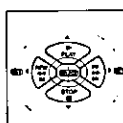

**c**

INDEX


**Start scan.**  
Press FF or REW.





**d**

AUTO INDEX SEARCH

**Cancel scan, start playback.**  
Press PLAY.  
• To stop, press STOP.



<Example>

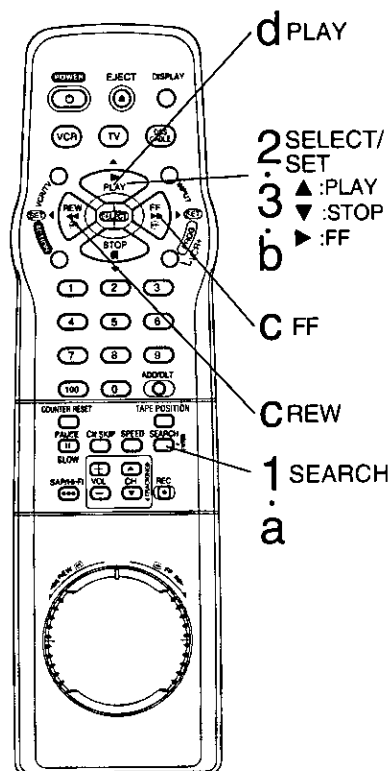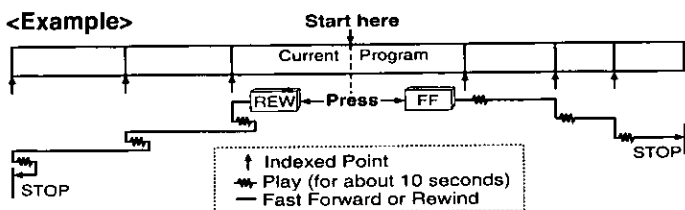

Tape Operation

## Auto Operation Functions

### ■ Auto Playback

Insert tape --> Power turns on -->  
--> Starts playback if record tab  
(see page 34) is removed.

### ■ Auto Rewind

Playback  
Manual Record } --> Tape end -->  
Fast Forward } --> Rewinds (Auto)

### ■ Playback Auto Eject (Repeat Play is "OFF")

Playback --> Tape end --> Rewinds  
--> Tape ejects (if without record tab)

### ■ Memory Rewind Off


Rewind --> Press POWER -->  
--> Turns off after completed

# Tape Operation (continued)

## Direct Access (For normal and /or timer recordings)

Go directly to desired recording.

**1**  **Display SELECT SEARCH MODE in Stop or Play mode. Press SEARCH.\***

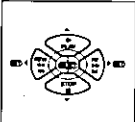**2**  **Select INDEX SEARCH.**


1) Press ▲▼ to select.  
2) Press ► to display.

- This screen appears only if there are timer recordings.

SELECT SEARCH MODE


ZERO SEARCH  
**INDEX SEARCH**  
PROGRAM END SEARCH  
PROGRAM INDEX SEARCH

SELECT: ▲ ▼ KEY  
SET: ► KEY  
END: SEARCH KEY

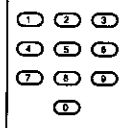**3**  **Select the recording number. Press NUMBERED keys.**

- To calculate number, see below.


INDEX

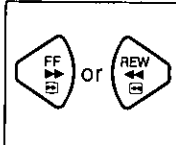**4**  **Start search. Press FF or REW.**

- When search is finished, playback begins.

INDEX 04


INDEX SEARCH 04

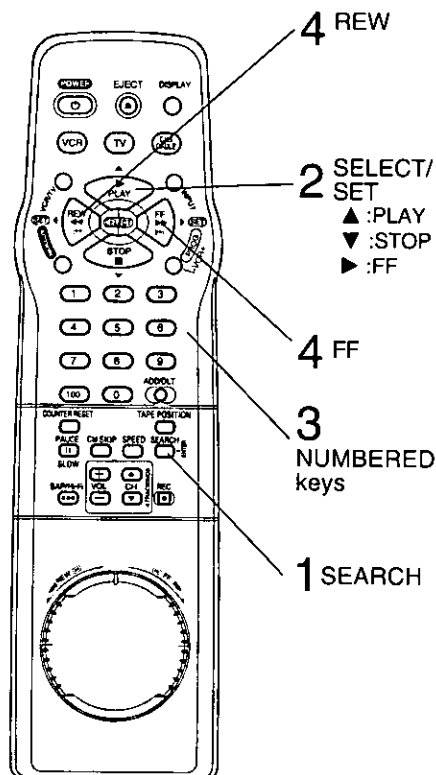

### To Calculate Index Number


#### Example 1:

 If you are watching recording 4 and you want to watch recording 2, enter 3 in step "3" and press REW.

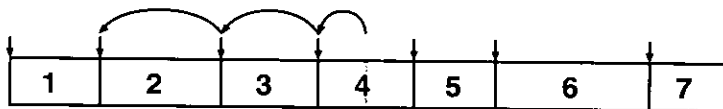

#### Example 2:

 If you are watching recording 2 and you want to watch recording 6, enter 4 in step "3" and press FF.

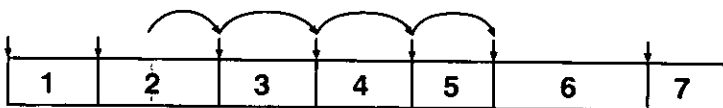

NOTE: ↓ indicates start points of each recording.

### Notes

- Make each entry within 10 seconds, or the Index Search mode will be canceled.
- If Direct Access or Index Scan is started very close to an index mark, that index mark may not be counted in the search.


\*Important: If the remote control POWER, ACTION, ACTION, ACTION, CH▲/▼, NUMBERED keys, INPUT, SEARCH or ADD/DLT button does not work when pressed, press the VCR button on the remote and try the button again.

## Repeat Play

Set to see a recording over and over.



**Display MENU.**  
Press ACTION.\*

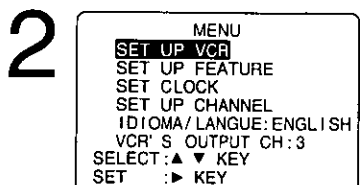


**Display SET UP VCR.**  
1) Press ▲▼ to select.  
2) Press ► to display.



**Set ON or OFF.**  
1) Press ▲▼ to select "REPEAT PLAY."  
2) Press ► to set.

 
- Playback repeats when tape end is reached or unrecorded portion over 30 seconds is detected.

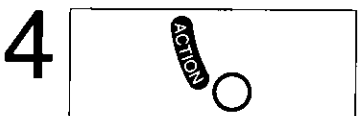


**Return to normal screen.**  
Press ACTION twice.

## Zero Search

 To quickly return to specific tape counter location.

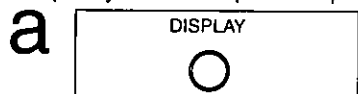


 **Display Counter.**  
Press DISPLAY during playback.

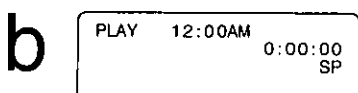


**Reset to "0:00:00."**  
Press COUNTER RESET RESET at the desired position.

 c **Continue to record, playback etc.**

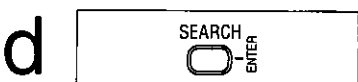


**Display SELECT SEARCH MODE** in Stop mode.  
Press SEARCH.\*

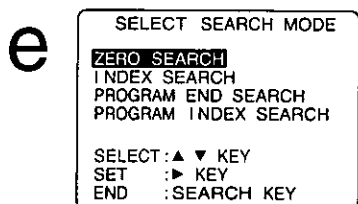

**Start ZERO SEARCH.**  
1) Press ▲▼ to select.  
2) Press ► to start.

- Unit will go into FF or REW mode and stop at the last point the Counter was set to 0:00:00.

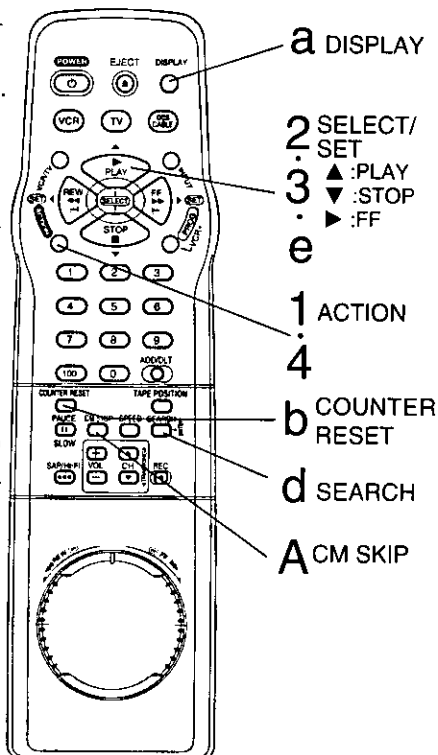


Tape Operation

## Commercial Skip

VCR fast forwards (skips) over 1~3 minutes of recorded tape.

A Press CM SKIP in Play mode.

• The skip time can be changed by pressing CM SKIP button repeatedly as shown by the figure below.

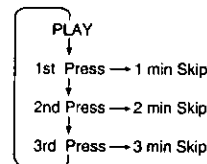


# MTS Broadcast/VHS Hi-Fi Stereo System

**Check list before you begin.**

- VCR is connected to a stereo TV, or a mono TV and an external stereo amp or receiver with speakers.
- VCR and other components are plugged in and turned on.

## Connections to Make

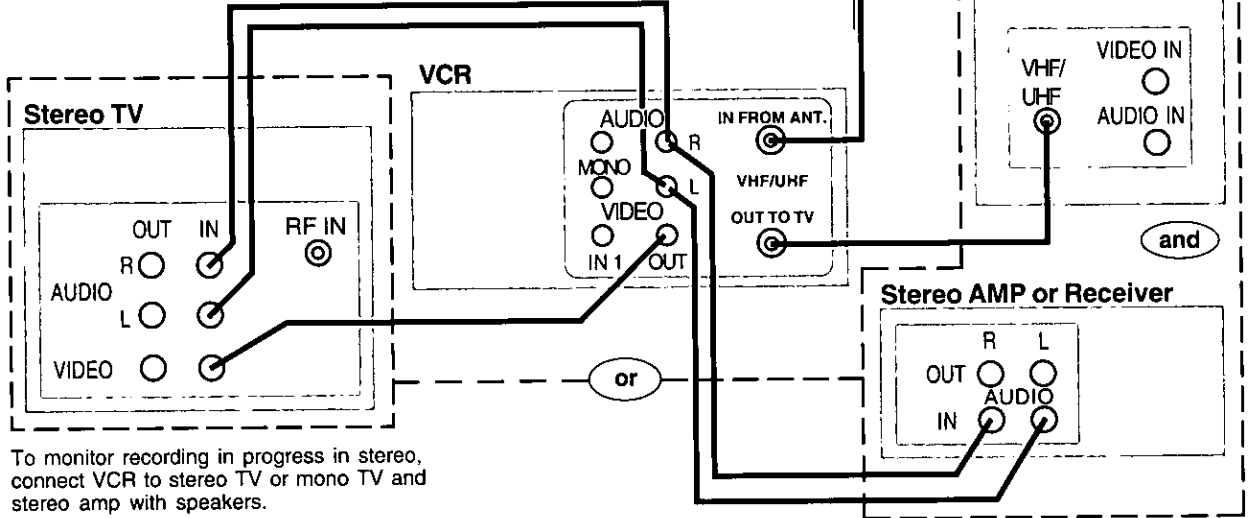


## Receivable Broadcast Types

The following are possible audio broadcast types and on-screen displays. The signal being received is indicated with an "Ⓜ" mark while the selected audio mode is indicated with an arrow.

**DISPLAY** Display the broadcast signal being received. Press DISPLAY.

### MTS Stereo and SAP broadcast


Multi-channel Television Sound Stereo (main language) and Secondary Audio Program (sub language) broadcasts are both being received simultaneously. Select STEREO or SAP audio mode.

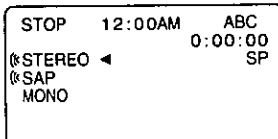

### MTS Stereo broadcast


Multi-channel Television Sound Stereo broadcast. Select STEREO audio mode.

- If stereo broadcast is weak and display flickers, select MONO audio mode for possibly better results.

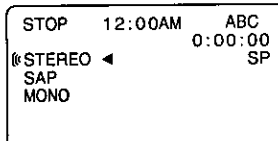



### SAP broadcast

Secondary Audio Program (sub language) broadcast. Select SAP audio mode for the sub language.

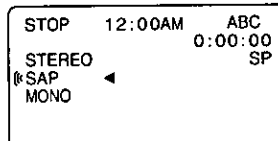

### MONO broadcast

Normal monaural sound broadcast.

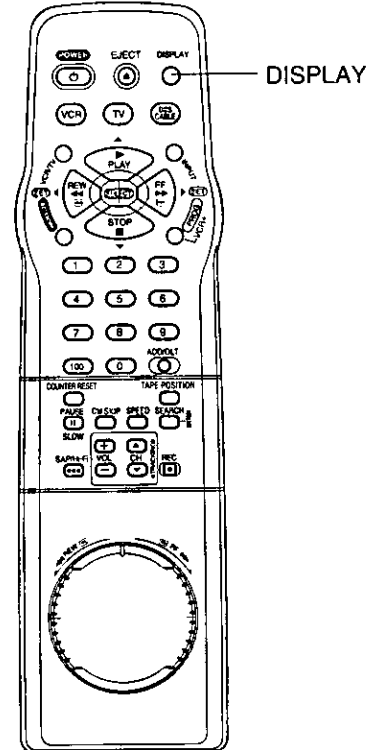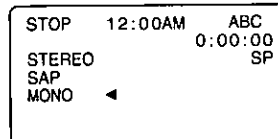

Equipped with **dbx**®-TV Noise Reduction for true MTS reproduction. **dbx**®-TV Noise Reduction is required for good stereo separation and audio fidelity. **dbx**® is a registered trademark, and is licensed by **dbx**® Technology Licensing.




### When set to proper audio mode VCR can:

- 1) record/playback MTS stereo broadcasts (main language) in Hi-Fi stereo.
- 2) record/playback mono (main language) or SAP (sub language) broadcasts.
- 3) playback non Hi-Fi tapes in monaural.


- The selected broadcast sound is always recorded on left and right Hi-Fi track as well as the normal monaural track. This means tapes can be played back on Hi-Fi and non-Hi-Fi VCRs.

## Audio Mode for Recording

**1**  **Display audio mode.**  
Press SAP/ Hi-Fi.

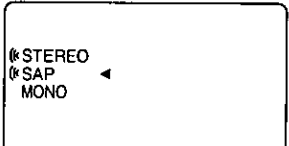**2**  **Select desired mode.**  
Press SAP/ Hi-Fi repeatedly (each press within 5 seconds).

- Arrow indicates selection.

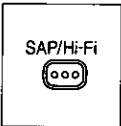
 Press SAP/ Hi-Fi repeatedly (each press within 5 seconds).


- Refer to the "Receivable Broadcast Types" on page 24.

**3** **Do a recording.**  
See page 9.

## Audio Mode for Playback

 
**a** **Start playback.**  
See page 8.

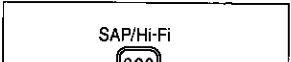**b**  **Display audio mode.**  
Press SAP/ Hi-Fi.

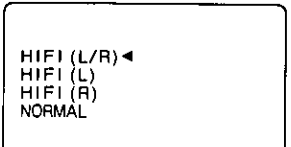**c**  **Select desired mode.**  
Press SAP/ Hi-Fi repeatedly (each press within 5 seconds).

- Arrow indicates selection.

- Select "HIFI(L/R)" or "HIFI(L)" or "HIFI(R)" to listen to stereo recordings in stereo sound. Select "NORMAL" for monaural sound.

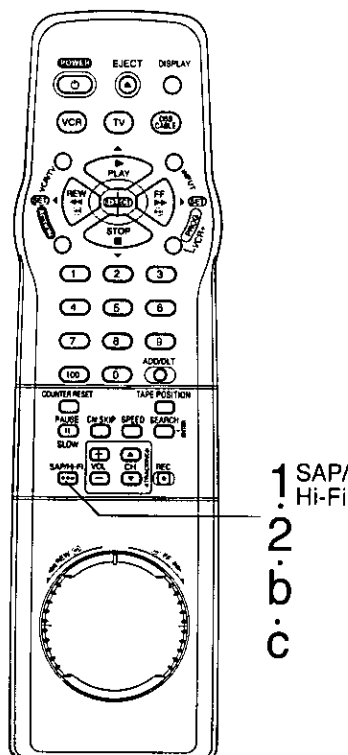

### Notes

- Only tapes recorded in Hi-Fi stereo will play back with true stereo sound. Standard stereo tapes will playback in monaural sound.
- To listen to Hi-Fi stereo playback, the VCR AUDIO (L/R) jacks must be connected to a stereo TV or an external stereo amp and speakers. (See page 24.)
- If tracking is adjusted during playback, Hi-Fi audio may revert to normal audio.
- Hi-Fi and normal audio playback volume level may differ.

# Special VCR Features


## Channel Caption


When set, station name, e.g. ABC, CBS, and channel number appear on-screen.  
Set up to 24 preset captions, and/or 10 manually created captions.


You need a list of stations and the channel numbers you receive them on.


### Preset Caption

**1**  **Display MENU.**  
Press ACTION.\*

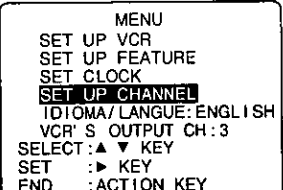**2**  **Display SET UP CHANNEL.**  
1) Press ▲▼ to select.  
2) Press ► to display.

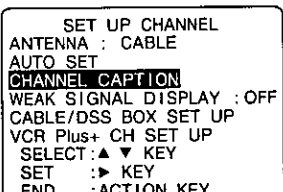**3**  **Display CHANNEL CAPTION.**  
1) Press ▲▼ to select.  
2) Press ► to display.

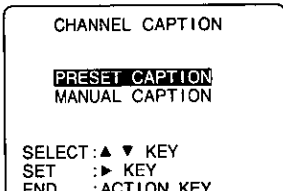
**4**  **Display PRESET CAPTION.**  
1) Press ▲▼ to select.  
2) Press ► to display.  
• To create your own captions, go to "Manual Caption" on page 27.

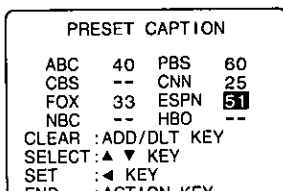**5**  **Assign preset captions.**  
1) Press ▲▼ to highlight caption.  
2) Press ► to move cursor to the right.  
3) Press ▲▼ to select CH number.  
4) Press ◀ to set.

• Repeat step 5 until the list is complete.

**To make corrections,**  
Press ▲▼ and ► to select the channel number, then press ▲▼ to change, or ADD/DLT to delete the number.

**6**  **End setup.**  
Press ACTION four times.

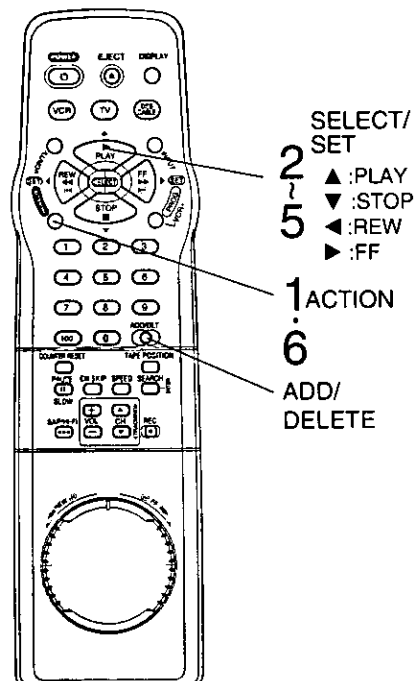


\*Important: If the remote control POWER, ACTION, VCR/VCR+, CH▲/▼, MANUAL keys, INPUT, SEARCH or ADD/DLT button does not work when pressed, press the VCR button on the remote and try the button again.


## Manual Caption

**1** Do "Preset Caption" steps 1~3 on page 26.

**2**

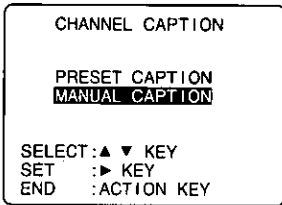


### Display MANUAL CAPTION.

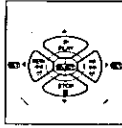


- 1) Press ▲▼ to select.
- 2) Press ► to display.

**3**

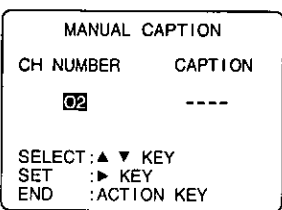


### Select channel number.

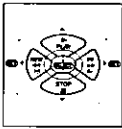


- 1) Press ▲▼ to select CH NUMBER.
- 2) Press ► to move cursor to the right.

- Channels already set and channels deleted from Channel Memory are not displayed.
- You can set a total of ten channel captions.

**4**

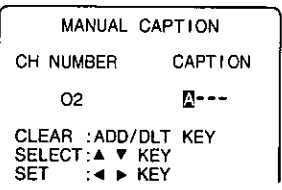

### Enter CAPTION.

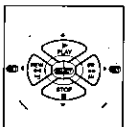

- 1) Press ▲▼ to select.
  - 2) Press ► to enter.
- Characters change in following order.

A ↔ B ↔ C ↔ ... ↔ Z ↔ BLANK ↔ - ↔ & ↔  
9 ↔ ... ↔ 2 ↔ 1 ↔ 0 ↔ / ↔ ! ↔

- 3) Press ◀ to set.

- Repeat steps 3 and 4 as desired.

#### To make corrections,


Press ◀▶ to move to the incorrect entry, then press ▲▼ to make correction. Or, press ADD/DLT to clear the caption.

**5**



### End input.

Press ACTION four times.

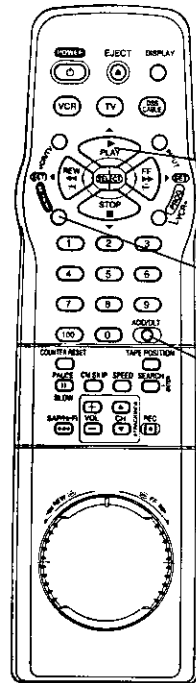


- 2 SELECT/SET
  - 3 ▲:PLAY  
▼:STOP
  - 4 ◀:REW  
▶:FF
  - 5 ACTION
- ADD/DELETE

Special VCR Features

# Special VCR Features (continued)

 
## Time Stamp Feature

The VCR writes program data (see example below) about the first 10 seconds of every recording. The information is then displayed the first 10 seconds of playback. To change the data, see "Changing Time Stamp Data" on page 29.

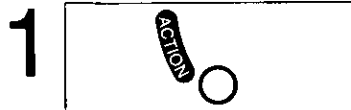


### Display MENU.


Press ACTION.\*

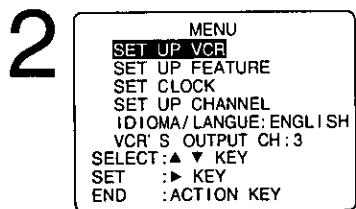


### Display SET UP VCR.

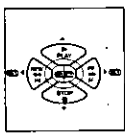

- 1) Press ▲▼ to select.
- 2) Press ► to display.

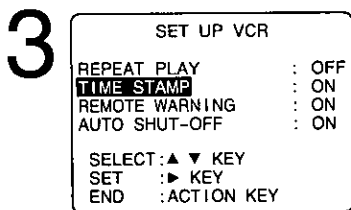

### Set ON or OFF.

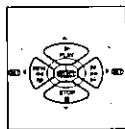

- 1) Press ▲▼ to select.
- 2) Press ► to set.

\* When "OFF" is selected, the program data is written on the tape, but will not be displayed.




### Return to normal screen.


Press ACTION twice.

### <Time Stamp Example>


#### One Touch Recording

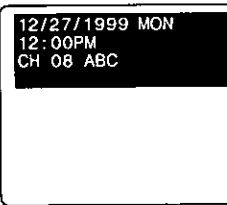

#### Timer Recording

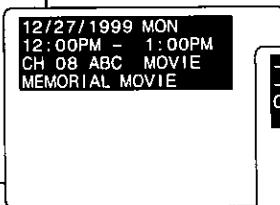


#### When Clock is not set...

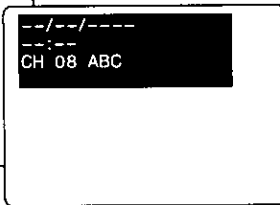

### Check list before you begin.

- Clock is set to correct time.
- Record tab in place. (See page 34.)

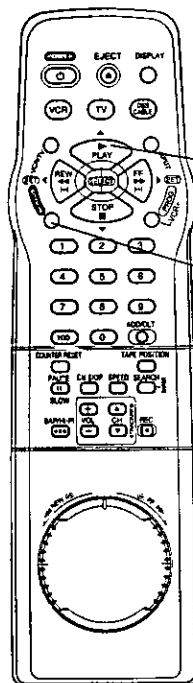

- 2 SELECT/SET
- 3 ▲:PLAY  
▼:STOP  
▶:FF
- 1 ACTION
- 4

**\*Important:** If the remote control POWER, ACTION, PROG/VCR+, CH▲/▼, NUMBERED keys, INPUT, SEARCH or ADD/HLT button does not work when pressed, press the VCR button on the remote and try the button again.

## Changing Time Stamp Data


You may change the Date, Time, Channel, Category, and Notes.

1




### Display Time Stamp Data.

- 1) Insert cassette with record tab.
- 2) Press PLAY.

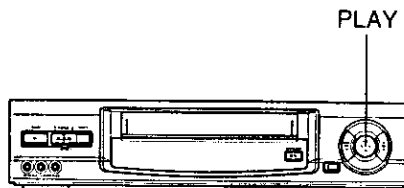

2

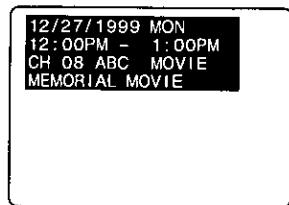


### Display TIME STAMP EDIT.




Press PROG/VCR+ while the data is displayed in Playback mode.

3

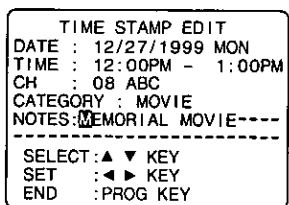

### Change Time Stamp Data.

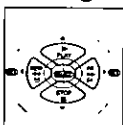

- 1) Press ▲▼ to select.
- 2) Press ► to enter and continue.


• Characters in NOTES will change in the following order.

→ A ↔ B ↔ C ↔ ... ↔ Z ↔ BLANK ↔ - ↔ & ↔ ←  
 → 9 ↔ 8 ↔ 7 ↔ 6 ↔ 5 ↔ 4 ↔ 3 ↔ 2 ↔ 1 ↔ 0 ↔ / ↔ + ↔ ←


- 3) Repeat 1) and 2) as needed.

To make corrections, Press ◀▶ to move to the incorrect entry, then press ▲▼ to make the correction.

4

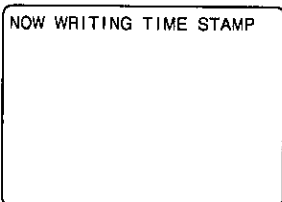


### Write the new data.

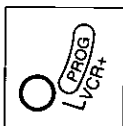

Press PROG/VCR+.

- When data is written, VCR returns to Stop mode.

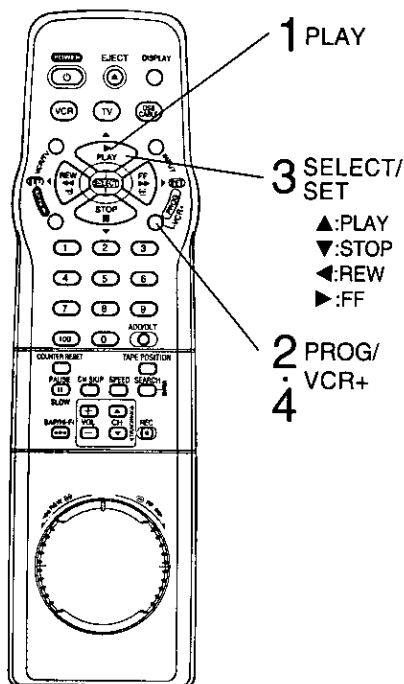


Special VCR Features

# Special VCR Features

 
## Tape Position Display Feature

To find out the present tape position.

Tape position cannot be found for C-Cassette type and tape of less than 60 minutes.

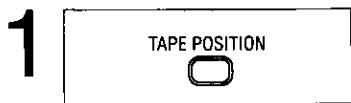


**Detect Tape Position.**  
Press TAPE POSITION.

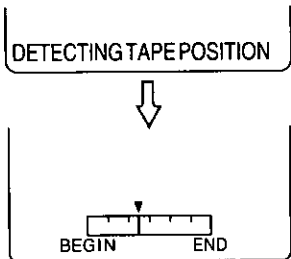

- "DETECTING TAPE POSITION" only appears the first time a cassette is inserted.
- It takes several seconds for correct indication to appear.

 - The present tape position indication is displayed.

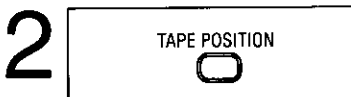


**Return to normal screen.**  
Press TAPE POSITION.

## Remote Warning ON/OFF Feature


If Multi-brand feature is used (page 18), and this feature is set to on, a warning appears whenever an invalid key is pressed in TV, DSS, or Cable mode.




**Display MENU.**  
Press ACTION.

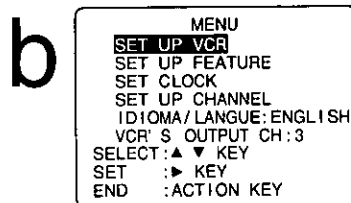


**Display SET UP VCR.**

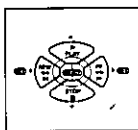

- 1) Press ▲▼ to select.
- 2) Press ► to display.

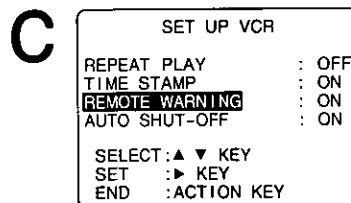


**Set ON or OFF.**

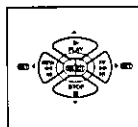

- 1) Press ▲▼ to select.
- 2) Press ► to set.

 
- "OFF" --> remote warning will not appear even if invalid key is pressed.

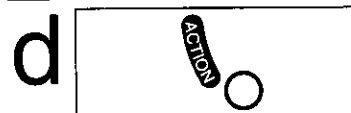

**Return to normal screen.**  
Press ACTION twice.

**Check list before you begin.**

- All connections are made. (See pages 4-5.)
- VCR is plugged in.
- TV is turned on and tuned to CH3, 4 or Video.

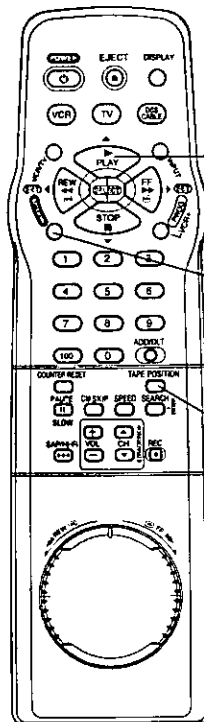


- b** SELECT/SET  
▲: PLAY  
▼: STOP  
▶: FF
- a** ACTION
- d**
- 1** TAPE POSITION  
**2** POSITION

## VCR Lock Feature


All operations are prohibited except timer recording and tape eject. Useful for families with small children.



Press REC in Stop mode.

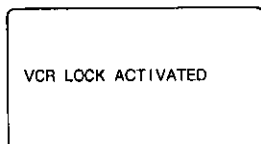


**To turn on:**  
In Stop mode, hold down REC on the VCR without a cassette inserted for 7 seconds.

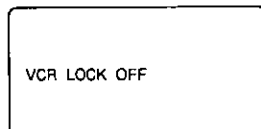

**To turn off:**  
Repeat above.

 - VCR Lock is canceled automatically after 24 hours if clock is set.

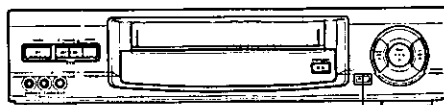

**A** REC


\*IMPACT: If the remote control POWER, ACTION, VCR, CH▲/▼, CH▲/▼, NUMBERED keys, INPUT, SEARCH or ADD/DLT button does not work when pressed, press the VCR button on the remote and try the button again.

## Weak Signal Display ON/OFF Feature


When "ON" is selected, picture is displayed even when broadcast signal is weak or nonexistent.




**Display MENU.**  
Press ACTION.\*

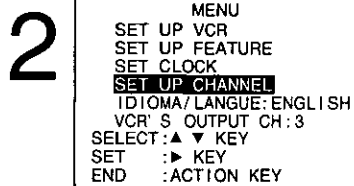


**Display SET UP CHANNEL.**

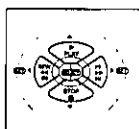

- 1) Press ▲▼ to select.
- 2) Press ► to display.

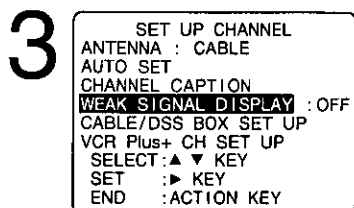

**Set ON or OFF.**

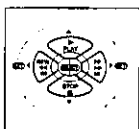

- 1) Press ▲▼ to select.
- 2) Press ► to set.

- ON --> Picture is displayed regardless of signal condition, and may not always be clearly visible.
- OFF --> Screen turns solid blue when signal is absent or weak.
- If VCR is connected to equipment which has blue back feature, selecting ON will have no effect on the other equipment.




**Return to normal screen.**  
Press ACTION twice.


## Auto Shut-Off Feature

When "ON" is selected, VCR shuts itself off when playback of a blank portion of tape continues or no signal (except when LINE is selected) is detected for over 5 minutes.


**a Repeat step "a" and "b" on page 30 to display SET UP VCR.**

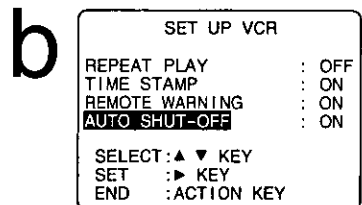


**Set ON or OFF.**

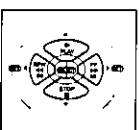

 - 1) Press ▲▼ to select.
- 2) Press ► to set.

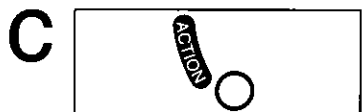


**Return to normal screen.**  
Press ACTION twice.

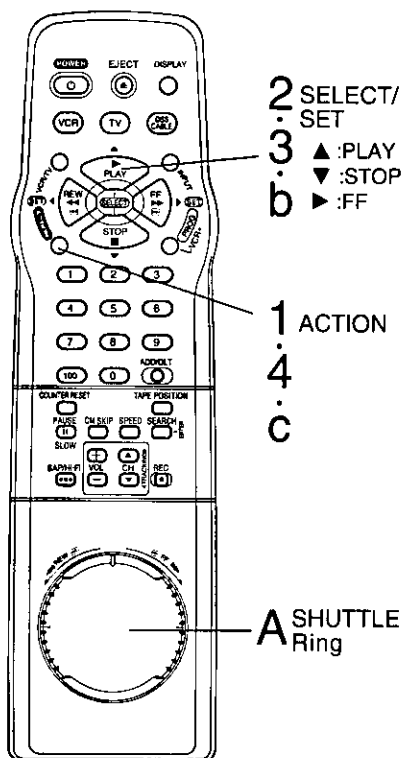

## Shuttle Variable Speed Search

The SHUTTLE Ring allows you to smoothly control the tape speed during special effects playback in both forward or reverse.

**A Place the forward or reverse search.**

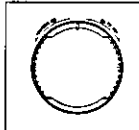

Turn SHUTTLE Ring while in Play or Still mode.

- The more you turn the Ring, the faster the search speed will be.

**B Release the Shuttle mode.**  
Press a function button such as : PLAY, STOP, etc.

- The VCR performs the function of the button pressed.

### Notes

- When the SHUTTLE Ring is turned more than half in Stop mode, normal Fast Forward or Rewind will begin.
- Some noise bars are normal during Shuttle operation.
- After 3 minutes in Still or Slow, the VCR will go into Stop mode.
- When the SHUTTLE Ring is released, the VCR goes into Still mode.

# Reset Language, Channels, Clock, VCR's

1

```

MENU
SET UP VCR
SET UP FEATURE
SET CLOCK
SET UP CHANNEL
IDIOMA/LANGUE: ENGLISH
VCR'S OUTPUT CH:3
SELECT:▲▼ KEY
SET :▶ KEY
END :ACTION KEY
    
```



## Display MENU.

Press ACTION.\*

## 2 Language

- 1) Press ▲▼ to highlight language item.

```

MENU
SET UP VCR
SET UP FEATURE
SET CLOCK
SET UP CHANNEL
IDIOMA/LANGUE: ENGLISH
VCR'S OUTPUT CH:3
SELECT:▲▼ KEY
SET :▶ KEY
END :ACTION KEY
    
```

- 2) Press ▶ repeatedly.

```

MENU
SET UP VCR
SET UP FEATURE
SET CLOCK
SET UP CHANNEL
IDIOMA/LANGUE: ENGLISH
VCR'S OUTPUT CH:3
SELECT:▲▼ KEY
SET :▶ KEY
END :ACTION KEY
    
```

For English

```

MENU
PREPARAR VCR
FIJACION DE FUNCIONES
FIJAR RELOJ
FIJAR CANAL
LANGUE/LANGUAGE: ESPAÑOL
SALIDA DE VCR CANAL: 3
ELEGIR:▲▼
FIJAR :▶
TERMINAR:ACTION
    
```

For Spanish

```

MENU
REGLAGE MAGNETOSCOPE
REGLAGE MAGNETO SUPPLEM
REGLAGE HORLOGE
REGLAGE CANAL
LANGUAGE/IDIOMA: FRANÇAIS
CA SORTIE:3
SEL. :▲▼
REGLER:▶
FIN :ACTION
    
```

For French

## Channels

- 1) Press ▲▼ to select SET UP CHANNEL.

```

MENU
SET UP VCR
SET UP FEATURE
SET CLOCK
SET UP CHANNEL
IDIOMA/LANGUE: ENGLISH
VCR'S OUTPUT CH:3
SELECT:▲▼ KEY
SET :▶ KEY
END :ACTION KEY
    
```

- 2) Press ▶.

```

SET UP CHANNEL
ANTENNA : CABLE
AUTO SET
CHANNEL CAPTION
WEAK SIGNAL DISPLAY : OFF
CABLE/DSS BOX SET UP
VCR Plus+ CH SET UP
SELECT:▲▼ KEY
SET :▶ KEY
END :ACTION KEY
    
```

- 3) Press ▲▼ to select "ANTENNA," then press ▶ to set your antenna system (TV or CABLE).

- 4) Press ▲▼ to select "AUTO SET," then press ▶.

- If you use a cable box, set it to the PBS channel in your time zone.

```

CHANNEL/CLOCK AUTO SET
CONNECT ANTENNA CABLE
AND IF YOU USE A CABLE
BOX, TUNE IT TO YOUR
LOCAL PBS CH THEN...
PLEASE PUSH CH UP KEY
    
```

(This screen appears only when auto clock is set.)

- 5) Press CH ▲.

- After Channel Auto Set is finished, Clock Auto Set will be performed.

## Clock

- 1) Press ▲▼ to select SET CLOCK.

```

MENU
SET UP VCR
SET UP FEATURE
SET CLOCK
SET UP CHANNEL
IDIOMA/LANGUE: ENGLISH
VCR'S OUTPUT CH:3
SELECT:▲▼ KEY
SET :▶ KEY
END :ACTION KEY
    
```

- 2) Press ▶.

```

SET CLOCK
AUTO CLOCK SET
MANUAL
TIME ZONE ADJUST : 0
SELECT:▲▼ KEY
SET :▶ KEY
END :ACTION KEY
    
```

("TIME ZONE ADJUST" appears only when clock is set automatically.)

- 3) Press ▲▼ to select MANUAL and press ▶.

- For Auto Clock Set, select "AUTO CLOCK SET," then press CH ▲.

```

SET CLOCK | / | \ | /
1 / 4 / 2000 TUE 12:00PM
DST: ON
-----
SELECT HOUR
SELECT:▲▼ KEY
SET :◀▶ KEY
END :ACTION KEY
    
```

- 4) Press ▲▼ and ◀▶ to select and set the date, time, and DST (Daylight Saving Time).

- 5) Press ACTION twice to start the clock and exit this mode.



# Output Channel

**\*Important:** If the remote control POWER, ACTION, PROG/VCR+, CH▲/▼, NUMBERED keys, INPUT, SEARCH or ADD/DLT button does not work when pressed, press the VCR button on the remote and try the button again.

## Time Zone Adjust

(When Auto Clock is set only.)

- 1) Press ▲▼ to select SET CLOCK.

```

MENU
SET UP VCR
SET UP FEATURE
SET CLOCK
SET UP CHANNEL
IDIOMA/LANGUE: ENGLISH
VCR'S OUTPUT CH: 3
SELECT: ▲▼ KEY
SET : ► KEY
END : ACTION KEY
    
```

- 2) Press ►.

```

SET CLOCK

AUTO CLOCK SET
MANUAL
TIME ZONE ADJUST : 0
SELECT: ▲▼ KEY
SET : ◀▶ KEY
END : ACTION KEY
    
```

- 3) Press ▲▼ to select TIME ZONE ADJUST and press ◀ or ▶ to subtract or add hour(s) as necessary.

```

SET CLOCK

AUTO CLOCK SET
MANUAL
TIME ZONE ADJUST : +1
SELECT: ▲▼ KEY
SET : ◀ KEY
END : ACTION KEY
    
```

- 4) Press ACTION twice.

- 5) Press POWER off to perform AUTO CLOCK SET.

- TIME ZONE ADJUST returns to "0" if clock is set manually.

## VCR's Output Channel

- 1) Press ▲▼ to select VCR'S OUTPUT CH.

```

MENU
SET UP VCR
SET UP FEATURE
SET CLOCK
SET UP CHANNEL
IDIOMA/LANGUE: ENGLISH
VCR'S OUTPUT CH: 3
SELECT: ▲▼ KEY
SET : ► KEY
END : ACTION KEY
    
```

- 2) Press ►.

```

IF YOU PUSH ACTION KEY,
VCR'S OUTPUT CH SWITCHES
TO CH 4.
    
```

- 3) Press ACTION.

```


PLEASE TUNE YOUR TV TO
CH 4.
    
```

After 3 seconds

```

MENU
SET UP VCR
SET UP FEATURE
SET CLOCK
SET UP CHANNEL
IDIOMA/LANGUE: ENGLISH
VCR'S OUTPUT CH: 4
SELECT: ▲▼ KEY
SET : ► KEY
END : ACTION KEY
    
```

- To Make Corrections, repeat step 1) ~ 3).

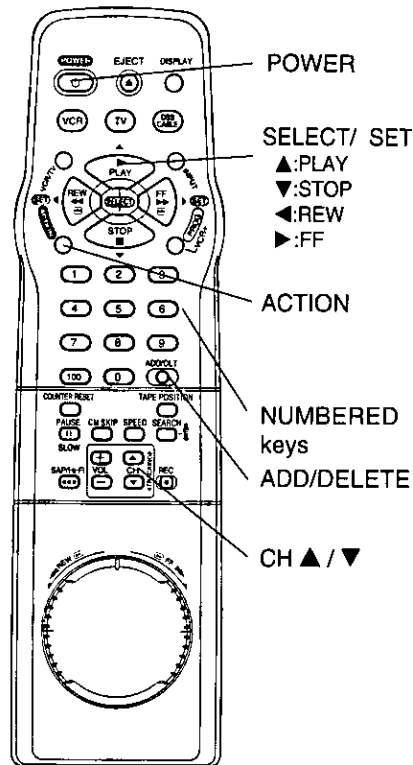

## Add or Delete a Channel

To add channel:  
Select channel with NUMBERED keys and press ADD/DLT.

```

CHANNEL 08 ADDED
    
```

To delete channel:  
Select channel with CH ▲ / ▼ or NUMBERED keys and press ADD/DLT.

```

CHANNEL 08 DELETED
    
```


Reset Language, Channels, Clock,  
VCR's Output Channel

# VCR & Cassette Information

## Reset All VCR Memory Functions


Use when moving VCR to new location, or if a mistake was made in the One Time VCR Setup section.

- Make sure a tape is not inserted in the VCR.

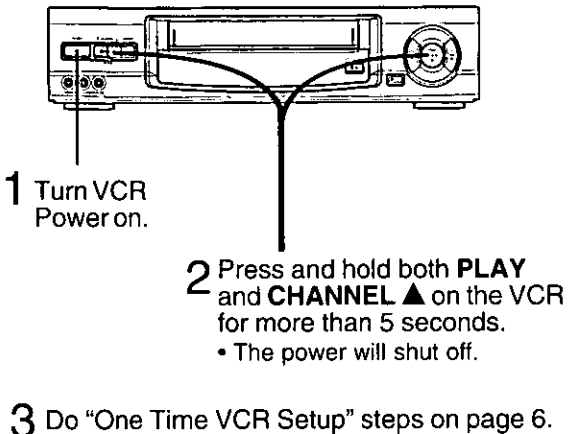


## Prevent Accidental Tape Erasure

Break off the tab.

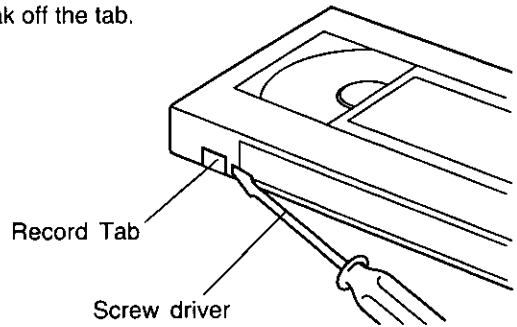

To record again

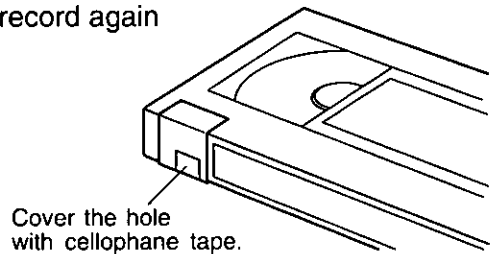

## DST (Daylight Saving Time)

VCR auto adjusts clock for DST. (Page 7.)

### Spring (First Sunday in April)

DST:ON --> sets clock ahead one hour.

### Autumn (Last Sunday in October)

DST:ON --> Turns clock back one hour.

- If your area does not observe Daylight Saving Time, select DST:OFF.
- Keep these time changes in mind when programming the VCR for timer recordings.

## Record/Playback Time

Only use tapes with the **VHS** mark in this unit.

Tape Speed Setting	Type of Video Cassette		
	T60	T120	T160
SP (Standard Play)	1 Hour	2 Hours	2 Hours 40 Minutes
LP (Long Play)	2 Hours	4 Hours	5 Hours 20 Minutes
SLP (Super Long Play)	3 Hours	6 Hours	8 Hours

## Head Cleaning

Playing older or damaged tapes may eventually cause video heads to become clogged.


### Video Head Clog Sensor

During playback this screen appears if clogging is detected. To remove screen, press PLAY on the remote or VCR.

VIDEO HEADS MAY  
NEED CLEANING  
PLEASE INSERT HEAD  
CLEANING CASSETTE  
OR REFER TO MANUAL

END:PLAY KEY

- Use "dry" type head cleaning cassette only. (Part No. NV-TCL30PT is recommended.)

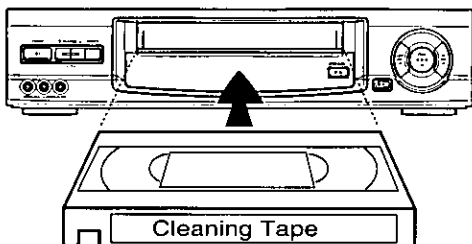

- Follow cleaning tape instructions carefully. Excessive use of tape can shorten head life.
- If head clog symptoms persist, contact your nearest Factory Service Center or authorized Service Center. (See page 38.)

## Built-in Head Cleaner

A clean video head helps produce a clear picture.

So, we have equipped your VCR with a built-in, non-chemical head cleaning system that helps prevent clogging of the video heads. Cleaning is performed each time you load or unload a video cassette.

- This feature is preventative only. If your video heads are seriously clogged, consider the use of a chemical non-abrasive head cleaning kit or take your VCR to a Service Center.

## Cleaning the VCR

Use a soft cloth or dusting attachment of your vacuum cleaner to dust your VCR. Remove dust from the ventilation holes on the back sides and bottom of the cabinet.

Plastic surfaces are easily scratched and can be marred by alcohol and various solvents. Avoid excessive use of oil-based furniture polishes since the materials used in the cabinet will accumulate more dust. We recommend using a nonabrasive, antistatic cleaner and polisher.

## Specifications

<b>Power Source:</b>	120 V AC, 60 Hz
<b>Power Consumption:</b>	<u>Power On</u> Approx. 23 watts <u>Power Off</u> Approx. 3.3 watts
<b>Video Signal:</b>	EIA Standard NTSC color
<b>Video Recording System:</b>	4 rotary heads helical scanning system
<b>Audio Track:</b>	1 track (Normal) 2 channel (Hi-Fi Audio Sound)
<b>Tuner:</b>	
<b>Broadcast Channels:</b>	VHF 2-13, UHF 14-69
<b>CABLE Channels:</b>	Midband A through I (14-22) Superband J through W (23-36) Hyperband AA-EEE (37-64) Lowband A-5-A-1 (95-99) Special CABLE channel 5 A (01) Ultraband 65-94, 100-125
<b>Operating Temperature:</b>	5 °C~40 °C (41 °F~104 °F)
<b>Operating Humidity:</b>	10 %~75 %
<b>Weight:</b>	3.4 kg (7.4 lbs.)
<b>Dimensions:</b>	430 (W) x 98 (H) x 250 (D) mm 16-15/16" (W) x 3-7/8" (H) x 9-3/4" (D)

Note: Designs and specifications are subject to change without notice.

## Features for a Quality Picture

### Digital Auto Picture


Automatically controls the video output signal for less noise depending on the tape condition.

### Digital Auto Tracking

Continuously analyzes the signal and adjusts for optimum picture quality.

### Manual Tracking Control (to reduce picture noise)

Use during Playback and Slow Motion mode to reduce picture noise. Press CH (TRACKING) ▲ / ▼ buttons on the remote control or on the VCR until the picture clears up. To return to Auto Tracking, press POWER off, then on again a few seconds later.

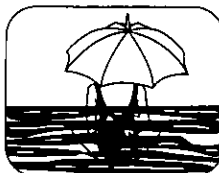


### V-Lock Control (to reduce picture jitter)

In Still mode, CH (TRACKING) ▲ / ▼ buttons operate as a V-Lock control.

# On-Screen Displays (OSD)

## Function & Channel Display

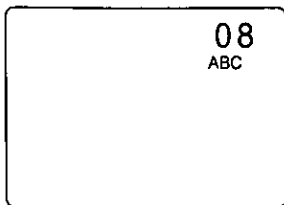


When a function button is pressed, e.g. PLAY, or you change channels, a 4 second display appears first in large and then small characters. (Some Station names may also appear if Channel Caption is set. See page 26, 27.)

## Blank Tape/ No Video Signal Indication

 
Whenever a blank section of a tape comes up in Play mode, or when the selected channel has no broadcast signal with the Weak Signal Display Feature (page 31) set to OFF, the TV screen will turn solid blue.

## VCR Status & Clock Display

To display or remove the overlay.

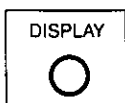

Press DISPLAY.

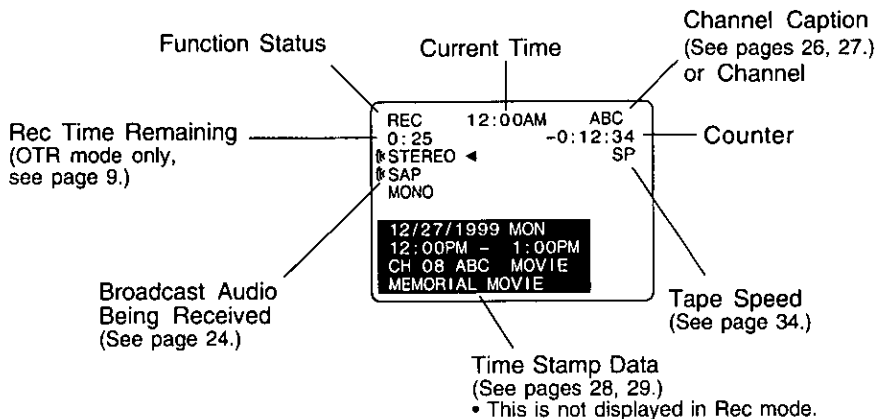

## Warning and Instruction Displays

These displays will alert you of a missed operation or provide further instructions.

OSD	Caution	Pg	OSD	Caution	Pg
NO CH FOUND PLEASE CHECK ANTENNA CABLE CONNECTION THEN PUSH VCR CH UP KEY AGAIN	If no active channels are found for CHANNEL MEMORY...	6	TO CANCEL TIMER REC PUSH POWER THEN STOP KEY	If you press POWER or STOP during a Timer Recording... (visible in VCR mode only)	13
PLEASE SET CLOCK BEFORE PROGRAMMING	If you attempt to set or review a Timer Recording and the Clock is not set...	12	VIDEO HEADS MAY NEED CLEANING PLEASE INSERT HEAD CLEANING CASSETTE OR REFER TO MANUAL  END: PLAY KEY	If head cleaning becomes necessary while playing back a tape...	35
TURN VCR OFF FOR TIMER RECORDING	After a Timer Program has been set...	13	VCR LOCK ACTIVATED	If you press a function button other than STOP/EJECT or POWER while the VCR is in VCR Lock mode...	30
CHECK CASSETTE RECORD TAB	If you press REC on the remote control or VCR, and a cassette is inserted with no record tab...	34	REMOTE CONTROL IS SET TO CABLE/DSS MODE  USE VCR : VCR KEY USE TV : TV KEY	If you press any invalid keys on the remote while in CABLE/DSS mode...	18 19 30
NO CASSETTE PLEASE INSERT A CASSETTE	If you press PLAY, FF, REW, or REC on the remote control or VCR without a cassette inserted...	8 9	REMOTE CONTROL IS SET TO TV MODE  USE VCR : VCR KEY USE CABLE/DSS : CABLE/DSS	If you press any invalid keys on the remote while in TV mode...	18 19 30

# Before Requesting Service

Check the following points once again if you are having trouble with your VCR.

Power	Correction
No power...	<ul style="list-style-type: none"> <li>• Completely insert Power Plug into an AC outlet.</li> <li>• Set POWER button to on.</li> <li>• Make sure power source is active.</li> </ul>
Recording & Playback	Correction
TV program cannot be recorded...	<ul style="list-style-type: none"> <li>• Check connections between VCR, external antenna, and TV.</li> <li>• Check hook up selection. (P.4-5)</li> <li>• Make sure your antenna system (CABLE or TV) is correctly set. (Channels [P.32])</li> <li>• Make sure cassette record tab is intact. (P.34)</li> </ul>
Timer recording cannot be performed...	<ul style="list-style-type: none"> <li>• Check clock is set to current time and date.</li> <li>• Make sure Cable/DSS box (if used) is left on and tuned to channel to be recorded.</li> <li>• Set recording start/stop times correctly. (P.12)</li> <li>• Make sure POWER button is set to off. (P.12, 13)</li> <li>• Timer recording may not be performed or continued if a power interruption of more than 1 minute occurs before or during, a Timer Recording, even after power is restored.</li> </ul>
There is no playback picture, or the playback picture is noisy or contains streaks...	<ul style="list-style-type: none"> <li>• Select channel 3 or 4 on TV to match VCR output channel (3 or 4) (P.6) or select LINE.</li> <li>• Set VCR/TV selector to "VCR."</li> <li>• Adjust TRACKING control in either direction. (P.35)</li> <li>• Try Head Cleaning. (P.35)</li> </ul>
Special effects playback, picture may contain some vertical jitter when using a TV with an Automatic Vertical Hold Control...	<ul style="list-style-type: none"> <li>• Set TV's Vertical Hold Control to MANUAL, then adjust.</li> </ul>
VCR cannot be controlled...	<ul style="list-style-type: none"> <li>• Make sure VCR LOCK is set to off. (P.30)</li> <li>• Make sure remote is in proper mode. (P.18)</li> <li>• Make sure unit is not in a Timer Record operation.</li> </ul>
Remote Control	Correction
VCR cannot be remote controlled...	<ul style="list-style-type: none"> <li>• Aim Remote Control directly at remote sensor on VCR. (P.42)</li> <li>• Avoid any object blocking signal path.</li> <li>• Check remote batteries. (P.4)</li> <li>• Make sure VCR LOCK is set to off. (P.30)</li> <li>• Exposing VCR remote sensor to direct fluorescent or outdoor light may cause signal interference.</li> </ul>
ACTION and PROG/VCR+ buttons cannot be used...	<ul style="list-style-type: none"> <li>• Press VCR button for VCR mode. (P.18)</li> <li>• Check remote Batteries. (P.4)</li> </ul>
Miscellaneous	Correction
Programs cannot be viewed on TV...	<ul style="list-style-type: none"> <li>• Set VCR/TV selector to "TV." (P.9)</li> <li>• Make sure proper signal source is selected.</li> </ul>
Video cassette cannot be inserted...	<ul style="list-style-type: none"> <li>• Insert the cassette with window side up; record tab facing you.</li> <li>• Insure no other tape is inside unit.</li> </ul>
Video cassette cannot be removed...	<ul style="list-style-type: none"> <li>• Completely insert Power Plug into AC outlet.</li> </ul>
Video cassette ejects when a recording is started or the power is turned off for timer recording...	<ul style="list-style-type: none"> <li>• Make sure cassette record tab is intact. (P.34)</li> </ul>
In Stop mode, the motor (CYLINDER) continues to rotate...	<ul style="list-style-type: none"> <li>• To enable Quick play mechanism, the cylinder will rotate for about 5 minutes. This reduces response time from Stop to Play mode and from Play to Rewind Search mode.</li> </ul>
The top of the playback picture waves back and forth excessively...	<ul style="list-style-type: none"> <li>• Because VCR playback signal is not as stable as off-the-air TV signal, top of TV screen may be bent or unstable during playback. Slowly turn TV horizontal Hold control to correct. If your TV has no horizontal Hold control or adjusting control is ineffective, contact your nearest TV service center.</li> </ul>

If you cannot resolve the problem, please call the Customer Satisfaction Center for product assistance at 201-348-9090.

To locate an authorized servicenter, please call toll free 1-800-211-PANA (7262).

# Service Center List

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:

**1-800-211-PANA (7262)**, Monday-Friday 9am-9pm Saturday-Sunday 9am-7pm, EST.

Web Site: <http://www.panasonic.com>

You can purchase parts, accessories or locate your nearest servicenter by visiting our Web Site.

## Accessory Purchases:

Customer Orders Only 800-332-5368 (Customer Orders Only)

Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032

(6 am to 5 pm Monday - Friday; 6 am to 10:30 am Saturday; PST)

(Visa, MasterCard, Discover Card, American Express, Check)

## Factory Servicenters Locations

### CALIFORNIA

6550 Katella Avenue  
Cypress, CA 90630

800 Dubuque Avenue  
S. San Francisco,  
CA 94080

20201 Sherman Way  
Suite 102  
Canoga Park, CA 91306

3878 Ruffin Road  
Suite A  
San Diego, CA 92123

### COLORADO

1640 South Abilene Street  
Suite D  
Aurora, CO 80012

### FLORIDA

3700 North 29th Avenue  
Suite 102  
Hollywood, FL 33020

### GEORGIA

8655 Roswell Road  
Suite 100  
Atlanta, GA 30350

### ILLINOIS

9060 Golf Road  
Niles, IL 60714

1703 North Randall  
Road  
Elgin, IL 60123  
(Pick-up / Drop-off only)

### MARYLAND

62 Mountain Road  
Glen Burnie, MD 21061

### MASSACHUSETTS

60 Glacier Drive  
Suite G  
Westwood, MA 02090

### MICHIGAN

37048 Van Dyke Avenue  
Sterling Heights, MI 48312

### MINNESOTA

7850-12th Avenue South  
Airport Business Center  
Bloomington, MN 55425

### OHIO

2236 Waycross Road  
Civic Center Plaza  
Forest Park, OH 45240

### PENNSYLVANIA

2221 Cabot Blvd. West  
Suite B  
Langhorne, PA 19047

### TENNESSEE

3800 Ezell Road  
Suite 806  
Nashville, TN 37203

### TEXAS

13615 Welch Road  
Suite 101  
Farmers Branch,  
TX 75244

### WASHINGTON

20425-84th Avenue  
South  
Kent, WA 98032

### HAWAII

99-859 Iwaiwa Street  
Aiea, Hawaii 96701  
Phone (808)488-  
1996  
Fax (808)486-4369

## Service in Puerto Rico

Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/ Factory Servicenter:

Ave. 65 de Infanteria, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985

Phone (787)750-4300 Fax (787)768-2910

As of October '99

# Warranty

Panasonic Consumer Electronics Company,  
Division of Matsushita Electric Corporation  
of America,  
One Panasonic Way  
Secaucus, New Jersey 07094

Panasonic Sales Company,  
Division of Matsushita Electric of Puerto Rico, Inc.  
AVE. 65 de Infantería, Km. 9.5  
San Gabriel Industrial Park  
Carolina, Puerto Rico 00985

## PANASONIC Video Products Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the Warrantor") will repair this product with new or refurbished parts, free of charge, in the USA or Puerto Rico, in the event of a defect in materials or workmanship as follows (all time periods commence from the date of the original purchase):

<u>PRODUCT</u>	<u>PARTS</u>	<u>LABOR</u>
CAMCORDER	ONE (1) YEAR, EXCEPT CCD IMAGE SENSOR CCD IMAGE SENSOR - SIX (6) MONTHS	NINETY (90) DAYS NINETY (90) DAYS
VCR	ONE (1) YEAR	NINETY (90) DAYS
A/V MIXER	ONE (1) YEAR	NINETY (90) DAYS
MONITOR-VCR	ONE (1) YEAR, EXCEPT CRT CRT - TWO (2) YEARS	NINETY (90) DAYS CRT - NINETY (90) DAYS CUSTOMER PAYS ALL LABOR CHARGES AFTER 90 DAYS

**Monitor-VCR In-home or carry-in Service: 22" (diagonal) CRT / LCD and Larger**  
**Monitor-VCR Carry-in Service: 21" (diagonal) CRT / LCD and smaller**

Batteries (if included) - New rechargeable batteries in exchange for defective rechargeable batteries for ten (10) days. Non-rechargeable batteries are not warranted.

Tape (if included) - New video cassette tape in exchange for a defective video cassette tape for five (5) days.

In-home, carry-in or mail-in service, as applicable, in the USA can be obtained during the warranty period by contacting a Panasonic Services Company (PASC) Factory Servicenter listed in the Service Directory. Or call toll free 1-800-211-PANA (7262), to locate an authorized PASC Servicenter. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the Panasonic Sales Company telephone number listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of the date of the original purchase is required before warranty service is rendered.

This warranty only covers failures due to defects in materials and workmanship which occur during normal use and does not cover normal maintenance, including, but not limited to, video and audio head cleaning. The warranty does not cover damage which occurs in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set-up adjustments, improper antenna, inadequate signal pickup, maladjustment of consumer controls, improper operation, power line surge, improper voltage supply, lightning damage, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a PASC Factory Servicenter or a PASC authorized Servicenter, or damage that is attributable to acts of God.

### LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES) RESULTING FROM THE USE OF THIS PRODUCTS, OR ARISING OUT OF ANY BREACH OF THE WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Customer Satisfaction Center at the Panasonic Consumer Electronics Company address above.

SERVICE CALLS WHICH DO NOT INVOLVE DEFECTIVE MATERIALS OR WORKMANSHIP AS DETERMINED BY THE WARRANTOR, IN ITS SOLE DISCRETION, ARE NOT COVERED. COSTS OF SUCH SERVICE CALLS ARE THE RESPONSIBILITY OF THE PURCHASER.

warvid 10/20/97

## Para ajustar el idioma, canal y reloj

### 1 Encienda el televisor y la videograbadora.


Presione POWER.

- Si se utiliza un cable de conexión AV, sitúe el TV en la posición Video en lugar de en la posición canal. (Véase el punto a, en la página 4).

### 2


**Visualización de SELECCIÓN DE IDIOMA.**  
Esta visualización aparece sólo cuando realice la configuración por primera vez.

#### Seleccione el idioma.

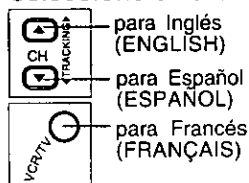

**Si se utiliza la conexión b) (véase la página 4), sintonícelo en el canal de salida de VCR.**

Si la imagen tiene oscilaciones o ruido cuando el equipo esté situado en VCR OUTPUT CH3, cambie a CH4 pulsando ACTION dos veces. Luego, sintonice el TV en el CH4.

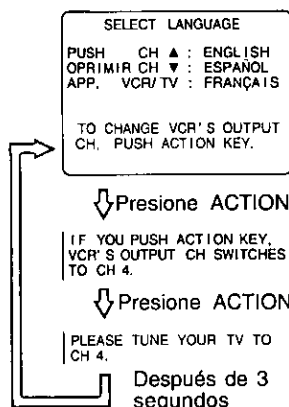


- Sintonice siempre el TV a este canal para monitorizar la video grabadora.
- Si utilizó la conexión del conector audio/video, sintonice el TV a su entrada de video.
- Si se ajusta el idioma equivocado, realice los pasos de "Reajuste de todas las funciones de memoria de la video grabadora" en la página 34.

### 3

#### Seleccione la conexión.

- 1) Presione ▲▼ para seleccionar.
- 2) Presione ► para ajustar.

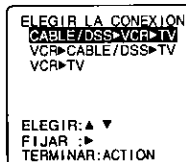


- Si ud. ha elegido CABLE/ DSS ► VCR ► TV, continúe al paso 4 y sólo el canal de salida del cable será memorizado. Si no, vaya al paso 6.

### 4

#### Seleccione la caja de TV por cable o su receptor el canal de salida.

- 1) Presione ▲▼ para seleccionar.
- 2) Presione ► para fijar.

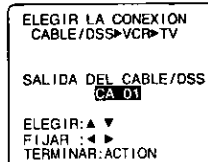

- Si es necesario, consulte su manual de la caja de TV por cable.
- Si esta usando los terminales de audio/ video para su conexión para la caja de TV por cable, ajuste "SALIDA DE VIDEO".


### 5 Encienda la caja de TV por cable y fije la caja de TV por cable al canal PBS de su zona.

### 6

**FIJACION AUTO. (CA/RELOJ)**  
CONECTE EL CABLE DE LA ANTENA Y SI ESTA USANDO UNA CAJA DE TV POR CABLE SINTONICE AL CANAL PBS DE SU LOCAL LUEGO...  
POR FAVOR OPRIMIR CH UP

**Comience el ajuste automático de canales y el ajuste automático del reloj.**

Presione CH ▲.

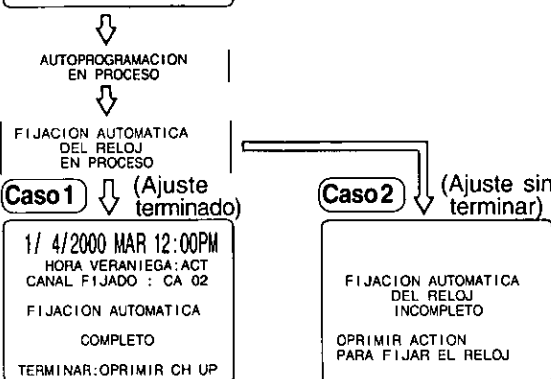

Presione CH ▲ para salir.

#### Caso 2 El ajuste del reloj es incompleto.

#### Ajuste el reloj manualmente.


- 1) Presione ACTION.
- 2) Presione ▲▼ para seleccionar el mes.
- 3) Presione ► para ajustar.
  - De la misma manera, ajuste el día, el año, la hora y la hora de ahorro de energía (VERANO).
  - Para hacer correcciones, presione repetidamente ◀► para moverse hasta el error, luego corríjalo.
- 4) Presione ACTION. (El reloj se activa.)
  - Para salir de este modo, pulse la tecla ACTION nuevamente.

## Ajustar de nuevo el reloj

### 1 Presione ACTION para exhiba el menú.


### 2

Presione ▲▼ para seleccionar "FIJAR RELOJ" y luego presione ►.

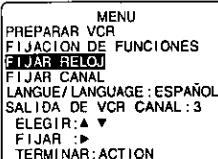


### 3

Presione ▲▼ para seleccionar "MANUAL" y luego presione ►.

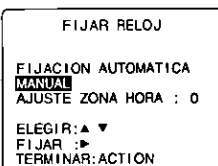

### 4

Presione ▲▼ y ◀► para seleccionar y ajustar la hora y la fecha.

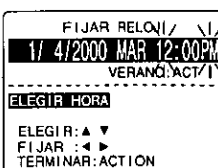

### 5 Presione ACTION dos veces para que el reloj comience a funcionar y salir desde este modo.



## Operaciones básicas para la reproducción

### 1 Inserte un casete.

- La videograbadora se enciende automáticamente.


### 2 Presione PLAY.

- O, si el casete no tuviera la lengüeta de grabación (véase la página 34), se inicia la reproducción automática.

- Para encontrar una escena en particular  
Búsqueda hacia adelante ---> Presione FF.  
Búsqueda hacia atrás ---> Presione REW.
- Para ver una imagen fija (congelada) --->  
Presione PAUSE/SLOW.
- Para ver imágenes cuadro a cuadro --->  
Presione PAUSE/SLOW en el modo de imagen fija.
- Para ver en cámara lenta ---> Mantenga pulsado el botón PAUSE/SLOW en el modo de imagen fija.
- Para parar ---> Presione STOP.
- Para rebobinar la cinta ---> Presione REW.
- Para hacer avanzar la cinta rápidamente --->  
Presione FF
- Para expulsar la cinta ---> Presione STOP/EJECT en el videograbadora.

## Operaciones básicas para la grabación

### 1 Inserte un casete.

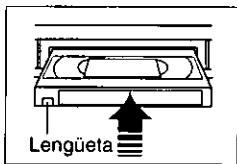

- La videograbadora se enciende automáticamente.

### 2 Seleccione el canal.

Presione CH ▲ / ▼ o las teclas numéricas correspondiente.

### 3 Seleccione la velocidad de grabación.

 
Presione SPEED.

- SP = Reproducción estándar,
- LP = Larga duración,
- SLP = Superlarga duración.

### 4 Comience la grabación.

Presione REC.

- Presione PAUSE/SLOW para hacer una pausa en la grabación en progreso.
- Para parar ---> Presione STOP.
- Grabación de un toque  
Presione REC repetidamente para ajustar la hora de grabación (30 min - 4 horas).
- La videograbadora termina la grabación a una hora programada.

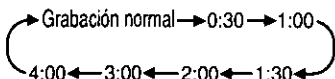

## Programación fácil para la grabación con temporizador

### 1 Exhiba FIJAR PROGRAMACION.


Presione PROG/VCR+.



### Exhiba "TEMPORIZADOR".

- 1) Presione ▲▼ para seleccionar.
- 2) Presione ► para exhibir.


- Si ya existe un programa en la memoria, presione ▲▼ y ► para seleccionar un número de programa sin usar.

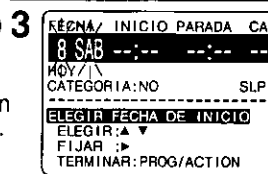

### Ajuste la fecha de grabación.

- 1) Presione ▲▼ para seleccionar.
- 2) Presione ► o ◀ para ajustar.

 
- 1~31 = Grabación única
- DIARIO = a la misma hora de lunes a viernes
- SEMANA = a la misma hora una vez a la semana

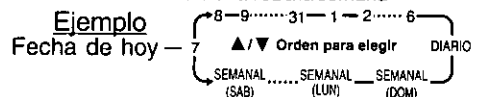

Repita el paso 3 para ajustar: hora de comienzo, hora de parada, canal (o LINEA para una fuente exterior), categoría\*, velocidad (SP, LP, SLP).

\* Categoría


NO, DEPORTE, CINE, COMEDIA, MUSICA, DRAMA

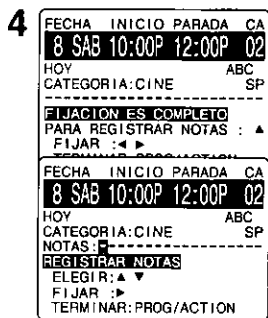

### Haga las anotaciones necesarias.

- Si no fueran necesarias, vaya al paso 5.

- 1) Presione ▲ para hacerlas.
- 2) Presione ▲▼ para seleccionar.
- 3) Presione ◀ para ajustar.
- 4) Presione PROG/VCR+ (o ACTION) para salir.

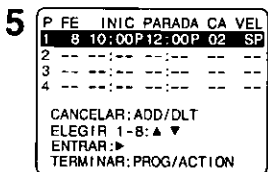

### Termine el programa.

- 1) Presione PROG/VCR+ (o ACTION).

Para introducir más programas, presione ▲▼ y ► para seleccionar y ajustar el número de programa en blanco. Luego repita los pasos 3 y 4.

- 2) Presione PROG/VCR+ (o ACTION) para salir.



Pantalla multifuncional

### Grabación con temporizador.

Presione POWER para apagar.

- Si la fuente de la grabación es una caja de TV por cable, asegúrese de que la caja de TV por cable esté encendida y esté sintonizada al canal que desea grabar.

# Location of Controls

## Remote control Buttons

**EJECT**  
See page 8.

**POWER**  
See page 6.

**VCR mode**  
See page 18.

**VCR/ TV**  
See page 9.

**PLAY**  
See page 8.  
**SELECT UP**  
See page 7.

**REWIND/ SEARCH**  
See page 8.  
**SET**  
See page 7.

**ACTION**  
See page 32.

**NUMBERED KEYS**  
See page 9.

**COUNTER RESET**  
See page 23.

**PAUSE/ SLOW**  
See page 8.

**CM SKIP**  
See page 23.

**SAP/ Hi-Fi**  
See page 25.

**VOLUME UP/ DOWN**  
See page 18.

**SHUTTLE Ring**  
See page 31.

**DISPLAY**  
See page 36.

**TV mode**  
See page 18.

**DSS/ CABLE mode**  
See page 18.

**INPUT**  
See page 11.

**FAST FORWARD/ SEARCH**  
See page 8.  
**SET**  
See page 7.

**STOP**  
See page 8.

**SELECT DOWN**  
See page 7.

**PROGRAM/ VCR+**  
See pages 12, 13, 17, 29.

**ADD/ DELETE**  
See page 33.

**TAPE POSITION**  
See page 30.


**SEARCH/ ENTER**  
See pages 20-23.

**SPEED**  
See page 9.

**RECORD**  
See page 9.


**CHANNEL UP/ DOWN**  
See page 9.

**TRACKING/ V-LOCK**  
See page 35.

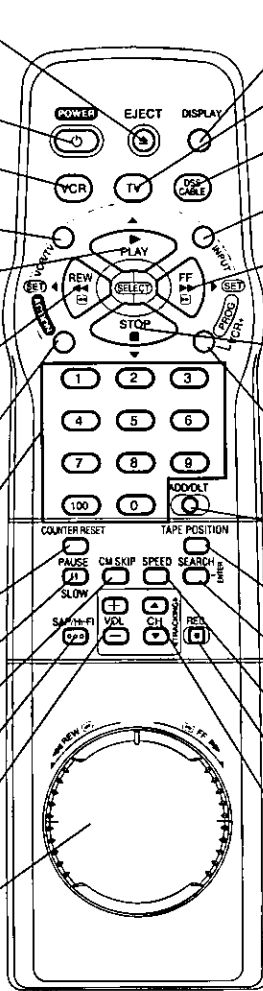


**EJECT button:** When EJECT is pressed, the tape is ejected from Cassette Compartment.  
If EJECT is pressed during recording, the VCR will not respond to the command.

## Front View of the VCR

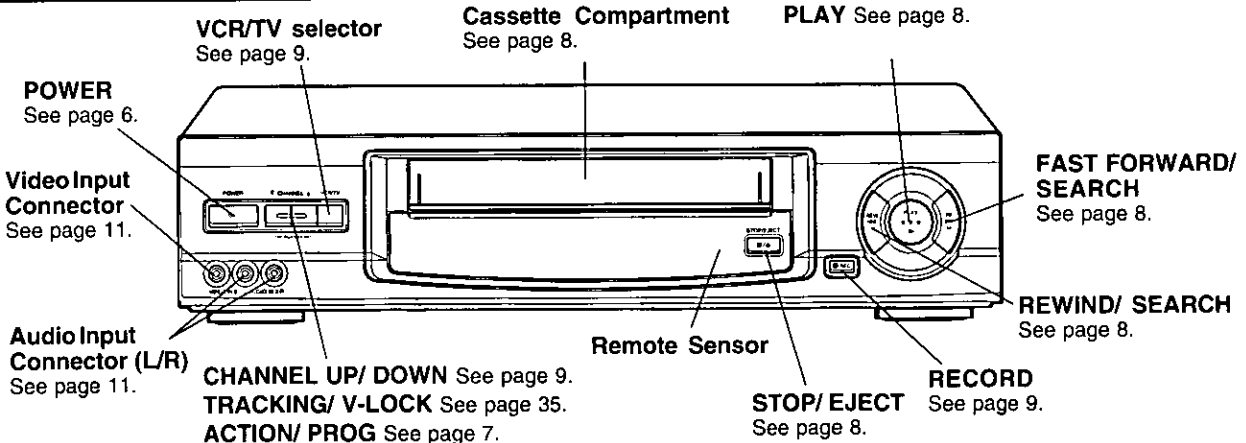

## Multi Function Display

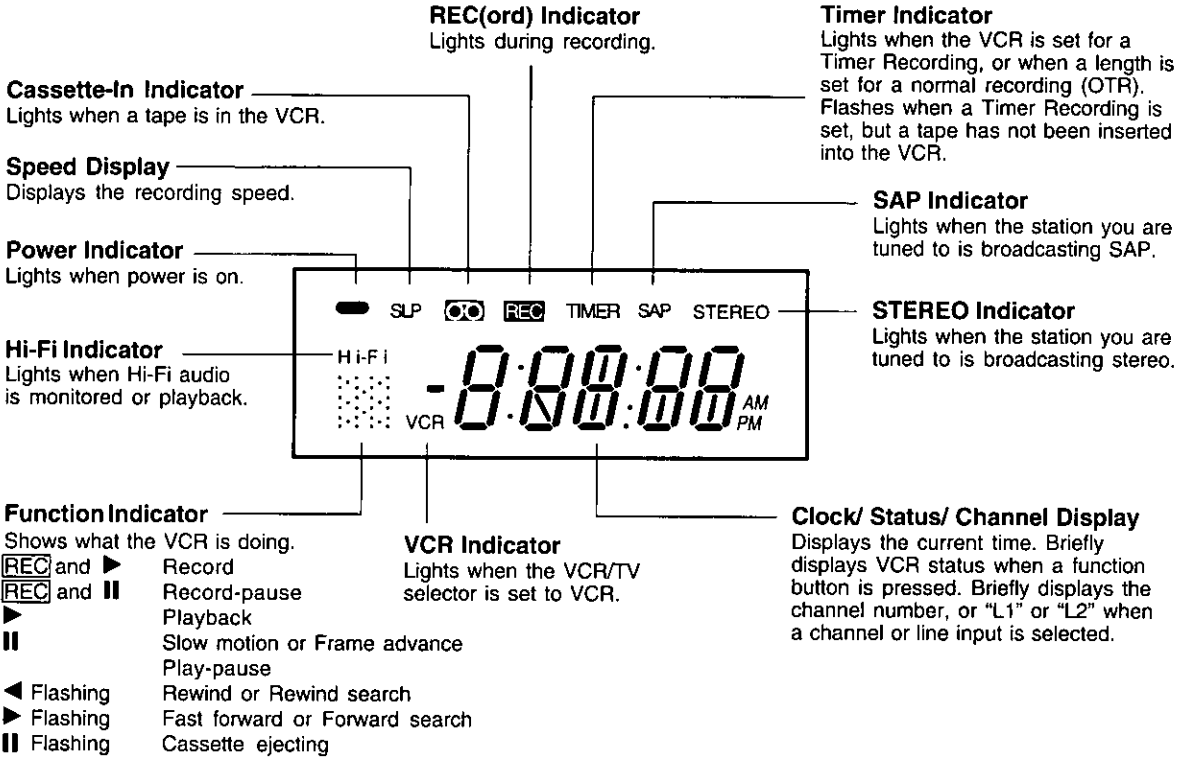

## Rear View of the VCR

### AC Power Plug

While plugged into an AC outlet, the VCR consumes 3.3 W of electrical power in off condition.

### Audio Input Connector (L/R)


See page 11.

### Video Input Connector

See page 11.

### VHF/UHF Antenna Input Terminal


See pages 4, 10.

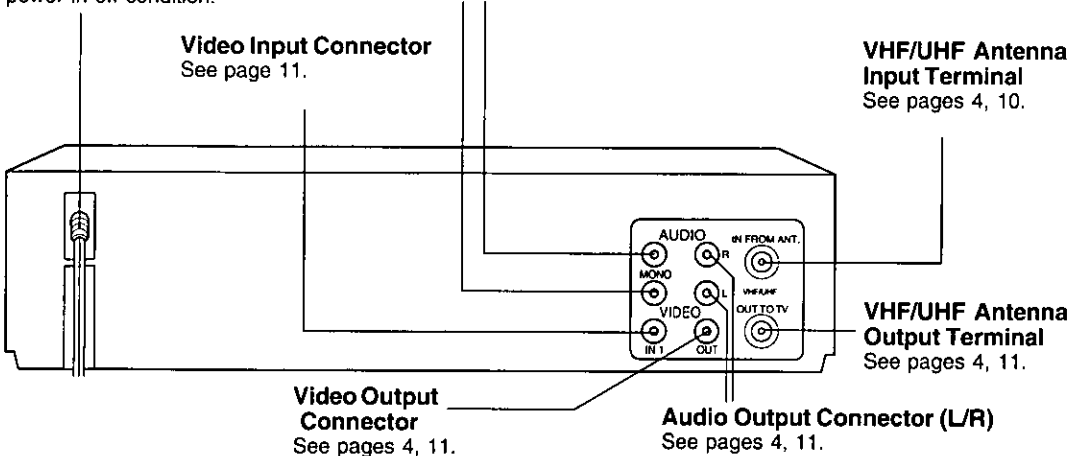

# Quick Use Guide

## 1 Make all connections (page 4).


Connect VCR and TV with AV Cable (not supplied) or RF Coaxial Cable (supplied) as shown below. To use your TV as a VCR monitor, set the VIDEO/TV selector on the TV (Monitor/Receiver) to "VIDEO." Use the L Audio OUT jack for proper sound reproduction when connecting to a monaural TV.

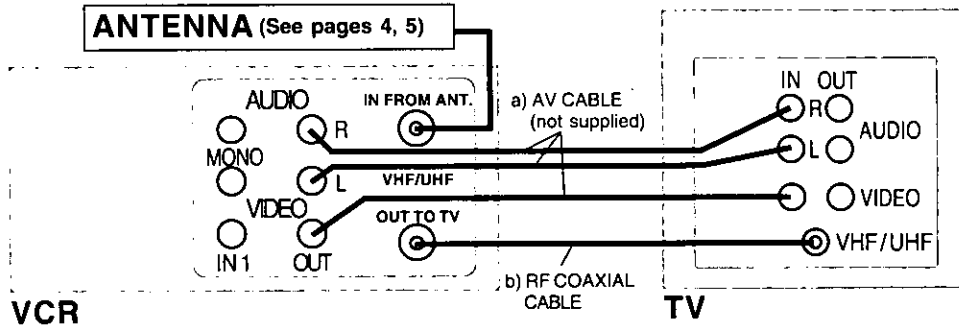


- Notes**
- 1) While connection b) (above) is sufficient, connection a) offers better sound and picture (especially with this model, you can enjoy Hi-Fi STEREO sound).
  - 2) For both connections a) and b) proceed as follows:
    - To use VCR : VCR Power on, set TV to VIDEO.
    - To watch TV : VCR Power off, select channel on.
  - 3) When using connection b) (see page 4), tune to VCR's output channel.
  - 4) Set VCR Output to channel 3 or 4 (not an active station). (See page 6.)

## Playback a Tape

### 2 Play your Tape.

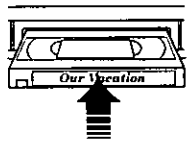

Insert a tape

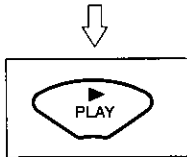


Press **PLAY**  
(Starts playback)  
• Or, if tape has no record tab, auto playback begins.

## Record on a Tape


### 2 Do "One Time VCR Setup" on page 6.

In order for the VCR to properly interface with your equipment, some setup is necessary.


### 3 Record on a Tape.

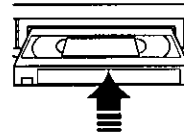


Insert a tape  
with Record Tab

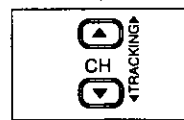

Press **CH Up/Down**.  
(Select Channel)

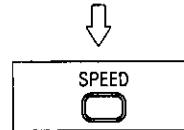

Press **SPEED**.  
(Change speed)

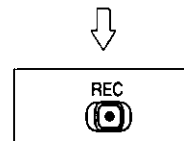

Press **REC**.  
(Starts Recording)