



Omnivision **MHS**

Panasonic

Video Cassette Recorder Operating Instructions Model No. **PV-V4621**



Connections and Initial Setup Procedures are on pages 8 to 11.



VCR Plus+, ALLSET and PlusCode are registered trademarks of Gemstar Development Corporation. The VCR Plus+ system is manufactured under license from Gemstar Development Corporation.



As an ENERGY STAR® Partner, Matsushita Electric Corporation of America has determined that this product or product model meets the ENERGY STAR® guidelines for energy efficiency.

Please read these instructions carefully before attempting to connect, operate or adjust this product. Please save this manual.

Spanish Quick Use Guide is included. (Guía para rápida consulta en español está incluida.)

LSQT0368A

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumer_products@panasonic.com

Initial Setup
(Connection)

Basic
Operation

Timer
Recording

Advanced
Operation

For Your
Information

Important Safeguards and Precautions

FOR YOUR SAFETY, READ AND RETAIN ALL SAFETY AND OPERATING INSTRUCTIONS. HEED ALL WARNINGS IN THE MANUAL AND ON THE UNIT

INSTALLATION

1 POWER SOURCE CAUTION

Operate only from a power source indicated on the unit or in this manual. If necessary, have your Electric Utility Service Company or Video Products Dealer verify the power source in your home.

2 POLARIZED OR GROUNDING PLUG

As a safety feature, this Video product comes with either a polarized power cord plug (one blade is wider than the other), or a three-wire grounding type plug.

POLARIZED PLUG CAUTION:

This plug will only fit into an outlet one way. If you cannot fully insert the plug, try reversing it. If it still will not fit, have an electrician install the proper wall outlet. Do not defeat the safety feature by tampering with the plug.

GROUNDING PLUG CAUTION:

This plug will only fit into a three-hole grounding outlet. If necessary, have an electrician install the proper outlet. Do not defeat the safety feature by tampering with the plug.

3 POWER CORD

Make sure power cords are routed so that they are not likely to have anything rest on them, roll over them, or be in the way of walking traffic. If an extension cord is used, make sure it also has either a polarized or grounded plug and that the cords can be securely connected. Frayed cords, damaged plugs, and damaged or cracked wire insulation are hazardous and should be replaced by a qualified service technician. Overloaded outlets and extension cords are fire hazards and should be avoided.

4 DO NOT BLOCK VENTILATION HOLES

Ventilation openings in the cabinet release heat generated during operation. If they are blocked, heat build-up inside the unit can cause failures that may result in a fire hazard or heat damage to cassettes. For protection, follow these rules:

- Never cover ventilation slots or the unit while in use, or operate the unit when placed on a bed, sofa, rug, or other soft surface.
- Avoid built-in installation, such as a book case or rack, unless proper ventilation is provided.

5 AVOID EXTREMELY HOT LOCATIONS OR SUDDEN TEMPERATURE CHANGES

Do not place the unit over or near any kind of heater or regulator, in direct sunlight, inside a closed vehicle, etc.. Do not move the unit suddenly between areas of extreme temperature variation. If the unit is suddenly moved from a cold place to a warm place, moisture may condense in the unit and on the tape.

6 TO AVOID PERSONAL INJURY

- Do not place unsecured equipment on a sloping surface.
- Do not place this unit on any support that is not firm, level, and adequately strong. The unit could fall causing serious injury to a child or adult and damage to the unit.
- An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- Carefully follow all operating instructions and use the manufacturer's recommended accessories when operating this unit or connecting it to any other equipment.




OUTDOOR ANTENNA INSTALLATION

1 SAFE ANTENNA AND CABLE CONNECTION

If an outside antenna or cable system is connected to the equipment, be sure the antenna or cable system is grounded so as to provide some protection against built up static charges and voltage surges. Section

810 of the National Electrical Code, ANSI/NFPA 70 (in Canada, part 1 of the Canadian Electrical Code) provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements for the grounding electrode.

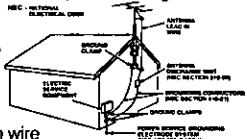

2 KEEP ANTENNA CLEAR OF HIGH VOLTAGE POWER LINES OR CIRCUITS

An outside antenna system should be located well away from power lines, electric light or power circuits and where it will never come into contact with these power sources if it should happen to fall. When installing an outside antenna, extreme care should be taken to avoid touching power lines, circuits or other power sources as this could be fatal. Because of the hazards involved, antenna installation should be left to a professional.

USING THE VIDEO UNIT

If the unit has been in storage or moved to a new location, refer first to the INSTALLATION section of these safeguards.

1 KEEP THIS VIDEO UNIT AWAY FROM WATER OR MOISTURE OF ANY KIND.

2 IF EQUIPMENT IS EXPOSED TO RAIN, MOISTURE, OR STRONG IMPACT, unplug the unit and have it inspected by a qualified service technician before use.

3 DURING AN ELECTRICAL STORM

During a lightning storm, whether indoors or outdoors, or before leaving the unit unused for extended periods of time, disconnect all equipment from the power source as well as the antenna and cable system.

4 WHEN THE UNIT IS PLUGGED IN

- Never expose the unit to rain or water. DO NOT OPERATE if liquid has been spilled into the unit. Immediately unplug the unit, and have it inspected by a service technician. Fire and shock hazards can result from electrical shorts caused by liquid contact inside.
- Never drop or push any object through openings in the unit. Some internal parts carry hazardous voltages and contact can cause electric shock or fire hazard.
- Avoid placing the unit directly above or below your TV set as this may cause electrical interference. Keep all magnets away from electronic equipment.

5 USING ACCESSORIES

Use only accessories recommended by the manufacturer to avoid risk of fire, shock, or other hazards.

6 CLEANING THE UNIT

Unplug the unit. Then, use a clean, dry, chemically untreated cloth to gently remove dust or debris. DO NOT USE cleaning fluids, aerosols, or forced air that could over-spray, or seep into the unit and cause electrical shock. Any substance such as wax, adhesive tape, etc. may mar the cabinet surface. Exposure to greasy, humid, or dusty areas may adversely affect internal parts.

SERVICE

1 DO NOT SERVICE THIS PRODUCT YOURSELF

If, after carefully following the detailed operating instructions, this Video product does not operate properly, do not attempt to open or remove covers, or make any adjustments not described in the manual. Unplug the unit and contact a qualified service technician.

2 IF REPLACEMENT PARTS ARE REQUIRED

Make sure the service technician uses only parts specified by the manufacturer, or those having the same safety characteristics as the original parts. The use of unauthorized substitutes may result in fire, electric shock, or other hazards.

3 HAVE THE SERVICE TECHNICIAN PERFORM A SAFETY CHECK

After any service or repairs to the unit, request the service technician to conduct a thorough safety check as described in the manufacturer's service literature to insure that the video unit is in safe operating condition.


Safety Precautions

Warning: To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Avertissement: Afin de prévenir tout risque d'incendie ou de chocs électriques, ne pas exposer cet appareil à la pluie ou à une humidité excessive.

Attention: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

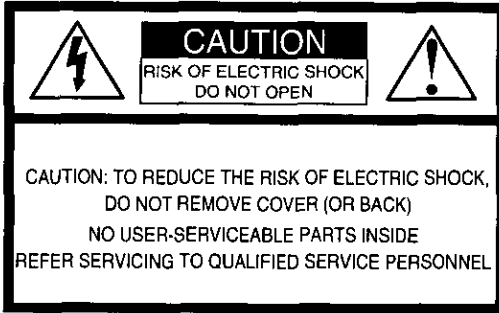

This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.



This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

Note to CABLE system installer:

This reminder is provided to call the CABLE system installer's attention to Article 820-40 of the NEC in USA (and to the Canadian Electrical Code in Canada) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

FCC Warning: Any unauthorized changes or modifications to this equipment would void the user's authority to operate.

Before Using

 
Congratulations

on your purchase of one of the most sophisticated and reliable products on the market today. Used properly, it will bring you years of enjoyment. Please fill in the information below. The serial number is on the tag located on the back of your VCR.

- Date of Purchase _____
- Dealer Purchased From _____
- Dealer Address _____
- Dealer Phone No. _____
- Model No. _____
- Serial No. _____

Accessories

- Remote Control LSSQ0287
- Batteries 2 "AA"




- RF Coaxial Cable VJAS0196



To order accessories, call toll free 1-800-332-5368.


Loading the Batteries

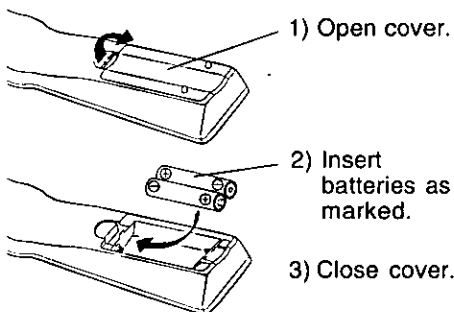


- Battery replacement caution**
 - Do not mix old and new batteries.
 - Do not mix alkaline with manganese batteries.

Prevent Accidental Tape Erasure

Break off the tab to prevent recording.

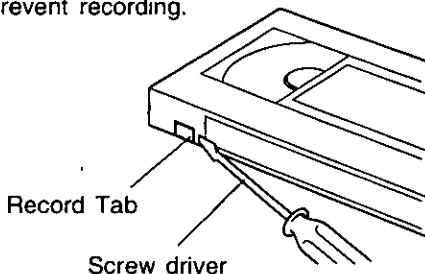

To record again

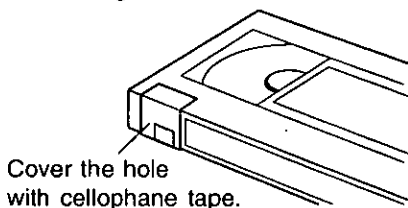

Record/ Playback Time

Only use tapes with the **VHS** mark in this unit.

Tape Speed Setting	Type of Video Cassette		
	T60	T120	T160
SP (Standard Play)	1 Hour	2 Hours	2 Hours 40 Minutes
LP (Long Play)	2 Hours	4 Hours	5 Hours 20 Minutes
SLP (SuperLong Play)	3 Hours	6 Hours	8 Hours

Table of Contents

Important Safeguards and Precautions	2,3
Accessories	4
Loading the Batteries	4
Prevent Accidental Tape Erasure	4
Record/ Playback Time	4
Location of Controls	6,7
Initial Setup for ANT./ Cable-VCR-TV Connection	8,9
Initial Setup for DSS/ Cable Box-VCR-TV Connection ..	10,11

Initial Setup
(Connection)

Reset Language, Channels, Clock, VCR's Output Channel	12,13
Playback a Tape	14
Record on a Tape	15

Basic
Operation

Timer Recording	16,17
Timer Recording Using VCR Plus+® System	18-21

Timer
Recording

Multi-Brand Control Feature	22,23
Advanced Connections (Cable/DSS)	24
MTS Broadcast/ VHS Hi-Fi Stereo System	25
Tape Operation (Commercial Advance and Movie Advance) ..	26-31
Special VCR Features	32-35
Copying Your Tapes (Dubbing)	36


Advanced
Operation

VCR & Cassette Information	37
On-Screen Displays (OSD)	38
Before Requesting Service	39
Service Center List	40
Limited Warranty	41
Spanish (Español) Quick Use Guide	42,43
Index	Back Cover

For Your
Information

Location of Controls

Remote control Buttons

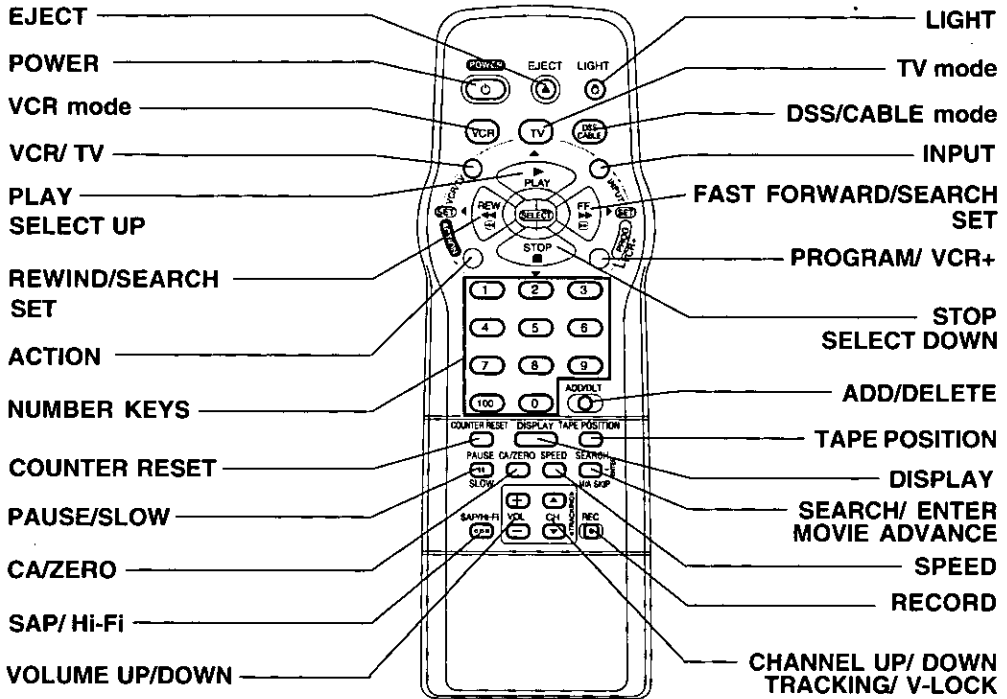


Light Tower Universal Remote Control

Light button: When LIGHT is pressed, available buttons in the selected mode light up and the selected mode button (TV, VCR or DSS CABLE) flashes for 5 seconds. If no button is pressed, light goes out in 5 seconds to conserve batteries. Also, by holding down a button, you can confirm the selected mode (mode button will flash) in the dark.

EJECT button: Press to eject tape from VCR. If EJECT is pressed during record, VCR will not respond.

Front View of the VCR

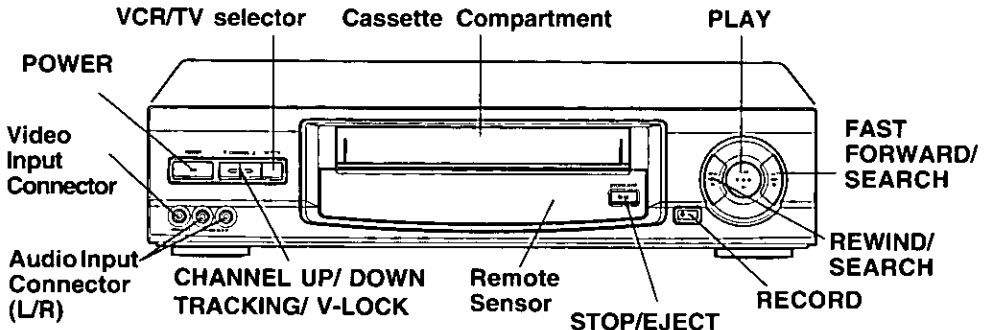

Multi Function Display

Power Indicator
Lights when power is on.

Timer Indicator
Lights when the VCR is set for a Timer Recording, or when One Touch Recording (OTR) is used. Flashes when a Timer Recording is set, but a tape has not been inserted into the VCR and when a power interruption occurs during Timer Programming.




VCR Indicator
Lights when the VCR/TV selector is set to VCR.

Clock/ Status/ Channel/ Speed Display
Displays the current time. Briefly displays VCR status when a function button is pressed. Briefly displays the channel number, or "L1" or "L2" when a channel or line input is selected. Briefly displays the recording speed when SPEED is pressed.

Hi-Fi Indicator
Lights when Hi-Fi audio is monitored in Playback Mode.


Rear View of the VCR

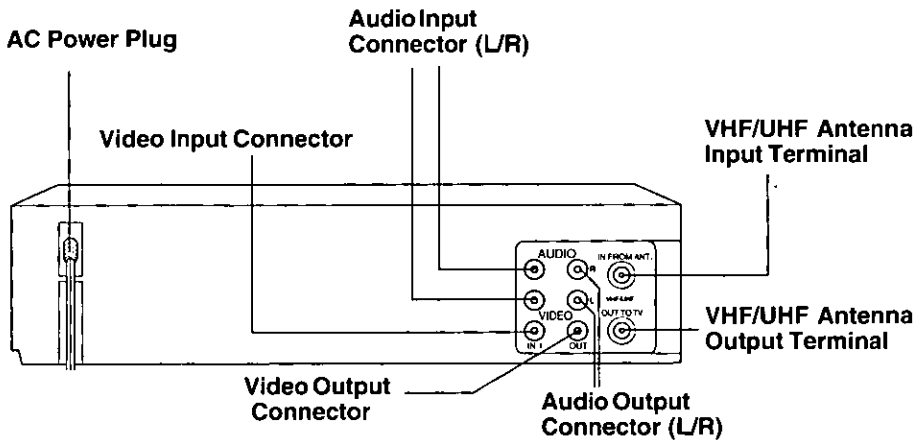

Initial Setup for ANT./Cable - VCR - TV Connection


How to Connect

- 1 Connect the Cable from Antenna/Cable to the IN FROM ANT. terminal on VCR.
- 2 Connect the OUT TO TV terminal on the rear of VCR to the ANT. IN terminal on TV using the RF Cable (included accessory).

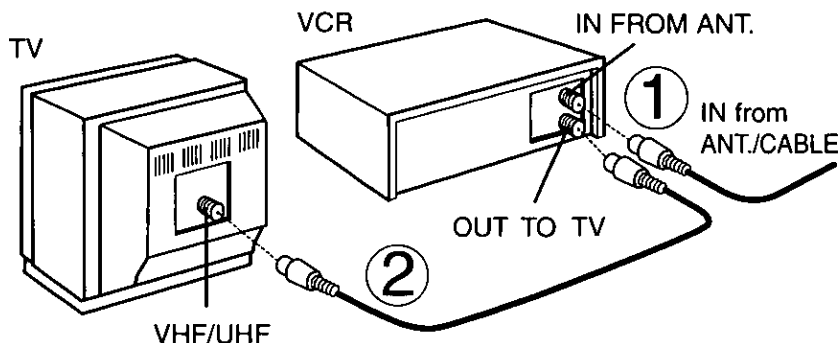

How to do Initial Setup

- 1 Press VCR* button for VCR mode. Turn the TV on and set it to channel 3.
- 2 Turn VCR on. When VCR is turned on the first time, SELECT LANGUAGE screen appears.

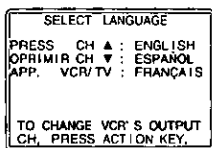


- If screen does not appear, check connection between VCR and TV and, if TV is tuned to channel 3, try switching it to channel 4.
- When you want to change the output channel of VCR, please refer to VCR's Output Channel on page 13.
- If wrong language is set, do "Reset All VCR Memory Functions" steps on page 9.


WARNING

When using "Nut type" RF coaxial cables, tighten with fingers only. Overtightening may damage terminals.

- 3 Press CH▲ to select English. or Press CH▼ to select Spanish. or Press VCR/TV key to select French. When one of above keys is pressed, SELECT CONNECTION screen is displayed in the selected language.

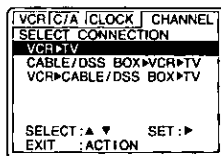


- 4 Press ▲▼ to select connection "VCR*TV" and press ► to set. CHANNEL/CLOCK AUTO SET screen appears.


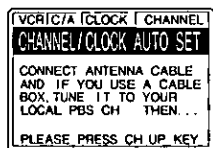


***Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

- 5** Press CH▲ Key to start Channel/Clock Auto Set operation. Settings are performed automatically. If the setup is completed, the following screen is displayed.

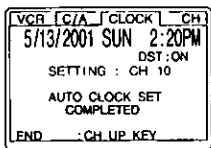

If "Auto Clock Set is Incomplete" screen appears, set the clock using MANUAL CLOCK SET procedure shown below.

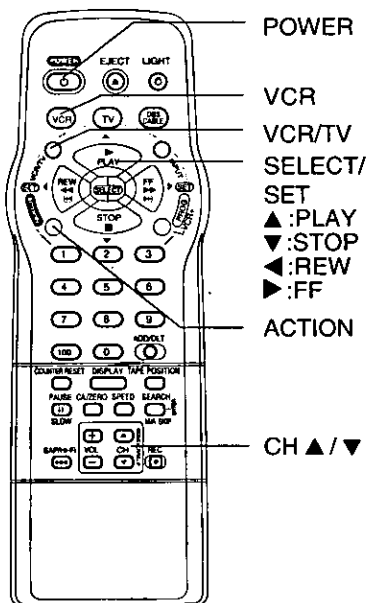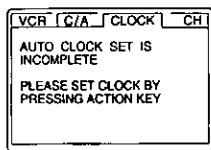


**Initial Setup
(Connection)**


Manual Clock Set

If Auto Clock Set was incomplete, manually set the clock as follows.

- 1** Press ACTION Key on the Remote to display CLOCK Menu screen.

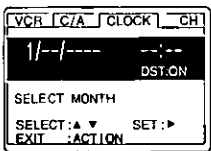

- 2** Press ▲▼ to select the month and ► to set. In the same manner, select and set the date, year, time, and DST (daylight saving time).

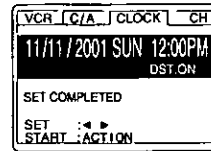

- 3** Press ACTION Key twice to start CLOCK and exit.

Reset All VCR Memory Functions

Use when moving VCR to new location, or if a mistake was made in the Initial Setup section.

- Make sure a tape is not inserted in the VCR.




- 1** Turn VCR Power on.
- 2** Press and hold both **PLAY** and **CHANNEL ▲** on the VCR for more than 5 seconds.
- The power shuts off.

- 3** Do "Initial Setup" on page 8.

Initial Setup for DSS/Cable Box-VCR-TV Connection



How to Connect

- ① Connect the OUT Jack on your cable box to the IN FROM ANT. terminal on the VCR with an RF cable.
- ② Connect the OUT TO TV terminal on the rear of VCR to the ANT. IN terminal on TV using the RF Cable (included accessory).

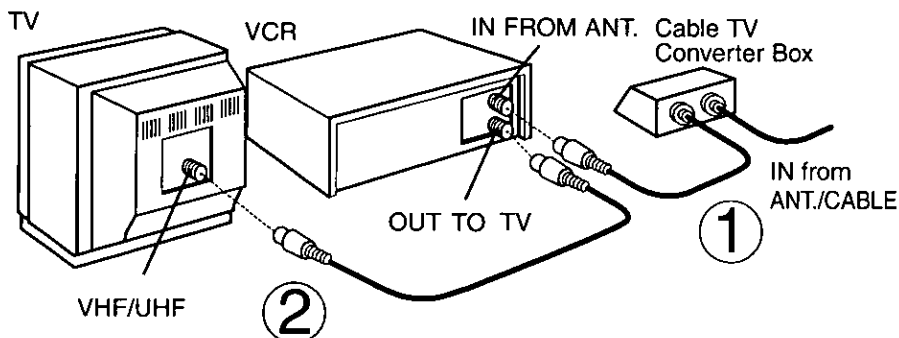


How to do Initial Setup

- 1 Press VCR* button for VCR mode. Turn the TV on and set it to channel 3.
- 2 Turn VCR on. When VCR is turned on the first time, SELECT LANGUAGE screen appears.
- 3 Press CH▲ to select English. or Press CH▼ to select Spanish. or Press VCR/TV key to select French. When one of above keys is pressed, SELECT CONNECTION screen is displayed in the selected language.

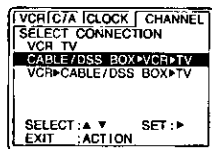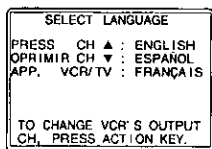

- If screen does not appear, check connection between VCR and TV and, if TV is tuned to channel 3, try switching it to channel 4.
- When you want to change the output channel of VCR, please refer to VCR's Output Channel on page 13.
- If wrong language is set, do "Reset All VCR Memory Functions" steps on page 9.

- 4 Press ▲▼ to select "CABLE/DSS BOX►VCR►TV" connection and press ► to set.

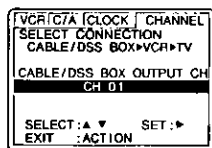


WARNING

When using "Nut type" RF coaxial cables, tighten with fingers only. Overtightening may damage terminals.

*Important: If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.


**Initial Setup
(Connection)**

5 Confirm the output channel of your cable box or DSS receiver. Press ▲▼ Keys to select the same channel as the cable box or DSS receiver output channel. Press ► to enter.


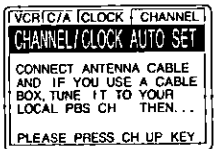


Turn on your cable box and set it to your Public Broadcasting Station (PBS) channel in your time zone. If you use a DSS receiver, it must be turned off.

6 Press CH ▲ Key to start Channel/Clock Auto Set operation. The Channel/Clock Setting is performed automatically. If the setup is completed, the following screen appears.

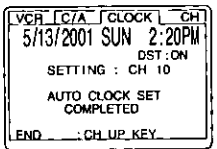


If "Auto Clock Set is Incomplete" screen appears, set the clock using MANUAL CLOCK SET procedures shown on page 9.

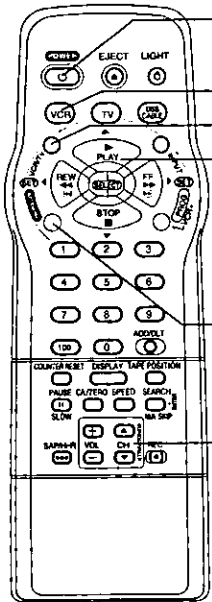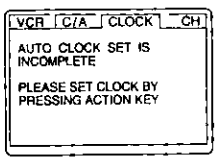

Reset Language, Channels, Clock,

1

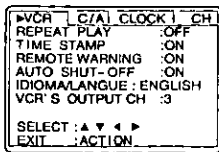


Press **ACTION***
to display menu.


2

Language


- 1) Press ▲▼ to select language item.

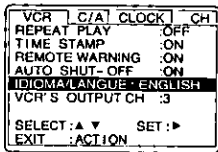


- 2) Press ▶ repeatedly.

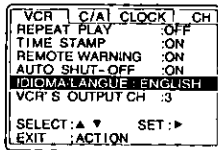

For English

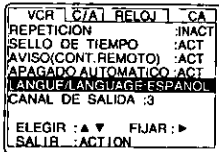

For Spanish

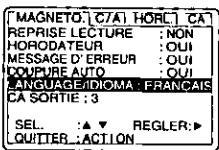


For French


- 3) Press ACTION to exit.

Channels

- 1) Press ◀▶ to select CHANNEL.

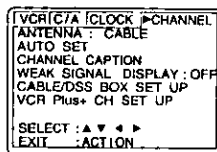


- 2) Press ▲▼ to select "ANTENNA," then press ▶ to set your antenna system (TV or CABLE).

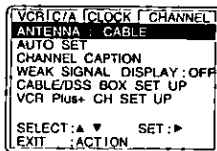

- 3) Press ▲▼ to select "AUTO SET," then press ▶.

- If you use a cable box, set it to the PBS channel in your time zone.

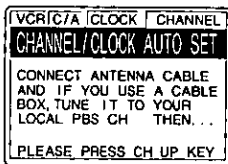


- (This screen appears only when auto clock is set.)

- 4) Press CH ▲.


 - After Channel Auto Set is finished, Clock Auto Set will be performed.

Clock


- 1) Press ◀▶ to select CLOCK.

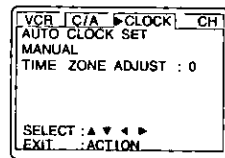

- 2) Press ▲▼ to select MANUAL and press ▶. (For Auto Clock Set, select "AUTO CLOCK SET," then press CH ▲.)

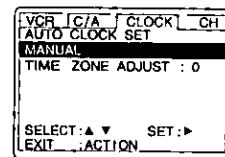

- ("TIME ZONE ADJUST" appears only when auto clock is set.)

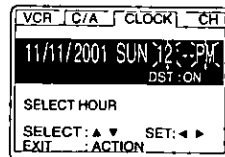

- 3) Press ▲▼ and ◀▶ to select and set the date, time, and DST (Daylight Saving Time).

- 4) Press ACTION twice to start the clock and exit this mode.


VCR's Output Channel

***Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.


Time Zone Adjust

(Only when Auto Clock is set.)

- 1) Press ◀▶ to select CLOCK.

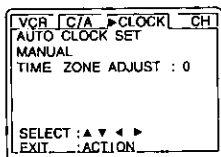

- 2) Press ▲▼ to select TIME_ZONE ADJUST

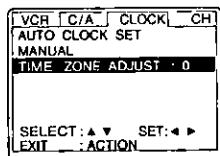

and press ◀ or ▶ to subtract or add hour(s) as necessary.


- 3) Press ACTION.

- 4) Press POWER off to perform AUTO CLOCK SET.


- TIME_ZONE ADJUST returns to "0" if clock is set manually.

VCR's Output Channel


- 1) Press ▲▼ to select VCR'S OUTPUT CH.

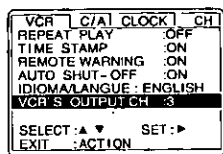


- 2) Press ▶.

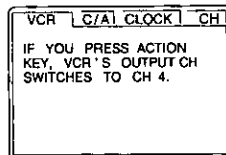


- 3) Press ACTION.

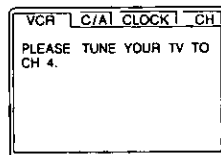

After 3 seconds

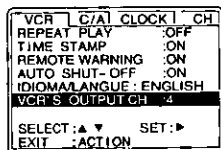

- To Make Corrections, repeat step 1) ~ 3).

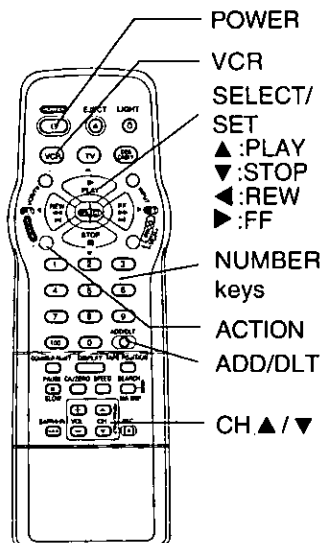

Basic Operation

Add or Delete a Channel

To add channel:

Select channel with number keys and press ADD/DLT.

CHANNEL 08 ADDED

To delete channel:

Select channel with CH ▲ / ▼ or number keys and press ADD/DLT.

CHANNEL 08 DELETED

DST (Daylight Saving Time)

VCR automatically adjusts clock for DST. (Page 9.)

Spring (First Sunday in April)

DST:ON --> Sets clock ahead one hour.

Autumn (Last Sunday in October)

DST:ON --> Turns clock back one hour.

- If your area does not observe Daylight Saving Time, select DST:OFF.
- Keep these time changes in mind when programming the VCR for timer recordings.

Playback a Tape

✓ Ready Check List

- All connections are made (pg. 8, 10, 24).
- TV and VCR are plugged in.
- TV is on and tuned to CH3, 4, or VIDEO.
- Remote is in VCR mode. (Press VCR)

1 Insert a tape,

- VCR power comes on.
- "VCR" lights on Multi Function Display.

2 Press PLAY* to play tape.

- If tape has no rec. tab (pg. 4), auto play begins.

Special Features During Play

- **Forward/ Reverse scene search**
-> Press FF or REW.
-> Press again or PLAY to release.
- **Still (Freeze) picture**
-> Press PAUSE/SLOW.
-> Press PLAY to release.
- **Frame by Frame picture**
-> Press PAUSE/SLOW in Still mode.
-> Press PLAY to release.
- **Slow Motion picture**
-> Hold down PAUSE/SLOW in Still mode.
-> Press PLAY to release.

Notes

- These features work best in SP or SLP mode.
- The sound will be muted.
- To reduce picture noise, see "Manual Tracking Control" on page 37.
- After the VCR is in Still or Slow mode for 3 minutes, it will switch to Stop mode automatically to protect the tape and the video head.



3 Press STOP to stop tape.

Rapid Rewind/FF

- **Press REW or FF in Stop mode to Rewind/ Fast Forward tape.**
 - Rewind your tape in approximately one minute when using a T-120 tape.
- **Press EJECT on remote, or STOP/EJECT on VCR to eject tape.**


Note

Remove loose or peeling labels from tapes to prevent tape jam.

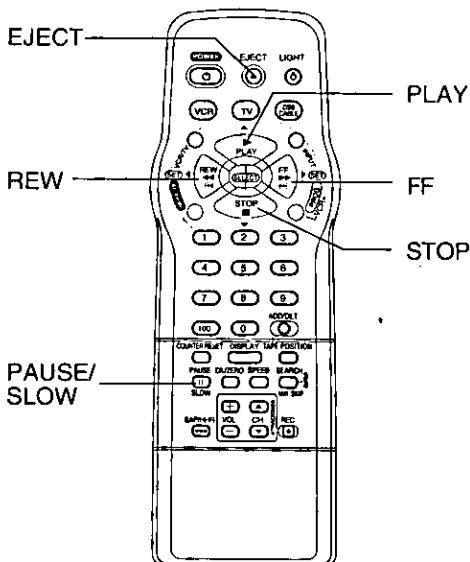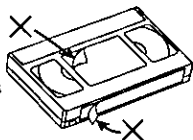

Playback using VCR controls

 - 1 Insert a tape.
- 2 Press PLAY.



Multi Function Display

- Press STOP/EJECT to stop and/ or eject tape.

Record on a Tape

Important:

If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.



Ready Check List

- All connections are made (pg. 8, 10, 24).
- TV and VCR are plugged in.
- TV is on and tuned to CH3, 4, or VIDEO.
- Remote is in VCR mode. (Press VCR)

1 Insert a tape with rec. tab (pg. 4).

- VCR power comes on.
- "VCR" lights on Multi Function Display.

2 Press CH ▲▼, or number keys to select channel.

- For "LINE" input, see pg. 36.
- For channels over 100, press 100 key then press the remaining 2 digits.

3 Press SPEED to select record speed (pg. 4).

- SP = Standard Play LP = Long Play
- SLP = Super Long Play
- Speed appears on-screen and on Multi Function Display.

4 Press REC to start record.

- To edit out unwanted scenes, press PAUSE/SLOW to pause, and again to resume recording.

5 Press STOP to stop record.

■ One Touch Recording (record in progress),

- VCR shuts off after preset record length.
- > each press of REC adds 30 min. to record length up to 4 hours.

■ Record one station, watch another,

- > press VCR/TV ("VCR" goes out on Multi Function Display),
- > select channels at TV (recording continues).

Note


- Watching one channel and recording another is **NOT possible** when using a Cable Box or a Satellite Receiver.

■ Select channels at VCR,

- Other channels cannot be viewed during recording.
- > press VCR/TV ("VCR" lights on Multi Function Display),
- > select channels at VCR.


Note

- After 5 min. in Pause mode, VCR stops to protect tape and video head.

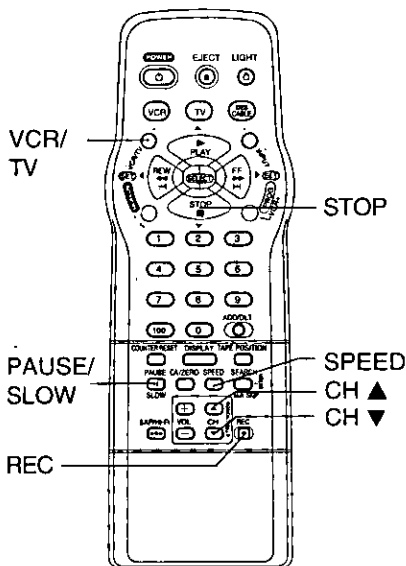

Record using VCR controls

 - 2 Select Channel. 1 Insert a tape. 4 Press REC to start Recording.



- VCR/TV 5 Press STOP/ Multi Function Display EJECT to stop.

This video recorder, equipped with HQ (High Quality) system, is compatible with existing VHS equipment. Only use tapes with the **HQ** mark. Only tapes tested and inspected for use in 2, 4, 6, and 8 hour machines are recommended.


Basic Operation

Timer Recording




Ready Check List

- All connections are made (pg. 8, 10, 24).
- TV and VCR plugged in and turned on.
- VCR/TV selector set to "VCR."
- Clock set correctly.
- Tape has rec. tab (pg. 4).
- Remote is in VCR mode. (Press VCR)

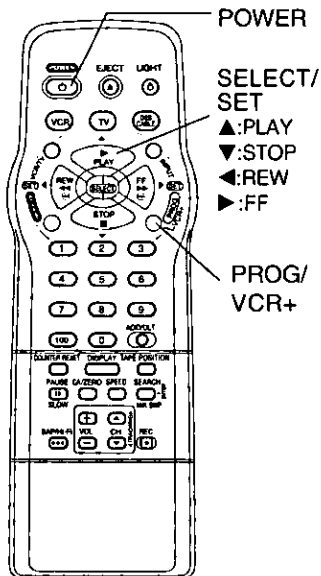


1 Press **PROG/VCR+*** button to display PROGRAM.

2

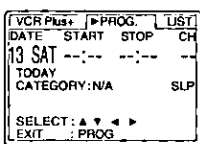

Press **▼** to display Program screen.


3

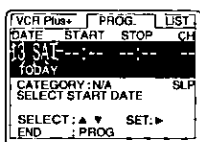

1) To set record DATE, press ▲▼ to select:
 1~31= one time, or DAILY= MON~ FRI, or WEEKLY= same time each week and press **▶** to set.
 • See selection order below left.

2) To set remaining items, press ▲▼ to select and press ▶ to select and press ▶ to set START/ STOP times, CH(channel) or LINE input (pg.36), and tape speed (SP, LP, SLP). Press **PROG/VCR+ button to end program.**

 
Example



Notes

- If you are using a Cable Box, VCR Timer Programming Channel(Step 3) must be set to the Cable Box output channel AND your Cable Box must be manually set to the desired channel. The Cable Box power left on.
- If a power interruption occurs while programming the timer, the timer program(s) may be canceled. If "TIMER PROGRAMS WERE LOST DUE TO POWER INTERRUPTION" appears on-screen, please reenter the timer programs.

4

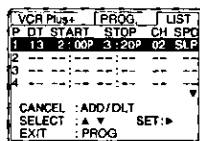

To Enter More Programs, press ▲▼ to select and press ▶ to set an unused program number and repeat step 3.

Or

Press **PROG/VCR+ button again to exit.**

5

Press **POWER** off to set the timer.
 ("TIMER" lights on Multi Function Display.)

Important: If a remote control does not work when pressed, press the VCR button on the remote and try the button again.

Review, Replace or Clear Program Contents:

(Recording is not in progress)

1

VCR Plus+		PROG.	LIST		
P	DT	START	STOP	CH	SPD
1	7	9:00A	12:00A	08	SP
2	8	10:00P	12:00P	02	SP
3	10	8:00P	9:00P	10	SP
4	SU	9:00P	10:00P	L1	LP

SELECT: ▲ ▼ ◀ ▶
EXIT : PROG

- 1) Press **PROG/VCR+** button.
- 2) Press **◀▶** to select LIST:

To cancel a Timer Recording in progress...

Press **POWER** and then **STOP** within 10 seconds to cancel the Timer Recording. (The **TIMER** indicator goes out on Multi Function Display.)

2

VCR Plus+		PROG.	LIST		
P	DT	START	STOP	CH	SPD
1	7	9:00A	12:00A	08	SP
2	8	10:00P	12:00P	02	SP
3	10	8:00P	9:00P	10	SP
4	SU	9:00P	10:00P	L1	LP

CANCEL : ADD/DLT
SELECT : ▲ ▼ SET: ▶
EXIT : PROG

- Press **▲▼** to select number.

3

To Replace program...

VCR Plus+		PROG.	LIST
DATE	START	STOP	CH
7 SUN	9:00A	12:00A	08
TODAY			
CATEGORY: N/A			
SELECT START DATE			

SELECT: ▲ ▼ ◀ ▶ SET: ▶
END : PROG

- 1) Press **▶** to display.
- 2) Repeat Step 3 (pg.16) to set new programs.

or

To Clear program...

VCR Plus+		PROG.	LIST		
P	DT	START	STOP	CH	SPD
1	---	---	---	---	---
2	8	10:00P	12:00P	02	SP
3	10	8:00P	9:00P	10	SP
4	SU	9:00P	10:00P	L1	LP


CANCEL : ADD/DLT
SELECT : ▲ ▼ SET: ▶
EXIT : PROG

- Press **ADD/DLT**.

4

Press **PROG/VCR+** button to end the program.

- If there are set programs, press **POWER** off to set timer.

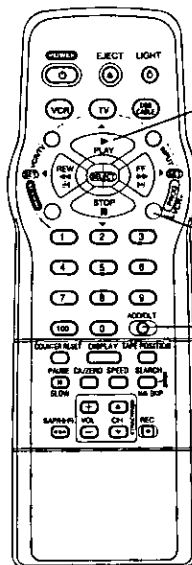

SELECT/
SET
▲:PLAY
▼:STOP
◀:REW
▶:FF
PROG/
VCR+

ADD/DLT

Timer Recording

Important notes when using a DSS receiver

- When recording programs via a DSS receiver, the DSS receiver must be left on.
- When recording programs via an antenna or cable, the DSS receiver must be turned off.

Timer Recording Using VCR Plus+® System

Auto VCR Plus+ System Channel Setup (Part 1)

For [VCR-TV] or [VCR-cable box-TV] connection only.

In order for VCR to read PlusCode, some set up is required. Guide (PlusCode) channel number is assigned to each local broadcast and cable station. Because this number sometimes differs from channel TV receives station on, it is necessary to program the VCR with local channel information. To receive VCR Plus+ channels automatically, perform the steps below. Or, see "Manual VCR Plus+ System Channel Setup" section on page 20.


VCR Plus+ System is ...

a feature that allows you to set most items of a timer recording by simply entering a special code number (PlusCode programming number) found in TV GUIDE and selected newspaper TV listings.

Important Note


• "Initial Setup" on pages 8-11 must be completed before "Auto VCR Plus+ System Channel Setup" can be done. If any part of setup is incomplete, a warning screen appears.

- 1**

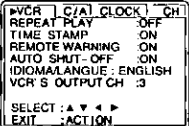


Press **ACTION*** to display MENU.

- 2**

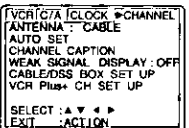


Press **◀▶** to select CHANNEL.

- 3**

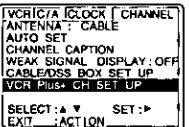


Press **▲▼** to select VCR Plus+ CH SET UP and press **▶** to display.

- 4**

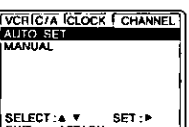


Press **▲▼** to select AUTO SET and press **▶** to set.

- 5**

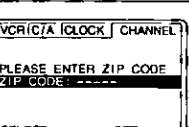


Press **▲▼◀▶** to enter Zip Code and enter each number. Press **▶** or ACTION to set.

- 6**

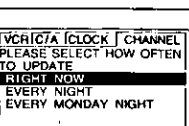


Press **▲▼** to select When to Update and press **▶** to set.

- 7**

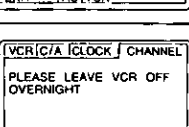

Press **ACTION** to end.

 - Make sure to leave VCR off (overnight).

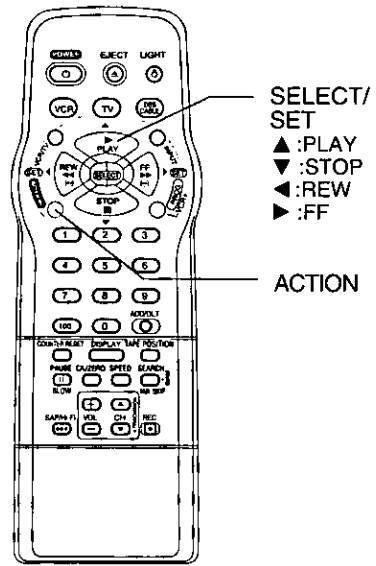

Notes

- Make each entry within 5 minutes or VCR will leave this mode.
- Once local channels have been programmed, they will stay in memory, even in the case of a power failure.
- If the start time for a timer recording comes up during Auto VCR Plus+ System Setup, the timer recording will have priority.


Important: If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

Auto VCR Plus+ System Channel Setup (Part 2)

Before you perform the following steps, you should have:


- completed "Auto VCR Plus+ System Channel Setup (Part 1)" on page 18.
- left VCR off overnight, and turned it back on after 9:00 AM the next day.

1 If channel updating was successful...

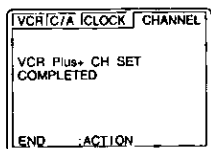


Press **ACTION** to exit this mode.

If VCR could not distinguish channel map...

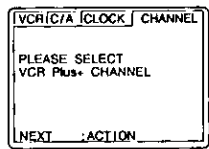


Press **ACTION** to display **SELECT VCR Plus+ CH**. Continue with step 2.


2 Press **▲▼◀▶** to select channel map for your area and press **ADD/ DLT** to set.

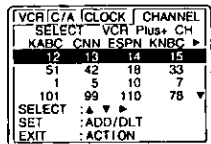

3 Press **ACTION** to end.

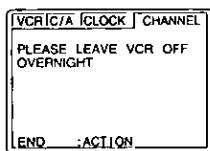

- Make sure to leave VCR off (overnight.)

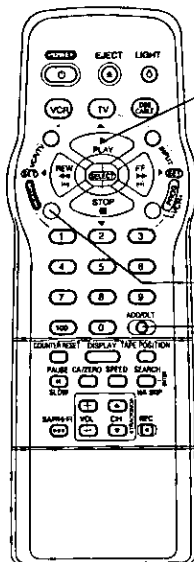

SELECT/ SET

- ▲ :PLAY
- ▼ :STOP
- ◀ :REW
- ▶ :FF

ACTION


ADD/HLT

Timer Recording

To Change or Update Auto VCR Plus+ System Channel Setup

(E.g. you selected wrong channel map or zip code.)

- a** Do "Auto VCR Plus+ System Channel Setup (Part 1)" steps 1-4 on page 18.

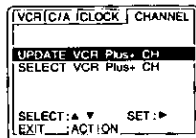

- b** Press **▲▼** to select **UPDATE VCR Plus+** or **SELECT VCR Plus+ CH**, then press **▶**.
- c** If you selected **UPDATE VCR Plus+ CH**, perform steps 5-7 in the "Auto VCR Plus+ System Channel Setup (Part 1)" section on page 18.

If you selected **SELECT VCR Plus+ CH**, perform steps 2-3 in the "Auto VCR Plus+ System Channel Setup (Part 2)" section on this page.

Channel map will be updated (overnight.) If it was successful, "VCR Plus+ CH SET COMPLETED" appears on screen. And then, press **ACTION** to exit.

Repeat these steps as necessary.

If Auto Setup fails, do "Manual VCR Plus+ System Channel Setup" on page 20.

Timer Recording Using VCR Plus+ System (continued)

Initial Setup.....

In order to use Timer Programming Using VCR Plus+ System, the Initial Setup on page 8 to 11 must be completed for setting Clock and Channel.

Channel Setup.....

Since PlusCode numbers assigned to channels (found in TV Guide and selected newspapers) may differ from channels in your viewing area, you'll need to enter your local TV channel number for each corresponding Guide Channel.

If you perform the VCR+ Channel set up procedures shown below, you will be able to perform timer recordings using the PlusCode programming number listed in your local TV listing.

Manual VCR Plus+ Channel Setup


For [VCR-TV] or [VCR-cable box-TV] connection only.

To complete step 5 of setup, do the following:


- Prepare a TV/Cable station line-up and channels they are received on. Also, the Guide channel numbers assigned to your stations (found in TV Guide and selected newspapers.)
- Make a 3-column chart (see sample). Left column --> all stations you receive. Middle column --> each station's assigned Guide channel number from TV Guide, etc. Right column --> channel number on which your TV receives the station.

SAMPLE ONLY


Broadcast or Cable station name	Assigned Guide channel No.	Channel No. on which my TV receives the station.
HBO	33	15
Nickelodeon	38	20
CBS	04	04
FOX	11	

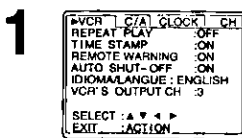


Press **ACTION*** to display menu.

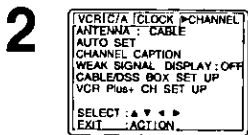


Press **◀▶** to select CHANNEL.

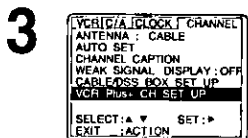

Press **▲▼** to select VCR Plus+ CHANNEL SETUP, and press **▶** to set.

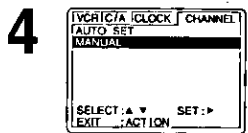

 Press **▲▼** to select MANUAL, and press **▶** to set.



To enter VCR Plus+ channels,

press **▶** to move cursor to right, press **▲▼** to enter number, press **◀** to set, and press **▲▼** to scroll up/down.

- Repeat step 5 until list is complete.

To Make Corrections, press **▲▼** and **▶** to move to error, then **▲▼** to change, or **ADD/DLT** to erase number.

6 Press **ACTION** twice to end setup.

Important: If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

VCR Plus+ System Programming

Ready Check List

- Clock is set.
- VCR Plus+ Setup is complete (see pages 18-20).

1 Press **PROG/VCR+** button to display PROGRAM.

2 Press **◀▶** to select display VCR Plus+ screen.

3 Press number keys to enter PlusCode number and press **PROG/VCR+** button to set.

To Make Corrections, press **◀** repeatedly to delete number, then repeat step 3.

• If the PlusCode number entered begins with "0," skip to step 5. Display in step 4 will not appear.


4 Press **▲▼** to select ONCE, DAILY(MON-FRI), or WEEKLY record frequency and press **PROG/VCR+** button to set.

5 Press **▲▼** to change category and record speed. Press **▶** to set. Press **PROG/VCR+** button to end program.

6 Press **PROG/VCR+** button again to exit.

- Press **ADD/DLT** to delete the program.

7 Press **POWER** off to set the timer. ("TIMER" lights on Multi Function Display.)

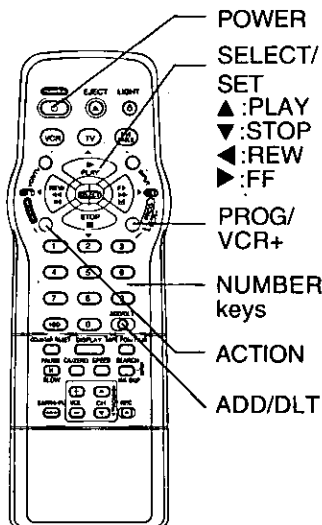

Do normal Timer Record if...

- PlusCode number is not listed for program.
- program (e.g. sports event) may run over set stop time.

See page 17 to:

- cancel a timer recording in progress.
- review, replace, or clear program contents.

Important for DSS/Cable Box Users

- When recording via DSS, the receiver must be left on. When recording via cable or antenna, DSS receiver must be off.
- When recording via a cable box, leave box on and tuned to channel to be recorded.

Notes

- Do not overlap program times.
- PlusCode numbers cannot be used to program VCR to record DSS and cable box channels.
- Make each entry within 1 minutes or the VCR will exit setup mode.
- Once VCR Plus+ channel setup is done, channels stay in memory. If a power interruption occurs, VCR Plus+ channel setup may be lost. Please do VCR Plus+ channel setup again.
- Obtain unlisted PlusCode numbers by calling 1 - 900 - 454 - 7587. Call costs about \$.95 per minute.

Timer Recording

Multi-Brand Control Feature

Multi-Brand Control Setup

The Remote Control can be set to control some TV and Cable box/DSS functions.

1 Find your TV and Cable Box/DSS Receiver Brand Code Number on the following page.

2 ■ **Setup for TV control,**
-->hold down TV button,
-->enter code with number keys.


■ **Setup for Cable or DSS control,**
-->hold down DSS/CABLE button,
-->enter code with number keys.

- If code number is 100 or greater,
-->press 100 key, then other digits.
E.g., press 100 - 0 - 2 for 102.

3 **Confirm code entry,**
-->press POWER to turn selected unit on or off.
• See table below for controllable functions in each mode.

Notes

- Repeat setup after remote battery replacement.
- Remote will not control every TV, cable box, or DSS made by the manufacturer listed. If you get no response, your particular unit cannot be controlled. There are NO additional codes for the products listed. If your product is not listed, then the remote is not compatible with that product.

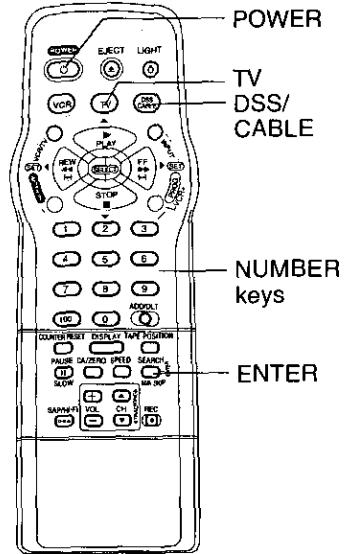

Using Multi-Brand Control

After remote is set up, you can select VCR, TV, or DSS/CABLE for the desired function.

Press VCR, or TV, or DSS/CABLE on the remote.
(Table below shows available unit buttons for each mode.)

Mode \ Unit	VCR	TV	CABLE/ DSS
VCR	All	VOL UP/DOWN	_____
TV	VCR/TV, PLAY, STOP EJECT, SAP/Hi-Fi, DISPLAY, FF, REW, PAUSE/SLOW, REC, SPEED, CAZERO, COUNTER	POWER, INPUT, number keys, ENTER, CH UP/ DOWN, VOL UP/DOWN	_____
CABLE/ DSS	RESET, TAPE POSITION	VOL UP/ DOWN	POWER, ENTER, number keys (except 100key), CH UP/ DOWN

Notes

- Not all functions listed may be controllable.
- In TV or DSS/CABLE mode, it may be necessary to press ENTER after pressing number keys for channel selection.

TV Brand Code Numbers

Panasonic.....	01, 02	Sylvania.....	05	JVC.....	11
Quasar.....	01, 02	Sharp.....	06, 07	Hitachi.....	12
FCA.....	03	Sony.....	08	Mitsubishi.....	07, 13
GE.....	03	Toshiba.....	09	Samsung.....	14
Zenith.....	04	Sanyo.....	10	Gold Star.....	15, 16, 17
Magnavox.....	05	Fisher.....	10		

Cable Box Brand Code Numbers

Archer.....	05, 06, 01, 44, 63, 91, 126	Quest.....	05, 06
Cabletenna.....	01, 44, 63, 91, 126	Radio Shack.....	51, 44, 59, 75, 126
Cableview.....	63, 44, 42, 30, 52, 04, 124, 126	FCA.....	16, 17, 97, 109
Century.....	51, 44, 59, 75, 126	Realistic.....	51, 44, 59, 75, 126
Citizen.....	63, 44, 42, 30, 52, 04, 124, 126	Recoton.....	51, 44, 59, 75, 126
Curtis.....	08, 09, 61, 53, 87	Regal.....	14, 15, 28, 41, 102, 103, 104, 108, 130
Diamond.....	01, 44, 63, 91, 126	Regency.....	28, 130
Drake.....	67	Rembrandt.....	01, 32, 39, 42, 44, 63, 126
Eagle.....	13, 22, 58, 62, 20, 40, 26, 107	Salora.....	68
Eastern.....	28, 130	Samsung.....	05, 32, 40, 42, 06
GC Brand.....	63, 44, 42, 30, 52, 04, 124, 126	Scientific Atlanta.....	08, 09, 61, 53, 87
Gemini.....	04, 124	Sheritech.....	27
General Electric.....	57, 01	Signal.....	26, 112
General Instruments.....	01, 02, 03, 04, 34, 55, 83, 106, 65, 67, 68, 115, 117, 118, 124, 91	SL Marx.....	32, 40, 42, 06, 43, 44, 52, 63, 126
Hamlin.....	14, 15, 28, 41, 102, 103, 104, 108, 130	Sprucer.....	16, 17, 97, 109
Hitachi.....	31	Standard Components.....	32, 39, 42, 44, 126
Jasco.....	04, 124	Stargate.....	32, 40, 63, 44, 42, 30, 52, 04, 06, 124, 126
Jerrold.....	01, 02, 03, 04, 34, 55, 83, 106, 65, 67, 68, 115, 117, 118, 124, 91	Sylvania.....	19
Macom.....	31	Teknika.....	74
Magnavox.....	26, 112	Telecaption.....	77, 127
Matsushita.....	16, 17, 97, 109	Televue.....	32, 40, 42, 06
Movietime.....	32, 39, 42, 44, 126, 38, 40	Texscan.....	18, 19
NEC.....	38, 40, 32	Tocom.....	33, 34, 01, 42, 66, 91
NOVAVISION.....	08, 09, 61, 53, 87	Toshiba.....	36
NSC.....	38, 40, 32	Uniden Satellite.....	65
Oak.....	46, 11, 129	Unika.....	01, 44, 63, 91, 126
Oak Sigma.....	46, 11, 129	Universal.....	42, 43, 44, 52, 63, 126
Panasonic.....	16, 17, 97, 109	Videoway.....	07, 23, 50, 129
Phillips.....	07, 13, 20, 23, 24, 50, 128, 129	Vid Tech.....	64
Pioneer.....	05, 06	Vidtek.....	64
Pulsar.....	63, 44, 42, 30, 52, 04, 124, 126	Viewstar.....	13, 22, 58, 62, 20, 40, 26, 107
		Zenith.....	07, 23, 50, 129

DSS Brand Code Numbers

Toshiba.....	92	Panasonic.....	96
Hitachi/Hughes.....	93	FCA.....	97
Magnavox/Uniden 1.....	94	Sony.....	98, 105
Magnavox/Uniden 2.....	95		

Important Notes


- Due to changes in infra-red commands used by manufacturers, some brands have several codes. If your unit does not respond to the first code, please try the next one.
- Some TV, Cable Box and DSS Box brands require you to turn on the power manually.

Advanced Operation

Advanced Connections


Audio/Video connection

If your TV has AUDIO IN and VIDEO IN terminals, you can connect your VCR to them to receive higher quality picture and sound.

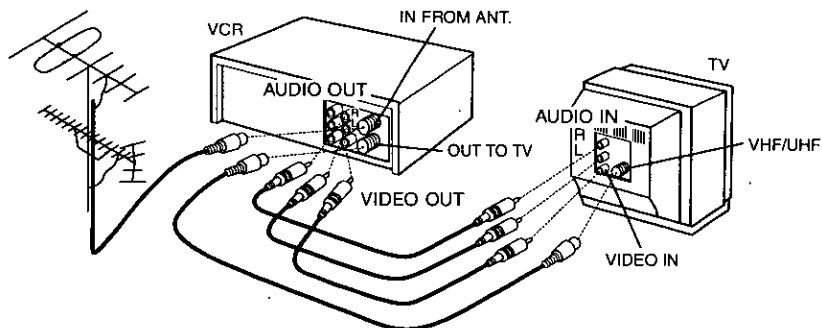

- 1 Connect the VIDEO OUT terminal on the VCR to the VIDEO IN terminal of your TV.
- 2 Connect the "L" and "R" AUDIO OUT terminals on the VCR to the "L" and "R" AUDIO IN terminals of your TV.
- 3 Set the VIDEO/TV selector of your TV (Monitor/Receiver) to "VIDEO."

With a Cable Box (VCR → Cable Box)

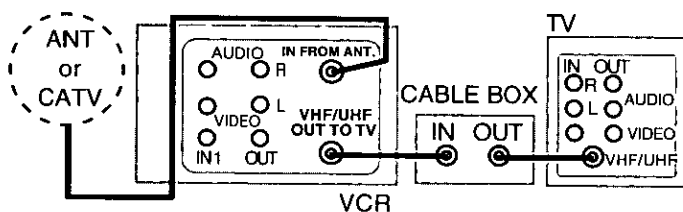


You Can

- view any (including scrambled) channel.
- use VCR Remote Control to select channels without using Multi-brand control feature.

You Cannot

- record scrambled channels.

Connect With Two Cable Boxes

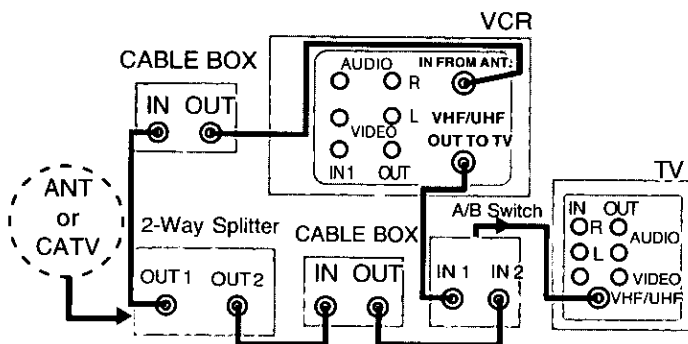

You Can

- record and view both scrambled and unscrambled channels if additional equipment is added. This connection requires: two converter boxes, an A/B switch, and a 2-way splitter.

You Cannot


- view channel other than the one selected for any type of recording.
- do a Timer recording of a channel unless you select it at the cable box.

MTS Broadcast/VHS Hi-Fi Stereo System

Connection

Make the Audio/Video Connection as shown on the previous page.

- You can use a TV connected to Stereo amp and speakers instead of a Stereo TV.

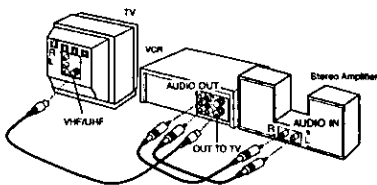

Receivable Broadcast Types

The following are possible audio broadcast types and on-screen displays.

The signal being received is indicated with an "Ⓜ" mark while the selected audio mode is indicated with an arrow.

To display the broadcast signal being received, → press **DISPLAY**.

MTS Stereo and SAP broadcast

Multi-channel Television Sound Stereo (main language) and Secondary Audio Program (sub language) broadcasts are being received simultaneously. Select STEREO or SAP audio mode.

MTS Stereo broadcast

Multi-channel Television Sound Stereo broadcast. Select STEREO audio mode.



- If stereo broadcast is weak and display flickers, select MONO audio mode for possibly better results.

SAP broadcast

Secondary Audio Program (sub language) broadcast. Select SAP audio mode for the sub language.

MONO broadcast

Normal monaural sound broadcast.

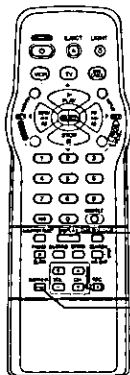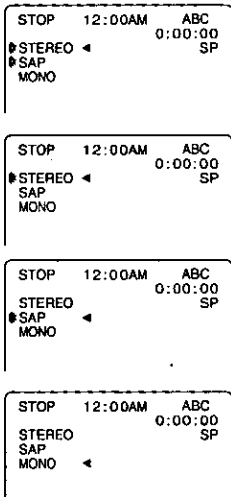


DISPLAY

SAP/
Hi-Fi

Equipped with **dbx**®-TV Noise Reduction for true MTS reproduction. **dbx**®-TV Noise Reduction is required for good stereo separation and audio fidelity. **dbx**® is a registered trademark, and is licensed by **dbx**® Technology Licensing.

Audio Mode for Recording

- 1 Press **SAP/ Hi-Fi** to display audio mode. (Display disappears after 5 seconds.)

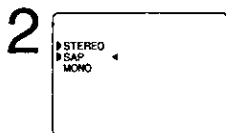

Press **SAP/ Hi-Fi** repeatedly to select desired mode.

- Arrow indicates selection.

- Refer to "Receivable Broadcast Types" above.


- 3 Do a recording. See page 15.

Notes

- Only tapes recorded in Hi-Fi stereo will playback with true stereo sound. Standard stereo tapes will playback in monaural sound.
- To listen to Hi-Fi stereo playback, the VCR AUDIO (L/R) jacks must be connected to a stereo TV or an external stereo amp and speakers. (See top of this page.)
- If tracking is adjusted during playback, Hi-Fi audio may revert to normal audio.
- Hi-Fi and normal audio playback volume level may differ.

Audio Mode for Playback

- 1 Start playback. See page 14.
- 2 Press **SAP/ Hi-Fi** to display audio mode. (Display disappears after 5 seconds.)

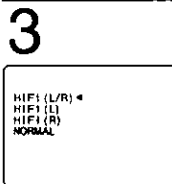

Press **SAP/ Hi-Fi** repeatedly to select desired mode.

- Arrow indicates selection.

- Select "HIFI(L/R)" or "HIFI(L)" or "HIFI(R)" to listen to stereo recordings in stereo sound. Select "NORMAL" for monaural sound.

Advanced
Operation

Tape Operation

COMMERCIAL▶▶ADVANCE®


COMMERCIAL▶▶ADVANCE® detects and marks the beginning and end points of commercials on your tape for recordings over 15 minutes in length. When COMMERCIAL▶▶ADVANCE® marked tape is played back, the VCR automatically advances through the commercial segments at high speed. You can also set this feature to Manual so as to have more control over the advance process. The effectiveness of this system can vary due to differences in the way television stations broadcast. See page 28 for answers to the most commonly asked questions about this feature.

COMMERCIAL▶▶ADVANCE® Marking

When C/A RECORD: ON, VCR automatically rewinds the tape after a recording has been made and marks the beginning and end of any detected commercial blocks. After marking is done, the tape is returned to the end of recording. Commercials are not erased from the tape.

Ready Check List

- All connections are made.
- One time Setup completed.
- VCR is plugged in.
- TV is turned on and set to-CH3, 4 or Video on TV.

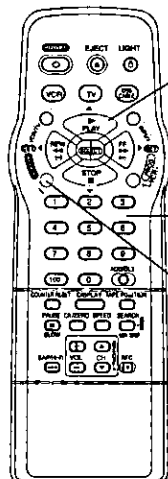


SELECT/
SET


▲:PLAY
▼:STOP
▶:FF
◀:REW

NUMBER
keys


ACTION

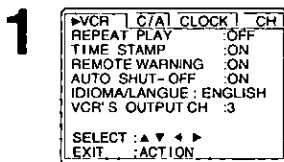

Press **ACTION***
to display MENU.

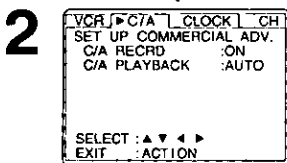

Press **◀▶**
to select C/A
and display SET UP
COMMERCIAL ADV.

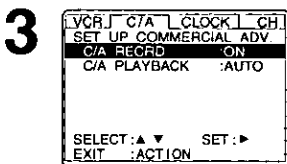


Press **▲▼**
to select C/A RECORD
and **press ▶** to set.

Note

- When using the timer to record two adjacent shows on the same channel, better accuracy can be obtained by programming each shows separately.

ON Timer, VCR Plus+ System, and One Touch recordings are marked automatically.

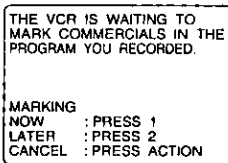

When STOP is pressed during normal recording, Select One of a) or b) or c).

- a) Press 1 key to mark the recording now. "NOW MARKING COMMERCIALS" appears.
- b) Press 2 key to mark the recording later (after the power has been turned off).
- If the tape is rewound and another recording started before the power is turned off, commercials may not be marked correctly.
- c) Press ACTION to cancel the marking of this recording.

OFF The VCR will not mark commercials.


When you are editing or dubbing a tape, or when you do not wish to use this feature, OFF should be selected.

4 Press **ACTION** again
to return to normal screen.


Important: If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

COMMERCIAL **▶▶ADVANCE**® Playback


When playing back recording which have been marked using **COMMERCIAL *▶▶ADVANCE*** feature, you can either set VCR to automatically advance through marked commercial blocks, or set it so that commercials are only skipped on your command.

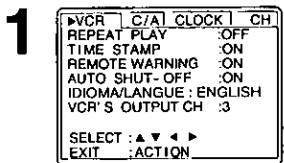

Press **ACTION** to display MENU.

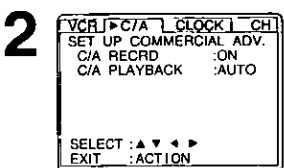

Press **◀▶** to select C/A and display SET UP COMMERCIAL ADV.

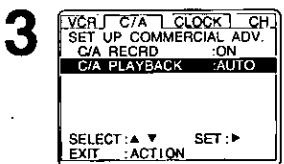

Press **▲▼** to select C/A PLAYBACK and press **▶** to set.



AUTO VCR will automatically advance through marked commercial blocks recorded on the tape and then resume playback.

MANUAL VCR will advance through commercials only when CA/ZERO is pressed. Playback will resume when the end mark of a commercial block is found, or a new recording or blank portion is detected, or after 8 minutes.

4 Press **ACTION** again to return to normal screen.

Notes

- The selection mode in step 3 remains set unless there is a power outage in which case the original factory setting will be restored.
- If playback is started in the middle of a commercial, only a single commercial is shown, or an individual commercial is longer than 1 minute, a commercial may not be skipped. Press FF to quickly advance through the commercial.
- Part of a recorded program may be skipped over if the program portion between commercials is less than one minute or there are frequent dark and quiet scenes during the program. To view the portion of tape being incorrectly skipped, press PLAY while the VCR is skipping, reverse the tape to a point just prior to where the skipping began and press PLAY again. This time the group will not be automatically skipped. Automatic skipping will be re-enabled when the end of the marked group is detected.

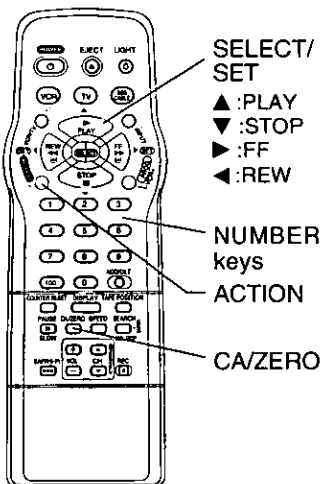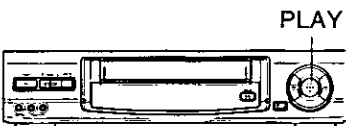

SELECT/
SET

▲:PLAY
▼:STOP
▶:FF
◀:REW

NUMBER
keys

ACTION

CA/ZERO

COMMERCIAL *▶▶ADVANCE*® and **MOVIE *▶▶ADVANCE***® are registered trademarks of SRT, Inc. A Jerry Iggulden invention licensed in association with Arthur D. Little Enterprises, Inc.

U.S.Pat. No. 5,333,091;
5,692,093; 5,696,866
other patents pending

**Advanced
Operation**

Tape Operation (continued)

The most commonly asked questions about **COMMERCIAL**ADVANCE*** are answered below.

Question	Answer
How fast does the VCR advance through commercials?	The VCR advances through a 3-minute commercial block in about 8 to 12 seconds if the tape speed is SLP. In SP, it takes about 25 to 35 seconds.
Are commercials advanced through only when I playback a recording?	Yes. The commercials are not marked until after the recording is finished.
Are commercials still recorded on the tape in case I choose to view them sometime?	Yes. By setting the C/A PLAYBACK to MANUAL, see page 27, you can view or advance through commercials as desired.
Does COMMERCIAL**ADVANCE* work in all recording speeds?	Yes. COMMERCIAL**ADVANCE* works in SP, LP, and SLP.
Does the VCR advance through commercials each time I playback tapes which were recorded using COMMERCIAL**ADVANCE* ?	Yes. As long as C/A PLAYBACK is set to AUTO, see page 27, the VCR should advance through commercials each time the tape is played back.
After marking commercials, does the VCR stop at the end of the tape, or rewind to the beginning?	The tape stops at the end of the recording so that any additional timer recordings can be performed.
Can I play my COMMERCIAL**ADVANCE* recordings in non- COMMERCIAL**ADVANCE* VCRs?	Yes. COMMERCIAL**ADVANCE* marked recordings will play in non- COMMERCIAL**ADVANCE* VCRs, but commercials will not be advanced through.
Does the marking process interfere with other programmed recordings?	No. If the interval between 2 or more timer programs is not sufficient to mark the recording, marking will be done after all recordings are complete and the power goes off.
What happens if I cancel the marking in progress so I can use the VCR?	Marking will be resumed when the VCR's power is turned off as long as the tape has not been ejected.
What if part of my program is advanced through along with the commercials?	Please see the 3rd note on page 27.
Additional Notes: <ul style="list-style-type: none">• Because of the various ways in which commercials are broadcast, the VCR may not be able to recognize all commercials.• If a timer recording is scheduled for the middle of the night, please be aware that the VCR will make some noise as it rewinds and fast forwards the tape while marking commercials.	

COMMERCIALADVANCE*** and **MOVIE**ADVANCE*** are registered trademarks of SRT, Inc.
A Jerry Iggulden invention licensed in association with Arthur D. Little Enterprises, Inc.

U.S.Pat. No. 5,333,091;
5,692,093; 5,696,866
other patents pending

Important: If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.


MOVIE ▶ ADVANCE®

MOVIE ▶ ADVANCE® helps you locate certain parts of prerecorded movies (rented or purchased). The feature works in two ways.


- You can go to the beginning of the movie.
- You can skip from one preview to the next.

MOVIE ▶ ADVANCE® works only on tapes recorded in SP speed with the record tab removed.

1 Insert a tape without record tab.

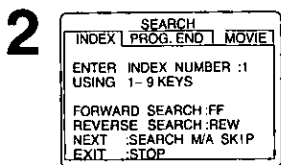

Press **SEARCH/ M/A SKIP*** to display SEARCH.

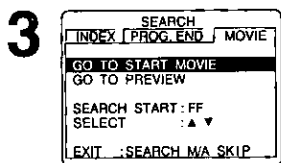


Press **SEARCH/ M/A SKIP** twice to select MOVIE and press **▲▼** to select GO TO START MOVIE or GO TO PREVIEW.

Select "GO TO START MOVIE," if you want to advance directly to beginning of the movie.

--> continue with step 4.

Select "GO TO PREVIEW," if you want to view the first (next) preview.


--> go to "To Search for Preview" at right.

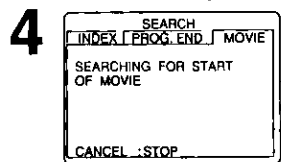

Press ▶ to start searching.

- To cancel, press STOP.

When the movie is found...

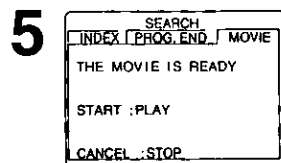


Press **PLAY** to start playback.

- To cancel, press STOP.

Ready Check List

- All connections are made.
- One time Setup completed.
- VCR is plugged in.
- TV is turned on and set to CH3, 4 or Video on TV.

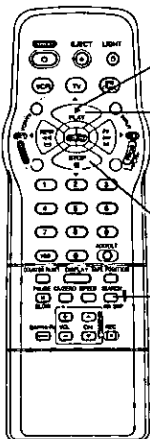

PLAY
SELECT/SET
▲:PLAY
▼:STOP
▶:FF
STOP
SEARCH/M/A SKIP

To Search for Preview.

You can override the operation of MOVIE ▶ ADVANCE® SEARCH FOR PREVIEWS mode by pressing SEARCH/ M/A SKIP during tape searching.

MOVIE ▶ ADVANCE® works by searching the tape past each preview and then reversing back to the start of the detected preview. While the tape is reversing back, if SEARCH/ M/A SKIP is pressed, MOVIE ▶ ADVANCE® will begin searching for the next preview. While searching for the next preview, if you see the start of a preview which you wish to watch, press SEARCH/ M/A SKIP and MOVIE ▶ ADVANCE® will immediately reverse back to the start of that preview, instead of searching further past the preview start point. Once the VCR is playing a preview, press SEARCH/ M/A SKIP to advance to the next preview, long commercial or the start of the movie (whichever is next).

1 Start preview searching.

1) In step 3 at left, select Go To PREVIEW.

2) Press ▶.

- If you want to playback, press PLAY.

When a preview is detected, VCR will start playback.

2 Start next preview searching.

Press SEARCH/ M/A SKIP.

- To cancel, press STOP.

Advanced
Operation

Tape Operation (continued)


Search System

For each recording, an invisible index mark is placed on the tape. A program index and information are also included for timer recordings. These marks are used to access or scan recordings.

Index Search




Press **SEARCH/ M/A SKIP*** to display **SEARCH** in Stop or Play mode.

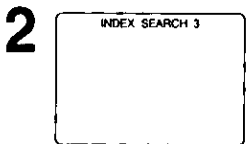

Press number keys to select recording number.

- To calculate number, see below.

Press **FF** or **REW** to start search.

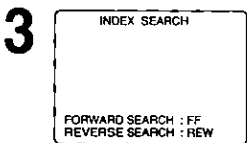


- Play begins at search end. To search forward or back 1 index, press **FF** or **REW** while screen left is displayed (10 sec.).

To Calculate Index Number


Example 1:

 To go to rec. 2 from rec. 4, enter 3 and press **REW**.



Example 2:

 To go to rec. 6 from rec. 2, enter 4 and press **FF**.



NOTE: ↓ indicates start points of each recording.


Note

- If Index Search is started very close to an index mark, that index mark may not be counted in the search.

Program End Search

Locates end point of recording for continuity.

1 Press **SEARCH/ M/A SKIP** twice to display **SEARCH** in Stop or Play mode.

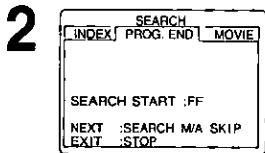

Press **FF** to start **PROGRAM END SEARCH**.

Examples of Program End Search.

Fig. 1

 


Fig. 2


 


Fig. 3

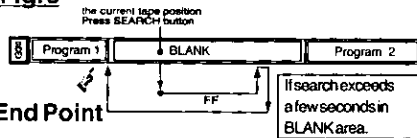


Upon locating end point,

- >search continues 7 sec. past end point,
- >tape rewinds to 10 sec. before end point,
- >tape plays to end point and stops.

Notes

- If Program End Search is started very close to an index mark, that mark may be skipped over.
- To cancel, press **PLAY** or **STOP**.



Important: If a remote control button does not work properly, press the VCR button on the remote and try the button again.

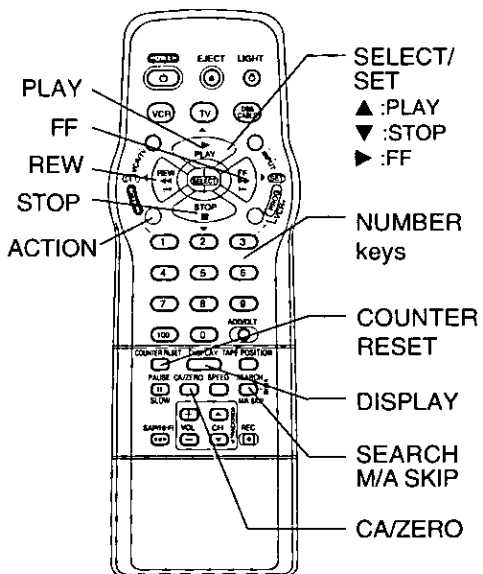

Zero Search

To quickly return to a specified tape location.

- 1 Press **DISPLAY** during play to display Counter.
- 2 Press **COUNTER RESET** at desired position to reset to "0:00:00".
- 3 Continue to record, playback etc.
- 4 Press **Stop**.
- 5 Press **CA/ZERO** in Stop mode to start ZERO SEARCH.

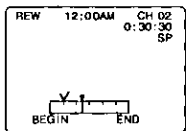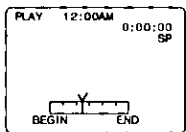

Press **CA/ZERO** in Stop mode to start ZERO SEARCH.

 
• Unit will go into FF or REW mode and stop at the last point the Counter was set to 0:00:00.

Note

- If a blank portion exists on the tape, and depending on the position of the V mark, the V mark display position may not be accurate.

Repeat Play

Set to playback a recording over and over.

- 1 Press **ACTION** to display menu.
- 
- Press **▲▼** to select REPEAT PLAY and press **▶** to set ON or OFF.
- Play repeats at tape end or if unrecorded portion over 30 sec. is detected.

- 3 Press **ACTION** to return to normal screen.

Auto Operation Functions

Auto Play

Insert a tape --> Power comes on, --> Play starts if no record tab (see pg. 4).

Auto Rewind

Play
Manual Record } --> Tape end,
Fast Forward } --> Rewind

Play Auto Eject

(Repeat Play must be off)

Play, --> Tape end, --> Rewind,
--> Tape ejects if no record tab


Special VCR Features

Channel Caption


When set, station name, e.g. ABC, CBS, and channel number appear on-screen. Set up to 24 preset captions, and/or 10 manually created captions.

- You need a list of stations and the channel numbers you receive them on.


Preset Caption

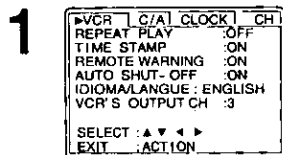


Press **ACTION*** to display MENU.

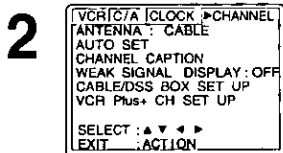

Press **◀▶** to select CHANNEL.

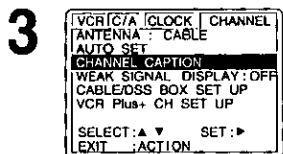


Press **▲▼** to select CHANNEL CAPTION and press **▶** to set.

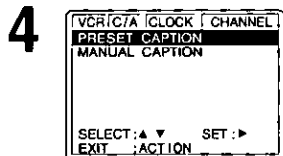

Press **▲▼** to select PRESET CAPTION and press **▶** to set.

- To create your own captions, go to "Manual Caption" on page 33.

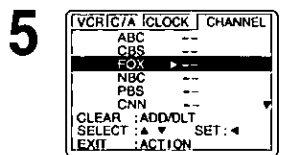


Assign preset captions.

- 1) Press **▲▼** to highlight caption.
 - 2) Press **▶** to move cursor to the right.
 - 3) Press **▲▼** to select CH number.
 - 4) Press **◀** to set.
- Repeat step 5 until the list is complete.

To make corrections,

Press **▲▼** and **▶** to select the channel number, then press **▲▼** to change, or **ADD/HLT** to delete the number.


- 6** Press **ACTION** twice to end setup.

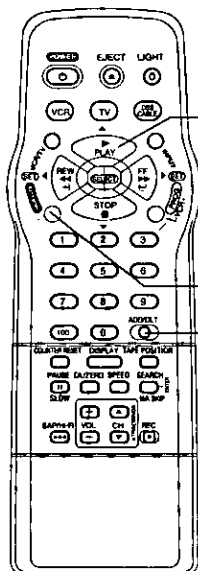


***Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

Manual Caption

1 Do "Preset Caption" steps 1-3 on page 32.

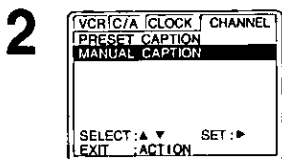


Press ▲▼ to select CHANNEL CAPTION and press ► to set.

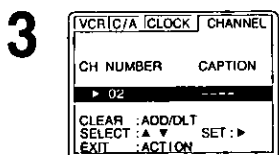

Press ▲▼ to select CH NUMBER and press ► to move cursor to the right.

- Channels already set and channels deleted from Channel Memory are not displayed.
- You can set a total of ten channel captions.

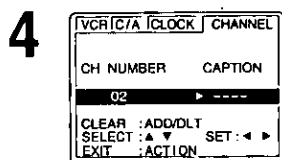

Press ▲▼ to enter CAPTION and press ◀ to set.


- Characters change in following order.

→ A ↔ B ↔ C ↔ ... ↔ Z ↔ BLANK ↔ - ↔ & ◀
 → 9 ↔ ... ↔ 2 ↔ 1 ↔ 0 ↔ + ↔ + ◀

- Repeat steps 3 and 4 as desired.

To make corrections,

Press ◀► to move to the incorrect entry, then press ▲▼ to make correction. Or, press ADD/ DLT to clear the caption.

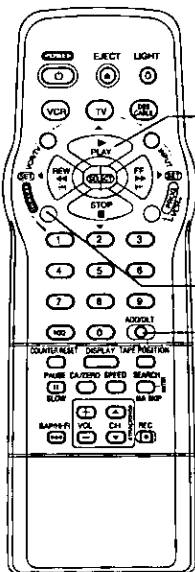

SELECT/SET

▲:PLAY
▼:STOP
◀:REW
▶:FF

ACTION

ADD/DLT


Advanced
Operation

5 Press ACTION twice to end setup.


Special VCR Features (continued)

Time Stamp Feature

The VCR writes program data (see example below) about the first 10 seconds of every recording. The information is then displayed the first 10 seconds of playback.

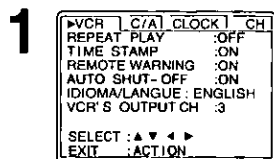

Press **ACTION*** to display MENU.

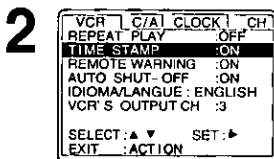


Press **▲▼** to select **TIME STAMP** and press **▶** to set.

• When "OFF" is selected, the program data is written on the tape, but will not be displayed.

3 Press **ACTION** again to return to normal screen.


Ready Check List

- Clock is set to correct time.
- Record tab in place. (See page 4.)

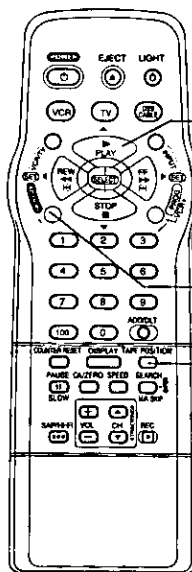


<Time Stamp Example>


One Touch Recording

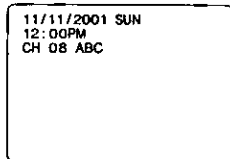

Timer Recording

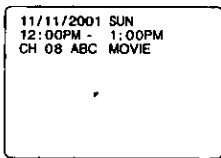

When Clock is not set...

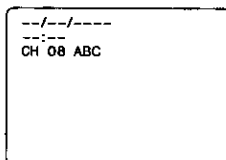


Important: If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

Tape Position and Tape Status Feature

To find out the present tape position. **Tape position cannot be detected for VHS-C Cassette types and tapes of less than 60 minutes length.**

- 1 Press **TAPE POSITION** to detect Tape Position.

DETECTING TAPE POSITION

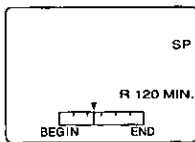

- "DETECTING TAPE POSITION" only appears the first time a cassette is inserted and it takes several seconds for correct indication to appear.
- The present tape position indication is displayed.
- The remaining tape time (in minutes) is displayed according to the current tape speed.

 
- 2 Press **TAPE POSITION** to return to normal screen.

Note


This function cannot display exact amount of tape remaining for tapes over 120 minutes.

VCR Lock Feature

When set to ON, all operations except for timer record and tape eject are prohibited. Useful for households with small children.



 To turn on, hold down REC on the VCR in Stop mode with no tape inserted for 7 sec. (Please ignore the NO CASSETTE warning.)




To turn off, repeat above.

- VCR Lock cancels in 24 hours if clock is set.

Auto Shut-Off Feature

When set to ON, VCR shuts off if blank tape is played or no signal is detected for 5 min.

- 1 Press **ACTION** to display menu.

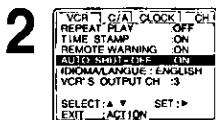


- 2 Press **▲▼** to select **AUTO SHUT-OFF** and press **▶** to set ON or OFF.


- 3 Press **ACTION** to return to normal screen.

Weak Signal Display ON/OFF Feature

When "ON," picture is displayed regardless of signal strength.

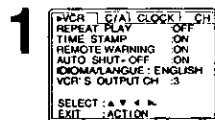

- 1 Press **ACTION** to display menu.

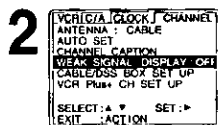

- 2 Press **◀▶** to select and display **CHANNEL**, press **▲▼** to select **WEAK SIGNAL DISPLAY**, and press **▶** to set ON or OFF.

- ON: Picture is displayed regardless of signal condition, and may not always be clearly visible.

OFF: Screen turns solid blue when signal is weak or non-existent.


- Selecting ON has no effect on connected equipment with blue back feature.

- 3 Press **ACTION** to return to normal screen.

Remote Warning ON/OFF Feature

If Multi-brand feature is used (page 22), and this feature is set to on, a warning appears whenever an invalid key is pressed in TV, DSS, or Cable mode.

- 1 Press **ACTION** to display menu.

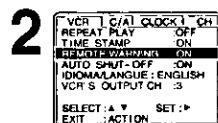


- 2 Press **▲▼** to select **REMOTE WARNING** and press **▶** to set ON or OFF.

- If "OFF," remote warning will not appear if invalid key is pressed.

- 3 Press **ACTION** to return to normal screen.

Copying Your Tapes (Dubbing)

Connection

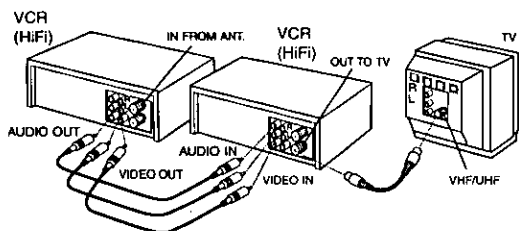

(Video In Terminal on the front of VCR is available)

- 1 Connect VIDEO OUT terminal on Playing VCR to VIDEO IN terminal on Recording VCR. To monitor the dubbing, also connect a TV as shown.
- 2 Connect "L" and "R" AUDIO OUT terminals on Playing VCR to "L" and "R" AUDIO IN terminals on Recording VCR.

In place of a Playing VCR, you can use other equipment, such as a Camcorder. Simply connect the unit's Audio/Video outputs to the Recording VCR.

Playing (Source) VCR

Recording (Editing) VCR


- | | | | |
|---|---|--|--|
| 1 | Insert pre-recorded tape. | | Insert blank tape with record tab. |
| 2 | _____ | | Press INPUT to set VCR Input mode to LINE1 for Video Input (Rear) or to LINE2 for Video Input (Front). (See "Selecting the Input Mode" below.) |
| 3 | Press PLAY, then PAUSE/SLOW immediately to enter PLAY/PAUSE mode. | | Press REC, then PAUSE/SLOW immediately to enter REC/PAUSE mode. |
| The operation of steps 4 and 5 must be done on both playing and recording VCRs at the same time. | | | |
| 4 | Press PLAY to start dubbing. Playing VCR starts playback. | | Press PAUSE/SLOW to start dubbing. Recording VCR starts recording. |
| 5 | Press STOP to stop dubbing. | | Press STOP to stop dubbing. |

■ To Monitor Dubbing on Your TV

- 1 Turn your TV on and tune to the Recording VCR channel (CH3 or CH4).
- 2 Set the VCR/TV Selector on the Recording VCR to "VCR."

■ Selecting the Input Mode

 - Method 1: Press INPUT repeatedly. Channel Number <-> LINE1 <-> LINE2
- Method 2: Press CH ▲ / ▼. Display will change as below.



- "L1" or "L2" lights on Multi-Function Display (about 4 sec.) when LINE1 or LINE2 is selected.
- LINE1: For rear audio/video connection.
- LINE2: For front audio/video connection.

Note

Dubbing tapes protected with Copy Guard will have poor quality results.

Caution: Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

VCR & Cassette Information

Head Cleaning


Playing older or damaged tapes may eventually cause video heads to become clogged.

Video Head Clog Sensor

During playback, this screen appears if clogging is detected. To remove screen, press PLAY on the remote or VCR.

VIDEO HEADS MAY
NEED CLEANING
PLEASE INSERT HEAD
CLEANING CASSETTE
OR REFER TO MANUAL

END :PLAY

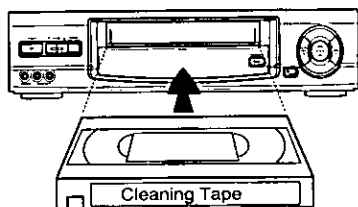

- Use "dry" type head cleaning cassette only. (Part No. NV-TCL30PT is recommended.)
- Follow cleaning tape instructions carefully. Excessive use of tape can shorten head life.
- If head clog symptoms persist, contact your nearest Factory Service Center or authorized Service Center. (See page 40.)

Cleaning the VCR

Use a soft cloth or dusting attachment of a vacuum cleaner to remove dust from the ventilation holes on the back sides and bottom of the cabinet.

Plastic surfaces are easily scratched and can be marred by alcohol and various solvents. Avoid excessive use of oil-based furniture polishes since the materials used in the cabinet will accumulate more dust. We recommend using a nonabrasive, antistatic cleaner and polisher.

Specifications

Power Source:	120 V AC, 60 Hz
Power Consumption:	<u>Power On</u> Approx. 23 watts <u>Power Off</u> Approx. 3.0 watts
Video Signal:	EIA Standard NTSC color
Video Recording System:	4 rotary heads helical scanning system
Audio Track:	1 track (Normal) 2 channel (Hi-Fi Audio Sound)
Tuner:	
Broadcast Channels:	VHF 2-13, UHF 14-69
CABLE Channels:	Midband A through I (14-22) Superband J through W (23-36) Hyperband AA-EEE (37-64) Lowband A-5-A-1 (95-99) Special CABLE channel 5 A (01) Ultraband 65-94, 100-125
Operating Temperature:	5 °C-40 °C (41 °F-104 °F)
Operating Humidity:	10%-75%
Weight:	2.7 kg (6.0 lbs).
Dimensions:	430 (W) x 98 (H) x 242 (D) mm 16-15/16" (W) x 3-7/8" (H) x 9-9/16" (D)

Note: Designs and specifications are subject to change without notice.

Features for a Quality Picture

Digital Auto Picture


Automatically controls the video output signal for less noise depending on the tape condition.

Digital Auto Tracking

Continuously analyzes the signal and adjusts for optimum picture quality.

Manual Tracking Control (to reduce picture noise)

Use during Playback and Slow Motion mode to reduce picture noise. Press CH (TRACKING) ▲ / ▼ buttons on the remote control or on the VCR until the picture clears up. To return to Auto Tracking, press POWER off, then on again a few seconds later.

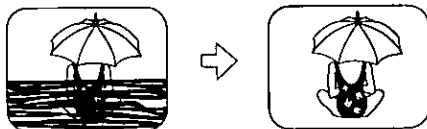


V-Lock Control (to reduce picture jitter)

In Still mode, CH (TRACKING) ▲ / ▼ buttons operate as a V-Lock control.

On-Screen Displays (OSD)

Function & Channel Display

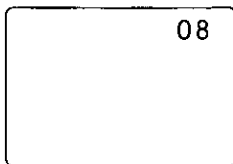

When a function button is pressed, e.g. PLAY, or you change channels, a 4 second display appears first in large and then small characters.


Blank Tape/ No Video Signal Indication

Whenever a blank section of a tape comes up in Play mode, or when the selected channel has no broadcast signal with the Weak Signal Display Feature (page 35) set to OFF, the TV screen will turn solid blue.

VCR Status & Clock Display

To display or remove overlay at right,

--> press DISPLAY.

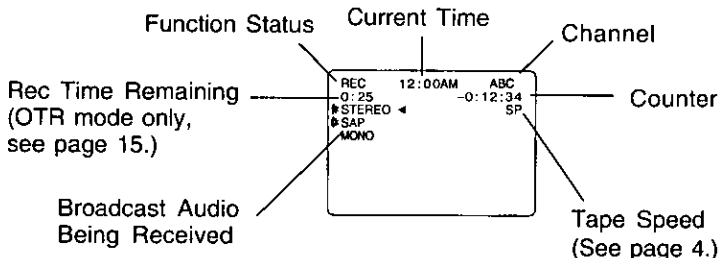

Warning and Instruction Displays

These displays will alert you to a missed operation or provide further instructions.

OSD	Caution	Pg	OSD	Caution	Pg
NO CH FOUND PLEASE CHECK ANTENNA CABLE CONNECTION THEN PRESS CH UP KEY AGAIN	If no active channels are found for CHANNEL MEMORY...	8	TO CANCEL TIMER REC PRESS POWER THEN STOP KEY	If you press POWER or STOP during a Timer Recording... (visible in VCR mode only)	16
PLEASE SET CLOCK BY PRESSING ACTION KEY	If you attempt to set or review a Timer Recording and the Clock is not set...	16	VIDEO HEADS MAY NEED CLEANING PLEASE INSERT HEAD CLEANING CASSETTE OR REFER TO MANUAL END :PLAY	If head cleaning becomes necessary while playing back a tape...	37
TURN VCR OFF FOR TIMER RECORDING	After a Timer Program has been set...	16	VCR LOCK ACTIVATED	If you press a function button other than STOP/EJECT or POWER while the VCR is in VCR Lock mode...	35
CHECK CASSETTE RECORD TAB	If you press REC on the remote control or VCR, and a cassette is inserted with no record tab...	4	REMOTE CONTROL IS SET TO CABLE/DSS MODE USE VCR : VCR KEY USE TV : TV KEY	If you press an invalid key on the remote while in CABLE/DSS mode...	22 23 35
NO CASSETTE PLEASE INSERT A CASSETTE	If you press PLAY, FF, REW, or REC on the remote control or VCR without a cassette inserted...	14 15	REMOTE CONTROL IS SET TO TV MODE USE VCR : VCR KEY USE CABLE/DSS : CABLE/DSS	If you press an invalid key on the remote while in TV mode...	22 23 35

Before Requesting Service

Check the following points once again if you are having trouble with your VCR.

Power	Correction
No power...	<ul style="list-style-type: none"> • Completely insert Power Plug into an AC outlet. • Set POWER button to on. • Make sure power source is active.
Recording & Playback	Correction
TV program cannot be recorded...	<ul style="list-style-type: none"> • Check connections between VCR, external antenna, and TV. • Check channel selections. • Make sure your antenna system (CABLE or TV) is correctly set. (Channels [P.12]) • Make sure cassette record tab is intact. (P.4)
Timer recording cannot be performed...	<ul style="list-style-type: none"> • Confirm that clock is set to current time and date. • Make sure Cable/DSS box (if used) is left on and tuned to channel to be recorded. • Set recording start/stop times correctly. (P.16) • Make sure VCR POWER button is pressed off. (P.16) • Timer recording may not be performed or continued if a power interruption occurs before or during a Timer Recording, even after power is restored.
There is no playback picture, or the playback picture is noisy or contains streaks...	<ul style="list-style-type: none"> • Select channel 3 or 4 on TV to match VCR output channel (3 or 4) (P.8) or select LINE. • Set VCR/TV selector to "VCR." • Adjust TRACKING control in either direction. (P.37) • Try Head Cleaning. (P.37)
Special effects playback, picture may contain some vertical jitter when using a TV with an Automatic Vertical Hold Control...	<ul style="list-style-type: none"> • Set TV's Vertical Hold Control to MANUAL, then adjust.
VCR cannot be controlled...	<ul style="list-style-type: none"> • Make sure VCR power is on. • Check Remote batteries. • Make sure VCR LOCK is set to off. (P.35) • Make sure Remote is in proper mode.(P.22) • Make sure Timer Record is not in progress.
Remote Control	Correction
VCR cannot be remote controlled...	<ul style="list-style-type: none"> • Make sure VCR power is on. • Make sure Remote is in VCR mode. • Aim Remote Control directly at remote sensor on VCR. (P.6) • Avoid any object blocking signal path. • Check Remote batteries. (P.4) • Make sure VCR LOCK is set to off. (P.35) • Exposing VCR remote sensor to direct fluorescent or outdoor light may cause signal interference.
ACTION and PROG/VCR+ buttons do not respond...	<ul style="list-style-type: none"> • Check connections between VCR, external antenna, and TV. • Press VCR button for VCR mode. (P.22) • Check Remote batteries. (P.4)
Miscellaneous	Correction
Programs cannot be viewed on TV...	<ul style="list-style-type: none"> • Make sure TV power is on. • Make sure TV is set to output of VCR. • Check connections between VCR, external antenna, and TV. • Set VCR/TV selector to "TV." (P.15) • Make sure proper signal source is selected.
Video cassette cannot be inserted...	<ul style="list-style-type: none"> • Insert the cassette with window side up; record tab facing you. • Check if a tape is already in the unit.
Video cassette cannot be removed...	<ul style="list-style-type: none"> • Completely insert Power Plug into an AC outlet.
Video cassette ejects when a recording is started or the power is turned off for timer recording...	<ul style="list-style-type: none"> • Make sure cassette record tab is intact. (P.4)
In Stop mode, the motor (CYLINDER) continues to rotate...	<ul style="list-style-type: none"> • To enable Quick play mechanism, the cylinder will rotate for about 3 minutes. This reduces response time from Stop to Play mode and from Play to Rewind Search mode.

If you cannot resolve the problem, please call the Customer Call Center for product assistance at 1-800-211-PANA (7262).

To locate an authorized servicenter, please call toll free 1-800-211-PANA (7262), or send e-mail to : consumerproducts@panasonic.com

Service Center List

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:

1-800-211-PANA (7262), Monday-Friday 9am-9pm Saturday-Sunday 9am-7pm, EST. or send e-mail to : consumerproducts@panasonic.com

Web Site: <http://www.panasonic.com>

You can purchase parts, accessories or locate your nearest servicenter by visiting our Web Site.

Accessory Purchases:

Customer Orders Only 800-332-5368 (Customer Orders Only)
Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032
(6 am to 5 pm Monday - Friday; 6 am to 10:30 am Saturday; PST)
(Visa, MasterCard, Discover Card, American Express, Check)

Factory Servicenters Locations

CALIFORNIA

6550 Katella Avenue
Cypress, CA 90630

800 Dubuque Avenue
S. San Francisco,
CA 94080

3878 Ruffin Road
Suite A
San Diego, CA 92123

COLORADO

1640 South Abilene
Street Suite D
Aurora, CO 80012

FLORIDA

3700 North 29th
Avenue
Suite 102
Hollywood, FL
33020

GEORGIA

8655 Roswell Road
Suite 100
Atlanta, GA 30350

ILLINOIS

9060 Golf Road
Niles, IL 60714

1703 North Randall
Road
Elgin, IL 60123
(Pick-up/Drop-off only)

MARYLAND

62 Mountain Road
Glen Burnie, MD
21061

MASSACHUSETTS

60 Glacier Drive
Suite G
Westwood, MA 02090

MINNESOTA

7850-12th Avenue
South
Airport Business Center
Bloomington, MN 55425

OHIO

2236 Waycross Road
Civic Center Plaza
Forest Park, OH 45240

PENNSYLVANIA

2221 Cabot Blvd. West
Suite B
Langhorne, PA 19047

TEXAS

13615 Welch Road
Suite 101
Farmers Branch,
TX 75244

WASHINGTON

20425-84th Avenue
South
Kent, WA 98032

HAWAII

99-859 Iwaiwa
Street
Aiea, Hawaii 96701
Phone (808)488-
1996
Fax (808)486-4369

Service in Puerto Rico

Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/ Factory Servicenter:

Ave. 65 de Infanteria, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985
Phone (787)750-4300 Fax (787)768-2910

As of January 2000

Limited Warranty

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation
of America, One Panasonic Way
Secaucus, New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc.
AVE. 65 de Infantería, Km. 9.5 San Gabriel
Industrial Park Carolina, Puerto Rico 00985

PANASONIC Video Products Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the Warrantor") will repair this product with new or refurbished parts, free of charge, in the USA or Puerto Rico, in the event of a defect in materials or workmanship as follows (all time periods commence from the date of the original purchase):

PRODUCT	PARTS	LABOR	SERVICE	CONTACT NUMBER
CAMCORDER	ONE (1) YEAR, EXCEPT CCD IMAGE SENSOR CCD IMAGE SENSOR - SIX (6) MONTHS	NINETY (90) DAYS NINETY (90) DAYS	Carry-In or Mail In	1-800-211-PANA(7262)
VCR	ONE (1) YEAR	NINETY (90) DAYS	Carry-In or Mail In	1-800-211-PANA(7262)
A/V MIXER	ONE (1) YEAR	NINETY (90) DAYS	Carry-In or Mail In	1-800-211-PANA(7262)
MONITOR- VCR Combination	ONE (1) YEAR, EXCEPT CRT CRT - TWO (2) YEARS	NINETY (90) DAYS CRT - NINETY (90) DAYS	Carry-In: 21" CRT and Smaller In-home or carry-in: 22" CRT and Larger	1-800-211-PANA(7262)

Batteries (if included) - New rechargeable batteries in exchange for defective rechargeable batteries for ten (10) days. Non-rechargeable batteries are not warranted.

Tape (if included) - New video cassette tape in exchange for a defective video cassette tape for five (5) days. In-home, carry-in or mail-in service, as applicable, in the USA can be obtained during the warranty period by contacting a Panasonic Services Company (PASC) Factory Servicenter listed in the Service Directory. Or call toll free contact number listed above, to locate an authorized PASC Servicenter. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the Panasonic Sales Company telephone number listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of the date of the original purchase is required before warranty service is rendered.

This warranty only covers failures due to defects in materials and workmanship which occur during normal use and does not cover normal maintenance, including, but not limited to, video and audio head cleaning. The warranty does not cover damage which occurs in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set-up adjustments, improper antenna, inadequate signal pickup, maladjustment of consumer controls, improper operation, power line surge, improper voltage supply, lightning damage, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a PASC Factory Servicenter or a PASC authorized Servicenter, or damage that is attributable to acts of God.

LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGE TO RECORDING MEDIA) RESULTING FROM THE USE OF THIS PRODUCTS, OR ARISING OUT OF ANY BREACH OF THE WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Consumer Affairs Department at the Panasonic Consumer Electronics Company address above.

 
SERVICE CALLS WHICH DO NOT INVOLVE DEFECTIVE MATERIALS OR WORKMANSHIP AS DETERMINED BY THE WARRANTOR, IN ITS SOLE DISCRETION, ARE NOT COVERED. COSTS OF SUCH SERVICE CALLS ARE THE RESPONSIBILITY OF THE PURCHASER.

warid 8/8/2000

For Your
Information

Como realizar la Configuración Inicial

1 Encienda el TV y ajústelo en el canal 3.



Encienda el VCR. Al encender el VCR por primera vez, en la pantalla aparecerá **SELECT LANGUAGE**.

 
- Si la pantalla no aparece, verifique las conexiones entre el VCR y el TV, y si el TV está sintonizado en el canal 3, intente cambiándolo al canal 4.
- Cuando desee cambiar el canal de salida del VCR, por favor remítase Canal de Salida del VCR en la página 13.
- Si ajusta el idioma equivocado, realice los pasos de "Reajuste de Todas las Funciones de Memoria del VCR" en la página 9.




Presione CH ▲ para seleccionar Inglés.

○
Presione CH ▼ para seleccionar Español.

○
Presione la tecla VCR/TV para seleccionar Francés. Cuando se pulsa una de las teclas anteriores, aparece la pantalla **ELEGIR LA CONEXION** en el idioma que se ha seleccionado.



 
Presione ▲▼ para seleccionar la conexión **CABLE/DSS**►**VCR**►**TV** y luego presione ► para ajustar.




Confirme el canal de salida de su caja de cable o receptor DSS. Presione las teclas ▲▼ para seleccionar el mismo canal que el canal de salida de la caja de cable o del receptor DSS. Presione ► para entrar

Encienda la caja de cable y ajuste su canal de Estación Pública de Radiodifusión (PBS) en su huso horario. Si utiliza un receptor DSS, este tiene que estar apagado.

 6



 Presione la tecla CH ▲ para comenzar la operación de Ajuste Automático Canal/Reloj. El ajuste Canal/Reloj se lleva a cabo automáticamente. Si la configuración se termina, aparece la pantalla siguiente.



Si aparece la pantalla "Fijacion Automatica Del Reloj Es Incompleto", ajuste el reloj utilizando los procedimientos de "AJUSTE MANUAL DEL RELOJ" mostrados en la página 9.

Ajuste Manual del Reloj

Si el ajuste automático del reloj no se ha completado, ajuste el reloj manualmente de la siguiente manera:

- 1) Presione la tecla ACTION en el control remoto para visualizar la pantalla del menú RELOJ.
- 2) Presione ▲▼ para seleccionar el mes y ► para ajustar. De la misma forma, seleccione y ajuste la fecha, año, hora y DST (Hora de Verano).
- 3) Presione dos veces la tecla ACTION para poner el RELOJ en marcha y salir.

Ajustar de nuevo el reloj

 
1 Presione ACTION para exhiba el menú.



Presione ◀▶ para seleccionar "RELOJ".



Presione ▲▼ para seleccionar "MANUAL" y luego presione ►.



Presione ▲▼ y ◀▶ para seleccionar y ajustar la hora y la fecha.

5 Presione ACTION dos veces para que el reloj comience a funcionar y salir desde este modo.

Operaciones básicas para la reproducción

- 1 **Inserte una cinta.**
 - la alimentación del VCR se activa. En la Pantalla de Visualización Multi Función se ilumina "VCR".
- 2 **Presione PLAY** para reproducir la cinta.
 - Si la cinta no tiene lengüeta de prevención de grabación (página 4), se inicia la reproducción automática.

Detalles especiales durante la grabación

- Presione **FF** o **REW** para búsqueda de escenas Hacia delante/ Hacia atrás. Presione nuevamente o presione **PLAY** para liberar.
- Presione **PAUSE/SLOW** para imagen Fija (Congelada). Presione **PLAY** para liberar.
- Presione **PAUSE/SLOW** en el modo de Imagen fija para imágenes Cuadro a Cuadro. Presione **PLAY** para liberar.
- Mantenga pulsado **PAUSE/SLOW** en el modo de imagen fija para imágenes en cámara lenta. Presione **PLAY** para liberar.

 
 
- 3 Presione **STOP** para detener la cinta.
 - Presione **REW** o **FF** en el modo de parada para Rebobinado/Avance Rápido de la cinta.
 - Presione **EJECT** en el control remoto, o **STOP/ EJECT** en el VCR para expulsar la cinta.

Operaciones básicas para la grabación


- 1 **Inserte la cinta con lengüeta de protección de grabación (pág. 4).**
 - La alimentación del VCR se activa. En la pantalla Multi Función se ilumina "VCR".
- 2 Presione **CH ▲▼**, o las teclas de números para seleccionar el canal.
- 3 Presione **SPEED** para seleccionar la velocidad de grabación (pág.4)
 - SP = Reproducción estándar,
 - LP = Larga duración,
 - SLP = Superlarga duración.
- 4 Presione **REC** para comenzar a grabar.
 - Para eliminar escenas indeseadas, presione **PAUSE/SLOW** para pausar, y al pulsar nuevamente se reanuda la grabación.
- 5 Presione **STOP** para detener la grabación.
 - Grabación de Un Toque (grabar en marcha),
 - El VCR se apaga después de preajustar la extensión de la grabación.
 - > Cada vez que se pulsa REC se adicionan 30 min. a la extensión de grabación hasta un máximo de 4 horas.

Programación fácil para la grabación con temporizador


- 1 Presione **PROG/VCR+** para visualizar PROGRAM.
- 2 Presione **◀▶** para visualizar la pantalla de Programa.
 - 1) Para ajustar la FECHA de grabación, presione **▲▼** para seleccionar: 1-31 = una vez, o **DIARIO** = a la misma hora de lunes a viernes, o **SEMANA** = a la misma hora cada semana y presione **▶** para ajustar.
 - Vea el orden de selección abajo a la izquierda.
 - 2) Para ajustar los ítems que quedan, presione **▲▼** para seleccionar y presione **▶** para ajustar los tiempos de **START/ STOP**, **CANAL**, o entrada de **LÍNEA** (pág. 36), y velocidad de la cinta (**SP**, **LP**, **SLP**).



Ejemplo

 

 - 4 Presione **▲▼** para seleccionar un número sin usar para ingresar mas programas y presione **▶** para ajustar. Luego repita el paso 3. Presione nuevamente **PROG/VCR+** para salir.
- 5 Presione **POWER off** para ajustar el temporizador. (Se ilumina "TIMER" en el panel delantero)



Index

Accessories	4	Play Button	6
AC Power Plug	7	Power Button	6
Add or Delete a Channel	13	Power Indicator	7
Audio Input Connector(L/R)	7	Program End Search	30
Audio Output Connector(L/R)	7	Record	15
Auto Operation Functions	31	Record Button	6
Auto Shut-Off	35	Remote Control Buttons	6
Auto VCR Plus+ System		Remote Sensor	6
Channel Setup	18,19	Remote Warning ON/OFF	35
Before Requesting Service	39	Repeat Play	31
Blank Tape/ No Video Signal		Review, Replace or Clear	
Indication	38	Program Contents	17
Cable Box Setup	10	Rewind/Search Button	6
Cassete Compartment	6	Select Audio Mode	25
Channel Caption	32,33	Service Center List	40
Channel Up/Down Tracking/		Spanish Quick	
V-Lock Button	6	Use Guide	42,43
Cleaning the VCR	37	Specifications	37
Clock/Status/Channel/Speed		Stereo/SAP/Mono Broadcast	25
Display	7	Stop/Eject Button	6
Commercial Advance	26,27,28	Tape Position and Tape Status	35
Connections	8,10,24	Time Stamp	34
Copying Your Tapes	36	Timer Indicator	7
DST (Daylight Saving Time)	13	Timer Recording	16,17
Fast Forward/Search Button	6	VCR Indicator	7
Features for a Quality		VCR Lock	35
Picture	37	VCR Plus+ System	
Function & Channel Display	38	Programming	21
Head Cleaning	37	VCR Status & Clock Display	38
Hi-Fi Indicator	7	VCR/TV Selector	6
Index Search	30	VHF/UHF Antenna	
Initial Setup	8,9,10,11	Input Terminal	7
Limited Warranty	41	VHF/UHF Antenna	
Manual VCR Plus+ System		Output Terminal	7
Channel Setup	20	Video Input Connector(L/R)	7
Movie Advance	29	Video Output Connector(L/R)	7
MTS Broadcast	25	Warning and Instruction	
Multi-Brand Control	22,23	Displays	38
On-Screen Display	38	Weak Signal Display ON/OFF	35
Playback	14	Zero Search	31

