


Stereo Radio Cassette Player  
Operating Instructions  
Model No. RQ-SX67V

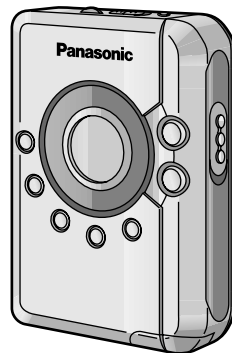

Before connecting, operating or adjusting this product, please read these instructions completely. Please keep this manual for future reference.

P

Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America  
One Panasonic Way Secaucus, New Jersey 07094  
<http://www.panasonic.com>

En

Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc. ("PSC")  
Ave. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park, Carolina, Puerto Rico 00985  
© 2001 Matsushita Electric Industrial Co., Ltd.  
Printed in Taiwan

RQTT0417-P  
F0101KY0

**Supplied Accessories**

- ① Stereo headphones (RFEV705P-KY) .....1
- ② Dry cell batteries ..... 4

Use numbers indicated in parentheses when asking for replacement parts.  
•To order accessories contact 1-800-332-5368 or web site (<http://www.panasonic.com>).

**CAUTION:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# 1

**Prepare power supply.**  
You can operate the unit with one dry cell battery (included).

**1. Open the battery lid.**

**2. Insert the battery.**  
One R03/LR03, AAA, UM-4 battery (included)

**3. Close the battery lid.**

# 2

**Connect the stereo headphones.**

Plug in firmly.

Plug type:  
3.5mm (1/8 ") stereo

# 3

**WHEN THE BATTERY IS WEAK**

Battery indicator

**BOOSTING THE BASS**

While playing a tape or radio

(NORMAL) ↔ "S-XBS"

•If distortion occurs, turn down the volume.

**RADIO**

① Release hold.

• S-XBS  
• HOLD

RELEASE

HOLD

② Press [RADIO ON, BAND] to select the band.

RADIO ON

5 BAND

"FM1" → "FM2"

"AM"

**TAPE**

① Insert a tape.

Forward side

Reverse side

② Release hold.

• S-XBS  
• HOLD

RELEASE

HOLD

③ Press [TAPE/◀▶].  
(Play starts.)

TAPE / ◀▶

1

PLAY

Playback side

**Adjust the volume.**

VOL

③ Select the station.


(DOWN) - / REW

3

(UP) + / FF

4

## Other play methods

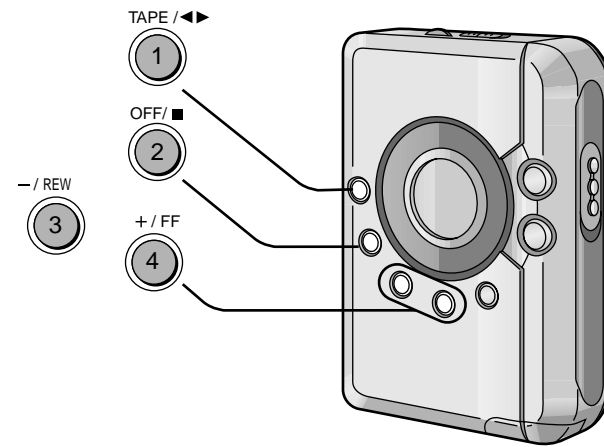

## TAPE PLAYBACK

You can use normal position type tapes only.

Function	Operation
Stop	During playback  Press.
Reverse tape direction	During playback  Press.
Fast forward (FF) or rewind (REW)*	Press.

\*To switch to playback during FF, REW: Press [TAPE/◀▶].

## RADIO RECEPTION

Function	Operation
Off	During reception  Press.

## Troubleshooting Guide

### BEFORE CALLING

Before requesting service, make the below checks. If you are in doubt about some of the checkpoints, or if the remedies indicated in the chart do not solve the problem, contact the Panasonic Customer Call Center at 1-800-211-7262, or e-mail [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com), or web site (<http://www.panasonic.com>).

PROBLEM	CHECKPOINT
Radio operates but tape doesn't.	Is the battery worn?
No operations.	<ul style="list-style-type: none"> <li>Is the unit in the hold state?</li> <li>Has the battery been installed with its polarities (+, -) reversed?</li> </ul>
<ul style="list-style-type: none"> <li>No radio reception.</li> <li>The FM frequency range is different.</li> </ul>	Has the frequency step been set for your area?
<ul style="list-style-type: none"> <li>No sounds.</li> <li>A gritty noise is heard.</li> </ul>	<ul style="list-style-type: none"> <li>Is the headphone plug firmly connected to the <math>\phi</math> jack?</li> <li>Is the plug dirty? (Wipe away the dirt from the plug.)</li> </ul>
Cannot hear music - too noisy.	Separate the unit from mobile phones.

 
## HOLD




### Hold function

This function prevents the unit from operating in error. Use this function to prevent the following situations:  
 A: While not in use, playback or radio reception starts inadvertently and the battery runs out.  
 B: Playback or radio reception is interrupted while the unit is in use.


#### Hold

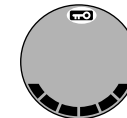

#### Release

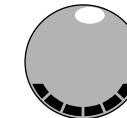 

If a button is pressed during hold state

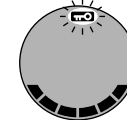

## TAPE



### When the cassette cover is closed

Tapeslack is wound automatically and playback will be ready to start from the forward side.

### Auto-reverse

Unless manually stopped, the unit plays 3 sides of the tape and then automatically stops.


## RADIO



### To obtain better reception


#### AM:

Try various directions to obtain optimum reception.

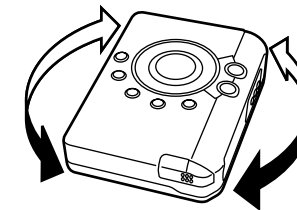

#### FM:

As the cord of the headphones acts as the FM antenna, extend it as far as possible rather than leaving it coiled.

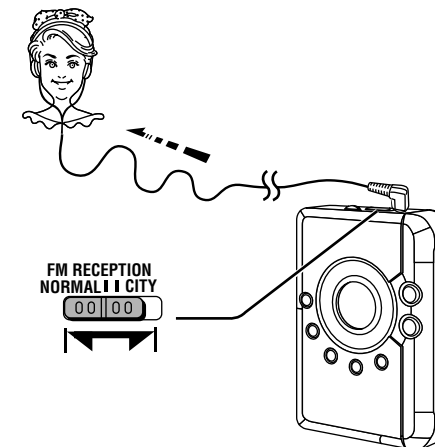


### How to receive an FM broadcast clearly

Set [FM RECEPTION] to [NORMAL].

When FM reception is impaired or there is interference from a powerful station, set it to [CITY].

## RADIO

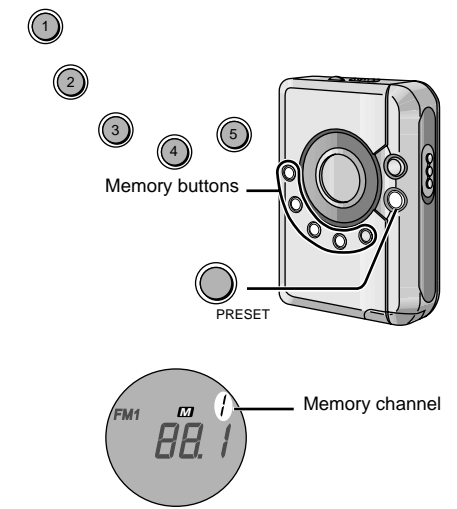

### Preset tuning

Frequencies of up to 30 radio stations (10 each for AM, FM1 and FM2) can be stored in the memory.

### Memory presetting

Preparation: ●Release hold.

- Connect the headphones (the cord of the headphones acts as an FM antenna) when storing frequencies of FM stations in the memory.

#### Channel 1 - 5

- Tune in a station to be stored.
- Press [PRESET].  
"M" starts flashing.
- Press and hold one of the memory buttons ([1] [2] [3] [4] [5]) for 2 seconds while "M" is flashing.  
3 beeps can be heard.

#### Channel 6 - 10

- Tune in a station to be stored.
- Press [PRESET] twice.  
"M" and "5" start flashing.
- Press and hold one of the memory buttons for 2 seconds while "M" and "5" are flashing.  
3 beeps can be heard.

### To recall a preset station

#### Channel 1 - 5

- Press [PRESET].
- Press one of the memory buttons while "M" is flashing.

#### Channel 6 - 10

- Press [PRESET] twice.
- Press one of the memory buttons while "M" and "5" are flashing.

### Note

Release the memory button within 2 seconds.

### When using overseas

The allocation settings according to the area are needed.

Every time the following procedure is performed, the allocation setting changes as follows:

FM 0.2 MHz, AM 10 kHz ← (original setting)

FM 0.1 MHz, AM 10 kHz

FM 0.05 MHz, AM 9 kHz

### How to adjust the allocation settings

#### While playing the radio

Press and hold [PRESET] for about 3 seconds.

- The changed allocation settings (FM and then AM) are displayed.

### Note

Changing allocation settings erases the stations stored in memory.

