



Panasonic

Operating Instructions IC Recorder

Model No. **RR-US395**

Dear customer
Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully.
Before connecting, operating or adjusting this product, please read the instructions completely. Please keep this manual for future reference.

**Panasonic Consumer Electronics Company,
Division of Panasonic Corporation of North America**
One Panasonic Way Secaucus, New Jersey 07094
<http://www.panasonic.com>
Panasonic Puerto Rico, Inc.
Ave. 65 de la Infantería, Km. 9.5 San Gabriel Industrial Park, Carolina, Puerto Rico 00985
Panasonic Canada Inc.
5770 Ambler Drive, Mississauga, Ontario L4W 2T3
www.panasonic.ca

© 2005 Matsushita Electric Industrial Co., Ltd.
Printed in Japan



Before use

Hint 1
Release hold before operation

● There is no power button.

Hint 2
Recorded contents are stored in folders

● A maximum of 99 files can be stored in each folder.

Hint 3
Use HQ to record with high sound quality and SP for long recordings

Recording mode and recording time total of all folders
Long recording time

Hint 4
Change the microphone sensitivity according to the distance

Menu display

Use [] to change the menu and [] to enter

Setting the time Timer play Timer recording Operation beep

※1 Not displayed during dictation recording.
※2 Displayed only when there is a recorded file.
※3 Displayed only when the time is set.

THE FOLLOWING APPLIES ONLY IN THE U.S.A.

FCC Note:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:
Panasonic Corporation of North America
One Panasonic Way Secaucus, NJ 07094
Telephone No.: 1-800-211-7262

This statement is applied to only Canada
This Class B digital apparatus complies with Canadian ICES-003.

Recording

- Select meeting or dictation recording
- Select the folder
- Select the recording mode
- Select the microphone sensitivity
- Recording (Monaural recording)

When dictation recording, the following settings are automatically set.

Other recording methods

Preventing unnecessary recording
Recording automatically pauses when there is no sound.

- Enter the menu mode
- Select "OFF"
- Select "On"

■ To turn the function off → select "OFF" in step 3.
! Turn the function off when recording important files.
! The first 3 seconds will always be recorded.

■ **Checking the remaining recording time available**
Press again to return to the elapsed recording time display.

■ **Recording through an external microphone (not included)**
Plug type: 3.5 mm (1/8 in.) monaural (The built-in microphone switches off.)
Use a plug-in power compatible microphone monaural.

Preparation 1 Inserting batteries

Supplied accessories

- 1 USB cable
- 1 CD-ROM (Voice Editing Ver.1.0 Premium Edition)

For the U.S.A.

- 1 USB cable
- 1 CD-ROM (Voice Editing Ver.1.0 Premium Edition)

To order accessories, refer to "Accessory Purchases" on page 7.

For Canada

- 1 USB cable
- 2 CD-ROM (Voice Editing Ver.1.0 Premium Edition)

To order accessories, call the dealer from whom you have made your purchase.

AAA, LR03 battery (not included)

● If rechargeable batteries are to be used, rechargeable batteries manufactured by Panasonic are recommended. (Rechargeable batteries may not last as long as regular batteries.)

The battery indicator (displayed during operation)

Full Empty

● Replace the batteries within 30 seconds to preserve the settings. Recordings remain intact.

Replace the batteries

Playing/Erasing

- Select the folder
- Select file or folder
- Play/Erase

■ **Basic operations during play**

- Press and hold to turn one file repeat play On/Off.
- You cannot use repeat when setting continuous play.
- Press and hold to search.
- Press to return to the beginning of the file. (Press twice to return to the previous file.)
- Press to go to the beginning of the next file.
- Press and hold to search.
- Press to return to normal play.
- Press again to return to normal play.

■ **Listen to the first 5 seconds of each file (Intro scan)**

- Select the folder
- Press and hold []

Repeat play settings are automatically canceled.

■ **Listening with the earphones (not included)**
Plug type: 3.5 mm (1/8 in.) monaural

Other play methods

- Enter the menu mode
- Select "SPEEd"
- Select the speed

Press and hold [] → [] → [] → []

■ To return to normal play
While stopped, press and hold (more than 3 seconds) []

Plays the files in the folder continuously.

- Enter the menu mode
- Select "▶, ⏪"
- Select "On"

Press and hold [] → [] → [] → []

! Repeat play settings are automatically canceled.
■ To turn the function off → select "OFF" in step 3.

■ **Displaying the remaining play time**
Press again to return to the elapsed play time display.

■ **Listening with the earphones (not included)**
Plug type: 3.5 mm (1/8 in.) monaural

Preparation 2 Setting the time

Flashes until the time is set.

- Enter the menu mode
- Select "yEAR"
- Set the time

When the year is flashing (e.g. 2006), begin from step 3 below.
While setting the time, the clock will return to standby if there is no operation after 10 seconds have elapsed. If this happens set again from the start.

Press and hold [] → [] → [] → []

E.g.: Microphone sensitivity

Year Use [] to select

Month Use [] to select

Day Use [] to select

Time display (12/24H) Use [] to select

Time Use [] to select

The clock has a monthly accuracy of +/- 60 seconds at room temperature.
When replacing the batteries, the clock stops and restarts when you reinsert them and close the battery cover.

Organizing

- Play a file
- Enter the move mode
- Select the destination folder
- Move

Press and hold [] → Use [] to select → [] (ENTER)

Destination folder Number of files in destination folder

! You cannot move a file from A-D folder to the dictation folder.

- Select the folder
- Select the file
- Enter the menu mode
- Select "LOCK"
- Lock

Press and hold [] → Use [] to select → [] (ENTER) → [] (ENTER)

■ To unlock → Do the above steps and select the file to unlock in step 2.

Saving (dubbing)

Recording to a cassette tape recorder

Select the file to dub and play → Recording

Audio cable (not included)
Monaural mini plug Stereo mini plug Stereo MIC

Audio cable (not included)
Monaural mini plug Monaural mini plug Monaural MIC

Recording from a cassette tape recorder

Recording → Select the track to dub and play

Audio cable (not included)
Monaural mini plug Stereo mini plug Headphone jack

Audio cable (not included)
Monaural mini plug Monaural mini plug

● Read along with the operating instructions of equipment you are connecting.
● The recorded sound quality may differ from the original recording.
● Adjust the recording volume on the source to the desired level.

