
# Speaker System SB-HT250/SB-HT210

# **Operating Instructions**

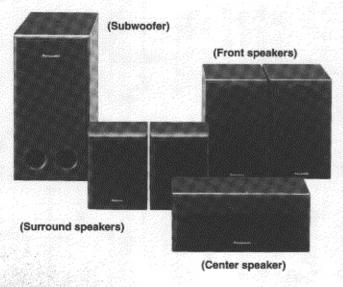

The photographs show the system of SB-HT210

P

Before connecting or operating these products, please read these instructions completely. Please save this manual.



# Dear Customer


Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully.

Table of contents	
Supplied accessories	2
Precautions	
Notes	
Positioning the speakers	4
Connections	5
Operation (for Subwoofer) SB-HT250 only	
Technical specifications	

# Supplied accessories



Please check and identify the supplied accessories.

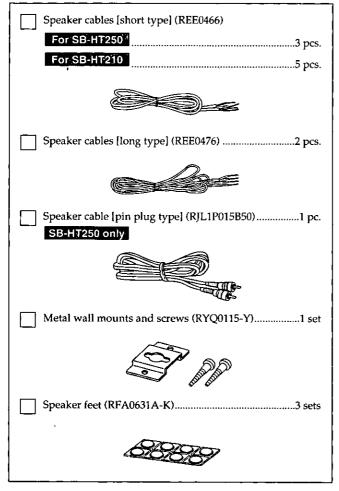

Use numbers indicated in parentheses when asking for replacement parts.

To order accessories call PASC Accessory Dept. 1-800-332-5368.

The model number and serial number of this product can be found on either the back or the bottom of the unit. Please note them in the space provided below and keep for future reference.

MODEL NUMBER		SERIAL NUMBER	
Front speaker	: SB-AV210		
Center speaker	: SB-C210		
Surround speaker	: SB-S210		
Subwoofer			
For SB-HT250	: SB-AS250		
For SB-HT210	:SB-W210		

#### User memo:

DATE OF PURCHASE _ DEALER NAME DEALER ADDRESS	
TELEPHONE NUMBER	

#### Only for SB-AS250

## WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPLIANCE TO RAIN, SPLASH-ING, DRIPPING OR MOISTURE.

# Only for SB-AS250





The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. Before using this unit please read these operating instructions carefully. Take special care to follow the warnings indicated on the unit itself as well as the safety suggestions listed below.

Afterwards keep them handy for future reference.

# Solary

#### Only for SB-AS250

- Power Source The unit should be connected to power supply only of the type described in the operating instructions or as marked on the unit.
- 2. **Polarization --** If the unit is equipped with a polarized AC power plug (a plug having one blade wider than the other), that plug will fit into the AC outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 3. Power Cord Protection -- AC power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Never take hold of the plug or cord if your hand is wet, and always grasp the plug body when connecting or disconnecting it.
- **4.** Nonuse Periods When the unit is not used, turn the power off. When left unused for a long period of time, the unit should be unplugged from the household AC outlet.

# ගැලලාව

#### Environment

- Water and Moisture -- Do not use this unit near water-for example, near a bathtub, washbowl, swimming pool, or the like. Damp basements should also be avoided.
- Heat -- The unit should be situated away from heat sources such as radiators and the like. It also should not be placed in temperatures less than 5°C (41°F) or greater than 35°C (95°F).

#### Placement

- Ventilation The unit should be situated so that its location or position does not interfere with its proper ventilation. Allow 10 cm (4") clearance from the rear of the unit.
- 2. Foreign Material -- Care should be taken so that objects do not fall into and liquids are not spilled into the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration, or shock.
- Magnetism -- The unit should be situated away from equipment or devices that generate strong magnetic fields.
- Stacking Do not place heavy objects, other than system components, on top of the unit.
- 5. Surface -- Place the unit on a flat, level surface.
- 6. Carts and Stands The unit should be used only with a cart or stand that is recommended by the manufacturer. The unit and cart combination should be moved with care. Ouick stops, excessive force and uneven sur-

Quick stops, excessive force, and uneven surfaces may cause the unit and cart combination to overturn.



Wall or Ceiling Mounting - The unit should not be mounted to a wall or ceiling, unless specified in this operating instructions.

## Maintenance

Clean the cabinet, panel and controls with a soft cloth lightly moistened with mild detergent solution.

Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

## Service

- **1. Damage Requiring Service** The unit should be serviced by qualified service personnel when:
  - (a) The AC power supply cord or the plug has been damaged; or
  - (b) Objects have fallen or liquid has been spilled into the unit; or
  - (c) The unit has been exposed to rain; or
  - (d) The unit does not appear to operate normally or exhibits a marked change in performance; or
  - (e) The unit has been dropped, or the enclosure damaged.
- **2. Servicing** -- The user should not attempt to service the unit beyond that described in the operating instructions. All other servicing should be referred to authorized service personnel. (Only for U.S.A.)

Call 1-800-545-2672 for the address of an authorized factory servicenter.

Notes

# Speaker impedance and allowed input

	Impedance	Allowed input
SB-AV210	8 Ω	70 W (DIN)
SB-C210	8Ω	70 W (DIN)
SB-S210	4Ω	55 W (DIN)
SB-W210 SB-HT210 only	8Ω	70 W (DIN)

## Caution

The only receivers or amplifiers you should connect to these speakers are those whose rated output does not exceed the above figures. Using a receiver or amplifier stronger than that indicated above, you risk blowing either the amp or your speakers, moreover possible fire.

If equipment is damaged in any way or unexpected trouble occurs during playback, unplug the system from its outlet and call a serviceman for help.

# Notes with report to excessive thread


Be sure to reduce the volume level from the receiver when the signal input exceeds the rated allowable input in order to avoid damage to circuitry, or malfunctions.

# Ciber notes

- 1. Avoid locations such as described below.
  - Where exposed to direct sunlight
  - Near heating appliances or other sources of heat
  - Where the humidity is high
- 2. Do not touch the diaphragms. This may cause distortion.


# Positioning the speakers

To diagram below shows the basic positioning of each speaker.

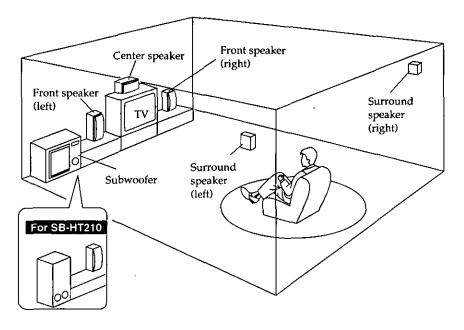

# Alicability greater (cel)

To prevent damage to the speakers, lay them on top of a soft cloth before attaching the speaker feet.

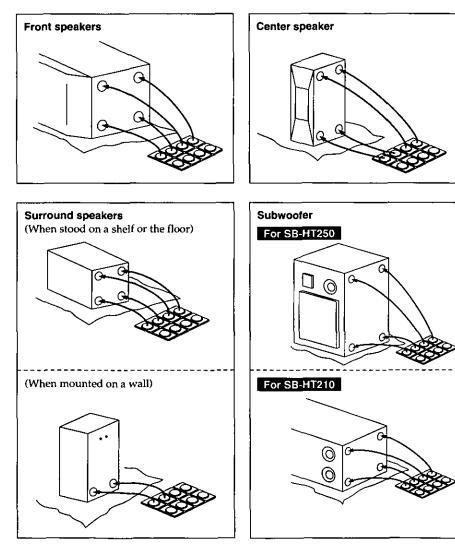

- The subwoofer can be placed in any position as long as it is at a reasonable distance from the TV.
- Do not place any object on top of the speakers.

The front speakers, center speaker and subwoofer are made so they can be used in close proximity of a TV, but irregular coloring may result due to how the system is placed. If such distortion occurs, turn off the TV for sometime between 15 and 30 minutes. The demagnetizing function of the TV will eliminate the distortion. If the irregular coloring still visible, then move the speakers further away from the TV.

Please note that if there is a magnetic. object near the TV, irregular coloring may result due to the interaction between the TV and the speaker.

# Well Instellation

## Only for surround speakers


The methods of installation for each speaker are the same.

# Caution


The wall has to be strong enough to hold a speaker, so it is recommended that you consult a constructor.

Please note that if the wall is not strong enough, it may result in a dangerous accident.

## How to install the metal wall mounts

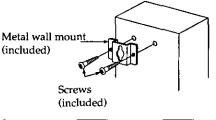

# How to install the speakers on the wall

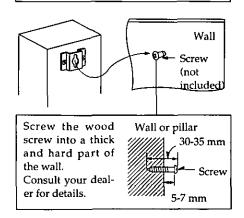


# **Connections**

ⓓ

2


- Before making the connections, switch OFF the power to the receiver.
- Be sure to connect only positive (+) wires to positive (+) terminals, and negative (-) wires to negative (-) terminals.

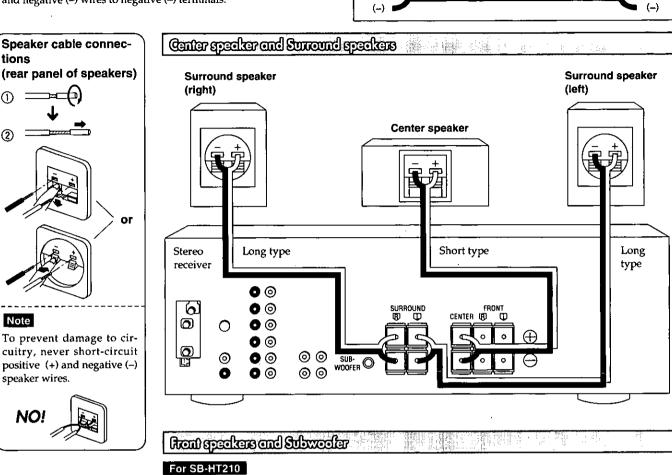

Speaker cable (included)

(+)


(+)

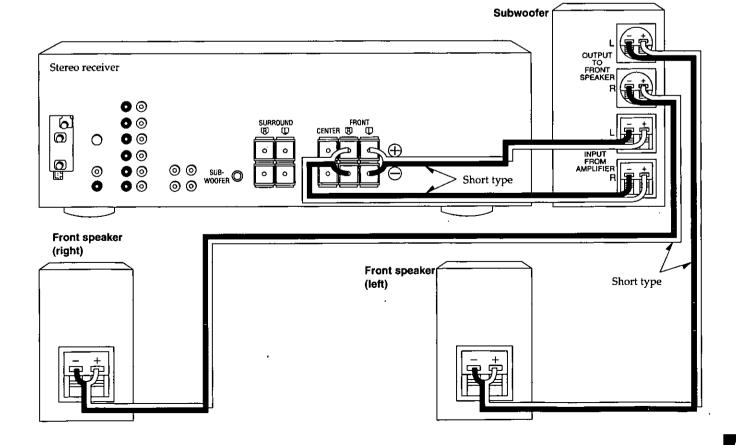


# Front speakers and Subwoofer


# For SB-HT250

Speaker cable [pin plug type] (included)

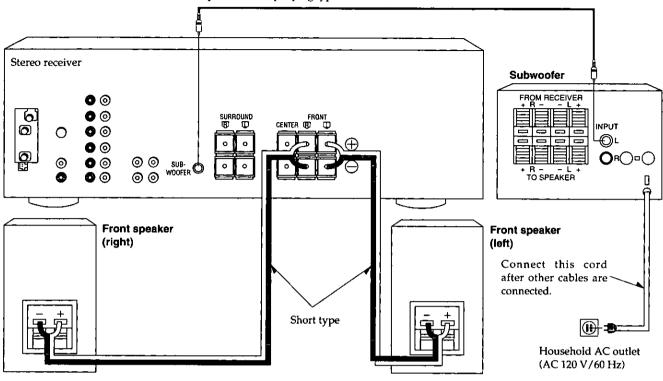

#### To connect the front speakers to the subwoofer

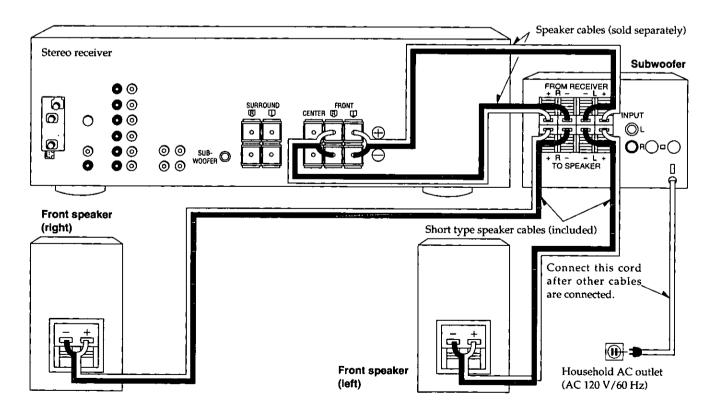

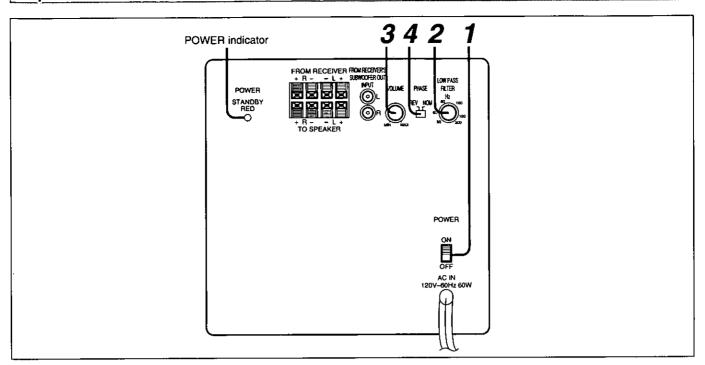

Set the low pass filter, volume and phase to suit characteristics of the front speaker and subwoofer combination.

- Set POWER to the "ON" position. (The POWER indicator will light up green.)
- 2 Set LOW PASS FILTER to a suitable frequency, referring to the "Frequency response by LOW PASS FILTER setting" on the right.

[Recommended position for this system : 150 Hz]

**3** Set VOLUME to a suitable level, referring to the "Frequency response by VOLUME setting" on the right.

[Recommended position for this system :  $\bigcirc$  (Mark is to 10:00.)]

4 Listen to some music and set PHASE to "NOM" or "REV", whichever makes playback normal.

#### Note


If subwoofer and speaker phase are the inverse of one another, they will tend to rub each other out. Playback will not be normal and sounds will seem muffled.

#### About the POWER indicator


This unit will automatically go on standby (indicator turns red), if no signal is sent within (approximately) 10 minutes from the moment you turn ON the power.

Once the signal is received, this unit starts working normally (indicator turns green).

#### Frequency response by LOW PASS FILTER setting

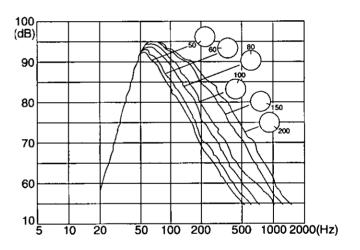

#### Frequency response by VOLUME setting

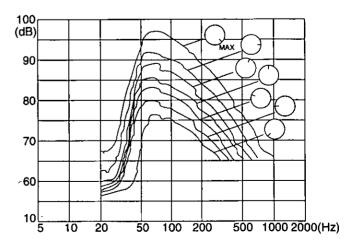

#### Front speakers (SB-AV210)

#### Туре

Speaker(s) Woofer: **Tweeter:** Impedance Input power Sound pressure level Crossover frequency Frequency response

#### GENERAL

Dimensions (W×H×D)

Weight

#### Center speaker (SB-C210)

#### Туре

#### Speaker(s)

Woofer: Tweeter: Impedance Input power Sound pressure level **Crossover frequency Frequency response** 

#### 📕 GENERAL

Dimensions (W×H×D)

#### Weight

#### Surround speakers (SB-S210)

#### Туре

Speaker Full range: Impedance Input power Sound pressure level Frequency response

#### GENERAL

Dimensions (W×H×D)

Weight

Subwoofer (SB-AS250) SB-HT250 only

#### SPEAKER SECTION

Type

Speaker Woofer: **Frequency response**  2 way 3 speakers system Closed type

2 way 3 speakers system

8 cm (3-5/32") cone type×2

6 cm (2-3/8") cone type×1

140 W (Music), 70W (DIN)

100 Hz-22 kHz (~16 dB)

125 Hz-20 kHz (~10 dB)

(7-3/16"×11-7/16"×8-1/4")

182×290×210 mm

2.8 kg (6.17 lb.)

86 dB/W (1.0 m)

Closed type

8Ω

8 kHz

8 cm (3-5/32") cone type×2 6 cm (2-3/8") cone type×1 8Ω 140 W (Music), 70 W (DIN) 86 dB/W (1.0 m) 8 kHz 110 Hz-22 kHz (-16 dB) 140 Hz-20 kHz (-10 dB)

> 1 way 1 speaker system Bass-reflex type

4Ω 110 W (Music), 55 W (DIN) 83 dB/W (1.0 m) 130 Hz-20 kHz (-16 dB)

1.2 kg (2.7 lb.)

1 way 1 speaker system

17 cm (6-11/16") cone type×1

Bass-reflex type

32-350 Hz (-16 dB) 38-250 Hz (-10 dB)

AMPLIFIER SECTION Continuous power output

20 Hz-200 Hz (THD 1 %) Phase switching Input sensitivity/impedance RCA-type pin-plug jack Push-type terminals

50 W (4 Ω) Normal/Reverse

> 54 mV/10 kΩ  $1.1 V/4.7 k\Omega$

AC 120 V, 60 Hz

8.5 kg (18.7 lb.)

384×284×294 mm

60 W

#### GENERAL

Power supply Power consumption Dimensions ( $W \times H \times D$ )

#### Weight

## Subwoofer (SB-W210) SB-HT210 only

Type

Speakers Woofer: Impedance Input power Sound pressure level Frequency response

Kelton type 17 cm (6-11/16") cone type×2 8Ω 140 W (Music), 70 W (DIN) 86 dB/W (1.0 m) 38-210 Hz (-16 dB) 45-180 Hz (-10 dB)

(8-5/8"×16-9/16"×13-9/16")

220×421×344 mm

7.6 kg (16.75 lb.)

1 way 2 speakers system

(15-1/8"×11-3/16"×11-9/16")

#### GENERAL

Dimensions ( $W \times H \times D$ )

#### Weight

#### Note:

Specifications are subject to change without notice. Weight and dimensions are approximate.

#### Protection circuitry Only for SB-AS250

The protection circuitry may have operated if either of the following conditions is noticed:

No sound is heard when the power is turned on.

Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of this unit are used.

If this occurs, follow the procedure outlined below:

- 1. Turn off the power.
- Determine the cause of the problem and correct it. 2.
- 3. Turn on the power once again.

Note:

When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

# Product service

Do not attempt to remove the cover(s) or repair the unit yourself. Refer servicing to qualified personnel only.

#### Product information

For product service, product information or assistance in product operation, refer to the servicenter directory. (In U.S.A. consult PASC Authorized Servicenters for detailed instructions or call 1-800-545-2672 for the address of an authorized factory servicenter.)

**Panasonic Consumer Electronics** Company, Division of Matsushita **Electric Corporation of America** One Panasonic Way Secaucus, New Jersey 07094

Panasonic Sales Company, **Division of Matsushita Electric of** Puerto Rico, Inc. ("PSC") Ave. 65 de Infantería. Km. 9.5 San Gabriel Industrial Park, Carolina, Puerto Rico 00985

RQT4097-P H0397G0

330×140×130 mm (13"×5-1/2"×5-1/8") 1.8 kg (3.97 lb.)

8 cm (3-5/32") cone type×1

150 Hz-18kHz (-10 dB)

160×205×100 mm (6-5/16"×8-1/16"×3-15/16")