

Concerning Compact Discs



 
 
Only compact discs bearing this mark can be used with this unit.

However, continued use of irregular shaped CDs can damage the unit.



How to remove a disc from its case

How to store the disc in its case



How to hold a disc

 


If the surface is dirty

Wipe it with a damp cloth and then wipe dry.

Wipe from the center toward the outer circumference.

Play surface
(shiny surface)



Handling precautions

- If you are taking the CD from a cold to a warm environment, moisture may form on the CD. Wipe this off with a soft, dry, lint-free cloth before using the CD.
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not attach labels or stickers to CDs. (Do not use CDs with exposed adhesive from tape or left over peeled off stickers.)

- Do not use scratch-proof protectors etc.

Storage precautions

Be sure to store CDs in their cases to protect them from dust, scratches, and warping.

Do not place or store CDs in the following places

- Locations exposed to direct sunlight
- Humid or dusty locations
- Locations directly exposed to a heat vent or heating appliance
- In the glove compartment or on the rear deck of an automobile

Portable CD player

 
Panasonic

Dear Customer

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully.

Operating Instructions

Model No. SL-MP35/
SL-MP36C

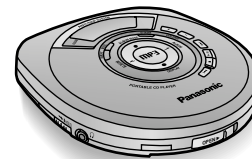

The model number and serial number of this product can be found on either the back or the bottom of the unit.

Please note them in the space provided below and keep for future reference.

MODEL NUMBER _____
SERIAL NUMBER _____

SL-MP36C ONLY

To install this product in a car, please refer to the "Installation Instructions".

These models can play MP3 files.
See pages 4 to 6 for details.



Supplied Accessories

Check the packing carton for these accessories.

| | | | |
|-----------------------------|---|---------------------------------------|---|
| For U.S.A. | | SL-MP36C ONLY | |
| Stereo headphones | 1 | Car adaptor | 1 |
| (L0BAD0000157) | | (SH-CDC12PEY) | |
| For Canada | | Car stereo cassette adaptor | 1 |
| Stereo earphones | 1 | (SHCDM10B1PYK) | |
| (L0BAB0000172) | | | |

Use numbers indicated in parentheses when asking for replacement parts.
(Only for U.S.A.) To order accessories contact 1-800-332-5368 or web site
(<http://www.panasonic.com>).

Before connecting, operating or adjusting this product, please read these instructions completely. Please keep this manual for future reference.



Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus, New Jersey 07094 <http://www.panasonic.com>
Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc. ("PSC")
Ave. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park, Carolina, Puerto Rico 00985
Panasonic Canada Inc.
5770 Ambler Drive, Mississauga, Ontario L4W 2T3 www.panasonic.ca
© 2002 Matsushita Electric Industrial Co., Ltd.



RQT6422-P
F0202YH1032
Printed in Japan

IMPORTANT SAFETY INSTRUCTIONS

Read these operating instructions carefully before using the unit. Follow the safety instructions on the unit and the safety precautions listed below. Keep these operating instructions handy for future reference.

Safety

- 1. Power source**—Connect the unit to a power source of the type described in these instructions or as marked on the unit.
- 2. Polarization**—The unit is equipped with a polarized power plug where one blade is wider than the other. This safety feature ensures that the plug fits into your household AC outlet only one way. If the plug doesn't fit one way, try reversing it. If the plug still doesn't fit, contact an electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the plug.
- 3. Power cord protection**—Route the AC power supply cord so that it will not be walked on or pinched by items placed on or against it. Never take hold of the plug or cord with wet hands. Always grasp the plug body firmly when connecting and disconnecting it.
- 4. Overloading**—When connecting the AC power supply cord, be careful not to overload the household AC outlet, extension cord, or outlet from any other device as this can result in fire or electric shock.
- 5. Nonuse periods**—Turn the unit off when it is not in use. Unplug the unit from the household AC outlet if it is not to be used for a long time. Unplug the unit during lightning storms. Leaving the unit connected to a household AC outlet for extended periods can cause battery fluid leakage.
- 6. Attachments and accessories**—Use only the attachments and accessories recommended in these operating instructions.

Installation

Placement

- 1. Foreign material**—Ensure objects and liquids do not get into the unit. Avoid exposing the unit to excessive smoke, dust, mechanical vibration, and shock.
- 2. Magnetism**—Situate the unit away from equipment and devices that generate strong magnetic fields.
- 3. Stacking**—Do not place anything on top of this unit.
- 4. Wall and ceiling mounting**—Do not mount the unit on walls or ceilings unless specified in the instructions.

Environment

- 1. Water and moisture**—Do not use the unit near water, such as near a bathtub or swimming pool. Avoid damp basements.
- 2. Heat**—Situate the unit away from heat sources, such as radiators. Do not leave it in an automobile exposed to direct sunlight with the doors and windows closed as this may deform the cabinet. Do not situate where temperatures fall below 5 °C (41 °F) or rise above 35 °C (95 °F).

Maintenance

(See page 8 for details.)
Unplug the unit from the household AC outlet before cleaning.
Clean with a damp cloth.
Do not use abrasive pads, scouring powders, or solvents.

Service

- 1. Damage requiring service**—The unit should be serviced by qualified service personnel if:
 - (a) The AC power supply cord or AC adaptor has been damaged; or
 - (b) Objects or liquids have gotten into the unit; or
 - (c) The unit has been exposed to rain; or
 - (d) The unit does not operate normally or exhibits a marked change in performance; or
 - (e) The unit has been dropped or the cabinet damaged.
- 2. Servicing**—Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized servicing personnel.
- 3. Replacement parts**—When parts need replacing ensure the servicer uses parts specified by the manufacturer or parts that have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electric shock, or other hazards.
- 4. Safety check**—After repairs or service, ask the servicer to perform safety checks to confirm that the unit is in proper working condition.



This manual was printed with soy based ink.

Power Supply Preparations

Refer to the specifications (page 8) for information on operating times when using rechargeable batteries or dry cell batteries.

Using the AC adaptor (not included)

Use only the recommended AC adaptor. Using other AC adaptors can damage the unit.

 
For U.S.A

To order the optional AC adaptor **RP-AC46** contact 1-800-332-5368 or web site (<http://www.panasonic.com>).

For Canada

Be sure to obtain the optional AC adaptor **RP-AC46**. It is available through your Panasonic dealer.

Connect the AC adaptor.

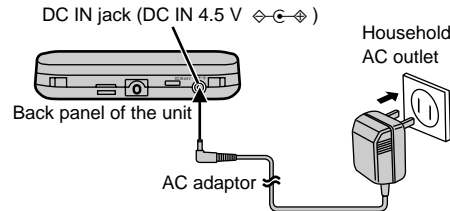

Conserving power

To save power when the unit is not to be used for a long time, unplug the AC adaptor from the household AC outlet.

Note

Turn the unit off before connecting or disconnecting the AC adaptor.

Using rechargeable batteries (not included)

 
Obtain the optional rechargeable batteries.

Make sure to recharge the batteries before using them. The unit cannot be used to charge rechargeable batteries other than those specially designed for it.

Optional batteries: P-3GAVA/2B

Recharging procedure

1 Insert the special rechargeable batteries into the unit.

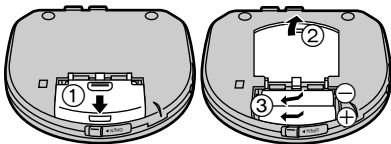

2 Connect the AC adaptor.

(Refer to "Using the AC adaptor" for connection instructions.) Recharging starts and the "CHARGE" charging indicator flashes on the display. When the rechargeable batteries fully recharge the charging indicator disappears.

 
3 When charging is complete, unplug the AC adaptor from the household AC outlet and DC IN jack.

- Never mix dry cell and rechargeable batteries.
- Turn the unit off before replacing the rechargeable batteries.


Note

- Rechargeable batteries have a service life of approximately 300 charge-discharge cycles. The batteries have reached the end of their operational life if they last for a noticeably shorter time after recharging, or if they cannot be recharged at all. Replace the batteries.
- Recharging may only be performed when the unit is off.
- The AC adaptor and rechargeable batteries may become warm while recharging is in progress. This is not a malfunction.
- Leaving the AC adaptor connected can cause the batteries to go flat. After recharging the batteries and disconnecting the AC adaptor from the household AC outlet, ensure you disconnect the AC adaptor from the unit's [DC IN 4.5 V ⚡] terminal.

If the battery lid comes loose
Slide the lid back into place horizontally.

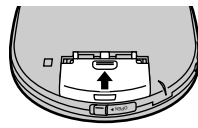

 Removing batteries
Push up on the battery in the direction indicated by the arrow. Then lift it out.

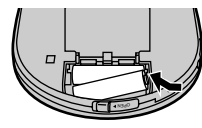


Using dry cell batteries (not included)

After disconnecting the AC adaptor, insert two "LR6, AA, UM-3" alkaline batteries.

The procedure for inserting and removing dry cell batteries is identical to that for rechargeable batteries.

 Battery indicator



This indicator flashes when the batteries are almost out of power. Power is cut off completely a short while later.

Rechargeable batteries: Recharge batteries.

Dry cell batteries: Replace batteries with new ones.

Note

- The length of time the unit will continue to operate between when the battery indicator starts flashing and when the power is cut off differs depending on the type of batteries used.
- The battery indicator may not flash if rechargeable batteries other than those designated by Panasonic are used.

Using the car adaptor

SL-MP36C includes a car adaptor. Refer to the separate "Installation Instructions".

For SL-MP35, obtain the car adaptor (SH-CDC9) available as an optional accessory.

The car adaptor can be used to recharge the unit's batteries while in the car.

 
Use only the recommended car adaptor. Use of other car adaptors can damage the unit.

CAUTION:

Use only car adaptor, Model: SH-CDC9 manufactured by Matsushita Electric Industrial Co., Ltd.

If the unit malfunctions or freezes during use, disconnect the power source (the AC adaptor or batteries). Re-connect the power source and continue operation.

HOLD Function

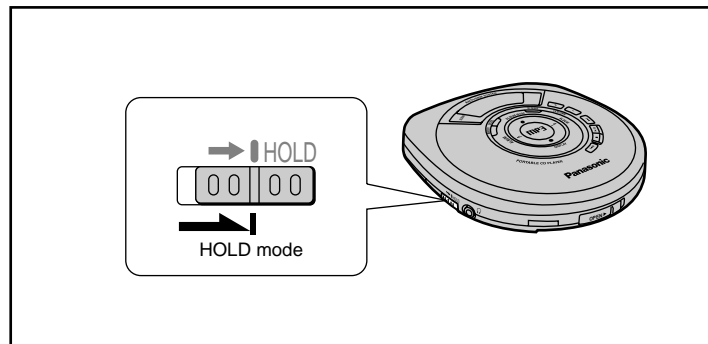

This function causes the unit to ignore short, accidental button presses. (The disc lid can still be opened and closed.)
The HOLD function prevents the following:

- The unit is powered on accidentally when not in use, causing the batteries to run down.
- A button is accidentally pressed during play, interrupting the operation.

To use the HOLD function

Set [HOLD] to the HOLD position.

"HOLD" indication

When the unit is in HOLD mode, pressing any button causes the indication, "HOLD" to appear on the display.


When the unit is off

The "HOLD" indication appears only when [▶/||] is pressed.

Before operating the buttons

Be sure to move [HOLD] to release the unit from the HOLD mode.

 Location of Controls

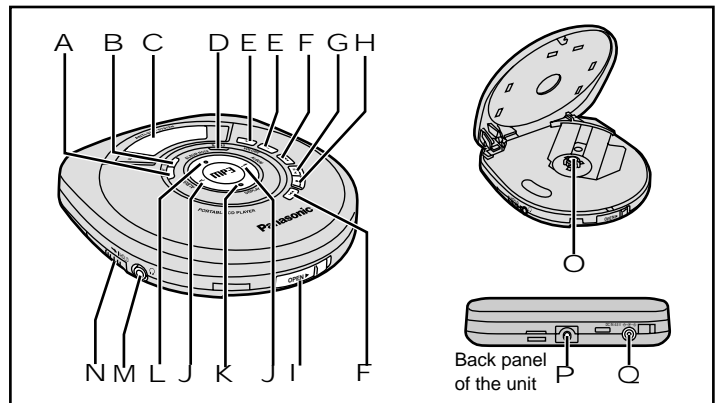

A Memory/recall button (MEMORY)

B Mode button (MODE)

C Display

D S-XBS button (S-XBS)

E Headphone volume control (+, VOLUME, -)

F Skip/search buttons (◀◀, ▶▶)

G Play/pause button (▶/||)

H Stop/operation off button (■)

I Open switch (OPEN ▶)

J Album skip buttons

(← ALBUM →)

K Display button (DISPLAY)

L Album mode button

(ALBUM MODE)

 
M Headphone jack (🔊)

N Hold switch (HOLD)

O CD release button (PUSH)

P Hole for car mounting base

Q DC IN jack (DC IN 4.5 V ⚡)

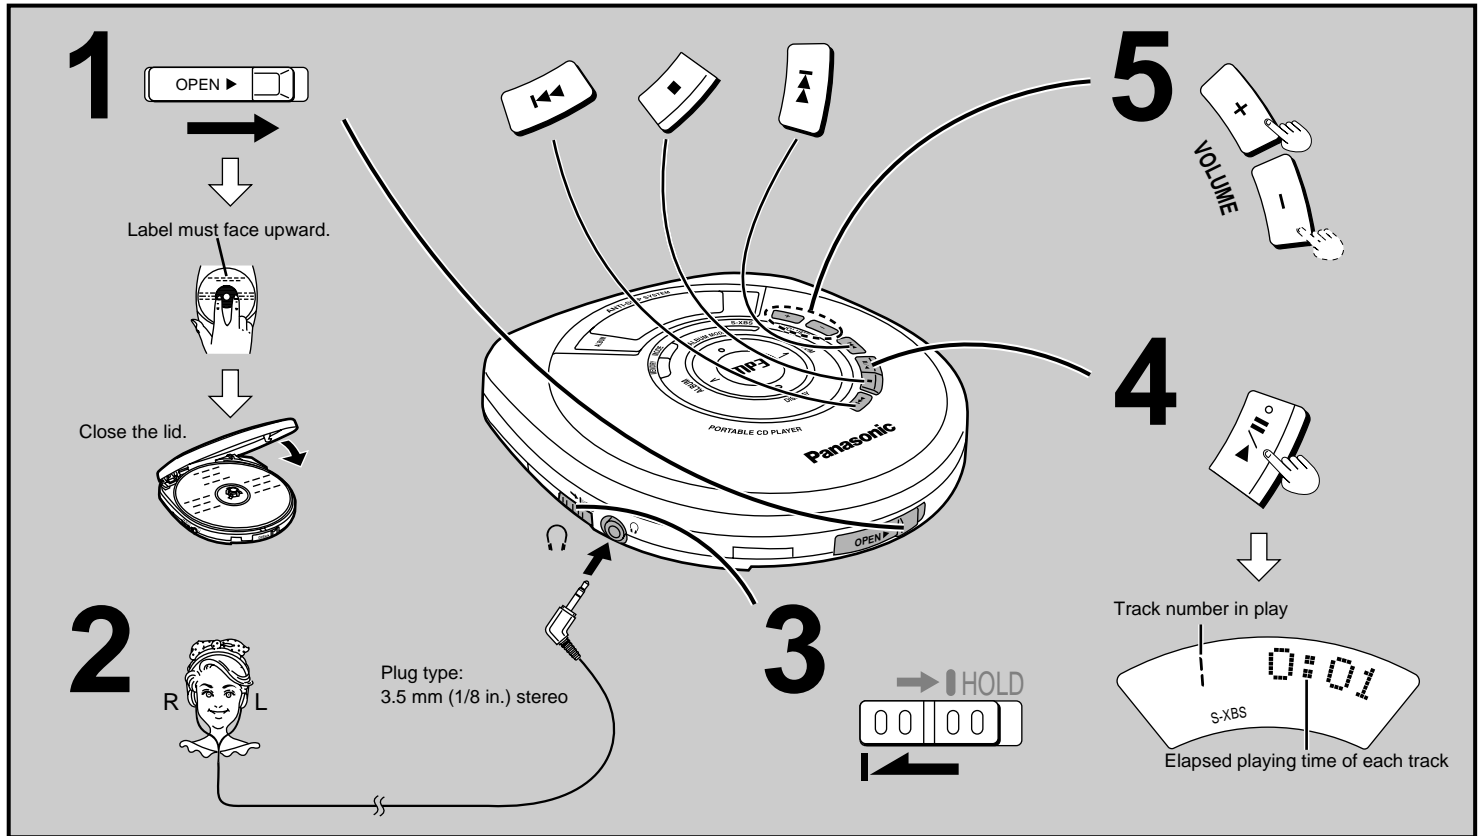

Follow steps 1–5.

In step 2: Connect the stereo headphones or stereo earphones to the [] jack. (Plug in firmly.)

In step 5: The volume range is 0-25. Press and hold to change the volume successively. The volume changes when pressed while the level is displayed. If any other display is shown, it changes to show the current level.

- The music symbols flash randomly during play.
- Play stops automatically when all the tracks have been played.

For your reference:

“NO DISC” indication

This indication appears for about 30 seconds if [] is pressed when no disc is loaded in the unit or if the disc is not properly secured.

 
“OPEN” indication

This indication appears for about 10 minutes when the lid is opened. (However, the indication does not appear when the unit is off.)

Removing discs

- 1 Press [] to stop play and disc rotation.
- 2 Slide [OPEN] to open the lid.
- 3 Press [PUSH] to release the disc.

Do not stop the disc by hand or try to remove it before it stops rotating. This can damage CDs.

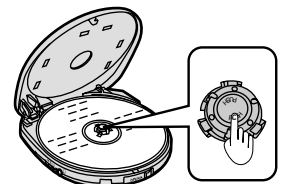

Note

Never insert foreign objects into the unit.

Auto-off function

If you leave the unit in stop mode for about 10 minutes (30 seconds if disc is not loaded), it turns off to save the batteries.

Note on CD-R and CD-RW

This unit can play CD-DA format audio CD-R and CD-RW that have been finalized* upon completion of recording. It may not be able to play some CD-R or CD-RW due to the condition of the recording.

*Finalizing is a process that enables CD-R/CD-RW players to play audio CD-R and CD-RW.

| Operation | Button | Display/reference |
|---|--|---|
| To pause play | Press during play. | Press again to restart play. |
| To stop play Stop mode | Press during play. Resume function Play starts from the beginning of the current track the next time you press []. | Total number of tracks Total playing time |
| To turn off the unit Off mode | Press during stop mode. | No indicator is shown. |
| Skip forward/ backward (skip function) | Press during play. (Press [] twice to skip to the beginning of the previous track.) | <ul style="list-style-type: none"> • During program play (page 4), these buttons are used to skip forward or backward through the programmed sequence of tracks. • You cannot skip to tracks that have been played in random or random repeat play (page 4). • During program play, 1-track repeat play, random play and random repeat play (page 4), search operation is limited to the current track only. |
| Rapid forward/ backward (search function) | Backward Press and hold during play. | |

Resume function notes

- Opening the lid while in the stop mode or replacing the disc while in the off mode cancels the function. (It may remain active if you replace a disc in the off mode.)
- Play may resume from the beginning of the next track if you stopped play near the end of a track.
- The resume function works automatically and cannot be turned off.

Anti-Skip System

This system deals with skipping in a variety of ways:

 
- An anti-skip mechanism prevents skipping caused when play speed changes due to swinging of the unit.
- A recovery system immediately returns the laser pick-up to its original position if it is knocked off the track by a strong shock.

- The anti-skip memory (maximum 45 seconds when playing CD-DA and maximum 100 seconds when playing 128 kbps MP3) fills in interruptions caused by bumps and vibrations.

The anti-skip system works automatically while the system is on and cannot be canceled.

When bumps continue repeatedly

The elapsed playing time disappears and sound is interrupted.



Note

The anti-skip memory compresses digital signals.

Other Play Methods

The letters such as F in the various illustrations refer to the descriptions in the "Location of Controls" section (see page 2).

Skip play

 
The disc plays from the specified track through to the end, then play stops automatically.

Preparation: Put unit in stop mode.

1 Select the desired track.



2



Changing the sound quality

Press during play or stop mode.



The setting switches as shown below each time you press the button.

S-XBS < > Cancel (no indicator is shown)

S-XBS:

Select this setting to boost the low frequency range response.

Program play

Up to 20 tracks can be entered in the programmed sequence.

Preparation: Put unit in stop mode.

1 Select the desired track.



2 Register in sequence.

(The indication "M" and the programmed sequence appear on the display.)



3 Repeat steps 1 and 2 to program all the desired tracks.

4



■ **To program the same track in the sequence more than once**

After step 2, press [MEMORY] the desired number of times.

■ **If "F" is displayed**

No more tracks can be programmed.

■ **To confirm the contents of the program**

Press [MEMORY] while the disc is playing. (The track numbers and their sequence appear in order, one after the other.)

■ **To delete the entire programmed sequence**

Press [■].

Note

The repeat and random play modes are canceled after steps 1 and 2.

Repeat play/Random play

Press during play or stop mode.



The setting switches as shown below each time you press the button.

1-track repeat (1) () ()

One track is repeated.

▼
All-track repeat ()

All the tracks on the disc are repeated.

▼
Random (RND)

The tracks play once each in random order and then play stops.

▼
Random repeat (RND) ()

The tracks play repeatedly in random order.

▼
Cancel (no indicator is shown) -----

When pressed during program play

The setting switches as shown below each time you press the button.

1-track repeat (1) (M) () ()

One track is repeated.

▼
Memory repeat () (M) ()

The programmed tracks are repeated.

▼
Cancel (M) -----

Note

•You can select the first track to play in random play and random repeat play by pressing [▶▶] while the disc is stopped. All the tracks are played.

•You cannot select random play or random repeat play during program play.

•The resume function does not work when random or random repeat are on.

•The mode is canceled when you disconnect the power source or open the lid.

Playing MP3 files

What is MP3?

A method of compressing audio, MPEG Audio Layer 3 (MP3) allows audio to be reduced to up to one tenth its original size when a compression rate of 128 kbps is used, without overtly hurting audio quality.

When creating MP3 files to play on this unit

•**Disc formats:** ISO9660 level 1 and level 2 (except for extended formats)

Files: MP3 files with the suffix ".mp3" or ".MP3"

•MP3 files may not be played in the order you recorded them. Note the following if you want the files to play in the order you record them.

- 1 Use software that records the files to the disc in file name order.
- 2 Prefix folder and file names with 3-digit numbers in the order you want to play them.
- 3 Give the files and folders names with 8 characters or less, including the 3-digit prefix.
- 4 It is better not to create folders (albums) within folders (such as shown in example 2).

This unit plays MP3 files in the following order.


Numbers such as ① show the order folders (albums) and files (tracks) within them are played.

Example1: Recommended method when creating MP3 discs.


Example2: A disc not created in the recommended way.

- Play will be in the order shown in the below diagram, irrespective of folder and track names, so the order of play in this example will be A# C# G# D, not A# B# C# D. Folders and files in the same level will be played in order according to their names.
- Folders that do not contain MP3 files ("Falbum" in the example) are skipped.

 Example1

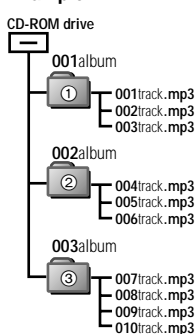

Example2

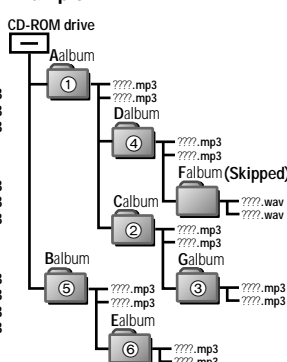 

Limitations on MP3

- This unit cannot play files if they have a suffix other than ".mp3" or ".MP3".
- This unit cannot play files that have the suffix ".mp3" or ".MP3" if they are not MP3 files.
- This unit can display album and track titles with ID3 tags (version 1.0 and 1.1). Titles including text data the unit doesn't support cannot be displayed.
- This unit is compatible with multi-session but if there are a lot of sessions it takes more time for play to start. Keep the number of sessions to a minimum to avoid this.
- This unit cannot play files recorded using packet write.

Frequently asked questions

Q. Can I play a disc if it has both audio data and MP3 data?

Yes, but only the data type used for the first track is played.

Q. Is there a limit on the number of albums and tracks?

This unit can play a maximum of 999 albums and 999 tracks. The unit cannot play albums or tracks beyond these limits.

 
Q. Why is sound interrupted between tracks?

The pick-up lens has to move to find the next track so a few seconds of silence is normal.

Q. Can I use 700-MB data?

Yes, you can.

Sequential Play with MP3 files Basic Play

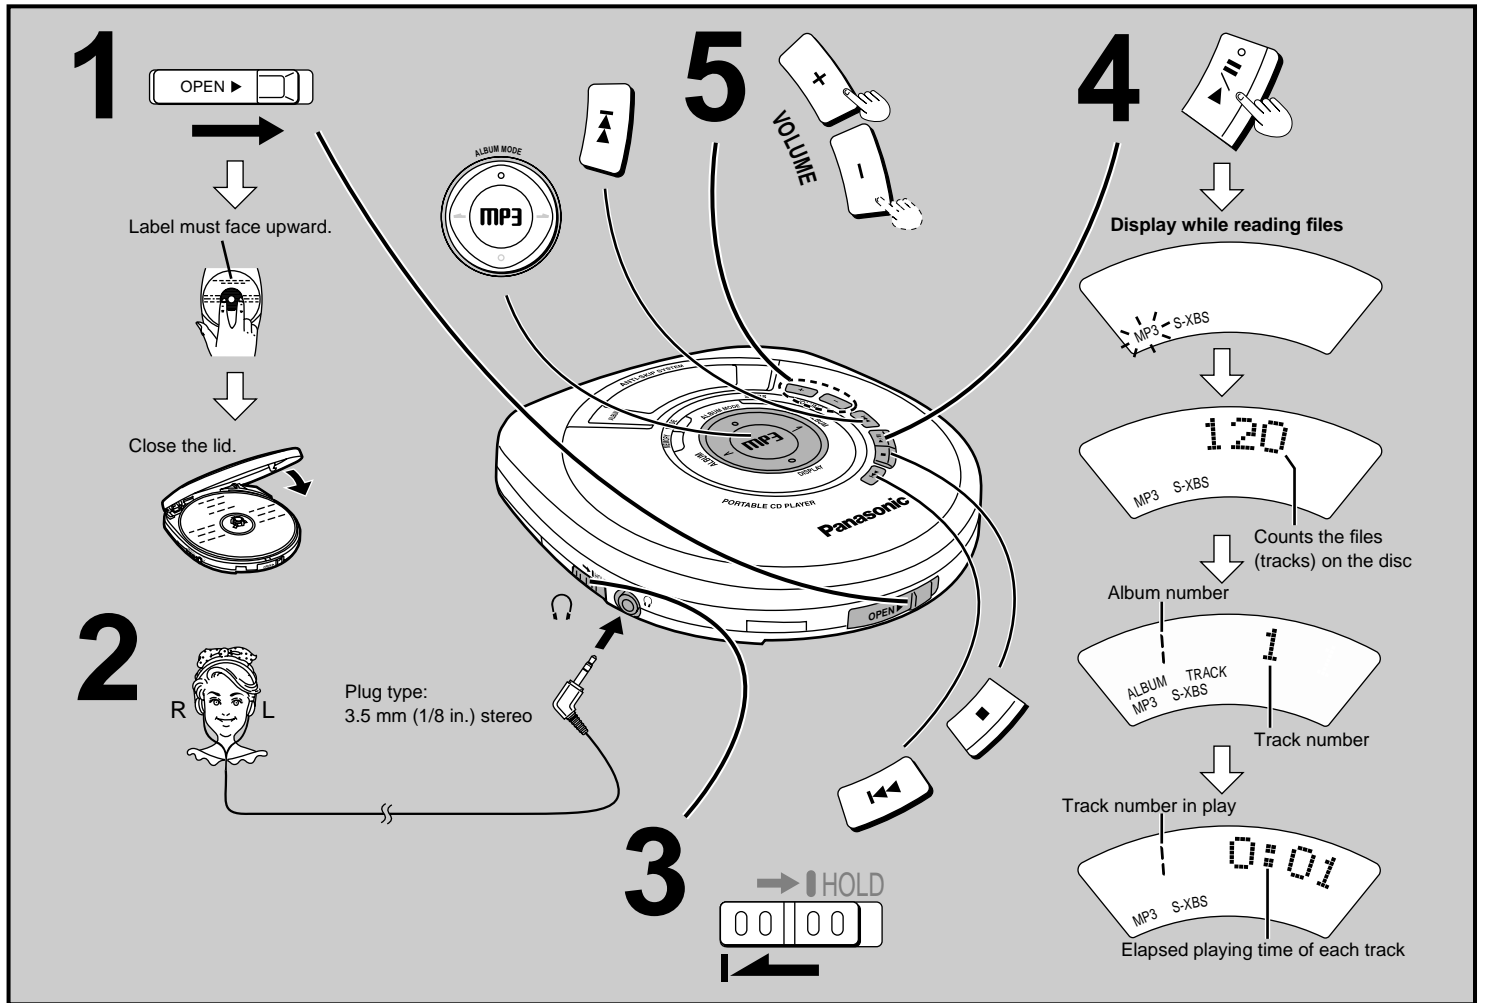

Follow steps 1–5.

In step 2: Connect the stereo headphones or stereo earphones to the [] jack. (Plug in firmly.)

In step 4: The time until play starts depends on the number of files on the disc. If the unit cannot read the disc correctly (it is scratched or dirty or the unit is bumped), some files may be left unread or the disc may not be read at all.

- The music symbols flash randomly during play.
- If in **Disc mode**, play stops after the last track on the disc. If in **Album mode**, play stops after the last track in the album.

| Operation | Button | Display/reference |
|---|---|--|
| To pause play | Press during play. | Press again to restart play. |
| To stop play Stop mode | Press during play. Resume function Play starts from the beginning of the current track the next time you press [▶/]. | Total number of albums Total number of tracks |
| To turn off the unit Off mode | Press during stop mode. | No indicator is shown. The unit stores data it has read so play can start again immediately when you press [▶/]. (This stored data is lost after 10 minutes when using batteries.) |
| Track skip forward/ backward | Press during play. (Press [◀◀] twice to skip to the beginning of the previous track.) Backward Forward | <ul style="list-style-type: none"> • You can only skip tracks in the current album when in album mode. • During program play (page 6), these buttons are used to skip forward or back through the programmed sequence of tracks. • During random repeat play (page 6), the skip buttons cannot be used to skip back to tracks that were played previously in the random sequence. |

Resume function notes

- Opening the lid while in the stop mode or replacing the disc while in the off mode cancels the function. (It may remain active if you replace a disc in the off mode.)
- Play may resume from the beginning of the next track if you stopped play near the end of a track.
- The resume function works automatically and cannot be turned off.

Note

- You cannot search when playing MP3 files.
- If the disc is scratched or the condition of the recording is poor, some noise may occur before the unit goes to stop mode.

To switch between Disc and Album mode

Disc mode

Plays all the tracks on the disc.

 
Album mode

Plays all the tracks in the current album.

Press during play or stop mode.



The setting switches as shown below each time you press the button.

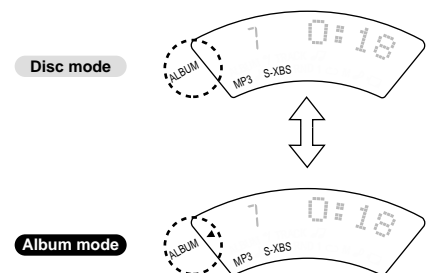

Note

You cannot do the operation above during program play (page 6).

Other Play Methods with MP3 files

The letters such as F in the various illustrations refer to the descriptions in the "Location of Controls" section (see page 2).

Track skip play

Disc mode

Plays from the selected track through to the last track on the disc.

 
Album mode

Plays from the selected track through to the last track in the current album.

Preparation: Put unit in stop mode.

1 Select the desired track.

F

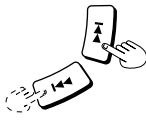

2

G



Album skip play

You can skip album to album.

Disc mode

Plays from the first track of the selected album through to the last track on the disc.

Album mode

Plays from the first track of the selected album through to the last track in the current album.

 
Press during play or stop mode to select the desired album.

J



When pressed while stopped

The album number and the total number of tracks within it appear on the display.



Album number Number of tracks in album 1

Press [▶/||] to start play from the first track in the album. Press [◀◀] or [▶▶] first to select another track to start play.

 
Program play

Up to 20 tracks can be entered in the programmed sequence.

Preparation: Put unit in stop mode.


1 Select the desired album.

J

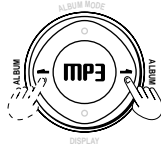

2 Select the desired track.

 F



3 Register in sequence.

(The indication "M" and the programmed sequence appear on the display.)

A



4 Repeat steps 1, 2 and 3 to program all the desired tracks.

5

G



To program the same track in the sequence more than once

After step 3, press [MEMORY] the desired number of times.

If "F" is displayed

No more tracks can be programmed.

To confirm the contents of the program

Press [MEMORY] while the disc is playing. (The album and track numbers and their sequence appear in order, one after the other.)

To delete the entire programmed sequence

Press [■].

For your reference:

- If album mode was engaged, disc mode is engaged automatically when you press [MEMORY].
- The random repeat play mode is canceled after steps 1, 2 and 3.

Repeat play/Random play

Press during play or stop mode.

B



The setting switches as shown below each time you press the button.

Disc mode

1-track repeat (1) ()

One track is repeated.

All-track repeat ()

All the tracks on the disc are repeated.

Random repeat (RND) ()

The tracks on the disc play repeatedly in random order.

Cancel (no indicator is shown)

Album mode

1-track repeat (1) ()

One track is repeated.

All-track repeat ()

All the tracks in the album are repeated.

Random repeat (RND) ()

The tracks in the current album play repeatedly in random order.

Cancel (no indicator is shown)

When pressed during program play

The setting switches as shown below each time you press the button.

1-track repeat (1) () (M)

One track is repeated.

Memory repeat () (M)

The programmed tracks are repeated.

Note

- You can select the first track to play in random repeat play by pressing [← ALBUM →] and [▶▶] while the disc is stopped.
- Tracks in an album or disc are played randomly until you release the mode or press [■] in random repeat play.
- You cannot select random repeat play during program play.
- The resume function does not work when random repeat is on.
- The mode is canceled when you disconnect the power source or open the lid.

Other Useful Functions

Changing the information displayed for MP3 tracks

You can show album and track titles.

Press during play.

The information changes each time you press the button.

 
K



- a album title
- b track title
- c ID3 album title
- d ID3 track title
- e Track number in play
- f Elapsed playing time of each track

Note


- The display shows up to 6 characters at once. Longer titles scroll from left to right.
- This unit can display up to 30 characters each for album, track, ID3 album, and ID3 track titles. ("~" appears at the end of the title if it is longer than this.)
- " " is displayed if titles with ID3 tags haven't been entered.
- Titles entered with 2-byte code cannot be shown correctly on this unit.

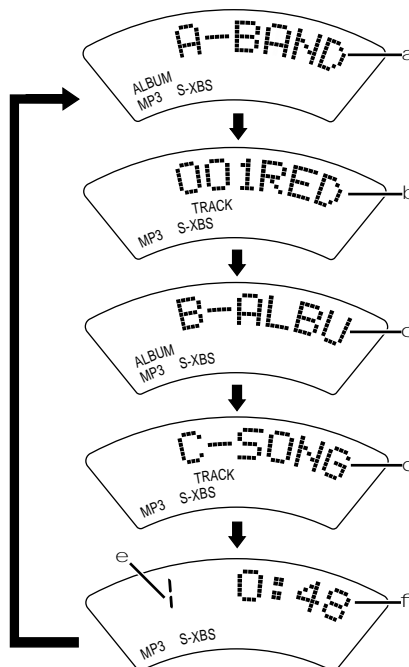

Changing the contrast

1 While stopped, set [HOLD] to the hold position. (See page 2.)

 N



2 Press and hold [▶/||] and...

 
G



3 Press [+ , VOLUME, -].

+: darker, -: lighter

E

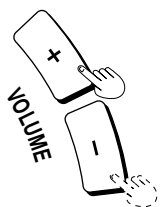


Using the Unit with Optional Accessories

Using the unit with an audio system

Using stereo connection cable (not included), you can listen to CDs on your audio system.

 - Turn off this unit and the other equipment before connection.
- Do not connect the cable to the PHONO jacks on the amplifier.
- Obtain the optional connecting cable if the other equipment comes with mini-phone jacks.
- Adjust the volume on the other equipment.

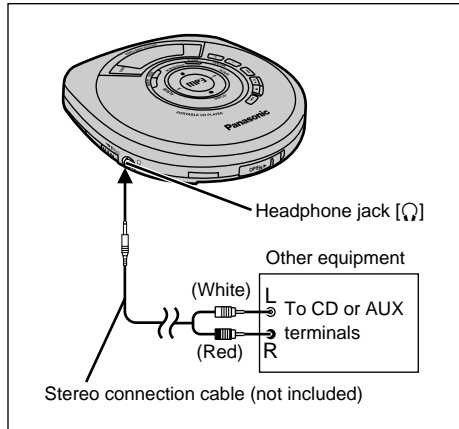

Using the unit with a car audio system

SL-MP36C includes a car adaptor and car stereo cassette adaptor. Refer to the separate "Installation Instructions".

For SL-MP35, obtain the following, available as optional accessories (part numbers are indicated in parentheses).

Use only the recommended car adaptor. Use of other car adaptors can damage the unit.

 
For connection to the car audio system
Car stereo cassette adaptor (SH-CDM10A)

Connect the car stereo cassette adaptor to [Ω] on the unit.

For securing the unit and connecting to the power supply

- Car adaptor (SH-CDC9)
- Car mounting kit (SH-CDF20)

Note when using the car mounting kit (SH-CDF20)

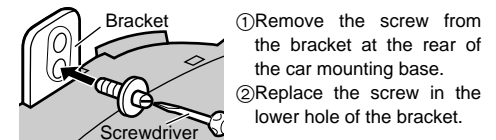

Note

- When you switch off the car, the resume function may work even if you change the disc.
 - It may not be possible to use the unit with some types of car stereos owing to restrictions imposed by the construction of the car stereo cassette adaptor.
- For further details, refer to the instructions of the part concerned.

Product Service

- 1. Damage requiring service**—The unit should be serviced by qualified service personnel if:
 - (a) The AC power supply cord or AC adaptor has been damaged; or
 - (b) Objects or liquids have gotten into the unit; or
 - (c) The unit has been exposed to rain; or
 - (d) The unit does not operate normally or exhibits a marked change in performance; or
 - (e) The unit has been dropped or the cabinet damaged.
- 2. Servicing**—Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized servicing personnel.
- 3. Replacement parts**—When parts need replacing ensure the servicer uses parts specified by the manufacturer or parts that have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electric shock, or other hazards.
- 4. Safety check**—After repairs or service, ask the servicer to perform safety checks to confirm that the unit is in proper working condition.

Product information

For product information or assistance with product operation: In the U.S.A., contact the Panasonic Customer Call Center at 1-800-211-7262, or e-mail consumerproducts@panasonic.com, or web site (<http://www.panasonic.com>). For assistance in the continental U.S.A. in obtaining repairs please ship the product to:

Panasonic Services Company - Customer Servicenter
Suite B 4900 George McVay Drive
McAllen, TX 78503

In Puerto Rico contact the Panasonic Sales Company.
Tel. (787) 750-4300 Fax. (787) 768-2910

When shipping the unit carefully pack and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone number where you can be reached.

IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

Also, the purchaser will be responsible for shipping the unit to the above address.

In Canada, contact Panasonic Canada Inc. Customer Care Centre at 905-624-5505, web site (www.panasonic.ca), or an authorized Servicenter close to you.

User memo:

DATE OF PURCHASE _____
DEALER NAME _____
DEALER ADDRESS _____
TELEPHONE NUMBER _____

CAUTION!

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

THE FOLLOWING APPLIES ONLY IN THE U.S.A.

CAUTION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specifications

Audio (CD-DA)

No. of channels: 2 (left and right, stereo)
 Frequency response: 20 to 20,000 Hz
 (+0.5 dB to -7 dB)
 DA converter: 1 bit, MASH
 Headphone
 output level: RMS max. 6 mW+6 mW/
 16 Ω (adjustable)

Pickup

Light source: Semiconductor laser
 Wavelength: 780 nm

MP3

Maximum number of items
 (sum of folders and files): 999
 Maximum album levels: 100
 Supported bit-rates: 32 kbps to 320 kbps
 (128 kbps is recommended)

General

Operational temperature
 range: 0 °C–40 °C
 (32 °F–104 °F)
 Rechargeable temperature
 range: 5 °C–40 °C
 (41 °F–104 °F)
 Power supply: DC 4.5 V with optional
 AC adaptor RP-AC46

Play time:

[Approximate operating time in hours (in
 hold mode with S-XBS canceled, at
 25 °C (77 °F) on a flat, stable surface)]

| Batteries used | CD-DA disc | MP3 disc |
|--|------------|----------|
| 2 optional alkaline batteries | 30 | 40 |
| 2 optional rechargeable batteries (P-3GAVA/2B) | 12 | 16 |

- The play time may be less depending on the operating conditions.
- Play time will be considerably reduced when playing CD-RW.

Recharging time: 3 to 4 hours
 Dimensions

(W×H×D): 128×29.1×131.5 mm
 (5¹/₂"×1¹/₂"×5³/₁₆")
 Mass: 263 g (9.3 oz.)
 (with batteries)
 217 g (7.7 oz.)
 (without batteries)

Note:

Specifications are subject to change without notice.
 Mass and dimensions are approximate.

Troubleshooting Guide

Before requesting service, make the below checks. If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem:

In the U.S.A., contact the Panasonic Customer Call Center at 1-800-211-7262, or e-mail consumerproducts@panasonic.com, or web site (http://www.panasonic.com).

In Canada, contact Panasonic Canada Inc. Customer Care Centre at 905-624-5505, web site (www.panasonic.ca), or an authorized Servicentre close to you.

| Problem | Check this |
|---|---|
| Cannot close the lid. | Is the disc properly secured in place? |
| Cannot play discs. | <ul style="list-style-type: none"> •Is the unit in HOLD mode? •Is the disc properly secured in place? •Is there condensation on the lens? (Wait for about an hour and then try again.) •Is the disc dirty or scratched or the lens dirty? (Wipe the disc clean and clean the lens. If it is an MP3 disc and it is badly scratched, rerecord the files onto a fresh disc.) |
| Tracks on disc do not play in order, starting with the first track. | <ul style="list-style-type: none"> •Is the random play mode on? •Did you stop play in the middle of the disc last time? |
| Cannot hear music—too noisy. | <ul style="list-style-type: none"> •Is the headphone/earphone plug inserted all the way? •Is the plug dirty? (Wipe away dirt on plug.) •Separate the unit from mobile phones. |
| TV picture is distorted. Radio reception is noisy. | Are you using the unit too near a TV or tuner? (Keep the unit away from the TV or tuner.) |
| Titles are cutoff or not displayed correctly. | <ul style="list-style-type: none"> •The title exceeds the 31-character limit of this unit. •This unit cannot display some characters entered with computers and other equipment (e.g., 2-byte code). |

Cautions

Listening caution



Do not play your headphones or earphones at a high volume. Hearing experts advise against continuous extended play.

If you experience a ringing in your ears, reduce volume or discontinue use.

Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.

You should use extreme caution or temporarily discontinue use in potentially hazardous situations.

Even if your headphones or earphones are the open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing.

Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Leave it there.

Discontinue use if you experience discomfort with the headphones, earphones or any other parts that directly contact your skin. Continued use may cause rashes or other allergic reactions.

Selection and care of rechargeable/dry cell batteries

 
■ Selection

As a safety precaution, the portable CD players made by Panasonic are constructed so it is impossible to recharge ordinary batteries.

Only batteries especially designed for this unit can be recharged.

Special rechargeable Ni-Cd batteries: P-3GAVA/2B (set of 2)

For details, check with your dealer.

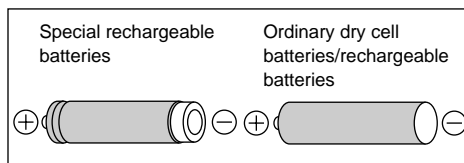

- If rechargeable battery play time is short after recharging, the batteries have reached the end of their service life. Replace them with the recommended replacements.
- Play time may be shorter than usual after recharging batteries for the first time or after they have been unused for a long time. Repeatedly recharge and discharge the batteries if this occurs to restore them to normal.

■ Care

To prevent battery damage, electrolyte leakage and short-circuiting, heed the following points.

- Do not peel off the covering on batteries and do not use if the covering has been peeled off.
- Align the poles ⊕ and ⊖ correctly when inserting the batteries.
- Do not mix different types or of batteries or old and new batteries.

- Remove the batteries if you do not intend to use the unit for a long time.
- Do not throw into fire, short-circuit, disassemble, or subject to excessive heat.
- Do not attempt to recharge dry cell batteries.
- Do not allow metal objects to touch the battery terminals as this may cause short-circuiting which is dangerous.
- When carrying batteries in a pocket or bag, ensure no metal objects such as necklaces are placed together with them. Contact with metal may cause short-circuiting which can cause a fire.

When driving a car

In the interest of traffic safety, do not operate the unit while driving.

Maintaining the Lens

Open the lid and clean the lens as shown in the figure. Use a cotton swab to gently wipe off any finger-prints. Recommended product: Lens cleaner kit (SZZP1038C)

