

Concerning Compact Discs

 


Only compact discs bearing this mark can be used with this unit.


However, continued use of irregular shape CDs (heart-shape, octagonal, etc.) can damage the unit.



How to remove a disc from its case




How to hold a disc

 

If the surface is dirty

 Wipe it with a damp cloth and then wipe dry.
Wipe from the center toward the outer circumference.



If moisture has formed on a disc

When moisture has formed because the disc was brought suddenly into a warm room from a cold environment, wipe it off using a soft dry cloth.

When storing discs

- Avoid locations which are
 - Exposed to direct sunlight.
 - Susceptible to high levels of humidity or dust.
 - Directly exposed to heat from a heating appliance.
 - On top of a car dashboard or near the rear window.

Handling precautions

- On the label side (the side with writing)
 - Do not write anything using a pencil, ball-point pen, etc. Do not stick paper or labels.
- On the disc (shiny) side
 - Handle this side carefully to keep it free from fingerprints or scratches. Do not use record cleaners, solvents, etc.
 - Do not attach labels or stickers to CD's.
 - Do not use CD's with exposed adhesive from tape or left over peeled off stickers.
 - Do not use scratch-proof protectors or covers other than those specified for use with this unit.

Portable CD player

Panasonic

Dear Customer

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully.

The model number and serial number of this product can be found on either the back or the bottom of the unit. Please note them in the space provided below and keep for future reference.

MODEL NUMBER _____
SERIAL NUMBER _____

Operating Instructions

SL-SX500



COMPACT
disc
DIGITAL AUDIO

Supplied Accessories

Check the packing carton for these accessories.

AC adaptor 1 pc. (RFEA415C-S)	Rechargeable Ni-Cd batteries 1 pc. (RFKFP3GAVABA)
Wired remote control 1 pc. (RFEV015PCKS)	Battery carrying case 1 pc. (RFKNLS370-K)
Stereo earphones 1 pc. (RFEV316P-K1S)	Remove the rechargeable batteries from their case before use.
Battery case 1 pc. (RFA0627-K4)	

Use numbers indicated in parentheses when asking for replacement parts.
(Only for U.S.A.) To order accessories call
PASC Accessory Dept. 1-800-211-7262.

Before connecting, operating or adjusting this product, please read these instructions completely. Please save this manual.



Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus, New Jersey 07094

Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc. ("PSC")
Ave. 65 de Intarferia, Km. 9.5 San Gabriel Industrial Park, Carolina, Puerto Rico 00985

Panasonic Canada Inc.
5770 Ambler Drive, Mississauga, Ontario L4W 2T3

RQT4297-P
F1297W0

Precautions

Before using this unit, be sure to read the applicable items of the operating instructions and these safety suggestions carefully. Afterwards keep them handy for future reference. Take special care to follow the warnings indicated on the unit itself as well as in the operating instructions.

- Batteries**—If the set is not used for a long period of time or is used only from an AC power source, remove all the batteries to prevent potential damage due to possible battery leakage. Do not mix batteries (old and new) or different types of batteries.

- Magnetism**—The unit should be situated away from equipment or devices that generate strong magnetic fields.
- Stacking**—Do not place any objects, on top of the unit.

Safety

- Power Source**—The unit should be connected to power supply only of the type described in the operating instructions or as marked on the unit. Use only the AC adaptor or car adaptor described in the operating instructions when recharging.
- Polarization**—If the unit is equipped with a polarized AC power plug (a plug having one blade wider than the other), that plug will fit into the AC outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- Care of AC adaptor**—Take care that the cord of the AC adaptor should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Never take hold of the AC adaptor if your hand is wet, and always grasp the plug body when connecting or disconnecting it.
- Nonuse Periods**—When not in use, be sure to disconnect the AC adaptor from the AC power outlet.

Installation

Environment

- Water and Moisture**—Do not use this unit near water—for example, near a bathtub, washbowl, swimming pool, or the like. Damp basements should also be avoided.
- Condensation**—Moisture may form on the lens in the following conditions...
 - immediately after a heater has been turned on.
 - in a steamy or very humid room.
 - when the unit is suddenly moved from a cold environment to a warm one. If moisture forms inside this unit, it may not operate properly. To correct this problem wait about one hour for the moisture to evaporate.
- Heat**—Never use or place this unit near a heat source. Do not leave it in an automobile exposed to direct sunlight for a long time with the doors and windows closed as this may deform the cabinet.

Placement

- Foreign Material**—Care should be taken so that objects do not fall into and liquids are not spilled into the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration, or shock.

Maintenance

(See page 5 for details.)

Clean the cabinet, panel and controls with a soft cloth lightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

Service

- Damage Requiring Service**—The unit should be serviced by qualified service personnel when:
 - The AC adaptor is damaged; or
 - Objects have fallen or liquid has been spilled into the unit; or
 - The unit has been exposed to rain; or
 - The unit does not appear to operate normally or exhibits a marked change in performance; or
 - The unit has been dropped, or the enclosure damaged.
- Servicing**—The user should not attempt to service the unit beyond that described in the operating instructions. All other servicing should be referred to an authorized service personnel.
(Only for U.S.A.)
Call 1-800-211-7262 for the address of an authorized factory servicenter.

8661 E 0 N0r

Power Supply Preparations

Refer to the specifications (page 8) for information on operating times when using rechargeable batteries or dry-cell batteries.

 
Using rechargeable batteries

Make sure to recharge the batteries before using them. The unit cannot be used to charge rechargeable batteries other than those specifically designed for it.


- Supplied batteries (P-3GAVA)
- Optional batteries (P-3GAVA/2B, SH-CDB8D)

Recharging procedure


- 1 Insert the special rechargeable batteries into the unit.

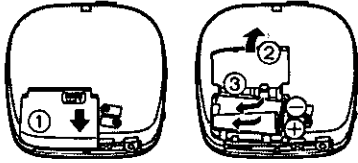

- 2 Connect the AC adaptor.

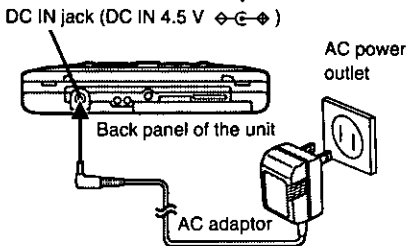 

 Recharging starts and a battery indicator appears on the display as shown below.



When the rechargeable batteries are fully recharged, the battery indicator disappears. (It takes approximately 3 hours to fully recharge the supplied rechargeable batteries.)

 
- 3 When recharging is complete, unplug the AC adaptor from the power outlet and the DC IN jack.

Notes

- Rechargeable batteries have a service life of approximately 300 charge-discharge cycles. If the operating time on one full charge becomes noticeably shorter than it used to be, the battery has reached the end of its service life and should be replaced.
- Recharging may only be performed when the unit is powered off. (It is not possible to recharge the batteries while playing a CD.)
- The AC adaptor and rechargeable batteries may become warm while recharging is in progress. This is not a malfunction.


If the battery lid comes loose

Slide the lid back into place horizontally.



Removing batteries

 Push up on the battery in the direction indicated by the arrow. Then lift it out.



Using the AC adaptor

Connect the AC adaptor supplied.

Refer to the step 2 in "Using rechargeable batteries" for connection instructions.

Using the car adaptor (not included)

Be sure to obtain the car adaptor (SH-CDC9), available as an optional accessory.

CAUTION:

Use only car adaptor, Model: SH-CDC9 manufactured by Matsushita Electric Industrial Co., Ltd.

The car adaptor can be used to recharge the unit's batteries while in the car.

 
Using dry-cell batteries (not included)

After disconnecting the AC adaptor, insert two "AA" (LR6) alkaline batteries.

The procedure for inserting and removing dry-cell batteries is identical to that for rechargeable batteries.

Checking the battery condition

When the unit is off, pressing BATT CHECK causes the battery indicator to appear on the main unit's display for about a few seconds. (This works even if the unit is on hold.) The indicator is always on when the unit is operating.

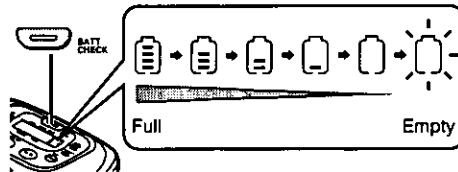

When the battery indicator flashes

Power is cut off a short while later. Recharge the rechargeable batteries or replace the dry cell batteries with new ones.

Notes

- When the unit is used with a AC adaptor, the battery indicator is not displayed.
- The battery may temporarily show a lower level or otherwise not operate correctly when searching and skipping, and also if the unit is used in an extremely cold environment.
- The length of time the unit continues to operate after the battery indicator starts flashing depends on the type of batteries used.
- The battery indicator may not be displayed if rechargeable batteries other than those designated by Panasonic are used.

Using the battery case

 
The battery case allows you to extend the maximum playing time of the unit by loading an additional two "AA" (LR6) alkaline batteries.

Notes

- When using the battery case, always insert batteries in the unit body as well. (The unit cannot be operated on the batteries in the external battery case alone.)
- Though you can use rechargeable batteries in the battery case, it does not recharge them. (Use dry cell batteries if possible.)
- When using rechargeable batteries in the unit body, and dry-cell batteries in the battery case, be sure to use fully charged rechargeable batteries and new dry-cell batteries.
- When using four dry-cell batteries, do not mix new and old batteries.


- 1 Open the cover of the battery case and insert the batteries.

Insert the end marked (-) first.

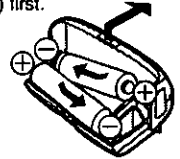

- 2 Mount the battery case on the unit body.

 Insert the protrusions on the battery case into the four indentations in the unit body.

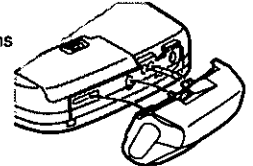

- 3 Secure in place with the screw.



 
Reverse the above procedure to remove the external battery case.

For your reference:

The maximum playing time will differ depending on the type of batteries (rechargeable/dry-cell) loaded in the unit body.

If the cover of the battery case comes loose:


Insert the protrusions into the holes on either end of the lid.

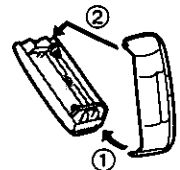

If the unit malfunctions or freezes during use, then disconnect the power sources (the AC adaptor and batteries).

Re-connect the power source and continue operation.

 HOLD Function

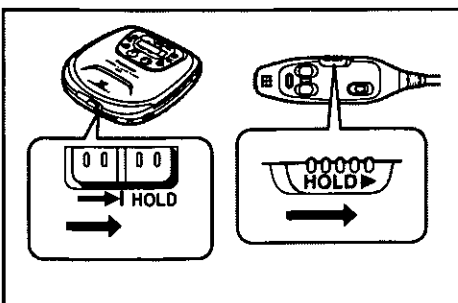

This function causes the unit to ignore short, accidental button presses. (The disc lid can still be opened and closed.)

The HOLD function prevents the following:

- Powering on the unit accidentally (which can cause the batteries to go dead).
- Play being cut off unexpectedly in the middle of a selection.

The unit and wired remote control have HOLD switches, each of which works independently.

To use the HOLD function

Set the HOLD switch to the HOLD position. (The buttons on the remote control cannot be operated if the switch is set to hold.)


"hold" indication

When the unit is in HOLD status, pressing any button causes the indication "hold" to appear on the display.

When the unit is powered off

The "hold" indication appears only when ► || is pressed.

 Sequential Play Basic Play

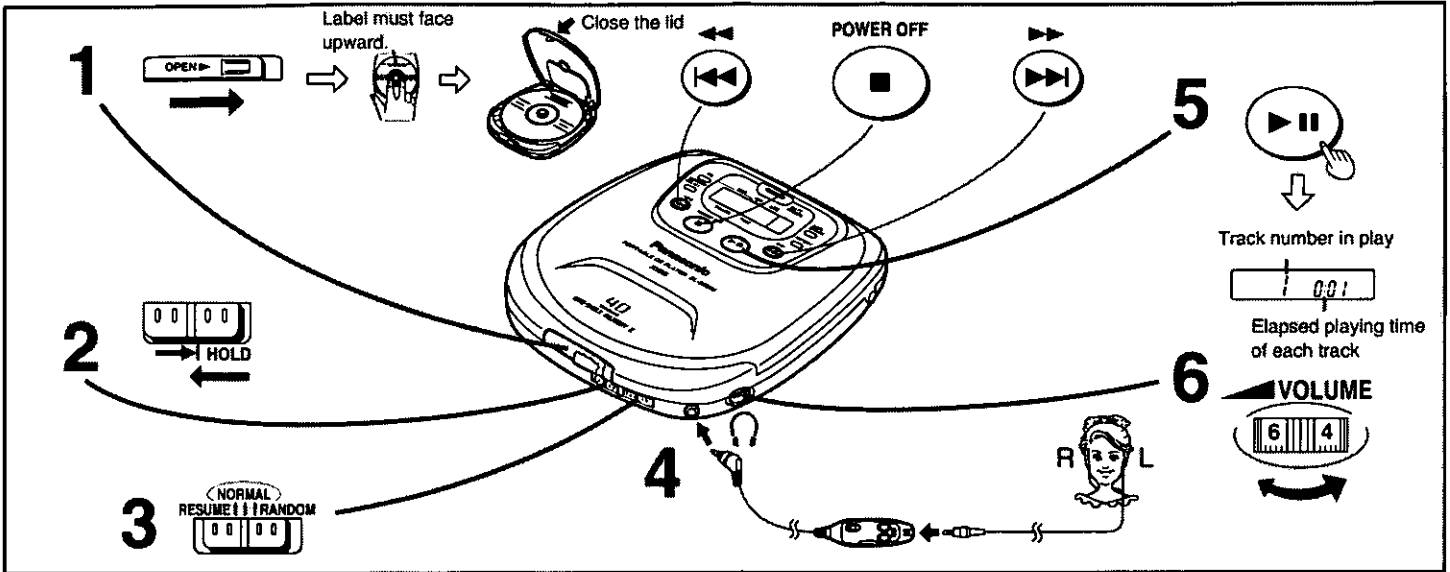

Following steps 1-6.

In step 4, connect the stereo earphones to the () jack. (Plug in firmly)

- Play stops automatically when all the tracks have been played.
- If the unit has been connected to the car audio system, adjust the volume level between 4 and 6 on the unit, then adjust the volume level on the system.
- See page 5 for remote control operations.

Operation	Button	Display/reference
To pause play	Press during play 	 Press again to resume play
To stop play Stop mode	Press during play POWER OFF	Total number of tracks Total playing time
To turn off the unit Off mode	Press during stop mode POWER OFF	
Skip forward/ backward (skip function)	Press during play Backward Forward 	<ul style="list-style-type: none"> • During program play, these buttons are used to skip forward or back through the programmed sequence of tracks. • During random play, the skip buttons cannot be used to skip back to tracks that were played previously in the random sequence. • During program play, random play or 1 track repeat play, search operation is limited to the current track only. (See page 4.)
Rapid forward/ backward (search function)	 Keep depressed during play	

For your reference

"no disc" indication

This indication appears for about 30 seconds if ►|| is pressed when no disc is loaded in the unit or if the disc is not completely seated.

"OPEN" indication

 
This indication appears for about 10 minutes when the cover is opened. (However, the indication does not appear when the unit is powered off.)

Auto power off function

If the unit is left in stop or paused status for approximately 10 minutes, the unit powers itself off automatically in order to prevent the batteries from running down. (If no disc is loaded in the unit, it powers itself off in about 30 seconds.)

Removing discs


After the release has stopped rotating, press the PUSH button to disengage the disc. (To protect the disc, NEVER open the cover while it is playing.)

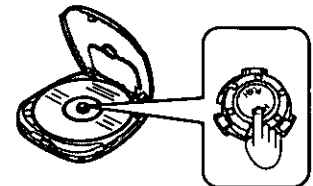

Note

Never insert foreign objects into the unit body.

 Location of Controls

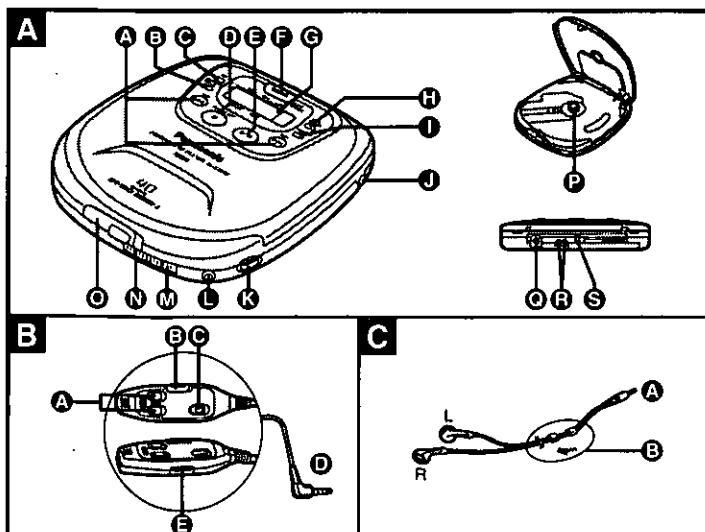

Portable CD player A

- A Skip/search buttons (◀, ▶, ◀◀, ▶▶)
- B Memory/recall button (MEMORY/RECALL)
- C EQ button (EQ)
- D Stop/power off button (■, POWER OFF)
- E Play/pause button (►||)
- F Battery check button (BATT CHECK)
- G Display
- H Anti-shock button (ANTI-SHOCK)
- I Repeat button (REPEAT)
- J Out jack (OUT)
- K Headphones volume control (VOLUME)
- L Headphones jack ()
- M Play mode selector (RESUME, NORMAL, RANDOM)

- N Hold switch (HOLD)
- O Open switch (OPEN)
- P CD release button (PUSH)
- Q DC in jack (DC IN 4.5 V ⚡)
- R Connection terminal for battery case
- S Hole for car mounting base/battery case

Wired remote control B

- A Skip/search buttons (+, -)
- B Hold switch (HOLD)
- C Play/stop/off button
- D Plug
- E Volume control (VOL)

Stereo earphones C

- A Plug
- B Slider


 

Other Play Methods

The letters such as **A** in the various illustrations refer to the descriptions in the "Location of Controls" section.

Skip play

The disc plays from a selected track through to the last track, then play stops automatically.





Preparation: Put unit in stop mode. (See page 3.)

- 1 
- 2 **Select the desired track.** 
- 3 

Program play

Up to 24 tracks can be entered in the program.

Preparation: Put unit in stop mode. (See page 3.)

- 1 
- 2 **Select the desired track.** 
- 3 **Register in sequence.** (The indication "M" and the programmed sequence appear on the display.) 
- 4 **Repeat steps 2 and 3 to program all the desired tracks.**
- 5 

■ **To program the same track in the sequence more than once**

After step 3, press MEMORY/RECALL the desired number of times.

■ **If "F" is displayed**

No more tracks may be added to the sequence.

 


■ **To confirm the contents of the programmed sequence**

Press MEMORY/RECALL while the disc is playing. (The numbers of the programmed tracks appear on the display in sequence.)

■ **To delete the entire programmed sequence**

Press ■, POWER OFF.

Random play




- 1 
 - 2 
- Release** 

For your reference:

- It is also possible to press the >>> while the unit is in stop status to change the first track to be played. (All tracks are played eventually, regardless of which is played first.)
- Program play is not possible in the random mode.

Resume play

This function allows you to listen from the beginning of the track where play stopped because the unit was powered off (or switched to stop status). It is useful when listening to CDs in the car, etc.

- Release** 
-  

For your reference:

- If the RESUME, NORMAL, RANDOM (play mode selector) switch is put in the RESUME position, the all-repeat function will be activated automatically as soon as the unit is powered on.
- If power is cut off near the end of a track (power off status), playback may resume from the beginning of the next track.
- If the unit is powered off while a disc was playing and then a new disc is inserted, play will begin from the middle of the new disc because the unit remembers the position where play stopped on the previous disc.

Repeat function

Press during play or stop mode.



The setting switches in the sequence indicated below each time REPEAT is pressed.

1-track repeat (1) ←

One track is repeated.

All-track repeat (ALL) ←

All the tracks on the disc are repeated.

 
Cancel

For your reference:

If REPEAT is pressed during program play, only the tracks in the programmed sequence are repeated. (The indication "ALL" is not displayed.)

Changing the sound quality

Press during play or stop mode.




The setting switches in the sequence indicated below each time EQ is pressed.

NOR → XBS → LIVE


XBS:

 Select this setting to boost the low-range response.




LIVE:

 Select this setting to reproduce the sound as if it would be heard in a concert hall.



NOR:

 
Select this setting to turn off the XBS, LIVE function. Normal sound is heard.




Anti-Shock Function

Anti shock works by reading audio data and storing it in memory (up to 40 seconds worth). The unit then fills in interruptions caused by bumps and vibrations with data from the memory. This unit also incorporates a powerful anti-shock mechanism that prevents skipping caused when play speed is changed by swinging of the unit.

 Press during play or stop mode.




 The following indicator appears on the display panel.



When bumps continue repeatedly

 The following indicator appears on the display and sound is interrupted.



To cancel the anti-shock function

Press ANTI-SHOCK again.

Notes

- The ANTI-SHOCK setting can be changed during play, but this may cause a slight interruption in the sound because the disc's rotation speed changes.
- During the anti-shock operation, the disc rotates at a higher rate than usual in collecting extra audio data. This could result in a slight increase in disc rotation noise.

Using the unit with an audio system

 
The anti-shock function uses digital signal compression technology. It is recommended that the anti-shock function be canceled if the unit is connected to a home audio system.

Using the Remote Control

The remote control can be operated regardless of the hold mode of the unit.

Preparation:

Release the remote control from the hold mode.

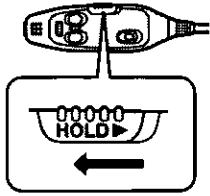

■ Operation confirmation tones

When an operation button is pressed, a confirmation tone sounds. Refer to the parentheses in the illustration for the different types of confirmation tones.

How to use the wired remote control

To start play	Press once during off or stop mode. (Beep)
To stop play	Press once during play. (Beep...Beep)
To turn off the unit	Press and hold during play or stop mode. (Beep...Beep...p)

Skip forward/backward	Press once during play Forward (Beep Beep)
Rapid forward/backward	 (Beep Beep Beep) Backward Press and hold during play.
To adjust the volume	When adjusting the volume using the remote control, position the volume control on the unit to between 4 and 6.

Using the Unit with Optional Accessories

 
Using the unit with an audio system

Using a stereo connection cable (not included), you can listen to CDs on your audio system.

- Turn off the amplifier power and connect the cable.
- Do not connect the cable to the PHONO jacks on the amplifier.
- Obtain the optional connection cable if the amplifier comes with mini-phone jacks.
- Adjust the volume on the amplifier.

Notes

- Sound quality changes when XBS or LIVE is selected, but volume is reduced by approximately fifty percent.
- When using active speakers or other speakers, ensure that they have an input impedance of 1 kΩ or less.

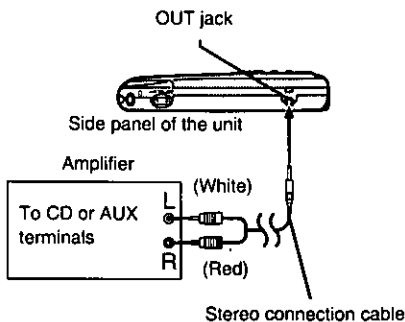

Using the unit with a car audio system

Items to be purchased

For connection to the car audio system:

- Car stereo cassette adaptor (SH-CDM10A)
- Car adaptor (SH-CDC9)

Connect the car stereo cassette adaptor to the unit's headphones jack. (When doing this, keep the unit's VOLUME control at a setting between 4 and 6.)

For securing the unit and connecting the power supply:

Car mounting kit (SH-CDF20)

 
Note

It may not be possible to use the unit with some types of car stereo owing to restrictions imposed by the construction of the car stereo cassette adaptor.

For further details, refer to the instructions of the part concerned.

Maintaining the Lens

Open the lid and clean the lens as shown in the figure. Use a cotton swab to gently wipe off any finger-prints. Recommended product: Lens cleaner kit (SZZP1038C)

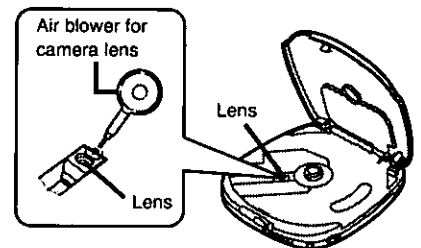

*For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:
800-211-PANA (7262), Monday-Friday 9 am-9 pm Saturday-Sunday 9 am-7 pm, EST.*

*Web Site: <http://WWW.Panasonic.com>
You can purchase parts, accessories or locate your nearest servicer by visiting our Web Site.*

Accessory Purchases:

Customer Orders Only 800-211-PANA (7262)

Factory Servicenters Locations

<p>CALIFORNIA 6550 Katella Avenue Cypress, CA 90630</p> <p>800 Dubuque Avenue S. San Francisco CA 94080</p> <p>20201 Sherman Way Suite 102 Canoga Park, CA 91306</p> <p>3878 Ruffin Road Suite A San Diego, CA 92123</p> <p>COLORADO 1640 South Abilene Street Suite D Aurora, CO 80012</p> <p>FLORIDA 3700 North 29th Avenue Suite 102 Hollywood, FL 33020</p>	<p>GEORGIA 8655 Roswell Road Suite 100 Atlanta, GA 30350</p> <p>ILLINOIS 1703 North Randall Road Elgin, IL 60123 (Pick-up/Drop-off only)</p> <p>9060 Golf Road Niles, IL 60714</p> <p>MARYLAND 62 Mountain Road Glen Burnie, MD 21061</p> <p>MASSACHUSETTS 60 Glacier Drive Suite G Westwood, MA 02090</p>	<p>MICHIGAN 37048 Van Dyke Avenue Sterling Heights, MI 48312</p> <p>MINNESOTA 7850-12th Avenue South Airport Business Center Bloomington, MN. 55425</p> <p>OHIO 2236 Waycross Road Civic Center Plaza Forest Park, OH 45240</p> <p>PENNSYLVANIA 2221 Cabot Blvd. West Suite B Langhorne, PA 19047</p> <p>Chartiers Valley Shopping Center 1025 Washington Pike Bridgeville, PA 15017</p>	<p>TENNESSEE 919-8th Avenue South Nashville, TN 37203</p> <p>TEXAS 7482 Harwin Drive Houston, TX 77036</p> <p>13615 Welch Road Suite 101 Farmers Branch, TX 75244</p> <p>WASHINGTON 20425-84th Avenue South Kent, WA 98032</p> <p>HAWAII 99-859 Iwaiwa Street Aiea, Hawaii 96701 Phone (808) 488-1996 Fax (808) 486-4369</p>
---	--	---	--

Service in Puerto Rico

*Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/Factory Servicer.
Ave. 65 de Infanteria, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985
Phone (787) 750-4300 Fax (787) 768-2910*

PANASONIC CONSUMER ELECTRONICS COMPANY, DIVISION OF MATSUSHITA ELECTRIC CORPORATION OF AMERICA
One Panasonic Way Secaucus, New Jersey 07094

ONLY FOR U.S.A.

PANASONIC SALES COMPANY, DIVISION OF MATSUSHITA ELECTRIC OF PUERTO RICO, INC. ("PASC")
Ave. 65 de Infanteria, Km. 9.5 San Gabriel Industrial Park Carolina, Puerto Rico 00985
Tel. (809) 750-4300
FAX. (809) 768-2910

**PANASONIC AUDIO PRODUCTS
Limited Warranty**

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "The warrantor") will repair this product with new or refurbished parts, free of charge, in the U.S.A. or Puerto Rico from the date of original purchase in the event of a defect in materials or workmanship as follows:

AUDIO COMPONENTS, RADIOS, COMPACT DISC PLAYERS, VIDEO CD PLAYERS AND HOME ENTERTAINMENT SYSTEMS—For one (1) year.

ACCESSORIES, HEADPHONES AND CARTRIDGES—(when applicable) For ninety (90) days.

BATTERIES—(when applicable)—New rechargeable batteries in exchange for defective rechargeable batteries—For ten (10) days. Non-rechargeable batteries are not warranted.

RECHARGEABLE BATTERY PACKS—(when applicable)—New rechargeable battery packs in exchange for defective rechargeable battery packs for (90) days. Non-rechargeable battery packs are not warranted.

Carry-in or mail-in service in the continental U.S.A. can be obtained during the warranty period from a Panasonic Services Company (PASC) Factory Servicer listed in the Servicer Directory. Or call 1-800-211-7262, toll free, to locate an authorized PASC Servicer. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the telephone numbers listed in the Servicer Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of date of original purchase will be required before warranty service is rendered.

This warranty only covers failures due to defects in materials or workmanship

which occur during normal use and does not cover normal wear to the stylus (when applicable) or dealer installed cartridge or stylus. It does not cover damage which occurs in shipment or failures which are caused by products not supplied by the warrantor or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, improper antenna, inadequate signal pick-up, maladjustment of consumer controls, modification, or commercial use of product, or service by anyone other than a PASC Factory Servicer or authorized PASC Servicer, or damage that is attributable to acts of God.

LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING WITHOUT LIMITATION, DAMAGE TO TAPES RECORDS OR DISCS. ALL EXPRESS AND IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicer. If the problem is not handled to your satisfaction, then write to the Consumer Affairs Division at the company address indicated above.

Product Service

Do not attempt to remove the cover(s) or repair the unit yourself. Refer servicing to qualified personnel only.

Product information

For product service, product information or assistance with product operation, refer to the servicenter directory.

User memo:

DATE OF PURCHASE	_____
DEALER NAME	_____
DEALER ADDRESS	_____
TELEPHONE NUMBER	_____

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPLIANCE TO RAIN, SPLASHING, DRIPPING OR MOISTURE.

CAUTION!

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

THE FOLLOWING APPLIES ONLY IN THE U.S.A.:

POWERED BY NICKEL-CADMIUM BATTERY. MUST BE RECYCLED OR DISPOSED OF PROPERLY.

ATTENTION:

The product that you have purchased is powered by a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream.

Check with your local solid waste officials for details in your area for recycling options or proper disposal.



CAUTION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

If you ship the product

Carefully pack and send it prepaid, adequately insured and preferably in the original carton. Attach a postage-affixed letter, detailing the complaint, to the outside of the carton.

Do NOT send the product to the Executive or Regional Sales offices. They are NOT equipped to make repairs.

Customer's Record

Model No. _____	Dealer's Name _____
Serial No. _____ or _____	_____
Code No. _____	Dealer's Address _____
Date of Purchase _____	_____

Specifications

Audio (ANTI-SHOCK off)

No. of channels: 2 (left and right, stereo)

Frequency response: 20 to 20,000 Hz (+0.5 dB, -1.5 dB)

Output voltage: 0.6 V (50 kΩ)

S/N: More than 96 dB*

Wow and flutter: Below measurable limit

DA converter: 1 bit, MASH

Headphones output level: Max. 9 mW+9 mW/16Ω (variable)

Pickup

Light source: Semiconductor laser

Wavelength: 780 nm

General

Operational temperature range: 0°C-40°C (32°F-104°F)

Rechargeable temperature range: 5°C-40°C (41°F-104°F)

Power supply: DC 4.5 V

Power consumption:

Power source	ANTI-SHOCK off/on
Using AC adaptor	2.0 W/2.4 W

When recharging: Approx. 4.8 W

Play time: [When used in hold mode, at 25°C (77°F) temperature and on flat and stable surface]

Batteries used	ANTI-SHOCK off/on
2 Alkaline batteries	About 23 hours/ About 24 hours
Rechargeable batteries	About 11 hours/ About 11.5 hours
4 Alkaline batteries	About 50 hours/ About 52 hours
2 Rechargeable and 2 Alkaline batteries	About 33 hours/ About 34 hours

The play time may be less depending on the operating conditions.

Recharging time: About 3 hours

Dimension (W×H×D): 128×25.7×134.5 mm (5¹/₈"×1"×5³/₁₆")
300 g (10.6 oz.) (with batteries)
255 g (9.0 oz.) (without batteries)

Weight:

*These specifications were measured in the ANTI-SHOCK off mode.

Note:

Specifications are subject to change without notice.

Weight and dimensions are approximate.

MASH is a trademark of NTT.

Troubleshooting Guide

Before requesting service for this unit, check the chart below for a possible cause of the problem you are experiencing. Some simple checks or a minor adjustment on your part may eliminate the problem and restore proper operation.

If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult your dealer for instructions.

(In U.S.A. consult PASC Authorized Servicenters for detailed instructions or call 1-800-211-7262 for the address of an authorized factory servicenter.)

Problem	Check this
Cannot close cover.	Is the disc properly secured in place?
Cannot play discs.	<ul style="list-style-type: none"> Is the unit in HOLD status? Is the disc properly secured in place? Is there moisture condensation on the lens? (Wait for about an hour and then try again.)
Cannot remove disc.	Did you press the PUSH button to release the disc?
Tracks on disc do not play in order, starting with the first track.	Is the RESUME, NORMAL, RANDOM (play mode) selector in the NORMAL position?
Cannot hear music—too noisy.	<ul style="list-style-type: none"> Are the earphones plug and the wired remote control plug inserted all the way? Is the plug dirty? (Wipe away dirt on plug.)
TV picture is distorted. Radio reception is noisy.	Are you using the unit body too near a TV or tuner? (If the TV or tuner is connected to a simple indoor antenna, connect it to an outdoor antenna.)

Cautions

Listening caution



Do not play your headphones or earphones at a high volume. Hearing experts advise against continuous extended play.

If you experience a ringing in your ears, reduce volume or discontinue use.

Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.

You should use extreme caution or temporarily discontinue use in potentially hazardous situations.

Even if your headphones or earphones is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Rechargeable batteries

- Only the P-3GAVA, P-3GAVA/2B, SH-CDB8D batteries can be recharged.
- If the power delivered by the batteries lasts for a very short time after recharging, it means that the batteries' service life is over. Do not use them any more.
- Recharging already charged batteries will shorten their service life.
- When recharging batteries for the first time or when they have not been used for a long period of time, the play time may be shorter than usual. In a case like this, repeatedly recharge and discharge the batteries. This will restore them to their regular state.
- Do not allow any metal objects to touch the terminals of rechargeable batteries since this may cause short-circuiting which is dangerous.
- Do not peel off the plastic covering on the rechargeable batteries. Short-circuiting may occur which is dangerous.

Dry cell batteries/rechargeable batteries

To prevent damage to the batteries and electrolyte leakage, heed the following points.

- Align the ⊕ and ⊖ polarities properly when inserting the batteries.
- Do not mix different types or makes of batteries or old and new batteries.
- Remove the batteries if you do not plan to use the unit for a long period of time.
- Do not throw batteries into a fire, and do not short-circuit, disassemble or subject them to excessive heat.
- Do not attempt to recharge dry cell batteries.

Unit

The lid is metallic. If exposed to direct sunlight or left for a long time in any other place with high temperatures, the cover may become hot.

Carrying dry cell batteries/rechargeable batteries around

When putting dry cell or rechargeable batteries in a pocket or bag, ensure that no other metal objects such as a necklace are placed together with them. Contact with metal may cause short-circuiting which, in turn, may cause a fire.

Be absolutely sure to carry the rechargeable batteries in the battery carrying case.

When purchasing rechargeable batteries

 
As a safety precaution, the portable CD players made by Panasonic have a construction designed to make it impossible to recharge ordinary batteries.

To use rechargeable batteries, be absolutely sure to purchase the rechargeable Ni-Cd batteries designed especially for this unit.

Special rechargeable Ni-Cd batteries:

P-3GAVA/2B, SH-CDB8D (set of 2)

For details, check with your dealer.

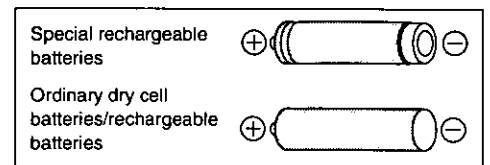

When driving a car

In the interest of traffic safety, do not operate the unit while driving.