


Quasar®

Color Television Operating Instructions

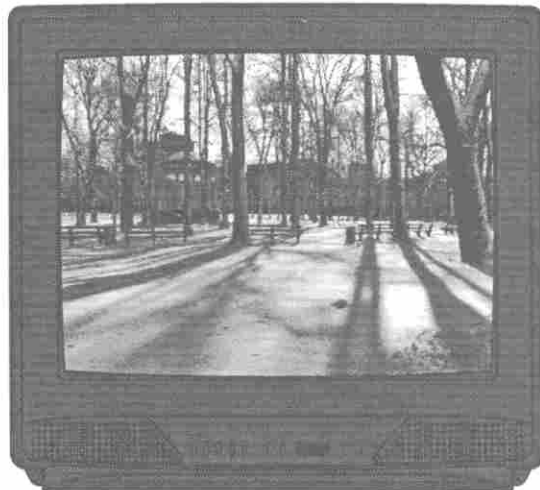


**SP3229
SP3229U**

Read these instructions completely before operating this set.
Contents subject to change without notice or obligation.

Copyright 1997 by Matsushita Electric Corporation of America.
All rights reserved. Unauthorized copying and distribution is a violation of law.

Printed in U.S.A.
TQB2AA0124

Safety Instructions

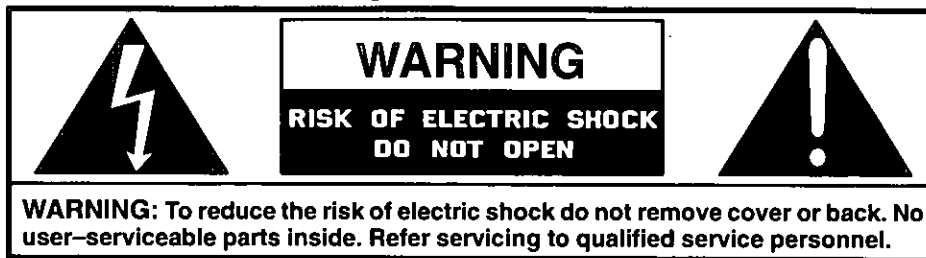

The lightning flash with arrow-head within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.




The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.

Note To CATV System Installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electric Code that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Safety Instructions For Television Receivers

1. Read and apply the operating instructions provided with your television receiver.
2. Read all of the instructions given here and retain them for later use.
3. Unplug this television receiver from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use attachments not recommended by the television receiver manufacturer as they may cause hazards.
5. Do not use this television receiver near water. For example: Avoid placing it near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.
6. Do not place this television receiver on an unstable cart, stand, or table. The television receiver may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart or stand recommended by the manufacturer, or sold with the television receiver. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.
- 6A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. Slots and openings in the cabinet and the back or bottom are provided for ventilation, and to insure reliable operation of the television receiver and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the television receiver on a bed, sofa, rug or other similar surface. This television receiver should never be placed near or over a radiator or heat register. This television receiver should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.
8. Operate only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home consult your television dealer or local power company. For television receivers designed to operate from battery power, refer to the operating instructions.
9. This television receiver is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
10. Do not allow anything to rest on the power cord. Do not locate this television receiver where the cord will be abused by persons walking on it.
11. Follow all warnings and instructions marked on the television receiver.
12. Do not overload wall outlets and extension cords as this can result in fire or electric shock.
13. Never push objects of any kind into this television receiver through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the television receiver.

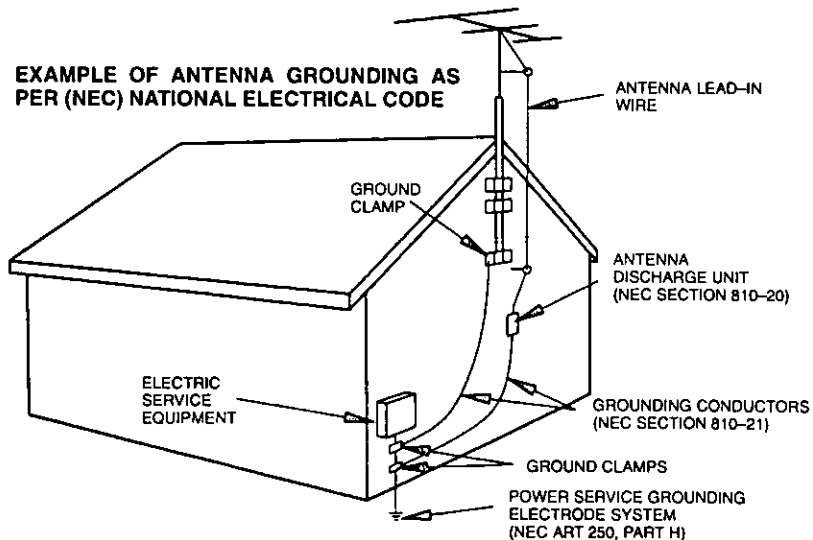

14. If an outside antenna is connected to the television equipment, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. In the U.S. Section 810 of the National Electrical Code and in Canada Part 1 of the Canadian Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure.
15. For added protection for this television receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the receiver due to lightning and power-line surges.
16. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
17. Unplug this television receiver from the wall outlet, and refer servicing to qualified service personnel under the following conditions:
 - a. When the power cord or plug is damaged or frayed.
 - b. If liquid has been spilled into the television receiver.
 - c. If the television receiver has been exposed to rain or water.
 - d. If the television receiver does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the television receiver to normal operation.
 - e. If the television receiver has been dropped or the cabinet has been damaged.
 - f. When the television receiver exhibits a distinct change in performance – this indicates a need for service.
18. Do not attempt to service this television receiver yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
19. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
20. Upon completion of any service or repairs to this television receiver, ask the service technician to perform routine safety checks to determine that the television is in safe operating condition.
21. **WARNING: To prevent fire or shock hazard, do not expose this appliance to rain or moisture.**
22. **CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH A RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.**

NOTE: This equipment is designed to operate in the U.S.A., Canada and other countries where the broadcasting system and AC house current is exactly the same as in the U.S.A. and Canada.

Important Information Regarding Use of Video Games, Computers, DSS or Other Fixed Image Displays.

The extended use of fixed image program material can cause a permanent “shadow image” on the picture tube. This background image is viewable on normal programs in the form of a stationary fixed image. This type of irreversible picture tube deterioration can be limited by observing the following steps:

- A. Reduce the brightness/contrast setting to a minimum viewing level.
- B. Do not display the fixed image for extended periods of time.
- C. Turn the power off when not in actual use.

NOTE: The marking or retained image on the picture tube resulting from fixed image use is not an operating defect and as such is not covered by Warranty. This product is not designed to display fixed image patterns for extended periods of time.

Specifications

- Power Source:** 120V, 60Hz, AC
- Channel Capability:** 181 channels (See chart)
VHF 2~13, UHF 14~69, Cable 125 channels
- Video Input Jack (2):** 1V p-p, 75 ohm, phono jack type
- Audio Input Jacks (2):** 500mV rms 47K ohm
- To Audio AMP Jacks:** 0~2.0V rms 4.7K ohm
- Stereo Sound**
- Closed Caption Display**
- Picture In Picture:** 1 Tuner

Channel Capability Chart

| BAND | CHANNELS |
|-----------------------|------------|
| VHF | 12 |
| UHF | 56 |
| CABLE (Mid-Band) | 15 |
| CABLE (Super Band) | 14 |
| CABLE (Hyper Band) | 28 |
| CABLE (Ultra Band) | 56 |
| TOTAL CHANNELS | 181 |

Specifications are subject to change without notice or obligation.

Introduction

Congratulations on Your New Purchase

Your new video component features an all solid state chassis which is designed to give you many years of enjoyment. It was thoroughly tested and adjusted at the factory for best performance.

In order for you to take full advantage of your new video component, please read and follow the installation and operating instructions supplied with this product.

Customer's Record

The model and serial number of this product may be found on its back cover. You should note the model and serial number in the space provided and retain this book as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: _____ Serial Number: _____

Table of Contents

| | | | |
|---|----|--|----|
| Safety Instructions | 2 | Swap Button | 14 |
| Specifications | 3 | Size Button | 14 |
| Introduction | 4 | Move Button | 14 |
| Care and Cleaning | 4 | Freeze Button | 14 |
| Installation | 5 | Main Menu Icons | 15 |
| Receiver Location | 5 | Language Menu Selection | 15 |
| Optional External Equipment Connections | 5 | Picture Adjustments | 15 |
| AC Power Supply Cord | 5 | Picture Norm | 15 |
| Remote Control Battery Installation | 5 | Color, Tint, Brightness, Picture and Sharpness .. | 16 |
| Antenna/Cable Connections | 6 | Audio Adjustments | 16 |
| Other Video Equipment | 6 | Mode (Stereo/SAP/Mono) | 16 |
| Optional Equipment Connection and Operation .. | 7 | TV Speakers | 16 |
| To Audio Amp Connection | 7 | Lock | 17 |
| Audio/Video Input Connection | 7 | Lock Game Guard | 17 |
| Picture in Picture Operation Using VCR as | | Unlock Game Guard | 17 |
| Second Tuner | 8 | Channel Caption | 18 |
| Picture in Picture Connection and Operation | | Timer Features | 18 |
| With VCR and Cable Box | 8 | Sleep Timer | 18 |
| Location of Controls (Receiver) | 9 | Program Timer | 19 |
| Location of Controls (Remote Control) | 10 | Set-Up Features | 20 |
| Remote Control Quick Reference | | Set Time | 20 |
| Functional Key Chart | 11 | Antenna (Ant) | 20 |
| Special Functions | 13 | Auto Prog | 20 |
| R-Tune Button | 13 | Manual Prog | 21 |
| Recall Button | 13 | Auto Power On | 21 |
| VCR Function Buttons | 13 | CC (Closed Caption) Mode | 21 |
| Multi Button | 13 | Programming the Universal Remote Control | 22 |
| Cable Power Button | 14 | VCR and Cable Box Infrared Codes Index | 23 |
| PIP (Picture in Picture) Button | 14 | Troubleshooting Chart | 24 |

Care and Cleaning

Picture Tube (Turn set off)

Use a mild soap solution or window cleaner and a clean cloth. DO NOT USE ABRASIVE CLEANERS. Avoid excessive moisture and wipe dry.

Plastic Cabinets

Wipe the cabinet with a soft cloth dampened with water or a mild detergent solution and wipe dry with a soft clean cloth. Avoid excessive moisture. Do not use benzene, thinners or other petroleum based cleaners.

Wood Cabinets

When dusting or polishing the cabinet, use a clean soft cloth and stroke straight with the grain. An occasional coat of furniture polish will help preserve the finish. Do not use benzene, thinners or other petroleum based cleaners. Do not place objects made of plastic or rubber directly on top of the cabinet. A chemical reaction could result causing permanent marring of the finish.

Remote Control Transmitter

Do not use benzene, thinners or other petroleum based cleaners to clean the Remote Control Transmitter. To clean, wipe with a soft cloth slightly moistened with a mild detergent and then wipe dry with a soft clean cloth.

Installation

Receiver Location

This unit is intended to be used with an optional stand or entertainment center. Consult your dealer for available options. Locate for comfortable viewing. Avoid placing where sunlight or other bright light (including reflections) will fall on the screen.

Use of some types of fluorescent lighting may reduce remote control transmitter range.

Adequate ventilation is essential to prevent internal component failure. Keep away from areas of excessive heat or moisture.

To insure optimum color purity do not position magnetic equipment (motors, fans, other speakers, etc.) nearby.


Optional External Equipment Connections

The Video/Audio connections between components can be made with shielded video and audio cables. For best performance, video cables should utilize 75 ohm coaxial shielded wire. Cables are available from your dealer or electronic supply house.

Before you purchase any cables, be sure you know what type of output and input connectors your various components require. Also determine the length of cable you'll need.

AC Power Supply Cord

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT OF AC OUTLET AND FULLY INSERT. DO NOT USE THIS (POLARIZED) PLUG WITH A RECEPTACLE OR OTHER OUTLET UNLESS THE BLADE CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

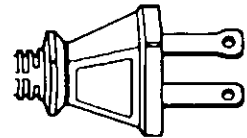

Polarized Plug

Remote Control Battery Installation

Batteries Use two "AA" batteries.

- 1 Remove the battery compartment cover on back of the remote.
- 2 Install the batteries in the battery compartment (Polarity (+) or (-) must be correct).
- 3 Reattach the battery cover.

Helpful Hints:


For frequent Remote Control users, replace old batteries with Alkaline batteries for longer life.

Precaution on Battery Use

Incorrect installation can cause battery leakage and corrosion that will damage the Remote Control Transmitter.

Observe the Following Precautions:


- 1 Batteries must be replaced as a pair.
- 2 Do not combine a used battery with a new one.
- 3 Do not mix battery types (Example "Zinc Carbon" with "Alkaline").
- 4 Do not attempt to charge, short-circuit, disassemble, heat or burn used batteries.
- 5 Battery replacement is necessary when Remote Control reacts sporadically or stops operating the Receiver.

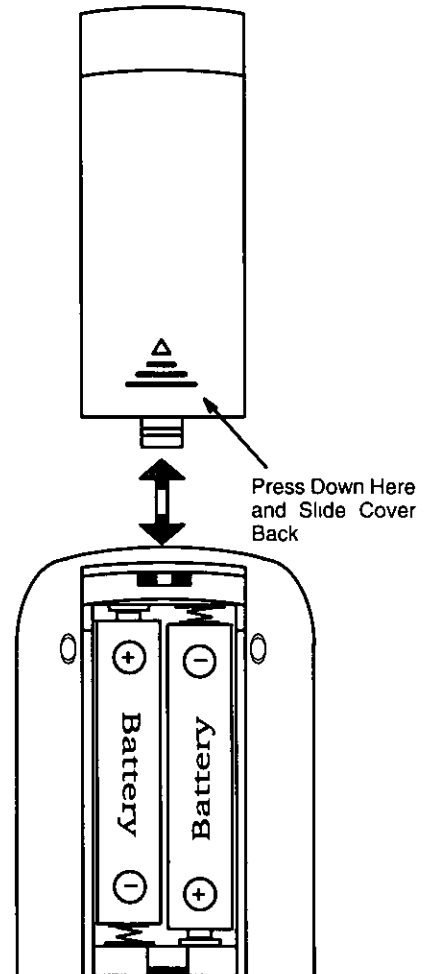


Installation (cont.)

Antenna/Cable Connections

Antenna Connection – For proper reception of VHF/UHF channels, an external antenna is required. For best reception an outdoor antenna is recommended. **Antenna Mode must be set to TV.** (Refer to Antenna Mode section.)

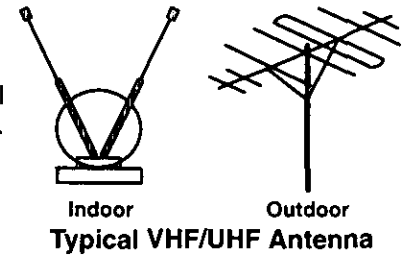


Incoming Cable from Home Antenna

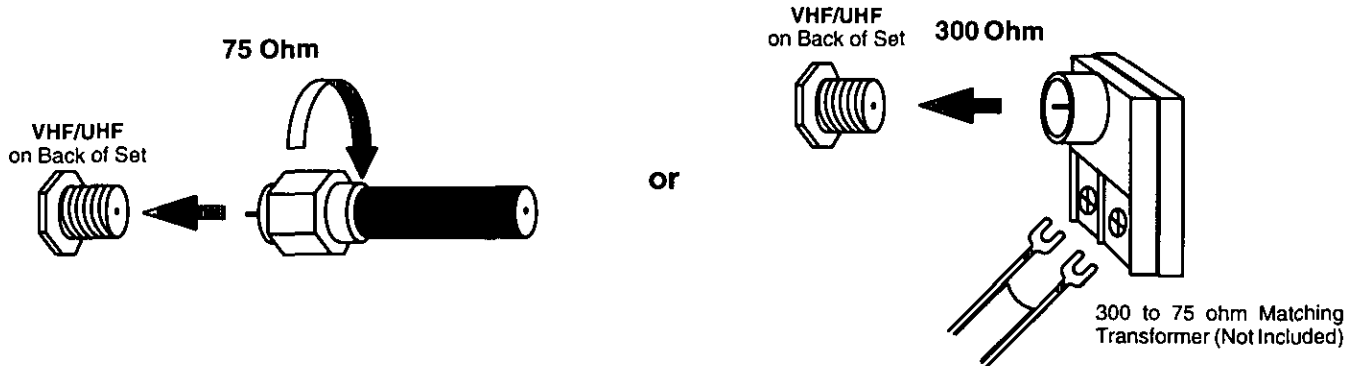

Cable Connection – For reception of cable channels, connect the cable supplied by your local cable company. **Antenna Mode must be set to CABLE.** (Refer to Antenna Mode section.)

Incoming Cable from Cable Company

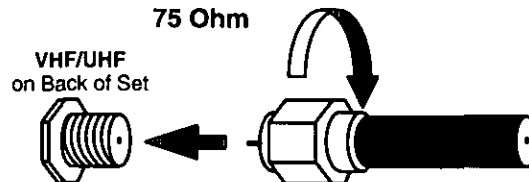

NOTE: Certain cable systems offset some channels to reduce interference or have Premium (scrambled) channels. A cable converter box is required for proper reception. Check with your local Cable company for compatibility requirements.


Other Video Equipment

VCRs, Video Disc Players, TV games, and DSS equipment can also be connected to the antenna input connection.

Optional Equipment Connection and Operation

To Audio AMP Connection (Stereo)

Connect to an external audio amp auxiliary input for monitoring sound through a stereo system.

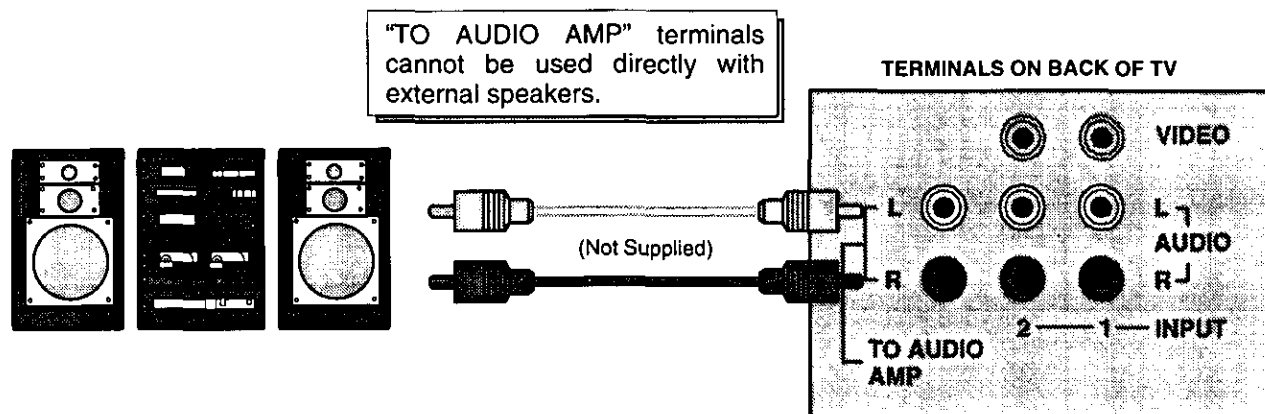


Adjustment – When an audio amp is connected to "TO AUDIO AMP" terminals:

1. Select TV SPEAKERS "ON" Mode. (Refer to the Audio Menu TV Speakers section.)
2. Set volume of audio amp to near minimum.
3. Adjust volume of TV to desired listening level.
4. Adjust volume of audio amp to match the level of TV.
5. Select TV SPEAKERS "OFF&VAO" Mode. (Refer to the Audio Menu TV Speakers section.)
6. Volume and mute can now be controlled by the TV Remote Control.

NOTE: When Selecting TV SPEAKERS "OFF&FAO" Mode, the TV sound output is always at a constant level and cannot be changed (Refer to the Audio Menu TV Speakers section).

Audio/Video Input Connection

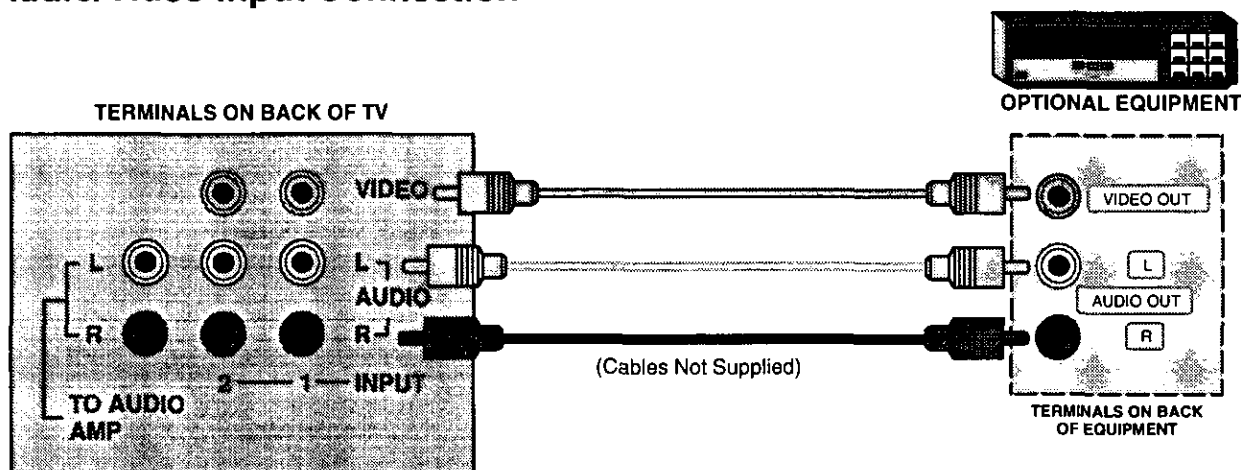


Operation

1. Connect optional equipment as shown to Audio/Video input 1 or 2 terminals.
2. Select the Video mode by pressing the TV/VIDEO button. **NOTE:** You must select the same VIDEO Mode that the equipment is connected to.
3. Operate optional equipment (VCR-VDP) as instructed in Optional Equipment manual.

Optional Equipment Connection and Operation (cont.)

Picture in Picture Operation Using VCR as Second Tuner

This Receiver has the "PICTURE IN PICTURE" feature. For the proper operation of this feature a second video source is required (such as a VCR). We recommend that you make your antenna and External Video connection as shown below when a second video source is available.

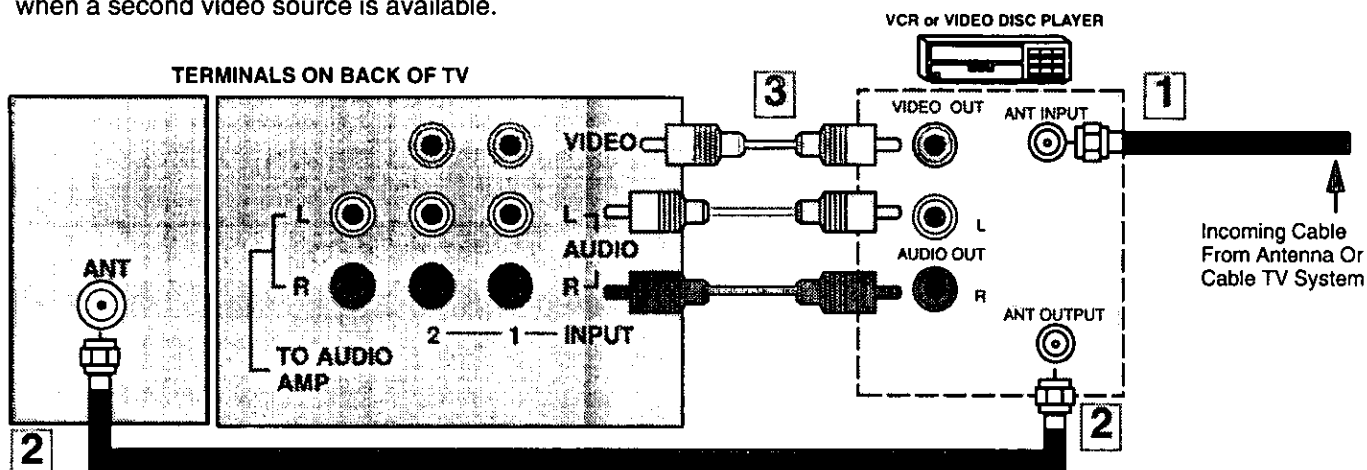


Connection

1. Connect incoming Cable to optional VCR ant input.
 2. Connect a cable from VCR ant output to TV ant input.
 3. Connect RCA cables from VCR Audio/Video output to TV Audio/Video input 1 or 2.
- NOTE:** You must select the same VIDEO Mode that the equipment is connected to.

Operation

1. Press the PIP button to display the PIP frame.
2. Press the TV/VIDEO button to select Video1 or Video 2 mode.
3. Turn VCR ON. **NOTE:** PIP video and Main video source will be the same.
4. Press PLAY button for VCR. **NOTE:** PIP video and Main video source will be from VCR.
5. Press TV/VCR button to display TV video source for Main picture.

Picture in Picture Connection And Operation With VCR and Cable Box

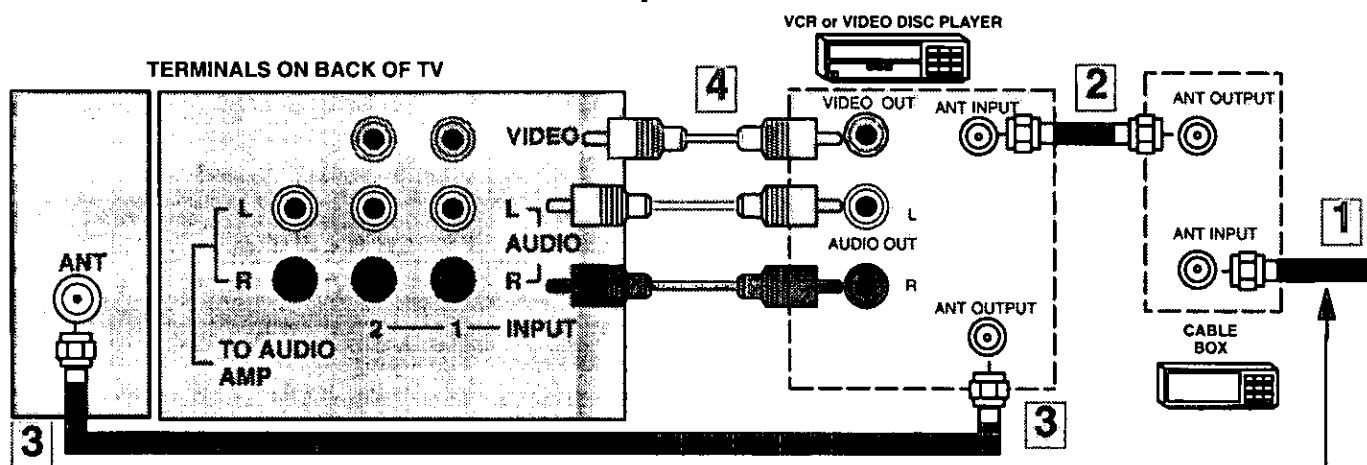


Connection

1. Connect incoming Cable to optional cable box ant input.
 2. Connect a cable from Cable box ant output to VCR ant input.
 3. Connect a cable from VCR ant output to TV ant input.
 4. Connect RCA cables from VCR Audio/Video output to TV Audio/Video input 1 or 2.
- NOTE:** You must select the same VIDEO Mode that the equipment is connected to.

Operation

1. Press the PIP button to display the PIP frame.
2. Press the TV/VIDEO button to select Video mode.
3. Turn VCR ON. **NOTE:** PIP video and Main video source will be the same.
4. Press PLAY button for VCR. **NOTE:** PIP video and Main video source will be from VCR.
5. Press TV/VCR button to display TV video source for Main picture.

Location of Controls (Receiver)

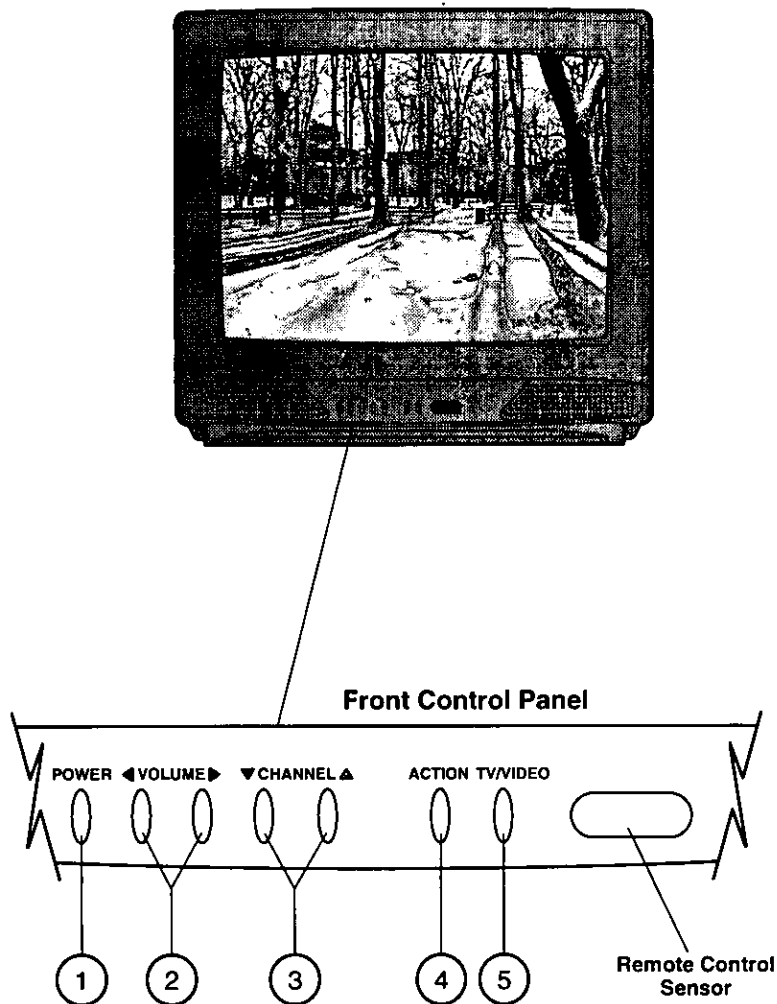

- ① **Power Button** – Press to turn ON or OFF.
- ② **Volume Buttons** – Press to adjust Sound Level. Press to adjust Audio Menus, Video Menus and select operating features when menus are displayed.
- ③ **Channel Buttons** – Press to select programmed channels. Press to highlight desired features when menus are displayed.
- ④ **Action Button** – Press to display Main Menu and access On Screen feature and Adjustment Menus.
- ⑤ **TV/Video Button** – Press to select TV or one of two Video Inputs.

Location of Controls (Remote Control)

Power Button

Press to turn ON or OFF.

TV/Video Button

Press to select TV or one of two Video Inputs, for the Main Picture or the PIP frame (when the PIP frame is displayed).

Volume Buttons

Press to adjust TV sound level. Use with Channel buttons to navigate in menus.

Keypad Buttons

Press desired channel number to randomly access any channel.

R-Tune (Rapid Tune) Button

Press to switch to the previous channel.

VCR Function Buttons

Programmable to operate many brands of VCR's.

TV/VCR/CABLE Switch


This switch is used to select the proper mode when programming Remote Control Infrared codes or operating the TV or external equipment (VCR or Cable Converter box).

PIP Move Button

Press to position PIP frame to any corner of the Main Picture (when PIP frame is displayed).

PIP Freeze Button

Press to stop action in the Main Picture or PIP frame (when the PIP frame is displayed).

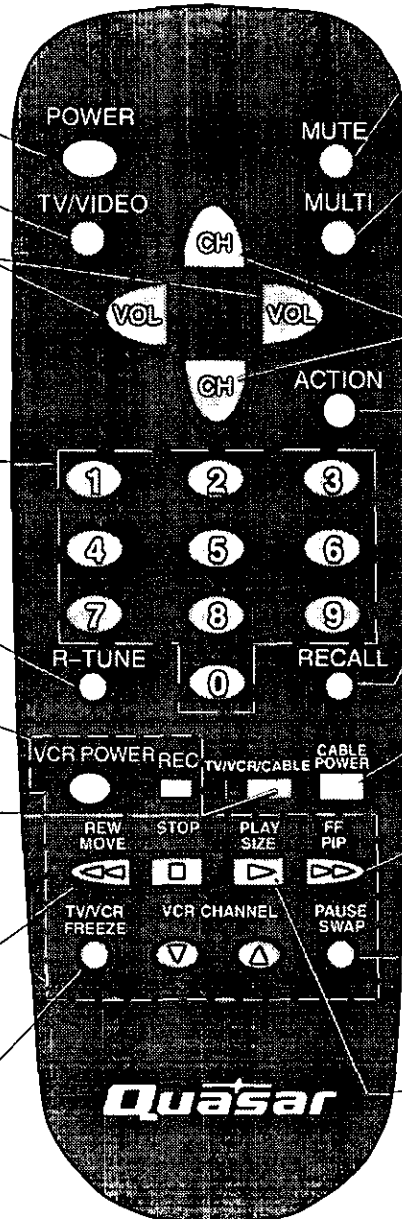

Mute Button

Press to mute sound. A second press resumes sound. Press also to access and delete Closed Caption.

Multi Button

Programmable to operate up to six Remote Control Function buttons simultaneously.

Channel Buttons

Press to select channels. Use with Volume buttons to navigate in menus.

Action Button

Press to display Main Menu and access or exit On Screen feature and Adjustment Menus.

Recall Button

Press to display Time, status of Sleep Timer, Channel, Video Mode, Channel Caption (Station Identifier) and Audio Mode.

Cable Power Button – Programmable to operate selected CATV converter boxes.

PIP (Picture In Picture) Button

Press to display the PIP frame, press again to remove PIP frame.

PIP Swap Button

Press to interchange PIP frame with Main Picture (when the PIP frame is displayed).






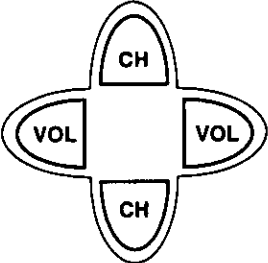
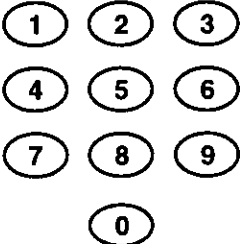


PIP Size Button

Press to select size of PIP frame (when the PIP frame is displayed).

EUR511011A












Remote Control

Quick Reference Functional Key Chart

| KEY | OPERATES | FUNCTION |
|--|---------------------------------------|--|
| POWER  | TV | Turns TV On and Off |
| MUTE  | TV | Mutes TV Audio |
| TV/VIDEO  | TV | Selects the TV Input Mode |
| MULTI  | ALL COMPONENTS | Programmable Button that can operate up to six (6) Remote Functions at once |
| ACTION  | TV | Activates TV Menus |
|  | TV CABLE TV CABLE VCR | Channel Up/Down, Menu Navigation Channel Up/Down Volume Up/Down, Menu Navigation Search for Infrared Code when Programming Remote |
|  | TV VCR CABLE | Selects Channel Selects Code in Game Guard Menu Selects Channel in Channel Caption Menu Selects Channel in Timer Menu Selects Infrared Code when Programming Remote Selects Infrared Code when Programming Remote |
| R-TUNE  | TV | Switches Between Two (2) Channels |
| RECALL  | TV | Displays Channel, Time, and Audio Mode |


Remote Control

Quick Reference Functional Key Chart (cont.)


| KEY | OPERATES | FUNCTION |
|--|--------------------|---|
| TV/VCR/CABLE  | TV VCR CABLE | TV Mode Selection for Remote Control VCR Mode Selection for Remote Control CATV Mode Selection for Remote Control |
| CABLE POWER  | CABLE | Turns Cable On and Off |
| VCR POWER  | VCR | Turns VCR On and Off |
| REC  | VCR | Record |
| STOP  | VCR | Stop |
| VCR CHANNEL  | VCR | VCR Channel Up/Down |
| FF PIP  | TV VCR | PIP ON/Off Fast Forward |
| PLAY SIZE  | TV VCR | PIP Size Play |
| REW MOVE  | TV VCR | PIP Move Rewind |
| PAUSE SWAP  | TV VCR | PIP Swap Pause |
| TV/VCR FREEZE  | TV VCR | PIP Freeze Selects TV/VCR Mode |

Special Functions


R-TUNE

R-Tune Button – Pressing  will switch between the last two channels selected on the numeric keypad.


NOTE: When scanning channels with the CHANNEL UP/DOWN button, pressing the R-TUNE button will switch between the last two channels scanned.

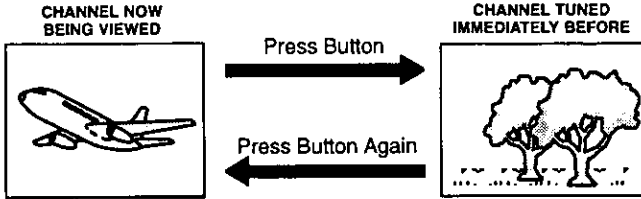

RECALL


Recall Button – Press  to review:

- ① Audio Mode Status
- ② Channel Caption (Station Identifier)
- ③ CH Number Or Video Input Selected
- ④ Sleep Timer Status
- ⑤ Clock Time

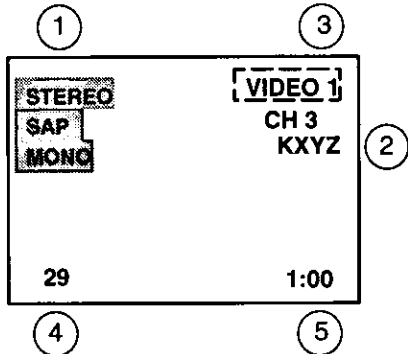

VCR Function Buttons – The VCR FUNCTION buttons have been designed to operate numerous brands of VCRs. The infrared code must be obtained prior to use. (Please refer to Programming the Universal Remote for programming instructions.)

NOTE: The TV/VCR/CABLE switch (located on Remote) must be in the VCR position. The PIP operations with these buttons will be disabled.

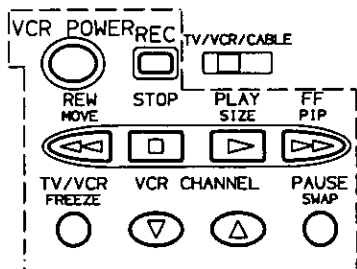


Multi Button

The MULTI button can be programmed to operate up to six (6) Remote function buttons at the same time.

For Example: TV Power/On, VCR Power/On (selected brands) can be operated at the same time with one press of the MULTI button.

Procedure

1. First program the Remote for the selected VCR Infrared access code. Confirm that the Remote Control is compatible with the equipment.
2. Face the Remote Control transmitter away from all equipment remote sensors.
3. Press and hold down the Remote TV Power button, then press and hold down the MULTI button at the same time. Release buttons (All previous commands will be erased.)

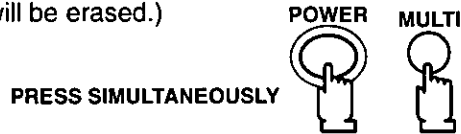


4. Press a maximum of six (6) function buttons on the Remote.

Each button you press is equal to one function. If six remote button functions are entered, all will register in the MULTI button memory in the sequence entered. When less than six remote button functions are entered, press the MULTI button to end the program mode. (Waiting more than 30 seconds without pressing another button will also end the program mode.)

The following is an example of Remote functions that can be programmed into the MULTI button.

- TV Power – For turning TV ON and OFF.
- VCR Power – For turning VCR ON and OFF (selected brands after programming it's Infrared access code, if necessary).

Both can be turned ON or OFF with one press of the MULTI button.

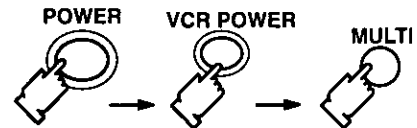

To delete entered functions – Press the Remote TV POWER and MULTI buttons simultaneously. Now you can enter from one to six different Remote functions.




NOTE: You can also program the MULTI button to perform most individual Remote Control button functions. Buttons which continuously perform a function as long as pressed (Volume Up/Down, Channel Up/Down, etc.) cannot be programmed. Only those buttons which perform a function when initially pressed (Power On/Off, Mute, Direct Channel Entry, etc.) can be programmed.

Special Functions (cont.)


Cable Power Button – The CABLE POWER button on the Remote Control has been designed to operate selected brands of Cable boxes. The proper cable box infrared code must be obtained prior to use. (Please refer to Programming the Universal Remote for programming instructions.) The Remote Control TV/VCR/CABLE switch should be in the CABLE position.

NOTE: The CHANNEL UP and DOWN buttons on the Remote may be used for selecting Cable Converter box channels.

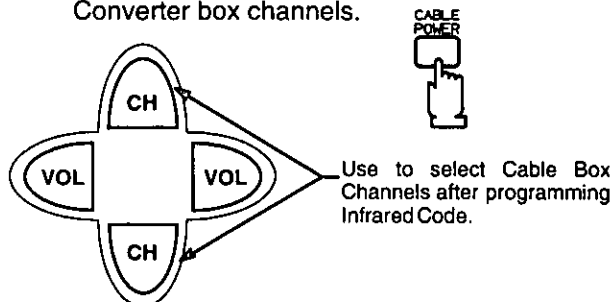

PIP (Picture in Picture) Button – This feature allows monitoring one channel while watching another when a second video source with a tuner is connected (such as a VCR) to the television.

NOTE: When the Main Picture is in Video mode with no signal, the PIP will not operate properly.

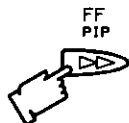


PIP Operation

1. Turn VCR ON and select a desired channel.
2. Place the TV/VCR/CABLE switch into TV position.
3. Press the PIP button (television must be ON). The PIP frame will appear at the position it was last displayed. The Main Picture Video Source and PIP Video Source will display on screen momentarily. Audio will be that of Main Picture.
4. Press the PIP button again to cancel PICTURE IN PICTURE feature.


NOTE: For PIP Video source connection, refer to the PIP Operation Using VCR as Second Tuner section.

Swap Button – Press the SWAP button (when the PIP frame is displayed) to interchange what is being viewed on the Main Picture with that of the PIP frame.

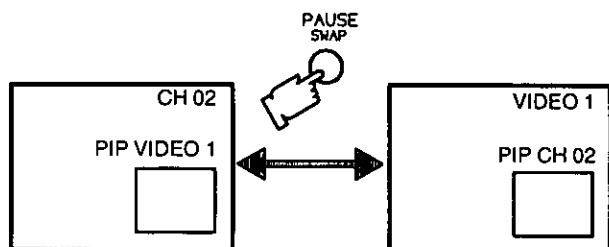


NOTE: Audio will be that of the Main Picture.


Size Button – Press the SIZE button (when the PIP frame is displayed) to choose either the large or small PIP frame.

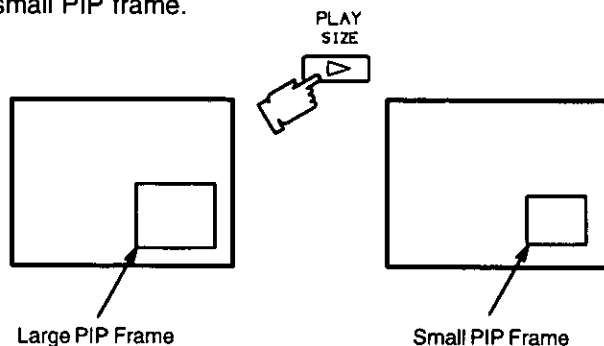


Move Button – The PIP frame may be located at any corner of the Main Picture by pressing the PIP MOVE button (when the PIP frame is displayed).

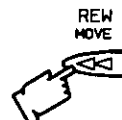

NOTE: Each time MOVE button is pressed (when the PIP frame is displayed), the PIP frame will move (counterclockwise) as illustrated.

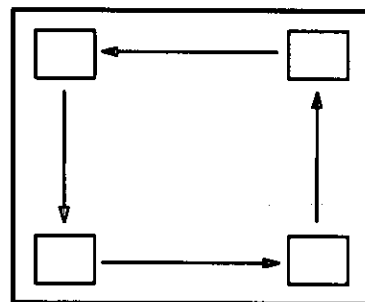


Freeze Button – Press the FREEZE button to stop action in the Main Picture or PIP frame.

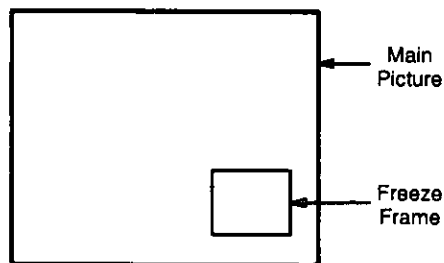

NOTES:

- Pressing the FREEZE button when the PIP frame is not displayed will stop action in the Main Picture and display it on the PIP frame.
- Pressing the FREEZE button when PIP frame is displayed will stop action in the PIP frame, press the FREEZE button again to continue action.
- Press the PIP button to delete PIP frame.


Main Menu Icons

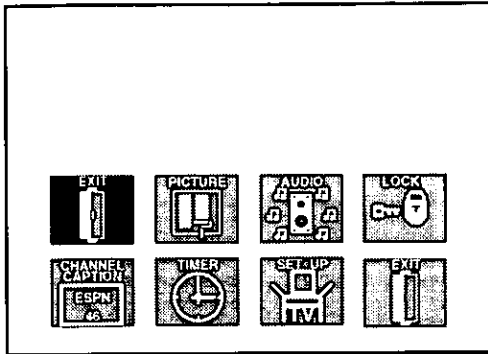

NOTE: When Auto Power On feature is activated, Timer Icon will change to an Exit Icon.





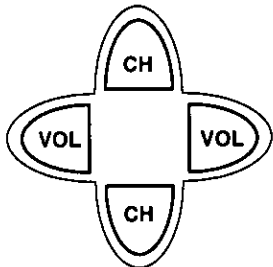





Display and Exit Menus



 CH BUTTONS
Highlight Desired Feature when Menu is Displayed






 
VOL BUTTONS
Selects or Adjusts Features when Menu is Displayed


Located On Remote Control






1. Press  .
2. Press  or  and  or  to select the desired icon.
3. Press  after selecting the desired icon to access sub menus.
4. Press  twice to exit sub menus or press  once while the EXIT icon is highlighted to exit Main Menu.

Language Menu Selection

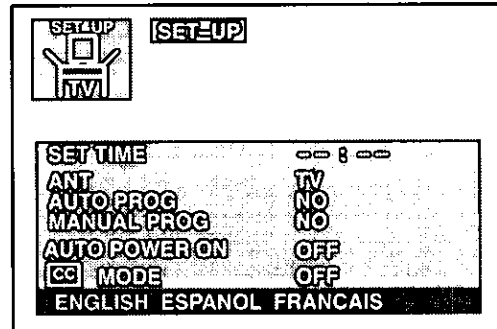The LANGUAGE MENU is factory set to ENGLISH. Follow the instructions to change the Language Menu to SPANISH, FRENCH, and back to ENGLISH.

1. Press  .
2. Press  or  and  or  to highlight the Set-Up Icon.
3. Press  to display the Set-Up Menu.










4. Press  or  to highlight ENGLISH, ESPAÑOL, FRANÇAIS.
5. Press  or  to select ENGLISH, ESPAÑOL, or FRANÇAIS.
6. Press  twice to exit menus.




 

Picture Adjustments

Picture Norm



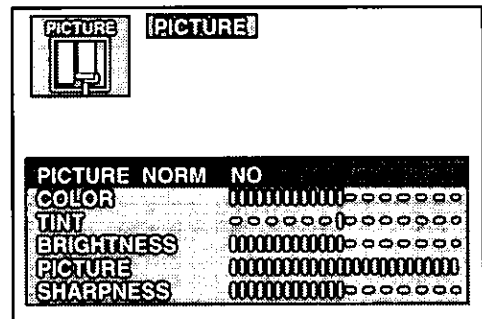



Use to reset Color, Tint, Brightness, Picture, and Sharpness adjustments back to a factory preset level.


1. Press  .
2. Press  or  and  or  to highlight the Picture icon.
3. Press  to display the Picture Adjustment Menu.








4. Press  or  to highlight PICTURE NORM.
5. Press  or  to select "SET" to normalize Color, Tint, Brightness, Picture, and Sharpness.
6. Press  twice to exit menus.

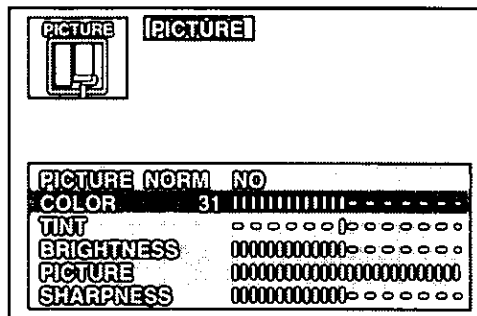Color, Tint, Brightness, Picture, and Sharpness Adjustments

1. Press .
2. Press  or  and  or  to highlight the Picture icon.
3. Press  to display the Picture Adjustment Menu.










4. Press  or  to select the desired Picture Adjustment (Color, Tint, Brightness, Picture, or Sharpness).
 - **COLOR** – Adjust for desired color intensity.
 - **TINT** – Adjust for natural flesh tones.
 - **BRIGHTNESS** – Adjust so dark areas of picture slightly become black for a crisp detail.
 - **PICTURE** – Adjust the white areas of the picture as desired.
 - **SHARPNESS** – Adjust for best clarity of outline detail.
5. Press  or  to adjust your selection.
6. Repeat steps 4 and 5 for the remaining Adjustments.
7. Press  twice to exit menus.




Audio Adjustments

Mode (Stereo/SAP/Mono)

When Audio is broadcast in Stereo or SAP, an On-Screen display will appear on initial "Turn On" and "Channel Change". The available choices will be highlighted.

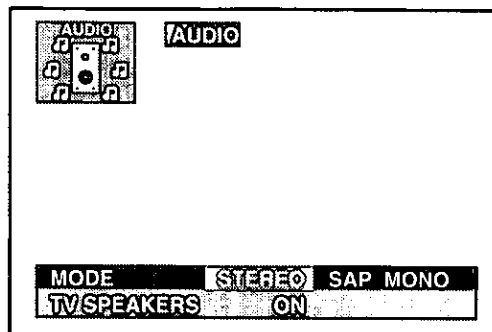




 
1. Press .
2. Press  or  and  or  to highlight the Audio icon.
3. Press  to display the Audio Adjustment Menu.









4. Press  or  to select STEREO, SAP (Second Audio Programming), or MONO. The selected mode will be highlighted.
 - **STEREO** – Two channel audio reception.
 - **SAP** – Second Audio Programming (such as bilingual audio, weather reports, etc.).
 - **MONO** – Use when stereo signal is weak.
5. Press  twice to exit menus.

TV Speakers

 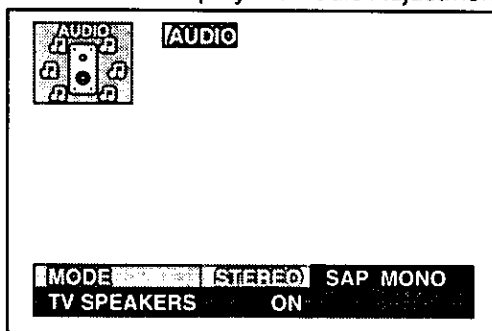This feature is used to turn the internal speakers "ON" or "OFF". It is used when the TV is connected to an External Audio Amplifier. (Refer to "To Audio Amp Connection" section for further information.)

1. Press .
2. Press  or  and  or  to highlight the Audio icon.
3. Press  to display the Audio Adjustment Menu.



 





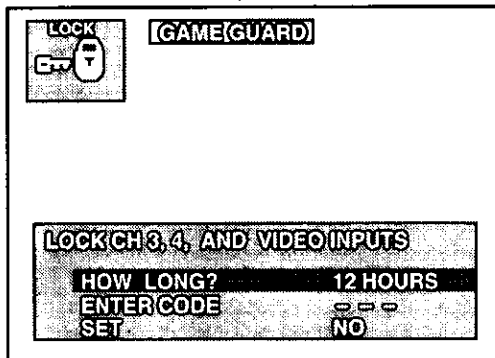
4. Press  or  to highlight TV SPEAKERS.
5. Press  or  to select ON, OFF&VAO or OFF&FAO.
 - **ON** – TV SPEAKERS operate normally.
 - **OFF&VAO** (Variable Audio Output) – TV SPEAKERS off, the sound output varies according to the TV volume. Use the TV remote to control the volume, muting, bass, treble, and balance of the External Amplifier System.
 - **OFF&FAO** (Fixed Audio Output) – TV SPEAKERS off, sound output is not adjustable. The audio is controlled by the External Amplifier System volume control.
6. Press  twice to exit menus.


 
 
Lock


Lock Game Guard

Prevents video games and other video sources from being viewed. Channel 3, 4 and video inputs are locked out for 12, 24 or 48 hours. **NOTE:** Be sure to understand this feature before attempting its use. **Use a code that you will easily remember or write the code on a piece of paper.**

1. Press .
2. Press  or  and  or  to highlight the Lock icon.
3. Press  to display the Lock Menu.




4. "HOW LONG" should already be highlighted. Press  to select the desired amount of time (12, 24 or 48 hours) for Game Guard Lockout to be activated.
5. Press  to highlight ENTER CODE. Then enter a 3 digit code with the Remote Control Keypad. "SET" should be highlighted after entering the last digit. **IMPORTANT NOTE: Use a code you can easily remember or write the code on a piece of paper.**
6. Press  after entering three digit code. "Game Guard Locked" will display On Screen.

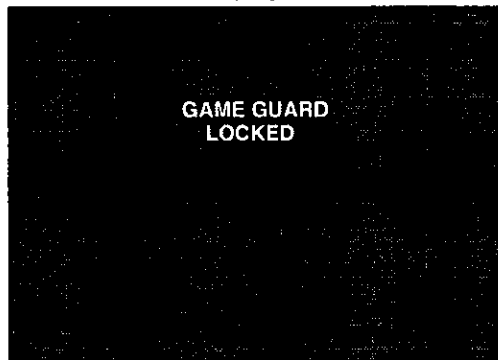


Game Guard Activated

Unlock Game Guard


To unlock the Game Guard feature, repeat steps 1 through 3. Enter the same 3 digit code previously used in step 5 with Remote Control Keypad.

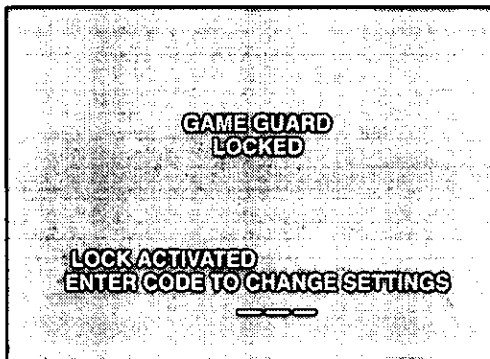

Enter Same 3 Digit Code Previously Used

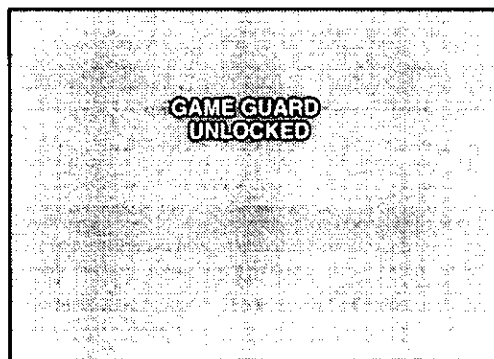


If 3 Digit Code Is The Same

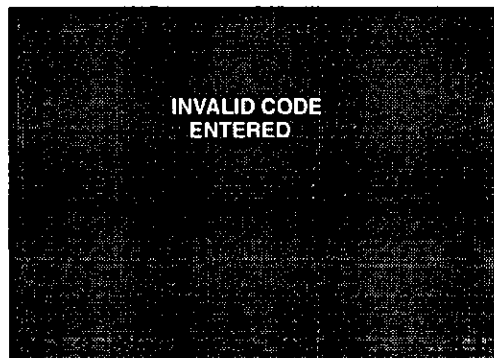


If 3 Digit Code Is Not The Same

Channel Caption

This feature allows you to enter the call names of up to 30 stations into memory (using up to 4 characters for each station). The Channel Caption will then display along with the channel number when changing channels or pressing RECALL.

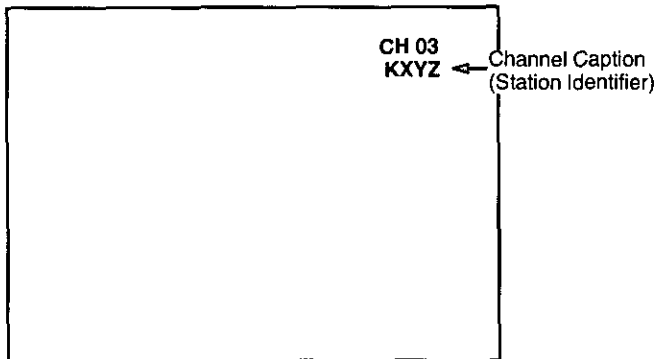

1. Press .
2. Press or and or to highlight the Channel Caption Icon.
3. Press to display the Channel Caption Menu.

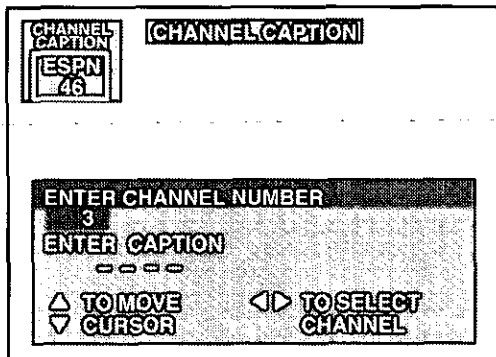

4. Press or or use the Remote Control Keypad to enter the channel number you wish to assign a Station Identifier.
5. Press to highlight ENTER CAPTION.
6. Press or to select first character in Station Identifier. Then press to move cursor to the second position and repeat until the complete Station Identifier is entered (up to 4 characters).
7. Press or to highlight ENTER CHANNEL NUMBER. Then repeat steps 4 through 6 to continue adding Channel Station Identifier(s).
8. Press twice to exit menus.

NOTE: To delete a Channel Caption (Station Identifier) from memory all four character positions in the "ENTER CAPTION" area must display a dash mark (-).

Helpful Hints:

When the Maximum amount of station identifiers are entered, "FULL" will be displayed in the caption position.


Timer Features

Sleep Timer

This feature is used for automatic turn off in 30, 60 or 90 minutes. Display will flash 3, 2 and 1 to indicate the last three remaining minutes prior to turn off. The Recall display will also appear.

NOTE: This feature will be disabled when Auto Power On is activated.

1. Press .
2. Press or and or to highlight the Timer Icon.
3. Press to display the Timer Control Menu.

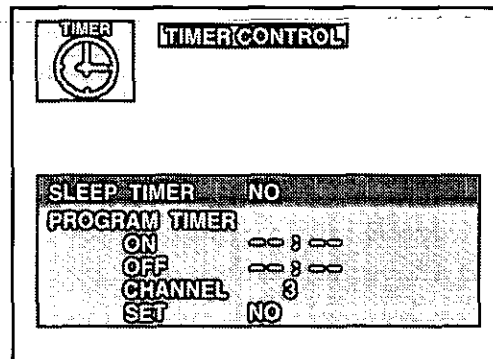

4. Press to select NO, 30, 60 or 90 minutes (Sleep Timer will be activated).
5. Press twice to exit menus.

NOTE: To deactivate Sleep Timer repeat steps 1 through 4. In step 4 select "NO" instead of minutes.

Helpful Hints:

Press the RECALL button to display the remaining minutes for Sleep Timer, the status will display in the bottom left corner.

Timer Features (cont.)


Special Feature:

Automatic turn "OFF" after 90 minutes.

The TV has a special feature that will shut itself **OFF** after 90 minutes when turned **ON** by the program timer unless a function key is pressed during the 90 minutes.


This feature is useful so that the TV will not remain **ON** unattended for an extended period of time.

Programming the **OFF** timer will cancel the automatic **OFF** Special Feature.

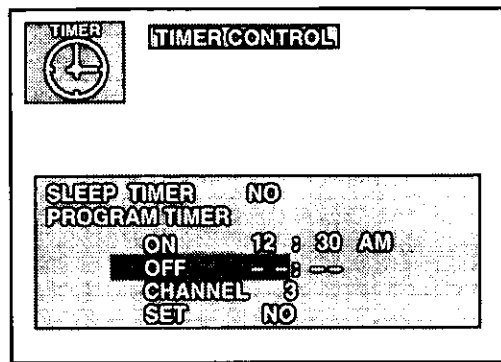


9. Repeat steps 5 through 7 for setting OFF (time).

10. Press to highlight CHANNEL.

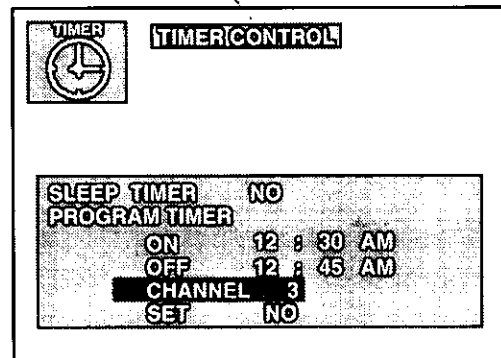

11. Press or or use the Remote Control Keypad to enter the channel number desired when the set turns "ON".

12. Press to highlight SET.

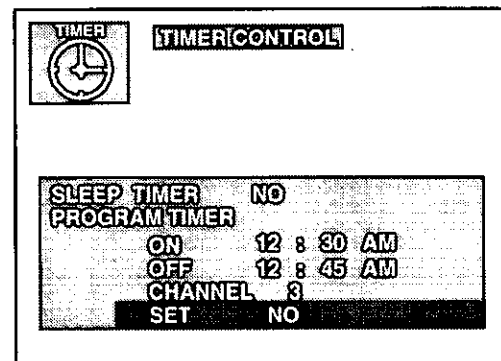

13. Press to select:

- NO – not activated
- ONE DAY – activated
- DAILY – activated

14. Press twice to exit menus.

NOTE: To deactivate Program Timer select NO in step 13.

Helpful Hints:

- If the Program Timer "ON" functions while the set is operating, the set will automatically tune to the channel designated in the Timer Program.

Program Timer


This feature is capable of turning the TV on, tuned to a desired channel and off at a predetermined time (one day or daily). The clock must be set for this feature to operate. (Refer to the Set-Up Menu to set time.)

NOTE: This feature will be disabled when Auto Power On is activated.

1. Press .

2. Press or and or to highlight the Timer Icon.

3. Press to display the Timer Control Menu.

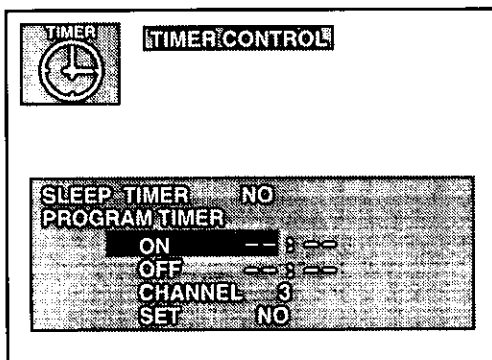







4. Press to highlight ON (time).
5. Press or repeatedly to set hours (set AM/PM accordingly).
6. Press to highlight the minutes position.
7. Press or repeatedly to set minutes.
8. Press to highlight OFF (time).


Set-Up Features







Set Time

Clock (when set) will display on screen at initial "Turn On", after a channel change and when pressing the RECALL button. The time must be set first in order to operate the Program ON/OFF Timer.

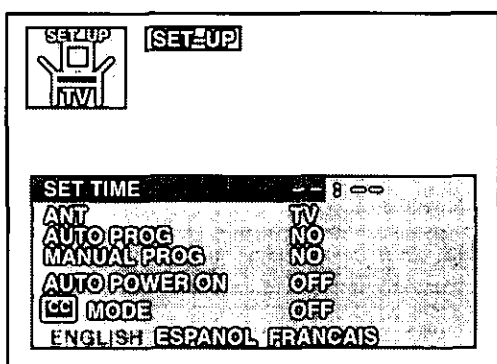NOTE: This feature will be disabled when Auto Power On is activated.

  1. Press  .
2. Press  or  and  or  to highlight the Set-Up Icon.
3. Press  to display the Set-Up Menu.









4. Press  or  to set hours (set AM/PM accordingly).
5. Press  to select minutes position.
6. Press  or  repeatedly to set minutes.
7. Press  twice to exit menus.


Antenna (Ant)





The proper Input mode must be selected for the type of signal at the antenna input.

- TV mode is used when the Receiver is not connected to a cable TV system, for example when using a VHF/UHF antenna (channels 02 – 69).
- Cable mode is used when the Receiver is connected to a Cable TV system and you are not using a cable company converter box (channels 01 – 125).

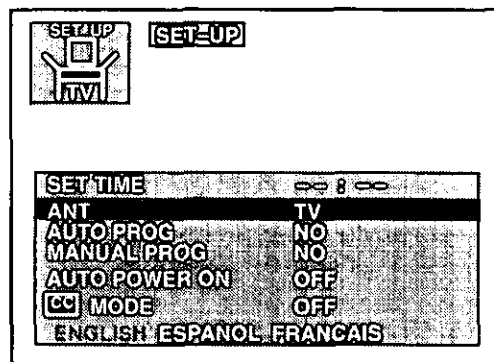NOTE: This feature is disabled when Game Guard Lock is activated.

1. Press  .
2. Press  or  and  or  to highlight the Set-Up Icon.
3. Press  to display the Set-Up Menu.






 



4. Press  to highlight ANT.
5. Press  or  to select TV or CABLE.
6. Press  twice to exit menus.





Auto Prog

This feature allows you to place all channels with a video signal into Channel Scan Memory.

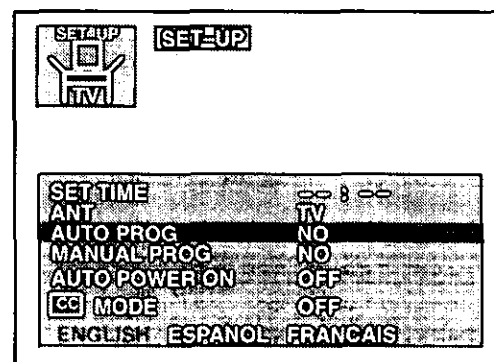NOTE: This feature is disabled when Game Guard Lock is activated.

1. Press  .
2. Press  or  and  or  to highlight the Set-Up Icon.
3. Press  to display the Set-Up Menu.



4. Press  to highlight AUTO PROG.
5. Press  or  to start Auto Programming. Channels will automatically advance until all channels have been scanned.
6. Press  twice after completion of Auto Programming to exit menus.







NOTE: Channel numbers with signal present will turn blue which indicates stored in Channel Scan Memory.


Set-Up Features (cont.)


 
 
Manual Prog


This feature allows you to select which channels are placed into Channel Scan Memory



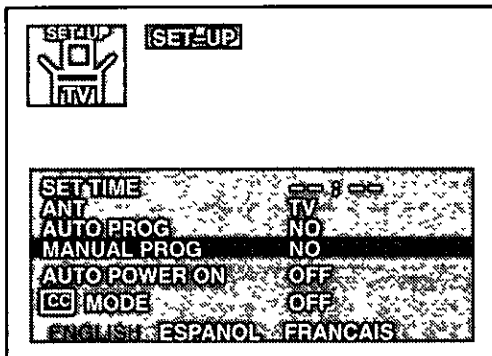


NOTE: This feature is disabled when Game Guard Lock is activated.

- 1 Press 
- 2 Press  or  and  or  to highlight the Set-Up Icon
- 3 Press  to display the Set-Up Menu

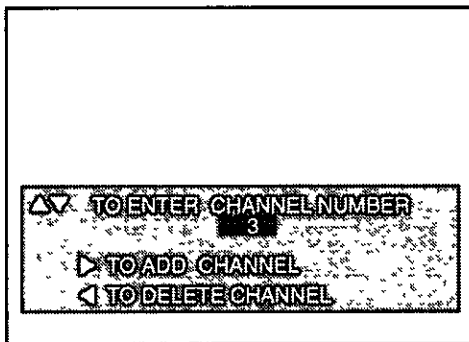

- 4 Press  to highlight MANUAL PROG
- 5 Press  or  to display the Manual Programming Menu


 







- 6 Use the  or  or the Remote Keypad "0 through 9" buttons to select channels
- 7 Press  to **add** channel(s) to memory (Blue) Press  to **delete** channels from memory (Yellow)
- 8 Repeat steps 6 and 7 to continue adding or deleting channels
- 9 Press  twice to exit menus





Auto Power On

This feature allows the user to power up the TV at the same time as the cable box (or other components) Of course, the TV must be plugged into the cable box

NOTE: When this feature is activated (on), Timer features will be disabled.

 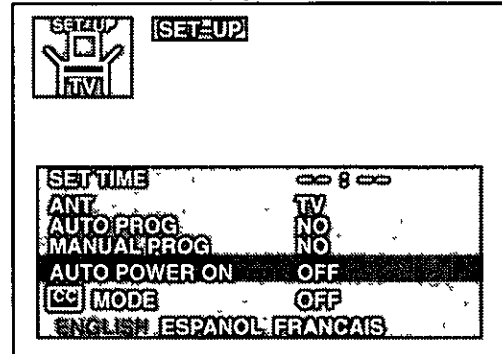- 1 Press 
- 2 Press  or  and  or  to highlight the Set-Up Icon
- 3 Press  to display the Set-Up Menu



- 4 Press  to highlight AUTO POWER ON
- 5 Press  or  to select SET or OFF
- 6 Press  twice to exit menus







CC (Closed Caption) Mode


This Receiver has a built in decoder that provides a visual depiction of the audio portion of a television program, in the form of written words across the screen (White or Colored letters on a black background) It allows the viewer to read the dialogue of a television program or other information




When the Closed Caption is in the OFF Mode:

The viewer may display closed caption by pressing

MUTE  on the remote control. Press again to delete.

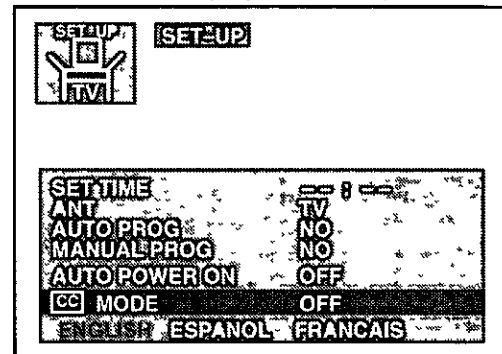- 1 Press 
- 2 Press  or  and  or  to highlight the Set-Up Icon
- 3 Press  to display the Set-Up Menu



- 4 Press  to highlight CC MODE
- 5 Press  to select OFF, C1, or C2
- 6 Press  twice to exit menus

Programming The Universal Remote Control

VCR

Preferred Procedure – Code Known Programming Universal Remote Using Infrared Access Codes for VCRs

- Determine brand of VCR.
- Identify code(s) associated with the brand in the infrared code index for VCRs (located in this manual).

Procedure

1. Place the Remote TV/VCR/CABLE switch into the VCR position.



2. Press and hold VCR POWER button down on Universal Remote.



3. Enter 2-digit code using numeric keypad (0 through 9 buttons). Release VCR Power button. The Universal Remote is now programmed.

NOTE: Some brands have multiple codes. Repeat procedure using each code listed until VCR responds correctly.

Alternate Procedure – Code Unknown Programming Universal Remote Using the “Sequence Method” for VCRs

- Confirm VCR is plugged in and operating properly, then turn OFF.

Procedure

1. Place the Remote TV/VCR/CABLE switch into the VCR position.



2. Press and hold the VCR POWER button down on Universal Remote.



3. Press VOL RIGHT button repeatedly. Check for the VCR to turn ON after each press. When the VCR turns ON, release VCR Power button. The proper infrared code has now been accessed.

NOTES:

- It may take several attempts before the correct code is found.
- The VOL LEFT button can be used to return to a code that was accidentally passed by.
- Some Remote Controls may have unique operating functions for some buttons. For Example: The POWER button may only turn the VCR OFF as opposed to both ON and OFF. It will then be necessary to modify the procedure. Turn the VCR ON and repeatedly press the VOL RIGHT button until the VCR turns OFF.

NOTE: When operating equipment (VCR or Cable box) with the Universal Remote Control, the TV/VCR/CABLE switch should be set to the same position where the Access Code was first programmed for the equipment. Otherwise, leave the switch in the TV position.

Cable Box

Preferred Procedure – Code Known Programming Universal Remote Using Infrared Access Codes for Cable Boxes

- Determine brand of Cable box.
- Identify code(s) associated with the brand in the infrared code index for Cable boxes (located in this manual).

Procedure

1. Place the Remote TV/VCR/CABLE switch into the CABLE position.



2. Press and hold the CABLE POWER button down on Universal Remote.



3. Enter two digit code using numeric keypad (0 through 9 buttons). Release CABLE Power button. The Universal Remote is now programmed. **Use the Remote CHANNEL UP/DOWN buttons for selecting Cable Box channels.**

NOTE: Some brands have multiple codes. Repeat procedure using each code listed until Cable Television Converter box responds correctly.

Alternate Procedure – Code Unknown Programming Universal Remote Using the “Sequence Method” for Cable Boxes

- Confirm Cable box is plugged in and operating properly, then turn OFF.

Procedure

1. Place the Remote TV/VCR/CABLE switch into the CABLE position.



2. Press and hold the CABLE POWER button down on Universal Remote.



3. Press VOL RIGHT button repeatedly. Check for the Cable box to turn ON after each press. When the Cable box turns ON, release Cable Power button. The proper infrared code has now been accessed.

NOTES:


- It may take several attempts before the correct code is found.
- The VOL LEFT button can be used to return to a code that was accidentally passed by.
- Some Remote Controls may have unique operating functions for some buttons. For Example: The POWER button may only turn the Cable box OFF as opposed to both ON and OFF. It will then be necessary to modify the procedure. Turn the Cable box ON and repeatedly press the VOL RIGHT button until the Cable box turns OFF.

VCR and Cable Box Infrared Codes Index

The Universal infrared Remote Control is capable of operating many brands of VCRs and Cable Boxes after entering the proper infrared code.

NOTE: The Universal Remote Control memory is limited. Some models of VCRs or Cable Boxes may not operate. The Universal Remote Control is not designed to control all features that are available in all models.

Infrared Code Index for VCRs

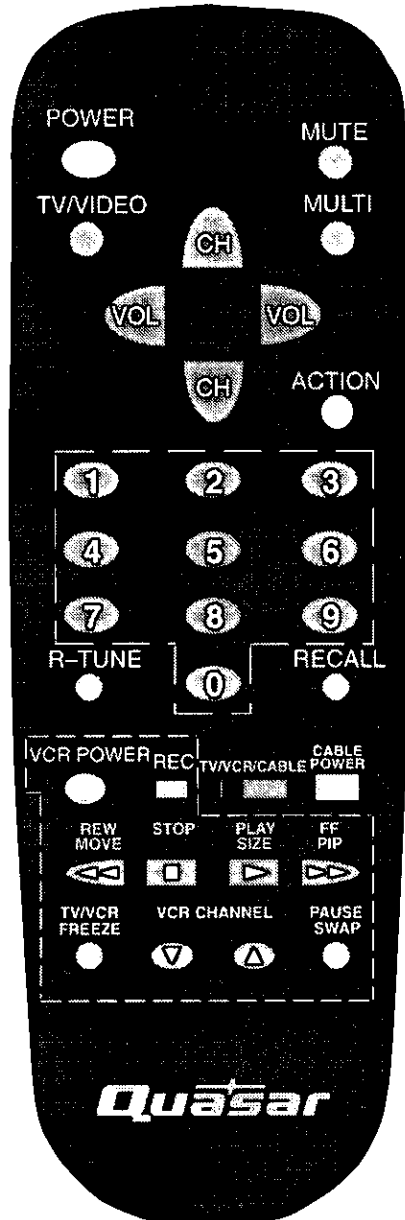

















| VCR Brand | Code(s) | VCR Brand | Code(s) |
|-----------------|------------------------|-----------------|--------------------|
| Audio Dynamics | 14, 16 | NEC | 02, 14, 16, 30 |
| Broksonic | 10 | Panasonic | 00, 01 |
| Canon | 00, 01 | Pentax | 05 |
| Capehart | 01 | Philco | 00, 29 |
| Citizen | 09 | Philips | 00, 29 |
| Craig | 12 | Pioneer | 05 |
| Curtis Mathes | 00, 08, 15 | Quasar | 00, 01 |
| DBX | 14, 16 | RCA | 05, 07, 08, 28, 35 |
| Emerson | 10, 20, 34, 35, 36, 37 | Realistic | 00, 02, 06, 12, 15 |
| Fisher | 12, 18, 19 | Samsung | 07, 32 |
| Funai | 15 | Sanyo | 02, 12 |
| GE | 00, 07, 08, 32 | Scott | 04, 13, 33, 36 |
| Goldstar | 09 | Sears | 02, 05, 18, 19 |
| Hitachi | 05, 35, 36 | Sharp | 06, 24 |
| Instant Replay | 00 | Sony | 17, 26, 33, 34 |
| JC Penney | 00, 02, 05, 14, 16, 30 | Sylvania | 00, 29 |
| JVC | 02, 14, 16, 30 | Symphonic | 15 |
| Kenwood | 02, 14, 16, 30 | Tashiko | 09 |
| Magnavox | 00, 29 | Tatung | 30 |
| Marantz | 02, 14, 16, 29, 30 | Teac | 15, 30 |
| Marta | 09 | Teknika | 21 |
| Memorex | 00, 12 | Toshiba | 05, 13 |
| MGA | 04, 27 | Vector Research | 14, 16 |
| Minolta | 05 | Video Concepts | 14, 16 |
| Mitsubishi | 04, 27 | Wards | 06 |
| Montgomery Ward | 06 | Yamaha | 02, 14, 16, 30 |
| Multitech | 07, 15, 32 | Zenith | 11, 17 |

Infrared Code Index for Cable Box

| Brand of Cable Boxes | Code(s) | Brand of Cable Boxes | Code(s) |
|----------------------|--------------------------------|----------------------|--------------------------------|
| G.I. | 04, 05, 15, 23, 24, 25, 30, 36 | Pioneer | 18, 20 |
| Hamlin | 12, 13, 34 | RCA | 27 |
| Jerrold | 04, 05, 15, 23, 24, 25, 30, 36 | Regency | 02 |
| Macom | 27 | Scientific Atlantic | 03, 22 |
| Magnavox | 19, 26, 28, 29, 32, 33, 40, 41 | Sylvania | 11 |
| Oak | 14, 16, 18 | Texscan | 10, 11 |
| Oak Sigma | 16 | Tocom | 17, 21 |
| Panasonic | 27, 39 | Unika | 31 |
| Philips | 19, 26, 28, 29, 32, 33, 40, 41 | Viewstar | 19, 26, 28, 29, 32, 33, 40, 41 |
| | | Zenith | 01, 42 |

Troubleshooting Chart

Before you call for service, determine the symptoms and make a few simple checks shown below

| Symptoms | | Check |
|--|---|---|
| Picture | Sound | |
|  SNOWY PICTURE |  NOISY SOUND | - ANTENNA LOCATION AND/OR CONNECTION |
|  MULTIPLE IMAGE |  NOISY SOUND | - ANTENNA DIRECTION AND/OR LOCATION - ANTENNA LEAD-IN WIRE |
|  INTERFERENCE |  NOISY SOUND | - ELECTRICAL APPLIANCES, LIGHTS, CARS AND TRUCKS - DIATHERMY AND OTHER MEDICAL EQUIPMENT |
|  NORMAL PICTURE |  NO SOUND | - VOLUME CONTROL SETTING - MUTE CONTROL (IF APPLICABLE) - TRY ANOTHER CHANNEL - TV SPEAKERS SWITCH (IF APPLICABLE) IN THE OFF POSITION |
|  NO VIDEO |  NOISY SOUND | - TV OR CABLE TUNING MODE SET TO PROPER SETTING - ANTENNA INPUT CORRECT (IF APPLICABLE) |
|  NO PICTURE |  NO SOUND | - CHECK THAT AC POWER LINE IS PLUGGED INTO AC OUTLET - BRIGHTNESS & AUDIO CONTROLS SET PROPERLY - TRY ANOTHER CHANNEL |
|  NO COLOR |  NORMAL SOUND | - COLOR CONTROL SETTINGS - TRY ANOTHER CHANNEL |
|  BLACK PICTURE |  NO SOUND | - RECEIVER IN VIDEO MODE WITH NO SIGNAL |

Panasonic Consumer Electronics
Company, Division of Matsushita
Electric Corporation of America
One Panasonic Way
Secaucus, New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric
of Puerto Rico Inc ("PSC")
Ave 65 de Infanteria, Km 9 5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985
Tel (787) 750-4300
FAX (787) 768-2910