


# Panasonic®

## Assembly Instructions TY-S42PX20U TY-S50PX20U Display stand

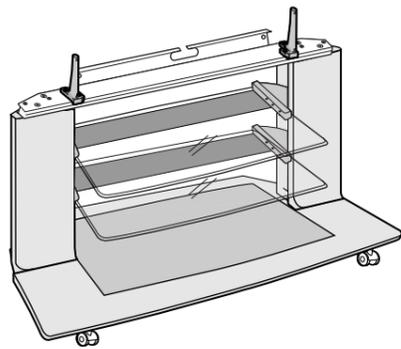

The tools required:  
Plus (Phillips) (+) screwdriver

### IMPORTANT

A study of the assembly instructions will not only save you time, but may prevent possible damage to your new stand.

Assistance may be required for some assembly procedures.

**CAUTION :** THIS STAND IS DESIGNED ONLY FOR USE WITH A PANASONIC PLASMA TV.

**APPLIED MODEL :** TH-42PX20, TH-50PX20

Use with other appliances may result in instability causing possible injury.

### Your hardware pack contains / Replacement parts

Assembly screws THEA118 × 4	① Glass shelf fastening screws THEA102N × 8	② Glass shelf support fastening screws (Black screws) (× 4) Rear cord cover fastening screws (Black screws) (× 3)	③
Support pole fastening screws XST5+12 × 4	④ Assembly screws (Black screws) ⑤ XYN5+F55FZ × 4	XSB4+12FZ × 7	
Support pole (Right) TBLA3196 × 1	⑥ Support pole (Left) TBLA3197 × 1	⑦ Cord clamps TBLB3111 × 6	⑧
Glass shelf supports (Right) TBLA3194 × 2	⑨ Glass shelf supports (Left) TBLA3195 × 2	⑩ Casters (Wheels) TBLB3074 × 4	⑪

### Replacement parts

Bottom cap (Right) TBLB3107 × 1	Bottom cap (Left) TBLB3108 × 1	Screws XTB4+10B × 4
------------------------------------	-----------------------------------	------------------------

### To maintain appearance we recommend the following:

Painted Surfaces: Use a damp cloth for cleaning. Do not use any abrasive or chemically treated cleaners.  
NOTE: As with all indoor furniture, this unit should not be exposed to direct sunlight, extreme temperatures or moisture, as this can result in serious irreparable damage.


**For improvement purposes, design and specifications are subject to change without notice.**

## Placement

### STEP 1 Plasma TV installation and fastening method

- \* Install the plasma TV by referring to the following illustration.
- \* Do not hold the plasma TV at the bottom of the front panel.


1. Align the support pole insertion holes of the plasma TV with the support poles ⑥ ⑦ (1 each), and lower the plasma TV until the poles stop. Slightly lift the left and right sides of the plasma TV and remove the corner protection pads attached to the bottom.
2. Fasten the plasma TV and support poles ⑥ ⑦ using assembly screws (black screws) ⑤ (× 4)

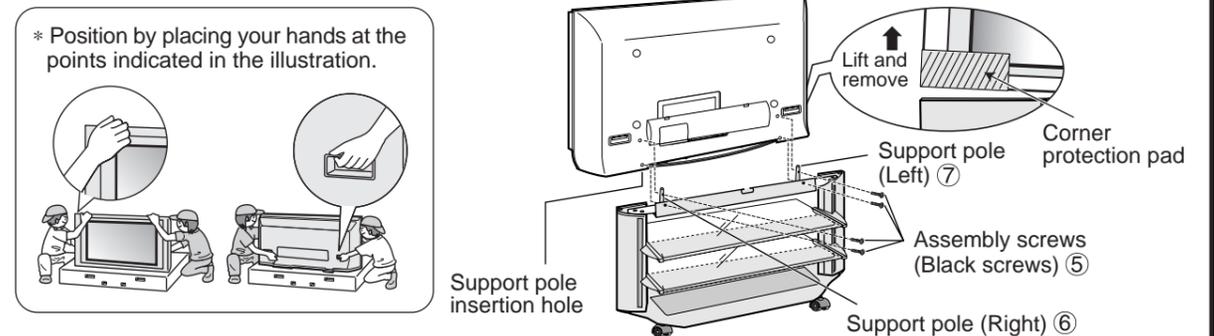

### STEP 2 To use with equipment such as a video deck

- \* To thread wiring, remove the terminal cover and pass wires along the grooves in the rear cord cover, along the grooves in the left and right side panels, and along the grooves in the cord holder under the glass shelf.
- \* Some equipment may have short cords. In such an instance, thread the wiring over the minimum distance, as indicated by the dotted line in the diagram.
- \* After threading wiring, fasten with cord clamps ⑧ (× 6) so that the cords do not protrude from the grooves. Finally, attach the terminal cover. If there are any cord clamps ⑧ left over, store them carefully. You will need them if you use the unit to house more equipment in the future.

\* Wire over the minimum distance

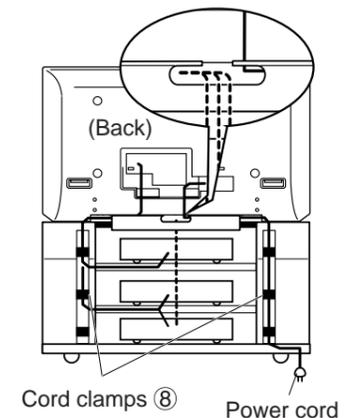

\* The top glass shelf is specifically for the center speaker and AV amp. If you place a video deck here, it may badly affect the picture.

### REPLACEMENT PARTS LIST

Ref.	Description	TY-S42PX20U Qty.	Part No.	TY-S50PX20U Part No.
①	Top crosspiece	1	TBLA0116	TBLA0117
②	Bottom panel	1	TBLH0548	TBLH0550
③	Side panel (Left)	1	TBLA0104	TBLA0104
④	Side panel (Right)	1	TBLA0103	TBLA0103
⑤	Rear cord cover	1	TBLB3080	TBLB3110
⑥	Glass shelf	1	TKGA0127	TKGA0129
⑦	Cord holder	1	TBLA3184	TBLA3217

**When making a part (s) inquiry or for out of warranty purchases please quote part no. & description.**

#### PANASONIC SERVICES COMPANY

20421 84th Avenue South, Kent, Washington 98032 Tel. : 1-800-833-9626 Fax : 1-800-237-9080  
©2003 Matsushita Electric Industrial Co., Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.


#### Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3 Tel. : (905) 624-8447  
©2003 Matsushita Electric Industrial Co., Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

## Assembly


### STEP 1 Attaching of bottom panel, side panels and casters

1. Securely insert the casters ⑪ (× 4) into the bottom panel.
2. Align the dowels of the side panels (left and right) with the dowel holes in the bottom panel and insert.

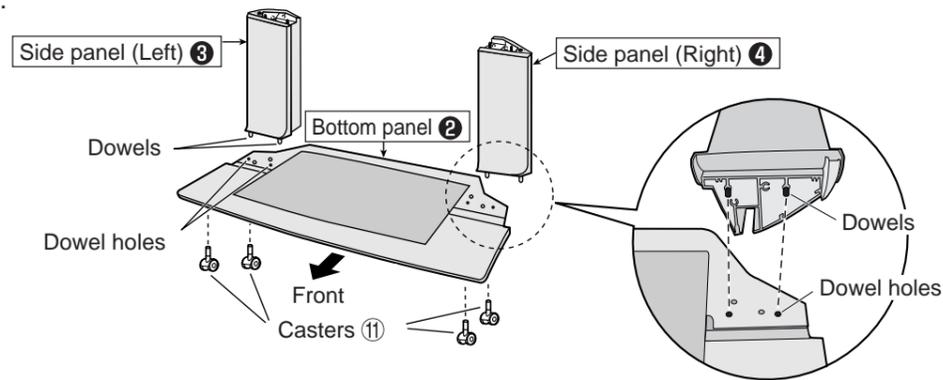



### STEP 2 Attaching of top crosspiece and rear cord cover

1. Align the support pole (right) ⑥ with the notch on the right side of the top crosspiece, and securely fasten with the support pole fastening screws ④ (× 2) using a Phillips head (+) screwdriver. Fasten the support pole (left) to the left side in the same manner.
2. Insert the rear cord cover fastening screws (black screws) ③ (× 3) into the screw holes on the back of the top crosspiece and partially fasten. Slide the 3 notches in the rear cord cover behind the screws and securely fasten the screws.
3. Align the dowels of the side panels (left and right) with the dowel holes in the top crosspiece and insert. Securely fasten with assembly screws ① (× 4).

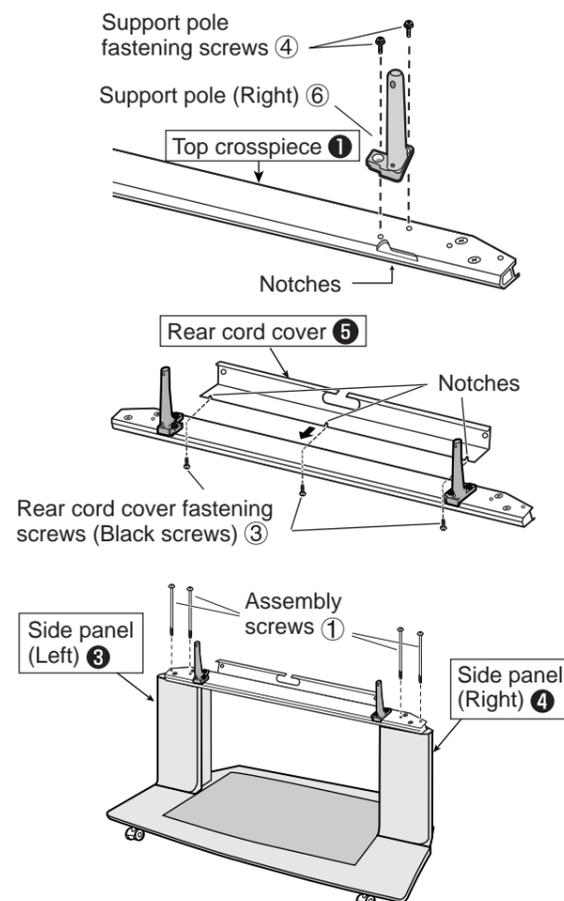

### STEP 3 Attaching of glass shelf and cord holder

1. Align the dowels in the glass shelf supports (left) ⑩ (× 2) with the dowel holes in the side panel (left) and insert. Securely fasten with the glass shelf support fastening screws (black screws) ③ (× 1).
2. Attach the glass shelf supports (right) ⑨ in the same manner.
3. Insert a cord holder in parallel with the glass shelf supports (left and right), and align the dowels of the cord holder with the dowel holes in the glass shelf supports. Attach the other cord holder to the other glass shelf supports in the same manner.
4. Attach the caution label to one glass shelf on the right side, facing the front. Insert the glass shelf in parallel with the grooves in the glass shelf supports (left and right), and securely fasten to the bottom of the (left and right) glass shelf supports using the glass shelf fastening screws ② (× 4). Fit the other glass shelf in the same manner.

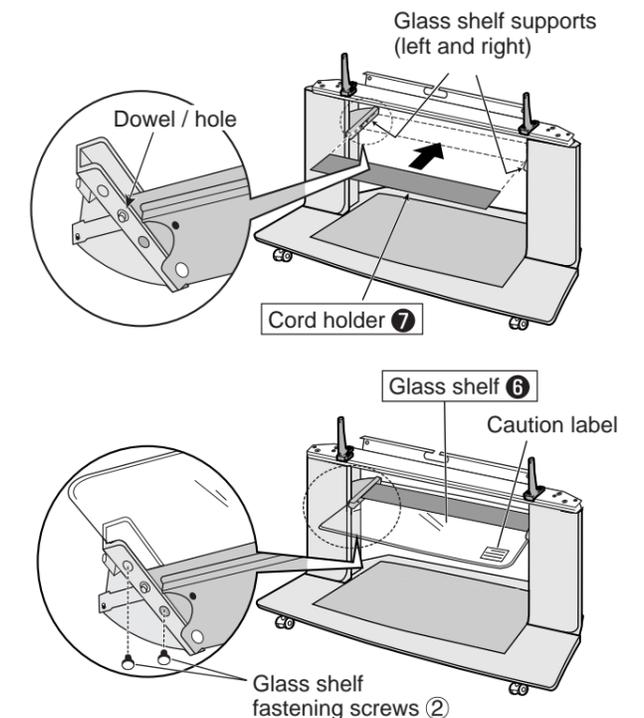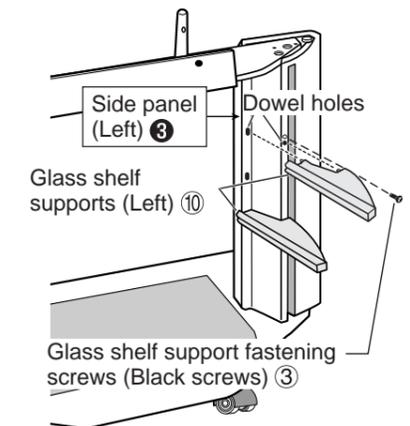

The tools required:

Plus (Phillips) (+) screwdriver

**\* Do not use electric powered screwdrivers.**

\* Position the glass shelf such that the caution label is on the top surface, on the near side.  
\* Do not load either glass shelf with equipment weighing over 12 kg (26 lb.). Do not load the bottom storage area with equipment weighing over 20 kg (44 lb.).