 
Panasonic

Wall Mount Bracket WV-Q108AE

Operating Instructions

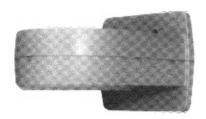

Before attempting to connect or install this product, please road these instructions carefully and save this manual for future use.

N1199-0

YWV8QA5355AN

Printed in Japan (N): 19

FEATURES

The Wall Mount Bracket WV-Q108AE is provided for mounting the Combination Camera WV-CS850 or WV-CS854 onto the wall.

PRECAUTIONS


- Fasten the bracket to a ceiling strong enough to support the carnerá weight (appróx. 3 kg).
- Wipe the bracket regularly using a soft and dry cloth, or a cloth moistened with a water solution of an ordinary kitchen detergent.
- Do not use chomicals for cleaning the enclosure as it may damage the surface.
- All the necessary steps required for installing this product must be taken by a qualified service person or system installer.
- . Be sure to use the Fall Prevention Wire.

The model numbers in this Operating Instructions are shown without suffix.


PLACES OF INSTALLATION

There are various ways of installing the camera as shown below.


Wall Box

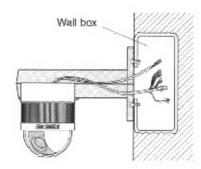

Wood Siding Board

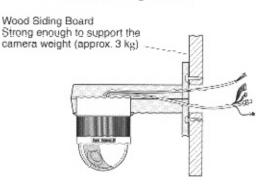


Concrete

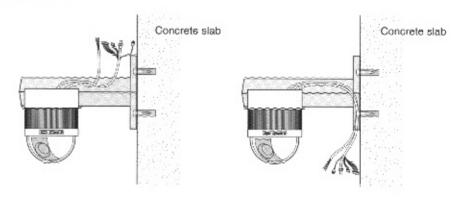


INSTALLATION


Make four holes in the wall using the template (supplied).

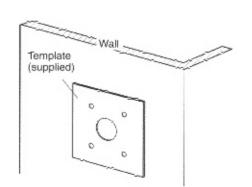


2 Wrap the camera cables with the Protection Cover (supplied) as appropriate to the Diecast Case.

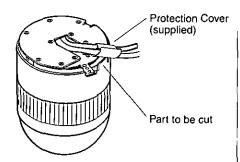

 Remove the Mounting Screw (M3, supplied), pull up the Camera Mounting Angle off the camera, and turn the camera counterclockwise.

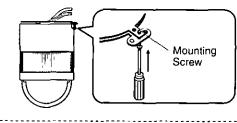


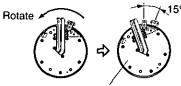


Remove the Camera Mounting Angle by pulling up.

Cut the Diecast Case as shown.

Note: Be sure to protect the Video and Power Cables with the Protection Cover (supplied).

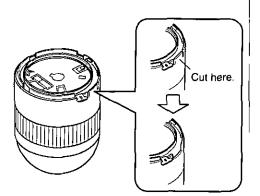


5 Remove the Decoration Cover from the bracket by pressing it at the points shown below.

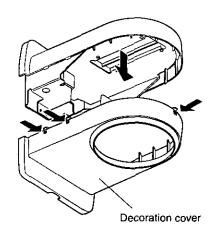


Fix the Camera Mountiing Angle (supplied with the camera) to the bracket with the four Camera Mounting Angle Fixing Screws (M4×L8, supplied).


Note: Be sure to fix the Camera Mounting Angle in the up direction as shown.

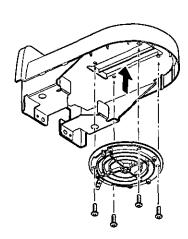

7 Fasten the backet on the wall with four screws (not supplied).

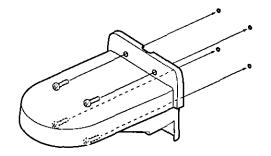


Connect the wires as appropriate to the way in which the bracket is fixed

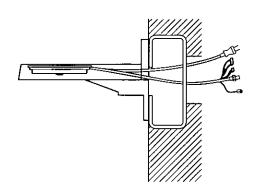

Place the removed Decoration Cover back on the bracket and camera


Note Push the Decoration Cover up till it fits over the bracket with a click

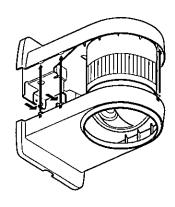

9 Suspend the Fall Prevention Wire from the Camera Mounting Angle

Notes

- Make sure that the wire matches the Fall Prevention Wire Fixing Angle
- . The bracket is not shown in the illustration.

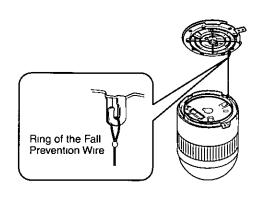

SPECIFICATIONS

Ambient Operating Temperature Dimensions

10°C - +50°C (14°F - 122°F)

165(W) x 140(H) x 217 5 (D) mm

[6-1/2(W) x 5-1/2 (H) x 8-9/16(D)]


Weight 650 g (1 43 lbs)

Weight and dimensions indicated are approximate Specifications are subject to change without notice

Attach the camera to the Camera Mounting Angle, turn the camera clockwise, and tighten the Mounting Screw (M3, supplied)

Notes

- Tigthen the Camera Fixing Screw with a screwdriver
- In attaching the camera to the Camera Mounting Angle, loosen the Camera Fixing Screw (M3), then tighten it back with a screwdriver while keeping it pushed up
- . The bracket is not shown in the illustration

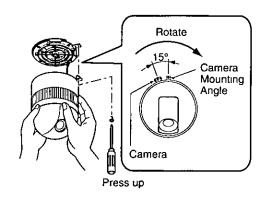

*STANDARD ACCESSORIES

Camera Mounting Angle Fixing Screw 4 pcs
Template 1pc
Protection Cover 1pc

Matsushita Electric Industrial Co., Ltd.

Central P O Box 288, Osaka 530-91, Japan