

	KEY7	KEY6	KEY5	KEY4
P60	*1 MONITOR	RETURN	*2 GROUP	-
P61	DISP	TOPMENU	FWD >>	REW    <<
P62	LEFT <	DOWN ▽	RIGHT >	UP △
P63	STOP	PAUSE	MENU	ENTER

LA85 JAPAN MODEL	W6002	W6006	W6009
LA85 EXCEPT JAPAN MODEL	W6002	W6006	W6010
PA65 JAPAN MODEL	W6002	W6008	W6009S
PA65 EXCEPT JAPAN MODEL	W6002	W6008	W6010

