











# SIGNAL LINES

	MAIN SIGNAL LINE		CD SIGNAL LINE		AM SIGNAL LINE		PLAYBACK SIGNAL LINE
	FM OSC SIGNAL LINE		AM OSC SIGNAL LINE		FM & AM SIGNALS LINE		RECORDING SIGNAL LINE
	FM SIGNAL LINE		AUX SIGNAL LINE		CD-DA (AUDIO/VIDEO) SIGNAL LINE		

( ) INDICATES THE PIN NO. OF THE RIGHT CHANNEL