



## Front panel controls

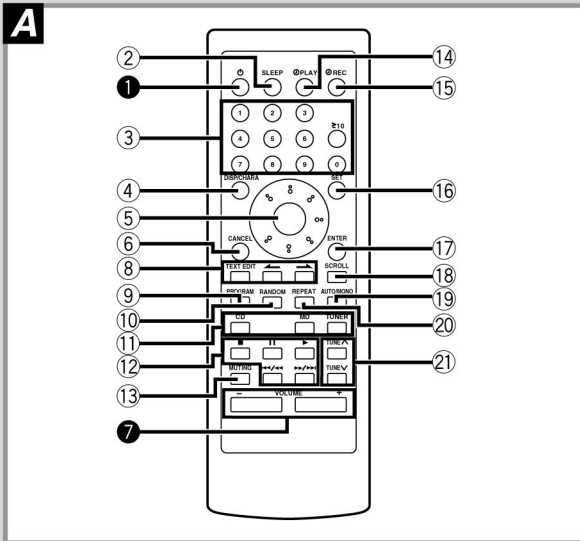

### A Remote control

Buttons ① and ⑦ function in the same way as the controls on the main unit.

- ② Sleep timer button (SLEEP)
- ③ Numbered buttons
- ④ Display mode/Character select button (DISP/CHARA)
- ⑤ Jog dial
- ⑥ Program cancel button (CANCEL)
- ⑧ Text editing buttons (TEXT EDIT)
- ⑨ Program button (PROGRAM)
- ⑩ Random button (RANDOM)
- ⑪ Input select buttons (CD, MD, TUNER)
- ⑫ Basic operating buttons  
Function changes according to the source.
- ⑬ Muting button (MUTING)
- ⑭ Play timer button (⏪ PLAY)
- ⑮ Record timer button (⏩ REC)
- ⑯ Set button (SET)
- ⑰ Enter button (ENTER)
- ⑱ Scroll button (SCROLL)
- ⑲ FM mode button (AUTO/MONO)
- ⑳ Repeat button (REPEAT)
- ㉑ Tuning buttons (TUNE^, TUNE^v)

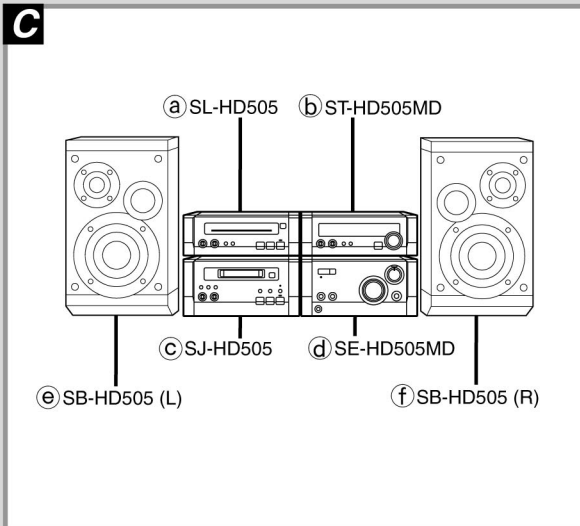

### B Installation

- a CD player
- b Tuner
- c MD deck
- d Amplifier
- e Left speaker
- f Right speaker














#### Note

Do not put the CD player and MD deck on the amplifier. Heat from the amplifier can damage your discs.

#### Caution

**Use the speakers only with the recommended system. Failure to do so can damage the amplifier and speakers, and can cause fire. Consult a qualified service person if damage occurs or if a sudden change in performance is apparent. Do not attach these speakers to walls or ceilings.**

These speakers are designed to be used close to a television, but the picture may be affected in some cases. If this occurs, turn the television off for about 30 minutes. The television's demagnetizing function should correct the problem. If it persists, move the speakers further away from the television.

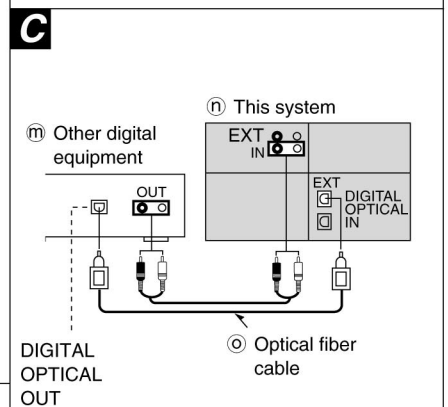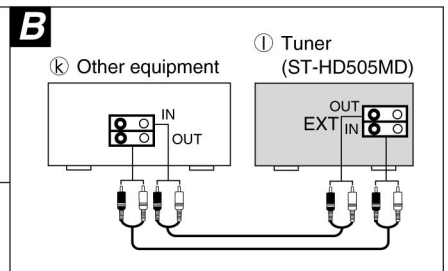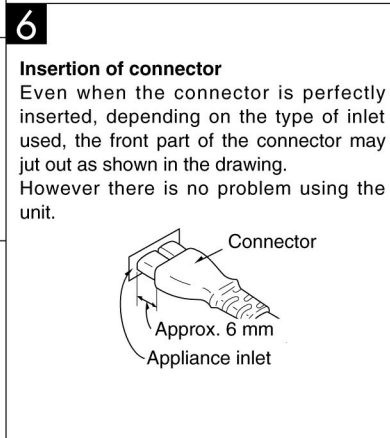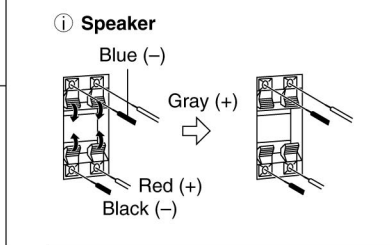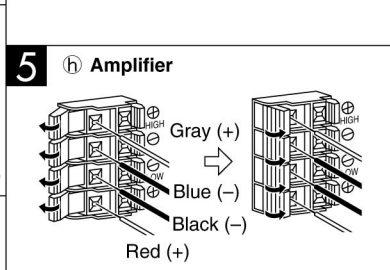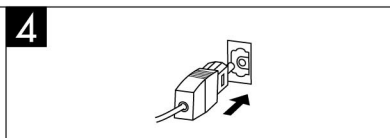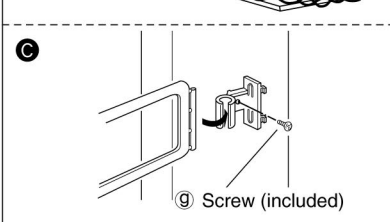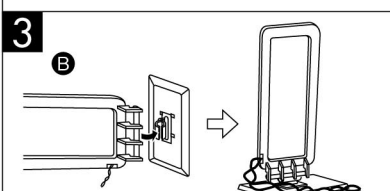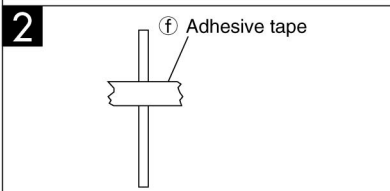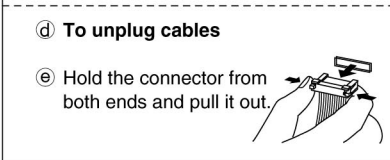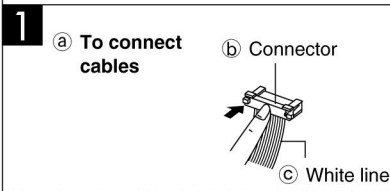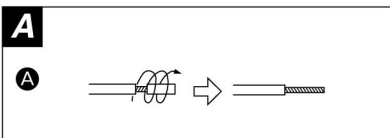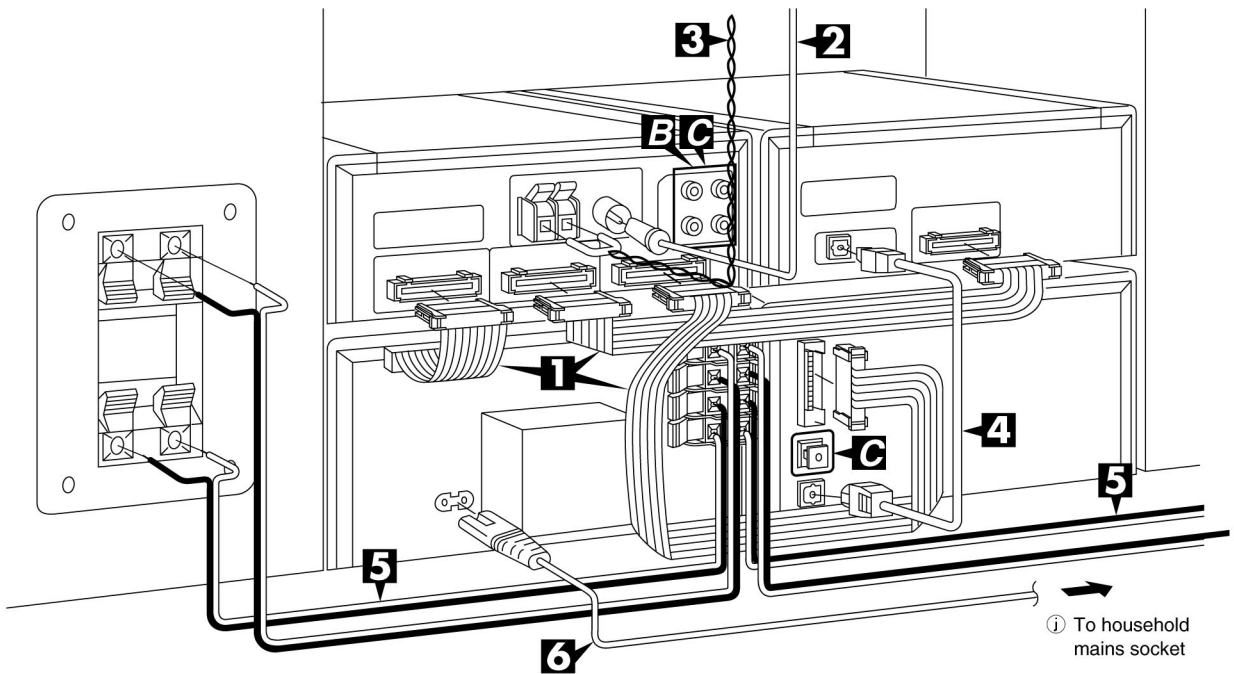

## Basic connections for supplied accessories

### A Before connection

Do not connect the AC mains lead until all other connections are complete.  
To prepare the AM loop antenna, and speaker cables, twist the vinyl tip and pull off (A).

### 1 Flat cables

Keep the cables as flat as possible against the back of the unit.

### 2 FM antenna

Fix the other end of the antenna where reception is best.

### 3 AM loop antenna

Attach to the supplied antenna stand (B), or use the other holder and attach to a wall or pillar (C).

Keep loose antenna cord away from other wires and cords.

### 4 Optical fiber cable

Remove the dust caps before use.

### 5 Speaker cables

Connect the cables to the terminals of the same color. Never allow the exposed wires to contact each other when connected.

#### Use only the supplied speakers.

The combination of the system and the front speakers provides the best sound. Using other speakers can damage the unit and sound quality will be negatively affected.

**(United Kingdom only)**  
**BE SURE TO READ THE CAUTION FOR THE AC MAINS LEAD ON PAGE 4 BEFORE PROCEEDING TO STEP 6.**

### 6 Connect the AC mains lead.





#### For your reference

Information you enter into the unit's memory, except for time, remains intact for up to two weeks after the mains lead is disconnected.

#### External unit connections

Turn off the power to all units before making connections.  
Refer to the manual of the other unit for details.  
(Cables and equipment not included.)

#### Stereo phono cable (not included)

White (L)    
Red (R)  

### B To listen to other equipment and make analog recordings

Connect other equipment to the EXT IN terminals to output sound through this unit's speakers or to analog record onto the MD deck. Connect this unit to other equipment through the EXT OUT terminals to record onto another recording device or to output sound from this unit through the other unit.

### C To make digital recordings

Remove the dust cap before use.

Use an optical fiber cable to connect other digital equipment to DIGITAL OPTICAL IN EXT on the back of the MD deck. This connection enables you to make digital recordings. To listen to other digital equipment or make analog recordings of digital material, you must connect the stereo connection cables as well.

## Optional antenna connections


Use outdoor antennas if radio reception is poor.

### FM outdoor antenna

#### Note

Disconnect the FM indoor antenna.

The antenna should be installed by a competent technician.

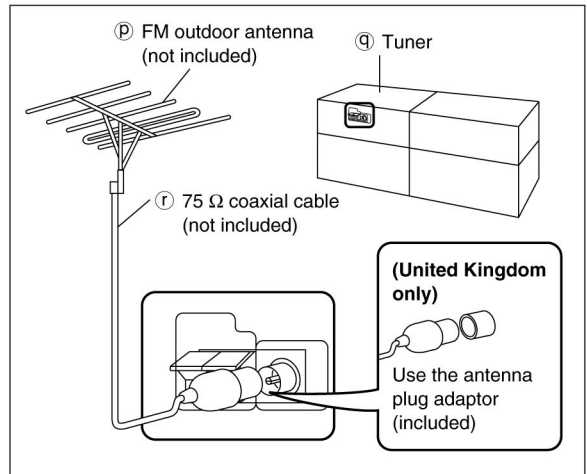

### AM outdoor antenna

Run a piece of vinyl wire horizontally across a window or other convenient location.

#### Note

Leave the loop antenna connected.

Disconnect the antenna when the unit is not in use. Do not use the antenna during an electrical storm.

