


■ Front Panel Controls

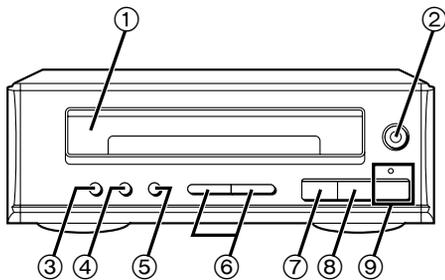


- ① Disc tray
- ② Disc tray open/close button (▲ OPEN/CLOSE)
- ③ CD TEXT button (CD TEXT)
- ④ Scroll button (SCROLL)
- ⑤ AI edit button (AI EDIT)
- ⑥ Skip/search buttons (I◀◀/◀◀, ▶▶/▶▶I)
- ⑦ Stop button (■)
- ⑧ Pause button (||)
- ⑨ Play button and indicator (▶)

The color of the indicator depends on the operation.

If stopped: orange

If playing or paused: green

■ Listening to Compact Discs

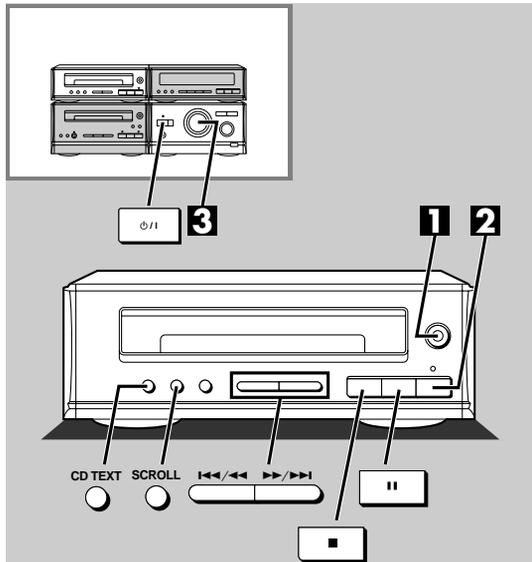

Sequential play

Preparation: Press [⏻/⏪] to turn the unit on.

1 Press [▲ OPEN/CLOSE] and set a CD on the tray.

Press [▲ OPEN/CLOSE] once again to close the tray.

When the "CD" input source is selected, total number of tracks and total playing time will appear on the display.

If you insert a CD TEXT disc, CD TEXT data is displayed (see below).

2 Press [▶].

Play starts from the first track and stops after the last track.

3 Adjust the volume.

To stop the disc:

Press [■].

To pause play:

Press [||] during play. To resume play, press [||] or [▶].

Skipping tracks:

Press [I◀◀/◀◀] to skip backward. Press [▶▶/▶▶I] to skip forward.

Searching through tracks during play:

Press and hold [I◀◀/◀◀] to search backward. Press and hold [▶▶/▶▶I] to search forward.

Note

- During random play, you can not skip to tracks which have been played.
- During program play or random play, you can search-forward/backward only within the current track.
- During program play, skipping is always in the programmed order, whether forward or backward.
- Do not use CDs with poorly attached labels or stickers. Adhesive protruding from underneath stickers or left over from peeled off stickers can cause your system to malfunction.
- Do not use irregular shape CDs.

Playing CD TEXT discs

CD TEXT discs have text information recorded onto them (e.g. the name of the album and artist, messages, etc.).

This unit is able to display this text as you enjoy the CD.

Playback is the same as for normal audio CDs.

To switch between the text display and the normal display:

Press [CD TEXT].

The displays switch each time the button is pressed.

To scroll the text:

Press [SCROLL].

After displaying "SCROLL ON", the CD (or track) title, artists name and other information scrolls continuously across the screen.

To cancel:

Press [SCROLL]. "SCROLL OFF" is displayed.

Note

The text content differs from CD to CD.

1

 
▲ OPEN/CLOSE



Label must face upward.




Total number of tracks Total playing time




2



 Track number Elapsed play time



3

 

VOLUME

DOWN UP



A

