
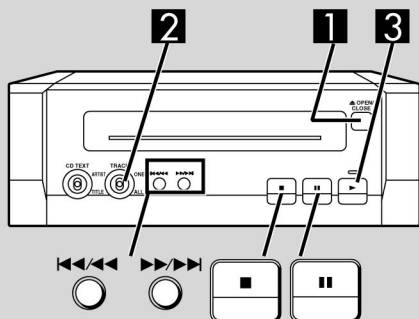
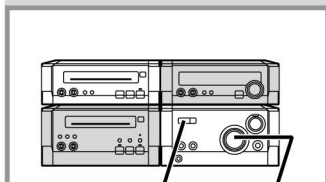


Front panel controls

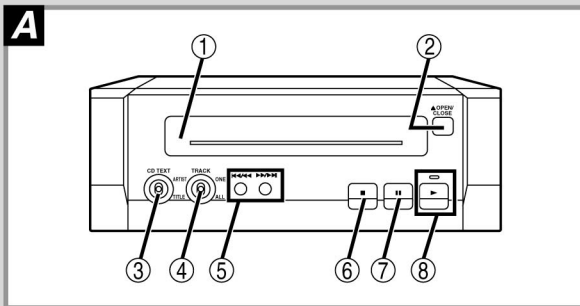

1 **▲ OPEN/CLOSE**

Total number of tracks: 12
Total playing time: 56:24

2 **TRACK**

3

4 **VOLUME**

A CD player

- ① Disc tray
- ② Disc tray open/close button (▲ OPEN/CLOSE)
- ③ CD TEXT switch (CD TEXT)
- ④ One track/all tracks switch (TRACK)
- ⑤ Skip/search buttons (◀◀/◀◀, ▶▶/▶▶)
- ⑥ Stop button (■)
- ⑦ Pause button (⏸)
- ⑧ Play button and indicator (▶)

The color of the indicator depends on the operation taking place.
If stopped: orange
If playing: green

CDs

Normal Play

Preparation: turn the unit on.

- 1** Press [▲ OPEN/CLOSE] to open the tray.
Set a CD label up on the tray.
Press [▲ OPEN/CLOSE] to close the tray.

The number of tracks and playing time is displayed if "CD" is selected as the source.

- 2** Select "ALL" or "ONE" with [TRACK].
ALL: all tracks are played.
ONE: one track is played.

- 3** Press [▶] to start play.

- 4** Adjust the volume.

To stop the disc

Press [■].

To pause play

Press [⏸] during play. Press [⏸] or [▶] to resume play.

Skipping tracks

Press [◀◀/◀◀] (backward), or [▶▶/▶▶] (forward).

Searching through tracks

During play

Press and hold [◀◀/◀◀] (backward), or [▶▶/▶▶] (forward).

"NO DISC" is displayed

When the unit is in CD mode but a disc isn't in the player.

Note

- You cannot skip to tracks already played in random play.
- Skipping is done in the selected order in program play.
- You can search only within tracks in random and program play.