

Display method

To display the malfunction code

- U70 CD..... Automatically displays on the tuner when a malfunction occurs.
- U70 MD..... Automatically displays on the tuner when a malfunction occurs.
- F61..... Automatically displays on the tuner when a malfunction occurs.
- F15 MD..... Automatically displays on the tuner when a malfunction occurs.

To return the normal display

1.For U70 CD/U70 MD:

- Press any operation button on the tuner.
- To re-display the code, switch the power off (POWER STANDBY button), and then switch power back on again.


2.For F61 CD:

- If F61 is displayed, the power will automatically be switched off.
- F61 will be displayed for 3 seconds, and then the clock will be displayed.
- To re-display the code, switch the power on. F61 will be redisplayed, and then after 3 seconds the clock will be displayed and the power will automatically switch off.

3.For F15 MD:

- After displayed the disk is taken off and it returns to normal display.

Display location

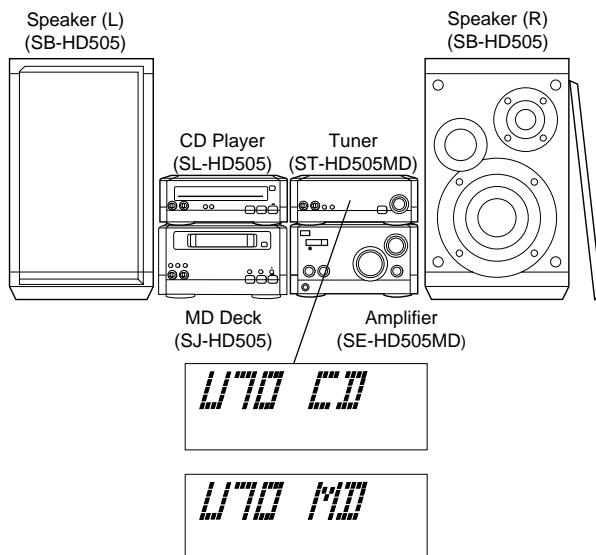

Display contents

| Display code | Problem or condition | Correction procedure |
|---|--|--|
| U70 CD U70 MD (displayed automatically) | <p>A bus-line communications error has occurred as a result of the flat cables being inserted incorrectly, thus preventing the system from operating.</p> <p>1. If U70 is displayed on the tuner, the MD deck or CD player cannot be operated by remote control.</p> | <p>TUNER (ST-HD505MD)</p> <p>AMPLIFIER (SE-HD505MD)</p> <p>CD PLAYER (SL-HD505)</p> <p>MD DECK (SJ-HD505)</p> <p>FLAT CABLE</p> <p>1. To check for correct insertion of the flat cables</p> <p>1 Match each connector with the color (blue/ white) of the connection port and insert until you hear a click.</p> <p>2 Insert the flat cables at the back of the unit in the order indicated. Make sure the white side of the cable is on your right side.</p> <p>2. Breakage of flat cable (Check and replace as necessary.)</p> <p>3. If the problem is not corrected by items (1.) and (2.) above, this indicates a faulty IC.</p> <p>U70CD { ST-HD505MD : IC701 (M30218MAA101) SL-HD505 : IC403 (LC66358C4K97)</p> <p>Check these IC's and replace as necessary.</p> <p>U70MD { ST-HD505MD : IC502, 503, 701 SJ-HD505 : IC10, 303, 304</p> <p>Check these IC's and replace as necessary.</p> <p>Connector</p> <p>White side</p> |
| F61 | When the power switch is switched on, it automatically switches back off, making it impossible to switch power on. | <ul style="list-style-type: none"> Faulty amplifier (SE-HD505MD) output IC (IC501 and IC502). (When a DC voltage is applied to the speaker terminals.) |
| F15MD | There are any troubles for traverse mechanism of SJ-HD505, movement is impossible. | <ol style="list-style-type: none"> Traverse detect switch (S8) is broken. Traverse motor (M2) is broken. |