


Ref. No. 26001-26199  
opr&f1/mother (5/5)

DL6001  
VSL0519

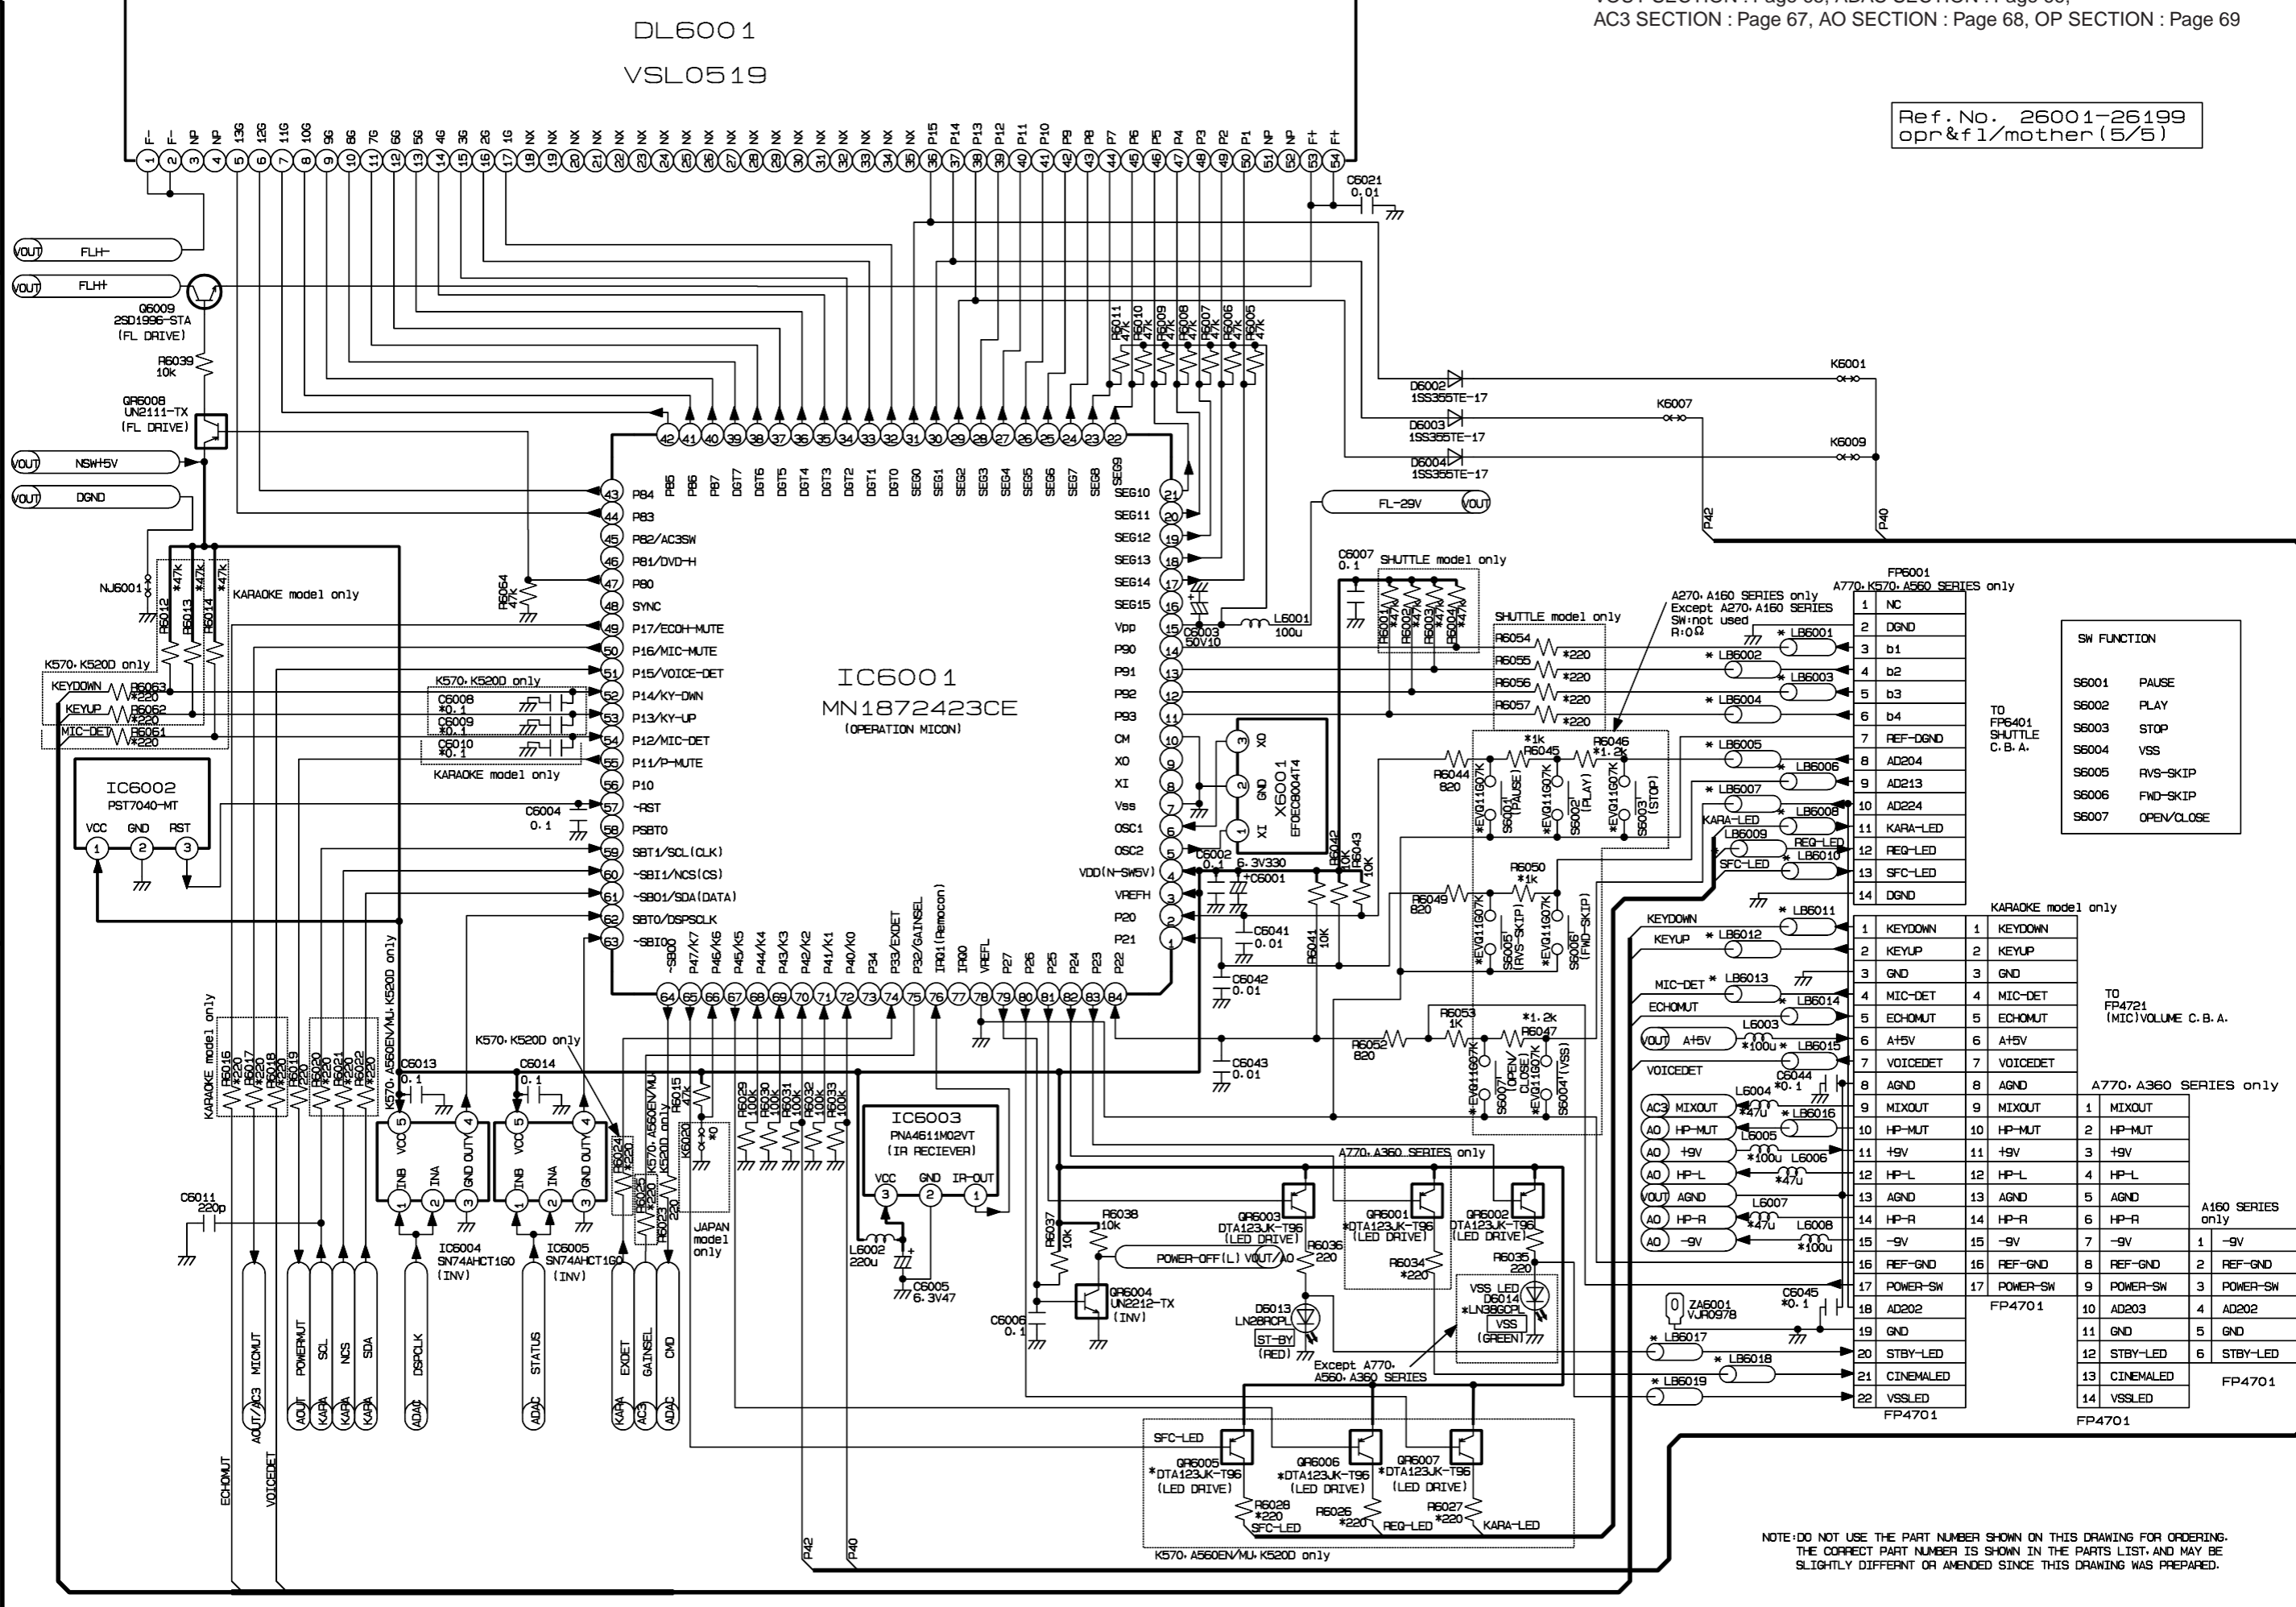

IC6001  
MN1872423CE  
(OPERATION MICON)

SW FUNCTION

S6001	PAUSE
S6002	PLAY
S6003	STOP
S6004	VSS
S6005	RVS-SKIP
S6006	FWD-SKIP
S6007	OPEN/CLOSE

KARAOKE model only

1	KEYDOWN	1	KEYDOWN
2	KEYUP	2	KEYUP
3	GND	3	GND
4	MIC-DET	4	MIC-DET
5	ECHOMUT	5	ECHOMUT
6	A+5V	6	A+5V
7	VOICEDET	7	VOICEDET
8	AGND	8	AGND
9	MIXOUT	9	MIXOUT
10	HP-MUT	10	HP-MUT
11	+9V	11	+9V
12	HP-L	12	HP-L
13	AGND	13	AGND
14	HP-R	14	HP-R
15	-9V	15	-9V
16	REF-GND	16	REF-GND
17	POWER-SW	17	POWER-SW
18	AD202	18	AD202
19	GND	19	GND
20	STBY-LED	20	STBY-LED
21	CINEMAL	21	CINEMAL
22	VSSLED	22	VSSLED

TO FP4701

NOTE: DO NOT USE THE PART NUMBER SHOWN ON THIS DRAWING FOR ORDERING.  
THE CORRECT PART NUMBER IS SHOWN IN THE PARTS LIST, AND MAY BE  
SLIGHTLY DIFFERENT OR AMENDED SINCE THIS DRAWING WAS PREPARED.